
	EN EN						EN EN	
EUNCTION OVERVIEW GETTING STARTED OL GETTING STARTED OL NEW SCREEN OZ SETTING GASICS OZ NETWORK CONNECTION OT MILTERET MILTERET OT SPECIFICATION OT SPECIFICATION OT SPECIFICATION OZ GENARATTE 11	FUNCTION OVERVIEW 1. Reset 2. Power On/Off 3. Volume + 5. Headphone Jack 6. Micro SD Card Slot 7. Micro USB Port 8. Microphone 9. Back Camera 10. Front-facing Camera 11. Speaker Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide. Press and hold the power button for 2s, then release it. It will show Power Off and Restart on the screen. Tap Power Off to turn off the tablet. Press and hold the power button for 5s to do a forced shutdown when it's frozen. Battery A rechargeable Li-ion battery is installed in the tablet. We suggest you drain the battery completely once a month if only use your tablet occasionally. DO NOT dispose of tablet in a fire. Sleep Mode Simply press the power button once to switch the tablet to the Sleep Mode when the	HOME SCREEN Icons on the Bottom Menu 1.Back 2.Home Screen 3.Recent Activities 4.Apps Collection Wallpapers, Widgets and Home Settings Tap and hold the empty section of a Home screen, WALLPAPERS, WIDGETS and HOME SETTINGS will be displayed. Tap WALLPAPERS icon to change the current wallpaper of the tablet from the default wallpapers or your photos. Tap WIDGETS, touch and hold any widget (e.g. Clock), then slide and add it to a Home screen Remove it by sliding to X. Tap HOME SETTINGS to enable/disable Add icon to Home screen. This is applicable to the new Apps installed from Play Store. SETTING BASICS Quick Settings	Swipe down from the top of the screen to access Quick Settings. **Wi-Fi. Tap to connect to a wireless network** Do Not Disturb. Block sounds or vibrations according to the different modes (Total silence, Alarms only and Priority only)* Portrait/Auto-rotate/Landscape** Airplane Mode. Turn on/off all the network connectivity Tap the ** icon to change the options in the Quick Settings. **Wi-Fi. Tap to connect to a wireless network is executed as according to the different modes (Total silence, Alarms only and Priority only)* Portrait/Auto-rotate/Landscape** Airplane Mode. Turn on/off all the network connectivity Tap the ** icon to change the options in the Quick Settings. **Swipe down from the top of the screen, then tap the ** icon to enter the detailed Setting interface. Or, tap the Settings icon on the Home screen to enter. Network & Internet **Connect to any working Wi-Fi	Apps & notifications *Check the Apps recently opened *Check all the Apps on the tablet *Set the App permissions *Uninstall the third-party Apps *Adjust App notification settings *Clear the cache of the Apps Battery *Display the remaining battery power as a percentage *Enable/disable the Battery Saver *Adjust the time of entering the Sleep Mode Display *Adjust the screen brightness *Adjust the font size and display size *Set a screen saver *Change the wallpaper *Adjust the time of entering the Sleep Mode Sound *Set volume levels for media, alarms, and notifications *Set preferences of Do Not Disturb *Set the tunes for notifications and alarms *Turn on/off the sound for screen lock, charging and touch Screenshot *Set the delay time for a screenshot *Set the location folder of screenshots *Switch on/off Show the screenshot button in the statusbar Tip: Press the volume down button and the power button together to capture a screenshot. Or, switch on Show the screenshot button in the statusbar, then tap the ② icon on the bottom menu to capture a screenshot.	Storage *View and manage your storage space Security & location *Set screen lock pattern, e.g. password, PIN, Swipe etc. *Enable/disable all the notifications while the screen is locked *Turn on/off the location services for specific Apps *Set to show/hide the password when input a password Users & accounts *Add and manage the user accounts on your tablet Accessibility *For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more Google™ *Set the preferences for Google related services System *Set Language Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the adding, hold and slide the adding, hold and slide the adding, the language. *Restore factory setting Tap Reset options > Erase all data (factory reset) to restore the factory setting. *Set the date and time *Turn on/off the Backup	NETWORK CONNECTION Go to Wi-Fi settings in the Settings interface or directly enter through Quick Settings. Wi-Fi Connection 1. Tap Network and Internet and turn on the Wi-Fi. All Wi-Fi connections available will be listed; 2. Select your Wi-Fi and input the correct password. *** **** *** *** *** *** ***	APP MANAGEMEN'T App Download and Installation 1. Tap and open Play Store on the Home screen; 2. Log into your google account, search and download the App you need. App Management Move the App Tap and hold the App, then slide it to a desired screen. Remove the App from the Home screen Tap and hold the App, then slide to X to remove it from your Home screen. Uninstall the App Tap and hold the App, then slide to the trash bin to uninstall the App. Clear the Cache of the App 1. Go to Settings > Apps & notifications; 2. Select an App > Storage > CLEAR CACHE. INTERNET NAVIGATION Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet. You may use the Chrome browser pre-installed or use another browser downloaded from Play Store. MULTIMEDIA Connecting to the Computer 1. Connect your tablet to the computer with USB cable and go to Quick Settings; 2. Tap Android ^{M*} Systems. USB charging this device > Tap for more options > Use USB to; 3. Select Transfer files; 4. Go to your computer and find your tablet M10 Pro to transfer files between your tablet	Tip: Select Charging this device to charge your tak Select Transfer photos (PTP) to transfer photo **Transfer photos (PTP) to transfer photo **Transfer photos (PTP) to transfer photos **Transfer
SERGUIDE throughly before using this product and keep it for	tablet is ON; press again to wake it up. Tip: Go to Settings > Display > Sleep to set the time of entering the Sleep Mode.			03 04 \\\	*Check the detailed information about the tablet	5 06 \\	and computer.	

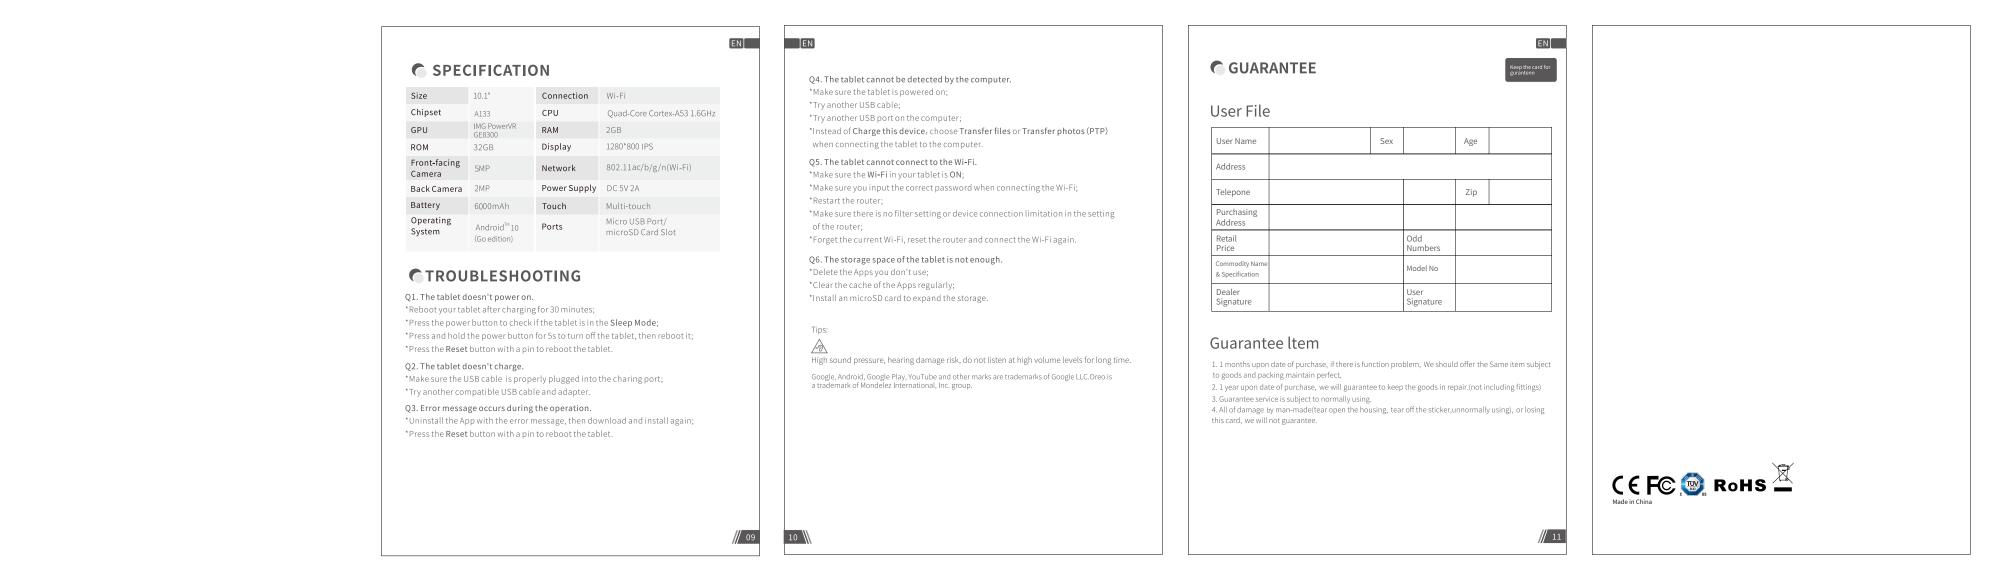

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction