



Buffet
Induction
Cookware

The Evolution of Intelligent Design®

Spring USA®

127 Ambassador Drive

Suite 147

Naperville, IL 60540-4079

Phone: (1) 630-527-8600

Fax: (1) 630-527-8677

Email: springusa@springusa.com

Web: www.springusa.com

Operation
Manual



By **Spring** USA®

Models: SM-261C

&

SM-263C (International)

Before You Begin:

2

Read the following instructions in their entirety.

Use proper cookware. Your cookware must be induction-ready.

Check your ventilation. Your MAX Induction® Range must have the proper ventilation in order to operate correctly. There must be at least 4" of space available around your induction range.

Ensure that you have dedicated power to the installed location. Verify the electrical requirements for your specific model induction range, as shown on Page 4.

Suitable Serving Ware:

Your MAX Induction® Range works with induction-ready serving vessels. Visit the Spring USA Website for a full line of induction-ready, professional serve ware.

Serving pieces must have a flat bottom, in order to make full contact with the countertop.

Serving pieces that are footed, or that have a raised ridge, are not for use on this system, as they cannot make full contact with the counter surface.

Vessels must have a diameter greater than 9".

Glass Cookware is not suited for use on your induction warming system.

Serving vessels must be centered on the induction warmer for optimal heating and performance.



Convertible Buffet Servers



Stainless Steel Multi-Ply Cookware



Aluminum Tray With Induction Disc



Carbon Steel



Aluminum Cookware with Induction Disc



Cast Iron

MAX INDUCTION®

7

The Evolution of Intelligent Design®



- Reinforced, Tempered Glass Surface
- Features SmartScan® Technology
- Surface Responds Faster, Without Surges or Spikes in Temperature
- Increased Efficiency
- Easy to Read LCD Panel Readout
- Tempered, Black-Smoked Glass Faceplate
- Durable, Brushed Stainless Steel Body Design
- Features Leveling Leg Design with Non-Skid, Non-Scratch Base
- Removable Mesh Air Filter
- 208-240 Volts ~ 50-60Hz
- 2600 Watts

Spring USA®

(1) 630-527-8600

www.springusa.com

Safety Precautions:

4

Plug the power cord into a dedicated circuit. **Note:** Nothing else should be plugged into this circuit. Each MAX Induction® Range must have sufficient power supply as outlined below. Once you have plugged the unit in, it will beep, and an ‘EO’ code will appear in the display window.

To Begin:

Turn the unit on. An ‘EO’ code will appear next in the digital window, indicating the induction range is searching for cookware.

Turn the knob clockwise to turn the unit on. Your MAX Induction® range will always start out in the “Cook” mode. “Cook” is the default mode.

Place suitable cookware within the circle on top of the MAX Induction® Range.

Select either the “Cook” Mode or the “Temp” Mode.

In “Cook” mode, turn the dial clockwise. The LED will display cook power levels of 1 thru 20.

In “Temp” mode, turn the dial clockwise. The LED will display temperature levels from 110° to 400° fahrenheit.

Turn the knob clockwise to set the power level or temperature.

To shut the induction range off, turn the knob counter clockwise until you hear the unit ‘click’ and turn off.

Specifications:

Model #	Voltage / Amps	Peak Power	Plug Type
SM-261C	208-220 Volts 11.8 Amps	2600 Watts 50-60 Hz	NEMA 5-15 6’ Cord
SM-263C	220-240 Volts 10.8 Amps	2600 Watts 50 Hz	CEE 7/7 16A European Plug or BS 1363 13A U.K. Plug 1.8 m Cord

Induction Range Error Codes:

5

Error	Cause	Solution
E0	Induction range does not sense induction-ready cookware has been placed on the glass surface	Place an induction ready pan on the range.
E1	Range has overheated due to blocked ventilation and has shut down the range.	Clear vents, let range cool down, then restart. If error message continues, your range needs to be serviced.
E2	The range has overheated.	Remove the cookware from the range and let the range cool. Make sure the vents are clear. Verify you are using induction-ready cookware. Once the range has cooled, restart.
E3	Range will not turn on. Range is experiencing temporary voltage overload or is not on its own, dedicated circuit.	Review your dedicated power requirements. Each range must operate with the power required on Page 4.

Actual range temperatures may vary due to a number of variables, such as ambient temperature in the immediate surrounding area, content and volume of food being heated or cooked, and whether or not you are utilizing a lid on the serving vessel.

Never attempt to service any part of your MAX Induction® Range on your own. Contact our Service Department by calling (1) 630-527-8600. Attempting to service your Induction Range on your own, or through an unauthorized repair facility automatically voids your warranty. For service forms, visit the Spring USA website.

For Limited Warranty Information, visit www.springusa.com

Note:

This equipment uses, generates and can radiate radio frequency energy. If not installed correctly and used in accordance with the instructions, may cause harmful interference to radio communications. Users or guests with Pacemakers should contact their health care professional prior to using this product.

Spring
USA®

(1) 630-527-8600
www.springusa.com

Never touch the glass plate immediately after cooking. The surface of the cooktop may remain hot due to the heat transferred from the cookware.

Do not damage the glass surface of the induction range. If the glass plate is broken, turn the unit off and unplug it immediately. Call Spring USA at (1) 630-527-8600 for service or warranty. Be sure to have your Model # and Serial Number available when you contact our office or when completing the Service Form on the website.

To clean your MAX Induction® Range, unplug the unit from its power source. Wipe the unit down with a sponge or cloth with a mild dishwashing liquid. Dry with a clean, soft cloth.

Do not immerse the induction range directly in water for cleaning – this will damage the unit.

Remember to clean the vents located on the underside and at the back of the unit. Inspect the mesh air filter on the underside of the induction range each day. If it is soiled, remove the air filter and wash with dish washing detergent. Dry and replace before operating the induction range.

Keep your induction range away from other ovens or stoves. If the surrounding temperature is hot, your induction range may stop heating.

Never set items such as metal utensils or keys on top of an induction range, as the range may sense the metal and begin to heat the object.

Note:

Spring USA is not responsible for poor performance or damage when ranges are used in conjunction with non-approved materials.

Our Induction ranges have been designed and tested using Spring USA Professional Cookware and Vessels. Spring USA cannot guarantee the performance of other Vendors' equipment being used with our MAX Induction® Ranges.



(1) 630-527-8600
www.springusa.com

Your MAX Induction® Range is designed to operate in two modes: **“Cook” or “Temp”**.

“Cook” Mode offers you high-speed heating, used for sautéing, omelet stations, pasta bars or demonstration cooking.

“Temp” Mode offers you thermostatically controlled holding temperatures for use with soups, sauces, buffets or pastry work. The LED display allows for more accurate temperature selection.

In “Cook” Mode:

- An ‘E0’ code will flash until suitable cookware is placed on the glass surface of the range.
- The LED panel will display a two-digit number indicating the power level. Power levels run from 1 thru 20.
- **As a safety precaution, if no cookware is placed on the induction range plate after 2-1/2 minutes, the unit will shut off.**
- Once suitable cookware has been placed on the glass induction plate, the unit will continue to cook until the range is manually shut down, or the mode is changed over to “Temp” mode.

Note: *As a safety precaution, make sure you have at least 4” of space at the back of the Induction range. Induction ranges need ventilation to operate efficiently.*

In “Temp” Mode:

- An ‘E0’ code will flash until suitable cookware is placed on the glass surface of the range.
- The LED panel will display a three-digit number indicating the temperature setting. To increase the temperature setting, turn the dial clockwise. To decrease the setting, turn the dial to the counter-clockwise.
- The induction range will continue to warm the food until the set temperature has been reached. Once the temperature has been reached, the range will maintain that pre-selected temperature setting.
- Temperature settings in “Temp” mode, in Fahrenheit are:
110°, 120°, 130°, 140°, 150°, 160°, 170°, 180°, 190°, 200°, 220°, 240°, 260°, 280°, 300°, 320°, 340°, 360°, 380° & 400°.
Celsius: 43°, 49°, 54°, 60°, 66°, 71°, 77°, 82°, 88°, 93°, 104°, 116°, 127°, 138°, 149°, 160°, 171°, 182°, 193° & 204°.