


AIRCHARGE TILTY


WIRELESS CHARGER BLUETOOTH SPEAKER

INSTRUCTION SHEET

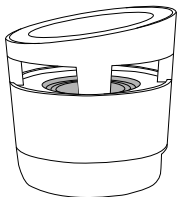

The AirCharge Tilty provides wireless charging for devices with integrated wireless charging technology, in addition to Bluetooth speaker functionality. Not sure if your device can charge wirelessly? Check your product manual or search the internet to find out.

Get to Know AirCharge Tilty

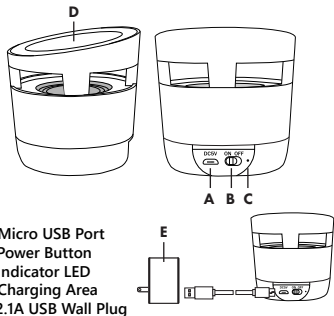

- A. Micro USB Port
- B. Power Button
- C. Indicator LED
- D. Charging Area
- E. 2.1A USB Wall Plug

In The Box

- 1 x USB Cable
- 1 x Wireless Charging Speaker
- 1 x 2.1A USB Wall Plug

Using the AirCharge Tilty

To ensure optimum sound quality, The AirCharge Tilty must be connected to a USB port with a minimum power output of 2.1 A. One has been included for your use. The AirCharge Tilty does not include an integrated battery and must be connected to an active external power source to function.

To use the AirCharge Tilty, first plug the AirCharge Tilty into the provided 2.1 A Wall Charger, using the provided micro USB cable. Then turn on the AirCharge Tilty. You are ready to wirelessly charge compatible devices and to play music by Bluetooth connection.

To use wireless charging, be sure the AirCharge Tilty is turned on, then place a supported wireless charging device face up on the AirCharge Tilty. Your device will begin charging after a few seconds.

To play music by Bluetooth connection, be sure the AirCharge Tilty is turned on, then find the Bluetooth settings in your device, turn Bluetooth on, search for the AirCharge Tilty, and complete pairing. You are ready to enjoy your favorite music.

Troubleshooting

Wireless Charging

- Wireless charging is not supported by all devices. Please review your device's manual or search the internet to confirm that it supports wireless charging.
- The AirCharge Tilty does not have an integrated battery and must be plugged into a power source and turned on to wirelessly charge a device.
- Cell phone cases can obstruct wireless charging. If your device will not charge, first confirm your device has integrated wireless charging; second, confirm the AirCharge Tilty is plugged in and powered on; third, remove the cell phone case from your device.

CAUTION:



SAFETY WARNING

In order to prevent conditions that can lead to overheating, please make sure that the wireless charging pad surface is free of all metal objects at all times, such as coins or paper clips. In addition, before charging, please remove anything metallic attached to the back of the phone, such as battery cases, ring holders, or plates used for mounting to magnetic phone holders.

Specifications:

- Input: DC 5V/1.5A
- Audio Output Power: 3W*1
- Wireless Power: 5W
- SNR: ≥ 85 db
- Wireless Power Output: 5V/900mA
- Whiteout Built-in Battery