

V810A *AXIS* 1 by ATEL User Guide

4G LTE Cat-4 Fixed Wireless Access Router



Models Covered:

Model	LTE Bands	
V810A	B2/4/5/12/13/14/66/71	

User Guide in Spanish available on the ATEL product page at www.ATEL-USA.com. Guía del usario en español disponible en la página del producto ATEL en www.ATEL-USA.com.



Contents

1.	Overview	3
	LTE Network Bands per Model	3
	System Requirements	3
	Components and Indicators	3
	Power Management	4
2.	Getting Started	5
	Install SIM Card	5
	Install the NiMH Battery Pack	5
	Backup Battery Tips	6
	Installing the Optional Antennas (Sold Separately)	6
	Turning your V810A On/Off	7
	Connect your Computer to the V810A	8
	Connecting to your V810A Hotspot Wi-Fi	8
3.	Accessing Your V810A Online Device Management Portal	9
	Online Portal Home Page	10
	Connected Devices	11
	Data Usage	11
	Messages	12
	Settings	12
	Wi-Fi Settings	13
	LAN Settings	14
	Device Settings	15
	Advanced	16
	Firewall Settings	16
	About	22
	Logs	22
	Backup and Restore	23
	Remote Update	24
4.	Troubleshooting	25
	Common Problems, FAQ's and Solutions	25
5.	Regulatory Statements	29
6.	Safety Hazards	29
Lim	nited Warranty:	31



1. Overview

LTE Network Bands per Model


Model	LTE Bands	
V810A	B2/4/5/12/13/14/66/71	


Note: Your device model number can be found on the device label.

System Requirements

The V810A provides business and data service. Connect to the internet using the V810A Hotspot Wi-Fi function or Ethernet port connection. You must subscribe to an eligible service plan with a wireless operator to use the V810A data functions.

Components and Indicators

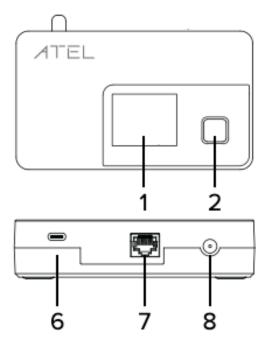

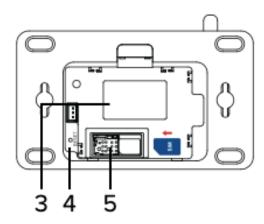



1. LCD Display

Displays different menus of V810A information such as Home, IMEI, Hotspot login info, and Online Portal login info.

2. Power Button

Power the V810A on/off by pressing and holding this button (note that a long press is required to boot up the device). You can also short press this button to wake up the screen and check device information.

3. Battery Port

This battery port is used to connect to the Ni-MH rechargeable battery pack (battery pack may be sold separately).

4. Reset Button

Use a pin to press and hold this button for factory reset.

5. SIM Card Slot

Insert your 4FF SIM card into this spring-loaded sim card slot. To remove a sim, press the edge of the sim inward and the sim would pop outward from the sim slot.

6. Type C Port

Insert your USB cable to this USB-C port and plug the other end into a wall adapter for external power.

7. Ethernet Port (RJ45)

Insert an ethernet cable to this Port and plug the other end to your computer for internet access.

8. Antenna Connector

Install an optional antenna (sold separately) to increase signal strength.

Power Management

Your V810A comes with an AC wall adapter (a Ni-MH rechargeable battery pack is optional and can be purchased separately through ATEL USA, if it is not included with your device). For more information, visit www.ATEL-USA.com.

During a power outage or if the wall charger is unplugged, the V810A continues to run off of the batteries to support Ethernet functions. Note that the Hotspot Wi-Fi function will only be available if using the wall adapter or Ni-MH rechargeable battery pack.




Refer to the table below for the V810A functions supported in different power modes.

V810	Functions Supported in Different Power Scenarios			Data I	Model	
Scenario	Wall Adapter	Ni-MH Battery Pack (May be Sold Separately)	lcon Display	Internet Port (Ethernet Cable)	WiFi Hotspot	Notes
	Device		*Battery Full	,		
1	connected to Wall Adapter	Batteries Installed	*Battery Charging	✓	✓	
2	Device connected to Wall Adapter	No Battery Installed	⊛ χ ı	✓	✓	
3	Device NOT connected to Wall Adapter	Batteries Installed	∳ ■	✓	✓	WiFi Hotspot function is ONLY available when plugged into the wall adapter or with the NiMH battery.
4	Device NOT connected to Wall Adapter	No Battery Installed	No Display	×	×	Device has no power. Connect to a wall adapter for use.

2. Getting Started

Install SIM Card

- 1. Remove the V810A back cover.
- Install the SIM card into the spring-loaded SIM slot as the image shows. To remove a SIM, press the edge of the SIM inward and the SIM will pop outward from the SIM slot.

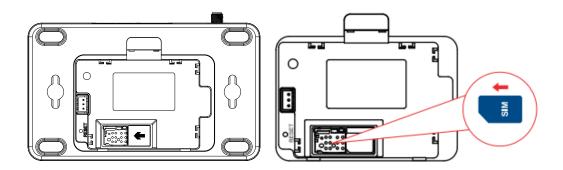


Install the NiMH Battery Pack


- 1. Remove the battery cover.
- 2. Properly align and install the NiMH battery (with three pin sockets). Make sure to align the pin sockets correctly.
- 3. Put the NiMH battery in place as shown below.
- 4. Replace the back cover of the V810A and make sure it's aligned with the bottom of the device.

NOTE: The NiMH battery may be sold separately.

ATEL V810 Series V810A Data User Manual V6.1, January 3, 2023



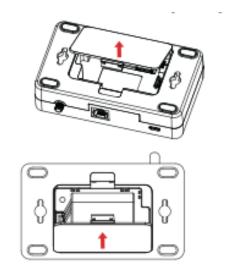

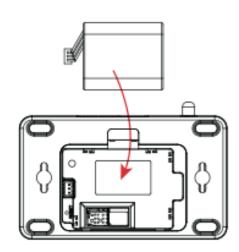

Backup Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use. Generally, usage time on the NiMH battery pack is approximately (up to) two hours and 40 minutes, and standby time is approximately 32 hours.

In battery-only mode, you can check the battery level by pressing the Power Key. The battery level will be in the upper right corner of the screen.

Do not use sharp objects or excessive force or remove the battery, as this may damage the V810A and the batteries and will void any warranties.

Never expose batteries to temperatures below -20°C (4°F) or above 60°C (140°F).


Installing the Optional Antennas (Sold Separately)

To increase signal strength, you can install an optional antenna.

- 1. Align the antenna with the antenna port and screw securely into place in a clockwise direction.
- 2. Restart the V810A after the antenna is installed or removed.


Using optional accessories (antenna and battery pack) by ATEL is recommended, more information available at ATEL website, https://www.atel-usa.com/.



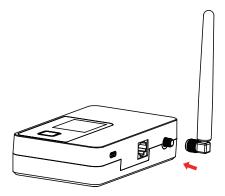

Turning your V810A On/Off

1. Connect your V810A to a wall adapter with a USB-C cable and plug the wall adapter to the wall outlet.

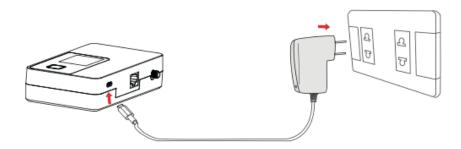

- 2. To turn your V810A on, press and hold the Power Button.
- 3. To turn it off, press and hold the Power Button until you see the screen turn off.

WARNING! Please only use an approved USB adapter for the V810A. The use of other incompatible adapters may cause damage to your device and void the warranty.

V810A LCD Display

On your V810A LCD Display, you may see one or more of the following icons:


	Icon Definition	
Network Signal		Indicates the signal strength of your wireless provider in your location. More bars represent a stronger signal.
WiFi WiFi available for connection.		WiFi available for connection.
Dettern		Battery Level (Applies to NiMH Battery Only)
Battery		Battery Charging (Applies to NiMH Battery Only)
Power Key	•	Press the Power Key to switch menu screens.

ATEL V810 Series V810A Data User Manual V6.1, January 3, 2023



Connect your Computer to the V810A

The V810A provides 1 Ethernet port (RJ45). For internet access, plug an ethernet cable to the Ethernet port of your V810A and connect it to the Ethernet port of your computer. You can connect your PC with the V810A using WIFI for wireless connection.

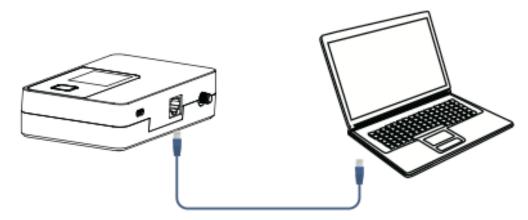

Connecting to your V810A Hotspot Wi-Fi

Your V810A Hotspot Wi-Fi function supports up to 15 Wi-Fi connected devices. To connect to the Hotspot Wi-Fi,

- 1. Locate your Wi-Fi Network Name (SSID) / Password from your V810A LCD Display or from the device label under the battery holder.
- 2. Open the Wi-Fi settings of your Wi-Fi capable devices.
- 3. Select the SSID of your V810A from the available Wi-Fi network list.
- 4. When prompted, enter the password of your V810A.
- 5. Once the connection is established, you are connected to the Internet.




3. Accessing Your V810A Online Device Management Portal

The Online Device Management Portal is a web-based interface that interacts directly with your V810A. You can login to the Portal to view device status, change device settings, or perform a manual software upgrade.

To access the Online Portal:

- First connect your computer to the V810A Hotspot Wi-Fi and then enter http://192.168.0.1 in the browser URL address bar. Note that you can also connect your V810A to a computer with a USB-C or ethernet (RJ45) cable to access the Online Portal.
- 2. The Online Portal login username is "admin". The unique password can be found in the LCD Display menu or the device label (under the battery holder).

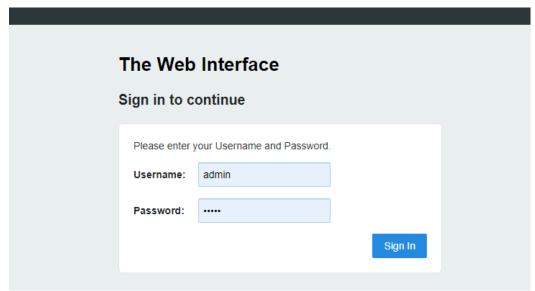

This images below show the device label, LCD screen display, and Online Portal access for your V810A. Pictures are for illustration purposes. Information varies based on your model.


Device Display Device Label SSID: V8100_3640 Portal URL: http://192.168.0.1/ assword:3833298c Model: V810A Username: admin Password: 547e14 SKU: 800964010 Online Portal http://192.168.0.1 User Name: admin SSID: V810_XXXX Password: 123456 WIFI Password: 123456 FCC ID: XYO-V810 Made in China



Online Portal Home Page

After successful login, you will see the Home Page displaying information about your V810A, e.g. device IMEI and network status, along with a list of menu options on the left column.

- HOME
- CONNECTED DEVICES
- DATA USAGE
- MESSAGES
- SETTINGS
- ADVANCED
- ABOUT

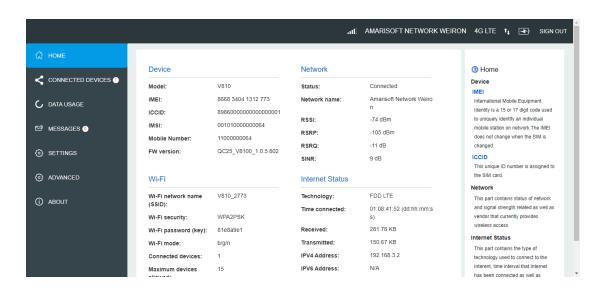


Changing your Online Portal Password:

You can create your own Online Portal password in the Settings page. Once created, you will be required to use the new password to sign in.

To change your Online Portal password:

- 1. Connect your device using the instructions for logging into the Online Portal, in the beginning of this Section 4.
- 2. Open a web browser and enter http://192.168.0.1 into the URL address bar.
- 3. Go to Settings -> Device Settings -> Admin Password, input your current admin password and setup your new password, then save the changes.



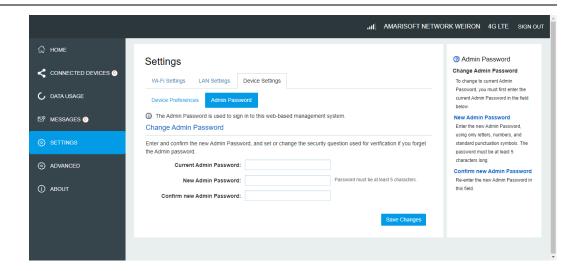

Connected Devices

On this page, you can see Connected Devices, Blocked Devices and Change Max Wi-Fi Connections.




- Connected Devices: This field lists the clients that are connected to your V810A.
- Change Max Connections: The default max connection is 15. Click this button and it
 will take you to the Wi-Fi Settings where you can change the Max Wi-Fi Connections.
 To block a device, choose a desired device and click the Block button. The Wi-Fi
 connection to the blocked device will be disconnected and the blocked device will
 appear in the Blocked Devices list.
- Blocked Devices shows the devices that are blocked. Choose a blocked device and click the Unblock button; the selected device will disappear from the "Blocked Devices" list. It will show in the "Connected Devices" list again after it connects to your V810A.

Data Usage

This page shows the estimated data usage which may not match your bill. Check with your service provider for billable usage. If desired, choose Day of Month, Usage Limit and Click Save Changes to save your settings.



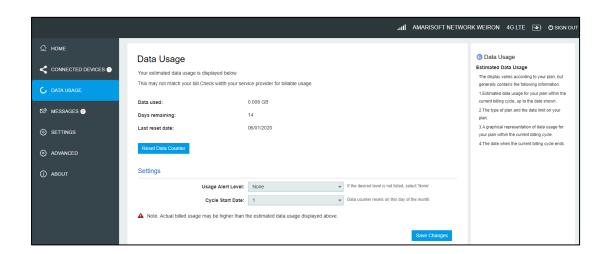

Messages

Messages page displays SMS messages sent to you by your Wireless Carrier.



The number of unread messages displays to the right of the message icon.

When a new message arrives, the message icon appears. A maximum of 30 messages can be stored.

To view a message, select a message from the Messages menu. To delete a selected message, click the trash bin icon to the right of the message date and timeline. To delete all messages, click the Delete All Messages button.

Settings


The Settings page has the following menu options.

- Wi-Fi Setting
- LAN Settings
- Device Settings



Wi-Fi Settings

These settings apply whenever the Wi-Fi is turned on. Changes made to these Wi-Fi settings may require you to reconnect your Wi-Fi devices for the new settings to come into effect.

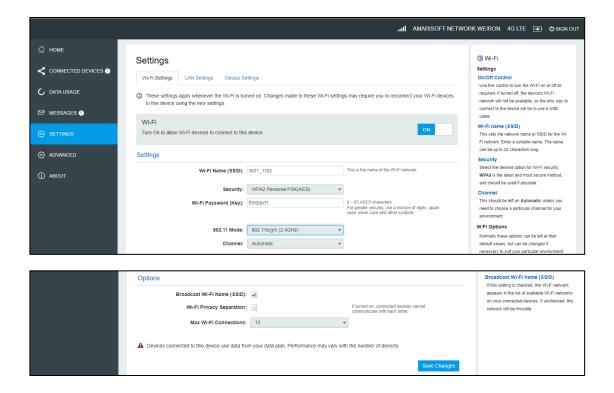

Wi-Fi On/Off:

Turn on to allow Wi-Fi devices to connect to this device. Wi-Fi devices will not connect to this device if it is turned off.

Wi-Fi Name (SSID):

To identify your wireless network, a name called the SSID (Service Set Identifier) is used. You can set a name with a max of 32 characters. Make sure that your SSID is unique if there are other wireless networks operating in your area.

Security:

You can set the wireless security and encryption to prevent the router from unauthorized access and monitoring. The default security is WPA Personal/PSK. You can also set Security as "None", "WPA Personal/PSK", "WPA2 Personal/PSK(AES)", "WPA/WPA2 Mixed Mode".

• 802.11 Mode

The default is "802.11b/g/n(2.4GHz)". You can also set it as 802.11a/ac (5GHz).



Channel:

The default "Channel" is "Automatic". You can set it from channel 1 to channel 11.

Wi-Fi Options:

Wi-Fi Options include Broadcast Wi-Fi name (SSID), Wi-Fi Privacy Separation, and Max Wi-Fi Connections.

Broadcast Wi-Fi Name (SSID):

The wireless device can search and connect to the SSID after turning on "Broadcast Wi-Fi name (SSID)". The wireless client must input the SSID manually to connect to the SSID after turning off "Broadcast Wi-Fi name (SSID)".

Wi-Fi Privacy Separation:


If turned on, connected devices cannot communicate with each other.

Maximum Wi-Fi Connections:

The default maximum Wi-Fi connection is 15. You can set it to any number between 1 and 15.

LAN Settings

From the Online Portal, click Settings > LAN Settings to display the Hotspot WIFI. Information shown in the following figure.

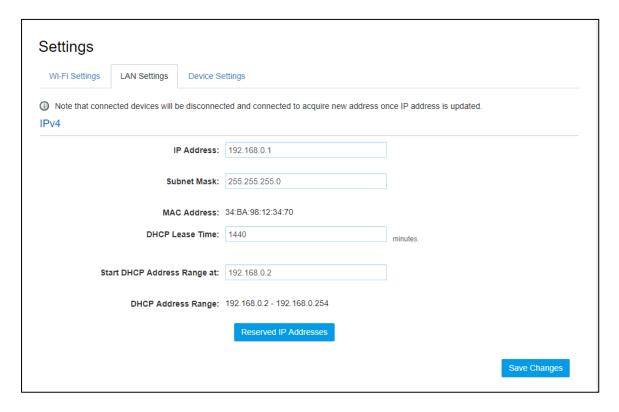



IP Address:

Enter the IP address of your V810A online management portal (factory default: 192.168.0.1).

Subnet Mask:

An address code that determines the size of the network. Normally use 255.255.255.0 as the subnet mask.

MAC Address:

It is written to the device at the time of manufacture.

DHCP Lease Time:

The Lease Time is the amount of time a network user will be allowed connection to the router with their current dynamic IP address. Enter the amount of time in minutes and the user will be "leased" this dynamic IP address. After the time is up, the user will be assigned a new dynamic IP address automatically.

Start DHCP Address Range at:

Specify an IP address for the DHCP server to start with when assigning IP addresses. The default start address is 192.168.0.2.

Reserve IP Address:

You can reserve an IP address so that it is always assigned to the same connected device. Every reserved IP address must be within the range of IP addresses used by DHCP.

Device Settings

Device Preferences

UPnP (Universal Plug and Play):

UPnP (which stands for Universal Plug and Play) is a feature that allows the devices on your home network to discover each other and access certain services. If you don't use applications that need port forwarding, such as peer-to-peer applications, game servers, and many VoIP programs, you may be better off disabling UPnP entirely.


Power Save:

If it's set to ON, Wi-Fi Hotspot will be shut down when your V810A is not connected to a wall adapter.

Enable LCD Sleep

Set the time of the LCD screen to sleep automatically. The default is "After 30 seconds", you can set to 15 seconds, 2 minutes, and never turn off the screen.




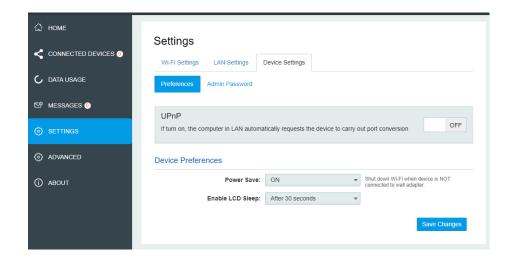

Admin Password

Admin Password:

The Admin Password is used to sign into this Online Portal. To change the password, you must enter the current Admin Password. You will be locked out if an incorrect password is used 5 times. If locked out, you will need to restart your V810A and enter the Online Portal again.

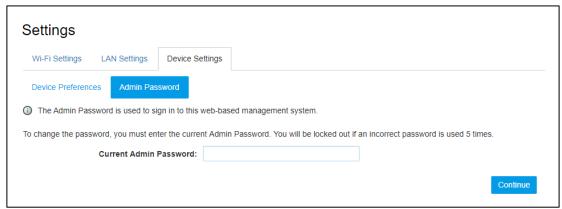

Advanced

On this page, you can see Firewall Settings.


Firewall Settings

On this page, you can see four menus: Firewall, MAC Filter, Port Filtering and Port Forwarding.



Firewall

This page contains Firewall-related settings:

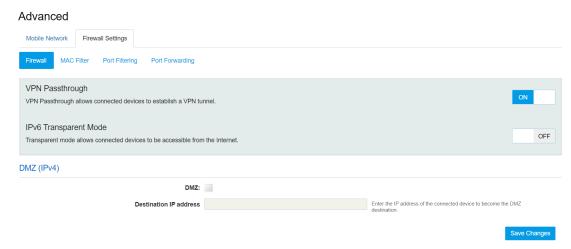

VPN Passthrough

After being turned on, VPN Passthrough allows connected devices to establish a VPN tunnel.

IPv6 Transparent Mode


Transparent mode allows connected devices to be accessible from the Internet.

DMZ (IPv4)

Enter the IP address of the connected device in the Destination IP address input field to become the DMZ destination. After enabling the DMZ feature, all the applications of the connected device will be visited.



Mac Filter

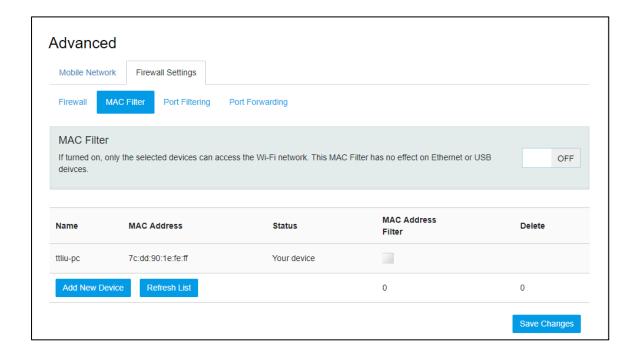

The default "MAC Filter" status is "OFF". If the MAC Filter is on and devices are listed in MAC Address Filter list, then all of the listed devices will be able to connect to your V810A. For any given device, the interaction of the MAC Filter with the "Block" feature on the Connected Devices screen is shown in the following table.

Included in Block List	Included in MAC Filter List	Connection
No	Yes	Allowed
No	No	Not allowed
Yes	Yes	Not allowed
Yes	No	Not allowed

The "Block" (Blacklist) feature is always available. After blocked, the blocked devices will disconnect from the V810A.



Because enabling the MAC Filter could potentially disconnect all devices, the user needs to populate the "MAC Address Filter" list first while the MAC Filter is OFF. Otherwise, when ATEL V810 Series




you click the "ON/OFF" button, it will prompt warning information as follows:




MAC Filter cannot be turned on while no devices are allowed to connect.

After changing the "MAC Filter" to "ON", only the local "MAC Address Filter" listed devices can connect to the V810A Axis 1, other devices will disconnect from the V810A.

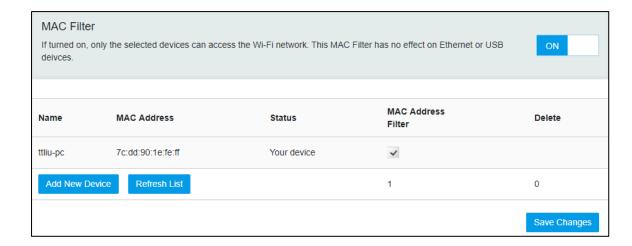


You can click the "Add Device" button to add devices. The added devices can connect the V810A.

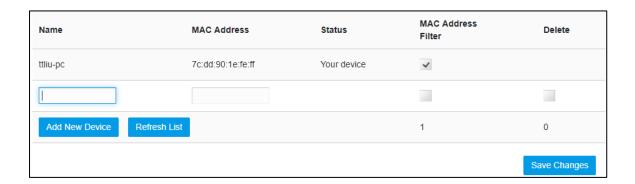



Port Filtering

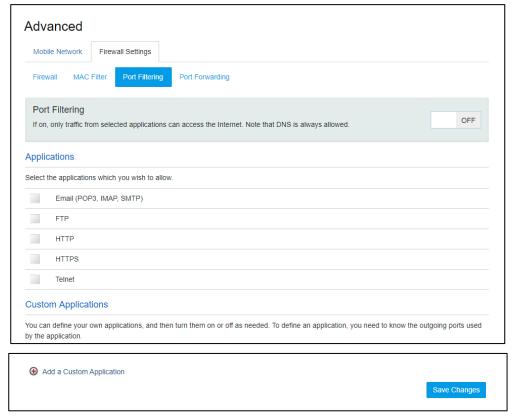

Applications


The default applications have "Email (POP3, IMAP, SMTP)", "FTP", "HTTP", "HTTPS" and "Telnet". If port filtering is on, only traffic from selected applications can access the Internet. Note that DNS is always allowed.


Custom Applications

Click "Add a Custom Application" to define your own applications, and then turn them on or off as needed. To define an application, you need to know the outgoing ports used by application.



Port Forwarding

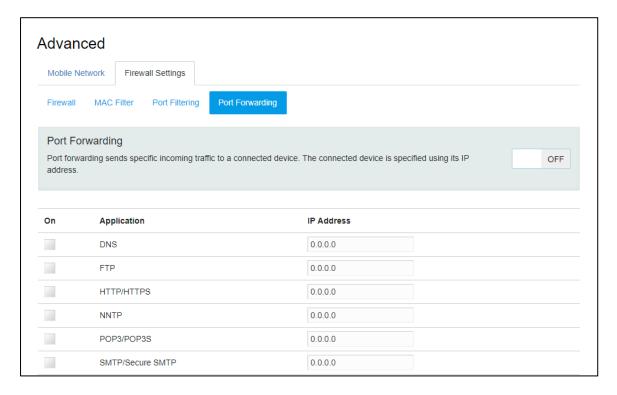

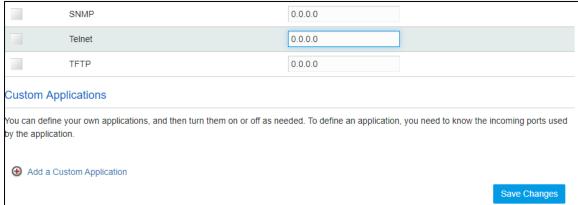

Applications

The default applications have "DNS", "FTP", "HTTP", "NNTP", "POP3", "SMTP", "SNMP", "Telnet" and "TFTP". Port forwarding sends specific incoming traffic to a connected device. The connected device is specified using an IP address.


Custom Application

Click "Add a Custom Application" to define your own applications, and then turn them on or off as needed. To define an application, you need to know the incoming ports used by the application.




About

From the Online Portal Home screen, click the About tab to view the available information.

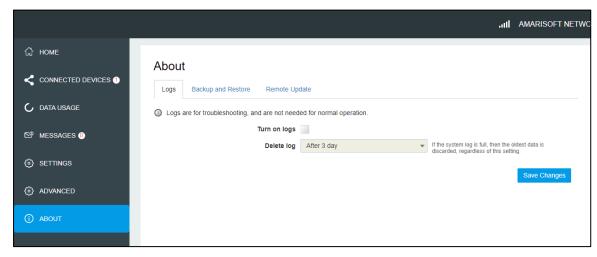

Logs

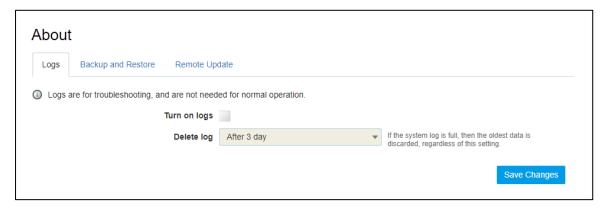

Turn on Logs

Turn on the logs as needed.

Delete Log

This setting determines for how long the log data is retained. Select the desired option. Note that if the log is full, the oldest data is deleted, regardless of this setting.

Log

This log contains data regarding connections to the mobile network.

Clear Log

Clicking this button will delete all existing log data. This makes new data easier to read.


Refresh

Use this to update the log data which is displayed.



Backup and Restore

On this page, you can operate Backup, Restore, Restore to Factory Defaults and Restart.

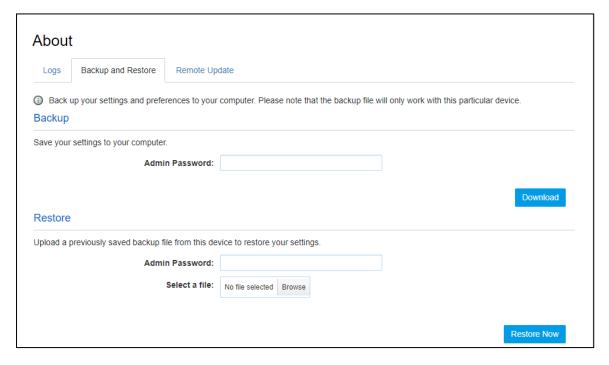

Restore to Factory Defaults	
Restore all settings to the factory default values.	
	Restore Factory Defaults
Restart	

Backup

Backup your V810A settings and preferences to your computer.

Note:

- 1. The backup file will only work with your specific V810A.
- 2. You will be locked out if an incorrect password is used too many times.

Restore

V6.1, January 3, 2023

Upload a previously saved backup file from this device to restore your settings.

Note:

You will be locked out if an incorrect password is used too many times.


Restore to Factory Defaults

Restore all settings to the factory default settings. ATEL V810 Series V810A Data User Manual



Remote Update

About

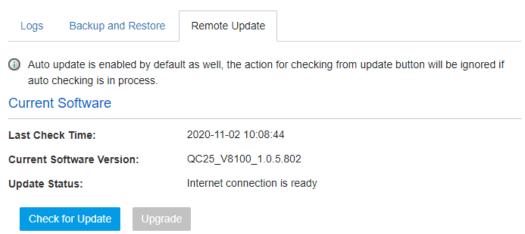

To avoid potential damage from power loss during a software upgrade, please ensure that you connect your V810A to a wall charger for external power.

Check for Update:

"Check for Update" button is only active (blue color) every 6 hours. When active, you can click the "Check for Update" button to check for a new software version. If a new version is detected, the "Upgrade" button will become active (blue color).

Upgrade:

If a software upgrade is available, click the active "Upgrade" button to launch the upgrade manually. Once the upgrade is completed, the device will reboot, and the new software version will display.



4. Troubleshooting

When properly installed, the V810A is a highly reliable product. Most problems are caused by one of these issues:

- 1. Ethernet device was connected to incorrect ports.
- 2. Network coverage is unavailable due to coverage area, an account problem, or a network problem.

The following tips may help solve some common problems encountered while using your V810A.

- 1. Make sure you are using the V810A in the correct geographic region (within the wireless coverage area of your service provider).
- 2. Ensure that your wireless coverage extends to your current location.
- 3. If you do not receive a strong wireless signal, try moving your V810A to a different location near a window.
- 4. Ensure that you have an active service plan.
- 5. Restarting your V810A can sometimes resolve the issues.

IMPORTANT! Before contacting customer care, be sure to restart both your V810A and any device to which it is currently connected.

Common Problems, FAQ's and Solutions

1. How do I perform a Power Reset on V810A?

Your V810A can be in 2 different power modes, AC power only or NiMH battery installed.

To Perform a Power Reset:


- a) Using the Power button: Press and hold the power button for 5 seconds then release, the device will power off. Then press the power button, the device will power on.
- b) If your V810A is in NiMH-only mode, remove the battery for 10 seconds and then re-install the battery.
- c) If your V810A is in AC power only mode (only plugged into the wall charger), unplug the wall charger for 10 seconds and then plug the wall charger back.
- d) If your V810A is plugged to the wall charger AND installed with the battery, unplug the wall charger, AND remove the battery for 10 seconds. Then, plug the charger back and re-install the battery.

2. How do I perform a Device Reset using the RESET pin hole?

Using the RESET pin hole: Remove the back cover. Make sure your V810A is powered on. Use an unfolded paper clip, insert it into the RESET pin hole and push down for 3 seconds,



then release. Your V810A will perform the reset and restart automatically.

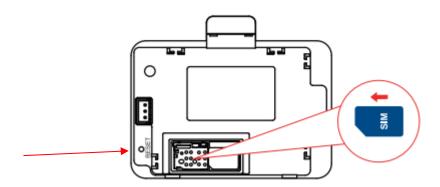

3. How long is the backup battery life of the V810A?

Talk usage time on backup batteries is approximately (up to) 2 hours and 40 minutes and standby time is approximately 32 hours. Actual values can vary with environmental conditions, connectivity, and other usage-related circumstances.

4. Why can't I connect to the internet?

If you cannot connect to the internet, try the following suggestions:

- Make sure you are connected to your V810A with the correct Hotspot Wi-Fi SSID and password.
- b) Make sure the SIM card is inserted properly in the spring-loaded sim card slot.
- c) Contact your service provider to make sure your SIM subscription plan is active. Note: Hotspot service plan may be required.

5. Where do I find the Hotspot Wi-Fi network name (SSID) and password?

The Hotspot Wi-Fi network name (SSID) and password can be found on your V810A LCD Display and on the device label (under the battery holder).

6. How do I perform a Factory Reset via the Online Device Management Portal?

Connect to your V810A Hotspot Wi-Fi and then launch the Online Portal (http://192.168.0.1). Select About > Backup and Restore, click on Restore Factory Defaults.

7. Why can't I connect to Wi-Fi after changing the Wi-Fi password?

Your Wi-Fi devices save the previously used Wi-Fi names associated with the passwords used to access the Wi-Fi name. When you change the Wi-Fi password only for your V810A and keep the same Wi-Fi Name, the devices try to connect to your V810A using the Wi-Fi name and previous Wi- Fi password saved, causing Wi-Fi authentication error.

To resolve the issue, from your device Wi-Fi settings, try "Forget" your V810A Wi-Fi SSID ATEL V810 Series V810A Data User Manual V6.1, January 3, 2023



from the network available list and re-connect again when the V810A SSID reappears.

8. Why can't I access the https://192.168.0.1?

If you can't access the Online Portal at https://192.168.0.1, check the following:

- a) Ensure the correct URL, https://192.168.0.1, is entered or try https://192.168.0.1,
- b) Ensure your device is connected to your V810A Wi-Fi with the correct Wi-Fi name (SSID) and password.

The default password for the Online Portal can be found on the device label as well as the LCD screen display menu. If you have forgotten the password you created, you will need to do a factory reset to restore the default settings on your V810A by long pressing the RESET pinhole.

9. How can I manage my device?

There are three ways to manage your V810A device:

- 1. WebGUI (Local Online Device Management Portal)
 - a. Connect your PC and V810A device using WiFi from the device, ethernet cable or USB-C cable.
 - b. Using your Web Browser, visit 192.168.0.1
 - c. Log in to the WebGUI. Your Username is 'admin' and password can be found on the LCD display or on the device label on the bottom of the device (under the battery cover).
 - d. Once you've logged in, you can manage the device.
- 2. ARMS (Remote Device Management)
 - a. Using a PC with Internet access (not necessarily the internet provided by the device which is being managed), visit https://dm.a-tracs.com
 - b. You can select 'create account', then register for a "General" account. You will need to provide your email, a device IMEI and SN. The device shouldn't have been managed by anyone else in ARMS or the APP already. If you have already got your account registered through the APP, you can use the same credentials to log in.
 - c. You can register with an "Admin" account without the device information (note that you must have an agreement ready with ATEL first.) Admin accounts can manage all the devices ATEL preload for you.
 - d. The registered account can be used to log-in to ARMS and the APP.
 - e. Log into your account. You can view your device there.
 - f. Power on the device (make sure it connects to Internet).
 - g. Once connected to the Internet, you can see your device is shown 'online' in the ARMS portal.
 - h. You can manage your device now. You can use the menu button to refresh the status, delete the device, configure the device, tag (name) it, give it an address, share the device management with another person using his/her email, and import more devices either one by one or in batch.



 After sharing the device to another person's email, he/she can use the default password *Atras!234* to log-in to manage the device. After log-in, he/she can change the password.

3. APP (Remote Device Management

- Using your iPhone, go to Apple Store. download 'ATRACS Admin' APP.
 Android APP can be downloaded through the link on the ARMS Web portal https://dm.a-tracs.com
- b. You can click 'Sign Up', to register for a "General" account using a device IMEI and SN. This device shouldn't have been managed by anyone else in ARMS or APP already. If you already have an account registered through ARMS, you can use the same credentials to log in.
- c. You can register with an "Admin" account without the device information (note that you must have an agreement ready with ATEL first.) Admin accounts can manage all the devices ATEL preload for you.
- d. The registered account can be used to log-in to ARMS and the APP.
- e. Log into your account. You can view your device there.
- f. Power on the device (make sure it connects to Internet).
- g. Once connected to the Internet, you can see your device is shown 'online' in the ARMS portal.
- h. You can manage your device now. You can use the menu button to refresh the status, delete the device, configure the device, tag (name) it, give it an address, share the device management with another person using his/her email, and import more devices one by one.
- After sharing the device to another person's email, he/she can use the default password *Atras!234* to log-in to manage the device. After log-in, he/she can change the password.

10. Where do I find the device Software (SW) version information?

The device SW version can be found on your V810A screen display menu by pressing the Power Key.

11. What do I do if I see a "No SIM" message on the device screen display?

If you see a "No SIM" message, please check the following:

- Make sure your sim is inserted properly in the spring-loaded sim card slot;
- Contact your service provider to make sure your SIM subscription plan is active;
- Check with your service provider if a sim replacement is needed.



5. Regulatory Statements

FCC Equipment Authorization ID: XYO-V810

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

FCC CAUTION: Any changes or modification not expressly approved by ATEL, the party responsible for compliance could void the user's authority to operate this equipment.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Warning Statements:

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons during the normal operations.

NOTE: The Radio Frequency (RF) emitter installed in your modem must not be located or operated in conjunction with any other antenna or transmitter, unless specifically authorized by ATEL.

6. Safety Hazards

Follow Safety Guidelines

Always follow the applicable rules and regulations in the area in which you are using your device. Turn your device off in areas where its use is not allowed or when its use may cause interference or other problems. Note that this type of device should be placed at least 10 ft from work area(s).

ATEL V810 Series V810A Data User Manual V6.1, January 3, 2023



Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, inadequately shielded electronic equipment may be affected by the RF signals generated by your device.

Medical and Life Support Equipment

Do not use your device in healthcare facilities or where medical life support equipment is located as such equipment could be affected by your device's external RF signals.

Pacemakers

- It is recommended to maintain a minimum separation of six inches between a RF device and a pacemaker in order to avoid potential interference with the pacemaker.
- Persons with pacemakers should always follow these guidelines:
- Always keep the device at least six inches away from a pacemaker when the device is turned on.
- Place your device on the opposite side of your body where your pacemaker is implanted in order to add extra distance between the pacemaker and your device.
- Avoid placing a device that is on next to a pacemaker (e.g., do not carry your device in a shirt or jacket pocket that is located directly over the pacemaker).
- If you are concerned or suspect for any reason that interference is taking place with your pacemaker, turn your device OFF immediately.

Hearing Devices

When some wireless devices are used with certain hearing devices (including hearing aids and cochlear implants) users may detect a noise which may interfere with the effectiveness of the hearing device.

Use of Your Device while Operating a Vehicle

Please consult the manufacturer of any electronic equipment that has been installed in your vehicle as RF signals may affect electronic systems in motor vehicles.

Please do not operate your device while driving a vehicle. This may cause a severe distraction, and, in some areas, it is against the law.

Use of Your Device on an Aircraft

Don't use your device during flight, it may violate FAA regulations. Because your device may interfere with onboard electronic equipment, always follow the instructions of the airline personnel and turn your device OFF.

Blasting Areas

In order to avoid interfering with blasting operations, your device should be turned OFF when in a blasting area or in an area with posted signs indicating that people in the area ATEL V810 Series

V810A Data User Manual V6.1, January 3, 2023



must turn off two-way radios. Please obey all signs and instructions when you are in and around a blasting area.

Proper Battery & Adapter Use and Disposal

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or another hazard.
- Only use the battery for the system for which it is specified.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard. Use of an unqualified battery may present a risk of fire, explosion, leakage or another hazard. Only authorized service providers shall replace the battery.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the battery. If the battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or another hazard.

Disclaimer:

Certain variations may be present between the device and user manual description depending on software release or specific network services. ATEL shall not be held legally responsible for such deviations, if any, nor for their potential consequences.

Limited Warranty:

The full ATEL USA Warranty Policy can be found at www.atel-usa.com/warranty. On this page you can "Start a Warranty Claim", "Check on an Existing Claim" and read the Warranty Policy by clicking on "ATEL's Warranty Policy". Please follow all warranty instructions available and if you have any questions contact us at support@atel-usa.com. Note that some actions such as, but not limited to, using sharp objects to open the device, may void the warranty.

Trademark. ATEL & Axis are trademarks owned and protected by Asiatelco Technologies, Inc. © 2023 Asiatelco Technologies, Inc. All rights reserved.