

EV **Electro-Voice®**
MS3000 SERIES

OWNER'S MANUAL



TABLE OF CONTENTS

DESCRIPTION	3
SECURE-PHASE DIVERSITY	3
ANTENNAS	3
HANDHELD TRANSMITTERS	3
BODYPACK TRANSMITTER	3
FRONT PANEL FEATURES DISPLAYS	3
POWER SWITCH	4
SQUELCH ADJUSTMENT	4
REAR PANEL FEATURES	4
SYSTEM SET-UP AND OPERATION	4-5
RACK-MOUNT INSTALLATION	5
ANTENNA PLACEMENT	5-6
COMPATIBILITY	7
POTENTIAL SOURCES OF INTERFERENCE	7
SPECIFICATIONS AND FREQUENCIES	7-9
FCC INFORMATION	9
WARRANTY	9

MS3000 SERIES OWNERS MANUAL**MS3000 UHF Diversity Wireless System Features**

- Well-designed companding and audio circuitry deliver “hard-wired” sound quality
- Excellent 104 dB signal-to-noise ratio
- Metal chassis ½-rack space receiver with TNC antenna connectors
- Metering for audio level, rf and diversity channel
- Externally-adjustable squelch control
- Balanced 3-pin XLR-type and unbalanced ¼-inch audio outputs
- Choice of transmitters including rugged bodypack with TA4F connector for lavalier and headset microphones. Professional handheld transmitters with choice of Electro-Voice N/D767 dynamic or BK-1 condenser transducers.

DESCRIPTION

The Electro-Voice MS3000 is a professional quality UHF diversity wireless system that operates within the frequency range of 690 to 725 MHz (TV channels 50 – 55) on single custom-tuned frequencies. MS3000 Systems combine the MR3000 receiver with a choice of handheld and bodypack transmitters that allow multiple ways to achieve wireless freedom. The wide range of frequencies permit use of multiple systems simultaneously (the exact number is dependent on local conditions). The specially designed compander circuitry provides wide dynamic range with clean, accurate transient response. MR3000 receivers have ½-rack space metal chassis for ruggedness and reliability. A host of accessories are available for operational and installation flexibility.

SECURE-PHASE™ DIVERSITY

The MR3000 receiver utilizes patented Secure-Phase™ diversity circuitry that ensures the strongest, cleanest signal possible. Unlike other diversity schemes that switch antennas or signal, Secure-Phase™ utilizes the signal from both antennas at all times to increase signal strength, minimize dropouts and lower the potential for interference.

If the signal from the transmitter changes phase or polarity (a common cause of dropouts), the circuit adjusts the phase angle between the two antennas receiving circuits to prevent cancellation. The two diversity lights on the front panel indicate the status of this circuit.

ANTENNAS

The MR3000's ½-rack space receiver has specially tuned quarter-wave antennas with TNC-type antenna connectors. These connectors are electrically and mechanically superior to the commonly used

BNC connectors and are located on the rear panel of the MR3000. TNC connectors are widely used on cellular communications equipment and are readily available.

Two antennas are supplied with the unit for normal use and optional accessory kits can be used to rack mount or remote-mount the antennas. Other accessories such as multi-couplers, ½-wave antennas and log periodic directional antennas are also available to meet specific installation and use requirements.

HANDHELD TRANSMITTER

- Choice of Electro-Voice N/D767 (MSHD) N/DYM dynamic or Electro-Voice BK-1 condenser (MSHC) transducers.
- Special “soft-touch” finish and ergonomically designed handle makes holding comfortable and secure.
- Separate LEDs for power on and battery status for easy monitoring of operational modes.
- Separate power and audio mute switches for operational flexibility.
- Wide-range gain control allows approximately 40 dB of adjustment.
- Up to 10 hours of operation on a 9-volt alkaline battery.

BODYPACK TRANSMITTER

- UHF bodypack with TA4F connector allows the user the freedom of microphone selection with easy interchangeability. Available microphones include the Electro-Voice ULM20 cardioid condenser lavalier microphone and the HM2 headset microphone. The TA4F connector allows connection of any dynamic or condenser microphone that can be biased with 5 volts DC phantom.
- Separate on/off and toggle mute switches for operational flexibility
- LED battery condition indicator gives quick indication of battery strength
- Up to 10 hours of operation on a 9-volt alkaline battery

MR3000 FRONT PANEL FEATURES DISPLAYS

The MR3000 has a number of front panel indicators to make setup and operation easier.

1. A five-segment LED meter shows audio level and is useful for setting the transmitter's gain control.
2. A five-segment LED RF meter shows the strength of the incoming signal from the transmitter
3. Two LEDs indicate the action of the Secure-Phase™ diversity circuitry.

POWER SWITCH

The front-panel power switch allows the receiver to be switched on and off easily.

SQUELCH ADJUSTMENT

The range of the externally adjustable squelch control allows you the choice of maximizing range or lowering the potential for external interference.

REAR PANEL FEATURES

AUDIO OUTPUTS

The MR3000 has both 3-pin XLR-type balanced and 1/4-inch unbalanced phone jack output connectors. The line level output is adjustable with a small screwdriver (included).

ANTENNA CONNECTORS

The antenna inputs utilize TNC connectors that provide solid mechanical and electrical connections.

POWER INPUT

The MR3000 will operate from the supplied ac adapter or any other battery, filtered supply or power pack that can deliver 12 – 15 volts AC/DC, 300 mA.

SYSTEM SET-UP AND OPERATION

To prepare the MS3000 System for operation, you should:

1. Connect the power supply adapter to an AC outlet that will supply 105 to 125 volts AC, 60 Hz. Other power supply adapters are available for 210 – 240 volt, 50 – 60 Hz operation. Make sure that you have the correct power supply for your locality.
2. Connect the MR3000 to your audio system using the appropriate connector on the rear panel. It is preferable to use the 3-pin XLR connector since its balanced circuitry minimizes the potential for electrical interference and can be used with long cable runs.
3. Switch on the receiver with the front-panel power switch.
4. Attach either the supplied 1/4-wave antennas or two externally mounted antennas to the antenna connectors on the rear panel of the MR3000. Be sure and tighten the connectors securely. If the supplied 1/4-wave antennas are used, they must be oriented at a 90° angle as shown in Figure 1. **Unlike other diversity wireless systems, two antennas are needed for the MS3000 to operate correctly.**

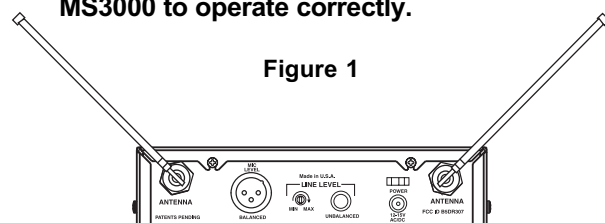


Figure 1

5. Open the battery compartment door on the handheld transmitter or the bodypack and install a 9-volt alkaline battery (see Figures 3 and 4). 8.4 volt Ni-Cad batteries may be used but will yield noticeably shorter operational time and slightly lower performance.

Figure 2

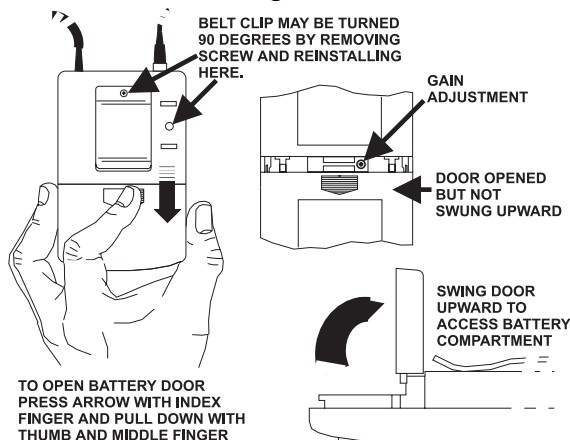


Figure 3



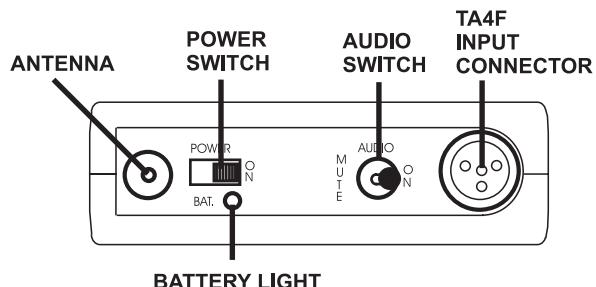


Figure 4

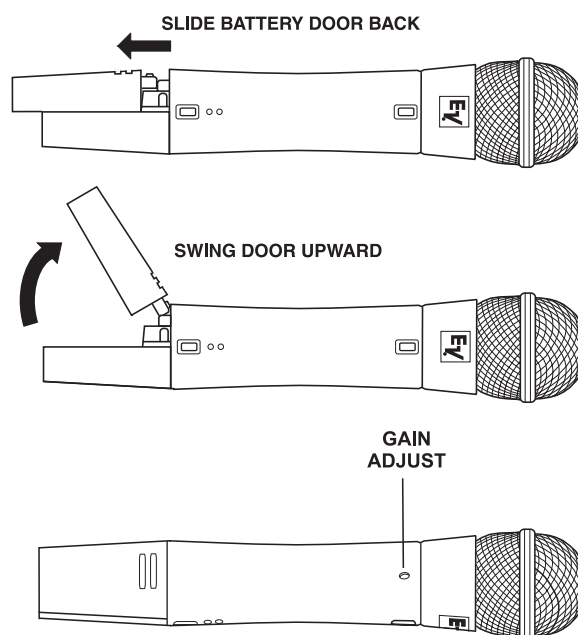

6. When the battery is installed, you may plug in the microphone to the bodypack or simply switch on the handheld transmitter and begin operation.
7. When the system is first operated, the gain of the transmitter should be adjusted to the vocalist or speaker who will be using it.
 - Speak or sing as loudly as possible into the microphone.
 - Observe the audio level meter on the receiver.

Figure 5

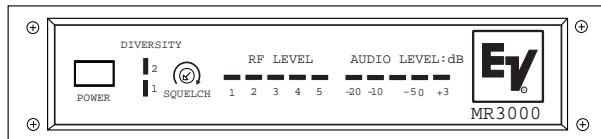

- Adjust the gain control on the transmitter (see Figures 2 and 4) to prevent over or under-modulation. The gain should be adjusted so that the signal peaks are no more than +0 dB and that there is at least -10 dB of audio level meter indication.
8. The squelch control on the front of the receiver may be adjusted to increase range or reduce interference. If the squelch control is being adjusted, it should be adjusted with the transmitter off. **CAUTION—DECREASING SQUELCH WILL MAKE THE SYSTEM MORE SUSCEPTIBLE TO OUTSIDE INTERFERENCE!** Use the small screwdriver supplied with the unit and turn the squelch control clockwise to reduce interference from noise and spurious radio signals. To best set the squelch control, turn the control counter-clockwise until you hear noise and interference and then turn it back clockwise until the noise is squelched off. This setting will give you the best balance between noise and reduced range.
 9. Before using the system before an audience, it is a good idea to “walk” the expected use area to check for dropouts. To minimize the potential for dropouts, please observe good antenna placement. When the transmitter is turned on, the RF meter on the receiver should be illuminated in the green range to verify it is receiving a strong signal.
 10. When the transmitter power switch is turned on, the red battery light will flash one time if the battery is good and has adequate strength. If the red light does not flash or stays on continuously, the battery is weak and should be replaced.

RACK-MOUNT INSTALLATION

The MR3000 is supplied with rack mounts for single and double mounting in a standard EIA 19” equipment rack (see Figure 6). For rack mounting a single unit, a long and short “ear” are used. For dual side-by-side mounting, use the short “ears” and the mid sized brackets from two MR3000s as shown.


To assemble the rack mount adapters to the unit(s) and install into a rack, proceed as follows:

1. Remove the front Phillips head screws from each side of each unit.
2. Align the correct rack ear or bracket with the holes on the side of the unit. Install the previously removed screws. Insert an additional screw (provided in the parts pack) into the remaining hole. Repeat this step for the opposite side of the unit. Be sure to tighten all screws securely.

For double mounting of two systems, proceed as follows:

1. Align the mid-sized brackets (item #2) with the holes on the adjacent sides of each unit.
2. Install the previously removed screws. Insert an additional screw (provided in the parts pack) into the remaining holes. Tighten all screws securely.

Figure 6

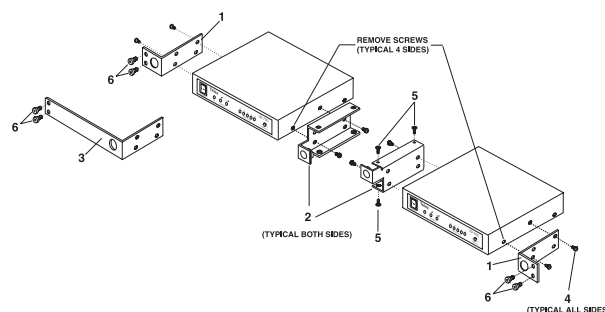

3. Place the two assemblies side-by-side with the mid brackets together. (The left bracket should fit above the right so that the countersinks are visible). Install 4 flat-head screws (item #5) and tighten them securely.
4. Attach the antenna connectors to the brackets.
5. Attach the supplied extension cables from the rack connectors to the antenna connections on the back of the receiver.
4. Place the assembly in to the 19-inch rack enclosure and insert 4 #10-32 x 3/8” Phillips pan head screws (supplied) in each corner of the rack ears and secure to the enclosure.

Figure 7



ANTENNA PLACEMENT

For any wireless system to perform correctly, strong RF signals are mandatory. To maximize signal strength, good antenna placement must be utilized. Although some situations prohibit perfect antenna placement, here are some guidelines:

1. The antennas should be placed in a location with a clear signal path to the transmitter. Walls, ceilings, metal objects, equipment racks, etc. are all signal barriers that will reduce range and performance. Generally speaking, placing the receiver at an elevated location can help increase range and signal strength.
2. **If the receiver is rack-mounted, external antennas are necessary. Do not rack mount the MR3000 with the antennas mounted directly on the back of the unit. This will severely decrease the range and performance of the system.**

If the MR3000 is rack-mounted, make sure the antennas are front-mounted (following the directions noted above). If antennas are mounted remotely from the chassis, the $\frac{1}{4}$ -wave antennas supplied with the receiver cannot be used. The $\frac{1}{2}$ -wave antennas are a necessity if the antennas are remote-mounted and can provide better performance when used with the rack mount.

Figure 8— $\frac{1}{2}$ -Wave Antenna for Remote Mounting


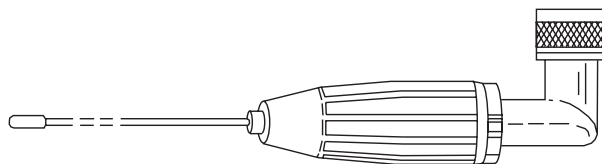


Figure 9

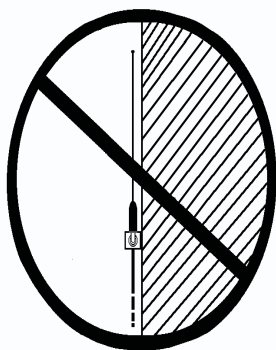

If antennas are remote-mounted, separating them 6 feet (1.8 M) or more and keeping them at least 2 feet (.6M) from other barriers will improve performance (see Figure 11). If you are remote mounting the antennas and require strong signal over a large area, consider using highly directional antennas such as a log-periodic. The LPA500 available from Electro-Voice is tuned for frequencies from 450 – 900 MHz

and can provide an additional 5 dB of gain

3. If you remote-mount the antennas, attention should be paid to the type and quality of the antenna cable. For cable runs longer than 25-ft (7.6 M), special low-loss cables should be used.

Figure 10

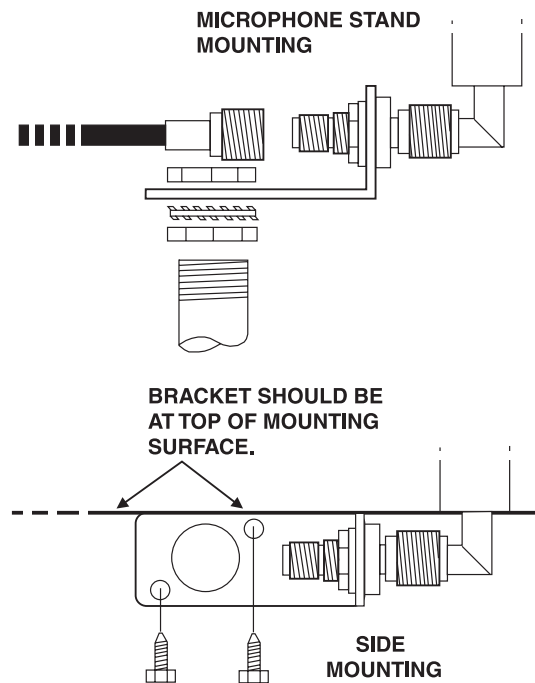


Figure 11

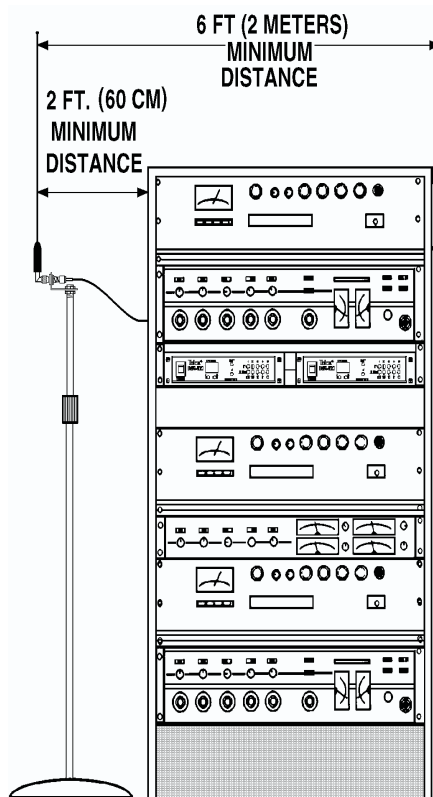


Figure 12



These cables are available as accessories (see accessories listing).

4. If multiple wireless systems are being used, a multi-coupler will minimize antenna interference. A multi-coupler has one set of antennas and distributes RF signal to multiple systems. The Electro-Voice A/P4X4 will supply antenna signal and DC power to 4 systems, eliminating 3 external power supplies and 6 antennas (Figure 12).

COMPATIBILITY

The receiver and transmitter must be tuned to the same frequency in order to operate together as a system. Mixing brands of wireless components, even if units have the same frequency, will not work due to differences in companding circuits.

If two or more MS3000 and/or other VHF/UHF wireless systems are being used in the same location, proper frequency coordination is necessary to avoid interference. Frequency mixing and spacing must be factored along with local TV stations to determine if conflicts will result from a specific group.

Contact your dealer or Electro-Voice for frequency-selection assistance if you are planning to add more wireless systems to be operated simultaneously in the same location.

POTENTIAL SOURCES OF INTERFERENCE

There are many potential sources of interference for your wireless system. Any electronic component that contains digital circuitry including digital signal processors (reverb/multi-effects units), electronic keyboards, digital lighting controllers, CD players and computers all emit rf energy that can adversely affect the performance of your wireless system. It is always best to place your receiver as far away from these devices as possible to minimize this potential source of interference.

SYSTEM SPECIFICATIONS STANDARD

FREQUENCIES (MHz)

690.100; 690.500; 691.200; 692.100; 694.200; 695.000
 695.350; 695.500; 696.425; 696.725; 698.200; 699.800
 700.200; 702.200; 702.600; 703.250; 704.250; 706.250
 707.460; 707.850; 708.600; 709.150; 710.350; 712.250
 713.900; 714.450; 715.350; 717.750; 719.050; 720.600

MR3000 RECEIVER

Frequency Range	690 – 725 MHz
RF Stability	0.005% or better
Modulation Type	FM, 40 kHz nominal
Type	Double Conversion, 65.75 MHz and 10.7 MHz I.F.
IF Bandwidth	230 kHz at –3dB points
Image Rejection	65 dB or better
Squelch	Amplitude adjustable
Audio Outputs:	
Mic Level:	-20 dBV at 600 ohms
Line Level:	0.775 V rms at 100K ohms (max)
Signal-to-Noise Ratio	104 dB
Receiver Sensitivity:	Less than 0.8 uV for 12 dB SINAD
FCC Compliance:	Notification, Part 15
FCC Identification:	B5DR307
Diversity:	Continuous Secure-Phase [™] Diversity to maximize signal strength
Supplied Accessories:	Two ¼-wave antennas; rack mount adapters (1 short, 1 mid, 1 long); gain adjustment screwdriver; AC power supply (120 Volt/60 Hz or 230 Volt/50 Hz); owner's manual.
Size (HxWxD):	1.75 in x 7.5 in x 7.75 in without antennas (31.75 x 190.5 x 196.85 mm)

Weight: 2.06 lb/1.06 kg

MSH Handheld Transmitter

Power Output:	10 mW terminated, 50-mW maximum
Antenna:	Internal (patented)
Modulation:	FM, +40 kHz Deviation w/50 us pre-emphasis
Frequency Response:	50 Hz to 15,000 Hz
Transducer:	Electro-Voice N/D767 Supercardioid (MSHD) Electro-Voice BK-1 Cardioid Electret (MSHC)
Supplied Accessory:	Stand adapter
Battery:	9 volt alkaline
Approvals:	FCC, Part 74H Industry Canada RSS123
FCC Identification:	B5DH211
Size:	10.75 in long (27.3 cm) x 2 in (5.08 cm) max.
Weight (MSHD)	284 g (10 oz) without battery
Weight (MSHC)	246 g (9.6 oz) without battery

MSB Bodypack Transmitter

Power Output:	10 mW terminated, 50-mW maximum
Antenna:	Permanently attached
Modulation:	FM, +40 kHz Deviation w/50 us pre-emphasis
TA4F Connector:	Pin 1: Ground; Pin 2: Mic Input; Pin 3: +5 volt bias; Pin 4: +5 volt bias fed through a 3 K ohm resistor for 2-wire electrets
Frequency Response:	50 Hz to 15,000 Hz
Microphone Input Sensitivity:	7.8 mV for full deviation
DC Power:	9 volt alkaline battery
Approvals:	FCC, Part 74H Industry Canada RSS123
FCC Identification:	B5DB108A
Size (HxWxD):	4.5 in x 2.6 in x 1.25 in (no antenna) (114.3 cm x 66 cm x 31.75 cm)
Weight:	3.5 oz (480 grams) without battery

Figure 13—TA-4F Connector Wiring

Pin 1 = ground

Pin 2 = mic input

Pin 3 = +5 volt bias

Pin 4 = +5 volt bias fed through 3K resistor for 2-wire electrets

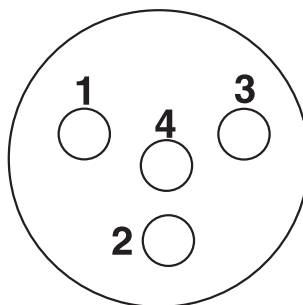


Figure 13

AVAILABLE ACCESSORIES

Model	Part #	Description
ULM20	ULM20	Electro-Voice cardioid lavalier microphone
CS200EX		Electro-Voice cardioid lavalier microphone
CO2EX		Electro-Voice omnidirectional lavalier
CM-311	E3K	Crown differoid headset microphone
HM2		Electro-Voice cardioid headset microphone
HM1		Electro-Voice cardioid headset microphone
	879155	ULM20 windscreen

<u>Model</u>	<u>Part #</u>	<u>Description</u>
A/P4X4	879156	ULM20 mic clip
	358879	metal clip for bodypack
		Electro-Voice Multi-coupler for 4 systems
	730131-2	120-volt power supply
	730104-1	230-volt power supply (Euro-type plug)
CLA-5	730103-1	230-volt power supply (UK-type plug)
	879010	¼-wave antenna with TNC connector
	870658-5	½-wave antenna with TNC connector
AB-2	71138000	Combination antenna bracket and cables
LPA 500		Electro-Voice Log-periodic directional antenna
	71151025	25' (7.62M) coax cable with TNC connectors
	71151050	50' (15.24M) coax cable with TNC connectors
	71151075	75' (22.86M) coax cable with TNC connectors
	71151100	100' (30.4M) coax cable with TNC connectors

FCC INFORMATION

The Electro-Voice MR-3000 receiver is authorized under Part 15 of the Federal Communications Commission. Licensing of Electro-Voice equipment is the user's responsibility and licensability depends upon the user's classification, and frequency selected. Electro-Voice strongly urges the user to contact the appropriate telecommunications authority before ordering the choosing frequencies other than factory preset frequencies.

The Electro-Voice MSB and MSH transmitters are Type Accepted under United States Federal Communications Commission Part 74. Licensing of Electro-Voice equipment is the user's responsibility and licensability depends upon the user's classification, user's application, and frequency selected. Electro-Voice strongly urges the user to contact the appropriate telecommunications authority for any desired clarification.

CAUTION: Any changes or modifications made to the above equipment could void the user's authority to operate the equipment.

WARRANTY (Limited)

Electro-Voice products are guaranteed against malfunction due to defects in materials or workmanship for a specified period, as noted in the individual product-line statement(s) below, or in the individual product data sheet or owner's manual, beginning with the date of original purchase. If such malfunction occurs during the specified period, the product will be repaired or replaced (at our option) without charge. The product will be returned to the customer prepaid. **Exclusions and Limitations:** The Limited Warranty does not apply to: (a) exterior finish or appearance; (b) certain specific described in the individual product-line statement(s) below, or in the individual product data sheet or owner's manual; (c) malfunction resulting from use or operation of the product other than as specified in the product data sheet or owner's manual; (d) malfunction resulting from misuse or abuse of the product; or (e)

malfunction occurring at any time after repairs have been made to the product by anyone other than Electro-Voice or any of its authorized service representatives. **Obtaining Warranty Service:**

To obtain warranty service, the customer must deliver the product, prepaid, to Electro-Voice or any of its authorized service representatives together with proof of purchase of the product in the form of a bill of sale or receipted invoice. A list of authorized service representatives is available from Electro-Voice at 600 Cecil Street, Buchanan, MI 49107 (616/695-6831 or 800/234-6831). **Incidental and Consequential Damages Excluded:** Product repair or replacement and return to the customer are the only remedies provided to the customer. Electro-Voice shall not be liable for any incidental or consequential damages including, without limitation, injury to persons or property or loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you. **Other Rights:** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Electro-Voice Wireless Systems are guaranteed against malfunction due to defects in materials or workmanship for a period of one (1) year from the date of original purchase. The Limited Warranty does not extend to cables or cable connectors. Additional details are included in the Uniform Limited Warranty Statement.

Service and repair addresses for this product:

Telex Communications
8601 East Cornhusker Highway,
Lincoln, Nebraska 68506 (402/467-5321)

and

Electro-Voice
600 Cecil Street,
Buchanan, Michigan 49107
(616/695-6831 or 800/234-6831)

Electro-Voice®

600 Cecil Street, Buchanan, MI 49107
616/695-6831, 616/695-1304 Fax