



## NETWORK MEDIA PLAYER

For more information and technical support services, please visit us at [www.ceenee.com](http://www.ceenee.com)



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

## Package Contents:



CeeNee miniPlus Remote Control 2 AAA Batteries AC Adapter Composite AV Cable



HDMI Cable USB Mini-B Host Adapter (Optional) WiFi USB Dongle (Optional) 3G/4G USB Dongle (Optional)

## 6 Enjoy!



## 1 Connect your CeeNee miniPlus to the TV set using the HDMI cable or Composite AV cable



High Definition TV



Standard Definition TV

2

To connect the player to the Internet/Network:

- Connect the Ethernet cable (not included) to the CeeNee miniPlus Ethernet connector
- Or connect an optional WiFi USB dongle to the USB connector
- Or connect an optional 3G/4G USB dongle to the USB connector



4

Connect the AC adapter to the wall unit and to CeeNee miniPlus



3

To utilize the optical digital sound:

- Connect the optical cable to CeeNee miniPlus optical connector



5

Connect USB Hard Drive, and/or SD card, and/or USB Flash drive to CeeNee miniPlus

- \* USB Hard Drive, SD card, and USB Flash drive are not included.
- \*\* An optional USB Mini-B Host Adapter is not included.

