
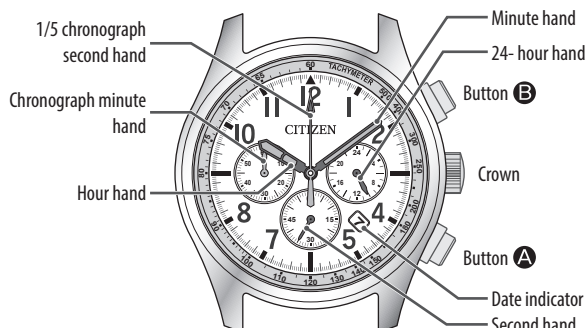


B620 Abbreviated instruction


ENGLISH

- This watch is light-powered. Be sure your watch is fully charged before use.
- For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual: B620 Click Here 

Component identification



- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

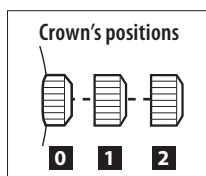

Adjusting the time

1 Pull the crown out to position 2 when the second hand points to 12:00 (0 second).

All the hands stop.

- When using chronograph, the chronograph is reset and 1/5 chronograph second hand returns to 0 second.

2 Rotate the crown to adjust the time.

- The 24-hour hand also moves. Pay particular attention to the hand to ensure AM or PM time is set properly.
- When the watch shows around 12:00 AM, the date indicator starts to change. The date indicator does not change by rotating the crown counterclockwise.

3 Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.

Adjusting the calendar

Adjust the date indication on the first days of March, May, July, October and December.

- When the time on the watch is between 9:00 PM and 1:00 AM, do not execute the adjustment. Otherwise the date indication may change improperly.

1 Pull the crown out to position 1.

2 Rotate the crown counterclockwise to adjust the date.

3 Push the crown in to position 0 to finish the procedure.


Using the chronograph

1 Push the crown in to position 0.

Start/stop: press and release the upper right button B.

- Press and release the lower right button A to return the chronograph minute hand to 00 minute position before starting measurement if it is not at the position.

Reset: press and release the lower right button A while the chronograph is stopped.

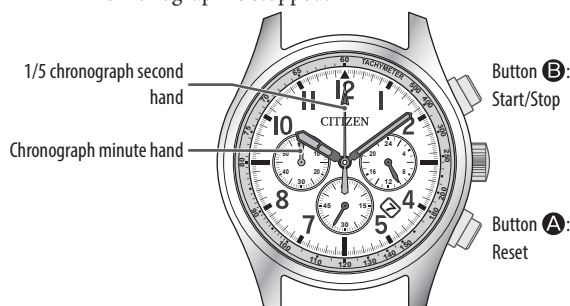

The 60-minute chronograph can indicate a maximum of 59' 59.8".

- After one hour of continuous chronograph operation, the chronograph automatically stops.
- The current time is shown while the chronograph works.
- While the second hand is moving once every two seconds (the insufficient charge warning function), you can not use the chronograph.

Correcting the reference position of 1/5 chronograph second hand

Do the following procedure when 1/5 chronograph second hand does not return to 0 second by resetting the chronograph.

1 Pull the crown out to position 2.

- The watch stops. All the hands stop.

2 Press and hold the upper right button B for 2 or more seconds.

- You can adjust 1/5 chronograph second hand.

3 Adjust 1/5 chronograph second hand to 0 second by pressing the upper right button B repeatedly.

Each time you press the button, 1/5 chronograph second hand moves by 1 step.

- While you press and hold the button, the hand moves continuously.
- Chronograph minute hand moves as 1/5 chronograph second hand moves.

4 Rotate the crown to adjust the time.

5 Push the crown in to position 0.

6 Press and release the lower right button A.

- When you press and release the button, chronograph minute hand is reset.