

TP-LINK Wireless Router (Archer C7) User's Guide







1 Get	to know TP-LINK (Archer C7) Wireless Router	2
Α.	Tech Specs - Connections and Expansion	2
В.	Minimum System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000)	.2
2 Con	necting to TP-LINK Router	3
3 Swit	Switching your broadband Internet service to HKBN	
4 Fac	tory default reset of TP-LINK Router	11



Get to know TP-LINK (Archer C7) Wireless Router

Tech Specs - Connections and Expansion A.

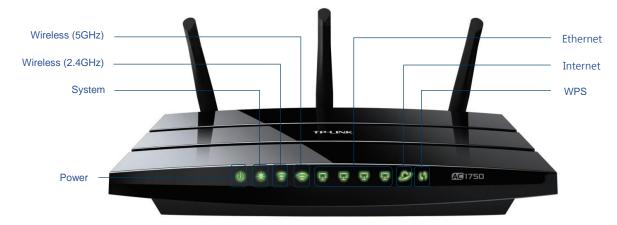

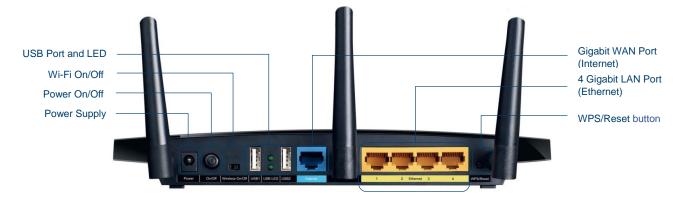

Minimum System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000)

To ensure that you have a fast and stable network, please refer to the following as a recommended minimum system requirement:

Central Processing Unit (CPU) System Memory Hard disk

Network Adaptor

Intel Core2 Duo P8700/2.5 (3 GHz or above) 4GB or above

64GB SATA II SSD (Min. I/O speed of 200MB/s)

100/1000M Network Adaptor



Make sure you have a LAN cable connected from the HKBN wall plate/ONT to the Internet port of your TP-LINK Router (Archer C7). Using a second LAN cable, connect it from the router Ethernet port to the computer LAN port. Once finished, switch on the power supply for the router and turn on the computer.


Open your Internet browser, and input [http://192.168.0.1] using the address-bar and press [Enter].

Enter [admin] as the default username and password, click [OK]






Click [Next] to run Quick Setup.

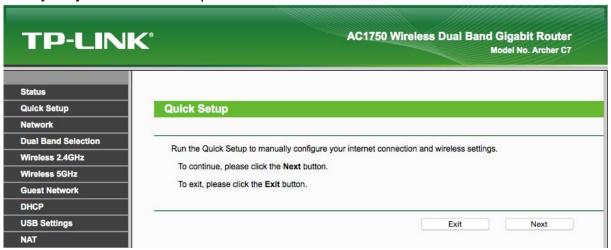

TP-LINK Router (Archer C7) supports both 2.4GHz and 5GHz wireless connections, it is recommended that you choose [Concurrently with 2.4GHz and 5GHz(802.11a/b/g/n/ac)] then click [Next] to continue.

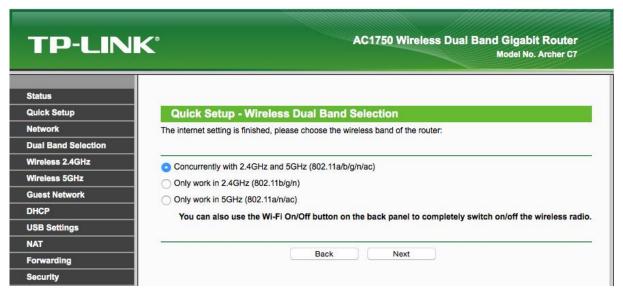




Create a [Wireless Network Name] (SSID) for **2.4GHz network**, choose [Hong Kong] under [Region]. Under [Wireless Security] choose [Enable Security (WPA-PSK/ WPA2-PSK)] and create a [PSK Password], click [Next] to finish.

TP-LINK	C *	AC1750 Wireless Dual Band Gigabit Router Model No. Archer C7		
Status	Quick Setup - Wireless 2.40	GHz		
Quick Setup				
Network	The Internet setting have been completed now please configure wireless settings.			
Dual Band Selection	Wireless Radio:	Enable		
Wireless 2.4GHz	Wireless Network Name:	Wifi Name (Also called the SSID)		
Wireless 5GHz				
Suest Network	Region: Warning:	Hong Kong Ensure you select a correct country to conform local law.		
DHCP		Incorrect settings may cause interference.		
JSB Settings				
NAT				
Forwarding	Wireless Security:			
ecurity	0	Disable Security		
arental Control	•	Enable Security(WPA-PSK/WPA2-PSK)		
Access Control	PSK Password:	Wifi Password		
dvanced Routing		(You can enter ASCII characters between 8 and 63 or Hexadecimal character		
Bandwidth Control		between 8 and 64.)		
2 & MAC Binding	O	No Change		
ynamic DNS		(Use the current security settings.)		
Pv6 Support				
System Tools	✓	More Advanced Wireless Settings		
	Band:	2.4GHz		
	Mode:	11bgn mixed 🗘		
	Channel Width:	Auto \$		
	Channel:	Auto		
		Note: Please use the WiFi switch on this device to enable/disable radio.		
		Back Next		




Create a [Wireless Network Name] (SSID) for **5GHz network**, choose [Hong Kong] under [Region]. Under [Wireless Security] choose [Enable Security (WPA-PSK/ WPA2-PSK)] and create a [PSK Password], click [Next] to finish.

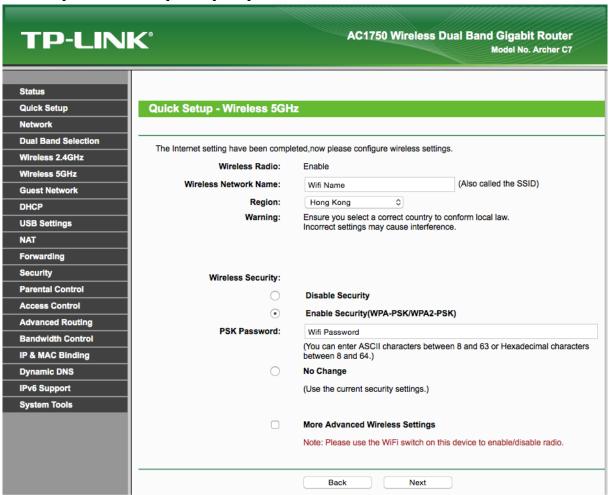




Click [Reboot] to complete Quick Setup.

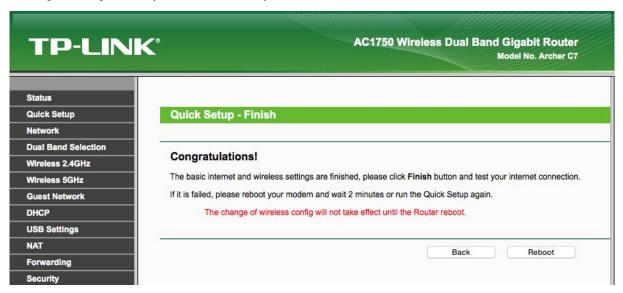


A pop-up window will appear, click [OK] to confirm reboot.

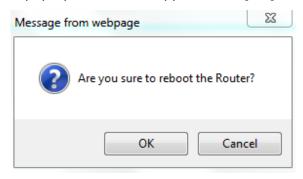



3 Switching your broadband Internet service to HKBN


Login to the router setting page, select [WAN] under [Network].

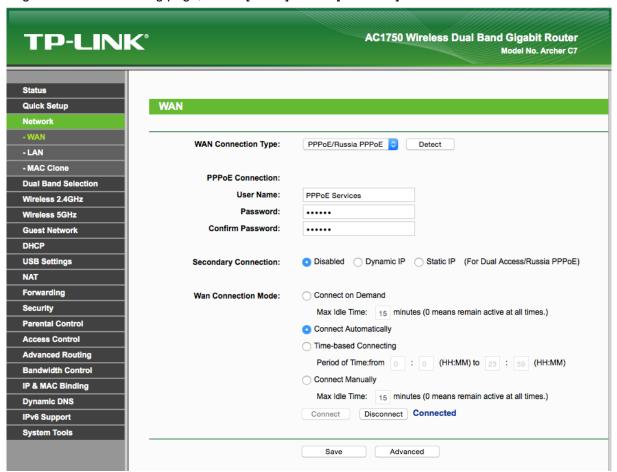



3 Switching your broadband Internet service to HKBN


Choose [Dynamic IP] under [WAN Connection Type] then click [Save].

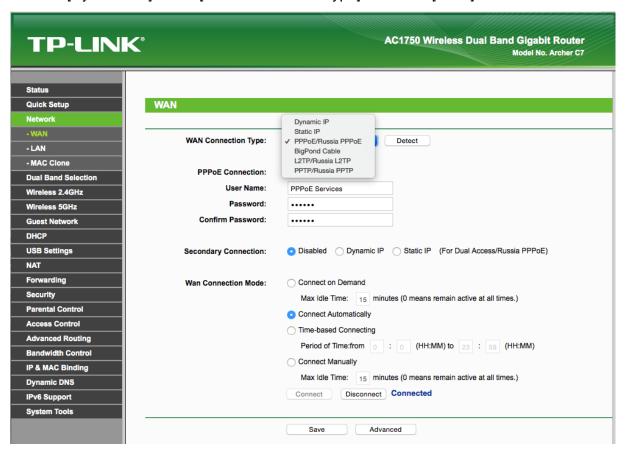



3 Switching your broadband Internet service to HKBN

Once returned to [Status] page, the IPv4 address will display in [IP address] under [WAN] and [Dynamic IP] will display at the right.

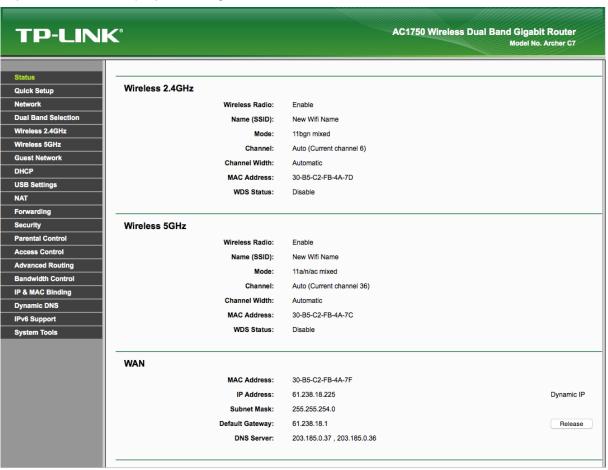



4

Factory default reset of TP-LINK Router

If the device is not accessible from the router setting page, you can reset to the factory default setting by pressing the reset button:

- 1. Confirm your TP-LINK router is switched on.
- 2. Press and hold the [Reset] button with a sharp object for 8 seconds until the System LED change from slow-flash to quick-flash, then release the [Reset] button and wait for the router to reboot to its factory default settings.
- 3. Default Setting:

Username / Password	IP Address
admin / admin	192.168.0.1

The WPS/Reset Button is located at the right side of Ethernet Ports.



WPS/Reset button