



PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

THREE LEVEL DOLL HOUSE COTTAGE

WITH FURNITURE

NBFNSDLHOSA

SAFETY & WARNINGS

WARNING:

CHOKING HAZARD - Small parts.


Warning! Not for children under 3 years. Contains small parts.
This toy is to be assembled by an adult.



- Adult assembly by hand screwdriver required.
- Importer: Kogan Australia, PTY LTD
139 Gladstone Street,
South Melbourne,
VIC 3205 Australia

COMPONENTS

Doll House Assembly Parts:

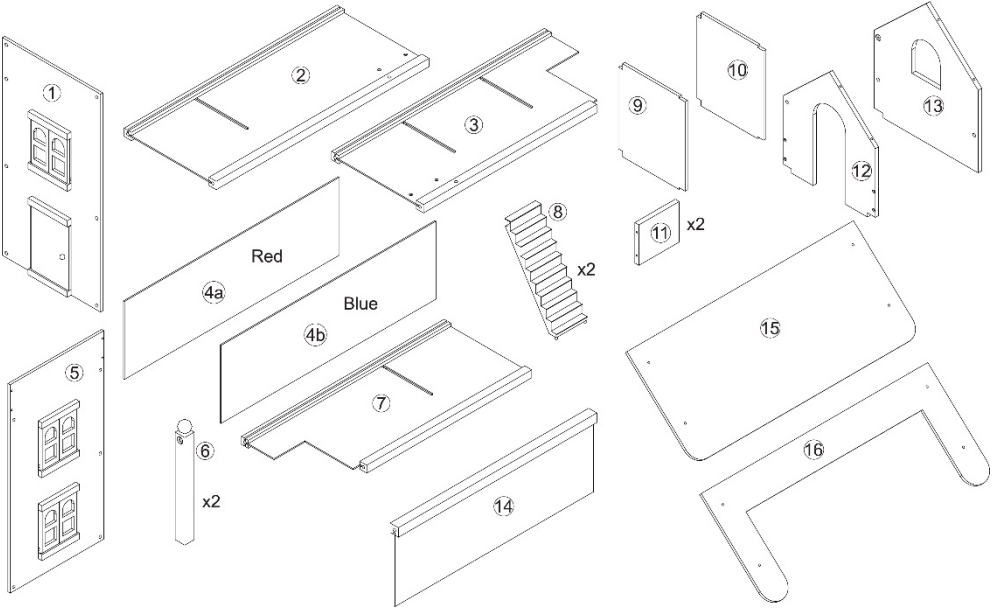

Hardware:



Ax2



Bx2



Cx4



Dx6



Ex2



Fx12



Gx2



Hx14



Ix2



Jx2




Kx2




x1

Furniture:

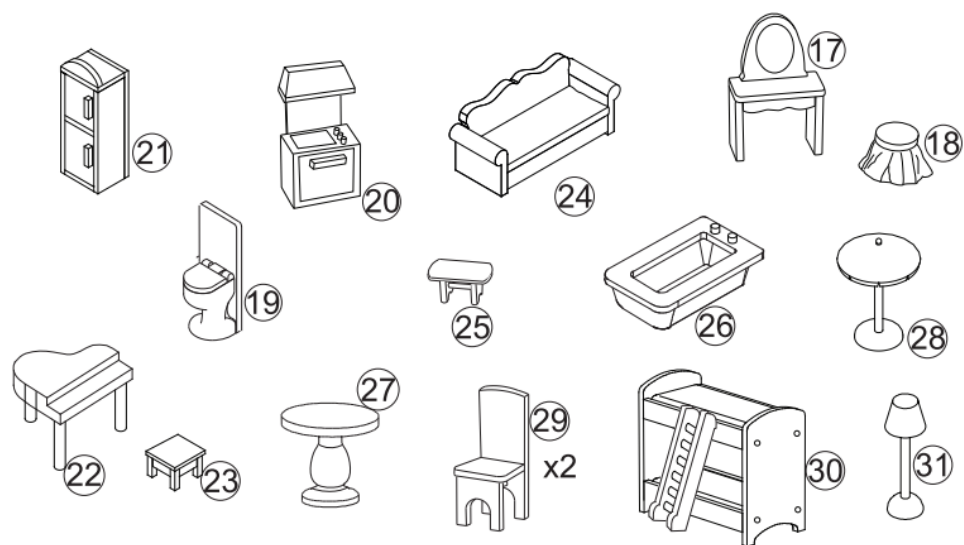


ASSEMBLY


Step 1:

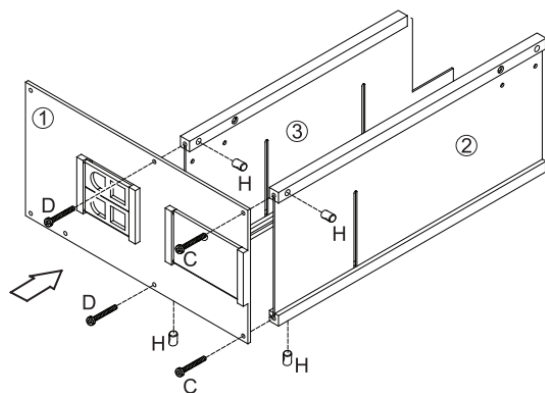


Step 2:

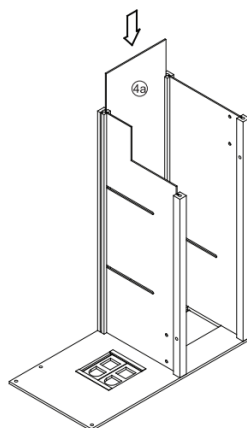


Step 3:

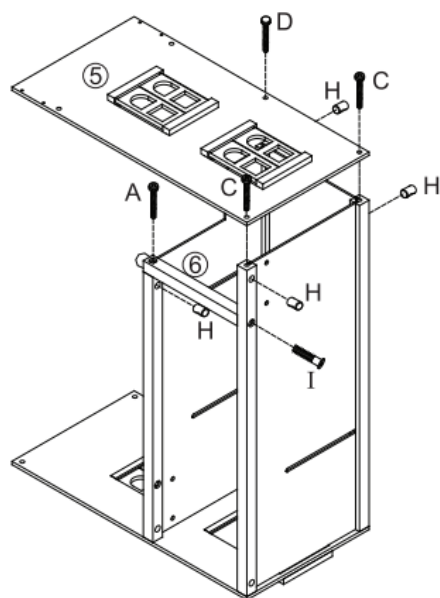


Step 4:

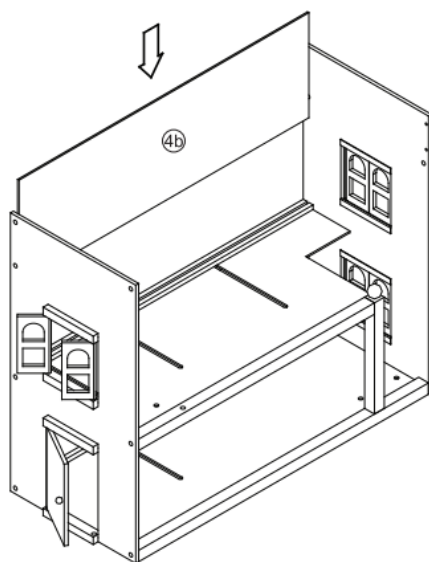


Step 5:

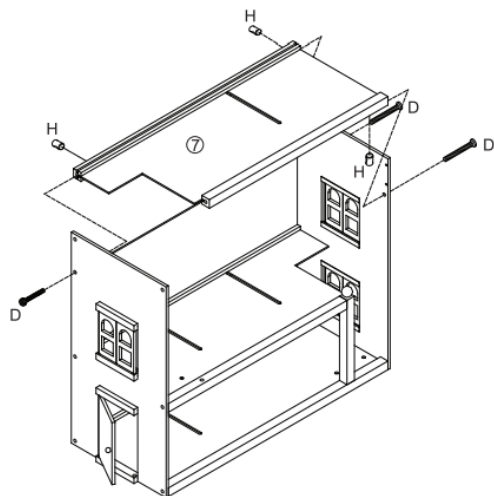


Step 6:

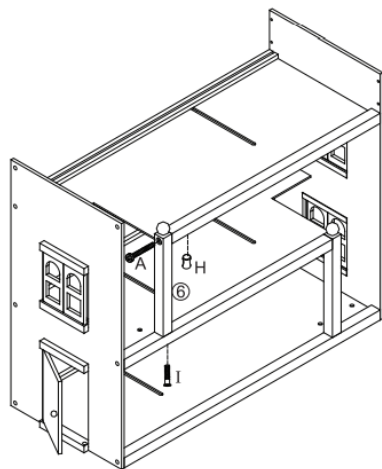


Step 7:

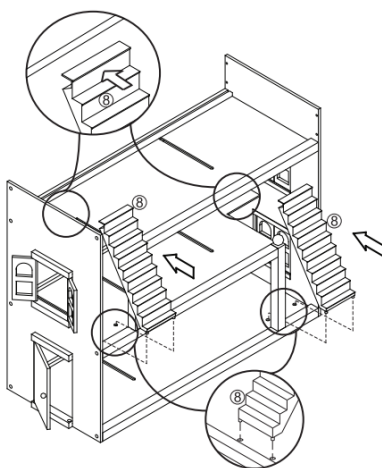


Step 8:

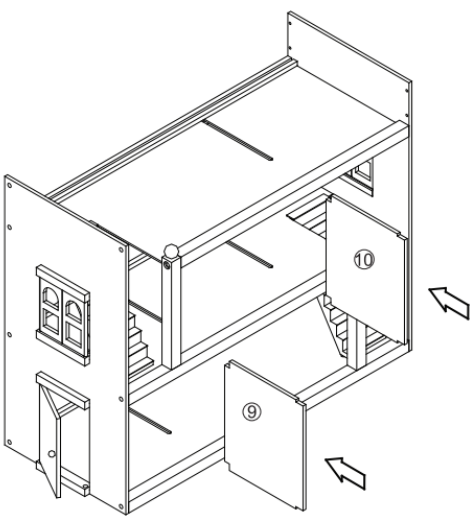


Step 9:

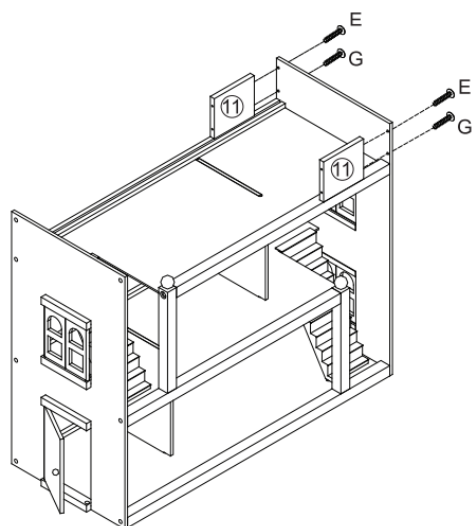


Step 10:

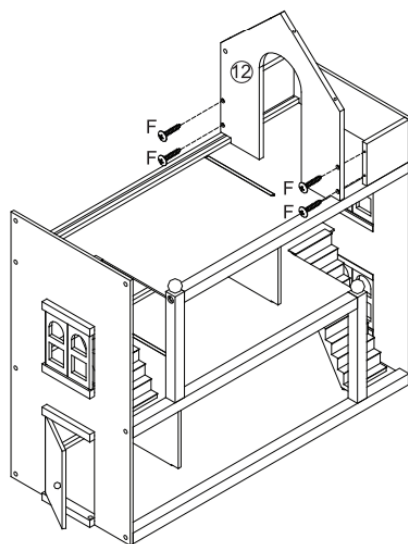


Step 11:

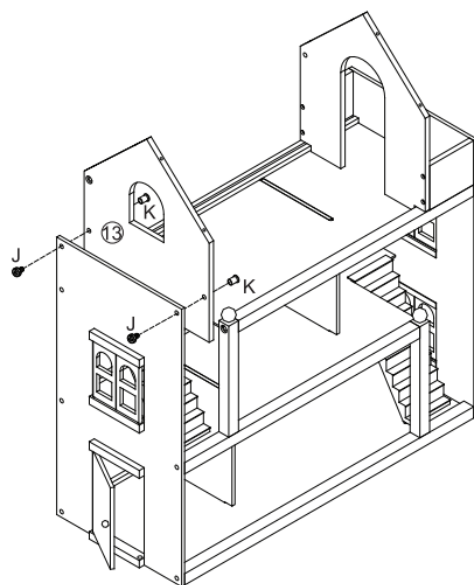


Step 12:

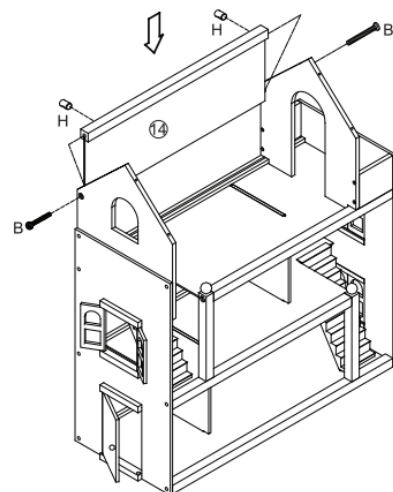

Step 13:

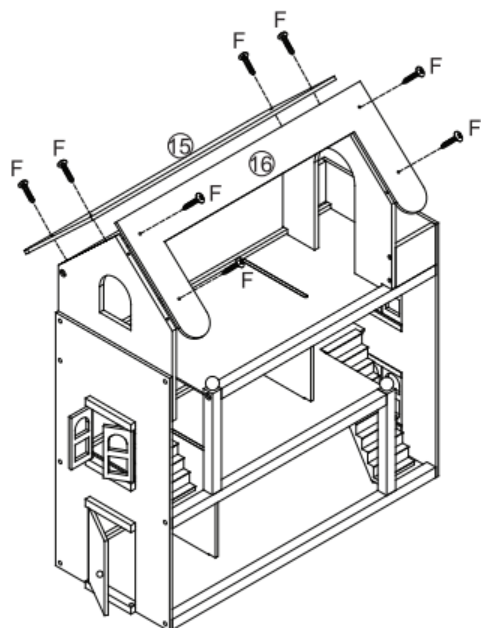


Step 14: Complete

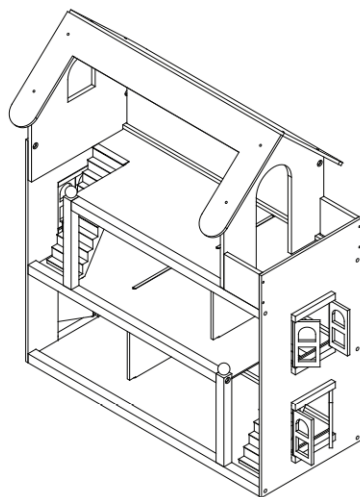

NOTES

 [illegible]



Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com