

Left headphone
 FCC ID: 2A65Q-IWTWS2301
 Right earphone
 FCC ID: 2A65Q-IWTWS2302

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reseat or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.



BATTERY SAFETY: This product is fitted with a Li-Polymer battery. Do not damage, open or dismantle the battery and do not use it in damp and/or corrosive conditions. Only use compatible chargers. Never dispose batteries in a fire and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

BATTERY DISPOSAL: The crossed-out wheeled-bin symbol means that you may not dispose of this product together with general household waste. Instead, take it to a recycling point for electrical and electronic equipment. For more information about local recycling points, contact your local authority, civic amenity site or the business where you purchased this product. The separate collection and recycling of used items of electrical and electronic equipment prevents any harmful substances they contain from harming human health and polluting the environment.

Please keep this information for later reference.

WARNING!
 RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE
 DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

© 2023 PRIMEAUDIO
 240 W. 37TH ST., NEW YORK, NY 10018
 THE "BLUETOOTH" WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC., AND ANY USE OF SUCH PHRASES BY "WORLD" IS UNDER LICENSE.
 GOOGLE AND THE GOOGLE ASSISTANT ARE TRADEMARKS OF GOOGLE INC., REGISTERED IN THE U.S. AND OTHER COUNTRIES.
 APPLE, IPOD, IPAD, IPHONE, AND SIRI ARE TRADEMARKS OF APPLE INC., REGISTERED IN THE U.S. AND OTHER COUNTRIES.
 ALL OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS. ACTUAL PRODUCT MAY DIFFER SLIGHTLY FROM IMAGE SHOWN. MADE IN CHINA.

TONAL


TRUE WIRELESS EARBUDS



INSTRUCTION MANUAL

PrimeAudio®

PRODUCT DIAGRAM

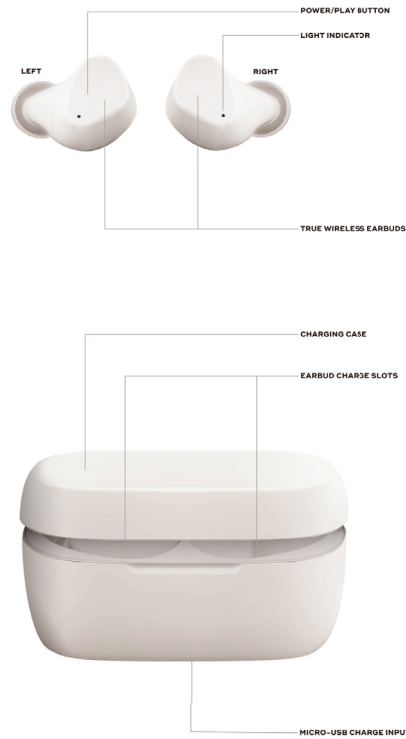

INSTRUCTION MANUAL

Bluetooth® True Wireless Cord-Free Earbuds

- FEATURES**
- Works with all Bluetooth®-enabled devices
 - Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away
 - Integrated rechargeable battery provides hours of playing time wherever you go.
 - Charging case provides charge to earbuds

- CONTENTS**
- 2 Cord-Free Wireless Earbuds
 - 1 Charge Case
 - 1 USB Charging Cable
 - 1 User Manual
- SPECIFICATIONS - Earbuds**
- Internal Battery: Rechargeable Li-Ion
 - Wireless Capability: Up to 33 Ft range
 - Operating Temperature Range: 0-45°C
 - Frequency Response: 20Hz-20KHz
 - Sensitivity: 90dB±3dB
 - Impedance: 32 Ohms

CHARGING THE CHARGE CASE

The charge case is used to charge the earbuds and it must be fully charged before first use. Keep it fully charged regularly for maximum performance. If it has not been used in a while, it is recommended to fully charge the battery.

To charge:

- Insert the micro-USB connector of the included USB cable into the micro-USB charging input port on the charge case.
- Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator light will blink while charging and will turn solid when charging is complete. Unplug from the power source when charging is complete.

NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged.

USB Charging Cable Rating: maximum 5V/1A

CAUTION: The USB charging cable included with this item is intended for use only with this product. Only use the included USB charging cable to charge this product.

CHARGING THE EARBUDS

The earbuds must be fully charged before first use. The charge case must also be fully charged for maximum performance. To charge:

- Insert each earbud into the charge slots, ensuring the charge contacts on the bottom of the earbuds line up and connect with the contacts within the charge slots. The indicator light will turn solid during charging and will turn off when charging is complete. The light indicator on the charge case will turn solid blue when earbuds are charging and will turn off when earbuds are fully charged.
- Remove earbuds from the charge case when charging is complete.

NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged. **NOTE:** When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as explained above to resume normal operation.

WIRELESS EARBUDS OPERATION

Wireless playback Via Bluetooth:

- Make sure both earbuds are charged as explained above.
- Ensure the Bluetooth function on your mobile device is deactivated.
- The earbuds automatically turn on when removed from the charging case. If necessary, they can be turned on manually—press and hold the power button on both earbuds for 4 seconds. After 3 to 5 seconds a tone will signal and they will sync with each other automatically. On one of the earbuds, the indicator light will turn off—the other earbud's indicator light will blink rapidly white.

NOTE: If auto-sync between earbuds is not successful, try manual-sync: make sure the earbuds are off (press and hold the power buttons on both earbuds for 4 seconds until the indicator lights go out). Press and hold both power buttons for 4 seconds again to turn them on and then double-click the power button of one earbud to manually sync the earbuds—this will be the left channel earbud.

NOTE: If you do not connect the earbuds with a Bluetooth device after 3 minutes of being turned on, the earbuds will turn off automatically. Restart from step 2 to try to connect again.

NOTE: When powered on, the wireless earbuds will automatically connect with the last successfully paired audio device.

- Before playback, first adjust the volume of your audio device to medium level as a safe starting point. The volume will be controlled solely from your audio device.
- To play audio, click the power button on either earbud once – click it once again to pause.
- To advance to the next track, double-click the right earbud's button. To go to the previous track, double-click the left earbud's button. To increase the volume, triple-click the right earbud's button. To decrease the volume, triple click the left earbud's button.
- To answer an incoming call, click the power button on either earbud once – click it once again to end the call.
- To reject an incoming call, press and hold the power button on either earbud for one second.
- To disconnect and shut off the earbuds, press and hold the power button on either earbud for around four seconds. You can also deactivate the Bluetooth on your device – be sure to power off the earbuds when not in use.
- To activate Siri, the Google Assistant or other voice assistants, press and hold the power/play button on either earbud for 15 seconds until a tone is heard. (Compatible device only)

NOTE: If there is no signal or audio playback for 3 minutes, the earbuds will automatically shut off.

NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

CAUTION

- This is not a toy. Please keep away from small children.
- Do not overcharge the battery.
- Please keep the unit away from water and heat.
- Do not operate charge case with damaged cable.

TECHNICAL SUPPORT

Please do not attempt to fix the product yourself. If you are experiencing any problems with the product please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance concerning your product, please consult the User's Manual or visit us to contact World Dyncyc support:

World LLC www.worlddyncyc.com
 240 West 37th St., 10th Floor email: support@worlddyncyc.com
 New York, NY 10018, USA Please see instructions for further reference.