



New and Changed Information

Table 1 lists the new and changed features available with each supported Cisco MDS NX-OS release for the Cisco MDS 9700 Series, with the latest release first.

Table 1 *Documented Features for the Cisco MDS 9700 Directors*

Feature	Description	Changed in Release	Where Documented
Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module	The Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module (DS-X9748-3072K9) was added for Cisco MDS 9700 Series Multilayer Directors.	9.2(1)	Chapter 1, “Product Overview”
Support for Cisco MDS 9700 Crossbar Fabric-3 Switching Module	Support for Cisco MDS 9700 Crossbar Fabric-3 Switching Module (DS-X9718-FAB3) was added for Cisco MDS 9718 Director.	8.4(2a)	Chapter 1, “Product Overview”
Support for Cisco MDS 9700 Supervisor-4 Module	Support for Cisco MDS 9700 Supervisor-4 Module (DS-X97-SF4-K9) was added for Cisco MDS 9718 Director.	8.4(2a)	Chapter 1, “Product Overview”
Nondisruptive Migration from a Supervisor-1E Module to a Supervisor-4 Module	Support for nondisruptive migration from a Supervisor-1E Module to Supervisor-4 Module was added for Cisco MDS 9718 Director.	8.4(2a)	“Nondisruptive Migration for Supervisor Modules” section on page 110

Table 1 **Documented Features for the Cisco MDS 9700 Directors (continued)**

Feature	Description	Changed in Release	Where Documented
Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules	Support for nondisruptive migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules was added for Cisco MDS 9718 Director.	8.4(2a)	“Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules” section on page 159
Support for Cisco MDS 9700 Crossbar Fabric-3 Switching Module	Support for Cisco MDS 9700 Crossbar Fabric-3 Switching Module (DS-X9710-FAB3) was added for Cisco MDS 9710 Director. Support for Cisco MDS 9700 Crossbar Fabric-3 Switching Module (DS-X9706-FAB3) was added for Cisco MDS 9706 Director.	8.4(1)	Chapter 1, “Product Overview”
Support for Cisco MDS 9700 Supervisor-4 Module	Support for Cisco MDS 9700 Supervisor-4 Module (DS-X97-SF4-K9) was added for Cisco MDS 9710 and 9706 Directors.	8.4(1)	Chapter 1, “Product Overview”
Nondisruptive Migration from a Supervisor-1 Module to a Supervisor-4 Module	Support for nondisruptive migration from a Supervisor-1 Module to Supervisor-4 Module was added for Cisco MDS 9710 and 9706 Directors.	8.4(1)	“Nondisruptive Migration for Supervisor Modules” section on page 110
Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules	Support for nondisruptive migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules was added for Cisco MDS 9710 and 9706 Directors.	8.4(1)	“Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules” section on page 159
Support for Cisco MDS 9700 HVDC PSU (DS-CHV-3.5K W)	Support for Cisco MDS 9700 HVDC PSU (DS-CHV-3.5KW) was added.	8.1(1b)	Chapter 1, “Product Overview”

Table 1 Documented Features for the Cisco MDS 9700 Directors (continued)

Feature	Description	Changed in Release	Where Documented
Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module	The Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module is supported on Cisco MDS 9700 Series Multilayer Directors.	8.1(1)	Chapter 1, “Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module”
High-Voltage DC PSU	A 3500W High-Voltage DC (HVDC) Power Supply Unit (DS-CHV-3.5KW) is supported on Cisco MDS 9706 and Cisco MDS 9710 Directors.	6.2(19)	Chapter 1, “Power Supplies”
Cisco MDS 24/10 port SAN Extension Module	The Cisco MDS 24/10 port SAN Extension Module is supported on Cisco MDS 9700 Series Multilayer Directors. With 24 line rate 2, 4, 8, 10, and 16-Gbps Fibre Channel ports and eight 1 and 10GE or two 40GE Fibre Channel over IP (FCIP) ports, this module enables large and scalable deployment of SAN extension solutions.	7.3(0)DY(1)	Chapter 1, “Cisco MDS 24/10 port SAN Extension Module”
Cisco MDS 9718 Multilayer Director	The Cisco MDS 9718 chassis has 18 slots for one or two supervisor modules and up to 16 I/O modules. The chassis also holds up to six fabric modules, up to 16 AC or DC 3-kW power supplies, and three fan trays.	7.3(0)D1(1)	Chapter 1, “Cisco MDS 9718 Director” and Chapter 6, “Cisco MDS 9718 Director Specification”
Cisco MDS-24 port 40-Gbps Fibre Channel over Ethernet Module	The Cisco MDS 9700 24-Port 40-Gbps Fibre Channel over Ethernet (FCoE) Module provides Cisco Unified fabric connectivity to the SAN core.	7.3(0)	Chapter 1, “Cisco MDS 24-Port 40-Gbps Fibre Channel over Ethernet Module”
Cisco MDS 9706 Multilayer Director	Added the Cisco MDS 9706 Multilayer Director (DS-C9706). The chassis consists of 6 horizontal slots, where slots 1, 2, 5, and 6 are reserved for switching, services, and slots 3 and 4 for supervisor modules only.	6.2(9)	Chapter 1, “Cisco MDS 9706 Director” and Chapter 6, “Cisco MDS 9706 Director Specification”
Cisco MDS 48-Port 10-Gigabit Fibre Channel over Ethernet Module	Added the Cisco MDS 48-Port 10-Gigabit Fibre Channel over Ethernet module (DS-X9848-480K9).	6.2(7)	Chapter 1, “Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet Module”
Supported SFP+ Transceiver	Added Supported 10-Gbps SFP+ Transceiver.	6.2(7)	Chapter 6, “Technical Specifications”



Product Overview

The Cisco MDS 9700 Series of Multilayer Directors elevate the standard for director-class switches. It allows a deployment of high-performance SANs with low cost of ownership, layering a rich set of intelligent features onto a high-performance, protocol-agnostic switch fabric.

The Cisco MDS 9700 Series of Multilayer Directors addresses the stringent requirements of large data center storage environments — Providing high availability, security, scalability, ease of management, and transparent integration of new technologies.

The Cisco MDS 9700 Series of Multilayer Directors include the following directors:

- Cisco MDS 9718 Director
- Cisco MDS 9710 Director
- Cisco MDS 9706 Director

This chapter has the following topics:

- [Cisco MDS 9718 Director, page 1-6](#)
- [Cisco MDS 9710 Director, page 1-7](#)
- [Cisco MDS 9706 Director, page 1-8](#)
- [Chassis Description, page 1-9](#)
- [Supervisor Modules, page 1-21](#)
- [Crossbar Fabric Switching Modules, page 1-32](#)
- [Fibre Channel Switching Modules, page 1-42](#)
- [SAN Extension Modules, page 1-49](#)
- [Fibre Channel over Ethernet Switching Modules, page 1-52](#)
- [Fan Modules, page 1-56](#)
- [Power Supplies, page 1-59](#)
- [Supported Transceivers, page 1-63](#)

Cisco MDS 9718 Director

The Cisco MDS 9718 Director is a high-port density switch that is designed to meet the requirements of a large-scale enterprise data center storage environment. It provides superior performance, scalability, redundancy, multiprotocol convergence, and enterprise-grade availability in a data center network. The Cisco MDS 9718 Director includes the following components:

- An 18-slot chassis (DS-C9718)
- 1-2 supervisor modules. The supervisor modules include the following types:
 - Cisco MDS 9700 Supervisor-4 Module (DS-X97-SF4-K9)
 - Cisco MDS 9700 Supervisor-1E Module (DS-X97-SF1E-K9)
- 1-6 crossbar switching fabric modules. The crossbar switching fabric modules include the following types:
 - Cisco MDS 9718 Crossbar Fabric-3 Switching Module (DS-X9718-FAB3)
 - Cisco MDS 9718 Crossbar Fabric-1 Switching Module (DS-X9718-FAB1)
- 1-16 I/O modules. The I/O modules include the following types:
 - A 48-Port 64-Gbps Fibre Channel Switching Module (DS-X9748-3072K9)
 - A 48-Port 32-Gbps Fibre Channel Switching Module (DS-X9648-1536K9)
 - A 48-Port 16-Gbps Fibre Channel Switching Module (DS-X9448-768K9)
 - A 48-Port 10-Gbps Fibre Channel over Ethernet Module (DS-X9848-480K9)
 - A 24-Port 40-Gbps Fibre Channel over Ethernet (FCoE) Module (DS-X9824-960K9)
 - A 24/10-port SAN Extension Module (DS-X9334-K9)
- Three fan modules
 - Cisco MDS 9718 Fan Module (DS-C9718-FAN)
- 1-16 power supply units. The power supply units include the following types:
 - Cisco MDS 9700 3000W AC power supply (DS-CAC97-3KW)
 - Cisco MDS 9700 3000W DC power supply (DS-CDC97-3KW)
 - Cisco MDS 9700 3500W High-Voltage power supply (DS-CHV-3.5KW)
- Cisco MDS 9718 Accessory Kit for Cisco (DS-9718-KIT-CCO)

The Cisco MDS 9718 Director supports up to 768 ports in an 18-slot modular chassis, with up to 1152 ports in a single rack. The 768 ports can be configured as 2/4/8/10/16/32/64-Gbps Fiber Channel ports, or 1/10-Gbps Fibre Channel over Ethernet (FCoE) ports, or 384 40-Gbps FCoE ports, or a mix of both Fibre Channel and FCoE ports. The Cisco MDS 9718 Director supports up to 128 (16 x 8) FCIP ports.

Cisco MDS 9718 Director Features

The Cisco MDS 9718 Director supports the following features:

- Up to 6(DS-X9718-FAB3) x 512 x 16 slots = 49.152-Tbps per chassis Fibre Channel switching, full duplex-bandwidth
- Up to 6(DS-X9718-FAB1) x 256 x 16 slots = 24.576-Tbps per chassis Fibre Channel switching, full duplex-bandwidth
- Up to 6(DS-X9718-FAB3) x 440 x 16 slots = 42.240-Tbps per chassis FCoE switching bandwidth

- Up to 6(DS-X9718-FAB1) x 220 x 16 slots = 21.120-Tbps per chassis FCoE switching bandwidth
- Comprehensive security features
- Intelligent network services, including VSAN technology, IVR, and smart zoning
- SAN management tools including Cisco Data Center Network Manager (DCNM) and the command-line interface (CLI)
- Online diagnostics (GOLD, Call Home, and so on)
- Multiprotocol architecture, including Fibre Channel, Fibre Channel over Ethernet (FCoE), Fibre Channel over IP (FCIP), and NVMe over fabrics
- High availability with full redundant components, including fabric cards, supervisors, and power supplies
- Industry-leading scalability

Cisco MDS 9710 Director

The Cisco MDS 9710 Director is a high-performance SAN switch that is designed to meet the requirements of an enterprise data center storage environment. The Cisco MDS 9710 Director includes the following components that are designed specifically for a deployment in the Cisco MDS 9700 series:

- A 10-slot chassis (DS-C9710)
- 1-2 supervisor modules. The supervisor modules include the following types:
 - Cisco MDS 9700 Supervisor-4 Module (DS-X97-SF4-K9)
 - Cisco MDS 9700 Supervisor-1 Module (DS-X97-SF1-K9)
- 1-6 crossbar switching fabric modules. The crossbar switching fabric modules include the following types:
 - Cisco MDS 9710 Crossbar Fabric-3 Switching Module (DS-X9710-FAB3)
 - Cisco MDS 9710 Crossbar Fabric-1 Switching Module (DS-X9710-FAB1)
- 1-8 I/O modules. These I/O modules include the following types:
 - A 48-Port 64-Gbps Fibre Channel Switching Module (DS-X9748-3072K9)
 - A 48-Port 32-Gbps Fibre Channel Switching Module (DS-X9648-1536K9)
 - A 48-Port 16-Gbps Fibre Channel Switching Module (DS-X9448-768K9)
 - A 48-Port 10-Gbps Fibre Channel over Ethernet Module (DS-X9848-480K9)
 - A 24-Port 40-Gbps Fibre Channel over Ethernet (FCoE) Module (DS-X9824-960K9)
 - A 24/10-port SAN Extension Module (DS-X9334-K9)
- Three fan modules
 - Cisco MDS 9710 Fan Module (DS-C9710-FAN)
- 1-8 power supply units. The power supply units include the following types:
 - Cisco MDS 9700 3000W AC power supply (DS-CAC97-3KW)
 - Cisco MDS 9700 3000W DC power supply (DS-CDC97-3KW)
 - Cisco MDS 9700 3500W High-Voltage power supply (DS-CHV-3.5KW)
- Cisco MDS 9710 Accessory Kit for Cisco (DS-9710-KIT-CCO)

The Cisco MDS 9710 Director supports up to 384 ports in a 10-slot modular chassis, with up to 1152 ports in a single rack. The 384 ports can be configured as 2/4/8/10/16/32/64-Gbps Fiber Channel ports, or 1/10-Gbps Fibre Channel over Ethernet (FCoE) ports, or 192 40-Gbps FCoE ports, or a mix of both Fibre Channel and FCoE ports. The Cisco MDS 9710 Director supports up to 64 (8 x 8) FCIP ports.

Cisco MDS 9710 Director Features

The Cisco MDS 9710 Director supports the following features:

- Up to 6(DS-X9710-FAB3) x 512 x 8 slots = 24.576-Tbps per chassis Fibre Channel switching, full-duplex bandwidth
- Up to 6(DS-X9710-FAB1) x 256 x 8 slots = 12.288-Tbps per chassis Fibre Channel switching, full-duplex bandwidth
- Up to 6(DS-X9710-FAB3) x 440 x 8 slots = 21.120-Tbps per chassis FCoE switching bandwidth
- Up to 6(DS-X9710-FAB1) x 220 x 8 slots = 10.560-Tbps per chassis FCoE switching bandwidth
- Comprehensive security features
- Intelligent network services, including VSAN technology, IVR, and smart zoning
- SAN management tools including Cisco Data Center Network Manager (DCNM) and the command-line interface (CLI)
- Online diagnostics (GOLD, Call Home, and so on)
- Multiprotocol architecture, including Fibre Channel, Fibre Channel over Ethernet (FCoE), Fibre Channel over IP (FCIP), and NVMe over fabrics
- High availability with full redundant components, including fabric cards, supervisors, and power supplies
- Industry-leading scalability

Cisco MDS 9706 Director

The Cisco MDS 9706 Director is designed for a deployment in small-to medium-sized storage networks that can support enterprise clouds and business transformation.

The Cisco MDS 9706 Director includes the following components:

- A 6-slot chassis (DS-C9706)
- 1-2 supervisor modules. The supervisor modules include the following types:
 - Cisco MDS 9700 Supervisor-4 Module (DS-X97-SF4-K9)
 - Cisco MDS 9700 Supervisor-1 Module (DS-X97-SF1-K9)
- 1-6 crossbar switching fabric modules. The crossbar switching fabric modules include the following types:
 - Cisco MDS 9706 Crossbar Fabric-3 Switching Module (DS-X9706-FAB3)
 - Cisco MDS 9706 Crossbar Fabric-1 Switching Module (DS-X9706-FAB1)
- 1-4 I/O modules. These I/O modules include the following types:
 - A 48-Port 64-Gbps Fibre Channel Switching Module (DS-X9748-3072K9)
 - A 48-Port 32-Gbps Fibre Channel Switching Module (DS-X9648-1536K9)

- A 48-Port 16-Gbps Fibre Channel Switching Module (DS-X9448-768K9)
- A 48-Port 10-Gbps Fibre Channel over Ethernet Module (DS-X9848-480K9)
- A 24-Port 40-Gbps Fibre Channel over Ethernet (FCoE) Module (DS-X9824-960K9)
- A 24/10-port SAN Extension Module (DS-X9334-K9)
- Three fan modules
 - Cisco MDS 9706 Fan Module (DS-C9706-FAN)
- 1-4 power supply units. The power supply units include the following types:
 - Cisco MDS 9700 3000W AC power supply (DS-CAC97-3KW)
 - Cisco MDS 9700 3000W DC power supply (DS-CDC97-3KW)
 - Cisco MDS 9700 3500W High-Voltage power supply (DS-CHV-3.5KW)
- Cisco MDS 9706 Accessory Kit for Cisco (DS-9706-KIT-CCO)

The Cisco MDS 9706 supports up to 192 ports in a 6-slot modular chassis, with up to 768 ports in a single rack. The 192 ports can be configured as 2/4/8/10/16/32/64-Gbps Fiber Channel ports, or 1/10-Gbps Fibre Channel over Ethernet (FCoE) ports, or 96 40-Gbps FCoE ports, or a mix of both Fibre Channel and FCoE ports. The Cisco MDS 9710 Director supports up to 32 (4 x 8) FCIP ports.

Cisco MDS 9706 Director Features

The Cisco MDS 9706 Director supports the following features:

- Up to 6(DS-X9706-FAB3) x 512 x 4 slots = 12.288-Tbps per chassis Fibre Channel switching, full-duplex bandwidth
- Up to 6(DS-X9706-FAB1) x 256 x 4 slots = 6.144-Tbps per chassis Fibre Channel switching, full-duplex bandwidth
- Up to 6(DS-X9706-FAB3) x 440 x 4 slots = 10.560-Tbps per chassis FCoE switching bandwidth
- Up to 6(DS-X9706-FAB1) x 220 x 4 slots = 5.280-Tbps per chassis FCoE switching bandwidth
- Comprehensive security features
- Intelligent network services, including VSAN technology, IVR, and smart zoning
- SAN management tools including Cisco Data Center Network Manager (DCNM) and the command-line interface (CLI)
- Online diagnostics (GOLD, Call Home, and so on)
- Multiprotocol architecture, including Fibre Channel, Fibre Channel over Ethernet (FCoE), Fibre Channel over IP (FCIP), and NVMe over fabrics
- High availability with full redundant components, including fabric cards, supervisors, and power supplies
- Industry-leading scalability

Chassis Description

This section describes the chassis in the Cisco MDS 9700 Multilayer Director Series:

- [Cisco MDS 9718 Director Chassis, page 1-10](#)

- [Cisco MDS 9710 Director Chassis, page 1-14](#)
- [Cisco MDS 9706 Director Chassis, page 1-18](#)

Cisco MDS 9718 Director Chassis

The Cisco MDS 9718 Director (DS-C9718) is an 18-slot chassis with up to two supervisor modules and up to 16 I/O modules. The chassis holds up to six crossbar fabric switching modules, up to 16 AC or DC 3-kW power supplies, and three fan modules. Airflow is front-to-back (port-side intake) in the Cisco MDS 9718 chassis.


**Note**

The base configuration of the Cisco MDS 9718 (DS-C9718-1K9) Director ships with two supervisor modules (DS-X97-SF4-K9), six crossbar fabric switching modules (DS-X9718-FAB3), and 12 power supplies.

To group the networking cables for each I/O module on this chassis, you can install cable management frames on the chassis. You can also install an optional locking front door, an optional set of air filters on the front door, and cable management frames.

[Figure 1-1](#) shows the standard hardware features seen from the front of the chassis.


Figure 1-1 Cisco MDS 9718 Chassis Front View

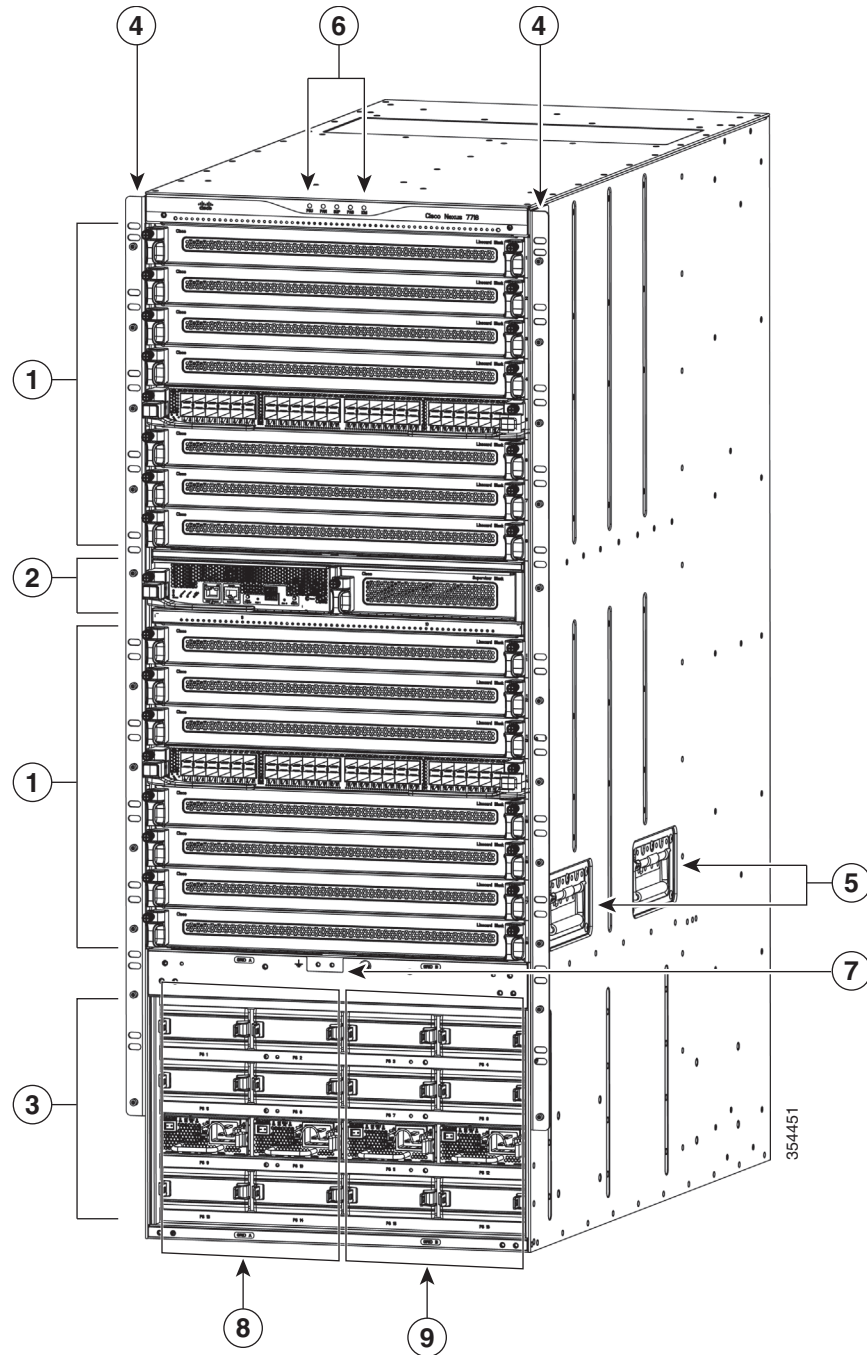

1	I/O modules slots numbered 1-8 and 11-18 from top to bottom.	6	Chassis LEDs
2	Supervisor modules (one or two) in slots numbered 9 and 10 from left to right. Each slot is half the width of the chassis and each slot can hold one supervisor module.	7	Ground point
3	Power supply unit bays numbered 1-16, starting from the top left and increasing left to right and top to bottom. <ul style="list-style-type: none"> • There are four rows of power supply bays at the bottom of the chassis. Each bay can hold one power supply. • The top row has bays 1-4, numbered left to right. • The second row has bays 5-8, numbered left to the right. • The third row has bays 9-12, numbered left to the right. • The fourth row has bays 13-16, numbered left to the right. 	8	Grid A PSU bays (1, 2, 5, 6, 9, 10, 13, 14)
4	Chassis mounting brackets	9	Grid B PSU bays (3, 4, 7, 8, 11, 12, 15, 16)
5	Chassis handles Note Handles are to be used only for positioning an empty chassis.		

Figure 1-2 shows the standard hardware features seen from the rear of the chassis.

Figure 1-2 Cisco MDS 9718 Chassis Rear View

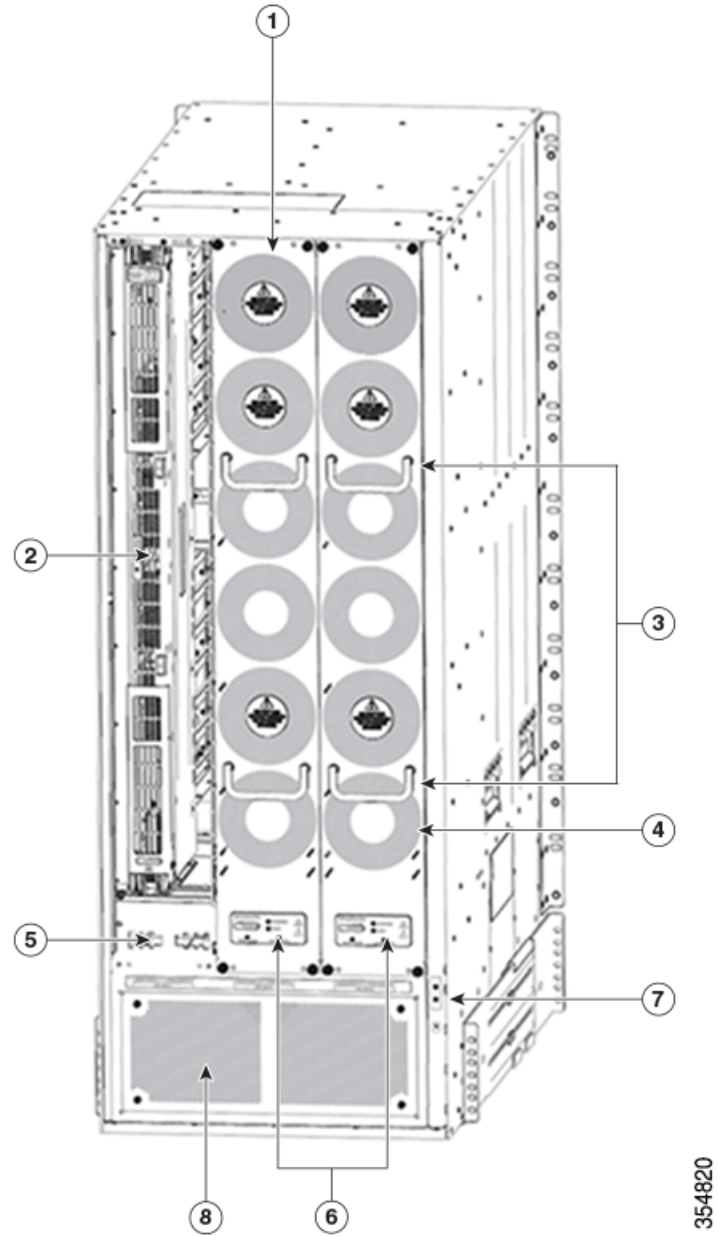

1	Fan modules - (Three fan modules) 1-3 are numbered left to the right. When the fan modules are installed, they cover the crossbar fabric switching modules. Only two fan modules are shown in the figure. One fan module is removed to show the crossbar fabric switching module in the back.	5	Fan power connector
2	Crossbar fabric switching modules - (up to six crossbar fabric switching modules with two modules behind each fan module). The crossbar fabric switching modules 1 and 2 are behind the fan module 1, fabric modules 3 and 4 are behind the fan module 2, and fabric modules 5 and 6 are behind the fan module 3.	6	Fan and crossbar fabric switching modules LEDs
3	Fan module handle	7	Ground point
4	Fan module exhaust	8	PSU exhaust

Cisco MDS 9710 Director Chassis

The Cisco MDS 9710 Director (DS-C9710) is a 10-slot chassis with up to two supervisor modules and up to 8 I/O modules. The chassis holds up to six crossbar fabric switching modules, up to 8 AC or DC 3-kW power supplies, and three fan modules. Airflow is front-to-back (port-side intake) in the Cisco MDS 9710 chassis.




Note

The base configuration of the Cisco MDS 9710 (DS-C9710-1K9) Director ships with two supervisor modules (DS-X97-SF4-K9), three crossbar fabric switching modules (DS-X9718-FAB3), and six power supplies.

Figure 1-3 shows the front view of the Cisco MDS 9710 chassis.


Figure 1-3 Cisco MDS 9710 Chassis Front View

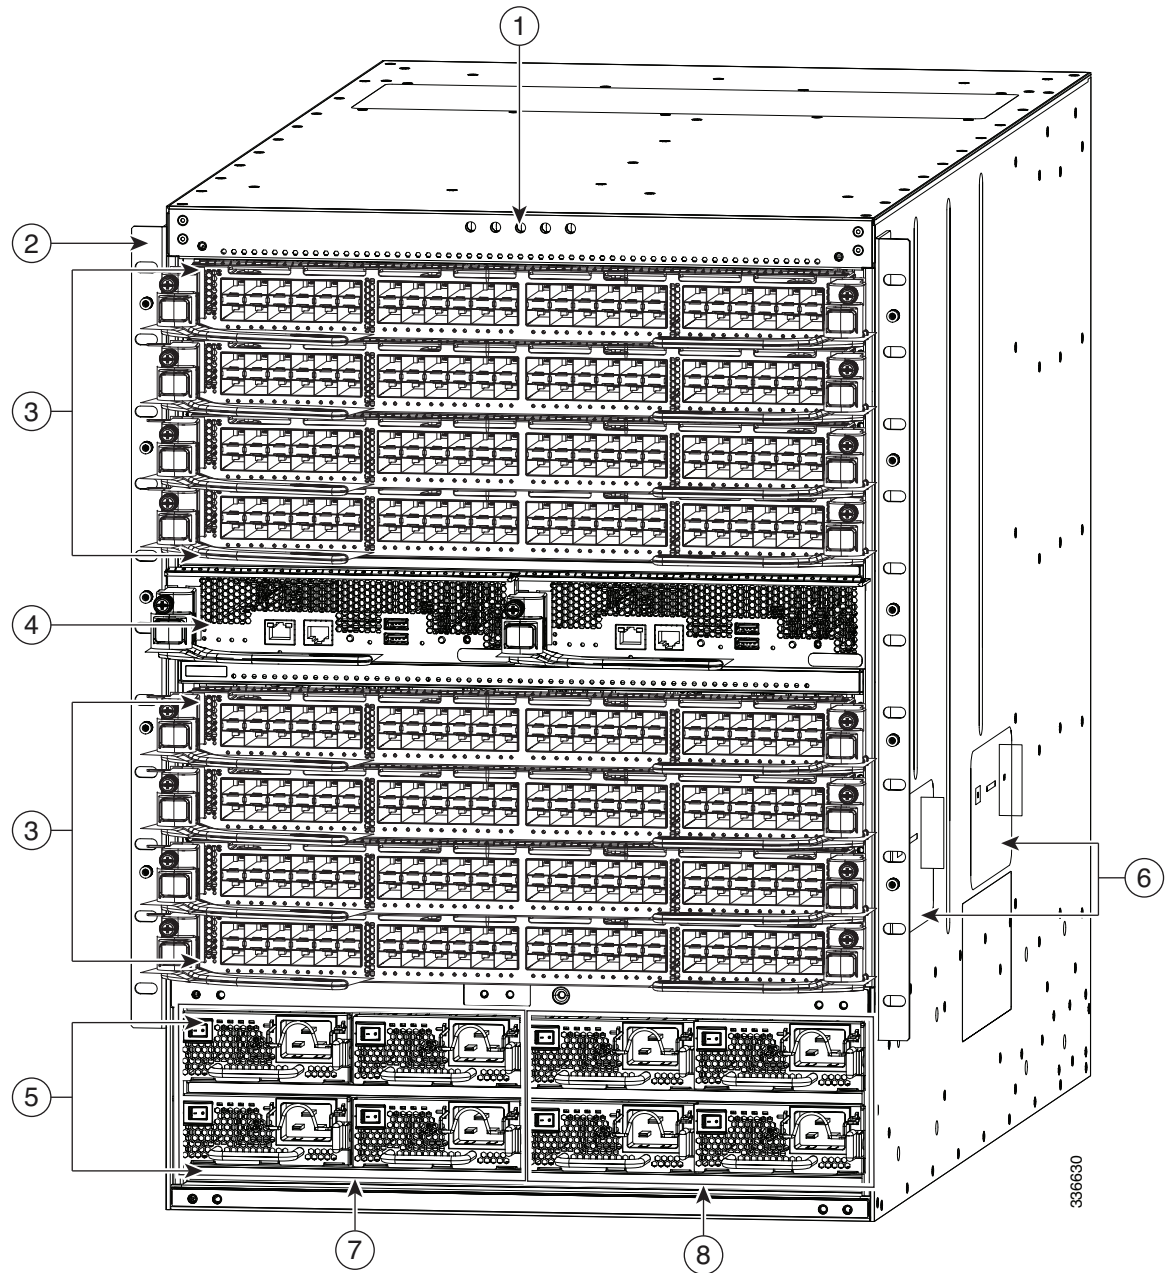

1	Chassis LEDs	5	Power supplies (up to 8 bays). <ul style="list-style-type: none"> • There are two rows of power supply bays at the bottom of the chassis. Each bay can hold one power supply. • The top row has bays 1-4, numbered left to right. • The second row has bays 5-8, numbered left to the right.
2	Chassis mounting brackets	6	Chassis handles Note Handles are to be used only for positioning an empty chassis.
3	I/O modules slots numbered 1-4 and 7-10 from top to bottom.	7	Grid A PSU bays (1, 2, 5, 6)
4	Supervisor modules (one or two) in slots numbered 5 and 6 from left to right. Each slot is half the width of the chassis and each slot can hold one supervisor module	8	Grid B PSU bays (3, 4, 7, 8)

Figure 1-4 shows the rear view of the Cisco MDS 9710 chassis.

Figure 1-4 Cisco MDS 9710 Chassis Rear View

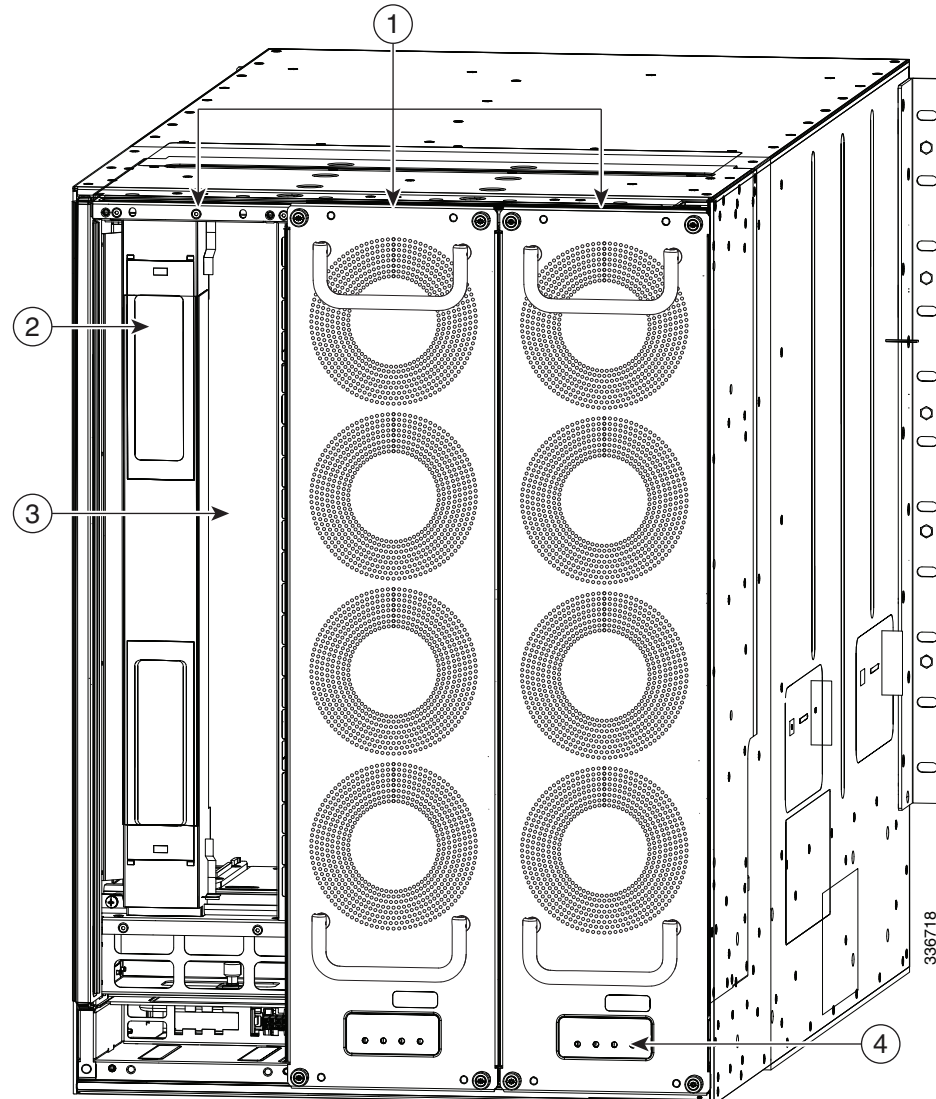

1	Fan modules - (Three fan modules) 1-3 are numbered left to the right. When the fan modules are installed, they cover the crossbar fabric switching modules. Only two fan modules are shown in the figure. One fan module is removed to show the crossbar fabric switching module in back.	3	Midplane
2	Crossbar fabric switching modules - (up to six crossbar fabric switching modules with two modules behind each fan module). The crossbar fabric switching modules 1 and 2 are behind the fan module 1, fabric modules 3 and 4 are behind the fan module 2, and fabric modules 5 and 6 are behind the fan module 3.	4	Crossbar fabric switching modules and fan LEDs

The Cisco MDS 9710 chassis can be mounted on a standard 19-inch EIA equipment rack by using the standard rack-mount hardware, or mounted on a standard two-post Telco rack, with mounting rails.

Cisco MDS 9706 Director Chassis

The Cisco MDS 9706 Director (DS-C9706) is a six-slot chassis with one or two supervisor modules, and up to four I/O modules. The chassis holds up to six crossbar fabric switching modules, up to four AC or DC 3-kW power supplies and three fan modules. Airflow is front-to-back (port-side intake) in the Cisco MDS 9706 chassis.




Note

The base configuration of MDS 9706 (DS-C9706-1K9) ships with two supervisor modules (DS-X97-SF4-K9), three crossbar fabric switching modules (DS-X9718-FAB3), and four power supplies.

Figure 1-5 shows the front view of the Cisco MDS 9706 chassis.


Figure 1-5 Cisco MDS 9706 Chassis Front View

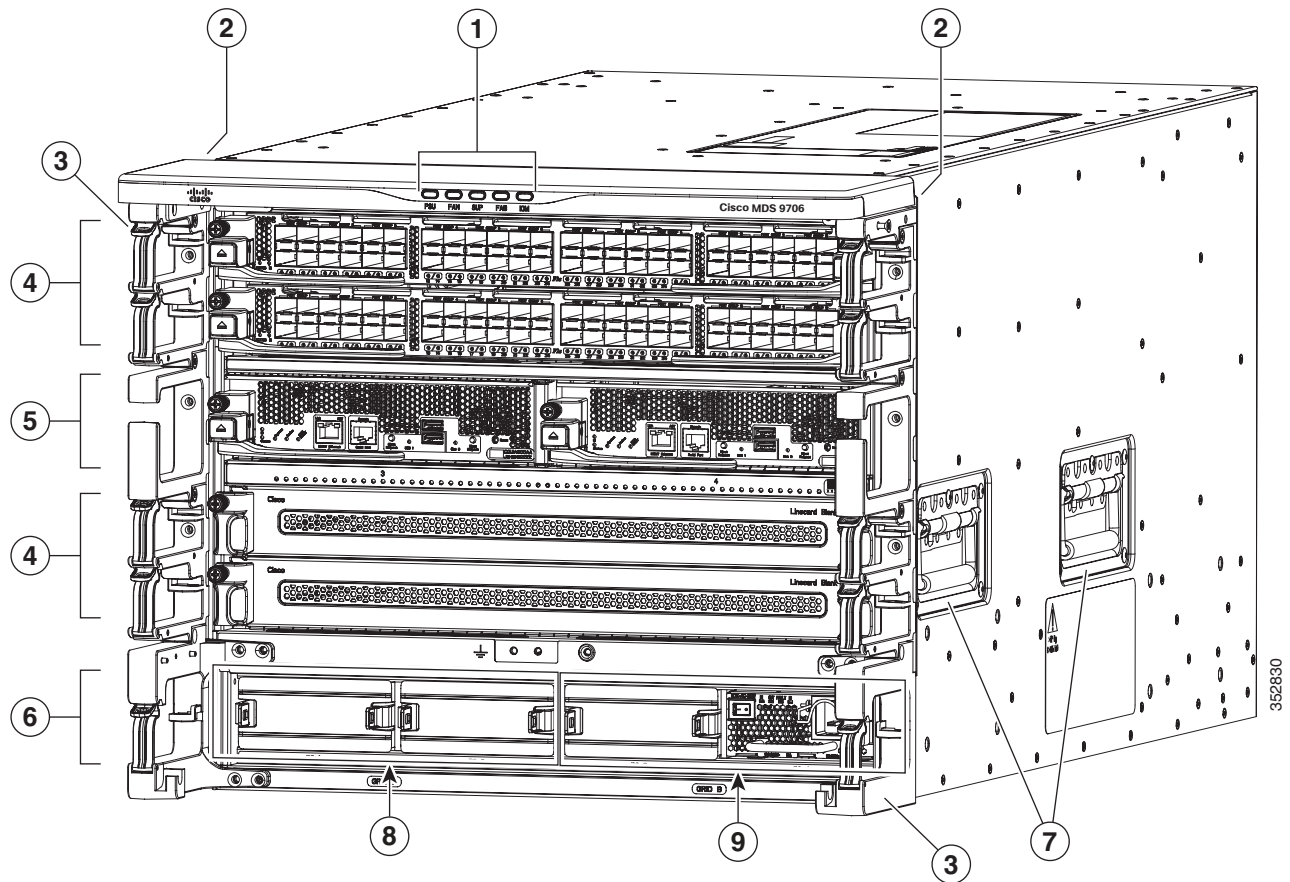

1	Chassis LEDs	6	Power supplies (up to 4 bays). The last row has 4 bays of power supply at the bottom of the chassis. Each bay can hold one power supply.
2	Chassis mounting brackets	7	Chassis handles Note Handles are to be used only for positioning an empty chassis.
3	Cable management frame	8	Grid A PSU bays (1, 2 slots)
4	I/O modules slots numbered 1-2 and 4-5 from top to bottom.	9	Grid B PSU bays (3, 4 slots)
5	Supervisor modules (one or two) in slots numbered 5 and 6 from left to right. Each slot is half the width of the chassis and each slot can hold one supervisor module		

Figure 1-6 shows the rear view of the Cisco MDS 9706 chassis.

Figure 1-6 Cisco MDS 9706 Chassis Rear View

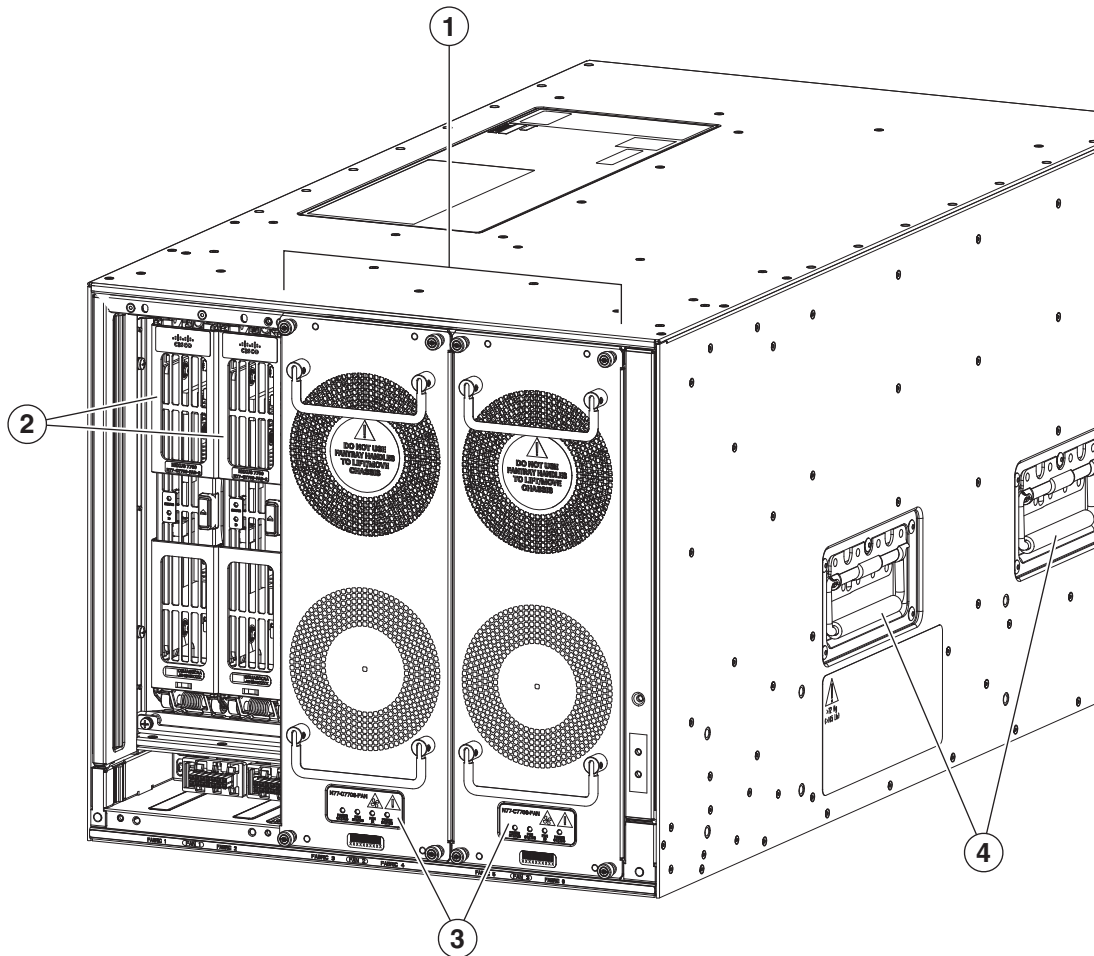

1	<p>Fan modules - (Three fan modules) 1-3 are numbered left to the right. When the fan modules are installed, they cover the crossbar fabric switching modules.</p> <p>Only two fan modules are shown in the figure. One fan module is removed to show the crossbar fabric switching module in back.</p>	4	<p>Handles used for adjusting the chassis placement</p>
2	<p>Crossbar fabric switching modules - (up to six crossbar fabric switching modules with two modules behind each fan module). The crossbar fabric switching modules 1 and 2 are behind the fan module 1, fabric modules 3 and 4 are behind the fan module 2, and fabric modules 5 and 6 are behind the fan module 3.</p>	5	<p>Vertical mounting brackets</p>
3	<p>Crossbar fabric switching modules and fan LEDs</p>		

System LEDs

Table 1-1 describes the system LEDs for the Cisco MDS 9700 Series.

Table 1-1 Cisco MDS 9700 Series System LEDs

LED	Status	Description
Power supply unit	Green	Power supply units are operational.
	Amber	One of the following problems has occurred: <ul style="list-style-type: none"> Any power supply unit LED is red. Any power supply unit is down.
Fan module	Green	Fan modules are operational.
	Amber	At least one I/O module has the red STATUS LED.
Supervisor modules	Green	Supervisor modules are operational.
	Amber	At least one I/O module has the red STATUS LED.
Crossbar fabric switching modules	Green	Crossbar fabric switching modules are operational.
	Amber	At least one I/O module has the red STATUS LED.
I/O modules	Green	Switching modules are operational.
	Amber	At least one I/O module has the red STATUS LED.

Supervisor Modules

This section describes supervisor modules that are supported by different Cisco MDS 9700 Series switches:

- [Cisco MDS 9700 Series Supervisor-4 Module, page 1-21](#)
- [Cisco MDS 9700 Series Supervisor-1E Module, page 1-25](#)
- [Cisco MDS 9700 Series Supervisor-1 Module, page 1-28](#)

Cisco MDS 9700 Series Supervisor-4 Module

The Cisco MDS 9700 Series Supervisor-4 Module (DS-X97-SF4-K9) provides control and management functions for the Cisco MDS Director switches and enables intelligent, resilient, scalable, and high-performance multilayer SAN switching.


The Cisco MDS 9700 Series Supervisor-4 Module (DS-X97-SF4-K9) is supported on the Cisco MDS 9706 and 9710 Multilayer Directors from Cisco MDS NX-OS Release 8.4(1) or later. It is supported on the Cisco MDS 9718 Multilayer Director from Cisco MDS NX-OS Release 8.4(2a) or later.

The Cisco MDS 9700 Series Supervisor-4 Module supports the following features:

- Supports up to 768 2/4/8/10/16/32/64-Gbps Fibre Channel ports, or 1/10-Gbps FCoE ports in a single Cisco MDS 9718 Multilayer Director chassis
- Supports up to 384 2/4/8/10/16/32/64-Gbps Fibre Channel ports, or 1/10-Gbps FCoE ports in a single Cisco MDS 9710 Multilayer Director chassis
- Supports up to 192 2/4/8/10/16/32/64-Gbps Fibre Channel ports, or 1/10-Gbps FCoE ports in a single Cisco MDS 9706 Multilayer Director chassis
- Supports up to 384 40-Gbps FCoE ports in a single Cisco MDS 9718 Multilayer Director chassis
- Supports up to 192 40-Gbps FCoE ports in a single Cisco MDS 9710 Multilayer Director chassis
- Supports up to 96 40-Gbps FCoE ports in a single Cisco MDS 9706 Multilayer Director chassis
- Supports up to 48-Tbps in a single Cisco MDS 9718 Multilayer Director chassis
- Supports up to 24-Tbps in a single Cisco MDS 9710 Multilayer Director chassis
- Supports up to 12-Tbps in a single Cisco MDS 9706 Multilayer Director chassis
- Supports DS-X9718-FAB3, DS-X9710-FAB3 and DS-X9706-FAB3 crossbar fabric switching modules on the Cisco MDS 9718, Cisco MDS 9710 and Cisco MDS 9706 Multilayer Directors respectively
- Multipathing based on Fabric Shortest Path First (FSPF)
- Nondisruptive software upgrades
- Provides high availability. The Cisco MDS 9700 Series Supervisor-4 Module can automatically restart failed processes, making it exceptionally robust. In the rare event that a supervisor module is reset, complete synchronization between the Active and Standby supervisor modules helps ensure a Stateful Failover with no disruption of traffic.
- Supports Secure Boot capabilities
- Supports two USB 3.0 ports
- Network management through the command-line interface (CLI) and through Cisco Data Center Network Manager (DCNM)
- Extensive security features including RADIUS and TACACS+, Fibre Channel Security Protocol (FC-SP), Secure File Transfer Protocol (SFTP), Secure Shell (SSH) Protocol, and Simple Network Management Protocol Version 3 (SNMPv3) implementing Advanced Encryption Standard (AES), VSANs, hardware-enforced zoning, ACLs, and per-VSAN role-based access control
- Integrated hardware-based virtual SAN (VSAN) technology and inter-VSAN routing (IVR)
- Network services such as access control lists (ACLs) and quality of service (QoS)
- Smart zoning
- Power-on self-test (POST) and diagnostics
- Switched Port Analyzer (SPAN) and Remote Switched Port Analyzer (RSPAN)

Figure 1-9 shows the Cisco MDS 9700 Series Supervisor-4 Module.

Figure 1-7 Cisco MDS 9700 Series Supervisor-4 Module Front View

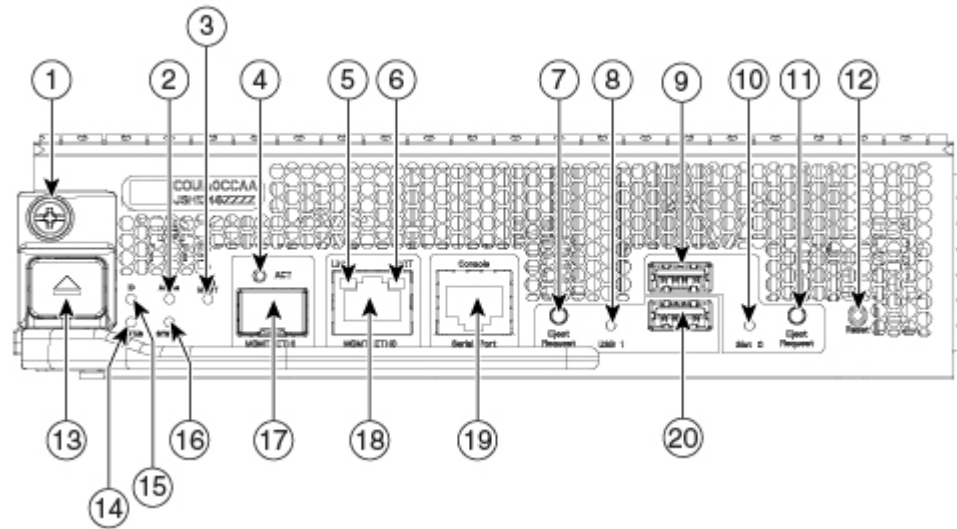

1	Module retaining screw	11	Eject Request: eject request button for a slot0 device
2	Active: supervisor redundancy status LED	12	Reset: module reset button
3	PWR MGMT: system power status LED	13	Module lock release button
4	ACT: management port packet activity LED	14	Status: system diagnostic test status LED
5	Link: management port link status LED	15	ID: locator LED
6	ACT: management port packet activity LED	16	System: system environment status LED
7	Eject Request: eject request button for USB3 device	17	MGMT Ethernet1: MGMT1 Ethernet out of band management port Note: The MGMT1 Ethernet port is not yet supported.
8	USB3: usb3 status LED	18	MGMT Ethernet0: MGMT0 Ethernet out of band management port.
9	USB Slot 0: USB ports	19	Console Serial Port: module RS232 serial console port
10	Slot0: slot0 status LED	20	USB Slot 1: USB port

Table 1-4 describes the LEDs on the Cisco MDS 9700 Series Supervisor-4 Module.

Table 1-2 Cisco MDS 9700 Series Supervisor-4 Module LEDs

LED	Status	Description
ID	Blinking blue	A user has activated this LED to allow a person to find this module in the chassis.
	Off	Location identification is deactivated for this module.
Status	Green	All module diagnostics passed. The module is operational.
	Red	Indicates one of the following conditions: <ul style="list-style-type: none"> The module has detected an error and cannot power on or boot up. The module is not properly inserted. A bootup or runtime diagnostic test has failed.
	Blinking Red	Indicates one of the following conditions: <ul style="list-style-type: none"> An over temperature condition has occurred. (A major temperature threshold has exceeded during an environmental monitoring.) The module is resetting. The ejector lever is open.
	Off	The module is not receiving power.
System	Green	All environmental sensors in the system are within operational bounds.
	Amber	At least one power supply has failed or the power supply fan has failed.
	Red	The temperature of the supervisor module exceeded the major threshold.
Active	Green	The supervisor is operational and in the HA-active state.
	Amber	The supervisor module is in the HA-standby state.
Power Management	Green	There is sufficient power available for all installed modules.
	Amber	There is insufficient power for all installed modules.
MGMT0 Ethernet	Green	The mgmt0 interface is administratively active when the supervisor is in the HA-active state. From Cisco MDS NX-OS Release 8.4(2), when the supervisor is in HA-standby state, the mgmt0 interface is not administratively active.
	Amber	On Cisco MDS NX-OS Release 8.4(1) or earlier, when the supervisor is in the HA-standby state, the mgmt0 interface is not administratively active.
	Off	The mgmt0 interface is uninitialized. No signal is detected.

Table 1-2 Cisco MDS 9700 Series Supervisor-4 Module LEDs

LED	Status	Description
ACT	Green	Frames are being transmitted or received by the interface.
	Off	There is no activity on the interface.
Link	Green	The management port link is operational.
	Amber	The management port link has been disabled by software.
	Blinking amber	The management port has been disabled by a hardware fault.
	Off	No link signal received.
USB3	Green	The flash device is mounted.
	Red	The device is a valid device type, but failed to be mounted. This can be due to an invalid file system format.
	Off	The flash device is not mounted and can be safely removed.
Slot0	Green	The flash device is mounted.
	Red	The device is a valid device type, but failed to be mounted. This can be due to an invalid file system format.
	Off	The flash device is not mounted and can be safely removed.

Cisco MDS 9700 Series Supervisor-1E Module

The Cisco MDS 9700 Series Supervisor-1E Module (DS-X97-SF1E-K9) delivers advanced switching technology and resources to support the 18 slot chassis (DS-C9718).

The DS-X97-SF1E-K9 module is designed for the Cisco MDS 9718 Director.

The Cisco MDS 9700 Series Supervisor-1E Module supports the following features:

- Supports up to 768 2/4/8/10/16/32-Gbps Fibre Channel ports, or 1/10-Gbps FCoE ports in a single Cisco MDS 9718 Multilayer Director chassis
- Supports up to 384 40-Gbps FCoE ports in a single Cisco MDS 9718 Multilayer Director chassis
- Supports up to 48-Tbps of Fibre Channel system bandwidth
- Supports DS-X9718-FAB1 crossbar fabric switching module on the Cisco MDS 9718 Multilayer Director
- Multipathing based on Fabric Shortest Path First (FSPF)
- Nondisruptive software upgrades
- Provides high availability. The Cisco MDS 9700 Series Supervisor-1E Module can automatically restart failed processes, making it exceptionally robust. In the rare event that a supervisor module is reset, complete synchronization between the Active and Standby supervisor modules helps ensure a Stateful Failover with no disruption of traffic.

- Network management through the command-line interface (CLI) and through Cisco Data Center Network Manager (DCNM)
- Extensive security features including RADIUS and TACACS+, Fibre Channel Security Protocol (FC-SP), Secure File Transfer Protocol (SFTP), Secure Shell (SSH) Protocol, and Simple Network Management Protocol Version 3 (SNMPv3) implementing Advanced Encryption Standard (AES), VSANs, hardware-enforced zoning, ACLs, and per-VSAN role-based access control (RBAC)
- Support for virtual SAN (VSAN) technology and inter-VSAN routing (IVR)
- Network services such as access control lists (ACLs) and quality of service (QoS)
- Smart zoning
- Power-on self-test (POST) and diagnostics
- Switched Port Analyzer (SPAN) and Remote Switched Port Analyzer (RSPAN)

Figure 1-8 shows the Cisco MDS 9700 Series Supervisor-1E Module.

Figure 1-8 Cisco MDS 9700 Series Supervisor-1E Module

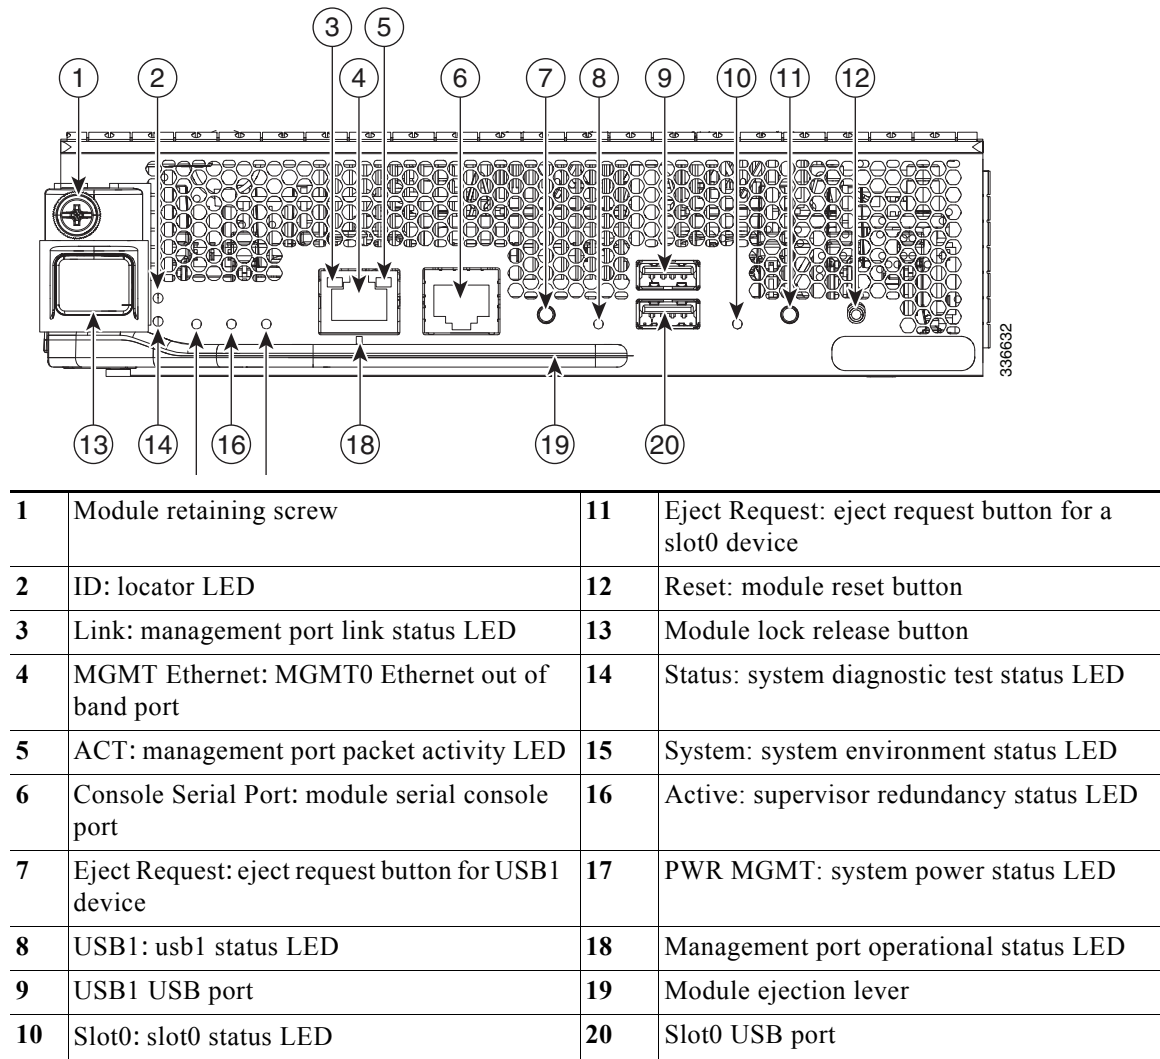


Table 1-3 describes the LEDs on the Cisco MDS 9700 Series Supervisor-1E Module.

Table 1-3 Cisco MDS 9700 Series Supervisor-1E Module LEDs

LED	Status	Description
ID	Blinking blue	A user has activated this LED to allow a person to find this module in the chassis.
	Off	Location identification is deactivated for this module.
Status	Green	All module diagnostics passed. The module is operational.
	Red	Indicates one of the following conditions: <ul style="list-style-type: none"> The module has detected an error and cannot power on or boot up. The module is not properly inserted. A bootup or runtime diagnostic test has failed.
	Blinking Red	Indicates one of the following conditions: <ul style="list-style-type: none"> An over temperature condition has occurred. (A major temperature threshold has exceeded during an environmental monitoring.) The module is resetting. The ejector lever is open.
	Off	The module is not receiving power.
System	Green	All environmental sensors in the system are within operational bounds.
	Amber	At least one power supply has failed or the power supply fan has failed.
	Red	The temperature of the supervisor module exceeded the major threshold.
	Off	The slot has detected a slot ID parity error
Active	Green	The supervisor is operational and in the HA-active state.
	Amber	The supervisor module is in HA-standby state.
Power Management	Green	There is sufficient power available for all installed modules.
	Amber	There is insufficient power for all installed modules.

Table 1-3 *Cisco MDS 9700 Series Supervisor-1E Module LEDs*

LED	Status	Description
MGMT0 Ethernet	Green	The mgmt0 interface is administratively active when the supervisor is in the HA-active state. From Cisco MDS NX-OS Release 8.4(2), when the supervisor is in HA-standby state, the mgmt0 interface is not administratively active.
	Amber	On Cisco MDS NX-OS Release 8.4(1) or earlier, when the supervisor is in the HA-standby state, the mgmt0 interface is not administratively active.
	Blinking amber	The management port link is bad and has been disabled due to a hardware failure.
	Off	The mgmt0 interface is uninitialized. No signal is detected.
ACT	Blinking Green	Frames are being transmitted or received by the interface.
	Off	There is no activity on the interface.
Link	Green	The management port link is operational.
	Off	No link signal received.
LOG FLASH	Green	The log flash CompactFlash or USB disk is being accessed. Do not remove the media until the LED is off.
	Off	The expansion flash CompactFlash or USB disk is not being accessed. You can remove the media while this LED is off.
Slot0	Green	The log flash CompactFlash or USB disk is being accessed. Do not remove the media until the LED is off.
	Off	The expansion flash CompactFlash or USB disk is not being accessed. You can remove the media while this LED is off.

Cisco MDS 9700 Series Supervisor-1 Module

The Cisco MDS 9700 Series Supervisor-1 Module (DS-X97-SF1-K9) provides control and management functions for the Director switches and enables high-performance switching.


The Cisco MDS 9700 Series Supervisor-1 Module (DS-X97-SF1-K9) is designed specifically for the Cisco MDS 9706 and 9710 chassis.

The Cisco MDS 9700 Series Supervisor-1 Module supports the following features:

- Supports up to 384 2/4/8/10/16/32-Gbps Fibre Channel ports, or 1/10-Gbps FCoE ports in a single Cisco MDS 9710 Multilayer Director chassis
- Supports up to 192 2/4/8/10/16/32-Gbps Fibre Channel ports, or 1/10-Gbps FCoE ports in a single Cisco MDS 9706 Multilayer Director chassis
- Supports up to 192 40-Gbps FCoE ports in a single Cisco MDS 9710 Multilayer Director chassis

- Supports up to 96 40-Gbps FCoE ports in a single Cisco MDS 9706 Multilayer Director chassis
- Up to 24 terabits per second (Tbps) in a single Cisco MDS 9710 Multilayer Director chassis
- Up to 12 terabits per second (Tbps) in a single Cisco MDS 9706 Multilayer Director chassis
- Supports DS-X9710-FAB1 and DS-X9706-FAB1 crossbar fabric switching module on the Cisco MDS 9710 and 9706 Multilayer Directors respectively
- Multipathing based on Fabric Shortest Path First (FSPF)
- Nondisruptive software upgrades
- Provides high availability. The Cisco MDS 9700 Series Supervisor-1 Module has the ability to automatically restart failed processes, making it exceptionally robust. In the rare event that a supervisor module is reset, complete synchronization between the Active and Standby supervisor modules helps ensure a Stateful Failover with no disruption of traffic.
- Stateful process restart and failover
- Fully redundant operation
- Network management through the command-line interface (CLI) and through Cisco Data Center Network Manager (DCNM)
- Extensive security features including RADIUS and TACACS+, Fibre Channel Security Protocol (FC-SP), Secure File Transfer Protocol (SFTP), Secure Shell (SSH) Protocol, and Simple Network Management Protocol Version 3 (SNMPv3) implementing Advanced Encryption Standard (AES), VSANs, hardware-enforced zoning, ACLs, and per-VSAN role-based access control
- Support for virtual SAN (VSAN) technology and inter-VSAN routing (IVR)
- Network services such as access control lists (ACLs) and quality of service (QoS)
- Smart zoning
- Power-on self-test (POST) and diagnostics
- Switched Port Analyzer (SPAN) and Remote Switched Port Analyzer (RSPAN)

Figure 1-9 shows the Cisco MDS 9700 Series Supervisor-1 Module.

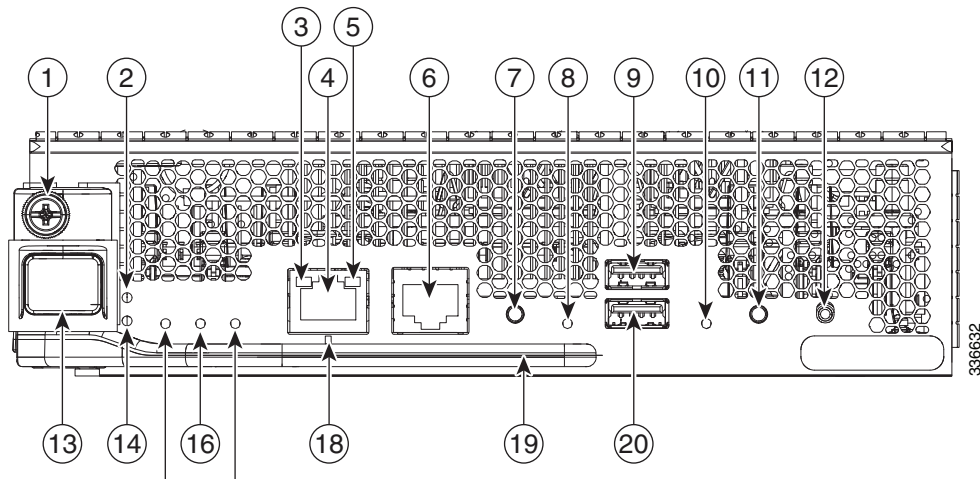Figure 1-9 Cisco MDS 9700 Series Supervisor-1 Module Front View

1	Module retaining screw	11	Eject Request: eject request button for a slot0 device
2	ID: locator LED	12	Reset: module reset button
3	Link: management port link status LED	13	Module lock release button
4	MGMT Ethernet: MGMT0 Ethernet out of band port	14	Status: system diagnostic test status LED
5	ACT: management port packet activity LED	15	System: system environment status LED
6	Console Serial Port: module serial console port	16	Active: supervisor redundancy status LED
7	Eject Request: eject request button for USB1 device	17	PWR MGMT: system power status LED
8	USB1: usb1 status LED	18	Management port operational status LED
9	USB1 USB port	19	Module ejection lever
10	Slot0: slot0 status LED	20	Slot0 USB port

Table 1-4 describes the LEDs on the Cisco MDS 9700 Series Supervisor-1 Module.

Table 1-4 Cisco MDS 9700 Series Supervisor-1 Module LEDs

LED	Status	Description
ID	Blinking blue	A user has activated this LED to allow a person to find this module in the chassis.
	Off	Location identification is deactivated for this module.

Table 1-4 Cisco MDS 9700 Series Supervisor-1 Module LEDs

LED	Status	Description
Status	Green	All module diagnostics passed. The module is operational.
	Red	Indicates one of the following conditions: <ul style="list-style-type: none"> The module has detected an error and cannot power on or boot up. The module is not properly inserted. A bootup or runtime diagnostic test has failed.
	Blinking Red	Indicates one of the following conditions: <ul style="list-style-type: none"> An over temperature condition has occurred. (A major temperature threshold has exceeded during an environmental monitoring.) The module is resetting. The ejector lever is open.
	Off	The module is not receiving power.
System	Green	All environmental sensors in the system are within operational bounds.
	Amber	At least one power supply has failed or the power supply fan has failed.
	Red	The temperature of the supervisor module exceeded the major threshold.
Active	Green	The supervisor is operational and in a HA active state.
	Amber	The supervisor module is in a HA standby state.
Power Management	Green	There is sufficient power available for all installed modules.
	Amber	There is insufficient power for all installed modules.
MGMT0 Ethernet	Green	The mgmt0 interface is administratively active when the supervisor is in the HA-active state. From Cisco MDS NX-OS Release 8.4(2), when the supervisor is in HA-standby state, the mgmt0 interface is not administratively active.
	Amber	On Cisco MDS NX-OS Release 8.4(1) or earlier, when the supervisor is in the HA-standby state, the mgmt0 interface is not administratively active.
	Off	The mgmt0 interface is uninitialized. No signal is detected.
ACT	Green	Frames are being transmitted or received by the interface.
	Off	There is no activity on the interface.

Table 1-4 *Cisco MDS 9700 Series Supervisor-1 Module LEDs*

LED	Status	Description
Link	Green	The management port link is operational.
	Amber	The management port link has been disabled by software.
	Blinking amber	The management port has been disabled by a hardware fault.
	Off	No link signal received.
USB1	Green	The flash device is mounted.
	Red	The device is a valid device type, but failed to be mounted. This can be due to an invalid file system format.
	Off	The flash device is not mounted and can be safely removed.
Slot0	Green	The flash device is mounted.
	Red	The device is a valid device type, but failed to be mounted. This can be due to an invalid file system format.
	Off	The flash device is not mounted and can be safely removed.

Crossbar Fabric Switching Modules

- [Cisco MDS 9718 Director Crossbar Fabric Switching Modules, page 1-32](#)
- [Cisco MDS 9710 Director Crossbar Fabric Switching Modules, page 1-35](#)
- [Cisco MDS 9706 Director Crossbar Fabric Switching Modules, page 1-38](#)

Cisco MDS 9718 Director Crossbar Fabric Switching Modules

The Cisco MDS 9718 Director supports up to six crossbar fabric (xbar) switching modules. The crossbar fabric switching modules, DS-X9718-FAB1 and DS-X9718-FAB3 are supported. The crossbar fabric switching modules are installed vertically at the back of the chassis behind the fan modules.

Crossbar fabric switching modules slots 1 and 2 are behind the fan module slot 1, the crossbar fabric switching modules slots 3 and 4 are behind the fan module slot 2, and crossbar fabric switching modules slots 5 and 6 are behind the fan module slot 3.

Cisco MDS 48-Port 32-Gbps Fiber Channel Switching Module needs a minimum of 6 (DS-X9718-FAB1) Crossbar Fabric-1 Switching Modules to deliver full bandwidth to all the modules in the switch. Each DS-X9718-FAB1 Crossbar Fabric-1 Switching Module provides 256-Gbps of fiber channel bandwidth per slot.

Cisco MDS 48-Port 32-Gbps Fiber Channel Switching Module needs a minimum of 3 (DS-X9718-FAB3) Crossbar Fabric-3 Switching Modules to deliver full bandwidth to all the modules in the switch. Each DS-X9718-FAB3 Crossbar Fabric-3 Switching Module provides 512-Gbps of fiber channel bandwidth per slot. A fourth crossbar fabric switching module is required for N+1 protection.


The DS-X9718-FAB1 Crossbar Fabric-1 Switching Modules are supported from Cisco MDS NX-OS Release 7.3(1) or later. DS-X9718-FAB1 modules are supported only with Supervisor-1E Modules (DS-X97-SF1E-K9).

The DS-X9718-FAB3 Crossbar Fabric-3 Switching Modules are supported from Cisco MDS NX-OS Release 8.4(2a) or later. DS-X9718-FAB3 modules are supported only with Supervisor-4 Module (DS-X97-SF4-K9).

**Note**

You cannot have a mix of different supervisor modules or a mix of different crossbar fabric switching modules in a chassis, except during migration of a supervisor module or a crossbar fabric switching module.

Figure 1-10 Cisco MDS 9718 Crossbar Fabric Switching Module

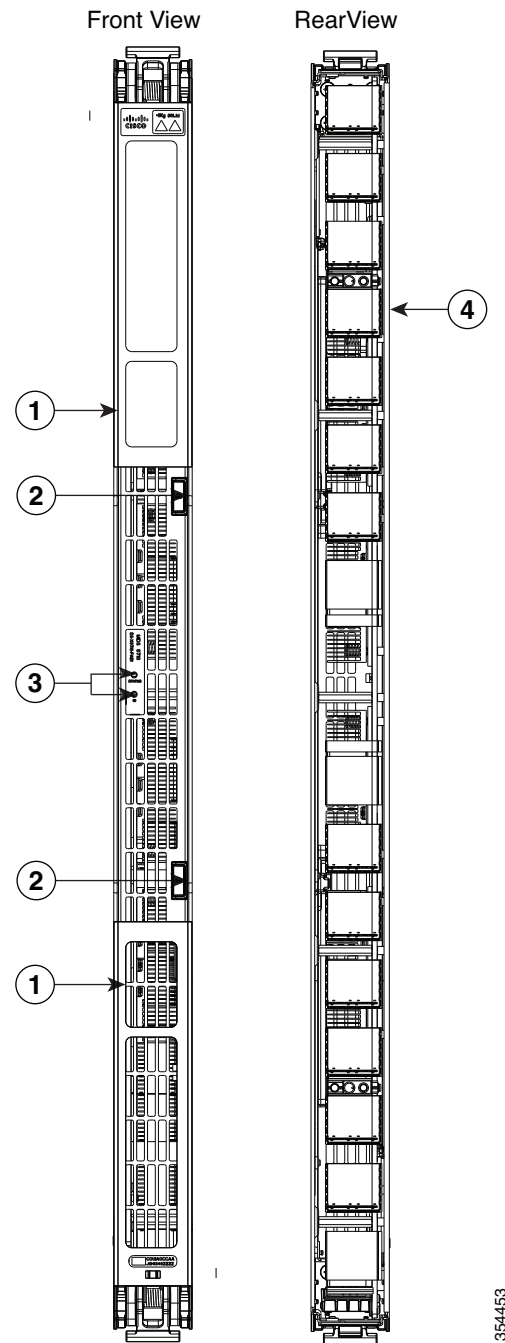

1	Locking lever	3	Crossbar fabric switching module LEDs
2	Unlocking button	4	Connector pins

The LEDs on the crossbar fabric switching modules indicate the status of the modules. [Table 1-5](#) describes the LEDs.

Table 1-5 Cisco MDS 9718 Director Crossbar Modules LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Red	Indicates one of the following: <ul style="list-style-type: none"> The diagnostic test has failed. The module is not operational because a fault has occurred during the initialization sequence. The inlet air temperature of the system has exceeded the safe operating temperature limits of the card (a major environmental warning). The card has been shut down to prevent permanent damage.
	Blinking Red	Indicates one of the following: <ul style="list-style-type: none"> The crossbar fabric switching module has just been inserted and is booting up. An over temperature condition has occurred and the module has powered down. The power was turned off with a CLI command. The module is resetting and both ejector levers are out.
	Off	The module is not receiving power.
Locator ID	Blinking Blue	The operator has activated this LED to identify this module in the chassis.
	Off	Operator has not flagged this card for identification.

Since the crossbar fabric switching modules are located behind the fan modules in the chassis, the LEDs on the crossbar fabric switching modules are not easily visible from the back of the chassis. So, crossbar fabric switching module status LEDs are provided on the fan modules as well. Since each fan module covers two crossbar fabric switching modules, the status LEDs for the two crossbar fabric switching modules are present on each fan module. If the fan module is removed the status and locator LEDs on crossbar fabric switching modules will be visible.

When a crossbar fabric switching module needs to be located, the locator LED of the corresponding fan module needs to be activated, followed by the locator LED of the crossbar fabric switching module, using the CLIs **locator-led fan** <fan module number> and **locator-led xbar** <xbar slot number>. For example, to locate a crossbar fabric switching module in slot 4, the locator LED of the fan module 2 needs to be activated followed by the locator LED of the crossbar fabric switching module 4.

Cisco MDS 9710 Director Crossbar Fabric Switching Modules

The Cisco MDS 9710 Director supports up to six crossbar (xbar) fabric switching modules. The crossbar fabric switching modules DS-X9710-FAB1 and DS-X9710-FAB3 are supported. The crossbar fabric switching modules are installed vertically at the back of the chassis behind the fan modules.

Crossbar fabric switching modules slots 1 and 2 are behind the fan module slot 1, the crossbar fabric switching modules slots 3 and 4 are behind the fan module slot 2, and crossbar fabric switching modules slots 5 and 6 are behind the fan module slot 3.

Cisco MDS 48-Port 32-Gbps Fiber Channel Switching Module needs a minimum of 6 (DS-X9710-FAB1) Crossbar Fabric-1 Switching Modules to deliver full bandwidth to all the modules in the switch. Each DS-X9710-FAB1 Crossbar Fabric-1 Switching Module provides 256-Gbps of fiber channel bandwidth per slot.

Cisco MDS 48-Port 32-Gbps Fiber Channel Switching Module needs a minimum of 3 (DS-X9710-FAB3) Crossbar Fabric-3 Switching Modules to deliver full bandwidth to all the modules in the switch. Each DS-X9710-FAB3 Crossbar Fabric-3 Switching Module provides 512-Gbps of fiber channel bandwidth per slot. A fourth crossbar fabric switching module is required for N+1 protection.


The DS-X9710-FAB1 crossbar fabric switching module is supported from Cisco MDS NX-OS Release 6.2(1) or later. DS-X9710-FAB1 modules are supported only with Supervisor-1 Modules (DS-X97-SF1-K9).

The DS-X9710-FAB3 crossbar fabric switching module is supported from Cisco MDS NX-OS Release 8.4(1) or later. DS-X9710-FAB3 modules are supported only with Supervisor-4 Modules (DS-X97-SF4-K9).

**Note**

You cannot have a mix of different supervisor modules or a mix of different crossbar fabric switching modules in a chassis, except during migration of a supervisor module or a crossbar fabric switching module.

Figure 1-11 Cisco MDS 9710 Crossbar Fabric Switching Module

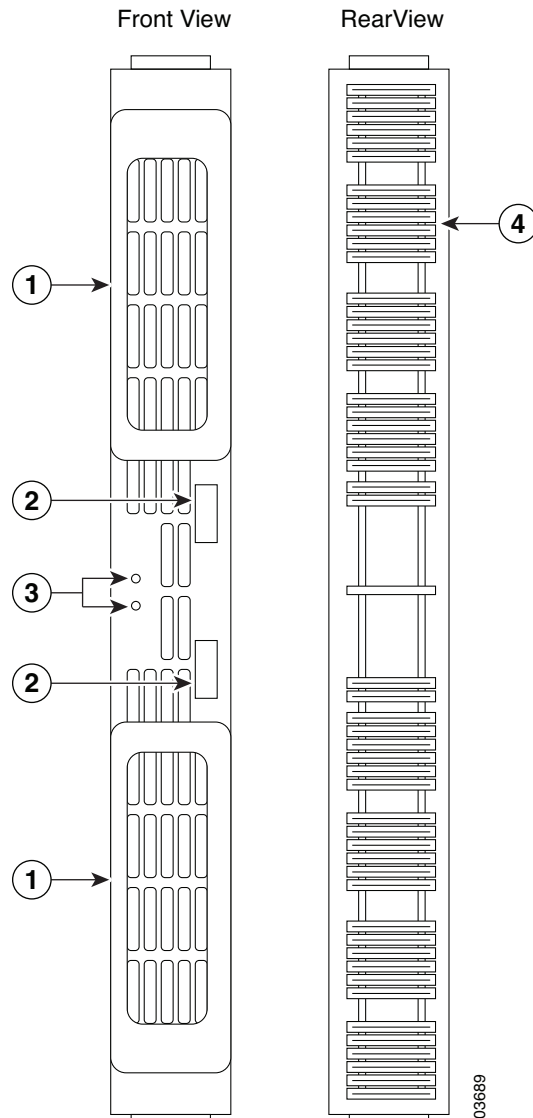

1	Locking lever	3	Crossbar fabric switching module LEDs
2	Unlocking button	4	Connector pins

The LEDs on the crossbar fabric switching modules indicate the status of the modules. [Table 1-6](#) describes the LEDs.

Table 1-6 Cisco MDS 9710 Director Crossbar Fabric Switching Modules LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). An over temperature condition occurred (a minor threshold was exceeded during environmental monitoring).
	Red, Blinking	One of the following occurs: <ul style="list-style-type: none"> The diagnostic test failed. The module is not operational because a fault occurred during the initialization sequence. An over temperature condition occurred (a major threshold was exceeded during environmental monitoring). Crossbar fabric switching module has been manually powered off.
	Red	Bad slot ID parity.
	Off	The module is not receiving power.
Locator ID	Blue Blinking	Operator has flagged this card for identification.
	Off	Operator has not flagged this card for identification.

Since the crossbar fabric switching modules are located behind the fan modules in the chassis, the LEDs on the crossbar fabric switching modules are not easily visible from the back of the chassis. So, crossbar fabric switching module status LEDs are provided on the fan modules as well. Each fan module covers two crossbar fabric switching modules, the status LEDs for the two crossbar fabric switching modules are present on each fan module. If the fan module is removed, the status and locator LEDs on the crossbar fabric switching modules will be visible.

When a fabric module needs to be located, the locator LED of the corresponding fan module must be activated, followed by the locator LED of the crossbar fabric switching module, using the CLIs **locator-led fan** <fan module number> and **locator-led xbar** <xbar slot number>. For example, to locate the crossbar fabric switching module in slot 4, the locator LED of the fan module 2 needs to be activated followed by the locator LED of the crossbar fabric switching module 4.

Cisco MDS 9706 Director Crossbar Fabric Switching Modules

The Cisco MDS 9706 Director supports up to six crossbar (xbar) fabric switching modules. The crossbar fabric switching modules DS-X9706-FAB1 and DS-X9706-FAB3 are supported. The crossbar fabric switching modules are installed vertically at the back of the chassis behind the fan modules. Crossbar fabric switching modules slots 1 and 2 are behind the fan module slot 1, crossbar fabric switching modules slots 3 and 4 are behind the fan module slot 2, and crossbar fabric switching modules slots 5 and 6 are behind the fan module slot 3.

Cisco MDS 48-Port 32-Gbps Fiber Channel Switching Module needs a minimum of 6 (DS-X9706-FAB1) Crossbar Fabric-1 Switching Modules to deliver full bandwidth to all the modules in the switch. Each DS-X9706-FAB1 Crossbar Fabric-1 Switching Module provides 256-Gbps of fiber channel bandwidth per slot.

Cisco MDS 48-Port 32-Gbps Fiber Channel Switching Module needs a minimum of 3 (DS-X9706-FAB3) Crossbar Fabric-3 Switching Modules to deliver full bandwidth to all the modules in the switch. Each DS-X9706-FAB3 Crossbar Fabric-3 Switching Module provides 512-Gbps of fiber channel bandwidth per slot. A fourth crossbar fabric switching module is required for N+1 protection.


The DS-X9706-FAB1 crossbar fabric switching module is supported from Cisco MDS NX-OS Release 6.2(9) or later. DS-X9706-FAB1 modules are supported only with Supervisor-1 Modules (DS-X97-SF1-K9).

The DS-X9706-FAB3 crossbar fabric switching module is supported from Cisco MDS NX-OS Release 8.4(1) or later. DS-X9706-FAB3 modules are supported only with Supervisor-4 Modules (DS-X97-SF4-K9).

**Note**

You cannot have a mix of different supervisor modules or a mix of different crossbar fabric switching modules in a chassis, except during migration of a supervisor module or a crossbar fabric switching module.

Figure 1-12 Cisco MDS 9706 Crossbar Fabric Switching Module

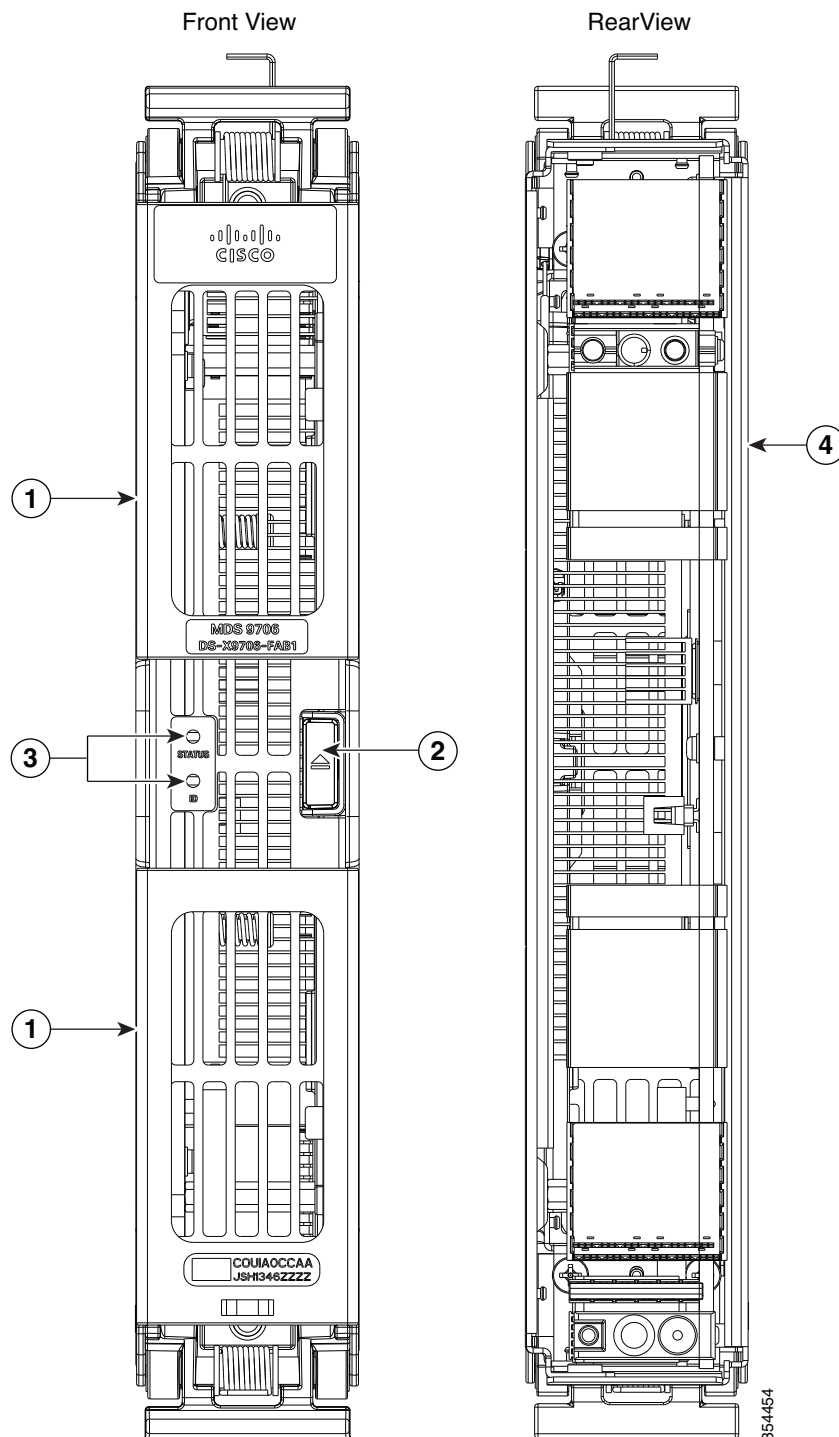

1	Locking lever	3	Crossbar fabric switching module LEDs
2	Unlocking button	4	Connector pins

The LEDs on the crossbar fabric switching modules indicate the status of the modules. [Table 1-7](#) describes the LEDs.

Table 1-7 Cisco MDS 9706 Director Crossbar Modules LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). An over temperature condition occurred (a minor threshold was exceeded during environmental monitoring).
	Red, Blinking	One of the following occurs: <ul style="list-style-type: none"> The diagnostic test failed. The module is not operational because a fault occurred during the initialization sequence. An over temperature condition occurred (a major threshold was exceeded during environmental monitoring). Crossbar fabric switching module has been manually powered off.
	Red	Bad slot ID parity.
	Off	The module is not receiving power.
Locator ID	Blue Blinking	Operator has flagged this card for identification.
	Off	Operator has not flagged this card for identification.

The crossbar fabric switching modules are located behind the fan modules in the chassis, the LEDs on the crossbar fabric switching module are not easily visible from the back of the chassis. So, the crossbar fabric switching module status LEDs are provided on the fan modules as well. Each fan module covers two crossbar fabric switching modules, the status LEDs for two crossbar fabric modules are present on each fan module. If the fan module is removed, the status and locator LEDs on the crossbar fabric switching modules will be visible.

When a crossbar fabric switching module needs to be located, the locator LED of the corresponding fan module must be activated, followed by the locator LED of fabric module, using the CLIs **locator-led fan** *<fan module number>* and **locator-led xbar** *<xbar slot number>*. For example, to locate the crossbar fabric switching module in slot 4, the locator LED of the fan module 2 needs to be activated followed by the locator LED of the crossbar fabric switching module 4.

Fibre Channel Switching Modules

- [Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module, page 1-42](#)
- [LEDs on the 48-Port 64-Gbps Fibre Channel Switching Module, page 1-44](#)
- [Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module, page 1-44](#)
- [LEDs on the 48-Port 32-Gbps Fibre Channel Switching Module, page 1-46](#)
- [Cisco MDS 48-Port 16-Gbps Fibre Channel Switching Module, page 1-47](#)
- [LEDs on the 16-Gbps Fibre Channel Switching Module, page 1-48](#)

Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module

The Cisco MDS 9700 48-Port 64-Gbps Fibre Channel Switching Module is designed specifically for the Cisco MDS 9700 Multilayer Director Switches. With 64-Gbps Fibre Channel ports, the 64-Gbps 48 port Fibre Channel Switching Module meets the high performance needs for flash memory and Non-Volatile Memory Express (NVMe) over Fibre Channel SANs. The switching module has a built in Network Processing Unit (NPU) for inline analytics. This module also supports hot-swappable Enhanced Small Form-Factor Pluggable (SFP+) transceivers.

Individual ports can be configured with Cisco 64-Gbps, 32-Gbps, and 16-Gbps SFP+ transceivers. Each port supports 1000 buffer credits when configured as E port. With the Cisco Enterprise Package license, up to 16000 buffer credits can be allocated to an individual port when all other ports in the port group are configured with minimum BB credits, enabling full link bandwidth over long distances with no degradation in link utilization.

**Note**

Cisco MDS 9700 Series Supervisor-4 Module (DS-X97-SF4-K9) and Cisco MDS Crossbar Fabric-3 Switching Modules (depending on the chassis type) are required for Cisco MDS 9700 48-Port 64-Gbps Fibre Channel Switching Module to function.

**Note**

In Cisco MDS NX-OS Release 9.2(1), the SAN Analytics feature is not supported on Cisco MDS 9700 48-Port 64-Gbps Fibre Channel Switching Module.


For more information on the Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module, see the [Cisco MDS 9700 48-Port 64-Gbps Fibre Channel Switching Module Data Sheet](#).

[Figure 1-13](#) shows a Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module.

**Note**

The 64-Gbps module supports Forward Error Correction (FEC) on links configured for 16-Gbps speed only with Transmitter Training Signal (TTS). This is a change from the 16 Gbps and 32 Gbps Fibre Channel modules. For more information, see the [Cisco MDS 9000 Series Interfaces Configuration Guide, Release 9.x](#).

Figure 1-13 Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module

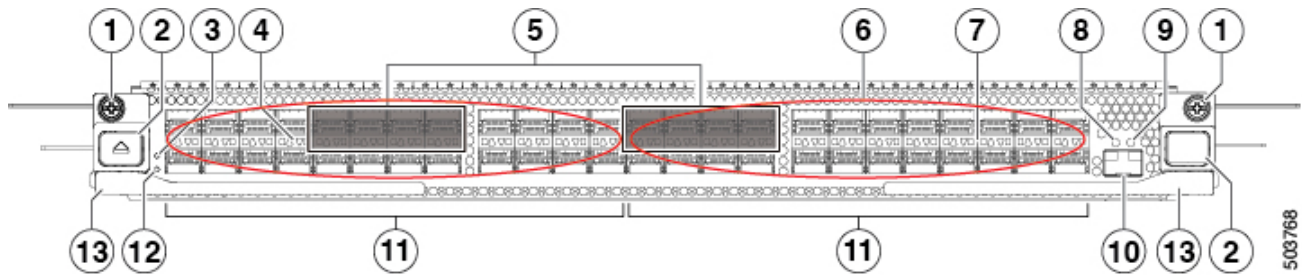

1	Detention screw (2)	8	Analytics port link status LED
2	Unlocking button (2)	9	Analytics port link activity LED
3	Locator LED	10	Ethernet Analytics port ¹ (1 Gbps, pluggable SFP compatible)
4	FC port status LEDs (48)	11	Fibre Channel port group. A port group consists of 24 ports.
5	Fibre Channel encryption ports ² (8)	12	Status LED
6	Airflow grill	13	Ejector levers (2)
7	FC ports (48 x 4/8/16/32/64 Gbps, pluggable SFP and SFP+ compatible)		

1. Not operational (supported in future releases).

2. Encryption ports support AES 128-bit link-level encryption. Support for AES 256-bit encryption will be added in future releases.

LEDs on the 48-Port 64-Gbps Fibre Channel Switching Module

Table 1-8 describes the LEDs for the 48-Port 64-Gbps Fibre Channel Switching Module.

Table 1-8 *Cisco MDS 48-Port 64-Gbps Fibre Channel Switching Module LEDs*

LED	Status	Description
Status	Green	All diagnostic tests passed. The module is operational (normal initialization sequence).
	Blinking Red	One of the following conditions exist: <ul style="list-style-type: none"> The module is resetting. The switch has been powered on or the module has been hot inserted during the normal initialization sequence. The module is resetting and ejector levers are out. The module does not have sufficient power. An over temperature condition has occurred. (A major temperature threshold has been exceeded during environmental monitoring.) The module failed to download code and configure information successfully during the initial reset, the module does not come online.
	Solid Red	One of the following conditions exist: <ul style="list-style-type: none"> The module has detected a slot ID parity error on the mid plane. The module cannot determine its slot number and will not respond to the supervisor. The module has failed diagnostics tests and has powered off.
	Off	The module is not receiving power.
Locator	Blinking Blue	The operator has activated this LED via the locator-led command to identify this module in the chassis.
	Off	The operator has not activated this LED via the locator-led command.
Link	Green	The port is active (the link is connected and operational).
	Solid Orange	The port is disabled by the administrator or is not initializing.
	Blinking Orange	The port is faulty and has been automatically disabled by the software.
	Off	The port is not active or the link is not connected.

Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module


The Cisco MDS 9700 48-Port 32-Gbps Fibre Channel Switching Module is designed specifically for the Cisco MDS 9700 Multilayer Director Switches. With 768 line-rate 32-Gbps Fibre Channel ports per director, the 32-Gbps 48 port Fibre Channel Switching Module meets the high-performance needs for flash-memory and Non-Volatile Memory Express (NVMe) over Fibre Channel workloads. The switching module has built-in network processing unit for inline analytics. This module also supports hot-swappable Enhanced Small Form-Factor Pluggable (SFP+) transceivers.

Individual ports can be configured with Cisco 32-Gbps, 16-Gbps, and 8-Gbps SFP+ transceivers. Each port supports 500 buffer credits when configured as E port for exceptional extensibility without the need for additional licenses. With the Cisco Enterprise Package license, up to 8170 buffer credits can be allocated to an individual port when all other ports in the port group are configured with minimum BB credit, enabling full link bandwidth over long distances with no degradation in link utilization.

For more information on the Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module, see the [Cisco MDS 9700 48-Port 32-Gbps Fibre Channel Switching Module Data Sheet](#).

Figure 1-14 shows a Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module.

Figure 1-14 Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module

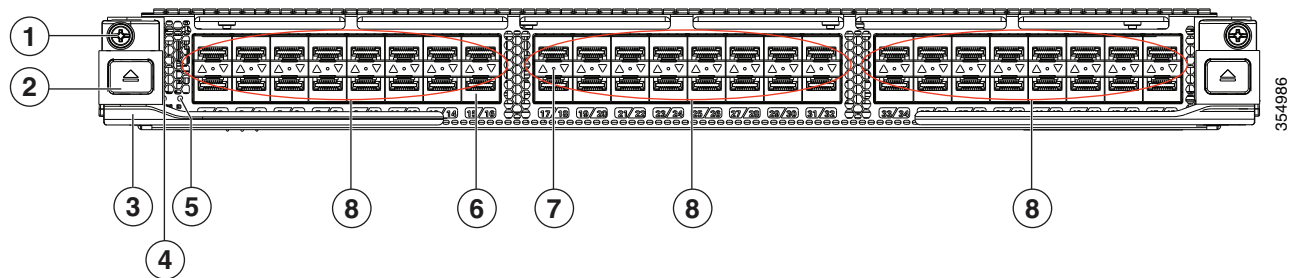

1	Detention screw	5	Locator LED
2	Unlocking button	6	Fibre Channel ports
3	Ejector lever	7	Link LEDs
4	Status LED	8	Fibre Channel port group. A port group consists of 16 ports.

LEDs on the 48-Port 32-Gbps Fibre Channel Switching Module

Table 1-9 describes the LEDs for the 48-Port 32-Gbps Fibre Channel Switching Module.

Table 1-9 *Cisco MDS 48-Port 32-Gbps Fibre Channel Switching Module LEDs*

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs or occurred: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). An over temperature condition has occurred. (A minor temperature threshold has been exceeded during environmental monitoring.)
	Blinking Red	One of the following occurs: <ul style="list-style-type: none"> The module is resetting. The switch has been powered on or the module has been hot inserted during the normal initialization sequence. An over temperature condition has occurred. (A major temperature threshold has been exceeded during environmental monitoring.) If the module fails to download code and configuration information successfully during the initial reset, the LED stays blinking red; the module does not come online.
	Solid Red	The module has detected a slot ID parity error on the mid plane. The module cannot determine its slot number and will not respond to the supervisor.
	Off	The module is not receiving power.
ID	Blinking blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not selected.
Link	Green	The port is active (the link is connected and operational).
	Solid Orange	SFP is not present or Admin is down.
	Blinking Orange	A fault condition exists.
	Off	The port is not active or the link is not connected.

Cisco MDS 48-Port 16-Gbps Fibre Channel Switching Module

The Cisco MDS 9700 48-Port 16-Gbps Switching Module is designed specifically for the Cisco MDS 9700 Series Director Switches. These modules are hot-swappable and compatible with 2, 4, 8, 10, and 16-Gbps interfaces, and they support hot-swappable Enhanced Small Form-Factor Pluggable (SFP+) transceivers.

The FC switching module has 12, 4-port, port groups. Each port group is capable of a speed of 64-Gbps in each direction simultaneously. The ports of this switching module support expansion port (E port), fabric port (F port), fabric loop port (FL port), SPAN destination port (SD port), and (TE port) port mode.

Individual ports can be configured with Cisco 16-Gbps, 8-Gbps, or 10-Gbps shortwave or longwave SFP+ transceivers. Each port that is configured as mode E supports 500 buffer credits with no additional licensing required. With the Cisco Enterprise Package, up to 4095 buffer credits can be allocated to an individual port.


The FC switching module also provides Cisco VMpath technology that enables advanced virtual machine-aware SAN provisioning and monitoring for virtualized data centers. With Cisco VMpath, you can monitor, manage, and control SAN resource allocation and performance on a per-virtual machine basis and map out paths from the server to storage.

The FC switching module is hot-swappable and has hot-swappable SFP+ transceivers. It includes online diagnostics, stateful process restart, and nondisruptive supervisor failover. In addition, the FC switching module has any module, any port configuration for port channels, fabric-based multipathing, per-VSAN fabric services, and port tracking. The module also supports Virtual Routing Redundancy Protocol (VRRP) for management.

The Cisco MDS 9700 48-Port 16-Gbps Fibre Channel Switching Module provides the following features:

- Configuration file management
- Nondisruptive software upgrades for FC interfaces
- Call Home
- Power-management LEDs
- Port beaconing
- System LED
- SNMP traps for alerts
- Network boot

[Figure 1-15](#) shows a 48-Port 16-Gbps Fibre Channel Switching Module. The front panel connectors support standard modular SFP+ transceivers and the speed detection is autosensing.

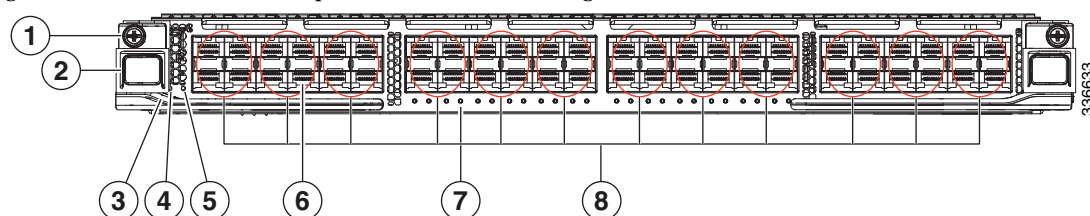Figure 1-15 48-Port 16-Gbps Fibre Channel Switching Module

1	Detention screw	5	Locator LED
2	Unlocking button	6	Fibre Channel ports
3	Ejector lever	7	Link LEDs
4	Status LED	8	Fibre Channel port group. A port group consists of four ports.

LEDs on the 16-Gbps Fibre Channel Switching Module

Table 1-10 describes the LEDs for the 48-Port 16-Gbps Fibre Channel Switching Module.

Table 1-10 Cisco MDS 9710 48-Port 16-Gbps Fibre Channel Switching Module LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs or occurred: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). The inlet air temperature of the system has exceeded the maximum system operating temperature limit (a minor environmental warning). To ensure maximum product life, you should immediately correct the environmental temperature and restore the system to normal operation.
	Red	One of the following occurs: <ul style="list-style-type: none"> The diagnostic test failed. The module is not operational because a fault occurred during the initialization sequence. The inlet air temperature of the system has exceeded the safe operating temperature limits of the card (a major environmental warning). The card has been shut down to prevent permanent damage.
ID	Blinking blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.

Table 1-10 *Cisco MDS 9710 48-Port 16-Gbps Fibre Channel Switching Module LEDs (continued)*

LED	Status	Description
Link	Solid green	Link is up.
	Intermittent blinking green	Link is up (traffic on port).
	Solid orange	SFP is not present or Admin is down.
	Blinking orange	A fault condition exists.
	Off	The port is not active or the link is not connected.

SAN Extension Modules

The following section describes the Cisco MDS 9000 SAN extension modules.

Cisco MDS 24/10 port SAN Extension Module


The Cisco MDS 24/10 port SAN Extension Module provides a high performance, flexible, unified platform for deploying enterprise class disaster recovery and business continuance SAN extension solutions. The MDS 24/10 port SAN Extension Module is supported on Cisco MDS 9700 Series Multilayer Director Switches. With 24 line rate 2-, 4-, 8-, 10-, and 16-Gbps Fibre Channel ports and eight 1 and 10GE or two 40GE Fibre Channel over IP (FCIP) ports, this module enables large and scalable deployment of SAN extension solutions. The SAN extension module has two independent service engines that can each be individually and incrementally enabled to scale as business requirements expand. The SAN extension module supports the full range of services available on other Cisco MDS 9000 Family Fibre Channel switching modules, including virtual SAN (VSAN), security, and traffic management services. The FCIP module uses Cisco expertise and knowledge of IP networks to deliver outstanding SAN extension performance, reducing latency for disk and tape operations with FCIP acceleration features, including FCIP write acceleration and FCIP tape write and read acceleration. Hardware-based encryption helps secure sensitive traffic with IP Security (IPsec), and hardware-based compression dramatically enhances performance for both high and low speed links, enabling immediate cost savings in expensive WAN infrastructure. Multiple FCIP interfaces within a single engine or across service engines can be grouped into a port channel of up to 16 links for high availability and increased aggregate throughput.

For more information on the Cisco MDS 24/10 Port SAN Extension Module, see the [Cisco MDS 9000 24/10 port SAN Extension Module for Cisco MDS 9700 Series Multilayer Directors Datasheet](#).



Note 40GE IP Storage interfaces are supported from Cisco MDS NX-OS Release 8.5(1) or later releases.

Figure 1-16 shows a Cisco MDS 24/10 Port SAN Extension Module.

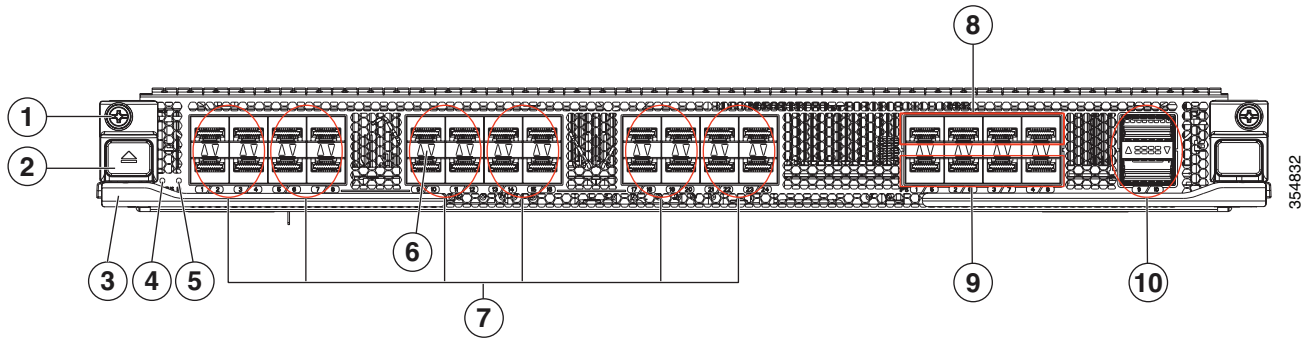Figure 1-16 Cisco MDS 24/10 Port SAN Extension Module

1	Detention screw	5	Locator LED
2	Unlocking button	6	Link LEDs
3	Ejector lever	7	Fibre Channel port group. A port group consists of four ports. 16-Gbps ports.
4	Status LED	8	10-G IPS port group. A port group consists of four ports.
9	10-G IPS port group. A port group consists of four ports.	10	40-G IPS port group. A port group consists of two ports.

LEDs on the 24/10 Port SAN Extension Module

Table 1-11 describes the LEDs for the 24/10 port SAN extension module.

Table 1-11 Cisco MDS 9700 Series 24/10 Port SAN Extension Module LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs or occurred: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). An over temperature condition has occurred. (A minor temperature threshold has been exceeded during environmental monitoring.)
	Blinking Red	One of the following occurs: <ul style="list-style-type: none"> The module is resetting. The switch has just been powered on or the module has been hot inserted during the normal initialization sequence. An over temperature condition has occurred (a major temperature threshold has been exceeded during environmental monitoring). If the module fails to download the code and configuration information successfully during the initial reset, the LED stays blinking red; the module does not come online.
	Solid Red	The module has detected a slot ID parity error on the mid plane. The module cannot determine its slot number and hence will not respond to the Supervisor.
ID	Blinking blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.
Link	Solid green	Link is up.
	Steady Blinking Green	Port Beacon On (beacon is used to identify port).
	Intermittent Blinking Green	Link is up (traffic on port).
	Solid Orange	SFP is not present or Admin is down.
	Blinking Orange	A fault condition exists.
	Off ¹	The port is not active or the link is not connected.

1. The Link LED status of IP Storage ports indicates Solid Orange when an SFP is present and the link is not connected.

Fibre Channel over Ethernet Switching Modules


- [Cisco MDS 24-Port 40-Gbps Fibre Channel over Ethernet Module, page 1-52](#)
- [LEDs on the 24-Port 40-Gbps Fibre Channel over Ethernet Module, page 1-53](#)
- [Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet Module, page 1-53](#)
- [LEDs on the 48-Port 10-Gbps Fibre Channel over Ethernet Module, page 1-55](#)

Cisco MDS 24-Port 40-Gbps Fibre Channel over Ethernet Module

The next-generation Cisco MDS 24-Port 40-Gigabit Fibre Channel over Ethernet (FCoE) Module (DS-X9824-960K9) provides Cisco Unified fabric connectivity to the SAN core. It empowers mid-size and large enterprises that are rapidly deploying cloud-scale applications with Inter-Switch Link (ISL) consolidation, four times the bandwidth, and exceptional investment protection for their SANs. The data center fabric is already using 40-Gbps connectivity in the core for more efficient convergence, higher performance, and lower total cost of ownership (TCO). With the entire Cisco Nexus® Family supporting 40-Gbps FCoE, this capability can now be extended to the SAN core. You can extend the benefits of FCoE beyond the access layer to the data center core with a full line-rate FCoE module for the Cisco MDS 9700 Series Multilayer Directors.

[Figure 1-17](#) shows a Cisco MDS 24-Port 40-Gigabit Fibre Channel over Ethernet module.

Figure 1-17 Cisco MDS 24-Port 40-Gbps FCoE Module

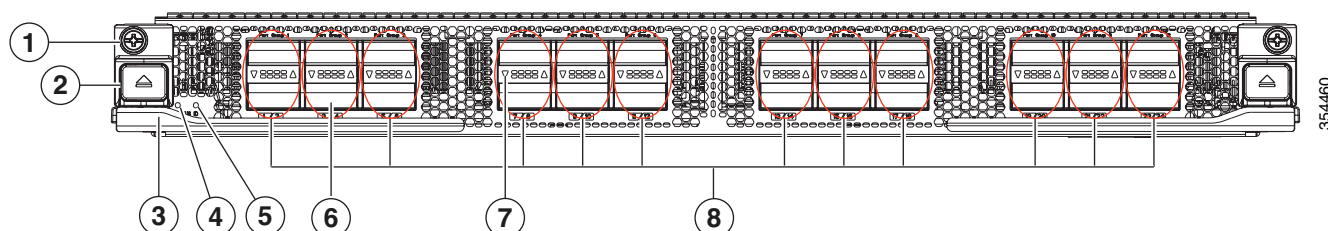

1	Detention screw	5	Locator LED
2	Unlocking button	6	FCoE ports
3	Ejector lever	7	Link LEDs
4	Status LED	8	FCoE port group. Each port group consists of two ports.

For more information on the Cisco MDS 24-Port 40-Gbps FCoE Module, see the [Cisco MDS 9700 24 Port 40 Gbps Fibre Channel over Ethernet Module Datasheet](#).

LEDs on the 24-Port 40-Gbps Fibre Channel over Ethernet Module

Table 1-12 describes the LEDs for the 24-Port 40-Gbps Fibre Channel over Ethernet module.

Table 1-12 Cisco MDS 9700 Series 24-Port 40-Gbps FCoE Module LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs or occurred: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). The inlet air temperature of the system has exceeded the maximum system operating temperature limit (a minor environmental warning). To ensure maximum product life, you should immediately correct the environmental temperature and restore the system to normal operation.
	Red	One of the following occurs: <ul style="list-style-type: none"> The diagnostic test failed. The module is not operational because a fault occurred during the initialization sequence. The inlet air temperature of the system has exceeded the safe operating temperature limits of the card (a major environmental warning). The card has been shut down to prevent permanent damage.
ID	Blinking blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.
Link	Solid green	Link is up.
	Solid orange	SFP is not present or Admin is down.
	Blinking Orange	A fault condition exists.
	Off	The port is not active or the link is not connected.

Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet Module

The Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet module (DS-X9848-480K9) is designed for the MDS 9700 Series Directors. These modules are hot-swappable and they support 10-Gigabit Fibre Channel over Ethernet ports in SFP+ form factor.

The Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet module delivers integrated Fibre Channel over Ethernet (FCoE), simplifies the network infrastructure, and helps reduce costs. The FCoE module allows you to extend the existing Fibre Channel SANs by using FCoE. The Cisco MDS 48-Port

10-Gigabit Fibre Channel over Ethernet module supports connectivity to FCoE switching platforms and to FCoE targets. This module also supports connectivity to FCoE initiators and targets that only send FCoE traffic.

The Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet module has the MPC8572 processor and 2 GB DDR3 SDRAM. The module delivers 720 million packets per second (MPPS) and is capable of 480-Gbps of data throughput. This module can power down data path slices to save power when the attached ports are not in use.


The Cisco MDS 9700 10-Gbps 48-Port FCoE module provides the following features:

- High performance—Cisco MDS 9700 Series architecture, based on central arbitration and crossbar fabric switching module provides 10-Gbps line-rate, nonblocking, predictable performance across all traffic conditions for every FCoE port in the chassis.
- Efficient encoding—FCoE takes advantage of the more efficient encoding mechanisms of 10-Gbps Ethernet to provide 50-percent more bandwidth than 8-Gbps Fibre Channel (the actual throughput of 8-Gbps Fibre Channel is 6.8 Gbps). Therefore, you need fewer 10-Gigabit Ethernet links to achieve the same bandwidth as with multiple 8-Gbps links.
- High availability—The Cisco MDS 9700 Series provides outstanding availability and reliability. The Cisco MDS 9710 Multilayer Director is the industry's first director-class switch that enables redundancy on all major components, including the fabric card. It provides grid redundancy on the power supply and 1+1 redundant supervisors. Users can add fabric cards to enable N+1 fabric redundancy.
- Scalability—The Cisco MDS 9700 48-Port 10-Gbps FCoE Module provides the scalability of 384 10-Gbps full line-rate autosensing ports in a single chassis, or up to 1152 ports in a single rack.
- Intelligent network services—VSAN technology, access control lists (ACLs) for hardware-based intelligent frame processing, and fabric-wide quality of service (QoS) enable migration from SAN islands to enterprise-wide storage networks.
- Sophisticated diagnostics—The Cisco MDS 9700 48-Port 10-Gbps FCoE Module provides intelligent diagnostics, protocol decoding, and network analysis tools as well as integrated Cisco Call Home capability for greater reliability, faster problem resolution, and reduced service costs.

The Cisco MDS 48-Port 10-Gbps Ethernet Module also provide the following advanced FCoE features:

- Inter-VSAN Routing (IVR)
- Nondisruptive software upgrade
- Port channels (up to 16 links)
- SAN trunking
- SNMP traps for alerts
- Virtual SANs (VSANs)

Figure 1-18 shows a Cisco MDS 48-Port 10-Gigabit Fibre Channel over Ethernet module. The front panel connectors support standard modular SFP+ transceivers.

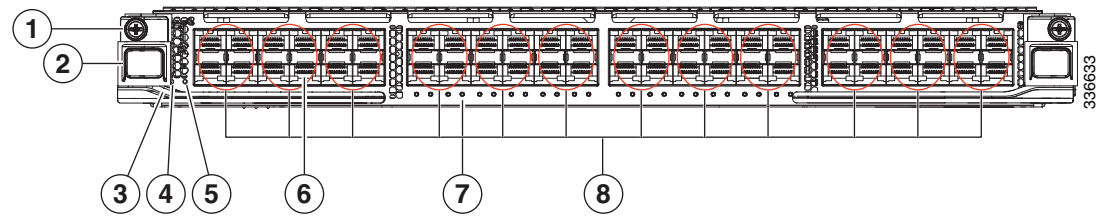Figure 1-18 Cisco MDS 48-Port 10-Gbps Fibre Channel over Ethernet Module

1	Detention screw	5	Locator LED
2	Unlocking button	6	FCoE ports
3	Ejector lever	7	Link LEDs
4	Status LED	8	FCoE port group. Each port group consists of 4 ports.

LEDs on the 48-Port 10-Gbps Fibre Channel over Ethernet Module

Table 1-13 describes the LEDs for the 48-Port 10-Gbps Fibre Channel over Ethernet Module.

Table 1-13 Cisco MDS 9700 Series 48-Port 10-Gbps FCoE Module LEDs

LED	Status	Description
Status	Green	All diagnostics pass. The module is operational (normal initialization sequence).
	Orange	One of the following occurs or occurred: <ul style="list-style-type: none"> The module is booting or running diagnostics (normal initialization sequence). The inlet air temperature of the system has exceeded the maximum system operating temperature limit (a minor environmental warning). To ensure maximum product life, you should immediately correct the environmental temperature and restore the system to normal operation.
	Red	One of the following occurs: <ul style="list-style-type: none"> The diagnostic test failed. The module is not operational because a fault occurred during the initialization sequence. The inlet air temperature of the system has exceeded the safe operating temperature limits of the card (a major environmental warning). The card has been shut down to prevent permanent damage.
ID	Blinking blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.

Table 1-13 Cisco MDS 9700 Series 48-Port 10-Gbps FCoE Module LEDs (continued)

LED	Status	Description
Link	Solid green	Link is up.
	Intermittent blinking green	Link is up (traffic on port).
	Solid orange	SFP is not present or Admin is down.
	Blinking orange	A fault condition exists.
	Off	The port is not active or the link is not connected.

Fan Modules

This section describes the fan modules present in the Cisco MDS 9700 Series Directors.

- [Cisco MDS 9718 Director Fan Modules, page 1-56](#)
- [Cisco MDS 9710 Director Fan Modules, page 1-57](#)
- [Cisco MDS 9706 Director Fan Modules, page 1-58](#)

If a fan module fails, it does not affect the thermal performance of the system. The redundant fan controllers and other internal mechanisms ensure that the switch, and fan modules are operational.


If a single fan module fails, the system continues to operate under all conditions. Two fan failures might cause alarms from ASIC when the temperature exceeds the threshold. At 86°F (30°C) or less, a single fan module can be removed and the system can continue to operate up to 72 hours to allow for replacement of a failed fan module. When the temperature exceeds the threshold, the device automatically shuts down in 3 minutes.

Cisco MDS 9718 Director Fan Modules

The Cisco MDS 9718 Director has three fan modules, each with six fans, that are installed vertically at the back of the chassis. Each fan module can be removed while the other two fan modules continue to move air through the chassis.

The fan modules cover the crossbar fabric switching modules in the back of the chassis. Fan module 1 must be removed to access the crossbar fabric switching modules 1 and 2, fan module 2 must be removed to access the crossbar fabric switching modules 3 and 4, and the fan module 3 must be removed to access the crossbar fabric switching modules 5 and 6.

Figure 1-19 MDS 9718 Fan Modules External and Internal View

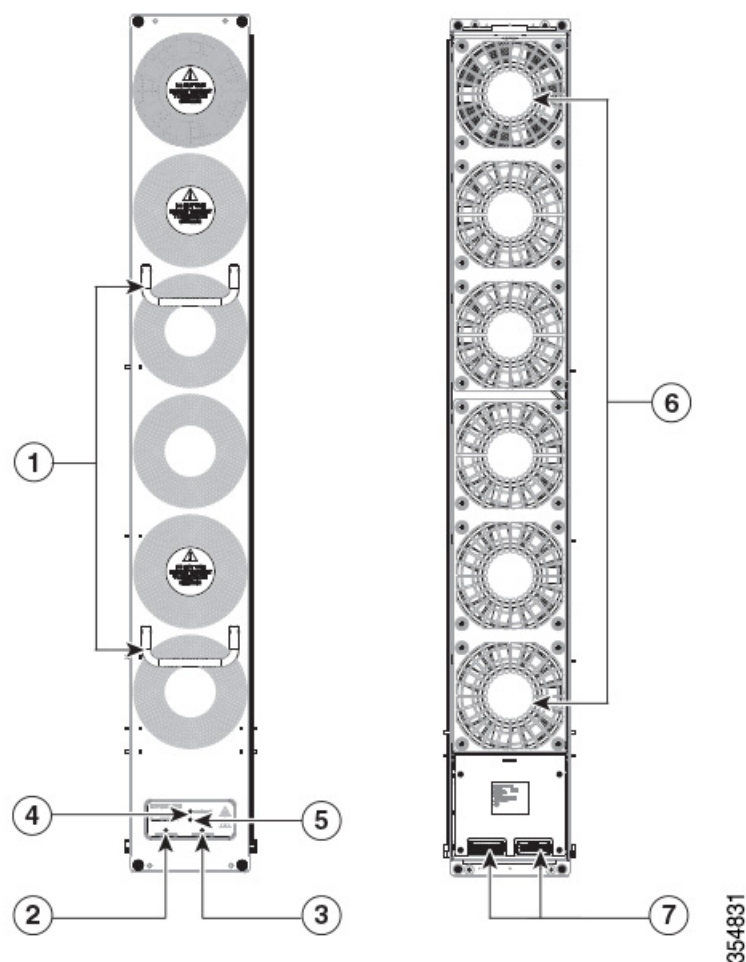

1	Fan handles	5	Right crossbar fabric switching module status LED
2	Fan module status LED	6	Fans (6)
3	Fan module locator LED	7	Fan module connectors
4	Left crossbar fabric switching module status LED		


Cisco MDS 9710 Director Fan Modules

The Cisco MDS 9710 Director has three fan modules, each with four fans, that are installed vertically at the back of the chassis. Each fan module can be removed while the other two fan modules continue to move air through the chassis.

The fan modules cover the crossbar fabric switching modules in the back of the chassis. Fan module 1 must be removed to access the crossbar fabric switching modules 1 and 2, the fan module 2 must be removed to access the crossbar fabric switching modules 3 and 4, and the fan module 3 must be removed to access the crossbar fabric switching modules 5 and 6.

Figure 1-20 shows the front and rear view of a Cisco MDS 9710 fan module.

Figure 1-20 MDS 9710 Fan Modules External and Internal View

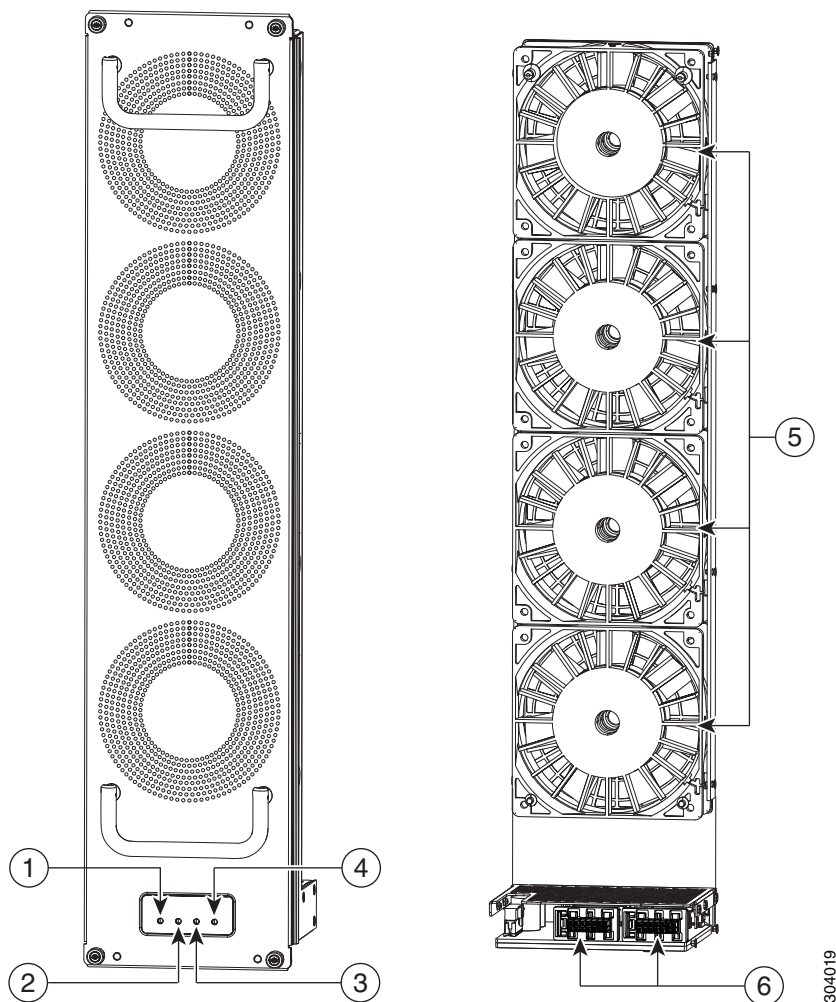


1	Left crossbar fabric switching module status LED	4	Right crossbar fabric switching module status LED
2	Fan module status LED	5	Fans (4)
3	Fan module locator LED	6	Fan module connectors

Cisco MDS 9706 Director Fan Modules

The Cisco MDS 9706 Director has three fan modules, each with two fans, that are installed vertically at the back of the chassis. Each fan module can be removed while the other two fan modules continue to move air through the chassis.

The fan modules cover the crossbar fabric switching modules in the back of the chassis. Fan module 1 must be removed to access the crossbar fabric switching modules 1 and 2, the fan module 2 must be removed to access the crossbar fabric switching modules 3 and 4, and the fan module 3 must be removed to access the crossbar fabric switching modules 5 and 6.

Figure 1-21 Cisco MDS 9706 Fan Modules External and Internal View

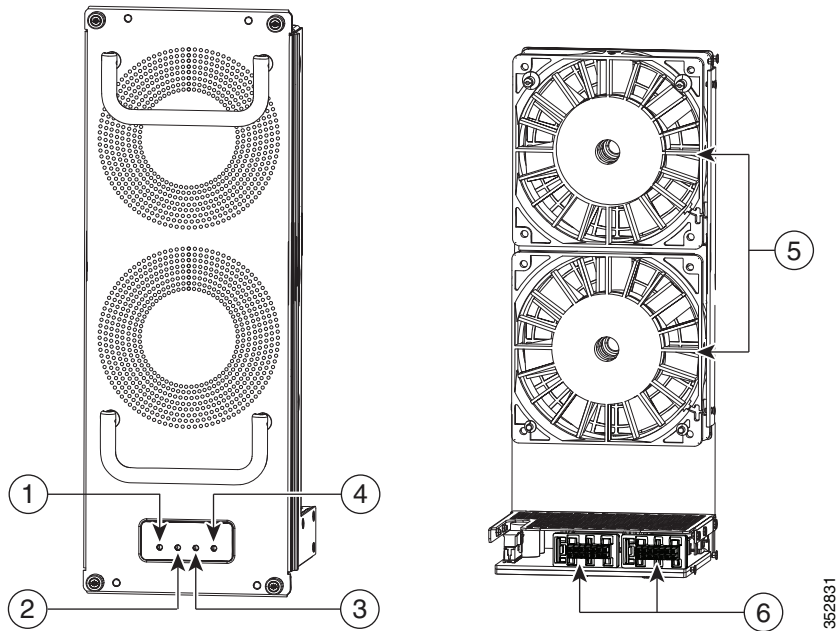

1	Left crossbar fabric switching module status LED	4	Right crossbar fabric switching module status LED
2	Fan module status LED	5	Fans (4)
3	Fan module locator LED	6	Fan module connectors

Table 1-14 describes the fan module LEDs for the Cisco MDS 9700 Series.

Table 1-14 Cisco MDS 9700 Series Director Fan Module LEDs

LED	Status	Description
FAN	Green	Fan modules are all operational.
	Amber	At least one fan module has a red STATUS LED.
	Blue, blinking	This LED is being identified or verified by the system.

Power Supplies

The Cisco MDS 9700 Series supports the following types of power supplies:

- 3000-W AC power supply (AC input and DC output) (DS-CAC97-3KW)

- 3000-W DC power supply (DC input and DC output) (DS-CDC97-3KW)
- 3.5-kW HVAC/HVDC power supply (AC/DC input and DC output) (DS-CHV-3.5KW)

The Cisco MDS 9718 Director supports up to 16 hot-swappable 3000-W AC or DC power supplies.

The Cisco MDS 9710 Director supports up to eight hot-swappable 3000-W AC or DC power supplies.

The Cisco MDS 9706 Director supports up to four hot-swappable 3000-W AC or DC power supplies.

The 3000-W AC power supply unit may be connected to either 220 V or 110 V AC power sources. When connected to 220 V each PSU has a maximum output capacity of 3000 W. When connected to 110 V each PSU has a maximum output capacity of 1450 W.

Each power supply module monitors its output voltage and provides the status to the supervisor module. In addition, the power supply modules provide information about local fans, power, shutdown control, and E2PROM to the supervisor.

**Note**


- The minimum number of AC PSUs required to achieve grid redundancy on each of the Cisco MDS 9700 Series Directors differ. For more information, see the [“AC Power Supply Requirements for Grid Redundancy” section on page 6-126](#). For more information on power supply specifications, see the [Power Supply Specifications](#) section under the Technical Specifications chapter.
- When PSUs are in 1450-W mode and the system is configured in redundant power mode, the total power available to the system may not be sufficient to power all modules installed in the chassis. For more information, refer to the [Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide](#).

Starting from Cisco MDS NX-OS Release 6.2(19), all Cisco MDS NX-OS 6.2(x) releases support a 3500-W high-voltage DC (HVDC) power supply unit (DS-CHV-3.5KW) on Cisco MDS 9706 and MDS 9710 Directors.

Starting from Cisco MDS NX-OS Release 8.3(1), a 3500-W high-voltage DC (HVDC) power supply unit (DS-CHV-3.5KW) is supported on Cisco MDS 9718 Directors.


Starting from Cisco MDS NX-OS Release 8.1(1b), a 3500-W high-voltage DC (HVDC) power supply unit (DS-CHV-3.5KW) is supported on Cisco MDS 9700 Series switches.

Figure 1-22 3000-W AC Power Supply

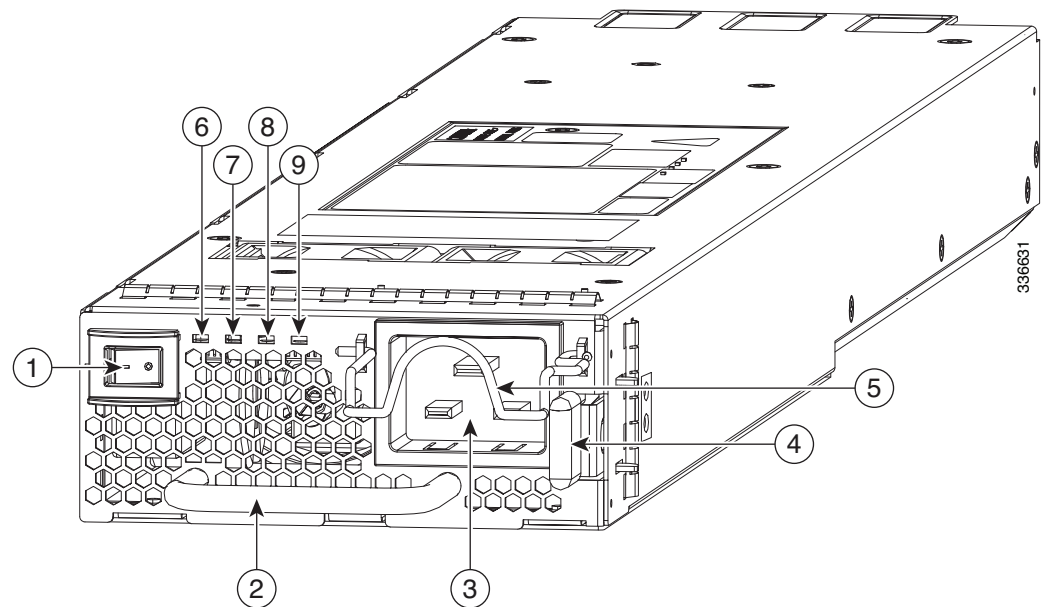

1	Power supply switch	5	Power cable retainer
2	Power module handle	6	Input power module LED
3	AC power connection	7	Output power module LED
4	Ejector lever	8	Fault power module LED
		9	ID power module LED

Figure 1-23 3000-W DC Power Supply

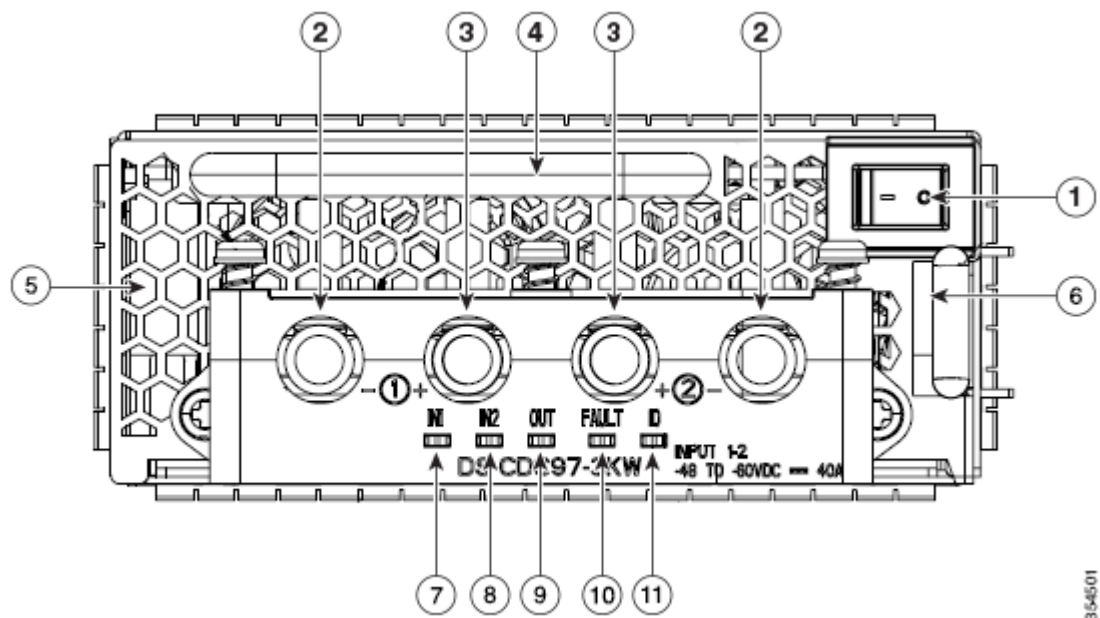

1	Power supply switch	7	Power module LED – Input1 power module LED
2	Negative terminals	8	Power module LED – Input2 power module LED
3	Positive terminals	9	Power module LED – Output power module LED
4	Power supply handle	10	Fault power module LED
5	Power supply exhaust	11	ID power module LED
6	Ejector lever		

Table 1-15 describes the power supply LEDs for the Cisco MDS 9700 Series.

Table 1-15 Cisco MDS 9700 Series Power Supply LEDs

LED	Status	Description
Input 1	Green	The AC or DC input voltage is within the valid range.
	Off	The AC or DC input voltage is outside the valid range.
Input 2 (available only on DC power supply units)	Green	The DC input voltage is within the valid range.
	Off	The DC input voltage is outside the valid range.
Output	Green	The AC or DC output power is within the valid range.
	Off	The AC or DC output power is outside the valid range.
Fault	Red, blinking (The blinking stops when the fault condition is cleared.)	Self-diagnostic tests have failed or another power supply failure has occurred.
	Off	The AC or DC output voltage and power supply unit tests are okay.
ID	Blue, blinking	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.

Supported Transceivers

The Cisco MDS 9710 Director supports the Fibre Channel SFP+ transceivers in Shortwave (SW), Longwave (LW), Long Distance (CWDM and DWDM), or Extended Long Wavelength (ELW).

[Fibre Channel SFP+ Transceivers, page 1-63](#)

Fibre Channel SFP+ Transceivers

The transceivers are field-replaceable and hot-swappable. You can use any combination of SFP+ transceivers that are supported by the switch. The only restrictions are that SW transceivers must be paired with SW transceivers, and LW transceivers with LW transceivers, and the cable must not exceed the stipulated cable length for reliable communications.

For more information about a specific Cisco SFP+ transceiver, see the “[SFP+ Transceiver Specifications](#)” section on [page 6-128](#). SFP+ transceivers can be ordered separately or with the Cisco MDS 9700 Series.

**Note**

Use only Cisco transceivers or Cisco qualified transceivers in the Cisco MDS 9700 Series. Each Cisco transceiver is encoded with model information that enables the switch to verify that the transceiver meets the requirements for the switch.



Preparing the Site

This chapter provides information on the rack installation and includes the following sections:

- [Humidity Requirements, page 2-65](#)
- [Altitude Requirements, page 2-66](#)
- [Dust and Particulate Requirements, page 2-66](#)
- [Minimizing Electromagnetic and Radio Frequency Interference, page 2-66](#)
- [Shock and Vibration Requirements, page 2-67](#)
- [Grounding Requirements, page 2-67](#)
- [Planning for Power Requirements, page 2-67](#)
- [Power Modes Overview, page 2-68](#)
- [Rack and Cabinet Requirements, page 2-70](#)
- [Clearance Requirements for Cisco MDS 9700 Series Directors, page 2-72](#)
- [Installing and Removing the Brackets, page 2-76](#)
- [Installing the Switch on the Brackets, page 2-77](#)

Humidity Requirements

High humidity can cause moisture to seep into the switch. Moisture can cause corrosion of internal components and degradation of properties such as electrical resistance, thermal conductivity, physical strength, and size. The switch is rated to operate at 8 to 80 percent relative humidity, with a humidity gradation of 10 percent per hour.

The switch can withstand from 5 to 90 percent relative humidity. Buildings in which the climate is controlled by air-conditioning in the warmer months and by heat during the colder months usually maintain an acceptable level of humidity for the switch equipment. However, if the switch is located in an unusually humid location, you should use a dehumidifier to maintain the humidity within an acceptable range.

Altitude Requirements

If you operate a switch at a high altitude (low pressure), the efficiency of forced and convection cooling is reduced and can result in electrical problems that are related to arcing and corona effects. This condition can also cause sealed components with internal pressure, such as electrolytic capacitors, to fail or to perform at a reduced efficiency. This switch is rated to operate at altitudes from –500 to 13,123 feet (–152 to 4,000 meters). You can store the switch at altitudes of –1,000 to 30,000 feet (–305 to 9,144 meters).

Dust and Particulate Requirements

Exhaust fans cool power supplies and system fan modules cool switches by drawing in air and exhausting air out through various openings in the chassis. However, fans also ingest dust and other particles, causing contaminant buildup in the switch and increased internal chassis temperature. A clean operating environment can greatly reduce the negative effects of dust and other particles, which act as insulators and interfere with the mechanical components in the switch.

**Note**

If you are using this switch in a non-clean environment, you can order and install optional air filters. These air filters require that you also order the optional front door for the chassis.

In addition to regular cleaning, follow these precautions to avoid contamination of your switch:

- Do not permit smoking near the switch.
- Do not permit food or drink near the switch.

Minimizing Electromagnetic and Radio Frequency Interference

Electromagnetic interference (EMI) and radio frequency interference (RFI) from the switch can adversely affect other devices such as radio and television (TV) receivers operating near the switch. Radio frequencies that emanate from the switch can also interfere with cordless and low-power telephones. Conversely, RFI from high-power telephones can cause spurious characters to appear on the switch monitor.

RFI is defined as any EMI with a frequency above 10 kHz. This type of interference can travel from the switch to other devices through the power cable and power source or through the air like transmitted radio waves. The Federal Communications Commission (FCC) publishes specific regulations to limit the amount of EMI and RFI that can be emitted by computing equipment. Each switch meets these FCC regulations.

To reduce the possibility of EMI and RFI, follow these guidelines:

- Cover all open expansion slots with a metal filler.
- Always use shielded cables with metal connector shells for attaching peripherals to the switch.

When wires are run for any significant distance in an electromagnetic field, interference can occur between the field and the signals on the wires and cause the following implications:

- Bad wiring can result in radio interference emanating from the plant wiring.

- Strong EMI, especially when it is caused by lightning or radio transmitters, can destroy the signal drivers and receivers in the chassis and even create an electrical hazard by conducting power surges through lines into equipment.

**Note**

To predict and prevent strong EMI, you might need to consult experts in radio frequency interference (RFI).

The wiring is unlikely to emit radio interference if you use twisted-pair cable with a good distribution of grounding conductors. If you exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

If the wires exceed the recommended distances, or if wires pass between buildings, give special consideration to the effect of a lightning strike in your vicinity. The electromagnetic pulse caused by lightning or other high-energy phenomena can easily couple enough energy into unshielded conductors to destroy electronic switches. You may want to consult experts in electrical surge suppression and shielding if you had similar problems in the past.

Shock and Vibration Requirements

The switch is being shock- and vibration-tested for operating ranges, handling, and earthquake standards to Network Equipment Building Standards (NEBS) Zone 4 per GR-63-Core.

Grounding Requirements

The switch is sensitive to variations in voltage supplied by the power sources. Overvoltage, undervoltage, and transients (or spikes) can erase data from the memory or cause components to fail. To protect against these types of problems, ensure that there is an earth-ground connection for the switch. You can connect the grounding pad on the switch either directly to the earth-ground connection or to a fully bonded and grounded rack.

You must provide the grounding cable to make this connection but you can connect the grounding wire to the switch using a grounding lug that ships with the switch. Size the grounding wire to meet local and national installation requirements. Depending on the power supply and system, a 12 AWG to 6 AWG copper conductor is required for U.S. installations (for those installations, we recommend that you use commercially available 6 AWG wire). The length of the grounding wire depends on the proximity of the switch to proper grounding facilities.

**Note**

You automatically ground the AC power supplies when you connect them to a power source, but you cannot ground a 3-kW DC power supply. You must connect the chassis to the facility earth ground.

Planning for Power Requirements

To plan for the power requirements of a switch, you must determine each of the following:

Power requirements of the switch

Minimum number of power supplies required to power the switch and its components

Power mode to use and the number of additional power supplies required for that mode

You must also ensure that the circuit used for the switch is dedicated to the switch to minimize the possibility of circuit failure.

When you know the amount of power that is required for operations (available power) and redundancy (reserve power), you can plan for the required number of input power receptacles with reach of the switch location.

Power Modes Overview

You can configure one of the following power modes to either use the combined power provided by the installed power supply units (no power redundancy) or to provide power redundancy when there is a power loss:

Combined mode

This mode allocates the combined power of all power supplies to active power for switch operations. This mode does not allocate reserve power for power redundancy in case of power outages or power supply failures.

Power supply redundancy mode (N+1)

This mode allocates one power supply as a reserve power supply in case an available power supply fails. The remaining power supplies are allocated for available power. The reserve power supply must be at least as powerful as the most powerful power supply in the available pool to potentially replace the full power output of the failed power supply in the worst case. Because it is impossible to predict which power supply may fail, we recommend provisioning the system with power supplies of equal rating. This way the output of any power supply that fails can be replaced by the remaining power supplies.

For example, a system with four 3-kW power supplies in N+1 redundancy mode has a total of 12-kW. 9-kW are allocated to the available power pool and 3-kW are reserved. If any of the power supplies fail enough power is reserved that the remaining power supplies can still meet the 9-kW commitment.

Input grid redundancy mode (grid redundancy)

In this mode half of the power supply's output is allocated to the reserve power pool and half to the available power pool. This provides the system with enough reserve power in the case of 50% of the power supplies failing, as when a power grid fails. The system logically allocates the left two columns of PSU bays to Grid A and sums the output power of operational PSUs. It does the same for the right two columns (Grid B) and uses the minimum of the two as the available power pool. To utilize maximum power the sum of power supply outputs of Grid A and Grid B PSU bays must be equal.

For example, a system with four 3-kW PSUs in Grid A bays and three 3-kW PSUs in Grid B bays and in grid redundancy mode has 12-kW available from Grid A and 9-kW from Grid B. The minimum of the two grids is 9-kW so 9-kW is allocated to the available power pool and 9-kW are reserved. If either grid fails enough power is reserved that the remaining power supplies can still meet the 9-kW commitment. The output of the fourth PSU in Grid A is not considered in the calculations although it provides power.

Full redundancy mode

This mode supports both grid redundancy or N+1 redundancy. 50% of the power supply output is allocated to the reserve pool and the other 50% of the power supply outputs are allocated to the available power pool. The reserved power may be used to backup either single power supply failures or a grid failure.


For example, a system with six 3-kW power supplies in grid redundancy mode has a total of 18-kW. 9-kW are allocated to the available power pool and 9-kW are allocated to the reserve pool. If a grid failure occurs (half of the power supplies lose power) the full reserve power pool is available to meet the 9-kW commitment. Otherwise, as single power supplies fail power is allocated to the available pool from the remaining reserve power pool until the reserve power pool is exhausted.



Note Once a single power supply has failed in this mode, grid redundancy is no longer available.

Figure 2-1 shows how to connect power supplies in a Cisco MDS 9718 for grid redundancy

Figure 2-1 Cisco MDS 9718 Grid-PSU Connections

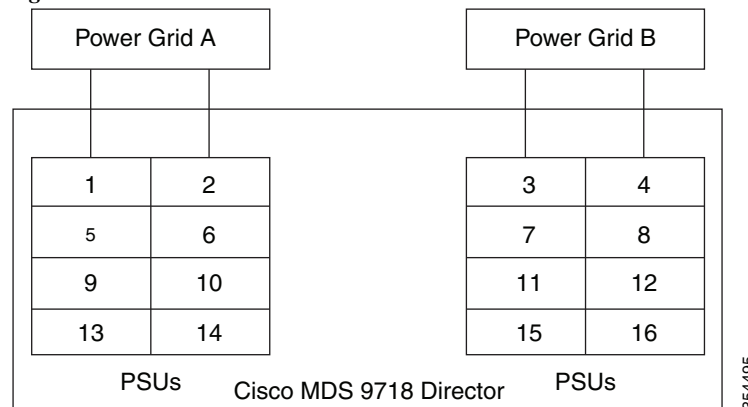

354495

Figure 2-2 shows how to connect power supplies in a Cisco MDS 9710 for grid redundancy

Figure 2-2 Cisco MDS 9710 Grid-PSU Connections


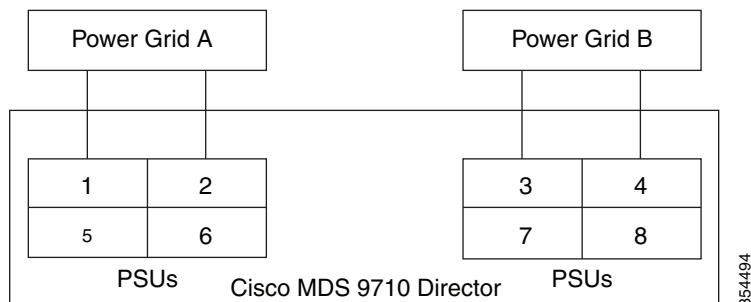


Figure 2-3 shows how to connect power supplies in a Cisco MDS 9706 for grid redundancy

Figure 2-3 Cisco MDS 9706 Grid-PSU Connections

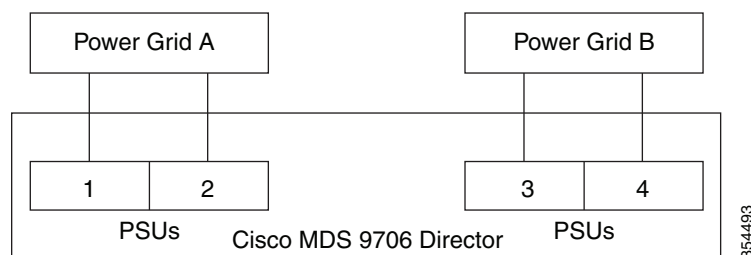

Rack and Cabinet Requirements

This section provides the requirements for the following type of racks, assuming an external ambient air temperature range of 32 to 104°F (0 to 40°C):

- [General Requirements for Open Four-Post Racks, page 2-71](#)
- [General Rack and Cabinet Requirements for Cisco MDS 9700 Series Directors, page 2-71](#)
- [Rack and Cabinet Requirements for the Cisco MDS 9718 Chassis, page 2-72](#)
- [Rack and Cabinet Requirements for the Cisco MDS 9710 Chassis, page 2-72](#)
- [Rack and Cabinet Requirements for the Cisco MDS 9706 Chassis, page 2-72](#)

General Requirements for Open Four-Post Racks

The rack must be a standard 19-inch four-post EIA rack, with mounting rails that conform to English universal hole spacing per section 1 of ANSI/EIA-310-D-1992. See the [Figure 2-3“Clearance Requirements for Cisco MDS 9700 Series Directors”](#) section on page 2-72 section.

General Rack and Cabinet Requirements for Cisco MDS 9700 Series Directors

You can install the following types of racks or cabinets for your switch:

- Standard perforated-doors cabinets
- Solid-walled cabinets with a roof fan module (bottom to top cooling)
- Standard open four-post Telco racks
- Standard open two post Telco racks

**Note**

Cisco MDS 9700 Series Directors are compatible with Cisco racks (such as Cisco R42612) and PDUs.

Use a standard 19 inch, four post Electronic Industries Alliance (EIA) cabinet or rack with mounting rails that conform to English universal hole spacing per section 1 of the ANSI/EIA-310-D-1992 standard.

The depth of a four post rack or a cabinet must be 24 to 32 inches (61.0 to 81.3 cm) between the front and rear mounting vertical rails.

Ensure that the airflow and cooling are adequate and there is sufficient clearance around the air vents on the switch, as described in [Appendix 6, “Technical Specifications.”](#)

The rack must have sufficient vertical clearance for the chassis and any desired clearance for the installation process. The shelf brackets are 2 RU, and they are built and installed so that they do not add up to the total chassis vertical clearance of 14 RU.

The front and rear doors of enclosed racks must have at least 60% open area perforation pattern.

Additionally, you must consider the following site requirements for the rack:

- Power receptacles must be located within reach of the power cords used with the switch.
 - AC power supplies
 - Power cords for 3-kW AC power supplies are 8 to 12 feet (2.5 to 4.3 m) long.
 - DC power supplies
 - Power cords for 3.0-kW DC power supplies are supplied and dimensioned by the customer.
 - HVAC/HVDC power supplies
 - Power cords for 3.5-kW HVAC/HVDC power supplies are 14 feet (4.26 m) long.
- Where necessary, have a seismic rating of Network Equipment Building Standards (NEBS) Zone 3 or Zone 4, per GR-63-CORE.

Rack and Cabinet Requirements for the Cisco MDS 9718 Chassis

To correctly install the switch in a cabinet that is located in a hot-aisle/cold-aisle environment, you should fit the cabinet with baffles to prevent exhaust air from recirculating into the chassis air intake. Work with your cabinet vendors to determine which of their cabinets meet the following requirements or see the Cisco Technical Assistance Center (TAC) for recommendations:

- The height of the rack or cabinet must accommodate the 25 RU (43.75 inches or 111.1 cm) height of the switch and its bottom support bracket.
- Minimum gross load rating of 2000 lb (907.2 kg) (static load rating) if supporting two switches.

Rack and Cabinet Requirements for the Cisco MDS 9710 Chassis

The rack must meet the following requirements:

- The minimum vertical rack space per chassis is 24.5 inches (62.2 cm) or 14 RU.
- The width between the mounting rails must be at least 17.75 inches (45.1 cm). For four-post EIA racks, this is the distance between the two front rails and rear rails.

To correctly install the switch in a cabinet that is located in a hot-aisle/cold-aisle environment, you should fit the cabinet with baffles to prevent exhaust air from recirculating into the chassis air intake. Work with your cabinet vendors to determine which of their cabinets meet the following requirements or see the Cisco Technical Assistance Center (TAC) for recommendations:

- The height of the rack or cabinet must accommodate the 14-RU (24.5 inches or 62.2 cm) height of the switch and its bottom support bracket.
- Minimum gross load rating of 2000 lb (907.2 kg) (static load rating) if supporting three switches.

Rack and Cabinet Requirements for the Cisco MDS 9706 Chassis

To correctly install the switch in a cabinet that is located in a hot-aisle/cold-aisle environment, you should fit the cabinet with baffles to prevent exhaust air from recirculating into the chassis air intake. Work with your cabinet vendors to determine which of their cabinets meet the following requirements or see the Cisco Technical Assistance Center (TAC) for recommendations:

- The height of the rack or cabinet must accommodate the 9 RU (15.75 inches or 40.0 cm) height of the switch and its bottom support bracket. The bottom support bracket ships as a part of the accessory kit for the switch.
- Minimum gross load rating of 2000 lb (907.2 kg) (static load rating) if supporting four switches.


Clearance Requirements for Cisco MDS 9700 Series Directors

You must provide adequate clearance between the chassis and any other rack, device, or structure so that you can properly install the chassis, route cables, provide airflow, and maintain the switch. Ensure that the following clearance requirements are met:

- 7 inches (17.78 cm) between the front of chassis and inside of cabinet.
- 34 inches (86.36 cm) [40 inches recommended (101 cm)] in front of the cabinet so that a fully loaded 34 inches (86.36 cm) chassis box can be moved.

- 2 inches (5.08 cm) for module handles.
- 3 inches (7.62 cm) between the rear of the chassis and the inside of the cabinet, that is, the perforated rear door (required for airflow in the cabinet if used).
- 25 inches (63.5 cm) outside of the cabinet to remove fabric modules.
- No clearance is required between the chassis and the sides of the rack or cabinet (no side airflow).
- Clearance required for cables that connect to as many as 400 ports (in addition to the cabling required for other devices in the same rack). These cables must not block access to any removable chassis modules or block airflow into or out of the chassis. Route the cables through the cable management frames on the left and right sides of the chassis.

Figure 2-4 illustrates the front, rear, and side clearance requirements for Cisco MDS 9700 Series Directors:

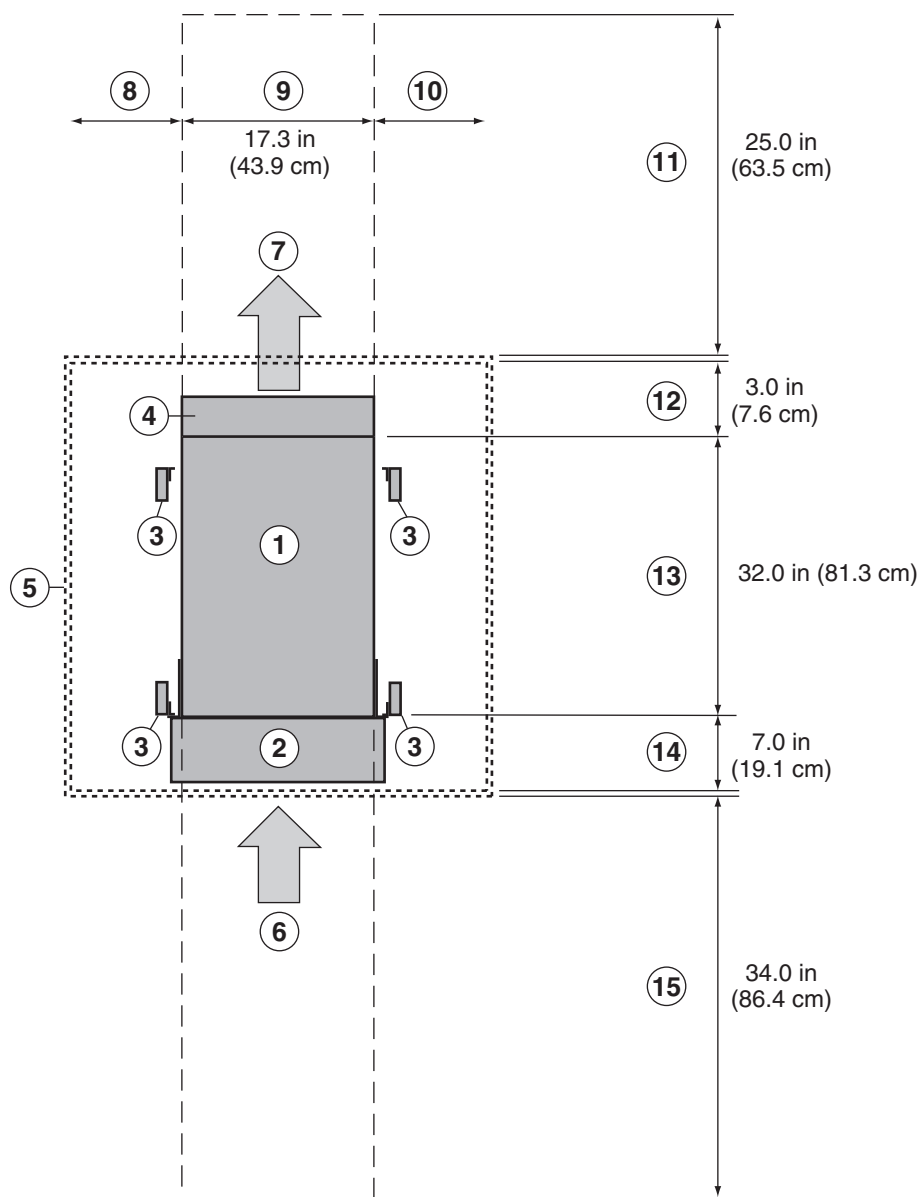Figure 2-4 Clearance Requirements for Cisco MDS 9700 Series Directors (Top View)

355403

Table 2-1 Cisco MDS 9700 Clearance Requirements

1	Chassis	9	Chassis width
2	Cable Management Frames	10	No right side clearance required (no airflow on right side)
3	Vertical rack-mount posts and rails	11	Rear service clearance required to replace fan trays and fabric modules
4	Area used for fan tray handles at the rear of the chassis (allow 2 inches [5 cm])	12	Airflow clearance area required at the rear of the chassis within the cabinet (if a cabinet is used)

Table 2-1 Cisco MDS 9700 Clearance Requirements

5	Nearest object or inside of cabinet (no side clearance required)	13	Chassis depth
6	Fibre Channel ports. Air intake from the cold aisle for all modules and power supplies	14	Clearance required between the front of the chassis and the inside of the cabinet (if used) or the edge of the cold aisle (if no cabinet) for the cable management frames and the optional front doors
7	Air exhaust to the hot aisle for all modules and power supplies	15	Front service clearance required for installing the chassis and replacing the modules on the front of the chassis
8	No left side clearance required (no airflow on left side)		

Rack-Mounting Guidelines

**Caution**

If the rack is on wheels, ensure that the brakes are engaged or the rack is otherwise stabilized.

**Caution**

If installing this kit in an EIA rack, attach the switch to all four rack-mounting rails; the EIA rails may not be thick enough to prevent flexing of the shelf brackets if only two rails are used.

Before Installing the Rack-Mount Support Brackets

Before installing the rack-mount support brackets for the Cisco MDS 9700 Series, check the contents of your kit. [Table 2-2](#) lists the contents of the shelf bracket kit.

Table 2-2 Contents of Rack-Mount Support Brackets Kit

Quantity	Part Description
2	Bottom support brackets
20	12-24 x 3/4-in. Phillips screws
20	M6 x 19 mm Phillips binder-head screws
20	10-32 x 3/4-inch screws

Installing and Removing the Brackets

This section provides information on how to install and remove brackets.

Before installing the shelf brackets, check the contents of your kit. [Table 2-3](#) lists the contents of the shelf bracket kit.

Table 2-3 **Contents of Shelf Bracket Kit**

Quantity	Part Description
2	Slider brackets
2	Shelf brackets
1	Crossbar
2	10-32 x 3/8-in. Phillips pan-head screws
16	12-24 x 3/4-in. Phillips screws
16	10-24 x 3/4-in. Phillips screws

Required Equipment


You need the following equipment for this installation:

- Number 2 Phillips screwdriver
- Tape measure and level (to ensure shelf brackets are level)

Installing the Cisco MDS 9700 Series Shelf Bracket Kit into a Rack

Figure 2-5 shows the installation of the Cisco MDS 9700 Series Shelf Bracket Kit into a four-post rack.

Figure 2-5 *Installing the Shelf Bracket Kit into a Rack*

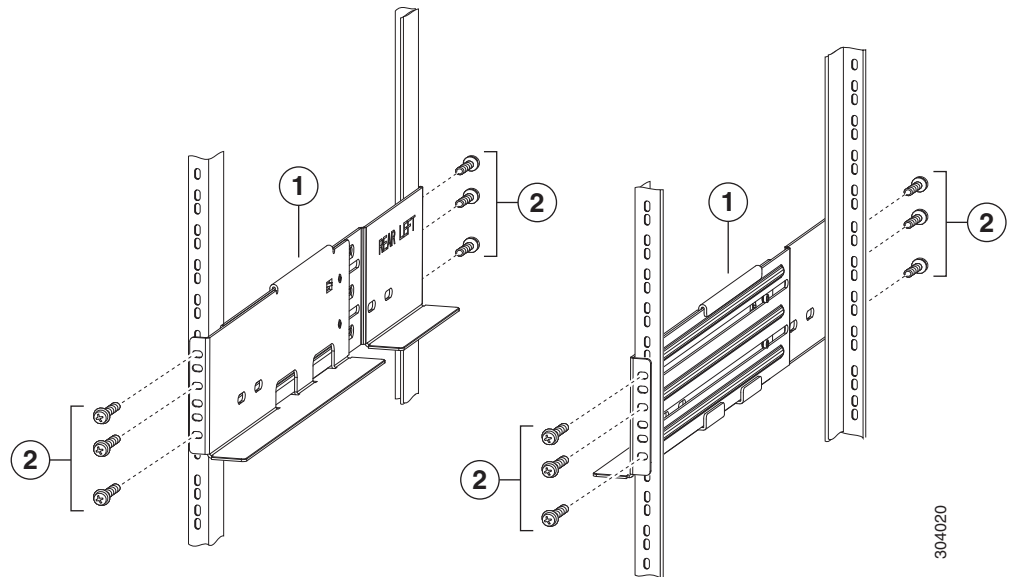

To install the shelf brackets in a rack, follow these steps:

-
- | | |
|---------------|--|
| Step 1 | Position a shelf bracket inside the rack-mounting rails. Align the screw holes at the front of the shelf bracket with the holes in the front rack-mounting rail, and then attach the shelf bracket to the front rack-mounting rail using a minimum of three (M6, 12-32 or 12-24) screws. |
| Step 2 | Align the screw holes at the back of the shelf bracket with the holes in the back rack-mounting rail, and then attach the shelf bracket to the back rack-mounting rail using a minimum three (M6, 12-32 or 12-24) screws. |
| Step 3 | Verify that the shelf brackets are at the same height (using the level or tape measure as desired). |
-

Installing the Switch on the Brackets

This section provides information on how to install the switch on the rack-mount support brackets and on the shelf brackets and includes the following subsections:

- [Installing the Switch on the Rack-Mount Support Brackets, page 2-78](#)
- [Installing the Switch on the Shelf Brackets, page 2-78](#)

Installing the Switch on the Rack-Mount Support Brackets

This section provides general instructions for installing the switch on top of the rack-mount support brackets. For detailed installation instructions, see the [“Rack-Mounting Guidelines” section on page 2-75](#).

**Warning**

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.

Statement 1017

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.

Statement 1030

**Note**

Before you install, operate, or service the system, see the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family* for important safety information.

To install the switch on top of the rack-mount support brackets, follow these steps:

- Step 1** Verify that the rack-mount support brackets are level and securely attached to the rack-mounting rails, the support rack-mount support brace is securely attached to the brackets, and the rack is stabilized.
- Step 2** Slide a mechanical lift under the switch and lift the switch up onto the rack-mount support brackets, ensuring it is squarely positioned.
- Step 3** Attach the switch to the rack-mounting rails. See the [“Required Tools and Equipment” section on page 3-102](#).

**Caution**

We recommend grounding the chassis, even if the rack is already grounded. There is a grounding pad with two threaded M4 holes on the chassis for attaching a grounding lug.

Installing the Switch on the Shelf Brackets

This section provides general instructions for installing the switch on top of the shelf brackets. For detailed installation instructions, see the [“Required Equipment” section on page 2-76](#).

The Cisco MDS 9700 Series Shelf Bracket Kit can be used to support the switch in a nonthreaded rack. This shelf bracket kit can be used as a permanent support when installing a Cisco MDS 9700 Series Director in a rack that meets the requirements listed in the [“Rack and Cabinet Requirements” section on page 2-70](#).

**Warning**

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.

Statement 1017

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.
Statement 1030

**Note**

Before you install, operate, or service the system, see the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family* for important safety information.

To install the switch on top of the shelf brackets, follow these steps:

- Step 1** Verify that the shelf brackets are level and securely attached to the rack-mounting rails, the crossbar is securely attached to the shelf brackets, and the rack is stabilized.
- Step 2** Slide the switch onto the shelf brackets, ensuring that it is squarely positioned.
- Step 3** Attach the Cisco MDS 9700 Series switch to the rack-mounting rails. Slide the clip nuts over the holes on the nonthreaded rails on the rack. These clip nuts provide the threading for the screws that will secure the chassis to the rack. Use the 12 10-32 x 1/2 inch screws provided in this shelf bracket kit to secure the chassis to the rack. See [“Required Equipment” section on page 2-76](#)

**Caution**

We recommend that grounding the chassis, even if the rack is already grounded. There is a grounding pad with two threaded M4 holes on the chassis for attaching a grounding lug.

Removing the Shelf Bracket Kit

The shelf bracket kit can be removed after the Cisco MDS 9700 Series switch has been installed in a two-post telco (only MDS 9706 Director) or four-post EIA rack, and the front rack-mount brackets are securely attached to the rack-mounting rails. For additional support in an EIA rack, ensure that the C brackets on the Cisco MDS 9710 Switch are attached to the rear rack-mounting rails.

To remove the shelf bracket kit, follow these steps:

- Step 1** Remove the screws fastening the slider brackets to the rear rack-mounting rails. Then slide the slider brackets out of the shelf brackets.
- Step 2** Remove the screws fastening the crossbar to the shelf brackets and remove the crossbar.
- Step 3** Remove the screws fastening the shelf brackets to the front rack-mounting rails. Then remove the shelf brackets from the rack.



Installing the Cisco MDS 9700 Series Multilayer Directors

This chapter describes how to install the Cisco MDS 9700 Series Multilayer Director switches and its components. This chapter includes the following topics:

- [Preparing for Installation, page 3-75](#)
- [Attaching Bottom-Support Rails to a Two-Post Rack, page 3-79](#)
- [Attaching Bottom-Support Rails to a Four-Post Rack, page 3-80](#)
- [Installing the Cisco MDS 9706 Chassis in a Two-Post Rack, page 3-85](#)
- [Installing the Cisco MDS 9710 and MDS 9718 Series Switch on a Four-Post Rack or Cabinet, page 3-90](#)
- [System Grounding, page 3-99](#)

Preparing for Installation

This section provides the following topics:

- [Unpacking and Inspecting the Switch, page 3-76](#)
- [Required Equipments, page 3-77](#)
- [Installation Guidelines, page 3-78](#)



Note

Before you install, operate, or service the system, read the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family* for important safety information.



Warning

IMPORTANT SAFETY INSTRUCTIONS

This warning symbol indicates danger. You are in a situation that could cause physical injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

SAVE THESE INSTRUCTIONS

**Warning**

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security.
Statement 1017

**Warning**

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.
Statement 1030

**Warning**

A readily accessible two-poled disconnect device must be incorporated in the fixed wiring.
Statement 1022

Unpacking and Inspecting the Switch

Before you install a new chassis, you need to unpack and inspect it to be sure that you have all the items that you have ordered and verify that the switch was not damaged during the shipment. If anything is damaged or missing, contact your customer representative immediately.

**Caution**

We recommend that you use a mechanical lift when the chassis is being moved or lifted. Fully loaded, Cisco MDS 9706 chassis can weigh up to 325 lb (147.5 kg), Cisco MDS 9710 chassis can weigh up to 449.5 lb (203.8 kg), and Cisco MDS 9718 chassis can weigh up to 923 lb (419 kg).

**Caution**

When handling switch components, wear an ESD strap and handle modules by the carrier edges only. An ESD socket is provided on the chassis. For the ESD socket to be effective, the chassis must be grounded either through the power cable, the chassis ground, or metal-to-metal contact with a grounded rack.

**Tip**

Keep the shipping container for use when moving or shipping the chassis in the future. The shipping carton can be flattened and stored with the pallet.

**Note**

If you purchased this product through a Cisco reseller, contact the reseller directly for technical support. If you purchased this product directly from Cisco Systems, contact Cisco Technical Support at this URL: http://www.cisco.com/en/US/support/tsd_cisco_worldwide_contacts.html.

**Note**

The switch is thoroughly inspected before shipment. If any damage occurred during transportation or any items are missing, contact your customer service representative immediately.

To inspect the shipment, follow these steps:

-
- Step 1** Compare the shipment to the equipment list provided by your customer service representative and ensure that you have received all items, including the following:
- 1 or 2 supervisor modules
 - 1 to 4, 8, or 16 switching modules depending on the Cisco MDS 9700 Series switch
 - Up to six crossbar fabric switching modules
 - 3 fan modules
 - 1 to 4, 8, or 16 power supplies depending on the Cisco MDS 9700 Series switch
 - Grounding lug kit
 - Mounting kit
 - ESD wrist strap
 - Cables and connectors
 - Cable management frames
 - Left and right side frames
 - Top frame
 - M4 x 12 mm flat-head Phillips screws (12)
 - Front door kit optional
 - Front door (1)
 - M3X8 mm pan-head screws (2)
- Step 2** Check for damage and report any discrepancies or damage to your customer service representative. Keep the following information ready:
- Invoice number of shipper (see packing slip)
 - Model and serial number of the damaged unit
 - Description of damage
 - Effect of damage on the installation
-

Required Equipments

You need the following items before beginning the installation:

- Number 1 and number 2 Phillips screwdrivers with torque capability
- 3/16-inch flat-blade screwdriver
- Tape measure and level
- ESD wrist strap or other grounding device
- Antistatic mat or antistatic foam
- Torque wrench and socket for the DC power supply lug nuts

- In addition to the grounding items provided in the accessory kit, you need the following items:
 - Grounding cable (6 AWG recommended), sized according to local and national installation requirements; the required length depends on the proximity of the Cisco MDS 9700 Series switch to proper grounding facilities.
 - Crimping tool large enough to accommodate girth of the DC lug
 - Wire-stripping tool

For the Cisco MDS 9700 Series, you need a mechanical lift to handle the weight of the fully-loaded chassis.

Installation Guidelines

Follow these guidelines when installing a Cisco MDS 9700 Series chassis.

- Plan your site configuration and prepare the site before installing the chassis. We recommend that you use the site planning tasks listed in [Appendix 8, “Site Planning and Maintenance Records.”](#)
- Ensure that there is adequate space around the switch to allow for servicing the switch and for adequate air flow. Air flow requirements are listed in [Appendix 6, “Technical Specifications”](#).
- Ensure that the air-conditioning meets the heat dissipation requirements listed in [Appendix 6, “Technical Specifications.”](#)
- Ensure that the rack meets the requirements listed in [Appendix 2, “Rack and Cabinet Requirements.”](#)
- Ensure that the site power meets the power requirements listed in [Appendix 6, “Technical Specifications.”](#) You can use an uninterruptible power supply (UPS) to protect against power failures.



Caution

Avoid UPS types that use ferroresonant technology. These UPS types can become unstable with systems such as the Cisco MDS 9000 Family, which can have substantial current draw fluctuations because of fluctuating data traffic patterns.

- Ensure that circuits are sized according to local and national codes. For North America:
 - The 3000-W AC power supplies require a 20-A circuit.

If you are using 200/240 VAC power sources in North America, the circuits must be protected by two-pole circuit breakers.



Caution

To prevent loss of input power, ensure that the total maximum loads on the circuits supplying power are within the current ratings of the wiring and breakers.

- Record your installation and configuration information as you work. See [Appendix 8, “Site Planning and Maintenance Records.”](#)

- Use the following screw torques when installing the switch:
 - Captive screws: 4 in-lb
 - M3 screws: 4 in-lb
 - M4 screws: 12 in-lb
 - M6 screws: 20 in-lb
 - 12-24 screws: 30 in-lb
 - 10-20 screws: 22 in-lb
-

Attaching Bottom-Support Rails to a Two-Post Rack

The bottom-support rails support the weight of the switch chassis in the rack or cabinet. To maximize the stability of the rack, you must attach these rails at the lowest possible rack unit (RU).



Note

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
 - When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
 - If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
-


Before You Begin

Before you can install the bottom support rails for the chassis, you must do the following:

- Verify that a two-post rack is installed and secured to the concrete sub floor (see “Installing a Rack or Cabinet”).
- If any other devices are stored in the rack or cabinet, verify that they are located below where you plan to install the switch. Also, verify that lighter devices in the same rack are located above where you plan to install this switch.
- Verify that the two-post bottom-support rails kit was ordered and shipped with the chassis.

Statement 1006

- Step 1** Position one of the two bottom-support rails at the lowest possible RU in the rack or cabinet. Be sure there is at least 9 RU of vertical space above the rails to install the chassis.
- Step 2** Use a manual Phillips torque screwdriver to attach the bottom-support rail to the rack using four M6 x 19 mm or 12-24 x 3/4 inch screws and tighten each screw to 40 in. lbs (4.5 N.m) of torque.

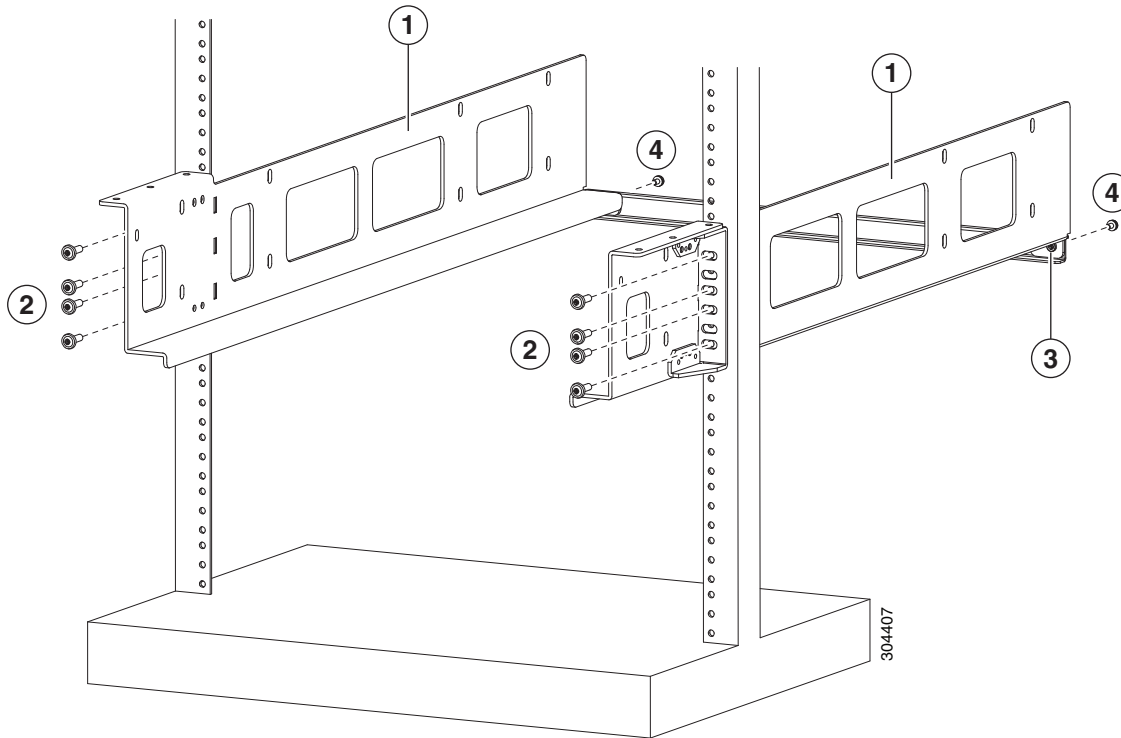Figure 3-1 Attaching Bottom-Support Rails to a Rack

1	Adjustable bottom-support rails	3	Crossbar aligned to the lower back of both rails
2	M6 x 19 mm (or 12-24 x 3/4 in.) Phillips screws 3(6 to 8 per rail)	4	M4 x 8 mm screws (1 for each of two ends of the crossbar)

Step 3 Repeat Steps 1 and 2 to attach the other bottom-support rail to the rack.

**Note**

Make sure that the two bottom-support rails are level with one another. If they are not level, adjust the higher rail down to the level of the lower rail.

Step 4 Align the crossbar to the lower back of the two bottom-support rails and use two M4 x 8 mm screws to attach it to each rail (one screw for each rail). See Callouts 3 and 4 in [Figure 3-1](#) for the placement of the crossbar and its screws.

When the bottom-support rails are installed at the lowest possible RU and are level, you are ready to install the chassis in the rack or cabinet.

Attaching Bottom-Support Rails to a Four-Post Rack

The bottom-support rails support the weight of the switch chassis in the rack or cabinet. To maximize the stability of the rack, you must attach these rails at the lowest possible rack unit (RU).

**Note**

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

Statement 1006**Before You Begin**


Before you can install the bottom support rails for the chassis, you must do the following:

- Verify that a four-post rack or cabinet is installed and secured to the concrete subfloor (see “[Rack and Cabinet Requirements, page 2-70](#)”).
- If any other devices are stored in the rack or cabinet, verify that they are located below where you plan to install the switch. Also, verify that lighter devices in the same rack are located above where you plan to install this switch.
- Verify that the bottom-support rails kit is included in the switch accessory kit (Unpack and inspect the chassis shipment for completeness and damage).


Step 1

Position one of the two adjustable bottom-support rails at the lowest possible RU in the rack or cabinet and adjust the length of the rail so that it stretches from the outer edges of the front and rear vertical mounting rails. Be sure there is at least 9 RU of vertical space above the rails to install the chassis.

You can expand the rail so that its mounting brackets are spaced between 24 to 32 inches (61.0 to 81.3 cm).

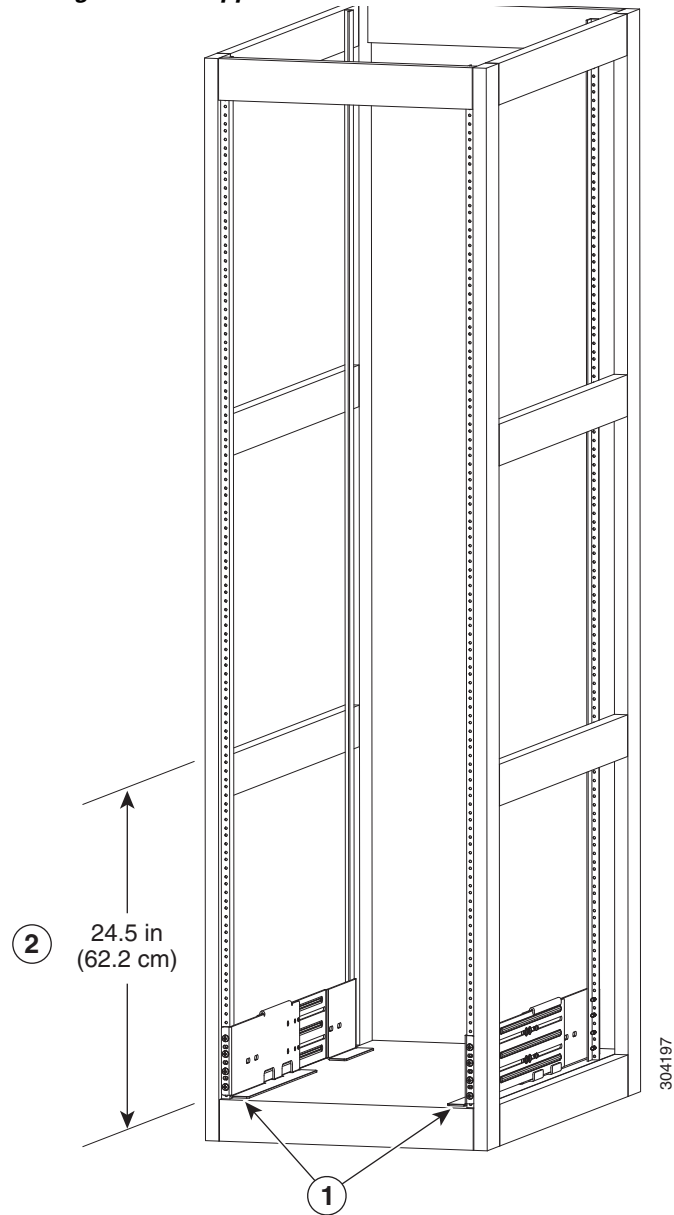
Figure 3-2 Positioning Bottom-Support Rail - Cisco MDS 9710 Chassis

1	Position two bottom-support rails at the lowest RU on the rack.	2	Allow at least 24.5 inches (62.2 cm) (14 RU) for each chassis.
----------	---	----------	--

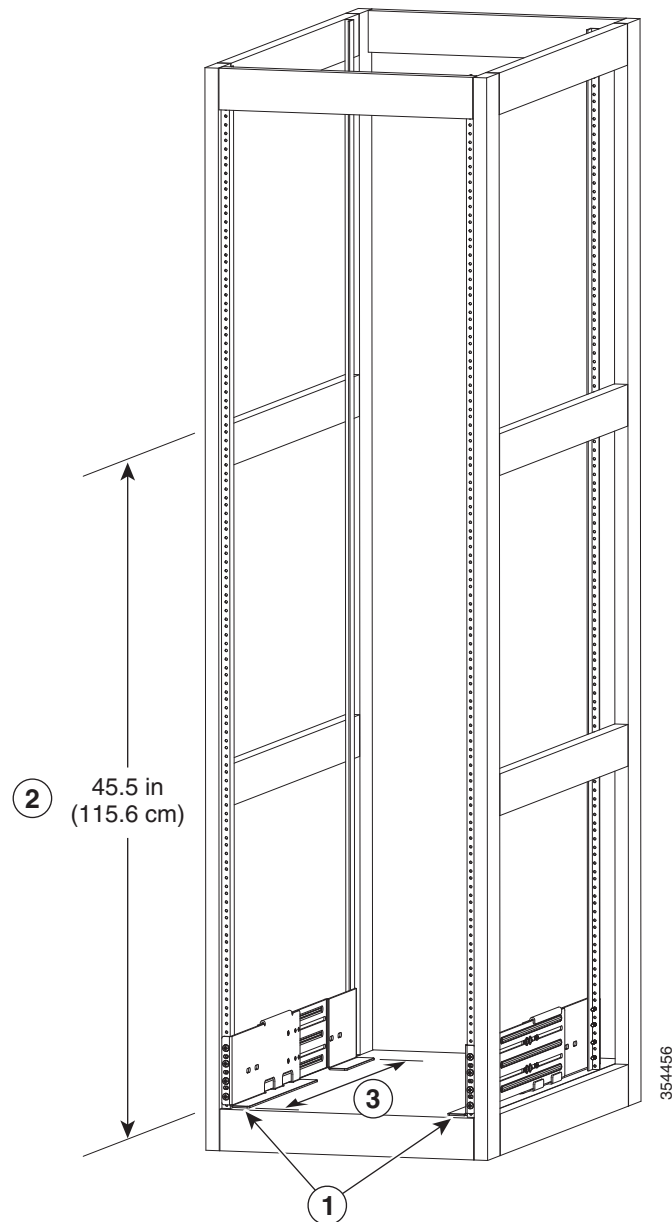
Figure 3-3 Positioning Bottom-Support Rail - Cisco MDS 9718 Chassis

1 Position two bottom-support rails at the lowest RU on the rack.	2 Allow at least 45.5 inches (115.6 cm) (26 RU) for each chassis.
--	--

Step 2 Use a manual Phillips torque screwdriver to attach the bottom-support rail to the rack using at least three or four M6 x 19 mm or 12-24 x 3/4 inch screws for each end of the rail (using a total of 6 to 8 screws for the rail as shown [Figure 3-4](#)) and tighten each screw to 40 in. lbs (4.5 N.m) of torque.

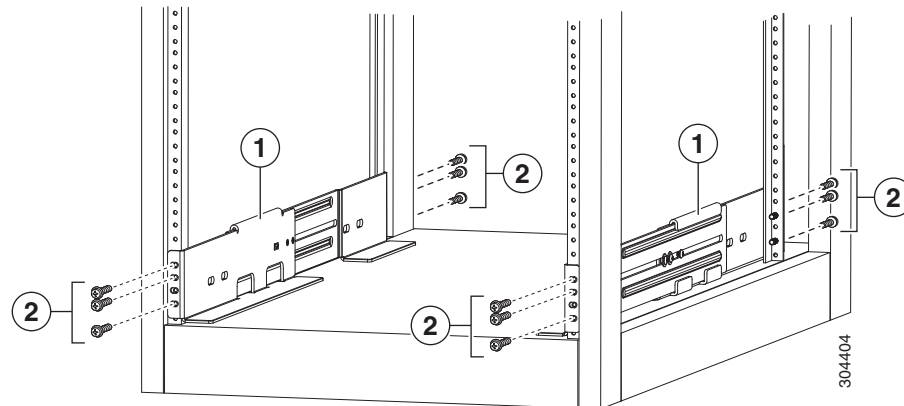Figure 3-4 Attaching Bottom-Support Rails to a Rack - Cisco MDS 9710 Chassis

1 Adjustable bottom-support rails (2)	2 M6 x 19 mm (or 12-24 x 3/4 in.) Phillips screws (6 to 8 per rail).
---------------------------------------	--

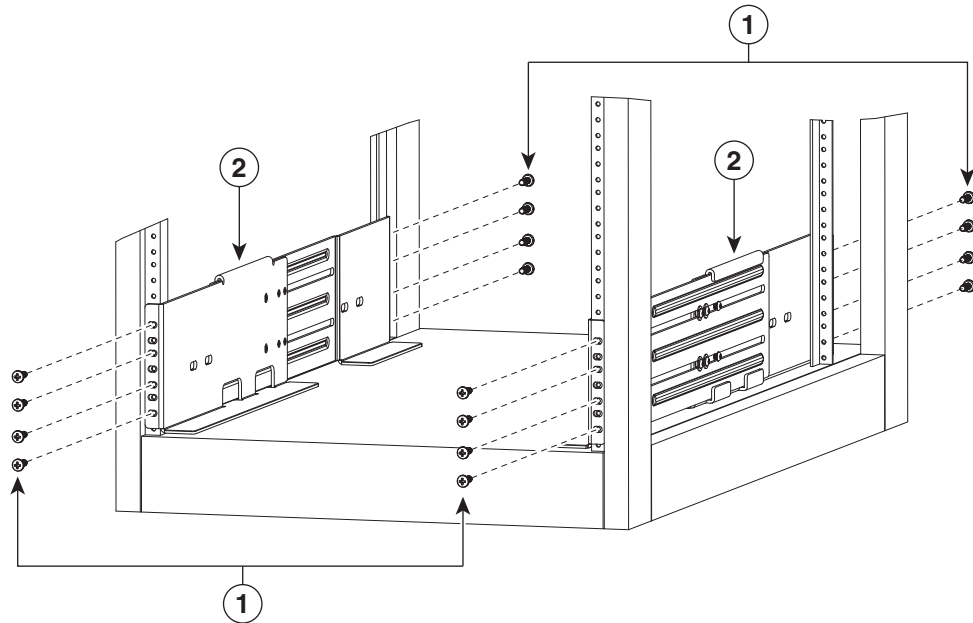Figure 3-5 Attaching Bottom-Support Rails to a Rack - Cisco MDS 9718 Chassis

1 M6 x 19 mm (or 12-24 x 3/4 in.) Phillips screws (8 per rail)	2 Adjustable bottom-support rails (2)
--	---------------------------------------

**Note**

At least three of the screw holes on each end of the bottom-support rail align to the mounting rail. Use at least three screws (four if possible) on each end of each bottom support rail.

- Step 3** Repeat Step 1 and Step 2 to attach the other bottom-support rail to the rack. The other rail/bracket need to be flipped 180 degrees and installed to the other side of the rack because both the left and right sides are the same rail/bracket.

**Note**

Make sure that the two bottom-support rails are level with one another. If they are not level, adjust the higher rail down to the level of the lower rail.

When the bottom-support rails are installed at the lowest possible RU and are level, you are ready to install the chassis in the rack or cabinet.

Installing the Cisco MDS 9706 Chassis in a Two-Post Rack

Before You Begin

- Verify that the chassis shipment is complete and undamaged.
- Verify that a two-post rack is installed and secured to the subfloor.

**Warning**

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048

- Verify that the bottom-support rails have been attached to the lowest possible RU in the rack or cabinet and there is 9 RU (15.75 inches [40.0 cm]) of space above the rails to install the chassis.
- If there are other devices in the rack, verify that the devices that are heavier than this chassis are installed below where you are going to install the chassis and lighter devices are installed above where you are going to install the chassis.
- Verify that the data center ground is accessible where you are installing the chassis.
- Verify that you have the following tools and equipments:
 - Mechanical lift capable of lifting the full weight of the chassis and its installed modules

**Note**

Fully loaded, the Cisco MDS 9706 chassis can weigh up to 325 lb (147.5 kg). You can lighten the chassis for easier moving by removing its power supplies, fan modules, and fabric modules. To determine the full weight of the chassis and the appropriate weight rating for the mechanical lift, see [Appendix 6, “Technical Specifications”](#).

**Caution**

You must use a mechanical lift or floor jack to elevate a switch weighing over 120 pounds (55 kg).

- Manual Phillips-head torque screwdriver

**Note**

You should also have at least two persons to push the chassis when you slide it onto the rack.



Note

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack

Step 1

If you need to make the chassis as light as possible for moving, you can optionally remove the fabric modules, fan modules, and power supplies.

- To remove a power supply, follow these steps:
 - a. Push and hold the release handle on the power supply to the left.
 - b. Pull the power supply about two inches (about 5 cm) out of the chassis.
 - c. Place one hand under the power supply to support its weight and pull the power supply out of the chassis.
 - d. Place the power supply on an antistatic surface.
- To remove a fan module, follow these steps:
 - a. Unscrew the four captive screws on the front of the fan module (one captive screw in each corner of the front of the fan module).
 - b. Hold both handles on the fan module with both of your hands and pull the fan module out of the chassis.
 - c. Place the fan module on an antistatic surface.
- To remove a fabric module, follow these steps:



Note

Before you can remove a fabric module, you must remove the fan module that is installed in front of it.

- a. Press the lever eject button found in the middle of the front of the module.
- b. Rotate both of the levers away from the fabric module.
- c. When the other end of each lever is no longer holding onto the chassis, pull the two levers to slide the module a couple inches out of the chassis.
- d. Rotate the two levers back to the fabric module. Each lever will click when locked in place.
- e. Place one hand on the front of the module and place your other hand under the module to support its weight.
- f. Slide the module out of the chassis and place the module on an antistatic surface.

Step 2

Load the chassis onto a mechanical lift or floor jack as follows:

- a. Position the mechanical lift next to the shipping pallet that holds the chassis.
- b. Elevate the lift platform to the level of the bottom of the chassis (or no more than 1/4 inch [0.635 cm] below the bottom of the chassis).

- c. Use two persons to slide the chassis fully onto the lift so that the side of the chassis touches or is close to the vertical rails on the lift. Make sure that the front and rear of the chassis are unobstructed so you can easily push the chassis into the rack.

**Warning**

To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules (such as power supplies, fans, or cards); these types of handles are not designed to support the weight of the unit. Statement 1032

**Caution**

To lift the chassis, use a mechanical lift. Do not use the handles on the side of the chassis (the handles are not rated for lifting over 200 pounds [91 kg]). Use the side handles for only repositioning the chassis after it is already on the mechanical lift or in the rack or cabinet.

Step 3 Use the mechanical lift to move and align the rear of the chassis to the front of the rack or cabinet. Make sure that the bottom of the chassis is elevated to the height of the bottom-support rails or no more than 1/4 inch (0.6 cm) above the rails.

Step 4 Push the chassis halfway onto the rack or cabinet.

Use two persons to push the chassis onto the bottom-support rails. Push the lower half of the front side of the chassis so that the back side enters the rack first, and push until the chassis is halfway onto the rack (see the following figure). Ensure that the chassis does not get caught on any of the expansion edges of the bottom-support rail.

Figure 3-6 Moving a Chassis onto a Rack or Cabinet - Cisco MDS 9706 Chassis

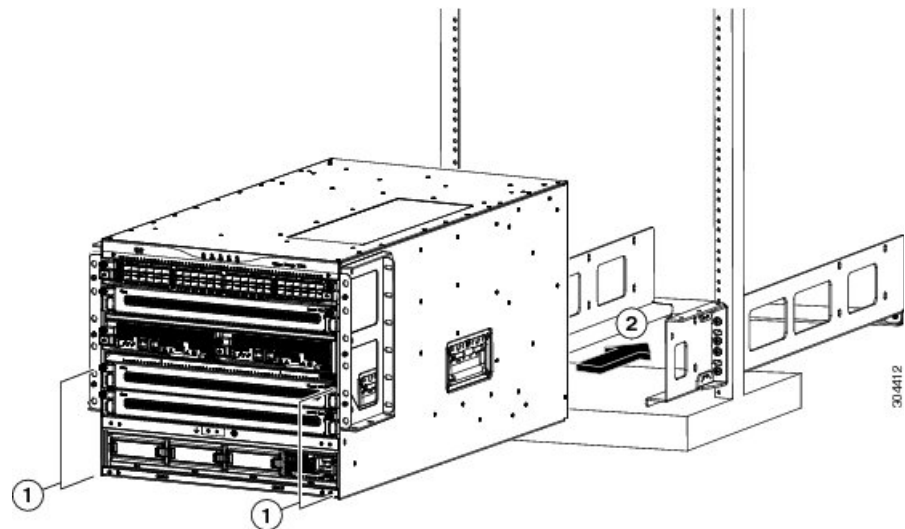


Figure 3-7

<p>1 Push the sides of the lower half of the front side of the chassis.</p>	<p>2 Push the chassis into the rack until its mounting bracket touches the vertical mounting rails on the rack.</p>
--	--

**Tip**

To adjust the placement of the chassis on the bottom-support rails, you can use the handles on the sides of the chassis.


- Step 5** If the mechanical lift is raised above the height of the bottom-support rails, gently lower it to the level of the rails or no more than 1/4 inch (0.6 cm) below the rails.

This action helps to prevent the bottom of the chassis from getting caught on the bottom expansion edges of the bottom-support rails.

- Step 6** Push the chassis all the way onto the rack so that the vertical mounting brackets on the chassis come in contact with the vertical mounting rails on the rack.

- Step 7** Use seven M6 x 19 mm or 24 x 3/4-inch screws to attach each of the two vertical mounting brackets on the chassis to the two vertical mounting rails on the rack (total of 14 screws). See [Figure 3-8](#).

Figure 3-8 Attaching the Chassis to the Rack

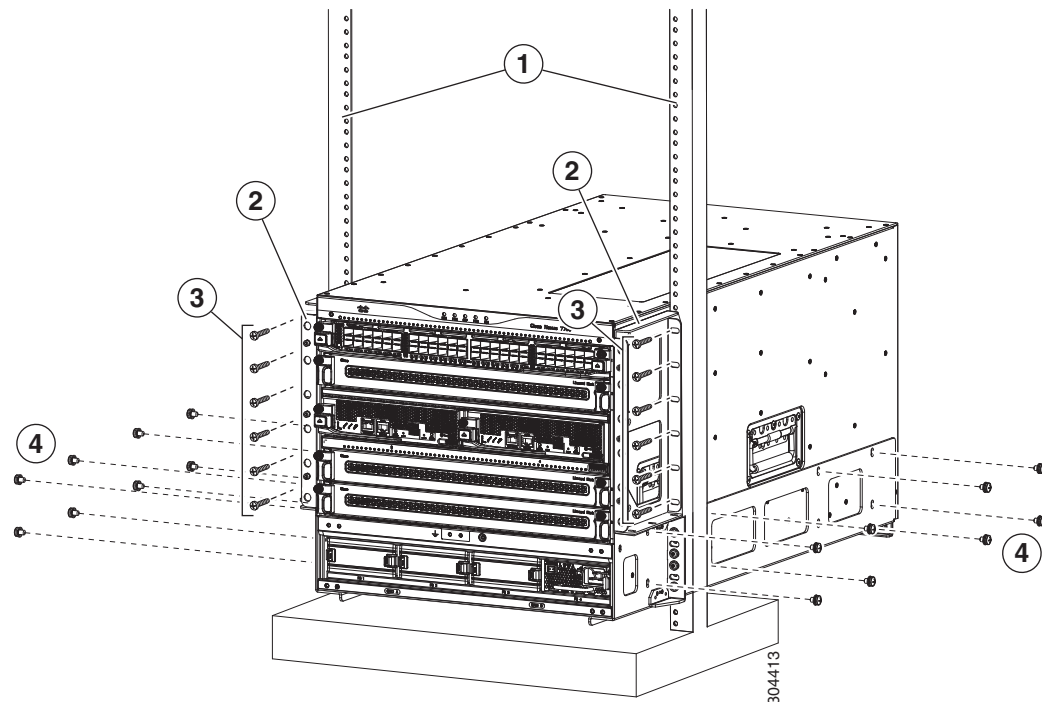

1	Vertical mounting rails on the rack	3	Six M6 x 19 mm or 10-24 x 3/4 in. Phillips screws used to attach each side bracket to a front mounting rail (use a total of 12 screws)
2	Mounting brackets for two-post racks	4	Eight M6 x 10 mm screws used to attach each bottom support rail to the chassis (use a total of 16 screws for both rails)

- Step 8** Use eight M6 x 10 mm screws to attach the bottom-support rails to the chassis (use a total of 16 screws for both bottom support rails). See [Figure 3-8](#).

- Step 9** If you removed any fabric modules before moving the chassis, replace each one in the chassis as follows:

- a. Holding the front of the fabric module (the side with the LEDs), turn the module so that the front side is vertical.

**Note**

The top of the module has an alignment bracket running from the rear to the front. The electrical connectors will be at the bottom.

- b. Align the rear of the fabric module to an open fabric slot and insert the bracket on top of the module into the track at the top of the slot.

**Note**

If there are only three fabric modules to install, install them in fabric slots 1, 3, and 5, and be sure that there are blank filler plates installed in the open slots.

- c. Slide the module part way into the slot.
- d. Press the ejector button on the front of the module, to release the levers from the front of the module.
- e. Rotate the levers away from the front of the module and hold them while sliding the module all the way into the slot.
- f. Simultaneously rotate both levers to the front of the module. They click when locked to the front of the module.

Step 10 If you have removed any fan modules before moving the chassis, reinstall each one in the chassis as follows:

- a. Holding each of the two handles on the fan module with your two hands, align the fan module to an open fan module slot.

**Note**

The two alignment brackets on top of the fan module should align to two tracks at the top of the slot.

- b. Slide the fan module into the slot until the front of the fan module comes in contact with the rear of the chassis.

**Note**

The two alignment pins on the fan module (on the top and one on the bottom) should go into holes in the chassis and the four captive screws on the fan module should align to screw holes in the chassis.

- c. Screw in the four captive screws to the chassis and tighten each screw to 8 in-lb (0.9 N·m).

Step 11 If you have removed any power supplies before moving the chassis, reinstall each one as follows:

- a. Determine which power supply slots to fill and ensure that each of those slots is open.

If you are using the combined or power supply redundancy mode, you can use any slot for the power supply that you are installing.

If you are using the input-source or full redundancy mode, you must group the power supplies that are to be connected to the same grid on either the left or right power supply slots in the chassis (that is, place the power supplies for grid A in slots 1 or 2 or both slots and place the power supplies for grid B in slots 3 or 4 or both slots).

For information on the power supplies supported by Cisco MDS 9700 series switches, see the [Power Supply](#) section under the Product Overview chapter.

- b. Place one hand on the front of the power supply and place your other hand under it to support its weight.
- c. Align the power supply to an open power supply slot.

**Note**

The alignment bracket on top of the power supply should align to a track at the top of the slot and a bar at the bottom of the power supply should be guided by a track at the bottom of the slot.

Step 12 Slide the power supply all the way into the slot until its release handle clicks and the module stops.

Installing the Cisco MDS 9710 and MDS 9718 Series Switch on a Four-Post Rack or Cabinet

This section is applicable to the Cisco MDS 9710 and Cisco MDS 9718 switches.

Before You Begin

- Verify that the chassis shipment is complete and undamaged.
- Verify that a rack or cabinet is installed and secured to the subfloor.

**Warning**

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048

- Verify that the bottom-support rails have been attached to the lowest possible RU in the rack or cabinet and there is 14 RU (24.5 inches [62.2 cm]) of space above the rails to install the chassis.
- For Cisco MDS 9718 chassis, verify that the bottom-support rails have been attached to the lowest possible RU in the rack or cabinet and there is 25 RU (43.75 inches [111 cm]) of space above the rails to install the chassis.
- If there are other devices in the rack, verify that the devices that are heavier than this chassis are installed below where you are going to install the chassis and lighter devices are installed above where you are going to install the chassis.
- Verify that the data center ground is accessible where you are installing the chassis.
- Verify that you have the following tools and equipment:
 - Mechanical lift capable of lifting the full weight of the chassis and its installed modules

**Caution**

If the rack is on wheels, ensure that the brakes are engaged or that the rack is otherwise stabilized. If connecting a Cisco MDS 9700 Series switch to a 110-VAC power system, ensure that sufficient power is provided to meet the chassis power requirements for the number of modules installed.

**Caution**

All power supplies must be grounded. The receptacles of the AC power cables used to provide power to the chassis must be the grounding type, and the grounding conductors should connect to protective earth ground at the service equipment. For a Cisco MDS 9700 Series switch with a DC power supply, a grounding cable must be connected to the terminal block.

When connected to 220 VAC, the 3000-W AC power supplies DS-CAC97-3KW for the Cisco MDS 9700 Series switch are designed to provide an output power of 3000 W to power the modules and fans. When connected to a 110 VAC power system, the power supply provides approximately 1450 W. In this case, and if the power supplies are used in redundant rather than combined mode, they might not provide adequate power, depending on the number of modules loaded in the chassis.

If a 110-VAC input is chosen, a 110-VAC power cord (CAB-7513AC=) must be ordered separately.

**Warning**

When installing or replacing the unit, the ground connection must always be made first and disconnected last. Statement 1046

**Note**

Fully loaded, the Cisco MDS 9710 chassis can weigh up to 449.5 lb (203.8 kg), and the Cisco MDS 9718 chassis can weigh up to 923 lb (419 kg). You can lighten the chassis for easier moving by removing its power supplies, fan modules, and fabric modules. To determine the full weight of the chassis and the appropriate weight rating for the mechanical lift, see “Weights and Quantities for the Chassis, Modules, Fan Modules, and Power Supplies”.

**Caution**

You must use a mechanical lift or floor jack to elevate a switch weighing over 120 pounds (55 kg).

- Phillips-head torque screwdriver
- Bottom-support rails kit (shipped with the accessory kit)

Part of this kit has already been used to install the bottom-support rails. You should still have 14 12-24 x 3/4-inch or M6 x 19 mm Phillips screws, which are required for attaching the chassis to the rack.

**Note**

You should also have at least two persons to push the chassis when you slide it onto the rack.

**Note**

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack

Statement 1006

Installing the Cisco MDS 9700 Series Switch on a Four-Post Rack or Cabinet

- Step 1** If you need to make the chassis as light as possible for moving, you can optionally remove the fabric modules, fan modules, and power supplies.

- To remove a power supply, follow these steps:
 - a. Slide the handle in the middle of the ejector lever towards the end of the lever and rotate the lever away from the power supply.
 - b. Pull the power supply a couple of inches (about 5 cm) out of the chassis.
 - c. Place one hand under the power supply to support its weight and pull the power supply out of the chassis.
 - d. Place the power supply on an antistatic surface.
- To remove a fan module, follow these steps:
 - a. Unscrew the four captive screws on the front of the fan module (one captive screw in each corner of the front of the fan module).
 - b. Hold both handles on the fan module with both of your hands and pull the fan module out of the chassis.
 - c. Place the fan module on an antistatic surface.
- To remove a fabric module, follow these steps:

**Note**

Before you can remove a fabric module, you must remove the fan module that is installed in front of it.

- a. Press the lever eject button found in the middle of the front of the module.
- b. Rotate both of the levers away from the fabric module.
- c. When the other end of each lever is no longer holding onto the chassis, pull the two levers to slide the module a couple inches out of the chassis.
- d. Rotate the two levers back to the fabric module. Each lever will click when locked in place.
- e. Place one hand on the front of the module and place your other hand under the module to support its weight.
- f. Slide the module out of the chassis and place the module on an antistatic surface.

Step 2 Load the chassis onto a mechanical lift or floor jack as follows:

- a. Position the mechanical lift next to the shipping pallet that holds the chassis.
- b. Elevate the lift platform to the level of the bottom of the chassis (or no more than 1/4 inch [0.635 cm] below the bottom of the chassis).
- c. Use two persons to slide the chassis fully onto the lift so that the side of the chassis touches or is close to the vertical rails on the lift. Make sure that the front and rear of the chassis are unobstructed so you can easily push the chassis into the rack.

**Warning**

To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules (such as power supplies, fans, or cards); these types of handles are not designed to support the weight of the unit. Statement 1032

**Caution**

To lift the chassis, use a mechanical lift. Do not use the handles on the side of the chassis (the handles are not rated for lifting over 200 pounds [91 kg]). Use the side handles for only repositioning the chassis after it is already on the mechanical lift or in the rack or cabinet.


- Step 3** Use the mechanical lift to move and align the rear of the chassis to the front of the rack or cabinet. Make sure that the bottom of the chassis is elevated to the height of the bottom-support rails or no more than 1/4 inch (0.6 cm) above the rails.

**Note**

The Cisco MDS 9700 Series switch has the front-to-back cold-aisle and hot-aisle air flow design. We recommend that you maintain a minimum air space of 7 inches (30.5 cm) at the chassis front and back air vents.


- Step 4** Push the chassis halfway onto the rack or cabinet.
- Use two persons to push the chassis onto the bottom-support rails. Push the lower half of the front side of the chassis so that the back side enters the rack first, and push until the chassis is halfway onto the rack. See [Figure 3-9](#). Ensure that the chassis does not get caught on any of the expansion edges of the bottom-support rail.

Figure 3-9 Moving a Chassis onto a Rack or Cabinet - Cisco MDS 9710 Chassis

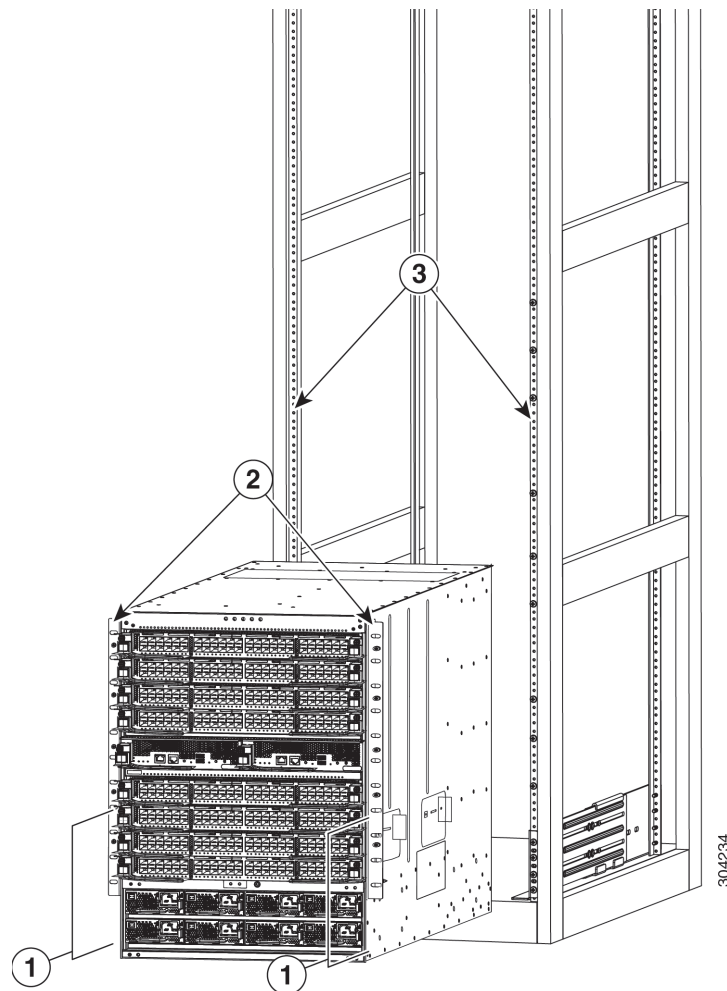

1	Push the sides of the lower half of the front side of the chassis.	3	Rack vertical mounting rails.
2	Chassis mounting brackets.		

Figure 3-10 Moving a Chassis onto a Rack or Cabinet - Cisco MDS 9718 Chassis

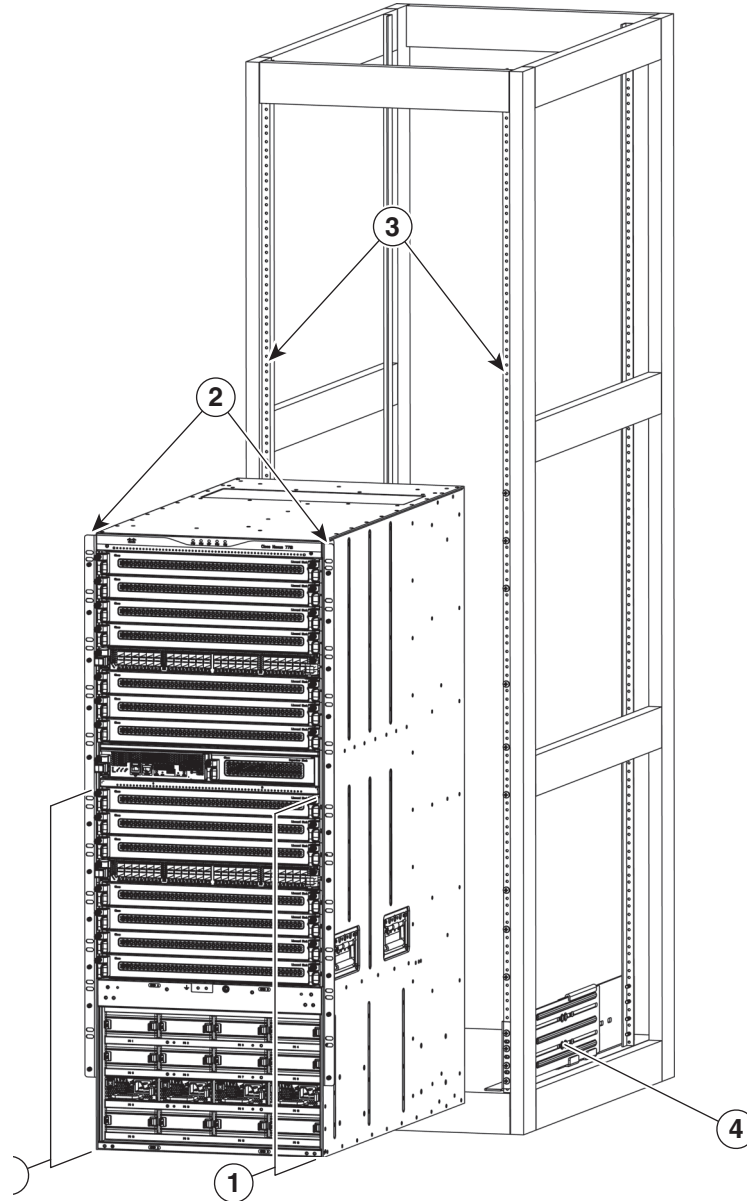


1	Push the sides of the lower half of the front side of the chassis (do not push on any of the modules or module handles).	3	Rack vertical mounting rails.
2	Chassis mounting brackets.	4	Bottom support rails


**Tip**

To adjust the placement of the chassis on the bottom-support rails, you can use the handles on the sides of the chassis.

- Step 5** If the mechanical lift is raised above the height of the bottom-support rails, gently lower it to the level of the rails or no more than 1/4 inch (0.6 cm) below the rails.
- This action helps to prevent the bottom of the chassis from getting caught on the bottom expansion edges of the bottom-support rails.
- Step 6** Push the chassis all the way onto the rack so that the vertical mounting brackets on the chassis come in contact with the vertical mounting rails on the rack.
- Step 7** Use seven M6 x 19 mm or 24 x 3/4-inch screws to attach each of the two vertical mounting brackets on the chassis to the two vertical mounting rails on the rack (total of 14 screws). See [Figure 3-11](#).

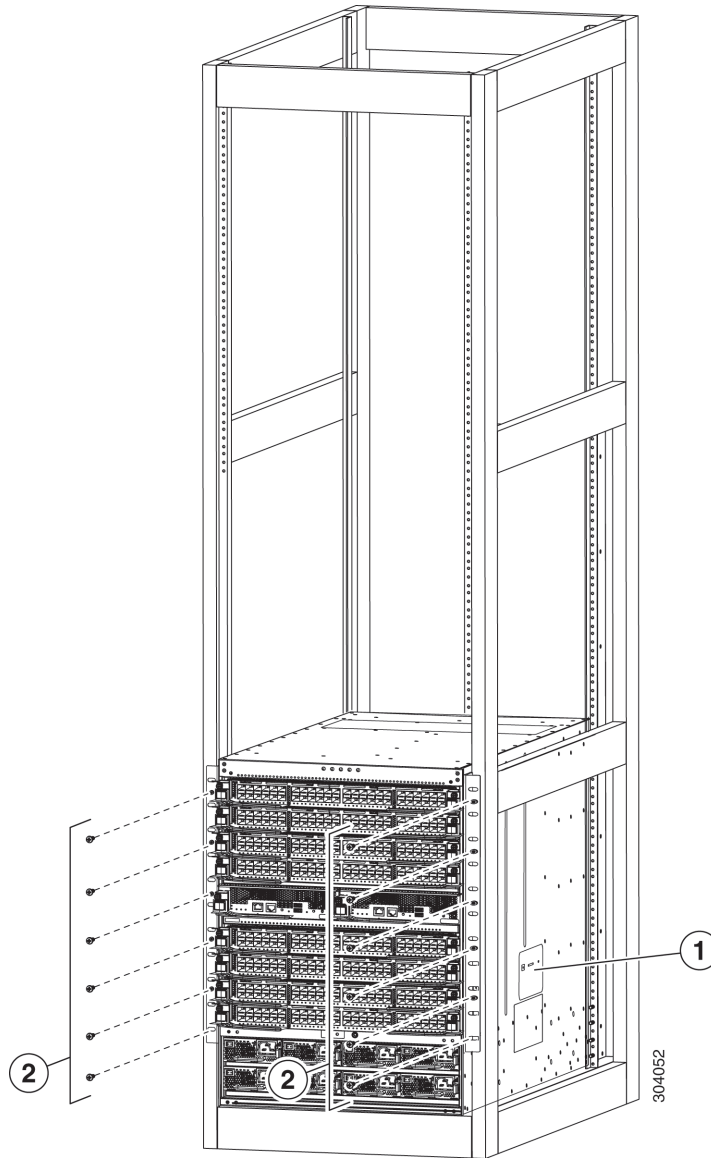Figure 3-11 Attaching the Chassis to the Rack - Cisco MDS 9710 Chassis

1	Handles used to adjust the chassis placement	2	Seven M6 x 19 mm or 10-24 x 3/4 in. Phillips screws used to attach each side bracket to a front mounting rail (use a total of 12 screws)
----------	--	----------	--

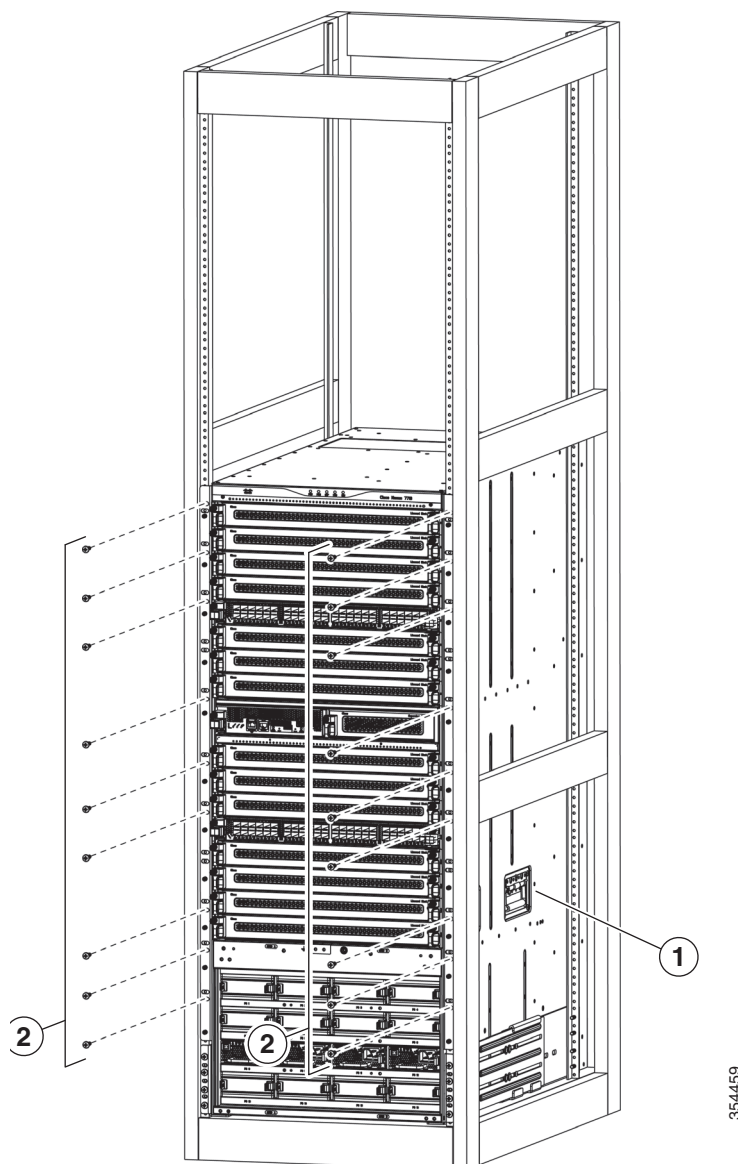Figure 3-12 Attaching the Chassis to the Rack - Cisco MDS 9718 Chassis

1	Handles used to adjust the chassis placement	2	Nine M6 x 19 mm or 10-24 x 3/4 in. Phillips screws used to attach each side bracket to a front mounting rail (use a total of 18 screws)
---	--	---	---

- Step 8** If you removed any fabric modules before moving the chassis, replace each one in the chassis as follows:
- Holding the front of the fabric module (the side with the LEDs), turn the module so that the front side is vertical.

**Note**

The top of the module has an alignment bracket running from the rear to the front. The electrical connectors will be at the bottom.

- b. Align the rear of the fabric module to an open fabric slot and insert the bracket on top of the module into the track at the top of the slot.

**Note**

If there are only three fabric modules to install, install them in fabric slots 1, 3, and 5, and be sure that there are blank filler plates installed in the open slots.

- c. Slide the module part way into the slot.
- d. Press the ejector button on the front of the module, to release the levers from the front of the module.
- e. Rotate the levers away from the front of the module and hold them while sliding the module all the way into the slot.
- f. Simultaneously rotate both levers to the front of the module. They click when locked to the front of the module.

Step 9 If you removed any fan modules before moving the chassis, reinstall each one in the chassis as follows:

- a. Holding each of the two handles on the fan module with your two hands, align the fan module to an open fan module slot.

**Note**

The two alignment brackets on top of the fan module should align to two tracks at the top of the slot.

- b. Slide the fan module into the slot until the front of the fan module comes in contact with the rear of the chassis.

**Note**

The two alignment pins on the fan module (on the top and one on the bottom) should go into holes in the chassis and the four captive screws on the fan module should align to screw holes in the chassis.

- c. Screw in the four captive screws to the chassis and tighten each screw to 8 in-lb (0.9 N·m).

Step 10 If you removed any power supplies before moving the chassis, reinstall each one as follows:

- a. Determine which power supply slots to fill and ensure that each of those slots is open.
- b. If you are using the combined or power supply redundancy mode, you can use any slot for the power supply that you are installing.

If you are using input-source or full redundancy mode, you must group the power supplies that are to be connected to the same grid on either the left or right power supply slots in the chassis (that is, place the power supplies for grid A in slots 1 or 2 or both slots and place the power supplies for grid B in slots 3 or 4 or both slots).

- c. Place one hand on the front of the power supply and place your other hand under it to support its weight.
- d. Align the power supply to an open power supply slot.

**Note**

The alignment bracket on top of the power supply should align to a track at the top of the slot and a bar at the bottom of the power supply should be guided by a track at the bottom of the slot.

- e. Slide the power supply all the way into the slot until it stops.

- f. Slide the handle in the middle of the ejector lever toward the end of the lever and rotate the lever to the front of the power supply. Release the middle handle.

**Note**

- The lever should grab the inside of the slot and push the power supply onto its mid-plane connectors.
- If you are using the combined power or power-supply redundancy mode, you can fill any power supply slot with the power supplies. If you are using input-source or full redundancy modes, you must place half of the power supplies in slots 1 and 2, and you must place the other half of the power supplies in slots 3 and 4 (half will be used for available power and the other half will be used for redundant power).
- In a single phase AC power supply unit, connection of multiple phases from the same three-phase source is supported and direct connection of three-phase is not supported.

- g. Screw in the two captive screws on the front of the power supply to the chassis. Tighten each screw to 8 in-lb (0.9 N·m)

System Grounding

This section describes the need for system grounding and explains how to prevent damage from electrostatic discharge.

- [Proper Grounding Practices, page 3-99](#)
- [Preventing Electrostatic Discharge Damage, page 3-101](#)

Proper Grounding Practices

Grounding is one of the most important parts of equipment installation. Proper grounding practices ensure that the buildings and the installed equipment within them have low-impedance connections and low-voltage differentials between chassis. When you properly ground systems during installation, you reduce or prevent shock hazards, equipment damage due to transients, and data corruption. [Table 3-1](#) lists grounding best practices.

Table 3-1 **Grounding Best Practices**

Environment	Electromagnetic Noise Severity Level	Grounding Recommendations
Commercial building is subjected to direct lightning strikes. For example, some places in the United States, such as Florida, are subject to more lightning strikes than other areas.	High	All lightning protection devices must be installed in strict accordance with manufacturer recommendations. Conductors carrying lightning current should be spaced away from power and data lines in accordance with applicable recommendations and codes. Appropriate grounding practices must be closely followed.
Commercial building is located in an area where lightning storms frequently occur but is not subject to direct lightning strikes.	High	Appropriate grounding practices must be closely followed.
Commercial building contains a mix of information technology equipment and industrial equipment, such as welding.	Medium to high	Appropriate grounding practices must be closely followed.
Existing commercial building is not subject to natural environmental noise or man-made industrial noise. This building contains a standard office environment. This installation has a history of malfunction due to electromagnetic noise.	Medium	Appropriate grounding practices must be closely followed. Determine source and cause of noise if possible, and mitigate as closely as possible at the noise source or reduce coupling from the noise source to the victim equipment.
New commercial building is not subject to natural environmental noise or man-made industrial noise. This building contains a standard office environment.	Low	Appropriate grounding practices should be followed as closely as possible. Electromagnetic noise problems are not anticipated, but installing a best practice grounding system in a new building is often the least expensive route and the best way to plan for the future.
Existing commercial building is not subject to natural environmental noise or man-made industrial noise. This building contains a standard office environment.	Low	Appropriate grounding practices should be followed as much as possible. Electromagnetic noise problems are not anticipated, but installing a best practice grounding system is always recommended.

**Note**

In all situations, grounding practices must comply with local National Electric Code (NEC) requirements or local laws and regulations.

**Note**

Always ensure that all the modules are completely installed and that the captive installation screws are fully tightened. In addition, ensure that all I/O cables and power cords are properly seated. These practices are normal installation practices and must be followed in all installations.

Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) damage, which can occur when modules or other Field Replaceable Units (FRU - a circuit board, part, or an assembly which can be easily removed and replaced without having to send the entire product to a repair facility.) are improperly handled, results in intermittent or complete failures. Modules consist of printed circuit boards that are fixed in metal carriers. Electromagnetic interference (EMI) shielding and connectors are integral components of the carrier. Although the metal carrier helps protect the board from ESD. Always wear an ESD grounding strap when handling modules.

Follow these guidelines for preventing ESD damage:

- Always wear an ESD wrist strap and ensure that it makes maximum contact with bare skin. ESD grounding straps are available with banana plugs, metal spring clips, or alligator clips. All Cisco MDS 9700 Series devices are equipped with a banana plug connector (identified by the ground symbol next to the connector) somewhere on the front panel. We recommend that you use a personal ESD grounding strap equipped with a banana plug.
- If you choose to use the disposable ESD wrist strap supplied with most FRUs or an ESD wrist strap equipped with an alligator clip, you must attach the system ground lug to the chassis in order to provide a proper grounding point for the ESD wrist strap.

**Note**

This system ground is also referred to as the network equipment building system (NEBS) ground.

- If your chassis does not have the system ground attached, you must install the system ground lug. For installation instructions and location of the chassis system ground pads, see [“Establishing the System Ground” section on page 3-101](#).

**Note**

You do not need to attach a supplemental system ground wire to the system ground lug; the lug provides a direct path to the bare metal of the chassis.

Establishing the System Ground

This section describes how to connect a system ground to the MDS 9700 Series switch.

**Note**

This system ground is also referred to as the network equipment building system (NEBS) ground.

You must use the system (NEBS) ground on both AC- and DC-powered systems if you are installing this equipment in a U.S. or European Central Office.

The system (NEBS) ground provides additional grounding for EMI shielding requirements and grounding for the low-voltage supplies (DC-DC converters) on the modules and is intended to satisfy the Telcordia Technologies NEBS requirements for supplemental bonding and grounding connections. You must observe the following system grounding guidelines for your chassis:

- You must install the system (NEBS) ground connection with any other rack or system power ground connections that you make. The system ground connection is required if this equipment is installed in a U.S. or European Central Office.
- You must connect both the system (NEBS) ground connection and the power supply ground connection to an earth ground. The system (NEBS) ground connection is required if this equipment is installed in a U.S. or European Central Office.
- For Cisco MDS 9700 Series devices that are equipped with DC-input power supplies, you must install the system (NEBS) ground before you attach the source DC power cables to the DC PEM. If the chassis is powered up, you must power down the chassis before attaching the system (NEBS) ground. If you are installing the system (NEBS) ground on models of the Cisco MDS 9700 chassis that are equipped with either AC-input or DC-input power supplies, you do not need to power down the chassis.

**Note**

The system (NEBS) ground serves as the primary safety ground for the MDS 9700 Series switch that are equipped with DC-input PEMs. The DC-input power supplies for these chassis do not have a separate ground.

Required Tools and Equipment

To connect the ground system, you need the following tools and materials:

- Grounding lug—A two-hole standard barrel lug. Supports up to 6 AWG wire. Supplied as part of accessory kit.
- Grounding screws—Two M4 x 8mm (metric) pan-head screws. Supplied as part of the accessory kit.
- Grounding wire—Not supplied as part of accessory kit. The grounding wire should be sized according to local and national installation requirements. Depending on the power supply and system, a 6 AWG copper conductor is required for U.S. installations. Commercially available 6 AWG wire is recommended. The length of the grounding wire depends on the proximity of the switch to proper grounding facilities.

**Note**

For safety on a ground fault, we recommend that you should avoid using a grounding wire that is smaller than the power wire. The grounding wire must be sized to meet local and national standard for installation requirements.

- No. 1 Phillips screwdriver.
- Crimping tool to crimp the grounding wire to the grounding lug.
- Wire-stripping tool to remove the insulation from the grounding wire.

After you install the system ground lug, follow these steps to correctly attach the ESD wrist strap:

-
- Step 1** Attach the ESD wrist strap to bare skin as follows:
- If you are using the ESD wrist strap supplied with the FRUs, open the wrist strap package and unwrap the ESD wrist strap. Place the black conductive loop over your wrist and tighten the strap so that it makes good contact with your bare skin.
 - If you are using an ESD wrist strap equipped with an alligator clip, open the package and remove the ESD wrist strap. Locate the end of the wrist strap that attaches to your body and secure it to your bare skin.
- Step 2** Grasp the spring or alligator clip on the ESD wrist strap and momentarily touch the clip to a bare metal spot (unpainted surface) on the rack. We recommend that you touch the clip to an unpainted rack rail so that any built-up static charge is then safely dissipated to the entire rack.
- Step 3** To plug the strap into the port (and alternatively clip an alligator clip onto the grounding lug screws) attach either the spring clip or the alligator clip to the ground lug screw.
- If you are using the ESD wrist strap that is supplied with the FRUs, squeeze the spring clip jaws open, position the spring clip to one side of the system ground lug screw head, and slide the spring clip over the lug screw head so that the spring clip jaws close behind the lug screw head.



Note The spring clip jaws do not open wide enough to fit directly over the head of the lug screw or the lug barrel.

- If you are using an ESD wrist strap that is equipped with an alligator clip, attach the alligator clip directly over the head of the system ground lug screw or to the system ground lug barrel.
- Follow these additional guidelines when handling modules:
 - Handle carriers by available handles or edges only; avoid touching the printed circuit boards or connectors.
 - Place a removed component board-side-up on an antistatic surface or in a static shielding container. If you plan to return the component to the factory, immediately place it in a static shielding container.
 - Never attempt to remove the printed circuit board from the metal carrier.

**Caution**

For safety reasons, check the resistance value of the antistatic strap periodically. The measurement should be between 1 and 10 megohm (Mohm).



Connecting the Cisco MDS 9700 Series Switch

This chapter includes the following sections:

- [Connection Guidelines, page 5-105](#)
- [Preparing for Network Connections, page 5-106](#)
- [Connecting to the Console Port, page 5-106](#)
- [Connecting to the MGMT 10/100/1000 Ethernet Port, page 5-107](#)
- [Connecting to a Fibre Channel or Fibre Channel over Ethernet \(FCoE\) Port, page 5-107](#)

Connection Guidelines

The Cisco MDS 9700 Series switch provides the following types of ports:

- Console port (supervisor modules) —An RS-232 port that you can use to create a local management connection.
- MGMT 10/100/1000 Ethernet port (supervisor module)—An Ethernet port that you can use to access and manage the switch by IP address, such as through Cisco Data Center Network Manager (DCNM).
- Fibre Channel ports (switching modules)—Fibre Channel (FC) ports that you can use to connect to the SAN or for in-band management.
- Fibre Channel over Ethernet ports (switching modules)—Fibre Channel over Ethernet (FCoE) ports that you can use to connect to the SAN or for in-band management.

The Cisco MDS 9700 Series switch has two USB drives (in each Supervisor-1 module). A simple USB interface that allows you to connect to different devices supported by Cisco MDS NX-OS. In the supervisor module, there are two USB drives, Slot 0 and LOG FLASH. The LOG FLASH and Slot 0 USB ports use different formats for their data.



Caution

When running power and data cables in overhead or subfloor cable trays, we strongly recommend that power cables and other potential noise sources be located as far away as is practical from network cabling that terminates on Cisco equipment. In situations where long parallel cable runs cannot be separated by at least 3.3 ft (1 m), we recommend shielding any potential noise sources by housing them in a grounded metallic conduit.

Preparing for Network Connections

When preparing your site for network connections to the Cisco MDS 9700 Series switch, consider the following for each type of interface, and obtain all of the required equipment before connecting the ports:

- Cabling required for each interface type
- Distance limitations for each signal type
- Additional interface equipment required

Connecting to the Console Port

The console port, labeled Console, is an RS-232 port with an RJ-45 interface. It is an asynchronous (async) serial port; any device connected to this port must be capable of asynchronous transmission.

This port must be used to initially configure the management IP address and other parameters before connecting the switch to the network for the first time.

**Caution**

The console port can be used to connect to a modem, however, we recommend using the COM1 port for this purpose. If you decide to connect the console port to a modem, do not connect it while the switch is booting; connect either before powering the switch on or after the switch has completed the boot process.

You can use the console port to perform the following functions:

- Configure the Cisco MDS 9710 Director from the CLI.
- Monitor network statistics and errors.
- Configure SNMP agent parameters.
- Download software updates.

**Note**

To connect the console port to a computer terminal, the computer must support VT100 terminal emulation. The terminal emulation software—frequently an application such as HyperTerminal or Procomm Plus—makes communication between the switch and computer possible during setup and configuration.

To connect the console port to a computer terminal, follow these steps:

- Step 1** Configure the terminal emulator program to match the following default port characteristics: 9600 baud, 8 data bits, 1 stop bit, no parity.
- Step 2** Connect the supplied RJ-45 to DP-25 female adapter. We recommend that you use the adapter and cable provided with the switch.
- Step 3** Connect the console cable (a rollover RJ-45 to RJ-45 cable) to the console port or the RJ-45 to DP-25 adapter (depending on your computer) at the computer serial port.

Connecting to the MGMT 10/100/1000 Ethernet Port

**Caution**

To prevent an IP address conflict, do not connect the MGMT 10/100/1000 Ethernet port to the network until the initial configuration is complete. For more information, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.

The Supervisor-1 module supports an autosensing MGMT 10/100/1000 Ethernet port (labeled “MGMT 10/100/1000”) and has an RJ-45 interface. You can use this port to access and manage the switch by IP address, such as through DCNM.

To connect the MGMT 10/100/1000 Ethernet port to an external hub, switch, or router, follow these steps:

Step 1

Connect the appropriate modular cable to the MGMT 10/100/1000 Ethernet port:

- Use a modular, RJ-45, straight-through UTP cable to connect the MGMT 10/100/1000 Ethernet port to an Ethernet switch port or hub.
- Use a cross-over cable to connect to a router interface.

Step 2

Connect the other end of the cable to the device.

**Note**

For high availability, connect the MGMT 10/100/1000 Ethernet port on the active Supervisor-1 module and on the standby Supervisor-1 module to the same network or VLAN. The active supervisor module owns the IP address used by both of these Ethernet connections. On a switchover, the newly activated supervisor module takes over this IP address. This process requires an Ethernet connection to the newly activated supervisor module.

Connecting to a Fibre Channel or Fibre Channel over Ethernet (FCoE) Port

The Fibre Channel ports on the switching modules are compatible with LC-type fiber-optic. For information about configuring the switch for in-band management, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.

The Cisco MDS 9000 Family supports both Fibre Channel and FCoE protocols for SFP+ and QSFP+ transceivers. Each transceiver must match the transceiver on the other end of the cable, and the cable must not exceed the stipulated cable length for reliable communication. For information on how to get the list of supported SFP+ transceivers for your software release, see the *Cisco MDS 9000 Family Release Notes for Cisco MDS NX-OS*.

**Warning**

Class 1 laser product. Statement 1008

**Warning**

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051

**Caution**

Wear an ESD wrist strap connected to the chassis when handling transceivers. Keep optical connectors covered when not in use, and do not touch connector ends. The fiber-optic connectors must be free of dust, oil, and other contaminants.

This section provides the following topics:

- [Removing and Installing Cables into SFP+ or QSFP+ Transceivers, page 5-111](#)
- [Maintaining SFP+ and QSFP+ Transceivers and Fiber-Optic Cables, page 5-112](#)

Removing and Installing SFP+ and QSFP+ Transceivers

**Caution**

Removing and installing an SFP+ or QSFP+ transceiver can shorten its useful life. Do not remove and insert SFP+ or QSFP+ transceivers more often than is absolutely necessary. We recommend disconnecting cables before installing or removing these transceivers to prevent damage to the cable or transceiver.

**Note**

Use only Cisco SFP+ or QSFP+ transceivers on the Cisco MDS 9700 Series. Each Cisco SFP+ or QSFP+ transceiver is encoded with model information that enables the switch to verify that the SFP+ or QSFP+ transceiver meets the requirements for the switch. For instructions specific to the transceiver type, see the [“SFP+ Transceiver Specifications” section on page 6-126](#).

The Cisco MDS 9000 Family supports SFP+ and QSFP+ transceivers with the following two types of latching devices:

- Mylar tab latch ([Figure 5-1](#))
- Bale-clasp latch ([Figure 5-2](#))

Figure 5-1 SFP+ Transceiver with Mylar Tab Latch


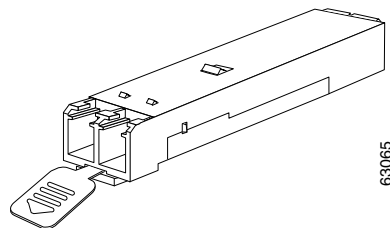


Figure 5-2 SFP+ Transceiver with Bale-Clasp Latch

Removing an SFP+ or QSFP+ Transceiver

To remove an SFP+ or QSFP+ transceiver, follow these steps:

-
- Step 1** Attach an ESD-preventive wrist strap and follow its instructions for use.
- Step 2** If a cable is installed in the transceiver:
- Record the cable and port connections for later reference.
 - Press the release latch on the cable, grasp the connector near the connection point, and gently pull the connector from the transceiver.
 - Insert a dust plug into the cable end of the transceiver.

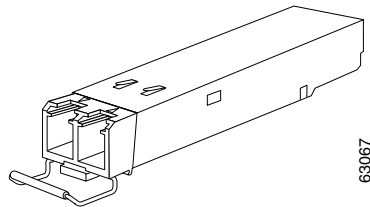

Caution


If the transceiver does not remove easily in the next step, push the transceiver all the way back in and then ensure that the latch is in the correct position before continuing.

- Step 3** Remove the transceiver from the port:
- If the transceiver has a Mylar tab latch, gently pull the tab straight out (do not twist), and then pull the transceiver out of the port.
 - If the transceiver has a bale clasp latch, open the clasp by pressing it downwards, and then pull the transceiver out of the port.



Note

If you have difficulty removing a bale clasp SFP+ or QSFP+ transceiver, you should reseal the SFP+ or QSFP+ by returning the bale clasp in the up position. Then press the SFP+ or QSFP+ inward and upward into the cage. Next, lower the bale clasp and pull the SFP+ or QSFP+ straight out with a slight upward lifting force (see [Figure 5-3](#)). Be careful not to damage the port cage during this process.

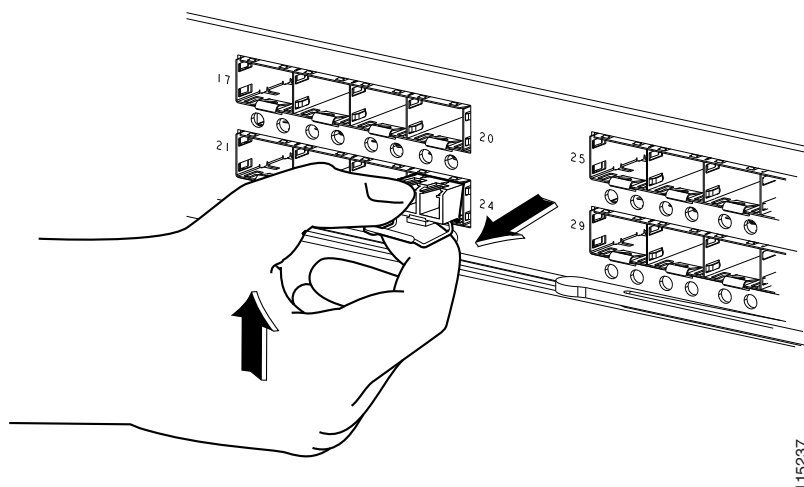Figure 5-3 *Alternate Removal Method for Bale Clasp SFP+ or QSFP+ Transceivers*

- Step 4** Insert a dust cover into the port end of the transceiver and place the transceiver on an antistatic mat or into a static shielding bag if you plan to return it to the factory.
- Step 5** If another transceiver is not being installed, protect the optical cage by inserting a clean cover.

Installing an SFP+ Transceiver

To install an SFP+ or QSFP+ transceiver, follow these steps:

- Step 1** Attach an ESD-preventive wrist strap and follow its instructions for use.
- Step 2** Remove the dust cover from the port cage.
- Step 3** Remove the dust cover from the port end of the transceiver.
- Step 4** Insert the transceiver into the port:
- If the transceiver has a Mylar tab, orient the transceiver with the tab on the bottom, and then gently insert the transceiver into the port until it clicks into place.
 - If the transceiver has a bale clasp, orient the transceiver with the clasp on the bottom, close the clasp by pushing it up over the transceiver, and then gently insert the transceiver into the port until it clicks into place.



Caution

If the transceiver does not install easily, ensure that it is correctly oriented and the tab or clasp are in the correct position before continuing.



Note

If you cannot install the cable into the transceiver, insert or leave the dust plug in the cable end of the transceiver.

Removing and Installing Cables into SFP+ or QSFP+ Transceivers

**Caution**

To prevent damage to the fiber-optic cables, do not place more tension on them than the rated limit and do not bend to a radius of less than 1 inch if there is no tension in the cable, or 2 inches if there is tension in the cable.

Removing a Cable from an SFP+ or QSFP+ Transceiver

**Caution**

When pulling a cable from a transceiver, grip the body of the connector. Do not pull on the jacket sleeve, because this can compromise the fiber-optic termination in the connector.

**Caution**

If the cable does not remove easily, ensure that any latch present on the cable has been released before continuing.

To remove the cable, follow these steps:

- Step 1** Attach an ESD-preventive wrist strap and follow its instructions for use.
- Step 2** Press the release latch on the cable, grasp the connector near the connection point, and gently pull the connector from the transceiver.
- Step 3** Insert a dust plug into the cable end of the transceiver.
- Step 4** Insert a dust plug onto the end of the cable.


Installing a Cable into an SFP+ or QSFP+ Transceiver

**Caution**

To prevent possible damage to the cable or transceiver, install the transceiver in the port before installing the cable in the transceiver.

To install a cable into a transceiver, follow these steps:

- Step 1** Attach an ESD-preventive wrist strap and follow its instructions for use.
- Step 2** Remove the dust cover from the connector on the cable.
- Step 3** Remove the dust cover from the cable end of the transceiver.
- Step 4** Align the cable connector with the transceiver and insert the connector into the transceiver until it clicks into place (see [Figure 5-4](#)).

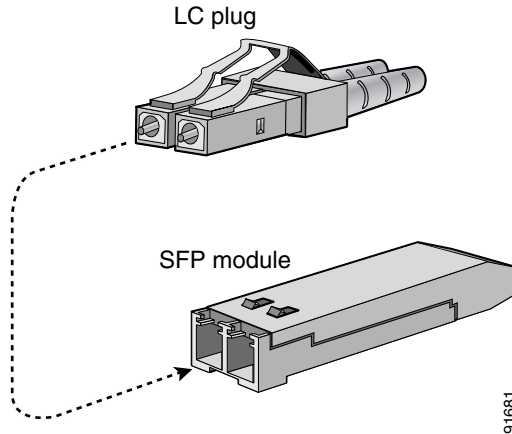Figure 5-4 Connecting the LC-Type Cable to a Fibre Channel Port

Caution If the cable does not install easily, ensure that it is correctly oriented before continuing.

For instructions on verifying connectivity, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.

Maintaining SFP+ and QSFP+ Transceivers and Fiber-Optic Cables

SFP+ and QSFP+ transceivers and fiber-optic cables must be kept clean and dust-free to maintain high signal accuracy and prevent damage to the connectors. Attenuation (loss of light) is increased by contamination and should be below 0.35 dB.

Follow these maintenance guidelines:

- SFP+ and QSFP+ transceivers are static sensitive. To prevent ESD damage, wear an ESD-preventive wrist strap that is connected to the chassis.
- Do not remove and insert a transceiver more often than is necessary. Repeated removals and insertions can shorten its useful life.
- Keep all optical connections covered when not in use. If they become dusty, clean before using to prevent dust from scratching the fiber-optic cable ends.
- Do not touch ends of connectors to prevent fingerprints and other contamination.
- Clean regularly; the required frequency of cleaning depends upon the environment. In addition, clean connectors if they are exposed to dust or accidentally touched. Both wet and dry cleaning techniques can be effective; refer to your site's fiber-optic connection cleaning procedure.
- Inspect routinely for dust and damage. If damage is suspected, clean and then inspect fiber ends under a microscope to determine if damage has occurred.



Installing, Removing, and Verifying Field Replaceable Units

This chapter describes how to install, remove, and verify the Cisco MDS 9700 Series Multilayer Director switch components. This chapter includes the following topics:

- [Installing a Supervisor Module, page 4-106](#)
- [Removing a Supervisor Module, page 4-108](#)
- [Nondisruptive Migration for Supervisor Modules, page 4-110](#)
- [Disruptive Migration for Supervisor Modules, page 4-147](#)
- [Installing a Switching Module, page 4-151](#)
- [Removing a Switching Module, page 4-152](#)
- [Verifying Installation of the Supervisor and Switching Modules, page 4-153](#)
- [Installing and Removing a Crossbar Fabric Switching Module, page 4-153](#)
- [Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules, page 4-160](#)
- [Installing or Replacing a Power Supply in a Switch Chassis, page 4-165](#)
- [Installing and Removing Fan Modules, page 4-172](#)


Warning

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051


Warning

Use of controls, adjustments, or performing procedures other than those specified may result in hazardous radiation exposure. Statement 1057


Warning

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034


Caution

To prevent ESD damage, wear grounding wrist straps during these procedures and handle modules by the carrier edges only.

**Caution**

Make sure that you do not accidentally press one or more of the ejector release buttons on a switching module, supervisor, and fabric modules. These buttons and their mechanical levers are designed so that you can easily power down and remove these modules when you need to replace them. If you press one of these buttons, the lever for that button releases from the front of the module, but the module remains operational and connected to the system. If you press the other ejector button on the same module at the same time as you press the first button or while the lever for the first button is released, the lever for the second button releases, and the module powers down and disconnects from the system.

This behavior can be disabled with the **no hardware ejector enable** command. To minimize the chance of accidentally disconnecting a module with a released lever, press the lever back toward the module until it clicks. If both levers are released, the system has disconnected and powered down the module, and the Status LED will be unlit. To reconnect and power up the module, either remove and reinsert the module in the chassis or close the lever and use these system commands: **out-of-service module** and **no poweroff module**.

**Note**

Install the Cisco MDS 9700 Series chassis in the rack before installing modules.

**Note**

In systems with redundant supervisor modules, you can replace the faulty supervisor while the system is operating, provided that one supervisor is always operating.

Installing a Supervisor Module

Prerequisites for Replacing a Supervisor Module


- You must follow the ESD protocols, including the following:
 - You must wear a grounded ESD wristband (or other personal grounding device) whenever you handle the electronic modules outside the grounded chassis.
 - You must carry electronic modules only by their covered edges or handles. Do not touch their electronic components.
 - Whenever a module is outside a grounded chassis, place it flat on an antistatic surface or in an antistatic bag. Never lean the module on anything, or place anything else on top of the module.
- Verify that the chassis is grounded.
- Verify that you have the following tools and equipment:
 - ESD wrist strap (or other personal grounding device)
 - Number 1 Phillips torque screwdriver
 - Manual torque screwdrivers are recommended. Be sure to never exceed the recommended torque setting for the screw that you are working with.
- Replacement supervisor module

Procedure

To install a supervisor module on a Cisco MDS 9700 Series chassis, follow these steps:

- Step 1** Before installing any modules in the chassis, we recommend that you install the chassis in the rack. See the [Installing the Cisco MDS 9700 Series Switch on a Four-Post Rack or Cabinet, page 3-91](#)
- Step 2** Verify that there is enough clearance to accommodate any cables or interface equipment that you want to connect to the module.
- Step 3** Verify that the captive screws are tightened to 8 in-lb on all modules already installed in the chassis. This ensures that the EMI gaskets are fully compressed and maximizes the opening space for the module being installed.
- Step 4** If a filler panel is installed, remove the Phillips pan-head screw from the filler panel and remove the panel. To remove a currently installed module, see the [“Removing a Switching Module” section on page 4-152](#).
- Step 5** Open the ejector lever on the new or replacement module by pressing on the ejector button. Allow the ejector to open fully (see Callout 1 in the following figure).

Figure 4-1 Positioning a Half-width Supervisor Module to its Slot

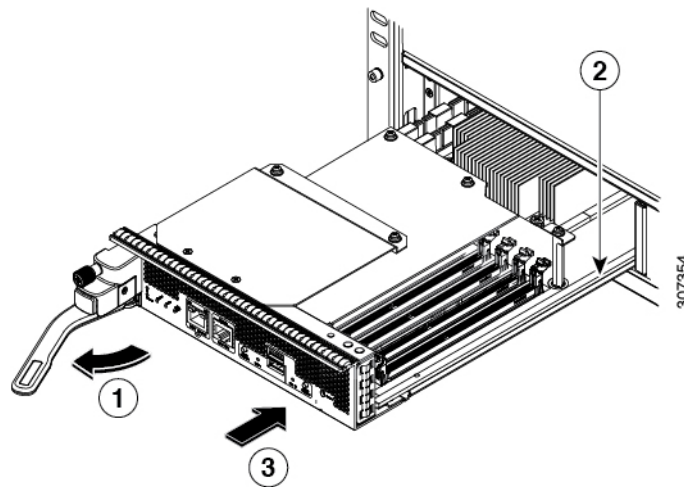

1	Rotate the handle fully away from the front of the module.	3	Push the module all the way into the slot (until it stops and the front is about 1/4 inch in front of the chassis).
2	Align the bottom of the module to the module guides in the slot.		


- Step 6** Rotate the end of the handle away from the front of the module until it stops (see Callout 1 in the previous figure).
- Step 7** With one hand under the supervisor module and the other hand holding the module by its front, align the rear of the module to the open supervisor slot.
- Step 8** Slide the module onto the guides inside the slot and push the module fully into the slot until you cannot push the module further.

The front of the module should be about 1/4 inch (0.6 cm) in front of the chassis.

- Step 9** Rotate the handle to the front of the module (see Callout 1 in the following figure) until it clicks when it reaches the front of the module.

The module should be fully inserted in the slot and the front of the module should be even with the fronts of all the other installed modules. The captive screw by the ejector button on the module should be aligned to a screw hole on the chassis.

Figure 4-2 **Securing a Supervisor Module to its Slot**

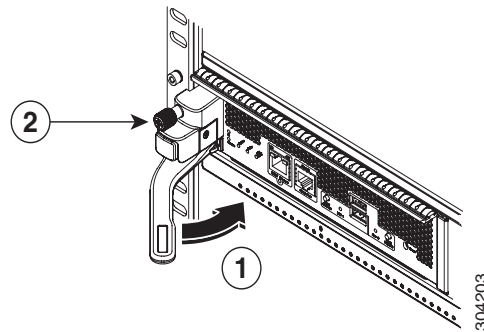

1	Rotate the handle all the way to the front of the module.	2	Tighten the captive screw to 8 in-lb (0.9 N·m) of torque.
---	---	---	---

- Step 10** Screw in the captive screw to secure the module to the chassis (see Callout 2 in the previous figure). Tighten the screw to 8 in-lb (0.9 N·m) of torque.
- Step 11** Verify that the supervisor module LEDs turn on and appear as follows:
- STATUS LED is green.
 - SYSTEM LED is green.
 - ACTIVE LED is amber or green.
- Step 12** Attach the management cable to the MGMT ETH port.

Removing a Supervisor Module



Note

You need a flat-blade or number 2 Phillips-head screwdriver to loosen or tighten the captive screws on the supervisor module.


To remove a supervisor module from the chassis, follow these steps:

- Step 1** Failover the standby supervisor if the switch has two supervisor modules and the supervisor you are removing is currently active. For information on how to failover a supervisor module, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.
- Step 2** Put the standby supervisor module to out of service before removing the standby supervisor module, using the **out-of-service module slot** command.
- Where *slot* indicates the chassis slot number in which the standby supervisor module resides.

```
switch(config)# out-of-service module 5
```

- Step 3** Disconnect any network interface cables attached to the module.
- Step 4** Unscrew the captive screw on the left side of the module until the screw is no longer connected to the chassis (see Callout 1 in the following figure).

Figure 4-3 Removing a Half-width Supervisor Module

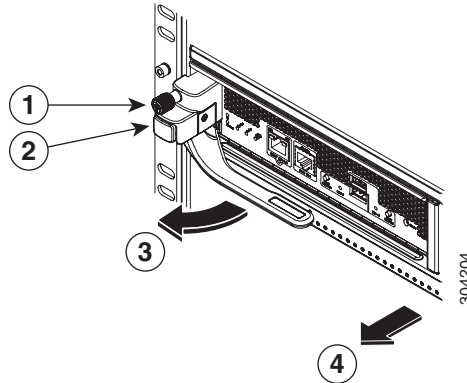

1	Unscrew the captive screw until it is free of the chassis.	3	The handle springs open.
2	Press the ejector button.	4	Pull the handle to remove the module part way from the slot. Place your other hand under the module and fully remove it from the slot.

- Step 5** Press the ejector release button on the left of the module (see Step 2 in the above figure) to push out the ejector lever. The ejector springs out part way from the front of the module.
- Step 6** Fully rotate the handle from the front of the module and pull the handle to move the module part way out of its slot.
- Step 7** Place your other hand under the module to support its weight and pull the module fully out of its slot. Do not touch the module circuitry.
- Step 8** Place the module on an antistatic mat or antistatic foam.
- Step 9** Install a filler panel on an empty slot to keep the chassis dust-free and to maintain proper airflow through the chassis.



Warning

Blank faceplates and cover panels serve three important functions: they prevent exposure to hazardous voltages and currents inside the chassis; they contain electromagnetic interference (EMI) that might disrupt other equipment; and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place. Statement 1029

- Step 10** Insert a new supervisor module in the empty slot and power on the standby supervisor module. To see how to install a supervisor module, see the [“Installing a Supervisor Module”](#) section on page 4-106.

Nondisruptive Migration for Supervisor Modules

This topic describes the steps that are required to migrate both Supervisor-1 Modules (DS-X97-SF1-K9) to Supervisor-4 Modules (DS-X97-SF4-K9) for the Cisco MDS Multilayer Director 9706 or 9710, and Supervisor-1E Modules (DS-X97-SF1E-K9) to Supervisor-4 Modules (DS-X97-SF4-K9) for the Cisco MDS 9718 Multilayer Director.

This topic includes the following sections:

- [Nondisruptive Migration for Dual Supervisor Modules, page 4-110](#)
- [Requirements, page 4-111](#)
- [Components Used, page 4-111](#)
- [Guidelines and Limitations, page 4-111](#)
- [Prerequisites, page 4-114](#)
- [Switch with Only Active Supervisor Module, page 4-125](#)
- [Verification, page 4-133](#)
- [Troubleshooting, page 4-138](#)

Nondisruptive Migration for Dual Supervisor Modules



Note

Before you install, operate, or service the system, read the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family* for important safety information.



Warning

IMPORTANT SAFETY INSTRUCTIONS

This warning symbol indicates danger. You are in a situation that could cause physical injury. Before you work on any equipment, be aware of the hazards that are involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

SAVE THESE INSTRUCTIONS



Warning

This unit is intended for an installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. Statement 1017



Warning

Only trained and qualified personnel should be allowed to install, replace, or service this equipment. Statement 1030



Warning

A readily accessible two-poled disconnect device must be incorporated in the fixed wiring. Statement 1022

**Warning**

Ensure that there is no loose debris (such as paper, ties, dust) around the back of the chassis when the crossbar switching modules are being removed. When the crossbar switching modules are pulled, the vacuum created can be strong enough to pull the loose debris into the chassis.

Requirements

We recommend that you have knowledge of the Cisco NX-OS operating system CLI.

Components Used

The information in this document is based on the following hardware versions:

- Cisco MDS 9718 Multilayer Director (DS-C9718)
- Cisco MDS 9710 Multilayer Director (DS-C9710)
- Cisco MDS 9706 Multilayer Director (DS-C9706)
- Cisco MDS 9700 Series Supervisor-4 Module (DS-X97-SF4-K9)
- Cisco MDS 9700 Series Supervisor-1E Module (DS-X97-SF1E-K9)
- Cisco MDS 9700 Series Supervisor-1 Module (DS-X97-SF1-K9)

Guidelines and Limitations

Guidelines and limitations for a nondisruptive migration of both the supervisor modules (Active and Standby) to Supervisor-4 Modules (DS-X97-SF4-K9):

- The **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command used for initiating the nondisruptive migration process is available only in global config mode.
- Ensure that the Supervisor-4 Module is not inserted in the standby slot before initiating the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command. If the Supervisor-4 Module is already inserted in the standby slot, the migration process will be aborted and the Supervisor-4 Module will be powered down.
- Insert the standby Supervisor-4 Module into the chassis only when you are prompted to insert the Supervisor-4 Module during the migration by a message on the system console.
- After the Supervisor-4 Module has been inserted during the migration process, do not remove or manually reload the standby Supervisor-4 Module.
- Back up all the licenses before starting the migration process. After the migration procedure is completed, licenses have to be applied or installed again. For more information on how to back up the licenses, see the [“Prerequisites” section on page 4-114](#).
- Back up all the configurations and bootflash files on both the supervisor modules before starting the migration process. In case of any failure or loss of configuration in the Supervisor-4 Module, disruptive migration has to be done to upgrade to Supervisor-4 Module. In such a scenario, all the configurations have to be applied or installed again. For more information on how to back up the configurations, see the [“Prerequisites” section on page 4-114](#).
- Use the **show environment power** command to display the actual power usage information for the entire switch.

- Ensure that the current system is running Cisco MDS NX-OS Release 8.4(1) or later on Cisco MDS Multilayer Director 9706 or 9710. Ensure that the current system is running Cisco MDS NX-OS Release 8.4(2a) or later on Cisco MDS 9718 Multilayer Director. Use the **show version** command to view the current image on the system.
To upgrade an image version on the switch, refer the [Cisco MDS 9000 NX-OS Software Upgrade and Downgrade Guide, Release 8.x](#) guide.
- The migration procedure must be performed during a schedule maintenance period only.
- Nondisruptive backward migration procedure (migrating from a Supervisor-4 Module to a Supervisor-1E or Supervisor-1 Module) is not supported. Backward migration is disruptive (power off and power on the switch).
- In a dual supervisor module scenario, ensure that the standby supervisor module is in the HA-standby state. If the standby supervisor does not come up in the HA-standby state, then physically remove the standby supervisor module and initiate the migration on the active supervisor module. Use the **show module** command to view the Active and Standby supervisor modules.
- After the migration procedure, your current active supervisor module will be in standby state and your current standby supervisor module will be in active state.
- Do not reload or manually insert or remove any I/O or crossbar fabric switching modules after initiating the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command. Any removal or insertion of I/O or Crossbar Fabric-1 Switching Modules must be done before initiating the migration process or after the migration is completed.
- Configuration mode is blocked during the migration procedure to prevent any changes.
- You cannot press **Control+C** to cancel the migration procedure until 45 minutes have elapsed after executing the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command.
- Use the **show logging onboard migration status** command on any management session to display the status of the migration. You can use this command during the migration or after the migration is complete.
- In the system messages (system messages displayed on the console during the migration process) and the **show module** command output, Supervisor-1 Module (DS-X97-SF1-K9) and Supervisor-1E Module (DS-X97-SF1E-K9) are displayed as Supervisor-3 Module.
- Perform the Fabric-1 to Fabric-3 module migration after the Supervisor-1/Supervisor-1E to Supervisor-4 Module migration is completed. A mix of Fabric-1 with Supervisor-4 Modules or Fabric-3 with Supervisor-1/Supervisor-1E Modules is not supported.
- Ensure that the switch release version and the targeted migration release version is same. Use the **show version** command to view the version of the Cisco MDS NX-OS software on the switch.
- If you are using a Supervisor-4 Module for migration that has been already used in a previous MDS setup, ensure that the Supervisor-4 module has sufficient space on bootflash for copying both the system and kickstart images before the migration.

- The following table lists the supported release versions for migrating to Supervisor-4 Modules on the Cisco MDS 9700 Series of Multilayer Directors.

Product Name	Supported MDS NX-OS Release Version
Cisco MDS 9718 Director	Cisco MDS NX-OS Release 8.4(2a) and later
Cisco MDS 9710 Director	Cisco MDS NX-OS Release 8.4(1) and later
Cisco MDS 9706 Director	Cisco MDS NX-OS Release 8.4(1) and later

- The following table lists the supported combinations for supervisor modules with crossbar fabric modules on the Cisco MDS 9700 Series of Multilayer Directors in a production environment. In the following table:
 - The term, “Yes” indicates the supported combinations.
 - The “—” symbol indicates the unsupported combinations.

Combination	Supervisor-1 Module	Supervisor-1E Module	Supervisor-4 Module	Crossbar Fabric-1 Switching Module	Crossbar Fabric-3 Switching Module
Supervisor-1 Module	Yes	—	—	Yes	—
Supervisor-1E Module	—	Yes	—	Yes	—
Supervisor-4 Module	—	—	Yes	—	Yes
Crossbar Fabric-1 Switching Module	Yes	Yes	—	Yes	—
Crossbar Fabric-3 Switching Module	—	—	Yes	—	Yes

- Do not:
 - insert or remove any transceivers from any modules while the migration is in progress.
 - alter any connections while the migration is in progress.
 - remove any power supply modules or fan modules during the migration process.
 - attempt any configuration changes or network changes while the migration is in progress.

- copy any configurations using the **copy running-config startup-config** command while the migration is in progress.
- trigger any EPLD or BIOS upgrades during the migration.
- trigger any ISSU during the migration.
- perform migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules during the Supervisor-1/Supervisor-1E Module to Supervisor-4 Module migration.

Prerequisites

- Ensure that you have network-admin role privileges to migrate the supervisor modules.

```
switch# show user-account admin

user:admin
this user account has no expiry date
roles:network-admin
```

- The minimum supported release for this procedure is Cisco MDS NX-OS Release 8.4(1) for Cisco MDS Multilayer Director 9706 or 9710 and Cisco MDS NX-OS Release 8.4(2) for Cisco MDS 9718 Multilayer Director. If you are using an image older than Cisco MDS NX-OS Release 8.4(1), upgrade to Cisco MDS NX-OS Release 8.4(1), and then perform the nondisruptive migration from a Supervisor-1 Module to a Supervisor-4 Module.

On Cisco MDS 9718 Multilayer Director, if you are using an image older than Cisco MDS NX-OS Release 8.4(2a), first upgrade to Cisco MDS NX-OS Release 8.4(2a), and then perform the nondisruptive migration from a Supervisor-1E Module to a Supervisor-4 Module.

To upgrade an image version on the switch, refer the [Cisco MDS 9000 NX-OS Software Upgrade and Downgrade Guide, Release 8.x](#) guide.

- We recommend that you use a console connection to perform the migration procedure. In case you do not have a console connection and are using an SSH/Telnet connection, use the terminal monitor command to display all the syslogs mentioned in the below procedures.
- Back up the running configuration from the current active supervisor module (DS-X97-SF1-K9) to the FTP/SFTP/TFTP server, or a USB flash drive.

```
switch(config)# copy running-config
ftp: [// [username[:password]@]server] [/path]
```

Or

```
switch(config)# copy running-config usb1:runningconfiguration.txt
Copy complete, now saving to disk (please wait)...
```

Note: runningconfiguration.txt is a filename variable.

- Back up the required files from the bootflash of the current active and standby supervisor modules (DS-X97-SF1-K9) to the FTP/SFTP/TFTP/SCP server, or a USB flash drive.

```
switch(config)# copy bootflash:userfile.txt scp://root@x.x.x.x/root/userfile.txt
```

Note: userfile.txt is a filename variable.

- Back up the installed licenses from the switch to a USB drive by using the **copy licenses** command. To view the current licenses installed on the switch, use the **show license** command.

```
switch# show license
```

```

license.lic:
SERVER this_host ANY
VENDOR cisco
INCREMENT ENTERPRISE_PKG cisco 1.0 permanent uncoun ted \
VENDOR_STRING=MDS HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>0</LicLineID>
D> \
<PAK>dummyPak</PAK>" SIGN=FB454F0A0D40
INCREMENT MAINFRAME_PKG cisco 1.0 permanent uncoun ted \
VENDOR_STRING=MDS HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>1</LicLineID>
D> \
<PAK>dummyPak</PAK>" SIGN=0DAE1B086D9E
INCREMENT SAN_EXTN_OVER_IP cisco 1.0 permanent 7 VENDOR_STRING=MDS \
HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>2</LicLineID>
D> \
<PAK>dummyPak</PAK>" SIGN=D336330C76A6
INCREMENT FM_SERVER_PKG cisco 1.0 permanent uncoun ted \
VENDOR_STRING=MDS HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>3</LicLineID>
D> \
<PAK>dummyPak</PAK>" SIGN=AEAEA04629E8

switch()# copy licenses usb1:licenses_archive_file_name.tar

```

**Note**

You must use the tar extension for the archive file. This file contains all the license files that are installed on the Supervisor-1 Module.

- Back up the outputs of the **show tech-support details** command, and redirect the file to a remote server using an FTP, TFTP, SFTP, SCP, or a USB flash drive.

```

switch# show tech-support details> scp://root@x.x.x.x/root/showtechsupport.txt
or
switch# show tech-support details> usb1:showtechsupport.txt

```

- Replacement supervisor modules
 - Supervisor-4 Module (DS-X97-SF4-K9). Two Supervisor-4 Modules for the dual supervisor migration.
- Ensure that there is enough memory on the bootflash of Supervisor-1 Modules to copy the new software image. To check the bootflash memory, use the **dir bootflash:** command.

Procedure

To perform a nondisruptive migration from both Supervisor-1/Supervisor-1E Modules to Supervisor-4 Modules in a switch that has both the Active and Standby supervisor modules installed, follow these steps:

**Note**

In the following procedure, all show outputs, system messages, and image file names are displayed for the Cisco MDS 9710 Multilayer Director Switch. The show outputs, system messages, and image file names will vary based on the Cisco MDS 9700 Series Multilayer Director Switch selected.

- Step 1** Use the **show module** command to view the Active and Standby supervisor modules.

In this procedure, Cisco MDS 9710 chassis is used and the active supervisor module is in slot 6, and the standby supervisor module is in slot 5. Start the migration procedure from the standby supervisor module.

**Note**

In the following show module command output, Supervisor-1 Module (DS-X97-SF1-K9) is listed as Supervisor Module-3.

```
switch# show module
```

Mod	Ports	Module-Type	Model	Status
1	48	1/10 Gbps Ethernet Module	DS-X9848-480K9	ok
2	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
3	24	40 Gbps FCoE Module	DS-X9824-960K9	ok
4	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
5	0	Supervisor Module-3	DS-X97-SF1-K9	ha-standby
6	0	Supervisor Module-3	DS-X97-SF1-K9	active *
7	34	1/10/40G IPS, 2/4/8/10/16G FC Module	DS-X9334-K9	ok
8	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
10	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok

Mod	Sw	Hw
1	8.4(1)	1.1
2	8.4(1)	1.3
3	8.4(1)	1.0
4	8.4(1)	1.0
5	8.4(1)	1.3
6	8.4(1)	1.1
7	8.4(1)	1.0
8	8.4(1)	1.0
10	8.4(1)	1.1

Mod	MAC-Address(es)	Serial-Num
1	84-78-ac-1b-3d-58 to 84-78-ac-1b-3d-8b	JAF1718AAAD
2	f4-cf-e2-7c-cd-30 to f4-cf-e2-7c-cd-33	JAE1847038X
3	04-6c-9d-32-36-aa to 04-6c-9d-32-37-1b	JAE19330ASN
4	00-76-86-bf-58-23 to 00-76-86-bf-58-57	JAE203901ZG
5	9c-57-ad-fd-0d-cb to 9c-57-ad-fd-0d-dd	JAE194005JC
6	e8-ed-f3-e5-9a-4d to e8-ed-f3-e5-9a-5f	JAE17440HVB
7	00-da-55-a2-25-00 to 00-da-55-a2-25-0f	JAE195004XM
8	74-86-0b-33-c6-70 to 74-86-0b-33-c6-a4	JAE213101Q3
10	3c-0e-23-c5-53-d0 to 3c-0e-23-c5-53-d3	JAE180605X3

Mod	Online Diag Status
1	Pass
2	Pass
3	Pass
4	Pass
5	Pass
6	Pass
7	Pass
8	Pass
10	Pass

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric Module 1	DS-X9710-FAB1	ok

2	0	Fabric Module 1	DS-X9710-FAB1	ok
3	0	Fabric Module 1	DS-X9710-FAB1	ok
4	0	Fabric Module 1	DS-X9710-FAB1	ok
5	0	Fabric Module 1	DS-X9710-FAB1	ok
6	0	Fabric Module 1	DS-X9710-FAB1	ok

Xbar	Sw	Hw
1	NA	1.0
2	NA	1.0
3	NA	1.0
4	NA	1.0
5	NA	1.0
6	NA	1.0

Xbar	MAC-Address(es)	Serial-Num
1	NA	JAE222305VS
2	NA	JAE2217096X
3	NA	JAE222305V5
4	NA	JAE2217096L
5	NA	JAE2217096J
6	NA	JAE222305V8

Step 2 Ensure that the required space is available in the bootflash: directory for the image files to be copied using the **dir bootflash:** command. Use the **delete bootflash: filename** command to remove any unnecessary files.

Step 3 Copy the Supervisor-4 Module Cisco NX-OS kickstart and system images to the active Supervisor-1 Module bootflash, using an FTP, TFTP, SCP, SFTP, or a USB flash drive.

**Note**

The Supervisor-4 images contain the string **sf4** to identify them. Do not rename the images, use the standard image names.

```
switch# copy tftp://tftpserver.cisco.com/MDS/m9700-sf4ek9-kickstart-mz.8.4.1.bin
bootflash:m9700-sf4ek9-kickstart-mz.8.4.1.bin
switch# copy tftp://tftpserver.cisco.com/MDS/m9700-sf4ek9-mz.8.4.1.bin
bootflash:m9700-sf4ek9-mz.8.4.1.bin
```

Step 4 Initiate the migration process on the active Supervisor-1 Module, using the **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command in global config mode.

**Note**

The **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command is supported on Cisco MDS NX-OS Release 8.4(1) or later on Cisco MDS 9710 and Cisco MDS 9706 Director switches. On Cisco MDS 9718 Director switch, the migration command is supported from Cisco MDS NX-OS Release 8.4(2a) or later. **Invalid command** message is displayed, if this command is executed on the other versions of the Cisco MDS NX-OS release.

**Note**

This command verifies if the images are compatible with the current system and the kickstart image. If the images are not compatible, the following error message is displayed:

```
ERROR !! Version of kickstart image provided (8.x.x) does not match running version.
```

```
switch# configure terminal
switch(config)# migrate sup kickstart m9700-sf4ek9-kickstart-mz.8.4.1.bin
system m9700-sf4ek9-mz.8.4.1.bin
```

Kickstart image file is /bootflash/m9700-sf4ek9-kickstart-mz.8.4.1.bin
System image file is /bootflash/m9700-sf4ek9-kickstart-mz.8.4.1.bin

**Note**

The switch release version and the targeted migration release version must be same. If there is a mismatch in the release versions, the following error message is displayed:

```
ERROR!!! Running system version: 8.4(1), version of system image provided: 8.4(2b)
<Fri Oct 23 16:08:44 2020> ERROR!!! Version of system image provided
('m9700-sf4ek9-mz.8.4.2b.bin') does not match running version, aborting migration.
```

Step 5 During the migration, enter “y” when prompted to do so.

**Note**

After this point, the migration process will be locked and you cannot cancel the migration process. The **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command checks if it has to initiate a single supervisor or dual supervisor migration process by checking if there is a standby Supervisor-1 Module that is installed in the switch.

**Note**

In the following system message, Supervisor-1 Module (DS-X97-SF1-K9) is listed as Supervisor Module-3.

This will start the Supervisor-3 to Supervisor-4 migration. Configuration will be locked until migration is complete.
Do you wish to continue (y/n) [n] **y**

The following syslog is displayed:

```
<Tue Jun 25 15:06:56 2019> Starting migration, Please do not remove any linecards or
fabric cards until migration is complete
2019 Jun 25 15:06:56 switch %PLATFORM-2-MOD_PWRDN: Module 5 powered down (Serial number
JAE194005JC)
2019 Jun 25 15:06:56 switch %PLATFORM-5-MOD_STATUS: Module 5 current-status is
MOD_STATUS_CONFIGPOWERED_DOWN
2019 Jun 25 15:06:56 switch %PLATFORM-5-MOD_STATUS: Module 5 current-status is
MOD_STATUS_POWERED_DOWN
```

Step 6 After the standby supervisor module is powered down, replace the standby supervisor module with the new Supervisor-4 Module, as explained in the [“Installing a Supervisor Module”](#) section on page 4-106 and the [“Removing a Supervisor Module”](#) section on page 4-108. When the Supervisor-4 Module is detected in the standby supervisor slot, a netboot is initiated with the image that is provided by using the **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command.

```
<Tue Jun 25 15:06:57 2019> Manual-boot is enabled for Standby Supervisor
<Tue Jun 25 15:06:57 2019> Please remove Supervisor-3 (DS-X97-SF1-K9) module from slot 5
and insert Supervisor-4 (DS-X97-SF4-K9) module within 30 minutes
2019 Jun 25 15:06:57 switch %PLATFORM-2-MOD_REMOVE: Module 5 removed (Serial number
JAE194005JC)
```

**Note**

In the following system message, Supervisor-1 Module (DS-X97-SF1-K9) is listed as Supervisor Module-3.


```
2019 Jun 25 15:07:33 switch %PLATFORM-2-SINGLE_EJECTOR_STAT_CHANGED: Ejector's status in
slot 5 has changed, Ejector is OPEN
2019 Jun 25 15:07:34 switch %PLATFORM-2-MOD_REMOVE: Module 5 removed (Serial number
JAE194005JC)
```

**Note**

You have to insert the Supervisor-4 Module into the switch within a period of 30 minutes after initiating the **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command. In case you have not inserted the Supervisor-4 Module within 30 minutes after executing the commands, perform the [Step 4](#) to [Step 6](#) again and continue the migration process.

**Note**

After the Supervisor-4 Module is inserted in the slot 5, a timeout of 45 minutes is triggered for the Supervisor-4 Module to power up and come online. If the Supervisor-4 Module fails to power up and come online at the first attempt, a retry is initiated every 15 minutes. If the Supervisor-4 Module fails to come online after three retries or 45 minutes, you have to remove the Supervisor-4 Module and restart the migration process by using the **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command.

Once the standby module is physically replaced, the following syslog message is displayed on the active Supervisor-1 Module syslogs:

```
2019 Jun 25 15:07:57 switch %PLATFORM-2-MODULE_EJECTOR_POLICY_ENABLED: All Ejectors closed
for module 5. Ejector based shutdown enabled
2019 Jun 25 15:07:57 switch %PLATFORM-2-MOD_DETECT: Module 5 detected (Serial number
:unavailable) Module-Type Supervisor Module-4 Model :unavailable
```

The following system message is displayed:

```
<Tue Jun 25 15:08:07 2019> Supervisor-4 (DS-X97-SF4-K9) is detected in slot 5
<Tue Jun 25 15:08:12 2019> Reloading standby. This might take up to 15 minutes. Please
wait ...
2019 Jun 25 15:08:13 sw9710-SUP3-101 %PLATFORM-2-PFM_STANDBY_MODULE_RESET_MIGRATION:
Reloading Standby Supervisor as part of Supervisor migration
```

Step 7 Wait for approximately 20 minutes for the new Supervisor-4 Module to come up in the HA-standby state.

The following messages are displayed on the active Supervisor-1 Module:

```
<Tue Jun 25 15:10:13 2019> Standby supervisor not yet online. This might take some time,
Please wait ...
<Tue Jun 25 15:12:13 2019> Standby supervisor not yet online. This might take some time,
Please wait ...
2019 Jun 25 15:12:18 switch %SYSMGR-2-ACTIVE_LOWER_MEM_THAN_STANDBY: Active supervisor in
slot 6 is running with less memory than standby supervisor in slot 5.
2019 Jun 25 15:12:27 switch %USBHSD-STANDBY-2-MOUNT: logflash: online
2019 Jun 25 15:12:27 switch %USBHSD-STANDBY-2-MOUNT: USB1: online
2019 Jun 25 15:12:32 switch %BOOTVAR-5-NEIGHBOR_UPDATE_AUTOCOPY: auto-copy supported by
neighbor supervisor, starting...
2019 Jun 25 15:14:05 switch %PLATFORM-1-PFM_ALERT: Disabling ejector based shutdown on sup
in slot 5
<Tue Jun 25 15:14:13 2019> Standby supervisor not yet online. This might take some time,
Please wait ...
```

**Note**

If you see the following failure message, ignore the message, the active Supervisor-1 Module will bring up the standby Supervisor-4 Module to the HA-standby supervisor state in some time.

```
Tue Jun 25 15:14:13 2019 switch %SYSMGR-2-STANDBY_BOOT_FAILED: Standby supervisor failed
to boot up.
```

The following message is displayed when the standby module (Supervisor-4 Module in slot 5) is online:

```
2019 Jun 25 15:15:06 switch %MODULE-5-STANDBY_SUP_OK: Supervisor 5 is standby
2019 Jun 25 15:15:07 switch %PLATFORM-1-PFM_ALERT: Enabling ejector based shutdown on sup
in slot 6
<Tue Jun 25 15:15:33 2019> Standby Supervisor-4 (DS-X97-SF4-K9) has come online, configs
will be copied
```

Step 8 System will automatically do a **copy running-config to startup-config**.

The following message is displayed:

```
<Tue Jun 25 15:15:33 2019> Saving configuration now. Please wait ...
[#####] 100%
Copy complete.
/mnt/plog/migration.log: 2.78 kB 71.36 kB/s
<Tue Jun 25 15:15:46 2019> Supervisor-3 (DS-X97-SF1-K9) will switchover to Supervisor-4
(DS-X97-SF4-K9) now
<Tue Jun 25 15:15:46 2019> Switchover is successful, Supervisor-4 (DS-X97-SF4-K9) is now
active
```

Step 9 Once the standby module comes online, a system switchover happens and the new Supervisor-4 Module becomes the current active. This process moves the Supervisor-4 Module from the HA-standby mode to active mode. The SSH/telnet session is disconnected during the switchover. You have to reconnect to the SSH/telnet session. Also, ensure that the console link and the management link are connected to the Supervisor-4 Module.

The following syslog message is displayed on the active Supervisor-4 Module:

Supervisor-4 Module syslogs

```
switch(standby) login: 2019 Jun 25 15:15:47 switch %KERN-2-SYSTEM_MSG: [ 377.107557]
Switchover started by redundancy driver - kernel
2019 Jun 25 15:15:47 switch %SYSMGR-2-HASWITCHOVER_PRE_START: This supervisor is becoming
active (pre-start phase).

2019 Jun 25 15:15:47 switch %SYSMGR-2-HASWITCHOVER_START: Supervisor 5 is becoming active.
User Access Verification
switch login: 2019 Jun 25 15:15:48 switch %SYSMGR-2-SWITCHOVER_OVER: Switchover completed.
2019 Jun 25 15:15:48 switch %ASCII-CFG-6-INFORMATION: Reading ACFG Runtime information
2019 Jun 25 15:15:48 switch %IM-5-IM_MGMT_INTF_STATE: mgmt0 is DOWN
2019 Jun 25 15:15:48 switch %FC-REDIRECT-5-IVR_SUPPORT_ENABLED: IVR Support Enabled in
FC_Redirect. Source: Local Switch - 20:00:84:78:ac:09:35:00
2019 Jun 25 15:15:50 switch %PLATFORM-1-PFM_ALERT: Disabling ejector based shutdown on sup
in slot 5
2019 Jun 25 15:15:52 switch %BOOTVAR-2-SUP_MIGRATION_CONFIG_STARTED: Setting boot
parameters for supervisor migration process. It might take some time. Please do not set
any config parameters during this time or do not replace standby.
2019 Jun 25 15:15:56 switch %IM-5-IM_MGMT_INTF_STATE: mgmt0 is UP

User Access Verification
switch login: 2019 Jun 25 15:16:39 switch %BOOTVAR-2-SUP_MIGRATION_CONFIG_COMPLETE:
Migration process is complete now. Supervisor-3 (DS-X97-SF1-K9) in standby slot can now be
replaced with Supervisor-4 (DS-X97-SF4-K9).
2019 Jun 25 15:18:00 switch %SYSMGR-2-SBY_SUP_LESS_MEMORY_SLOT: Supervisor in slot 6 is
running with less memory than active supervisor in slot 5
2019 Jun 25 15:18:00 switch %SYSMGR-2-CONVERT_STARTUP_ABORTED: Conversion of
startup-config failed.
2019 Jun 25 15:18:00 switch %PLATFORM-2-MOD_PWRDN: Module 6 powered down (Serial number
JAE17440HVB)
```

```

2019 Jun 25 15:18:00 switch %PLATFORM-5-MOD_STATUS: Module 6 current-status is
MOD_STATUS_CONFIGPOWERED_DOWN
2019 Jun 25 15:18:00 switch %PLATFORM-5-MOD_STATUS: Module 6 current-status is
MOD_STATUS_POWERED_DOWN
2019 Jun 25 15:18:00 switch %PLATFORM-2-MOD_REMOVE: Module 6 removed (Serial number
JAE17440HVB)

```

**Note**

The old active Supervisor-1 Module will be powered down. The supervisor Status LED will be blinking red, when the supervisor module is powered down by the migration command. If the Status LED is not blinking red, then check the migration status using the **show logging onboard migration status** command on any management session.

- Step 10** In a dual supervisor module migration, the first supervisor module migration is complete, the following syslog message is displayed. Replace your second supervisor module now.

```

2019 Jun 25 15:18:0 switch %BOOTVAR-2-SUP_MIGRATION_CONFIG_COMPLETE: Migration process is
complete now. Supervisor-3 (DS-X97-SF1-K9) in standby slot can now be replaced with
Supervisor-4 (DS-X97-SF4-K9) .

```

**Warning**

A mix of different Supervisor-4 Modules and Supervisor-1/Supervisor 1E Modules outside a maintenance window is not supported. This mix of modules is supported only while you are migrating from a Supervisor-1/Supervisor 1E Module to a Supervisor-4 Module.

- Step 11** (Optional) After the switchover to the Supervisor-4 Module is completed, the boot parameters are set for the supervisor migration process. Do not set any configuration parameters until the boot parameters are set. After the boot parameters are set, the migration process is complete. Use the **show boot** command to display the current boot variables and the **show module** command to display the modules installed in the switch.

Supervisor-4 Module outputs

```
switch# show boot
```

```

kickstart variable = bootflash:/m9700-sf4ek9-kickstart-mz.8.4.1.bin
system variable = bootflash:/m9700-sf4ek9-mz.8.4.1.bin
Boot POAP Disabled

```

```
switch# show module
```

Mod	Ports	Module-Type	Model	Status
1	48	1/10 Gbps Ethernet Module	DS-X9848-480K9	ok
2	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
3	24	40 Gbps FCoE Module	DS-X9824-960K9	ok
4	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
5	0	Supervisor Module-4	DS-X97-SF4-K9	active *
6	0	Supervisor Module-3	DS-X97-SF1-K9	powered-dn
7	34	1/10/40G IPS, 2/4/8/10/16G FC Module	DS-X9334-K9	ok
8	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
10	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok

```
Mod Power-Status Reason
```

```
6 powered-dn Policy trigger initiated reset: Stdbby has lower mem than active
```

```
Mod Sw Hw
```

```

---
1      8.4 (1)          1.1
2      8.4 (1)          1.3
3      8.4 (1)          1.0
4      8.4 (1)          1.0
5      8.4 (1)          1.0
6      8.4 (1)          1.1
7      8.4 (1)          1.0
8      8.4 (1)          1.0
10     8.4 (1)          1.1

```

```

Mod  MAC-Address(es)          Serial-Num
---
1      84-78-ac-1b-3d-58 to 84-78-ac-1b-3d-8b JAF1718AAAD
2      f4-cf-e2-7c-cd-30 to f4-cf-e2-7c-cd-33 JAE1847038X
3      04-6c-9d-32-36-aa to 04-6c-9d-32-37-1b JAE19330ASN
4      00-76-86-bf-58-23 to 00-76-86-bf-58-57 JAE203901ZG
5      00-2f-5c-fc-54-0a to 00-2f-5c-fc-54-1d JAE22440CB1
6      00-00-00-00-00-00 to 00-00-00-00-00-00 NA
7      00-da-55-a2-25-00 to 00-da-55-a2-25-0f JAE195004XM
8      74-86-0b-33-c6-70 to 74-86-0b-33-c6-a4 JAE213101Q3
10     3c-0e-23-c5-53-d0 to 3c-0e-23-c5-53-d3 JAE180605X3

```

```

Mod  Online Diag Status
---
1      Pass
2      Pass
3      Pass
4      Pass
5      Pass
7      Pass
8      Pass
10     Pass

```

```

Xbar  Ports  Module-Type          Model          Status
---
1      0      Fabric Module 1      DS-X9710-FAB1  ok
2      0      Fabric Module 1      DS-X9710-FAB1  ok
3      0      Fabric Module 1      DS-X9710-FAB1  ok
4      0      Fabric Module 1      DS-X9710-FAB1  ok
5      0      Fabric Module 1      DS-X9710-FAB1  ok
6      0      Fabric Module 1      DS-X9710-FAB1  ok

```

```

Xbar  Sw          Hw
---
1      NA          1.0
2      NA          1.0
3      NA          1.0
4      NA          1.0
5      NA          1.0
6      NA          1.0

```

```

Xbar  MAC-Address(es)          Serial-Num
---
1      NA          JAE222305VS
2      NA          JAE2217096X
3      NA          JAE222305V5
4      NA          JAE2217096L
5      NA          JAE2217096J
6      NA          JAE222305V8

```

- Step 12** (Optional) If the standby Supervisor-1 Module is not in the **powered-dn** state, then put the standby Supervisor-1 Module to out of service, using the **out-of-service module slot** command .

Where a *slot* indicates the chassis slot number in which the standby supervisor module resides.

```
switch(config)# out-of-service module 6
```

- Step 13** Physically replace the standby Supervisor-1 Module (slot 6) with the second Supervisor-4 Module. To replace the supervisor module, follow the steps explained in the [“Installing a Supervisor Module” section on page 4-106](#) and the [“Removing a Supervisor Module” section on page 4-108](#).

The following message is displayed:

```
2019 Jun 25 15:21:13 switch %PLATFORM-2-SINGLE_EJECTOR_STAT_CHANGED: Ejector's status in
slot 6 has changed, Ejector is OPEN
2019 Jun 25 15:21:15 switch %PLATFORM-2-MOD_REMOVE: Module 6 removed (Serial number
JAE17440HVB)
```

After inserting the new standby Supervisor-4 Module, the following message is displayed:

```
2019 Jun 25 15:21:27 switch %PLATFORM-2-MODULE_EJECTOR_POLICY_ENABLED: All Ejectors closed
for module 6. Ejector based shutdown enabled
2019 Jun 25 15:21:27 switch %PLATFORM-2-MOD_DETECT: Module 6 detected (Serial number
:unavailable) Module-Type Supervisor Module-4 Model :unavailable
```

- Step 14** Wait for approximately 20 minutes for the new Supervisor-4 Module to come up in the HA-standby state. Once the standby supervisor module is in the HA-standby state, the supervisor Status LED will be green.



Note

If you see the following failure message, ignore the message, the active Supervisor-4 Module will bring up the standby Supervisor-4 Module to the HA-standby supervisor state in some time.

```
2019 Jun 25 15:36:45 switch %SYSMGR-2-STANDBY_BOOT_FAILED: Standby supervisor failed to
boot up.
```

The following message is displayed on the active Supervisor-4 Module:

```
2019 Jun 25 15:36:45 switch %USBHSD-STANDBY-2-MOUNT: logflash: online
2019 Jun 25 15:36:49 switch %BOOTVAR-5-NEIGHBOR_UPDATE_AUTOCOPY: auto-copy supported by
neighbor supervisor, starting...
2019 Jun 25 15:38:30 switch %PLATFORM-1-PFM_ALERT: Disabling ejector based shutdown on sup
in slot 6
2019 Jun 25 15:39:38 switch %MODULE-5-STANDBY_SUP_OK: Supervisor 6 is standby
2019 Jun 25 15:39:39 switch %PLATFORM-1-PFM_ALERT: Enabling ejector based shutdown on sup
in slot 5
```

- Step 15** Reinstall the license files on the new Supervisor-4 Modules.

```
switch(config)# copy usb1:licenses_archive_file_name.tar bootflash:switch_license.tar
```

```
Copy progress 100% 10KB
Copy complete, now saving to disk (please wait)...
```

```
switch(config)# copy bootflash:switch_license.tar bootflash:switch_license.lic
```

```
Copy progress 100% 10KB
Copy complete, now saving to disk (please wait)...
```

```
switch(config)# install license bootflash:switch_license.lic
```

```
Installing license .....done
```

```
switch# show license usage
```

Feature	Ins	Lic Count	Status	Expiry Date	Comments
IOA_X9334	No	0	In use		Grace 115D 2H
FM_SERVER_PKG	No	-	Unused		-
MAINFRAME_PKG	No	-	Unused		-
ENTERPRISE_PKG	Yes	-	Unused never		-
SAN_ANALYTICS_PKG	No	-	In use		Grace 119D 20H
SAN_TELEMETRY_PKG	No	-	Unused		Grace 109D 1H

**Note**

After the supervisor module migration, the license manager will retain the state of the license expiry timer as before the migration. After the grace period is expired, all features using the license will get disabled and the configurations will be removed. If a license has expired (any term), it will remain enabled after the supervisor migration until a switch reboot.

Refer the [“Verification” section on page 4-133](#) to verify that the Supervisor-1 Module configurations are successfully applied to the Supervisor-4 Module.

```
switch# show module
```

Mod	Ports	Module-Type	Model	Status
1	48	1/10 Gbps Ethernet Module	DS-X9848-480K9	ok
2	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
3	24	40 Gbps FCoE Module	DS-X9824-960K9	ok
4	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
5	0	Supervisor Module-4	DS-X97-SF4-K9	active *
6	0	Supervisor Module-4	DS-X97-SF4-K9	ha-standby
7	34	1/10/40G IPS, 2/4/8/10/16G FC Module	DS-X9334-K9	ok
8	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
10	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok

Mod	Sw	Hw
1	8.4(1)	1.1
2	8.4(1)	1.3
3	8.4(1)	1.0
4	8.4(1)	1.0
5	8.4(1)	1.0
6	8.4(1)	1.0
7	8.4(1)	1.0
8	8.4(1)	1.0
10	8.4(1)	1.1

Mod	MAC-Address(es)	Serial-Num
1	84-78-ac-1b-3d-58 to 84-78-ac-1b-3d-8b	JAF1718AAAD
2	f4-cf-e2-7c-cd-30 to f4-cf-e2-7c-cd-33	JAE1847038X
3	04-6c-9d-32-36-aa to 04-6c-9d-32-37-1b	JAE19330ASN
4	00-76-86-bf-58-23 to 00-76-86-bf-58-57	JAE203901ZG
5	00-2f-5c-fc-54-0a to 00-2f-5c-fc-54-1d	JAE22440CB1
6	00-2f-5c-fc-81-b4 to 00-2f-5c-fc-81-c7	JAE22490XKJ
7	00-da-55-a2-25-00 to 00-da-55-a2-25-0f	JAE195004XM
8	74-86-0b-33-c6-70 to 74-86-0b-33-c6-a4	JAE213101Q3
10	3c-0e-23-c5-53-d0 to 3c-0e-23-c5-53-d3	JAE180605X3

Mod	Online	Diag	Status
---	-----	-----	-----

```

1    Pass
2    Pass
3    Pass
4    Pass
5    Pass
6    Pass
7    Pass
8    Pass
10   Pass

```

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric Module 1	DS-X9710-FAB1	ok
2	0	Fabric Module 1	DS-X9710-FAB1	ok
3	0	Fabric Module 1	DS-X9710-FAB1	ok
4	0	Fabric Module 1	DS-X9710-FAB1	ok
5	0	Fabric Module 1	DS-X9710-FAB1	ok
6	0	Fabric Module 1	DS-X9710-FAB1	ok

Xbar	Sw	Hw
1	NA	1.0
2	NA	1.0
3	NA	1.0
4	NA	1.0
5	NA	1.0
6	NA	1.0

Xbar	MAC-Address(es)	Serial-Num
1	NA	JAE222305VS
2	NA	JAE2217096X
3	NA	JAE222305V5
4	NA	JAE2217096L
5	NA	JAE2217096J
6	NA	JAE222305V8

To view the inventory information for modules from the Cisco DCNM Web UI, Choose **Inventory > View > Modules**. The **Modules** window is displayed with a list of all the switches and its details for a selected scope.

For more information, see the *Cisco DCNM SAN Management Configuration Guide*.

What to Do Next

Migrate the Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules. For more information, see the [“Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules”](#) section on page 4-160.

Switch with Only Active Supervisor Module

To perform a nondisruptive migration from a Supervisor-1/Supervisor-1E Module to a Supervisor-4 Module in a switch that has only the active supervisor module installed and there is no standby supervisor module, or the standby module is not in the HA-standby state, follow these steps:



Note

In the following procedure, all show outputs, system messages, and image file names are displayed for the Cisco MDS 9710 Multilayer Director Switch. The show outputs, system messages, and image file names will vary based on the Cisco MDS 9700 Series Multilayer Director Switch selected.

Step 1 Use the **show module** command to view the Active and Standby supervisor modules.



Note

In the following system message, Supervisor-1 Module (DS-X97-SF1-K9) is listed as Supervisor Module-3.

```
switch# show module
```

Mod	Ports	Module-Type	Model	Status
1	48	1/10 Gbps Ethernet Module	DS-X9848-480K9	ok
2	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
3	24	40 Gbps FCoE Module	DS-X9824-960K9	ok
4	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
5	0	Supervisor Module-3	DS-X97-SF1-K9	active *
7	34	1/10/40G IPS, 2/4/8/10/16G FC Module	DS-X9334-K9	ok
8	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
10	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok

Mod	Sw	Hw
1	8.4(1)	1.1
2	8.4(1)	1.3
3	8.4(1)	1.0
4	8.4(1)	1.0
5	8.4(1)	1.3
6	8.4(1)	1.1
7	8.4(1)	1.0
8	8.4(1)	1.0
10	8.4(1)	1.1

Mod	MAC-Address(es)	Serial-Num
1	84-78-ac-1b-3d-58 to 84-78-ac-1b-3d-8b	JAF1718AAAD
2	f4-cf-e2-7c-cd-30 to f4-cf-e2-7c-cd-33	JAE1847038X
3	04-6c-9d-32-36-aa to 04-6c-9d-32-37-1b	JAE19330ASN
4	00-76-86-bf-58-23 to 00-76-86-bf-58-57	JAE203901ZG
5	9c-57-ad-fd-0d-cb to 9c-57-ad-fd-0d-dd	JAE194005JC
6	e8-ed-f3-e5-9a-4d to e8-ed-f3-e5-9a-5f	JAE17440HVB
7	00-da-55-a2-25-00 to 00-da-55-a2-25-0f	JAE195004XM
8	74-86-0b-33-c6-70 to 74-86-0b-33-c6-a4	JAE213101Q3
10	3c-0e-23-c5-53-d0 to 3c-0e-23-c5-53-d3	JAE180605X3

Mod	Online Diag Status
1	Pass
2	Pass
3	Pass
4	Pass
5	Pass
6	Pass
7	Pass
8	Pass
10	Pass

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric Module 1	DS-X9710-FAB1	ok
2	0	Fabric Module 1	DS-X9710-FAB1	ok
3	0	Fabric Module 1	DS-X9710-FAB1	ok
4	0	Fabric Module 1	DS-X9710-FAB1	ok


```

5      0      Fabric Module 1      DS-X9710-FAB1      ok
6      0      Fabric Module 1      DS-X9710-FAB1      ok

```

```

Xbar Sw      Hw
---
1      NA      1.0
2      NA      1.0
3      NA      1.0
4      NA      1.0
5      NA      1.0
6      NA      1.0

```

```

Xbar MAC-Address(es)      Serial-Num
---
1      NA      JAE222305VS
2      NA      JAE2217096X
3      NA      JAE222305V5
4      NA      JAE2217096L
5      NA      JAE2217096J
6      NA      JAE222305V8

```

Step 2 Ensure that the required space is available in the bootflash: directory for the image files to be copied using the **dir bootflash:** command. Use the **delete bootflash: filename** command to remove any unnecessary files.

Step 3 Copy the Supervisor-4 Module Cisco NX-OS kickstart and system images to the active supervisor module bootflash, using an FTP, TFTP, SCP, SFTP, or a USB flash drive.



Note The Supervisor-4 images contain the string **sf4** to identify them. Do not rename the images, use the standard image names.

```

switch# copy tftp://tftpserver.cisco.com/MDS/m9700-sf4ek9-kickstart-mz.8.4.1.bin
bootflash:m9700-sf4ek9-kickstart-mz.8.4.1.bin
switch# copy tftp://tftpserver.cisco.com/MDS/m9700-sf4ek9-mz.8.4.1.bin
bootflash:m9700-sf4ek9-mz.8.4.1.bin

```

Step 4 Initiate the migration process of the active Supervisor-1 Module, using the **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command in global config mode.



Note The **migrate sup kickstart <supervisor4-kickstart-image> system <supervisor4-system-image>** command is supported on Cisco MDS NX-OS Release 8.4(1) or later. **Invalid command** message is displayed, if this command is executed on other versions of Cisco MDS NX-OS release.



Note This command will verify if the images are compatible with the current system and the kickstart images. If the images are not compatible, the following error message is displayed:

```

ERROR !! Version of kickstart image provided (8.x.x) does not match running version.

```

```

switch# configure terminal
switch(config)# migrate sup kickstart m9700-sf4ek9-kickstart-mz.8.4.1.bin
system m9700-sf4ek9-mz.8.4.1.bin

```

```

Kickstart image file is /bootflash/m9700-sf4ek9-kickstart-mz.8.4.1.bin

```

System image file is /bootflash/m9700-sf4ek9-kickstart-mz.8.4.1.bin

Step 5 During the migration, enter “y” when prompted to do so.



Note

After this point, the migration process will be locked and you cannot cancel the migration process. The **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command will then check if it has to initiate a single supervisor or dual supervisor migration process by checking if there a standby Supervisor-1 Module is installed in the switch.



Note

In the following system message, Supervisor-1 Module (DS-X97-SF1-K9) is listed as Supervisor Module-3.

This will start the Supervisor-3 to Supervisor-4 migration. Configuration will be locked until migration is complete.

Do you wish to continue (y/n) [n] **y**

The following syslog is displayed:

```
<Tue Jun 25 15:06:56 2019> Starting migration, Please do not remove any linecards or
fabric cards until migration is complete
```

Step 6 Insert the new Supervisor-4 Module, as explained in the “Installing a Supervisor Module” section on page 4-106 and the “Removing a Supervisor Module” section on page 4-108 section. When the Supervisor-4 Module is detected in the standby supervisor slot, a boot from a network (TFTP) server is initiated with the image that is provided by using the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command.



Note

You have to insert the Supervisor-4 Module into the switch within a period of 30 minutes after initiating the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command. In case you have not inserted the Supervisor-4 Module within the 30 minutes after executing the command, you have to execute the command again and re-initiate the migration process.

```
<Tue Jun 25 15:06:57 2019> Manual-boot is enabled for Standby Supervisor
<Tue Jun 25 15:06:57 2019> Please insert Supervisor-4 (DS-X97-SF4-K9) in slot
number: 6 within 30 minutes
```



Note

After the Supervisor-4 Module is inserted in the slot, a timeout of 45 minutes is triggered for the Supervisor-4 Module to power up and come online. If the Supervisor-4 Module fails to power up and come online at the first attempt, a retry is initiated every 15 minutes. In case the Supervisor-4 Module fails to come online after three retries or 45 minutes, you have to remove the Supervisor-4 Module and restart the migration process by using the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command.

The following system message is displayed:

```
<Tue Jun 25 15:08:07 2019> Supervisor-4(DS-X97-SF4-K9) detected in slot 6.
<Tue Jun 25 15:08:12 2019> Reloading standby. This might take up to 15 minutes. Please
wait
..
2019 Jun 25 15:08:13 switch %PLATFORM-2-PFM_STANDBY_MODULE_RESET_MIGRATION: Reloading
Standby Supervisor as part of Supervisor migration
```

- Step 7** Wait for approximately 20 minutes for the new Supervisor-4 Module to come up in HA-standby state. The following messages are displayed on the active Supervisor-1 Module:

```
<Tue Jun 25 15:10:13 2019> Standby supervisor not yet online. This will take some time.
Please wait ...
<Tue Jun 25 15:12:13 2019> Standby supervisor not yet online. This will take some time.
Please wait ...

2019 Jun 25 15:12:18 switch %SYSMGR-2-ACTIVE_LOWER_MEM_THAN_STANDBY: Active supervisor in
slot 5 is running with less memory than standby supervisor in slot 6.
2019 Jun 25 15:12:18 switch %USBHSD-STANDBY-2-MOUNT: logflash: online
2019 Jun 25 15:12:18 switch %BOOTVAR-5-NEIGHBOR_UPDATE_AUTOCOPY: auto-copy supported by
neighbor supervisor, starting...

<Tue Jun 25 15:14:13 2019> Standby supervisor not yet online. This will take some time.
Please wait ...
2019 Jun 25 15:14:05 switch %PLATFORM-1-PFM_ALERT: Disabling ejector based shutdown on sup
in slot 6
<Tue Jun 25 15:14:13 2019> Standby supervisor not yet online. This will take some time.
Please wait ...
```

**Note**

If you see the following failure message, ignore the message, the active Supervisor-1 Module will bring up the standby Supervisor-4 Module to HA-standby supervisor state in some time.

```
2019 Jun 25 15:15:06 switch %SYSMGR-2-STANDBY_BOOT_FAILED: Standby supervisor failed to
boot up.
```

The following message is displayed when the standby module is online:

```
2019 Jun 25 15:15:06 switch %CARDCLIENT-2-SSE: MOD:6 SUP ONLINE
2019 Jun 25 15:15:07 switch %MODULE-5-STANDBY_SUP_OK: Supervisor 6 is standby
2019 Jun 25 15:15:08 switch %PLATFORM-1-PFM_ALERT: Enabling ejector based shutdown on sup
in slot 6
<Tue Jun 25 15:15:33 2019> Standby Supervisor-4 (DS-X97-SF4-K9) has come online, configs
will be copied
```

- Step 8** System will automatically do a **copy running-config to startup-config**.

The following message is displayed:

```
<Tue Jun 25 15:15:33 2019> Saving configuration now. Please wait ...
[#####] 100%
Copy complete.
/mnt/plog/migration.log: 2.91 kB 74.67 kB/s
<Tue Jun 25 15:15:46 2019> Supervisor-3 (DS-X97-SF1-K9) will switchover to Supervisor-4
(DS-X97-SF4-K9) now
<Tue Jun 25 15:15:47 2019> Switchover is successful, Supervisor-4 (DS-X97-SF4-K9) is now
active
```

- Step 9** Once the standby module comes online, a system switchover happens and the new Supervisor-4 Module becomes the current active supervisor. This process moves the Supervisor-4 Module from the HA-standby mode to active mode. The SSH/telnet session is disconnected during the switchover. You have to reconnect to the SSH/telnet session with the same IP address. Also, ensure that the console link and the management link are connected to the newly inserted Supervisor-4 Module.

The following syslog message is displayed on the active Supervisor-4 Module:

Supervisor-4 Module syslogs

```
2019 Jun 25 15:15:47 switch %SYSMGR-2-HASWITCHOVER_PRE_START: This supervisor is becoming
active (pre-start phase).
2019 Jun 25 15:15:48 switch %SYSMGR-2-HASWITCHOVER_START: Supervisor 6 is becoming active.
2019 Jun 25 15:15:48 switch %IPS-5-IPS_MGR_FEATURE_ENABLE: Restore cond runtime ips:0
iscsi:0 fcip:0 iscsi-intf-vsan:0 ips-lc:1
2019 Jun 25 15:15:48 switch %ASCII-CFG-6-INFORMATION: Reading ACFG Runtime information
2019 Jun 25 15:15:48 switch %SYSMGR-2-SWITCHOVER_OVER: Switchover completed.
2019 Jun 25 15:15:48 switch %PLATFORM-1-PFM_ALERT: Disabling ejector based shutdown on sup
in slot 6
```

```
2019 Jun 25 15:15:50 switch %BOOTVAR-2-SUP_MIGRATION_CONFIG_STARTED: Setting boot
parameters for supervisor migration process. It might take some time. Please do not set
any config parameters during this time.
```

```
2019 Jun 25 15:15:52 switch %PLATFORM-2-SUP_UNSUPPORTED: Unsupported card detected in
supervisor slot 5 powered down
2019 Jun 25 15:15:52 switch %PLATFORM-2-MOD_PWRDN: Module 5 powered down (Serial number )
2019 Jun 25 15:15:52 switch %PLATFORM-5-MOD_STATUS: Module 5 current-status is
MOD_STATUS_CONFIGPOWERED_DOWN
2019 Jun 25 15:15:53 switch %PLATFORM-5-MOD_STATUS: Module 5 current-status is
MOD_STATUS_POWERED_DOWN
```



Note

The old active Supervisor-1 Module will be powered down. The supervisor Status LED will be blinking red, when the supervisor module is powered down by the migration command. If the Status LED is not blinking red, then check the migration status using the **show logging onboard migration status** command on any management session.

Step 10 After the successful completion of the system switchover, the following syslog message is displayed:

```
2019 Jun 25 15:16:39 switch %BOOTVAR-2-SUP_MIGRATION_CONFIG_COMPLETE: Migration process is
complete now. Supervisor-3 (DS-X97-SF1-K9) in standby slot can now be replaced with
Supervisor-4 (DS-X97-SF4-K9).
2019 Jun 25 15:18:00 switch %SYSMGR-2-SBY_SUP_LESS_MEMORY_SLOT: Supervisor in slot 6 is
running with less memory than active supervisor in slot 5
2019 Jun 25 15:18:00 switch %SYSMGR-2-CONVERT_STARTUP_ABORTED: Conversion of
startup-config failed.
2019 Jun 25 15:18:00 switch %PLATFORM-2-MOD_PWRDN: Module 6 powered down (Serial number
JAE17440HVB)
2019 Jun 25 15:18:00 switch %PLATFORM-5-MOD_STATUS: Module 6 current-status is
MOD_STATUS_CONFIGPOWERED_DOWN
2019 Jun 25 15:18:00 switch %PLATFORM-5-MOD_STATUS: Module 6 current-status is
MOD_STATUS_POWERED_DOWN
2019 Jun 25 15:18:00 switch %PLATFORM-2-MOD_REMOVE: Module 6 removed (Serial number
JAE17440HVB)
```



Warning

A mix of different Supervisor-4 Modules and Supervisor-1/Supervisor-1E Modules outside a maintenance window is not supported. This mix of modules is supported only while you are migrating from a Supervisor-1/Supervisor-1E Module to a Supervisor-4 Module. If there is mix of Supervisor-1 and Supervisor-4 module, the chassis will power down the standby supervisor module, and the first supervisor module that comes up will become the active supervisor.

- Step 11** (Optional) The system will automatically start the boot parameter setup for the supervisor migration process. Do not set any configuration parameters until the boot parameters are set. After the boot parameters are set, the migration process is completed for the first supervisor module. Use the **show boot** command to verify the current boot variables and the **show module** command to display the modules installed in the switch.

Supervisor-4 Module outputs

switch# **show boot**

```
kickstart variable = bootflash:/m9700-sf4ek9-kickstart-mz.8.4.1.bin
system variable = bootflash:/m9700-sf4ek9-mz.8.4.1.bin
Boot POAP Disabled
```

switch# **show module**

Mod	Ports	Module-Type	Model	Status
1	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
2	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
3	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
4	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
5	0	Supervisor Module-3	DS-X97-SF1-K9	powered-dn
6	0	Supervisor Module-4	DS-X97-SF4-K9	active *
7	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
8	48	1/10 Gbps Ethernet Module	DS-X9848-480K9	ok
10	34	1/10/40G IPS,2/4/8/10/16G FC Module	DS-X9334-K9	ok

Mod	Power-Status	Reason
6	powered-dn	Policy trigger initiated reset: Stdbys has lower mem than active

Mod	Sw	Hw
1	8.4(1)	1.1
2	8.4(1)	1.3
3	8.4(1)	1.0
4	8.4(1)	1.0
5	8.4(1)	1.0
6	8.4(1)	1.1
7	8.4(1)	1.0
8	8.4(1)	1.0
10	8.4(1)	1.1

Mod	MAC-Address(es)	Serial-Num
1	84-78-ac-1b-3d-58 to 84-78-ac-1b-3d-8b	JAF1718AAAD
2	f4-cf-e2-7c-cd-30 to f4-cf-e2-7c-cd-33	JAE1847038X
3	04-6c-9d-32-36-aa to 04-6c-9d-32-37-1b	JAE19330ASN
4	00-76-86-bf-58-23 to 00-76-86-bf-58-57	JAE203901ZG
5	00-2f-5c-fc-54-0a to 00-2f-5c-fc-54-1d	JAE22440CB1
6	00-00-00-00-00-00 to 00-00-00-00-00-00	NA
7	00-da-55-a2-25-00 to 00-da-55-a2-25-0f	JAE195004XM
8	74-86-0b-33-c6-70 to 74-86-0b-33-c6-a4	JAE213101Q3
10	3c-0e-23-c5-53-d0 to 3c-0e-23-c5-53-d3	JAE180605X3

Mod	Online Diag Status
1	Pass
2	Pass
3	Pass

```

4    Pass
5    Pass
7    Pass
8    Pass
10   Pass

```

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric Module 1	DS-X9710-FAB1	ok
2	0	Fabric Module 1	DS-X9710-FAB1	ok
3	0	Fabric Module 1	DS-X9710-FAB1	ok
4	0	Fabric Module 1	DS-X9710-FAB1	ok
5	0	Fabric Module 1	DS-X9710-FAB1	ok
6	0	Fabric Module 1	DS-X9710-FAB1	ok

Xbar	Sw	Hw
1	NA	1.0
2	NA	1.0
3	NA	1.0
4	NA	1.0
5	NA	1.0
6	NA	1.0

Xbar	MAC-Address(es)	Serial-Num
1	NA	JAE222305VS
2	NA	JAE2217096X
3	NA	JAE222305V5
4	NA	JAE2217096L
5	NA	JAE2217096J
6	NA	JAE222305V8

Step 12 Reinstall the license files on the new Supervisor-4 Module.

```
switch(config)# copy usb1:licenses_archive_file_name.tar bootflash:switch_license.tar
```

```
Copy progress 100% 10KB
Copy complete, now saving to disk (please wait)...
```

```
switch(config)# copy bootflash:switch_license.tar bootflash:switch_license.lic
```

```
Copy progress 100% 10KB
Copy complete, now saving to disk (please wait)...
```

```
switch(config)# install license bootflash:switch_license.lic
```

```
Installing license .....done
```

```
switch# show license usage
```

Feature	Ins	Lic	Status	Expiry	Date	Comments
		Count				
IOA_X9334	No	0	In use			Grace 115D 2H
FM_SERVER_PKG	No	-	Unused			-
MAINFRAME_PKG	No	-	Unused			-
ENTERPRISE_PKG	Yes	-	Unused	never		-
SAN_ANALYTICS_PKG	No	-	In use			Grace 119D 20H
SAN_TELEMETRY_PKG	No	-	Unused			Grace 109D 1H

Step 13 (Optional) If the standby Supervisor-1 Module is not in the powered down state, then put the standby Supervisor-1 Module to out of service, using the **out-of-service module slot** command .

Where a *slot* indicates the chassis slot number in which the standby supervisor module resides.

```
switch(config)# out-of-service module 6
```

Step 14 Remove the Supervisor -1 Module from the chassis.

Refer the “[Verification](#)” section on page 4-133 to verify that the Supervisor-1 Module configurations are successfully applied to the Supervisor-4 Module.

To view the inventory information for modules from the Cisco DCNM Web UI, Choose **Inventory > View > Modules**. The **Modules** window is displayed with a list of all the switches and its details for a selected scope.

For more information, see the *Cisco DCNM SAN Management Configuration Guide*.

What to Do Next

Migrate the Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules. For more information, see the “[Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules](#)” section on page 4-160

Verification

Use the following show commands to verify the migration procedure for the Supervisor-4 Module:

- **show version**
- **show module**
- **show interface brief**
- **show interface status**
- **show system redundancy status**

The following is a sample output for the show version command on the Supervisor-4 Module:



Note

In the following procedure, all show outputs, system messages, and image file names are displayed for the Cisco MDS 9710 Multilayer Director Switch. The show outputs, system messages, and image file names will vary based on the Cisco MDS 9700 Series Multilayer Director Switch selected.

```
switch# show version
```

```
Cisco Nexus Operating System (NX-OS) Software
TAC support: http://www.cisco.com/tac
Documents: http://www.cisco.com/en/US/products/ps9372/tsd_products_support_series_home.html
Copyright (c) 2002-2019, Cisco Systems, Inc. All rights reserved.
The copyrights to certain works contained in this software are
owned by other third parties and used and distributed under
license. Certain components of this software are licensed under
the GNU General Public License (GPL) version 2.0 or the GNU
Lesser General Public License (LGPL) Version 2.1. A copy of each
such license is available at
http://www.opensource.org/licenses/gpl-2.0.php and
```

<http://www.opensource.org/licenses/lgpl-2.1.php>

Software

```

BIOS:          version 2.6.0
kickstart: version 8.4(1)
system:        version 8.4(1)
BIOS compile time:      05/17/2019
kickstart image file is: bootflash:///m9700-sf4ek9-kickstart-mz.8.4.1.bin
kickstart compile time: 6/30/2019 23:00:00 [06/15/2019 14:49:08]
system image file is:   bootflash:///m9700-sf4ek9-mz.8.4.1.bin
system compile time:    6/30/2019 23:00:00 [06/15/2019 16:15:18]

```

Hardware

```

cisco MDS 9710 (10 Slot) Chassis ("Supervisor Module-4")
Intel(R) Xeon(R) CPU D-1548 with 14270332 kB of memory.
Processor Board ID JAE22440CB1

```

```

Device name: switch
bootflash:   3932160 kB
slot0:       0 kB (expansion flash)

```

Kernel uptime is 0 day(s), 0 hour(s), 36 minute(s), 9 second(s)

Last reset

```

Reason: Unknown
System version: 8.4(1)
Service:

```

plugin

Core Plugin, Ethernet Plugin

Active Package(s)

The following is a sample output for the **show module** command on the Supervisor-4 Module for a dual supervisor migration:

switch# **show module**

Mod	Ports	Module-Type	Model	Status
---	----	-----	-----	-----
1	48	1/10 Gbps Ethernet Module	DS-X9848-480K9	ok
2	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok
3	24	40 Gbps FCoE Module	DS-X9824-960K9	ok
4	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
5	0	Supervisor Module-4	DS-X97-SF4-K9	active *
6	0	Supervisor Module-4	DS-X97-SF4-K9	ha-standby
7	34	1/10/40G IPS,2/4/8/10/16G FC Module	DS-X9334-K9	ok
8	48	4/8/16/32 Gbps Advanced FC Module	DS-X9648-1536K9	ok
10	48	2/4/8/10/16 Gbps Advanced FC Module	DS-X9448-768K9	ok

Mod	Sw	Hw
---	-----	-----
1	8.4(1)	1.1
2	8.4(1)	1.3
3	8.4(1)	1.0
4	8.4(1)	1.0
5	8.4(1)	1.0
6	8.4(1)	1.0
7	8.4(1)	1.0
8	8.4(1)	1.0
10	8.4(1)	1.1


```

Mod  MAC-Address(es)                               Serial-Num
---  -
1    84-78-ac-1b-3d-58 to 84-78-ac-1b-3d-8b JAF1718AAAD
2    f4-cf-e2-7c-cd-30 to f4-cf-e2-7c-cd-33 JAE1847038X
3    04-6c-9d-32-36-aa to 04-6c-9d-32-37-1b JAE19330ASN
4    00-76-86-bf-58-23 to 00-76-86-bf-58-57 JAE203901ZG
5    00-2f-5c-fc-54-0a to 00-2f-5c-fc-54-1d JAE22440CB1
6    00-2f-5c-fc-81-b4 to 00-2f-5c-fc-81-c7 JAE22490XKJ
7    00-da-55-a2-25-00 to 00-da-55-a2-25-0f JAE195004XM
8    74-86-0b-33-c6-70 to 74-86-0b-33-c6-a4 JAE213101Q3
10   3c-0e-23-c5-53-d0 to 3c-0e-23-c5-53-d3 JAE180605X3

Mod  Online Diag Status
---  -
1    Pass
2    Pass
3    Pass
4    Pass
5    Pass
6    Pass
7    Pass
8    Pass
10   Pass

Xbar Ports  Module-Type                               Model                               Status
---  -
1    0       Fabric Module 1                          DS-X9710-FAB1                       ok
2    0       Fabric Module 1                          DS-X9710-FAB1                       ok
3    0       Fabric Module 1                          DS-X9710-FAB1                       ok
4    0       Fabric Module 1                          DS-X9710-FAB1                       ok
5    0       Fabric Module 1                          DS-X9710-FAB1                       ok
6    0       Fabric Module 1                          DS-X9710-FAB1                       ok

Xbar Sw      Hw
---  -
1    NA      1.0
2    NA      1.0
3    NA      1.0
4    NA      1.0
5    NA      1.0
6    NA      1.0

Xbar MAC-Address(es)                               Serial-Num
---  -
1    NA      JAE222305VS
2    NA      JAE2217096X
3    NA      JAE222305V5
4    NA      JAE2217096L
5    NA      JAE2217096J
6    NA      JAE222305V8

```

The following is a sample output for the **show inventory** command on the Supervisor-4 Module:

```

switch# show inventory

NAME: "Chassis",  DESCR: "MDS 9710 (10 Slot) Chassis "
PID: DS-C9710      ,  VID: V00 ,  SN: JAF1647AQTl

NAME: "Slot 1",  DESCR: "1/10 Gbps Ethernet Module"
PID: DS-X9848-480K9 ,  VID: V01 ,  SN: JAF1718AAAD

```

NAME: "Slot 2", DESCR: "2/4/8/10/16 Gbps Advanced FC Module"
 PID: DS-X9448-768K9 , VID: V02 , SN: JAE1847038X

NAME: "Slot 3", DESCR: "40 Gbps FCoE Module"
 PID: DS-X9824-960K9 , VID: V00 , SN: JAE19330ASN

NAME: "Slot 4", DESCR: "4/8/16/32 Gbps Advanced FC Module"
 PID: DS-X9648-1536K9 , VID: V01 , SN: JAE203901ZG

NAME: "Slot 5", DESCR: "Supervisor Module-3"
 PID: DS-X97-SF1-K9 , VID: V02 , SN: JAE194005JC

NAME: "Slot 6", DESCR: "Supervisor Module-3"
 PID: DS-X97-SF1-K9 , VID: V02 , SN: JAE17440HVB

NAME: "Slot 7", DESCR: "1/10/40G IPS,2/4/8/10/16G FC Module"
 PID: DS-X9334-K9 , VID: V00 , SN: JAE195004XM

NAME: "Slot 8", DESCR: "4/8/16/32 Gbps Advanced FC Module"
 PID: DS-X9648-1536K9 , VID: V01 , SN: JAE213101Q3

NAME: "Slot 10", DESCR: "2/4/8/10/16 Gbps Advanced FC Module"
 PID: DS-X9448-768K9 , VID: V01 , SN: JAE180605X3

NAME: "Slot 11", DESCR: "Fabric card module"
 PID: DS-X9710-FAB1 , VID: V00 , SN: JAE222305VS

NAME: "Slot 12", DESCR: "Fabric card module"
 PID: DS-X9710-FAB1 , VID: V00 , SN: JAE2217096X

NAME: "Slot 13", DESCR: "Fabric card module"
 PID: DS-X9710-FAB1 , VID: V00 , SN: JAE222305V5

NAME: "Slot 14", DESCR: "Fabric card module"
 PID: DS-X9710-FAB1 , VID: V00 , SN: JAE2217096L

NAME: "Slot 15", DESCR: "Fabric card module"
 PID: DS-X9710-FAB1 , VID: V00 , SN: JAE2217096J

NAME: "Slot 16", DESCR: "Fabric card module"
 PID: DS-X9710-FAB1 , VID: V00 , SN: JAE222305V8

NAME: "Slot 35", DESCR: "MDS 9710 (10 Slot) Chassis Power Supply"
 PID: DS-CAC97-3KW , VID: V01 , SN: DTM164602XH

NAME: "Slot 37", DESCR: "MDS 9710 (10 Slot) Chassis Power Supply"
 PID: DS-CAC97-3KW , VID: V01 , SN: DTM1649022W

NAME: "Slot 38", DESCR: "MDS 9710 (10 Slot) Chassis Power Supply"
 PID: DS-CAC97-3KW , VID: V01 , SN: DTM16490239

NAME: "Slot 39", DESCR: "MDS 9710 (10 Slot) Chassis Power Supply"
 PID: DS-CAC97-3KW , VID: V01 , SN: DTM164602ZP

NAME: "Slot 41", DESCR: "MDS 9710 (10 Slot) Chassis Fan Module"
 PID: DS-C9710-FAN , VID: V00 , SN: JAF1647ADCE

NAME: "Slot 42", DESCR: "MDS 9710 (10 Slot) Chassis Fan Module"
 PID: DS-C9710-FAN , VID: V00 , SN: JAF1647ADCN

NAME: "Slot 43", DESCR: "MDS 9710 (10 Slot) Chassis Fan Module"
 PID: DS-C9710-FAN , VID: V00 , SN: JAF1647ACHH

The following is a sample output for the **show interface brief** command on the Supervisor-4 Module:

```
switch# show interface brief
```

Interface	Vsan	Admin Mode	Admin Trunk Mode	Status	SFP	Oper Mode	Oper Speed (Gbps)	Port Channel	Logical Type
fc1/1	1	E	on	trunking	swl	TE	16	1	core
fc1/2	1	E	on	trunking	swl	TE	16	1	core
fc1/3	1	E	on	trunking	swl	TE	16	1	core
fc1/4	1	E	on	trunking	swl	TE	16	1	core
fc1/5	1	E	on	trunking	swl	TE	16	1	core
fc1/6	1	E	on	notConnected	swl	--	--	--	--
fc1/7	20	auto	off	up	swl	F	8	--	edge
fc1/8	20	F	off	up	swl	F	16	--	edge

The following is a sample output for the **show interface status** command on the Supervisor-4 Module:

```
switch# show interface status
```

```
fc1/1 is trunking
  Hardware is Fibre Channel, SFP is short wave laser w/o OFC (SN)
  Port WWN is 20:01:54:7f:ee:eb:7a:00
  Peer port WWN is 20:41:00:2a:6a:5b:da:80
  Admin port mode is E, trunk mode is on
  snmp link state traps are enabled
  Port mode is TE
  Port vsan is 1
  Admin Speed is auto max 32 Gbps
  Operating Speed is 16 Gbps
  Rate mode is dedicated
  Port flow-control is R_RDY

  Transmit B2B Credit is 500
  Receive B2B Credit is 500
  B2B State Change: Admin(on), Oper(up), Negotiated Value(14)
  Receive data field Size is 2112
  Beacon is turned off
  Logical type is core
  Belongs to port-channel1
  Trunk vsans (admin allowed and active) (1,20-25,102)
  Trunk vsans (up) (1,20)
  Trunk vsans (isolated) (21-25,102)
  Trunk vsans (initializing) ()
  5 minutes input rate 1568 bits/sec,196 bytes/sec, 2 frames/sec
  5 minutes output rate 576 bits/sec,72 bytes/sec, 5 frames/sec
  5716 frames input,355028 bytes
    0 discards,0 errors
    0 invalid CRC/FCS,0 unknown class
    0 too long,0 too short
  10924 frames output,971836 bytes
    0 discards,0 errors
    0 input OLS,0 LRR,0 NOS,0 loop inits
    0 output OLS,0 LRR, 0 NOS, 0 loop inits
  500 receive B2B credit remaining
  500 transmit B2B credit remaining
```

```
500 low priority transmit B2B credit remaining
Last clearing of "show interface" counters : n
```

The following is a sample output for the **show system redundancy status** command on the Supervisor-4 Module:

```
switch# show system redundancy status

Redundancy mode
-----
      administrative:  HA
      operational:    HA

This supervisor (sup-6)
-----
      Redundancy state:  Active
      Supervisor state:  Active
      Internal state:    Active with HA standby

Other supervisor (sup-5)
-----
      Redundancy state:  Standby
      Supervisor state:  HA standby
      Internal state:    HA standby
```

Troubleshooting

This section lists the error messages that may come up on the console during the migration along with the recommended action to be performed.

Problem

Setting boot parameters for supervisor migration process returned error:

```
switch %BOOTVAR-2-SUP_MIGRATION_CONFIG_ERROR: Setting boot parameters for supervisor
migration process returned error.
```

Action to be performed

Set the boot variables manually using the **boot kickstart <kickstart_image>** command and **boot system <system_image>** on the Supervisor-4 Module.

Problem

The kickstart or system image is not present on the bootflash of the active Supervisor-4 Module. The following syslog message is displayed:

```
switch %BOOTVAR-2-SUP_MIGRATION_IMAGE_DOES_NOT_EXIST: System image doesn't exist on
bootflash of the supervisor. Please clear some space in bootflash, copy the Supervisor-4
images manually, set the boot variables and save configs before replacing Standby
Supervisor-3 (DS-X97-SF1-K9)
```

Action to be performed

Clear space on the bootflash and then copy the Supervisor-4 Module images manually, as shown in [Step 3](#) in the migration procedures given above. Set the boot variables and save the configuration before replacing the standby Supervisor-1 Module. Use the **boot kickstart** *<kickstart_image>* command and the **boot system** *<system_image>* command on the active Supervisor-4 Module when it becomes active after the migration is completed.

Problem

The newly inserted Supervisor-4 Module cannot take over as the active supervisor. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Supervisor-4 (DS-X97-SF4-K9) cannot take over as active Supervisor ...
```

Action to be performed

Wait for the next retry attempt by the switch to bring up the Supervisor-4 Module.

Problem

The migration logging file is already present in the Supervisor-1 Module. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> WARNING!!! Migration logging file already exists in Supervisor-3 (DS-X97-SF1-K9), continuing migration ...
```

Action to be performed

None. The **show logging onboard migration status** command is used to monitor the migration progress. There is no impact on the migration process.

Problem

The switch cannot initiate migration logging due to insufficient file permissions. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> WARNING!!! Migration logging cannot be done due to file permission error, continuing migration ...
```

Action to be performed

None. The **show logging onboard migration status** command is used to monitor the migration progress. This error message is displayed if the appropriate file permissions have not been provided.

Problem

The active Supervisor-1 Module is using the redundant secondary EOBC link instead of the primary EOBC link. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Active Supervisor-3 (DS-X97-SF1-K9) is using Redundant EOBC link, this indicates some problem with Primary EOBC link, aborting migration ...
```

Action to be performed

Replace the active Supervisor-1 Module with another Supervisor-1 Module.

Problem

Unable to extract the image header from the kickstart or system images. The following syslog messages are displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Image header extraction failed for Kickstart image
<kickstart_image> of Supervisor-4 (DS-X97-SF4-K9), aborting migration ...
<Tue Apr 30 10:02:47 2019> ERROR!!! Image header extraction failed for System image
<system_image> of Supervisor-4 (DS-X97-SF1-K9), aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

Unable to retrieve the kickstart or system image information. The following syslogs are displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Failed to get Kickstart image info, aborting migration
...
<Tue Apr 30 10:02:47 2019> ERROR!!! Failed to get System image info, aborting migration
...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

The kickstart or system images provided are not valid images for the Supervisor-4 Modules. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Kickstart image provided '<kickstart_image>' is not a
valid Supervisor-4 (DS-X97-SF4-K9) image, aborting migration ...
<Tue Apr 30 10:02:47 2019> ERROR!!! System image provided '<system_image>' is not a valid
Supervisor-4 (DS-X97-SF4-K9) image, aborting migration ...
```

Action to be performed

Use a valid Supervisor-4 Module image and use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

The release versions of the Supervisor-4 Module kickstart and system images provided are not the same as the existing Supervisor-1 Module kickstart and system images. The following syslog messages are displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Running kickstart version : <running_version>,•version
of kickstart image provided : <Supervisor-3_image_version>
<Tue Apr 30 10:02:47 2019> ERROR!!! Version of kickstart image provided
('<sup3_image_version>') does not match running version, aborting migration ...
```

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Running System version: <running_version>, version of
system image provided : <Supervisor- 3_image_version>
<Tue Apr 30 10:02:47 2019> ERROR!!! Version of system image provided
('<sup3_image_version>') does not match running version, aborting migration ...
```

Action to be performed

Check the image version. The release versions of the Supervisor-4 Module kickstart and system images provided should be the same as the existing Supervisor-1 Module kickstart and system images.

Problem

Unable to retrieve the chassis information. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Chassis information retrieve failed, aborting
migration ...
```

Action to be performed

Use the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command again.

Problem

Unable to retrieve the slot number of the supervisor module. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Supervisor slot information retrieve failed, aborting
migration ...
```

Action to be performed

Use the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command again.

Problem

Unable to retrieve the slot number of the standby supervisor module. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Standby Supervisor slot information retrieve failed,
aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command again.

Problem

In case the **migrate sup kickstart** <supervisor4-kickstart-image> **system** <supervisor4-system-image> command cannot read the stored Supervisor-1 Module image links, the migration process fails. The following syslog messages are displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Kickstart image link for Active Supervisor-1
(DS-X97-SF1-K9) could not be found, aborting migration ...
```

```
<Tue Apr 30 10:02:47 2019> Please set the boot parameters using 'boot kickstart
<kickstart_image>' and 'boot system <system_image>'
<Tue Apr 30 10:02:47 2019> ERROR!!! System image link for Active Supervisor-1
(DS-X97-SF1-K9) could not be found, aborting migration ...
<Tue Apr 30 10:02:47 2019> Please set the boot parameters using 'boot kickstart
<kickstart_image>' and 'boot system <system_image>'
```

Action to be performed

Set the Supervisor-1 Module image links using the **boot kickstart** *<kickstart_image>* command and the **boot system** *<system_image>* command before re-inserting the standby Supervisor-4 Module.

Problem

The Supervisor-4 Module is already present in the standby slot before initiating the migration procedure. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Supervisor-4 is already inserted in standby slot
<slot_number> before starting migration. Please remove Standby supervisor and start single
Supervisor migration, aborting migration ...
```

Action to be performed

Remove the standby Supervisor-4 Module and start the migration process again.

Problem

The standby Supervisor-1 Module is not in the HA-standby state. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Standby Supervisor-3 (DS-X97-SF1-K9) is not yet in
ha-standby state, aborting migration ...
<Tue Apr 30 10:02:47 2019> Please wait for Standby supervisor in slot <slot_number> to
become ha-standby or physically remove standby and start migration
```

Action to be performed

Wait until the standby Supervisor-1 Module comes up in the HA-standby state or remove the standby Supervisor-1 Module and perform a single supervisor migration.

Problem

In case of a dual supervisor migration, the standby Supervisor-1 Module is powered down by using the **out-of-service** *<slot-number>* command. If the standby Supervisor-1 Module does not power down after using this command, the following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Failed to power down Standby Supervisor-3 in slot
<slot_number>, aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

Unable to lock the configuration. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Failed to lock config, aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

In case a auto-boot is not disabled before the insertion of the Supervisor-4 Module, the following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Standby Supervisor config failed, aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

After powering down the Supervisor-1 Module, the switch will check for the presence of a module in the slot from which the Supervisor-1 Module was removed. This check happens every 30 minutes after the Supervisor-1 Module has been removed. In case this check to detect the presence of the supervisor module fails, the following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Module information retrieve failed
```

Action to be performed

None. There is no impact on the migration process.

Problem

A Supervisor-1 Module is inserted instead of a Supervisor-4 Module. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Supervisor-1 (DS-X97-SF1-K9) is inserted in slot <slot_number> instead of Supervisor-4 (DS-X97-SF4-K9), aborting migration ...
```

Action to be performed

Restart migration and ensure that the newly inserted supervisor module is the Supervisor-4 Module.

Problem

In case the Supervisor-4 Module is not inserted into the standby slot within 30 minutes after the Supervisor-1 Module has been powered down, the following syslog message is displayed:

module

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Timeout waiting for Supervisor-4 (DS-X97-SF4-K9) to be
inserted in slot <slot_number>, aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again and ensure that the Supervisor-4 Module is inserted into the standby slot within 30 minutes after the Supervisor-1 Module has been powered down.

Problem

Unable to create image links for the Supervisor-4 Module images. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Supervisor-4 (DS-X97-SF4-K9) image links could not be
created for Standby Supervisor bootup, aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

Unable to reload the Supervisor-4 Module after the Supervisor-4 Module is detected in the switch. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Failed to reload Standby Supervisor-4 (DS-X97-SF4-K9),
aborting migration ...
```

Action to be performed

Remove the Supervisor-4 Module from the standby slot and restart migration by using the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command.

Problem

The Supervisor-4 Module is stuck in loader prompt due to a boot failure. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Standby Supervisor-4 (DS-X97-SF4-K9) is stuck in
loader prompt due to boot-up failure ...
```

Action to be performed

None. A retry attempt to bring up the Supervisor-4 Module is initiated by the switch every 15 minutes for 3 times.

Problem

The Supervisor-4 Module is unable to come online. The following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Standby Supervisor-4 (DS-X97-SF4-K9) could not come
online ...
```

Action to be performed

None. A retry attempt to bring up the Supervisor-4 Module is initiated by the switch every 15 minutes.

Problem

The supervisor module fails to come online. The following syslogs are displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Timeout waiting for Supervisor-4 (DS-X97-SF4-K9) to
come online, aborting migration ...
<Tue Apr 30 10:02:47 2019> Powering down Supervisor-4 (DS-X97-SF4-K9) in slot
<slot_number>
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

The Supervisor-1 Module image links are not restored on the active Supervisor-1 Module before the switchover to Supervisor-4 Module is initiated. The following syslogs are displayed before saving configuration:

```
<Tue Apr 30 10:02:47 2019> WARNING!!! Error resetting original Supervisor-3
(DS-X97-SF1-K9) image links, continuing migration ...
<Tue Apr 30 10:02:47 2019> WARNING!!! Please set the boot variables manually before
inserting back Supervisor-3 (DS-X97-SF1-K9) in standby slot <slot_number>, continuing
migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

The **copy r s** command fails on the active Supervisor-1 Module before the switchover to the Supervisor-4 Module is initiated. The following syslog is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR!!! Failed to save configuration, aborting migration ...
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

The switchover fails on the active Supervisor-1 Module before the switchover to the Supervisor-4 Module is initiated. The following syslog is displayed:

```
<Tue Apr 30 10:02:47 2019> ERROR !! Switchover failed, aborting migration ...•
```

Action to be performed

Use the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command again.

Problem

In case the Supervisor-4 Module is not inserted within 30 minutes after using the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command, the switch will try to power up the powered down Supervisor-1 Module in the standby slot on reaching the timeout of 30 minutes. If the standby Supervisor-1 Module fails to power up, the following syslog message is displayed before aborting migration:

```
<Tue Apr 30 10:02:47 2019> ERROR !!! Failed to power up Standby Supervisor, Please power up manually using "no poweroff module <slot_num>" from config mode
```

Action to be performed

Use the **no poweroff module** *<slot_number>* command on the active Supervisor-4 Module to bring up the powered down standby Supervisor-4 Module in case the Supervisor-4 Module has not been inserted within 30 minutes after using the **migrate sup kickstart** *<supervisor4-kickstart-image>* **system** *<supervisor4-system-image>* command.

Problem

Setting of the boot variable parameters fails after migration when the Supervisor-4 Module becomes active supervisor. The following syslog is displayed:

```
BOOTVAR-2- SUP_MIGRATION_CONFIG_ERROR
Setting boot parameters for supervisor migration process returned error. Please set the boot variables manually using 'boot kickstart <kickstart_image>' and 'boot system <system_image>' and save configs"
```

Action to be performed

Use the **boot kickstart** *<kickstart_image>* and the **boot system** *<system_image>* on the active Supervisor-4 Module when it becomes active after the migration has been completed.

Problem

Migration fails on Supervisor-4 Module because of insufficient bootflash memory on the Supervisor-4 Module. The following syslog is displayed:

```
2019 Apr 2 08:47:43 switch %FS-STANDBY-DAEMON-2-FSD_ENOSPC_BOOTFLASH: Due to
insufficient space, system image could not be copied to standby bootflash. system
image is not present on standby. Please copy 'm9700-sf4ek9-mz.8.4.1.bin' manually.
Standby supervisor not yet online. This might take sometime. Please wait ...
```

Action to be performed

Use the **migrate standby bootup** command on the active Supervisor-4 Module when it becomes active and manually copy the image file and boot parameters.

Migration Clean Up

- In case any migration clean-up errors have been detected on the Supervisor-1 Module, the following syslog message is displayed:

```
<Tue Apr 30 10:02:47 2019> Please run 'migrate clean' before doing any operation.
```

In such a scenario, use the **migrate clean** command to resolve the errors.

```
switch# migrate clean
<Tue May 28 03:34:58 2019> Manual-boot is disabled for Standby Supervisor <Tue May 28
03:34:58 2019> Migration clean up done
```

- In case any migration clean-up errors have been detected on the Supervisor-4 Module, the following syslog message is displayed:

```
BOOTVAR-2- MIGRATION_CONFIG_CLEAN_ERROR: Please run 'migrate clean' command from
active Supervisor before replacing the standby Supervisor.
```

In such a scenario, use the **migrate clean** command to resolve the errors.

```
switch# migrate clean
<Tue May 28 03:34:58 2019> Migration clean up done
```

- In case the **migrate clean** command is used on a Supervisor-1 Module or a Supervisor-4 Module for which migration has not been initiated, the following syslog is displayed:

```
switch# migrate clean
<Tue May 28 03:34:58 2019> Migration was not done on this Supervisor
```

Disruptive Migration for Supervisor Modules

To perform a disruptive migration from Supervisor-1/Supervisor-1E Modules to Supervisor-4 Modules, follow these steps:

Before you Begin:

Before migrating from a Supervisor-1/Supervisor-1E Module to a Supervisor-4 Module, note the following guidelines:

- You cannot mix Supervisor-1/Supervisor-1E Module and Supervisor-4 Module in a production environment.



Note

In the following procedure, all show outputs, system messages, and image file names are displayed for the Cisco MDS 9710 Multilayer Director Switch. The show outputs, system messages, and image file names will vary based on the Cisco MDS 9700 Series Multilayer Director Switch selected.

-
- Step 1** Insert a USB drive in the usb1 or the slot0 USB port on the active Supervisor-1 Module. We will use the usb1 port for the steps given below.
- Step 2** Format the drive by using the **format** command.
- ```
switch(config)# format usb1
```
- Step 3** Back up the running configuration from the current active supervisor module (DS-X97-SF1-K9) to the FTP/SFTP/TFTP server, or a USB flash drive.
- ```
switch# copy running-config
```

```
ftp: [// [username[:password]@]server] [/path]
```

Or

```
switch# copy running-config usb1:runningconfiguration.txt
Copy complete, now saving to disk (please wait)...
```

Note: runningconfiguration.txt is a filename variable.

- Step 4** Back up the installed licenses from the switch to a USB drive by using the **copy licenses** command. To view the current licenses installed on the switch, use the **show license** command.

```
switch# show license

license.lic:
SERVER this_host ANY
VENDOR cisco
INCREMENT ENTERPRISE_PKG cisco 1.0 permanent uncounted \
VENDOR_STRING=MDS HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>0</LicLineID> \
<PAK>dummyPak</PAK>" SIGN=FB454F0A0D40
INCREMENT MAINFRAME_PKG cisco 1.0 permanent uncounted \
VENDOR_STRING=MDS HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>1</LicLineID> \
<PAK>dummyPak</PAK>" SIGN=0DAE1B086D9E
INCREMENT SAN_EXTN_OVER_IP cisco 1.0 permanent 7 VENDOR_STRING=MDS \
HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>2</LicLineID> \
<PAK>dummyPak</PAK>" SIGN=D336330C76A6
INCREMENT FM_SERVER_PKG cisco 1.0 permanent uncounted \
VENDOR_STRING=MDS HOSTID=VDH=REG070201 \
NOTICE="<LicFileID>ent_ips_main_fm.lic</LicFileID><LicLineID>3</LicLineID> \
<PAK>dummyPak</PAK>" SIGN=AEAEA04629E8

switch# copy licenses usb1:licenses_archive_file_name.tar
```



Note You must use the tar extension for the archive file. This file will contain all the license files that were installed on the Supervisor-1 Module.

- Step 5** Back up the outputs of the **show tech-support details** command, and redirect the file to a remote server using an FTP, TFTP, SFTP, SCP, or a USB flash drive.

```
switch# show tech-support details> scp://root@x.x.x.x/root/showtechsupport.txt
or
switch# show tech-support details> usb1:showtechsupport.txt
```

- Step 6** Physically turn off the power to the switch, using the power switch, on each of the power supplies. The Output LED turns **off** on each power supply and the Status LEDs turn **off** on all the supervisor and I/O modules.



Caution If any of the supervisor or I/O module Status LEDs is turned on (showing any color), stop at this step until you are able to turn off those modules.

- Step 7** For each Supervisor-1 Module installed in the switch, remove the module and replace it with a Supervisor-4 Module as explained in [Installing a Supervisor Module, page 4-106](#) and [Removing a Supervisor Module, page 4-108](#).

**Caution**

If the switch has two supervisor modules, ensure that both the supervisors are of the same type. Do not mix Supervisor-1 Module with Supervisor-4 Modules.

- Step 8** Power up the switch, using the power switch, on each of its power supplies. The Output LED on each power supply turns **on** and eventually turns green when the power supply is sending power to the switch. The Status LED on each installed supervisor module also turns on when the module begins to turn on. The supervisor that becomes active has a green ACTIVE LED (the standby supervisor module has an amber ACTIVE LED).
- Step 9** Remove the USB drive from the Supervisor-1 Module (this drive has copies of the Supervisor-1 Module configuration, license, and software images) and insert it in the USB port on the active Supervisor-4 Module (ACTIVE LED is green).
- Step 10** Connect a console to the active supervisor module as explained in Connecting a Console to the Switch.
- Step 11** If you are setting up the initial configuration for the supervisor module, the initial setup script will ask you if you want to enforce the secure password standard. Make your selection, enter your password, and then confirm the password by entering it again.

```
---- System Admin Account Setup ----
Do you want to enforce secure password standard (yes/no) [y]:
Enter the password for "admin":
Enter the password for "admin":
```

- Step 12** When you are asked to enter the basic configuration, enter **no**.

```
---- Basic System Configuration Dialog VDC: 1 ----
This setup utility will guide you through the basic configuration of the system. Setup
configures only enough connectivity for management of the system.
Please register Cisco Nexus7000 Family devices promptly with your supplier. Failure to
register may affect response times for initial service calls. Nexus7000 devices must be
registered to receive entitled support services.
Press Enter at anytime to skip a dialog. Use ctrl-c at anytime
to skip the remaining dialogs.
Would you like to enter the basic configuration dialog (yes/no): no
```

- Step 13** When asked to log in, enter the login and password that you specified in step 11.

```
User Access Verification
switch login:
Password:
```

- Step 14** Verify that the switch is running the required version of the Cisco MDS NX-OS software by using the **show version** command.

```
switch(config)# show version
```

**Note**

If the version of the Cisco MDS NX-OS is not the same as you intended to use, perform an upgrade to the appropriate version (Cisco MDS NX-OS Release 8.4(1) or later). To upgrade an image version on the switch, refer the [Cisco MDS 9000 NX-OS Software Upgrade and Downgrade Guide, Release 8.x](#) guide.

- Step 15** Reinstall the license files on the new Supervisor-4 Module.

```
switch(config)# copy usb1:licenses_archive_file_name.tar bootflash:switch_license.tar

Copy progress 100% 10KB
Copy complete, now saving to disk (please wait)...

switch(config)# copy bootflash:switch_license.tar bootflash:switch_license.lic
```

```

Copy progress 100% 10KB
Copy complete, now saving to disk (please wait)...

switch(config)# install license bootflash:switch_license.lic

Installing license .....done

switch# show license usage
Feature                               Ins  Lic  Status Expiry Date Comments
                                Count
-----
IOA_X9334                             No    0   In use
FM_SERVER_PKG                         No    -   Unused
MAINFRAME_PKG                         No    -   Unused
ENTERPRISE_PKG                        Yes    -   Unused never
SAN_ANALYTICS_PKG                     No    -   In use
SAN_TELEMETRY_PKG                     No    -   Unused

```

Step 16 Make sure that all I/O modules are online and that the standby supervisor is in HA-standby mode by using the **show module** command.

The following is a sample output for the **show module** command on the Supervisor-4 Module:

```

switch# show module
Mod  Ports  Module-Type                Model                Status
---  -
1    48      4/8/16/32 Gbps Advanced FC Module  DS-X9648-1536K9      ok
2    48      2/4/8/10/16 Gbps Advanced FC Module DS-X9448-768K9       ok
5    0        Supervisor Module-4              DS-X97-SF4-K9        ha-standby
6    0        Supervisor Module-4              DS-X97-SF4-K9        active *
7    24      40 Gbps FCoE Module            DS-X9824-960K9       ok
8    48      1/10 Gbps Ethernet Module        DS-X9848-480K9       ok
9    48      1/10 Gbps Ethernet Module        DS-X9848-480K9       ok

```

```

Mod  Sw          Hw
---  -
1    8.4(1)      1.0
2    8.4(1)      2.0
5    8.4(1)      1.0
6    8.4(1)      1.0
7    8.4(1)      1.0
8    8.4(1)      1.1
9    8.4(1)      1.1

```

```

Mod  MAC-Address(es)                Serial-Num
---  -
1    78-ba-f9-c4-c9-88 to 78-ba-f9-c4-c9-8b JAE192008R8
2    f0-78-16-c6-20-6c to f0-78-16-c6-20-6f JAE192008S9
3    f0-78-16-c6-73-6c to f0-78-16-c6-73-6f JAE192901GT
4    1c-df-0f-78-4e-88 to 1c-df-0f-78-4e-8b JAE170407ZK
5    00-b8-b3-ee-60-bc to 00-b8-b3-ee-60-cf JAE22350LYE
6    00-b8-b3-ee-67-d8 to 00-b8-b3-ee-67-eb JAE22350LY2
7    80-e8-6f-f8-1a-84 to 80-e8-6f-f8-1a-87 JAE192901GS
8    28-52-61-d6-30-20 to 28-52-61-d6-30-54 JAE204207SM
10   00-d6-fe-b1-c0-aa to 00-d6-fe-b1-c0-de JAE2234039S

```

```

Mod  Online Diag Status
---  -
1    Pass
2    Pass
3    Pass
4    Pass

```



```

5    Pass
6    Pass
7    Pass
8    Pass
10   Pass

```

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric module 1	DS-X9710-FAB1	ok
2	0	Fabric module 1	DS-X9710-FAB1	ok
3	0	Fabric module 1	DS-X9710-FAB1	ok
4	0	Fabric Module 1	DS-X9710-FAB1	ok
5	0	Fabric module 1	DS-X9710-FAB1	ok
6	0	Fabric module 1	DS-X9710-FAB1	ok

Xbar	Sw	Hw
1	NA	1.0
2	NA	1.0
3	NA	1.0
4	NA	1.0
5	NA	1.0
6	NA	1.0

Xbar	MAC-Address(es)	Serial-Num
1	NA	JAE1644063E
2	NA	JAE1644063I
3	NA	JAE16410AS2
4	NA	JAE182408ZW
5	NA	JAE1644061K
6	NA	JAE1710088N

- Step 17** Restore the previously saved configurations by using the **copy** command to copy the configuration file in the USB drive to the running configuration.

```
switch(config)# copy usb1:configuration_file_name running-config
```

**Note**

If you have not inserted the standby supervisor module until now, do not insert it during this step. Instead, wait until you complete this procedure before installing the standby supervisor module.

- Step 18** Save the configuration in the startup configuration by using the **copy running-config startup-config** command.

```
switch(config)# copy running-config startup-config
```

Installing a Switching Module

**Note**

When inserting a new line card into a slot, ensure the new line card is of the same model as the existing line card. If there is a mismatch in the line card models, the line card configurations are removed from the configuration file.

To install a switching module in the chassis, follow these steps:

-
- Step 1** Before installing any modules in the chassis, we recommend installing the chassis in the rack. See the [“Installing the Cisco MDS 9700 Series Switch on a Four-Post Rack or Cabinet”](#) section on page 3-91.
- Step 2** Before installing any switching modules, install at least one supervisor module.
- Step 3** Choose a slot for the module and verify that there is enough clearance to accommodate any cables or interface equipment that you want to connect to the module. If possible, place modules between empty slots that contain filler panels.
- Step 4** Verify that the captive screws are tightened to 8 in-lb on all modules already installed in the chassis. This ensures that the EMI gaskets are fully compressed and maximizes the opening space for the module being installed.
- Step 5** If a filler panel is installed, remove the two Phillips pan-head screws from the filler panel and remove the panel. To remove a currently installed module, see the [“Removing a Switching Module”](#) section on page 4-152.
- Step 6** Press line card ejector buttons to open both side levers to fully open position.
- Step 7** Position the module in the chassis as follows:
- Align the line card into the chassis card cage slots and push it in slowly. We recommend to push the center of line card faceplate to push the line card in.
 - Continue to push in the line card slowly into the chassis until its rear connectors touch the mid-plane surface and both ejector levers swing inward about 25 degrees. This indicates that both the ejector lever jaws are now inside the chassis jaw cutouts and the card is ready to close the ejector levers.
 - Once visually confirmed that both ejector levers are swung inward about 25 degrees, push in both ejector levers simultaneously to fully insert the line card into the chassis until they are in a mechanically locked position. Both ejector levers should be parallel to the line card faceplate when locked.



Note Ensure that the ejector levers are fully closed before tightening the captive screws. Failure to fully seat the module in the backplane connector can result in error messages.

- Tighten the two captive screws on the supervisor module or switching module to 8 in-lb.
-

Removing a Switching Module



Note You need a flat-blade or number 2 Phillips-head screwdriver to loosen or tighten the captive screws on the switching module.

You can remove one of these modules at a time while the switch is operating. To remove a switching module from the chassis, follow these steps:

-
- Step 1** Disconnect any network interface cables attached to the module.
- Step 2** Loosen the two captive screws on the module being removed.

- Step 3** Press ejector release buttons on the left and right ends of the module to push out the ejector levers and to disconnect the module.
- Step 4** Simultaneously rotate the two ejector levers outward to unseat the module from the mid-plane connector.
- Step 5** With a hand on each ejector, pull the module part way out of its slot in the chassis.
- Step 6** Grasp the front edge of the module and slide the module partially out of the slot. Place your other hand under the module to support the weight of the module. Do not touch the module circuitry.
- Step 7** Place the module on an antistatic mat or antistatic foam, or immediately reinstall it in another slot.
- Step 8** If the slot will remain empty, install a filler panel to keep the chassis dust-free and to maintain proper airflow through the chassis.

Verifying Installation of the Supervisor and Switching Modules

To verify the module installation, follow these steps:

- Step 1** Verify that the ejector levers of each module are fully closed (parallel to the front of the module) to ensure that the supervisor module and all switching or services modules are fully seated in the backplane connectors.
- Step 2** Check the captive screws of each module, the power supply, and the fan module. Tighten any loose captive screws to 8 in-lb.
- Step 3** Verify that any empty module slots have filler panels installed and that the screws holding the panels in place are tight.
- Step 4** Turn on the power supply switches to power up the system and check the LEDs on the modules.



Note For information about how to check connectivity of modules, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.

Installing and Removing a Crossbar Fabric Switching Module

Guidelines for Crossbar Fabric Switching Module Installation

The following table lists the recommended slots for the crossbar fabric switching modules in a Cisco MDS 9700 Series chassis, based on the total number of crossbar fabric switching modules in a chassis:

Number of Crossbar Fabric Switching Modules	Slots Number
2	1 and 2
3	1, 3, and 5
4	1, 2, 3, and 5
5	1, 2, 3, 4, and 5
6	1, 2, 3, 4, 5, and 6

**Note**

In a Cisco MDS 9700 chassis with Cisco MDS 9000 24/10-Port SAN Extension Module (DS-X9334-K9), the chassis must have at least one online crossbar fabric switching module in the slots 1 to 5 at any point of time.

**Note**

In a Cisco MDS 9700 chassis with Cisco MDS 9000 24/10-Port SAN Extension Module (DS-X9334-K9), if crossbar (xbar) fabric switching modules 5 and 6 are online, and you want to power down or replace module 6 nondisruptively, you have to power down/out-of-service xbar module 5 first, followed by power down/out-of-service and replace the xbar module 6.

Before You Begin

- You must follow ESD protocols, including the following:
 - You must wear a grounded ESD wristband (or other personal grounding device) whenever you handle the electronic modules outside the grounded chassis.
 - You must carry electronic modules by only their covered edges or handles. Do not touch their electronic components.
 - Whenever a module is outside a grounded chassis, place it flat on an antistatic surface or in an antistatic bag. Never lean the module on anything nor place anything else on top of the module nor lean anything on the module.
- Verify that the chassis is grounded.
- Verify that you have the following tools and equipment:
 - ESD wrist strap (or other personal grounding device)
 - Number 1 Phillips torque screwdriver
 - Manual torque screwdrivers are recommended. Be sure to never exceed the recommended torque setting for the screw that you are working with.
- Ensure that sufficient quantity of Cisco MDS Crossbar Fabric-3 Switching Modules (6 modules are supported in a Cisco MDS 9000 Series Multilayer Director) are available for replacing the current Cisco MDS Crossbar Fabric Switching Modules in the switch.

**Warning**

It is not supported to mix different crossbar fabric switching modules (Crossbar Fabric-1 Switching Module and Crossbar Fabric-3 Switching Module) outside a maintenance window. This mix of modules is supported only while you are migrating from Fabric-1 modules to Fabric-3 modules. After a reboot of the switch, if there is a mix of Fabric-1 and Fabric-3 modules, only the Fabric-3 modules will be powered on.

**Warning**

Ensure that there is no loose debris (such as paper, ties, dust) around the back of the chassis when the crossbar switching modules are being removed. When the crossbar switching modules are pulled, the vacuum created can be strong enough to pull the loose debris into the chassis.

Procedure

To install a crossbar fabric switching module in the Cisco MDS 9700 Series switch, follow these steps:


- Step 1** Shut down the crossbar fabric switching module to be replaced by using the **out-of-service xbar slot** command (where slot refers to the external crossbar fabric switching module slot number).
- Step 2** Remove the fan module that is over the crossbar fabric switching module to be removed. For more information on how to remove a fan module, see [Installing and Removing Fan Modules, page 4-172](#). crossbar fabric switching modules are numbered 1-6, from left to right, when facing the rear of the chassis. If the system is running, remove only one fan module at a time to access the required crossbar fabric switching module. The positioning of the fan modules and respective crossbar fabric switching modules is as follows:

Fan module 1	Fabric modules 1-2
Fan module 2	Fabric modules 3-4
Fan module 3	Fabric modules 5-6

- Step 3** To open a fabric slot for the new fabric module, remove a fabric module as follows:
- With your face at least 12 inches (30 cm) away from the front of the fabric module, press both ejector buttons on the front of the module (see Callout 1 in the following figure).


**Caution**

Keep your face away from the front of the fabric module so that the levers do not hit your face when they spring out from the front of the module.

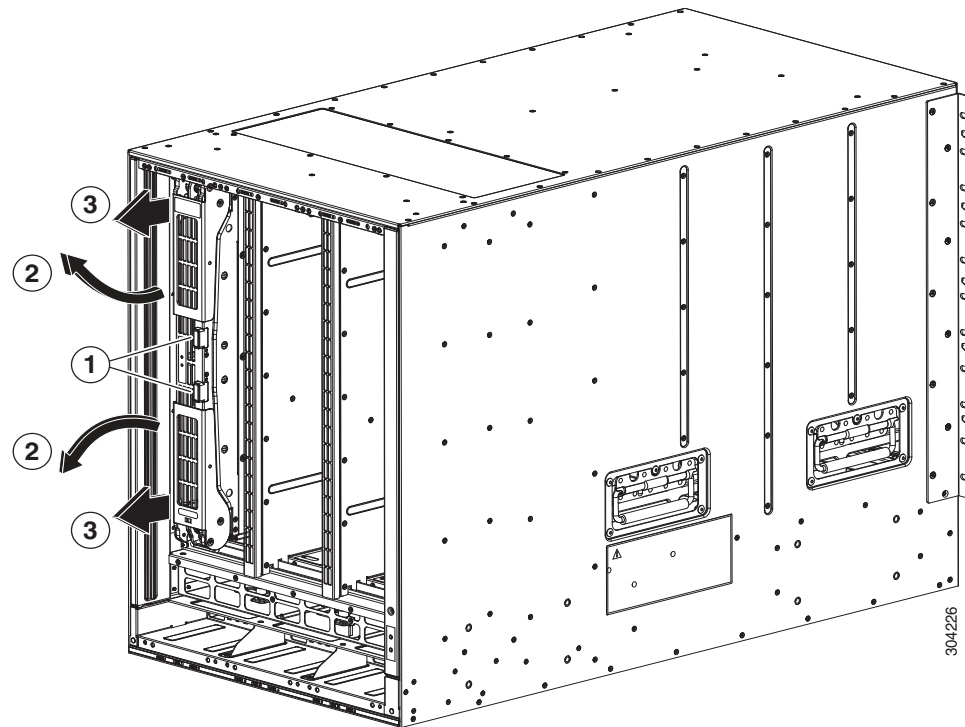Figure 4-4 **Unlocking a Fabric Module from its Slot**

1	Press both eject buttons.	3	Pull the handles to partially remove the module from the slot.
2	Handles spring out from the module.		

- b.** Grasp each of the two levers with your two hands and fully rotate the levers out 90 degrees from the fabric module.
- c.** Pull both levers until the fabric module is about 3 inches (7 cm) out of the chassis (see Callout 3 in the previous figure).
- d.** Rotate both levers back to the front of the module (see Callout 1 in the following figure).
Each lever clicks when it locks in place at the front of the module.

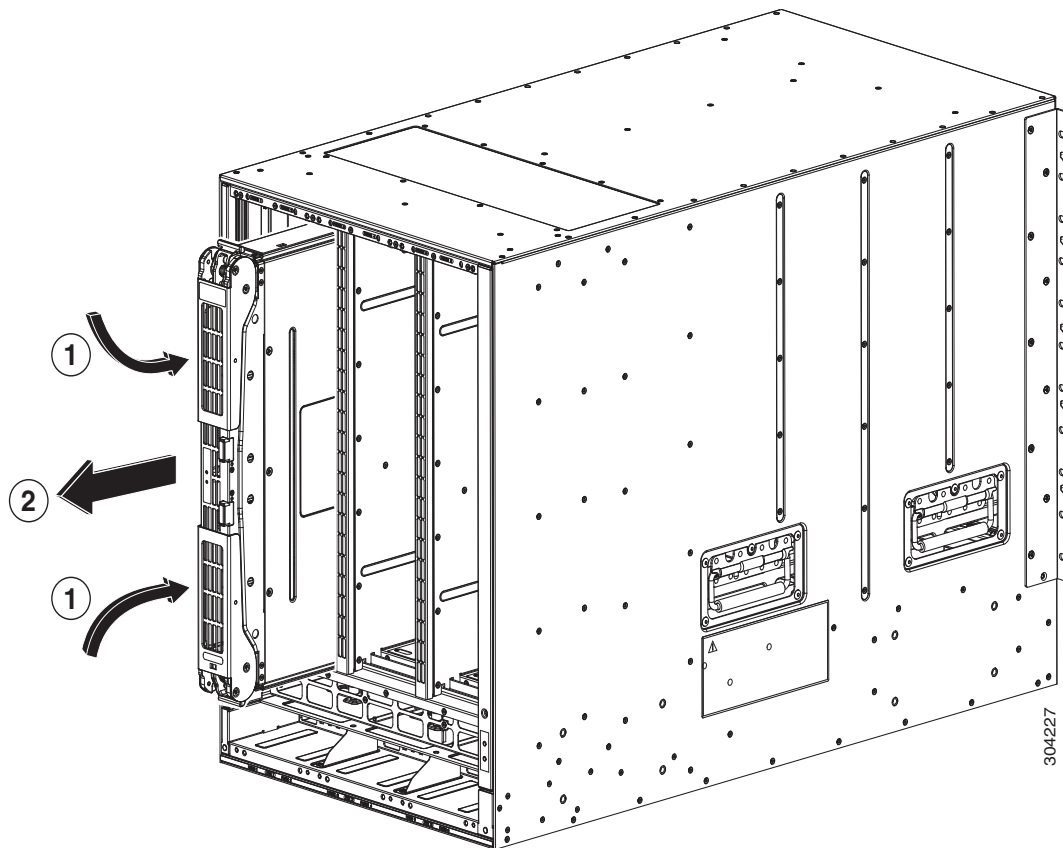Figure 4-5 Removing the Fabric Module from its Slot

1	Rotate both levers to the front of the module until they click.	2	Pull the module out of the slot.
---	---	---	----------------------------------

- e. Grasp the front of the module with one hand, place the other hand under the module to support its weight, and pull the module out of the slot (see Callout 2 in the previous figure).


**Caution**

Be careful not to touch any electrical contacts on the back of the module. Handle only covered sides or edges of the module.

- f. Place the module on an antistatic surface or inside an antistatic bag.

Step 4 Install the new fabric module in the chassis as follows:

- a. Hold the front of the new module with one hand and place the other hand under the module.
- b. Rotate the module clockwise and align the back of the module to the module guides at the top and bottom of the open fabric slot in the chassis.
- c. Push the module half way into the slot (see the following figure).

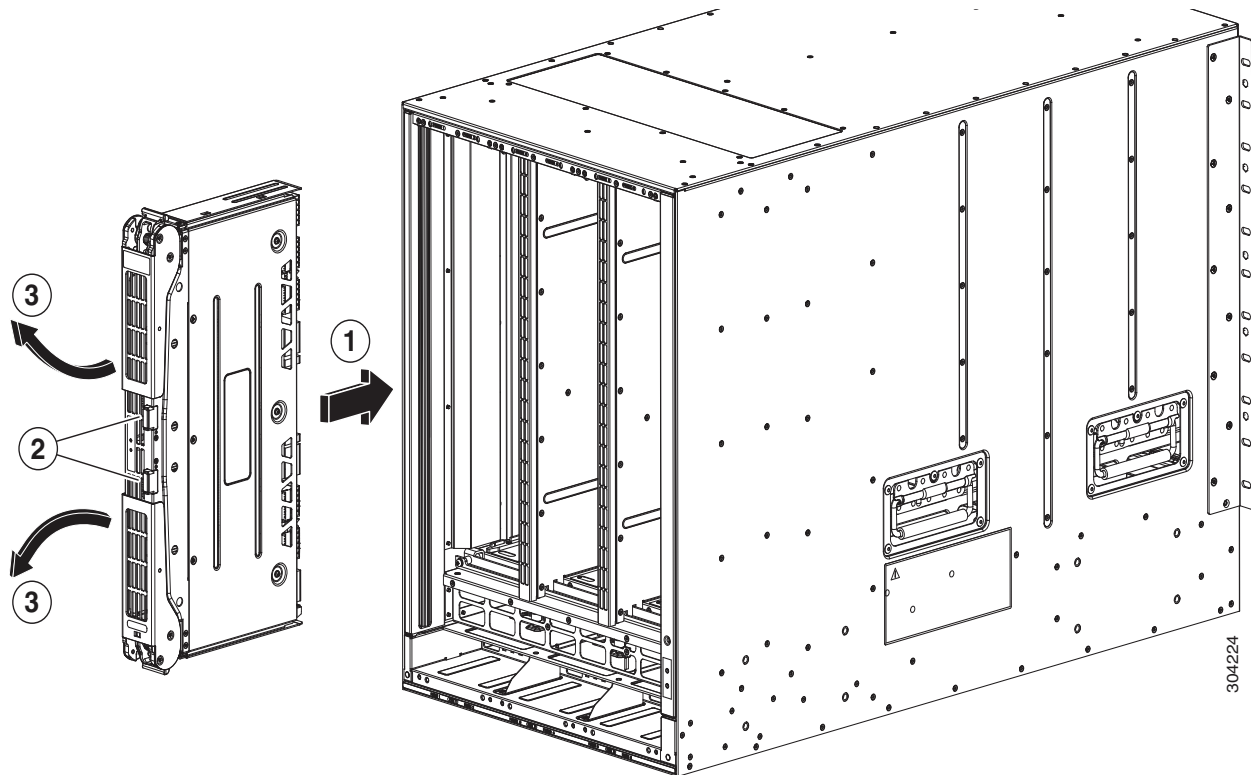Figure 4-6 Inserting the Fabric Module into the Chassis

1	Align the module with the guides in the open slot and push the module half way into the slot.	3	Handles spring out from the module.
2	Press both eject buttons.		

- d. With your face away from the fabric module, press both ejector buttons on the front of the module.

**Caution**

Keep your face at least 12 inches (30 cm) from the front of the fabric module so that the ejector handles do not hit your face when they spring out from the front of the module.


Both ejector handles spring out from the front of the module (see Callout 2 in the previous figure).

- e. Grasp both handles, fully rotate the levers 90 degrees from the front of the module, and push the module all the way into the slot until it seats.

The front of the module will be about 1/4 inch out from the installed fabric modules.

- f. Simultaneously rotate both handles to the front of the module while pressing the module further into the slot (see Callout 1 in the following figure).

The handles click when fully rotated to the front of the module.

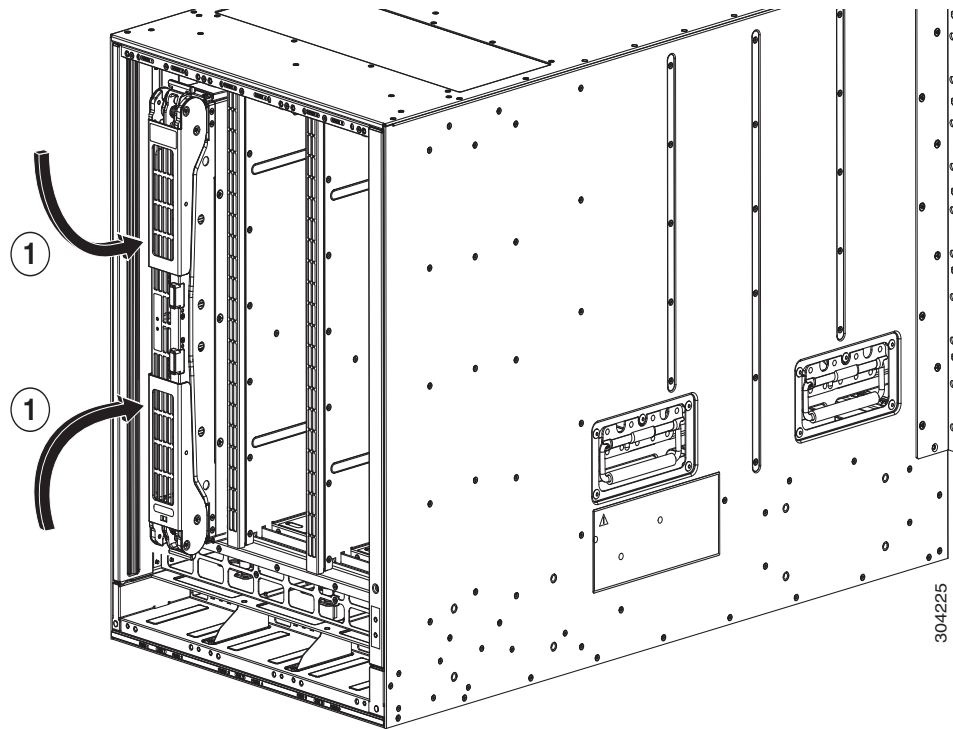Figure 4-7 **Securing the Fabric Module to the Slot**

1	Rotate the handles to the front of the module until they click.		
---	---	--	--

- g. Verify that the module is secured to the chassis and that you cannot remove it without pressing the eject buttons.

- Step 5** Reinstall the fan module over the installed fabric module. For more information on how to install a fan module, see [Installing and Removing Fan Modules, page 4-172](#).
- Step 6** Verify that the Fan Status LED is green. If the LED is not green, one or more fans are faulty. If this occurs, contact your customer service representative for a replacement part.
- Step 7** Wait till the first replaced module is up, follow the same procedure for all the remaining fabric modules. Perform this task sequentially for all the modules (1,2, 3, 4, 5 and 6). Perform [Step 1](#) to [Step 6](#) for the other modules. The new inserted fabric modules will come up.

To remove a crossbar module from the Cisco MDS 9700 Series switch without compromising the integrity and availability of SANs, follow these steps:

- Step 1** Shut down the crossbar fabric module by using the **out-of-service xbar slot** command (where *slot* refers to the external crossbar fabric module slot number).
- Step 2** Remove the fan module that is over the crossbar fabric module to be removed. For more information on how to remove a fan module, see [Installing and Removing Fan Modules, page 4-172](#).

- Step 3** Press ejector release buttons located at the center of the crossbar module to push out the ejector levers and to disconnect the module from the backplane.

**Caution**

You must be cautious when the ejector levers swing open and stay open during installation and removal process.

- Step 4** With a hand on each ejector, pull the module part way out of its slot in the chassis.
- Step 5** Grasp the front edge of the module and slide the module partially out of the slot. Place your other hand under the module to support the weight of the module. Do not touch the module circuitry.
- Step 6** Place the module on an antistatic mat or antistatic foam, or immediately reinstall it in another slot.

Nondisruptive Migration from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules

This section describes the steps required to migrate all the Crossbar (XBAR) Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules for the Cisco MDS 9000 Series Multilayer Directors.

This topic includes the following sections:

- [Requirements, page 4-160](#)
- [Components Used, page 4-160](#)
- [Prerequisite, page 4-161](#)
- [Procedure, page 4-161](#)
- [Verification, page 4-164](#)
- [Recovery Procedure for Downgrading from Crossbar Fabric-3 Switching Modules to Crossbar Fabric-1 Switching Modules, page 4-164](#)
- [Troubleshooting, page 4-165](#)

**Note**

Before you install, operate, or service the system, read the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family* for important safety information.

Requirements

We recommend that you have knowledge of the Cisco NX-OS operating system CLI.

Components Used

The information in this document is based on the following software and hardware versions:

- Cisco MDS 9718 Multilayer Director (DS-C9718) with Cisco MDS NX-OS Release 8.4(2a). Cisco MDS 9710 Multilayer Director (DS-C9710), or a Cisco MDS 9706 Multilayer Director (DS-C9706) with Cisco MDS NX-OS Release 8.4(1)
- Cisco MDS 9718 Crossbar Fabric-3 Switching Module (DS-X9718-FAB3) and Cisco MDS 9718 Crossbar Fabric-1 Switching Module (DS-X9718-FAB1)

- Cisco MDS 9710 Crossbar Fabric-3 Switching Module (DS-X9710-FAB3). For Cisco MDS 9706 Multilayer Director (DS-C9706), it is Cisco MDS 9706 Crossbar Fabric-3 Switching Module (DS-X9706-FAB3).
- Cisco MDS 9710 Crossbar Fabric-1 Switching Module (DS-X9710-FAB1). For Cisco MDS 9706 Multilayer Director (DS-C9706), it is Cisco MDS 9706 Crossbar Fabric-1 Switching Module (DS-X9706-FAB1)

Prerequisite

- Ensure that the switch (Cisco MDS 9710 and Cisco MDS 9706 Multilayer Director Switch) has software release version Cisco MDS NX-OS Release 8.4(1) or later. On Cisco MDS 9718 Multilayer Director Switch, ensure that the switch is running on Cisco MDS NX-OS Release 8.4(2a) or later. To upgrade an image version on the switch, refer the [Cisco MDS 9000 NX-OS Software Upgrade and Downgrade Guide, Release 8.x](#) guide.
- When an MDS 9718, 9710, or 9706 chassis has 6 x Crossbar Fabric-1 Switching Modules installed, you must migrate a minimum of 3 x Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules, and remove the remaining 3 x Crossbar Fabric-1 Switching Modules to support full bandwidth to 32-Gbps fiber channel switching modules.
- You must follow ESD protocols, including the following:
 - You must wear a grounded ESD wristband (or other personal grounding device) whenever you handle the electronic modules outside the grounded chassis.
 - You must carry electronic modules by only their covered edges or handles. Do not touch their electronic components.
 - Whenever a module is outside a grounded chassis, place it flat on an antistatic surface or in an antistatic bag. Never lean the module on anything nor place anything else on top of the module nor lean anything on the module.
- Verify that the chassis is grounded.
- Verify that you have the following tools and equipment:
 - ESD wrist strap (or other personal grounding device)
 - Number 1 Phillips torque screwdriver
 - Manual torque screwdrivers are recommended. Be sure to never exceed the recommended torque setting for the screw that you are working with.
- Ensure that sufficient quantity of Cisco MDS Crossbar Fabric-3 Switching Modules (6 modules are supported in a Cisco MDS 9718, Cisco MDS 9710, or 9706 Multilayer Director) are available for replacing the current Cisco MDS Crossbar Fabric-1 Switching Modules in the switch.



Warning

Mix of different crossbar fabric switching modules (Crossbar Fabric-1 Switching Module and Crossbar Fabric-3 Switching Module) outside a maintenance window, is not supported. This mix of modules is supported only while you are migrating from Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules. After a reboot of the switch, if there is a mix of Crossbar Fabric-1 Switching Modules and Crossbar Fabric-3 Switching Modules, only the Crossbar Fabric-3 Switching Modules will be powered on.

Procedure

The migration process should be performed during schedule maintenance period only.

**Note**

Backward migration procedure (migrating from Cisco MDS 9000 Crossbar Fabric-3 Switching Module to Crossbar Fabric-1 Switching Module) will be disruptive.

**Note**

Perform the Crossbar Fabric-1 Switching Module to Crossbar Fabric-3 Switching Module migration after the Supervisor-1/Supervisor-1E to Supervisor-4 Module migration is completed. A mix mode of Crossbar Fabric-1 Switching Modules with Supervisor-4 Modules and Crossbar Fabric-3 Switching Modules with Supervisor-1/Supervisor-1E Modules is not supported.

**Note**

Once the crossbar fabric switching modules migration process is initiated, wait for the migration process to complete, do not abort the process midway.

To migrate a Crossbar Fabric-1 Switching Modules to Crossbar Fabric-3 Switching Modules, follow these steps:

Step 1

Shut down the crossbar fabric switching module by using the **out-of-service xbar slot** command (where slot refers to the external crossbar fabric switching module slot number).

**Note**

If the Crossbar Fabric-1 Switching Modules are not installed in the recommended slots, when you migrate to the Crossbar Fabric-3 Switching Modules, install the new modules in the recommended slots as described in the [Guidelines for Crossbar Fabric Switching Module Installation, page 4-153](#), section. For example, if you are migrating the Crossbar Fabric-1 Switching Modules from the slots 1, 2, 3 and 4, insert the Crossbar Fabric-3 Switching Modules in slots 1, 2, 3, and 5.

Step 2

Remove the fan module that is over the crossbar fabric switching module to be removed. Fan modules 1 to 3 are numbered left to the right. When the fan modules are installed, they cover the crossbar fabric switching modules.

Crossbar fabric switching modules are numbered 1-6, from left to right, when facing the rear of the chassis. If the system is running, remove only one fan module at a time to access the required crossbar fabric switching module. You can use the **locator-led xbar xbar-number** command to turn on the locator LED to assist in the fabric module identification. The positioning of the fan modules and respective crossbar fabric switching modules is as follows:

For more information on how to remove a fan module, see [Removing a Fan Module, page 4-175](#).

Fan module 1	Fabric modules 1-2
Fan module 2	Fabric modules 3-4
Fan module 3	Fabric modules 5-6

Step 3

Remove the Crossbar Fabric-1 Switching Module from the chassis and replace it with the Crossbar Fabric-3 Switching Module. Once the new module is inserted, it will automatically power up.

**Note**

Only one crossbar fabric switching module should be removed at a time. Before removing the second crossbar fabric switching module, ensure that the first module is up.

For more information on how to remove and install a crossbar fabric switching module, see [Installing and Removing a Crossbar Fabric Switching Module](#), page 4-153.

Step 4 Reinstall the fan module that you removed in [Step 2](#). For more information on how to install a fan module, see [Installing a Fan Module](#), page 4-173.

Step 5 Wait till the first replaced crossbar fabric switching module is up, follow the same procedure for all the remaining crossbar fabric switching modules. Ensure that the temperature of the chassis is normal, after each crossbar fabric module replacement. Use the **show environment temperature** command to view the current temperature. Perform this task sequentially for all the modules (1,2, 3, 4, 5 and 6). Perform [Step 1](#) to [Step 4](#) for the other modules. The latest inserted crossbar fabric switching modules will come up.

**Note**

If a Crossbar Fabric-3 Switching Module migration fails, we recommend that you continue the migration process with the remaining other Crossbar Fabric-3 Switching Modules. Ensure to replace the faulty Crossbar Fabric-3 Switching Module immediately with a new one to achieve full line rate bandwidth.

The following example lists the sequence to replace the Crossbar Fabric-1 Switching Modules with the Crossbar Fabric-3 Switching Modules, when the existing modules are not in the recommended slots:

```
switch# show module xbar
```

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric Module 1	DS-X9710-FAB1	ok
2	0	Fabric Module 1	DS-X9710-FAB1	ok
3	0	Fabric Module 1	DS-X9710-FAB1	ok
4	0	Fabric Module 1	DS-X9710-FAB1	ok

- a. Shut down the Crossbar Fabric-1 Switching Module in slot 1, using the **out-of-service xbar slot** command.
- b. Remove the fan module 1 over the Crossbar Fabric-1 Switching Modules in slots 1-2.
- c. Physically remove and replace the Crossbar Fabric-1 Switching Module in slot 1 with a Crossbar Fabric-3 Switching Module.
- d. Install the fan module 1 over the crossbar fabric switching modules in slots 1-2.
- e. Follow [Step a.](#) to [Step d.](#) to replace the Crossbar Fabric-1 Switching Module in slot 2.
- f. Shut down the Crossbar Fabric-1 Switching Module in slot 3, using the **out-of-service xbar slot** command.
- g. Remove the fan module 2 over the Crossbar Fabric-1 Switching Modules in slots 3-4.
- h. Physically remove and replace the Crossbar Fabric-1 Switching Module in slot 3 with a Crossbar Fabric-3 Switching Module.
- i. Install the fan module 2 over the crossbar fabric switching modules in slots 3-4.
- j. Follow [Step f.](#) to [Step i.](#) to replace the Crossbar Fabric-1 Switching Module in slot 4.
- k. Shut down the Crossbar Fabric-1 Switching Module in slot 5, using the **out-of-service xbar slot** command.
- l. Remove the fan module 3 over the Crossbar Fabric-1 Switching Modules in slots 5-6.

- m. Physically remove and replace the Crossbar Fabric-1 Switching Module in slot 5 with a Crossbar Fabric-3 Switching Module.
- n. Install the fan module 3 over the crossbar fabric switching modules in slots 5-6.
- o. Follow Step [k](#). to Step [n](#). to replace the Crossbar Fabric-1 Switching Module in slot 2.

Verification

Use the **show module xbar** command to verify the module type and module status.

```
switch# show module xbar
```

Xbar	Ports	Module-Type	Model	Status
1	0	Fabric Module 3	DS-X9710-FAB3	ok
2	0	Fabric Module 3	DS-X9710-FAB3	ok
3	0	Fabric Module 3	DS-X9710-FAB3	ok
4	0	Fabric Module 3	DS-X9710-FAB3	ok
5	0	Fabric Module 3	DS-X9710-FAB3	ok
6	0	Fabric Module 3	DS-X9710-FAB3	ok

Xbar	Sw	Hw
1	NA	1.0
2	NA	1.0
3	NA	1.0
4	NA	1.0
5	NA	1.0
6	NA	1.0

Xbar	MAC-Address(es)	Serial-Num
1	NA	JAE1710088N
2	NA	JAE2217096Y
3	NA	JAE222305V1
4	NA	JAE222305VE
5	NA	JAE222305V9
6	NA	JAE222305V8

To view the inventory information for modules from the Cisco DCNM Web UI, Choose **Inventory > View > Modules**. The **Modules** window is displayed with a list of all the switches and its details for a selected scope.

For more information, see the *Cisco DCNM SAN Management Configuration Guide*.

Recovery Procedure for Downgrading from Crossbar Fabric-3 Switching Modules to Crossbar Fabric-1 Switching Modules

This section describes the steps needed to downgrade from Crossbar Fabric-3 Switching Modules to Crossbar Fabric-1 Switching Modules if there are issues with the Crossbar Fabric-3 Switching Modules upgrade.

Scenario 1

If a chassis is running in a mixed mode (both Crossbar Fabric-1 Switching Modules and Crossbar Fabric-3 Switching Modules in **OK** state), then reverse the installation process and replace the Crossbar Fabric-3 Switching Modules one-by-one with Crossbar Fabric-1 Switching Modules. As long as at least one Crossbar Fabric-1 Switching Module is online, replacing Crossbar Fabric-3 Switching Modules with Crossbar Fabric-1 Switching Modules can be done nondisruptively. Do not remove any further Crossbar Fabric-1 Switching Modules. If all the Crossbar Fabric-1 Switching Modules are removed or are in powered down state, then the downgrade will be disruptive.

Scenario 2

If a chassis is loaded with all six Crossbar Fabric-3 Switching Modules, then reinstalling the Crossbar Fabric-1 Switching Modules will be disruptive. Power down the switch and manually replace the Crossbar Fabric-3 Switching Modules with Crossbar Fabric-1 Switching Modules, and then power up the switch.

Troubleshooting

If the migration procedure fails, downgrade the Crossbar Fabric-3 Switching Modules to Crossbar Fabric-1 Switching Modules.

Installing or Replacing a Power Supply in a Switch Chassis

You can follow the same steps to install AC and DC power supplies into the switch, but you ground them differently. For an AC power supply, you automatically ground it when you connect its power cable to the power supply and the power source. For a 3-kW DC power supply, you do not directly connect the power supply to the earth ground.

For more information on the supported power modes, power slots and power redundancy for Cisco MDS 9700 Series Switches, see [Power Supplies, page 1-59](#).

This section provides the following information:

- [Installing an AC Power Supply, page 4-166](#)
- [Connecting an AC Power Supply to an AC Power Source, page 4-166](#)
- [Installing a DC Power Supply, page 4-168](#)
- [Connecting a DC Power Supply Directly to DC Power Sources, page 4-169](#)
- [Removing an AC Power Supply, page 4-171](#)
- [Removing a DC Power Supply, page 4-171](#)

Before you begin

- The switch chassis must be installed in a cabinet or rack that is secured to the data center.

You need the following tools and equipment:

- Nut driver attachment for Number 1 Phillips-head screwdriver or ratchet wrench with torque capability (used only for DC power supplies)
- Crimping tool
- For 3-kW DC power supplies, you need four power cables sized to reach the DC power source or power interface unit (PIU)
- Grounding wire—Size this wire to meet local and national installation requirements. For U.S. installations, you must use a 6 AWG copper conductor. For installations outside the U.S., consult your local and national electrical codes. The length of the grounding wire depends on the proximity of the switch to proper grounding facilities.
- A flat-blade or number 2 Phillips-head screwdriver is required to perform these procedures.

**Warning**

Voltage is present on the backplane when the system is operating. To reduce risk of an electric shock, keep hands and fingers out of the power supply bays and backplane areas. Statement 166

**Warning**

Power supply captive installation screws must be tight to ensure protective grounding continuity. Statement 289

Installing an AC Power Supply

**Caution**

Use both hands to install and remove power supplies. Each AC power supply weighs up to 6 lb (2.7 kg).

To install an AC power supply in the Cisco MDS 9700 Series switch, follow these steps:

- Step 1** Ensure that the system (earth) ground connection has been made. See the [“Proper Grounding Practices” section on page 3-99](#).
- Step 2** If a filler panel is installed, remove the filler panel from the power supply bay by loosening the captive screw.
- Step 3** Ensure that the power switch is in the off (0) position on the power supply you are installing.
- Step 4** Grasp the power supply handle with one hand, place your other hand underneath the power supply, and slide the power supply into the power supply bay. Ensure that the power supply is fully seated in the bay.
- Step 5** Plug the power cable into the power supply, and place the cable retention device to ensure that the cable cannot be pulled out.

Connecting an AC Power Supply to an AC Power Source

Use one power cord to connect a 3-kW power supply to an AC power source and to ground the power supply. Depending on the software power mode configured on the switch, either connect all of the power supplies to one AC power source (grid) or half of the power supplies to the first independent AC power source (Grid A) and the other half to a second independent AC power source (Grid B). A summary of the grid requirements of each software power mode is shown in the [Table 4-1](#).

Table 4-1 Software Power Mode Grids Required

Combined	Power Supply Redundancy	Input Source Redundancy	Full Redundancy
1	1	2	2

For information about the software power configuration modes, refer to the [“Supported Transceivers” section on page 1-63](#).

For information about the location of Grid A and Grid B power supply slots for each type of MDS 9700 Director chassis, refer to the chassis specific information at:

- [Cisco MDS 9718 Chassis Front View](#)
- [Cisco MDS 9710 Chassis Front View](#)
- [Cisco MDS 9706 Chassis Front View](#)

Before you connect a chassis power supply to an AC power source, ensure all of the following:

- There is a vacant receptacle on the AC power source within reach of the chassis power supply cable.
- The power supply is already installed in the chassis.
- The chassis is connected to an earth ground.

**Note**

In a single phase AC power supply unit, connection of multiple phases from the same three-phase source is supported and direct connection of three-phase is not supported.

To connect a 3-kW AC power supply directly to an AC power source, follow these steps:

- Step 1** Ensure that the power supply switch located on the front of the power supply is set at standby (labeled as 0).
- Step 2** Plug one AC power cable into the power supply, and pull down the retention clip over the plug on the power cable.
- Step 3** Plug the other end of the power cable into a AC power source supplied by the data center.

**Warning**

To reduce risk of electric shock and fire, take care when connecting units to the supply circuit so that wiring is not overloaded. Statement 1018.

**Warning**

This product relies on the building’s installation for short-circuit (over current) protection. To reduce risk of electric shock or fire, ensure that the protective device is rated not greater than: 250V, 20 A. Statement 1005.

- Step 4** Turn the power supply switch from standby to on (from 0 to 1 as labeled on the power switch).

- Step 5** Verify that the power supply is receiving AC power and outputting DC power by making sure that the INPUT and OUTPUT power supply LEDs are lit and the FAULT LED is not lit or flashing. For an explanation of all the power supply LEDs and the conditions that they indicate, see [Table 1-15 on page 1-62](#).

**Note**

When you first activate the power supply, you can verify the functionality of the LEDs by checking that each LED turns on for a couple of seconds.

If the Fault LED is flashing red, turn the power switch to standby (labeled as 0), check the AC power connections on the power supply and the AC power source, and then turn the power switch back on (labeled as 1). The Input and Output LEDs for the connected power supplies should be green and the Fault LED should be off.

Installing a DC Power Supply

The DC power supply for the Cisco MDS 9700 Series switch is 3000KW. This power supply has two operational modes as a function of number of inputs receiving power. The unit will deliver 1551KW when only 1 input is active and 3051KW when 2 inputs are active.

Nominal input voltage range	-48 VDC or -60v VDC (tolerance range: -40 to -75 VDC)
Input current	45A maximum at -40VDC per module

**Warning**

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034

To install a DC power supply in the Cisco MDS 9700 Series switch, follow these steps:

- Step 1** Ensure that all power is off by locating the circuit breaker on the panel board that services the DC circuit. Switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.
Ensure that the power switch is in the off (0) position on the power supply you are installing.

**Warning**

Before performing any of the following procedures, ensure that power is removed from the DC circuit. Statement 1003

- Step 2** Grasp the power supply unit handle with one hand, and place your other hand underneath the power supply unit to support its weight. Align the back of the power supply unit with the power supply bay and slide the power supply all the way into the power supply bay until the release lever clicks. Make sure that the power supply unit does not pull out of the power supply bay without pressing the release lever.

Connecting a DC Power Supply Directly to DC Power Sources

Use customer supplied wire to connect a 3-kW power supply to a DC power source. Depending on the software power mode configured on the switch, either connect all of the power supplies to one DC power source (grid) or half of the power supplies to the first independent DC power source (Grid A) and the other half to a second independent DC power source (Grid B). A summary of the grid requirements of each software power mode is shown in the [Table 4-2](#).

Table 4-2 Software Power Mode Grids Required

Combined	Power Supply Redundancy	Input Source Redundancy	Full Redundancy
1	1	2	2

For information about the software power configuration modes, refer to the [“Supported Transceivers” section on page 1-63](#).

For information about the location of Grid A and Grid B power supply slots for each type of MDS 9700 Director chassis, refer to the chassis specific information at:

- [Cisco MDS 9718 Chassis Front View](#)
- [Cisco MDS 9710 Chassis Front View](#)
- [Cisco MDS 9706 Chassis Front View](#)

To connect a 3-kW DC power supply to a DC power source, follow these steps:

- Step 1** Turn the power switch to standby (labeled 0 on the power switch).
- Step 2** Turn off the power at the circuit breakers for the portions of the DC grid power that you are connecting to and verify that all the LEDs on the power supplies are off.



Warning

Before performing any of the following procedures, ensure that power is removed from the DC circuit. Statement 1003



Warning

Comply with Local and National Electrical Codes: “To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.” Statement 1074

- Step 3** Prepare enough length power cable, the wire range 6AWG~8AWG. Size the power cables to the distance between the power supply and the DC power grid. If you need to cut the cable, cut it at the end that connects to the DC power grid, remove 0.75 inch (19 mm) of insulation from the cut ends, and attach them to the DC power system. Be sure to connect the negative cables to negative lines and positive cables to positive lines.

**Note**

For all your power connections, if you are using cables with two different colors, use one color cable for all positive circuits and the other color for all negative circuits.

**Warning**

Hazardous voltage or energy may be present on DC power terminals. Always replace cover when terminals are not in service. Be sure uninsulated conductors are not accessible when cover is in place. Statement 1075


Step 4

Remove the three screws that hold down the safety cover for the terminal box on the front of the DC power supply and remove the cover (see [Figure 4-8](#)).

**Note**

The terminal box has four slots for four power terminals (ordered as negative [-], positive [+], positive [+], and negative [-]). Each terminal has two nuts that you use to fasten a power cable to the terminal.

Figure 4-8 Removing the Safety Cover for the Terminal Box on the 3-kW DC Power Supply

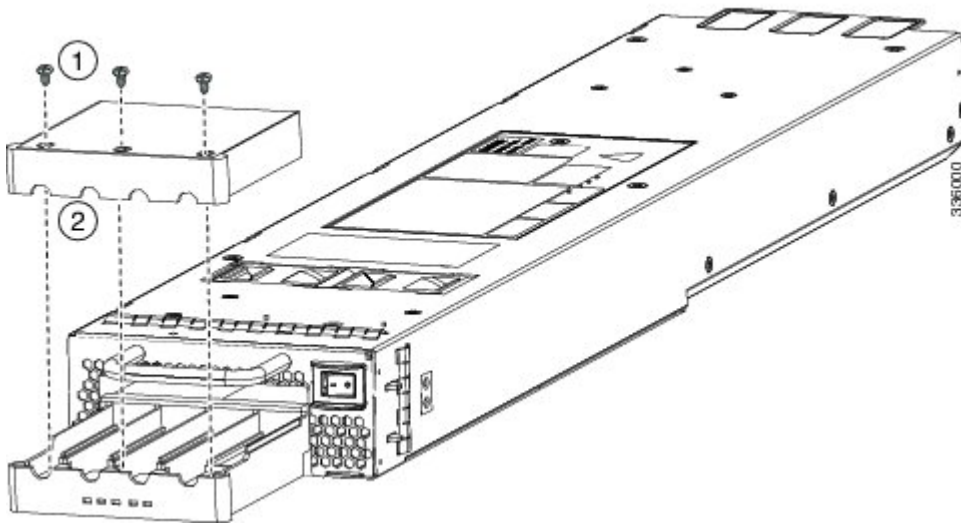

1 Remove screws from cover.

2 Remove the safety cover.

Step 5

Install four cables (two positive and two negative cables) in the four terminal slots as follows:

- a. Remove 16mm insulation of the other end of the cables.
- b. Unscrew the two nuts in each of the four terminal slots, take out the lug.
- c. Attach and crimp each lug to the end of each power cable
- d. Attach each cable lug to the two terminal posts in each slot, fasten with two nuts, and tighten to 40 in-lb (4.5 N·m).

**Note**

For all your power connections, if you are using cables with two different colors, use one color cable for all positive circuits and the other color for all negative circuits.

- e. Replace the safety cover on the terminal box and fasten with three screws.

- Step 6** Install the four cables from the DC power supply to a DC power source as follows:
- a. If the unconnected end of each power cable is not stripped of its insulation for the last 0.75 inches (19 mm), use wire strippers to remove that amount of insulation.
 - b. Attach the negative cables to the negative terminals of a DC power source, and attach the positive cables to the positive terminals of the same power source.
- Step 7** For the powered down circuits connected to the power supplies, turn on the power at the circuit breaker. The Input 1 (IN1) and Input 2 (IN2) LEDs turn on each connected power supply.
- Step 8** Turn the power switch on the connected DC power supplies from standby to on (from 0 to 1 as labeled on the power switch for each power supply). The LEDs should flash and then the Output LED should turn on in addition to the Input LEDs.

If the FAULT LED is lit or flashing, call Cisco TAC for assistance.

Removing an AC Power Supply

**Warning**

Voltage is present on the backplane when the system is operating. To reduce risk of an electric shock, keep hands and fingers out of the power supply bays and backplane areas. Statement 166

To remove an AC power supply from the Cisco MDS 9700 Series switch, follow these steps:

- Step 1** Turn the power switch on the power supply to the off (0) position.
- Step 2** Disconnect the power cable from the power source.
- Step 3** Press the release lever latch on the power module.
- Step 4** Release the power cable spring latch retainer.
- Step 5** Grasp the power supply handle with one hand, and slide the power supply partially out of the chassis. Place your other hand underneath the power supply, and slide the power supply completely out of the chassis.

**Note**

Each AC power supply weighs between 6 lb (2.7 kg).

- Step 6** If the power supply bay is to remain empty, install a power supply filler panel over the opening, and tighten the captive screw to 8 in-lb.

Removing a DC Power Supply

The DC power supply for the Cisco MDS 9700 Series switch is 3000 W.

To remove a DC power supply from the Cisco MDS 9700 Series switch, follow these steps:

-
- Step 1** Turn the power switch on the power supply to the off (0) position.
- Step 2** Turn off the DC input power by manually turning off the input circuit at the circuit breaker for this power supply.
- Step 3** Verify that the input power is completely off by making sure that all the LEDs on the DC power supply unit are off.



Warning

Before performing any of the following procedures, ensure that power is removed from the DC circuit. Statement 1003

- Step 4** Disconnect the DC cables from the terminal block in the following order:
- Positive (+)
 - Negative (-)
 - Ground



Caution

In general, the positive (+) terminal is grounded at the battery and is the low end and that should be isolated from ground to prevent a ground loop. Both terminals should be isolated from ground and the negative terminal to ground should be a short and blow the breaker.



Warning

When installing or replacing the unit, the ground connection must always be made first and disconnected last. Statement 1046



Warning

Hazardous voltage or energy may be present on DC power terminals. Always replace cover when terminals are not in service. Be sure uninsulated conductors are not accessible when cover is in place. Statement 1075

- Step 5** Press and hold the release latch on the front of the power supply and then pull the power supply part way-out of the chassis by its handle.



Note

Each DC power supply weighs 11 lb (5 kg).

- Step 6** If the power supply bay is to remain empty, install a power supply filler panel over the opening, and tighten the captive screw to 8 in-lb.
-

Installing and Removing Fan Modules

The fan module is designed to be removed and replaced while the system is operating without presenting an electrical hazard or damage to the system, provided the replacement is performed promptly.

The Cisco MDS 9700 Series switches have three fan modules. Each fan module for the Cisco MDS 9710 Director has four individual fans and each fan module for the Cisco MDS 9706 Director has two individual fans with an abrupt stop-to-fan rotation safety feature after power is disconnected or the fan module is removed from the mid-plane.

**Caution**

The Cisco MDS 9000 Family switches have internal temperature sensors that can shut down the system if the temperature at different points within the chassis exceeds certain safety thresholds. To be effective, the temperature sensors require the presence of airflow; therefore, if a fan module is removed from the chassis, the Cisco MDS 9000 Family switches will be shut down to prevent potentially undetectable overheating. However, the switches will be shut down sooner if the higher-level temperature threshold is exceeded. In normal data center conditions, if one fan module fails or needs to be removed, the other two fan modules can cool the system effectively for up to 72 hours.

This section includes the following topics:

- [Installing a Fan Module, page 4-173](#)
- [Removing a Fan Module, page 4-175](#)

Installing a Fan Module


If you need to remove the fan module to replace a fabric module, see the [Installing and Removing a Crossbar Fabric Switching Module, page 4-153](#) section.

**Note**

The fan module displays the fabric module LEDs so that you can see the status of the two fabric modules installed behind that fan module.

To install a fan module on the Cisco MDS 9700 Series switch, follow these steps:

- Step 1** Hold the fan module so that the Fan Status LED is at the bottom.
- Step 2** Carefully press the whole fan module into the slot so that the four alignment pins go into their holes in the chassis and the electrical connectors at the bottom of the chassis are inserted into the chassis connectors inside the slot. Make sure that the front of the fan module is touching the outer surface of the chassis and that the four captive screws on the fan module are aligned to four screw holes in the chassis.

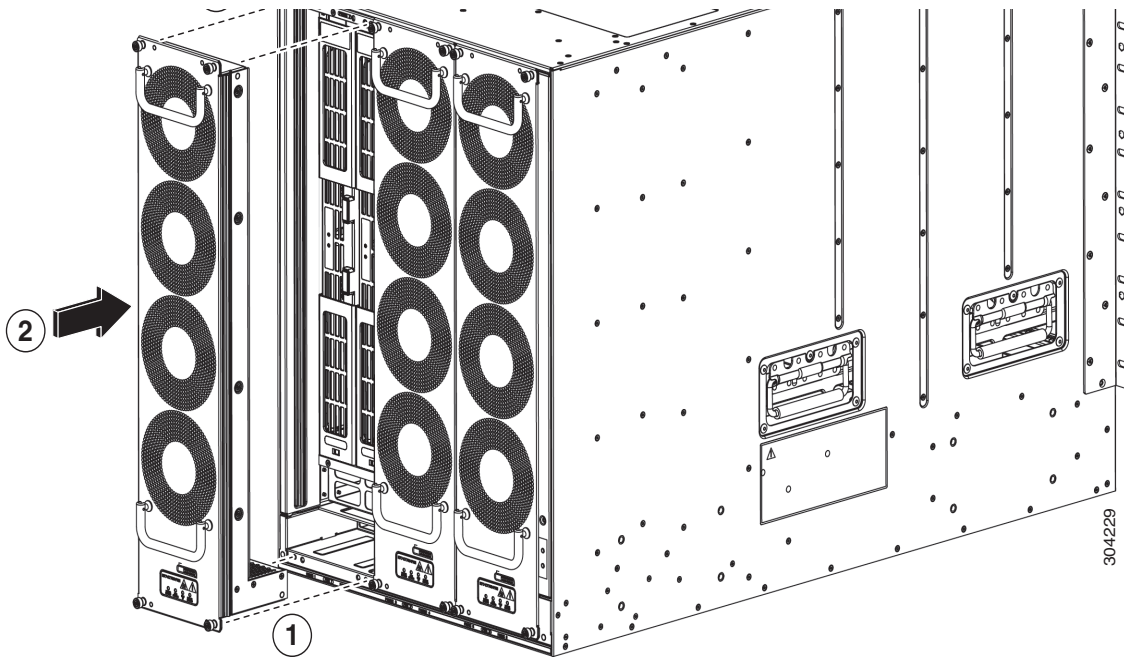Figure 4-9 *Installing a Fan Module*

1	Align the four pins in the fan module with four holes in the chassis.	2	Press the whole fan module into the chassis slot.
---	---	---	---

- Step 3** With the electrical contacts on the fan module aligned to contacts on the backplane, press the fan module fully into the slot.
- Step 4** Screw in each of the four captive screws on the front of the fan module to secure the fan module to the chassis. After fully engaged, tighten each screw to 8 in-lb (0.9 N·m) of torque.
- Step 5** Listen for the fans; you should immediately hear them operating. If you do not hear them, ensure that the fan module is inserted completely in the chassis and the outside surface of the fan module is flush with the outside surface of the chassis.
- Step 6** Verify that the Fan Status LED is green. If the LED is not green, one or more fans are faulty. If this occurs, contact your customer service representative for a replacement part.
- Step 7** If the switch is powered on, listen for the fans; you should immediately hear them operating. If you do not hear them, ensure that the fan module is inserted completely in the chassis and the outside surface of the fan module is flush with the outside surface of the chassis.
- Step 8** Verify that the Fan Status LED is green. If the LED is not green, one or more fans are faulty. If this occurs, contact your customer service representative for a replacement part. For more information about the LED states, see the [System LEDs](#), page 1-21.

**Note**

If you purchased this product through a Cisco reseller, contact the reseller directly for technical support. If you purchased this product directly from Cisco Systems, contact Cisco Technical Support at this URL: http://www.cisco.com/en/US/support/tsd_cisco_worldwide_contacts.html.


Removing a Fan Module

**Warning**

When removing the fan module, keep your hands and fingers away from the spinning fan blades. Let the fan blades completely stop before you remove the fan module. Statement 258

To remove the fan module from a Cisco MDS 9700 Series switch, follow these steps:

- a. Use a Phillips torque screwdriver to loosen the four captive screws on the fan module until they are no longer connected to the chassis.
- b. Grasp the handles of the fan module with both hands and pull it outward to unseat the power connector from the backplane.
- c. Pull the fan module fully out of the chassis.

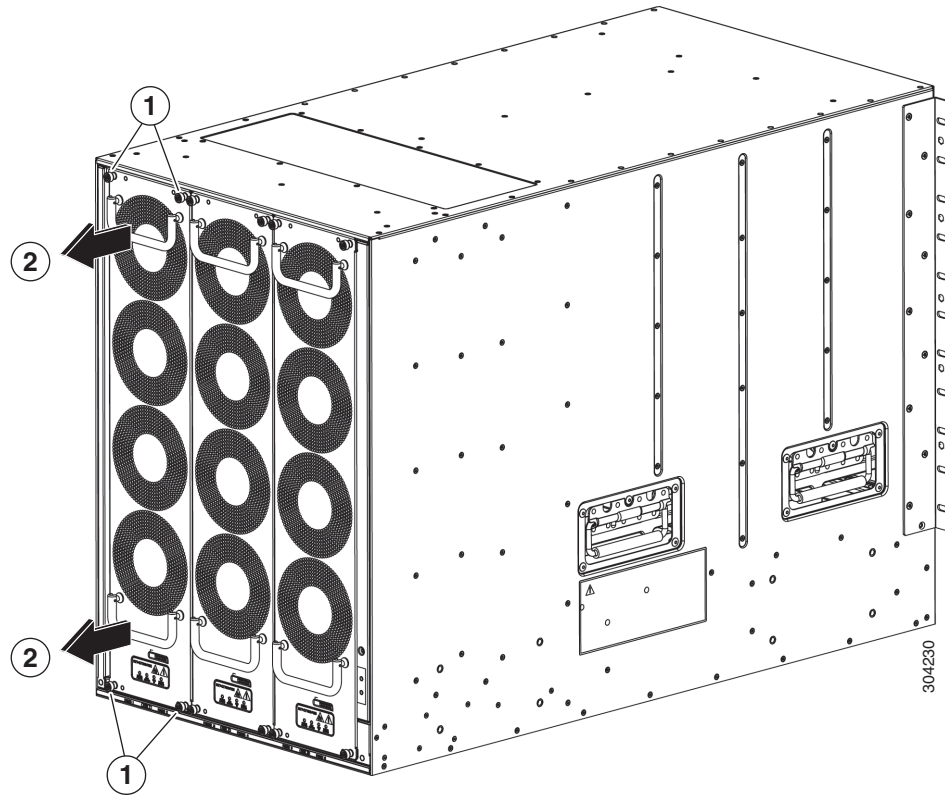Figure 4-10 Removing a Fan Module

1	Unscrew four captive screws until they are no longer attached to the chassis.	2	Pull both handles to remove the module from the chassis.
---	---	---	--

- d. Set the fan module down on one of its covered sides only on an antistatic pad or inside an antistatic bag.

**Caution**

Keep your face away from the front of the fabric module so that the levers do not hit your face when they spring out from the front of the module.

**Note**

It is normal for the fan speeds of the remaining fan modules to increase when one fan module is removed. The fan speeds will return to normal once the fan module is reinstalled.

Powering up the Switch and Verifying the Component Installation



Warning

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Statement 1034



Caution

During this procedure, wear grounding wrist straps to avoid ESD damage to the switch.



Note

The 3000-W (DS-CAC-3000W) power supplies provide power according to the input voltage. If they are in redundant rather than combined mode at 110 VAC, they may be unable to provide adequate power to all modules present in the system. See [Appendix 6, “Technical Specifications.”](#)



Warning

Blank faceplates and cover panels serve three important functions: they prevent exposure to hazardous voltages and currents inside the chassis; they contain electromagnetic interference (EMI) that might disrupt other equipment; and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place. Statement 1029



Note

Do not connect the MGMT 10/100 Ethernet port to the LAN until the initial switch configuration has been performed. For instructions on configuring the switch, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.

For instructions on connecting to the console port, see the [“Connecting to the Console Port” section on page 5-106](#).

To power up the switch and verify hardware operation, follow these steps:

- Step 1** Verify that the faceplates of all modules are flush with the front of the chassis, and the ejector levers are fully closed and approximately parallel to the faceplate of the module.
- Step 2** Verify that any empty module slots have filler panels installed.
- Step 3** Verify that power supplies and the fan module are installed.
- Step 4** Check the power cable retainer of the power supplies, captive screws of fan module, and all supervisor, switching, or services modules, and tighten any retaining screws to specification.
- Step 5** Ensure that the switch is adequately grounded as described in the [“System Grounding” section on page 3-99](#), and that the power cables are connected to outlets that have the required AC or DC power voltages. See [Appendix 6, “Technical Specifications,”](#) for the required voltages.
- Step 6** Power on the switch by turning the power switches on the power supplies or PEMs to the on (I) position or restoring power to the DC circuit, as required. The switch boots automatically.
- Step 7** Listen for the fans; they should begin operating as soon as the switch is powered on.

**Caution**

Do not operate the switch without a functioning fan module except during the brief fan module replacement procedure. The Cisco MDS 9000 Family switches can operate for only a few minutes without a functioning fan module before they begin to overheat.

Step 8 After the switch has finished booting, verify that the LED operations are as follows:

- Fan module—Status LED is green.
- Power supplies:
 - Input OK LED is IN.
 - Output Fail LED is Fault.
- Supervisor and switching modules:
 - The System LED on the supervisor module is green, indicating that all chassis environmental monitors are reporting that the system is operational. If this LED is orange or red, one or more environmental monitors are reporting a problem.
 - The Status LED on the switching modules flashes orange once, remains orange during diagnostic boot tests, and then turns green when the module is operational (online). If the system software cannot start up, this LED remains orange or turns red.

**Note**

The LEDs for the Fibre Channel ports remain orange until the ports are enabled, and the LED for the MGMT 10/100 Ethernet port remains off until the port is connected.

If any LEDs other than the Fibre Channel port LEDs remain orange or red after the initial boot processes are complete, see [Appendix 6, “Technical Specifications.”](#)

Step 9 If a component is not operating correctly, try removing and reinstalling it. If it still does not operate correctly, contact your customer service representative for a replacement.

**Note**

If you purchased this product through a Cisco reseller, contact the reseller directly for technical support. If you purchased this product directly from Cisco Systems, contact Cisco Technical Support at this URL: http://www.cisco.com/en/US/support/tsd_cisco_worldwide_contacts.html.

Step 10 Verify that the system software has booted and the switch has initialized without error messages. If any problems occur, see the *Cisco MDS 9000 Family System Messages Reference*. If you cannot resolve an issue, contact your customer service representative.

Step 11 Complete the worksheets provided in [Appendix 8, “Site Planning and Maintenance Records,”](#) for future reference.

**Note**

A setup utility automatically launches the first time you access the switch and guides you through the basic configuration. For instructions about how to configure the switch and check module connectivity, see the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide* or the *Cisco Fundamentals Configuration Guide for DCNM SAN*.



Technical Specifications

This appendix provides technical specifications and includes the following sections:

- [Switch Specifications, page 6-113](#)
- [Module Specifications, page 6-116](#)
- [Power Specifications for the Cisco MDS 9700 Series, page 6-120](#)
- [SFP+ Transceiver Specifications, page 6-128](#)



Note Specifications for cables and connectors are provided in [Appendix 7, “Cable and Port Specifications.”](#)

Switch Specifications

- [Cisco MDS 9718 Director Specification, page 6-114](#)
- [Cisco MDS 9710 Director Specification, page 6-115](#)
- [Cisco MDS 9706 Director Specification, page 6-115](#)

[Table 6-1](#) lists the environmental specifications for the Cisco MDS 9700 Series.

Table 6-1 *Environmental Specifications for the Cisco MDS 9700 Series*

Description	Specification
Temperature, certified for operation	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	–40 to 158°F (–40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%
Humidity (RH), ambient (noncondensing) nonoperating and storage	10 to 95%
Altitude, certified for operation	–197 to 6500 ft (–60 to 2000 m)

Cisco MDS 9718 Director Specification

Table 6-2 lists the physical specifications for the Cisco MDS 9718 Director.

Table 6-2 *Physical Specifications for the Cisco MDS 9718 Director*

Description	Specification
Dimensions (HxWxD)	26 rack units (26 RU) 45.25 x 17.3 x 35 in. (114.9 x 43.9 x 88.9 cm)
Weight	Chassis (includes fans): 300 lb (136 kg)
Airflow	700 (LFM) average system velocity and between 40 and 160 cubic feet per minute (CFM) total flow through each line-card slot depending on the line-card type and fan-speed setting

Cisco MDS 9710 Director Specification

Table 6-3 lists the physical specifications for the Cisco MDS 9710 Director.

Table 6-3 *Physical Specifications for the Cisco MDS 9710 Director*

Description	Specification
Dimensions (HxWxD)	14 rack units (14 RU) 24.35 x 17.3 x 34.0 in. (61.9 x 43.9 x 86.4 cm)
Weight	Chassis (includes fans): 185.5 lb (84.2 kg)
Airflow	700 (LFM) average system velocity and between 40 and 160 cubic feet per minute (CFM) total flow through each line-card slot depending on the line-card type and fan-speed setting

Cisco MDS 9706 Director Specification

Table 6-4 lists the physical specifications for the Cisco MDS 9706 Director.

Table 6-4 *Physical Specifications for the Cisco MDS 9706 Director*

Description	Specification
Dimensions (HxWxD)	9 rack units (9 RU) 15.6 x 17.3 x 32.0 in. (39.62 x 43.9 x 81.3 cm)
Weight	Chassis (includes fans): 145 lb (65.8 kg)
Airflow	700 (LFM) average system velocity and between 40 and 160 cubic feet per minute (CFM) total flow through each line-card slot depending on the line-card type and fan-speed setting

Module Specifications

Table 6-5 lists the specifications for the Cisco MDS 9700 Supervisor-4 Module.

Table 6-5 Cisco MDS 9700 Supervisor-4 Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	2.04 x 8.07 x 23.5 in. (5.18 x 20.49 x 59.69 cm)
Weight	7.7 lb (3.5 kg)

Table 6-7 lists the specifications for the Cisco MDS 9700 Supervisor-1E Modules.

Table 6-6 Cisco MDS 9700 Supervisor-1E Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	2.04 x 7.94 x 21.85 in. (5.18 x 20.17 x 55.5 cm)
Weight	8.5 lb (3.86 kg)

Table 6-9 lists the specifications for the Cisco MDS 9700 Supervisor-1 Modules.

Table 6-7 Cisco MDS 9700 Supervisor-1 Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)

Table 6-7 Cisco MDS 9700 Supervisor-1 Module Specifications

Description	Specification
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	8 to 80%
Altitude, certified for operation	0 to 6500 ft (0 to 2000 m)
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	2.04 x 7.5 x 21.8 in. (5.18 x 19.05 x 55.37 cm)
Weight	7 lb (3.2 kg)

Table 6-8 lists the specifications for the Cisco MDS 9700 Series Crossbar Fabric Switching Modules.

Table 6-8 Cisco MDS 9700 Series Crossbar Fabric Switching Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%
Altitude, certified for operation	0 to 6500 ft (0 to 2000 m)
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	1.75 x 15.9 x 21.8 in. (4.4 x 40.39 x 55.37 cm)
Weight	17lb (7.7kg)

Table 6-9 lists the specifications for the Cisco MDS 9700 Series 40-Gigabit FCoE Switching Module.

Table 6-9 Cisco MDS 9700 Series 40-Gigabit FCoE Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	5 to 90%
Altitude, certified for operation	0 to 6500 ft (0 to 2000 m)
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)

Table 6-9 Cisco MDS 9700 Series 40-Gigabit FCoE Module Specifications (continued)

Description	Specification
Physical Characteristics	
Dimensions	1.75 x 15.9 x 21.8 in. (4.4 x 40.39 x 55.37 cm)
Weight	17 lb (7.7 kg)

Table 6-10 lists the specifications for the Cisco MDS 9700 Series 10-Gigabit FCoE Switching module.

Table 6-10 Cisco MDS 9700 Series 10-Gigabit FCoE Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	8 to 80%
Altitude, certified for operation	0 to 6500 ft (0 to 2000 m)
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	1.75 x 15.9 x 21.8 in. (4.4 x 40.39 x 55.37 cm)
Weight	17 lb (7.7 kg)

Table 6-11 lists the specifications for the Cisco MDS 9700 Series 24/10-Port SAN Extension Module.

Table 6-11 Cisco MDS 9700 Series 24/10-Port SAN Extension Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	5 to 90%
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	1.75 x 15.9 x 21.8 in. (4.4 x 40.39 x 55.37 cm)
Weight	17 lb (7.7 kg)

Table 6-12 lists the specifications for the Cisco MDS 9700 48-Port 64-Gbps FC Switching Module.

Table 6-12 Cisco MDS 9700 Series 48-Port 64-Gbps Fibre Channel Switching Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	1.73 x 16.9 x 23.6 in. (4.4 x 43.04 x 59.89 cm)
Weight	17.6 lb (8.0 kg)

Table 6-13 lists the specifications for the Cisco MDS 9700 48-Port 32-Gbps FC Switching Module.

Table 6-13 Cisco MDS 9700 Series 48-Port 32-Gbps Fibre Channel Switching Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	1.73 x 15.9 x 21.8 in. (4.4 x 40.39 x 55.37 cm)
Weight	17.5 lb (7.94 kg)

Table 6-14 lists the specifications for the Cisco MDS 9700 48-Port 16-Gbps FC Switching Module

Table 6-14 Cisco MDS 9700 Series 48-Port 16-Gbps Fibre Channel Switching Module Specifications

Description	Specification
Environmental Requirements	
Temperature, certified for operation (module intake of ambient)	32 to 104°F (0 to 40°C)
Temperature, ambient nonoperating and storage	-40 to 158°F (-40 to 70°C)
Humidity (RH), ambient (noncondensing) operating	10 to 90%

Table 6-14 *Cisco MDS 9700 Series 48-Port 16-Gbps Fibre Channel Switching Module (continued) Specifications*

Description	Specification
Altitude, designed and tested for operation	-197 to 6500 ft (-60 to 2000 m)
Physical Characteristics	
Dimensions	1.75 x 15.9 x 21.8 in. (4.4 x 40.39 x 55.37 cm)
Weight	17 lb (7.71 kg)

Power Specifications for the Cisco MDS 9700 Series

This section includes the following topics:

- [Power Supply Specifications, page 6-120](#)
- [Component Power Requirements and Heat Dissipation, page 6-121](#)
- [AC Power Consumption for the Cisco MDS 9718 Director, page 6-124](#)
- [AC Power Consumption for the Cisco MDS 9710 Director, page 6-125](#)
- [AC Power Consumption for the Cisco MDS 9706 Director, page 6-126](#)
- [AC Power Supply Requirements for Grid Redundancy, page 6-127](#)

Power Supply Specifications

[Table 6-15](#) lists the specifications for the Cisco MDS 9700 Series power supplies.

Table 6-15 *Specifications for Cisco MDS 9700 Series Power Supplies*

Description	Specification
3000-W AC Power Supply	
Type	Autoranging input with power factor corrector.
Voltage	100 to 240 VAC ($\pm 10\%$).
Current rating	16 A maximum at 100 to 120 VAC and 1451-W output. 16 A maximum at 200 to 240 VAC and 3051-W output. For current ratings of plugs, see Figure 7-3 on page 7-142 .
Frequency	50 to 60 Hz (nominal) (± 3 Hz for full range).
Output capacity	1451 W maximum (100 to 120 VAC, 1400W available to chassis) 3051 W maximum (200 to 240 VAC, 3000W available to chassis)
Output voltage at 110/120	3.4V (+/- 4%) at 15A; 50V(+/- 4%) at 28A.
Output voltage at 200/240	3.4V (+/- 4%) at 15A; 50V(+/- 4%) at 28A
Efficiency	>94% at 50% load
ITHD	<5.1% at 50% load
3500-W High Voltage AC/DC Power Supply	
Type	Autoranging input with power factor corrector.

Table 6-15 Specifications for Cisco MDS 9700 Series Power Supplies (continued)

Description	Specification
Input Voltage Range	120 VAC nominal low-line mode (85 to 132 VAC)
	240 VAC nominal high-line mode (170 to 264 VAC)
	277 VAC nominal high line mode (188 to 305 VAC)
	240 VDC nominal high-line mode (192 to 288 VDC)
	380 VDC nominal high-line mode (260 to 400 VDC)
Input Current	20A service, 16A maximum at nominal line voltage (240 or 277 VAC)
	20A service, 16A maximum at nominal line voltage (240 or 380 VDC)
Input Frequency	47 to 63 Hz
Output capacity	1500 W maximum (100 to 120 VAC)
	3100 W maximum (200 to 210 VAC)
	3500 W maximum (215 to 240 and 277 VAC)
	3100 W maximum (200 to 215 VDC)
	3500 W maximum (220 to 380 VDC)

Table 6-16 provides the power supply fuse information for Cisco MDS 9700 Series power supplies.

Table 6-16 Power Supply Fuse Information

Part Number	PID	Type	Fuse Rated AMP	I2T	Fuse Melting Time
341-0579-03	DS-CAC97-3KW	Fast Acting	25 A	2500 5000	1000s@32A, 0.1s@160A 1000s@35A, 0.1s@160A
341-0578-01	DS-CDC97-3KW	Fast Acting	60 A	2297	1000s@80A, 0.1s@380A

Component Power Requirements and Heat Dissipation

When sizing the air-conditioning requirements for an installation, consider heat dissipation. The power and heat associated with a Cisco MDS 9700 Directors varies based upon the following considerations:

- Power supply type
- Switching module type and number of switching modules installed
- Average switching traffic levels

Table 6-17 lists the power requirements for the components of the Cisco MDS 9700 Directors.

**Note**

Unless noted otherwise, the power requirement data listed under the “Maximum” Power Required column in [Table 6-17](#) is based on the worst-case conditions that are unlikely in a data center environment.

Table 6-17 Per Module Power Requirements Using 3000 W AC PSUs

Module Type/ Product Number	Maximum Capacity per Chassis	Power Required (watts)	
		Maximum	Typical
Cisco MDS 9700 48 port 64 Gbps Switching Module (DS-X9748-3072K9)	4 (Cisco MDS 9706) 8 (Cisco MDS 9710)	350	300
Cisco MDS 9700 48 port 32 Gbps Switching Module (DS-X9648-1536K9)	16 (Cisco MDS 9718)	350	260
Cisco MDS 48 port 16 Gbps Switching Module (DS-X9448-768K9)		650	480
Cisco MDS 48 Port 10 Gigabit Fibre Channel over Ethernet Module (DS-X9848-480K9)		500	400
24 Port 40 Gbps Fibre Channel over Ethernet (FCoE) Module (DS-X9824-960K9)		740	550
24/10 port SAN Extension Module (DS-X9334-K9)		480	450
Cisco MDS 9700 Series Supervisor-4 Module (DS-X97-SF4-K9)	2	120	100
Cisco MDS 9700 Series Supervisor-1E Module (DS-X97-SF1E-K9)		265	160
Cisco MDS 9700 Series Supervisor-1 Module (DS-X97-SF1-K9)		190	110

Table 6-17 Per Module Power Requirements Using 3000 W AC PSUs (continued)

Module Type/ Product Number	Maximum Capacity per Chassis	Power Required (watts)	
		Maximum	Typical
Cisco MDS 9718 Crossbar Switching Fabric-1 Module (DS-X9718-FAB1)	6	300	260
Cisco MDS 9710 Crossbar Switching Fabric-3 Module (DS-X9710-FAB3)		150	135
Cisco MDS 9706 Crossbar Switching Fabric-3 Module (DS-X9706-FAB3)		85	64
Cisco MDS 9710 Crossbar Switching Fabric-1 Module (DS-X9710-FAB1)		150	135
Cisco MDS 9706 Crossbar Switching Fabric-1 Module (DS-X9706-FAB1)		85	64
Cisco MDS 9718 Fan Module (DS-C9718-FAN)	3	900	75
Cisco MDS 9710 Fan Module (DS-C9710-FAN)		600	50
Cisco MDS 9706 Fan Module (DS-C9706-FAN)		300	40

Table 6-18 Requirements and Heat Dissipation for 3000 W AC Power Supplies for Different Solutions with 64-G Fibre Channel ports using Cisco MDS 9700 48 port 64 Gbps Switching Module (DS-X9748-3072K9) and six Fabric Modules for 64 Gbps Speed and three Fabric Modules for 32 Gbps Speed.

Number of Switching Modules	Number of Ports	Power Required (watts)				Typical Heat Dissipation (BTU/hr)	
		Typical (32 Gbps)	Typical (64 Gbps)	Total Worst Case (32 Gbps)	Total Worst Case (64 Gbps)	Typical (32 Gbps)	Typical (64 Gbps)
1	48	995	1460	2790	3290	3393	4979
2	96	1235	1760	3090	3640	4211	6002
3	144	1475	2060	3390	3990	5030	7025
4	192	1715	2360	3690	4340	5848	8048
5	240	1955	2660	3990	4690	6667	9071
6	288	2195	2960	4290	5040	7485	10094
7	336	2435	3260	4590	5390	8303	11117
8	384	2675	3560	4890	5740	9122	12140

Table 6-19 *Requirements and Heat Dissipation for 3000 W AC Power Supplies for Different Solutions with 32-G Fibre Channel ports using Cisco MDS 9700 48 port 32 Gbps Switching Module (DS-X9648-1536K9) and six Fabric 1 Modules.*

Number of Switching Modules	Number of Ports	Power Required (watts)		Typical Heat Dissipation (BTU/hr)
		Typical	Total Worst Case	
1	48	1440	3340	4910
2	96	1700	3600	5797
3	144	1960	3860	6683
4	192	2220	4120	7570
5	240	2480	4380	8457
6	288	2740	4640	9343
7	336	3000	4900	10230
8	384	3260	5160	11117

Table 6-20 *Requirements and Heat Dissipation for 3000 W AC Power Supplies for Different Solutions with 32-G Fibre Channel ports using Cisco MDS 9700 48 port 32 Gbps Switching Module (DS-X9648-1536K9) and three Fabric 3 Modules.*

Number of Switching Modules	Number of Ports	Power Required (watts)		Typical Heat Dissipation (BTU/hr)
		Typical	Total Worst Case	
1	48	1015	2750	3461
2	96	1275	3010	4348
3	144	1535	3270	5234
4	192	1795	3530	6121
5	240	2055	3790	7008
6	288	2315	4050	7894
7	336	2575	4310	8781
8	384	2835	4570	9667

AC Power Consumption for the Cisco MDS 9718 Director

Table 6-21 shows the typical AC power consumption for the Cisco MDS 9718 Director.

Table 6-21 Typical AC Power Consumption for Cisco MDS 9718 Director

Speed/Module Type	Number of Fabric Modules	Typical AC Power Consumption (Watts)		
		192 ports	384 ports	768 ports
64-G Fibre Channel ports with Cisco MDS 9700 48-port 64-Gbps Switching Module (DS-X9748-3072K9)	6	3335	4535	6935
32-G/16-G Fibre Channel ports with Cisco MDS 9700 48-port 32-Gbps Switching Module (DS-X9648-1536K9)		3145	4185	6265
16-G Fibre Channel ports with Cisco MDS 9700 48-port 16-Gbps Switching Module (DS-X9448-768K9)		4025	5945	9785

AC Power Consumption for the Cisco MDS 9710 Director

Table 6-22 shows the typical AC power consumption for the Cisco MDS 9710 Director.

Table 6-22 Typical AC Power Consumption for Cisco MDS 9710 Director

Speed/Module Type	Number of Fabric Modules	Typical AC Power Consumption (Watts)	
		192 ports	384 ports
64-G Fibre Channel ports with Cisco MDS 9700 48-port 64-Gbps Switching Module (DS-X9748-3072K9)	6	2360	3560
32-G Fibre Channel ports with Cisco MDS 9700 48-port 32-Gbps Switching Module (DS-X9648-1536K9)		2220	3260

Table 6-22 Typical AC Power Consumption for Cisco MDS 9710 Director

Speed/Module Type	Number of Fabric Modules	Typical AC Power Consumption (Watts)	
		192 ports	384 ports
16-G Fibre Channel ports with Cisco MDS 9700 48-port 32-Gbps Switching Module (DS-X9648-1536K9)	3	1815	2855
16-G Fibre Channel ports with Cisco MDS 9700 48-port 16-Gbps Switching Module (DS-X9448-768K9)	3	2695	4615

AC Power Consumption for the Cisco MDS 9706 Director

Table 6-23 shows the typical AC power consumption for the Cisco MDS 9706 Director.

Table 6-23 Typical AC Power Consumption for Cisco MDS 9706 Director

Speed/Module Type	Number of Fabric Modules	Typical AC Power Consumption (Watts)	
		96 ports	192 ports
64-G Fibre Channel ports with Cisco MDS 9700 48-port 64-Gbps Switching Module (DS-X9748-3072K9)	6	1304	1904
32-G Fibre Channel ports with Cisco MDS 9700 48-port 32-Gbps Switching Module (DS-X9648-1536K9)		1244	1764
16-G Fibre Channel ports with Cisco MDS 9700 48-port 32-Gbps Switching Module (DS-X9648-1536K9)	3	1052	1572
16-G Fibre Channel ports with Cisco MDS 9700 48-port 16-Gbps Switching Module (DS-X9448-768K9)	3	1492	2452

AC Power Supply Requirements for Grid Redundancy

The minimum number of AC PSUs required to achieve grid redundancy on each of the Cisco MDS 9700 Series Directors differ. This number is irrespective of the optics configured (See [Table 6-25](#)). Modifications made to the configurations may require additional PSUs as per [Table 6-24](#).



Note

The minimum number of AC PSUs required to achieve grid redundancy is based on the maximum reserved power per chassis for any given configuration. The actual power consumption will be lower.

Table 6-24 AC PSU Requirements for Grid Redundancy

Platform	Configurations	Minimum PSUs Required for Grid Redundancy
Cisco MDS 9718	Up to 16 x Cisco MDS 48 Port 64-Gbps Fibre Channel Switching Modules	8
	Up to 16 x Cisco MDS 48 Port 32-Gbps Fibre Channel Switching Modules	8
	Up to 12 x Cisco MDS 48 Port 32-Gbps Fibre Channel Switching Modules and up to 4 x 24/10 port SAN Extension Module	8
	Any other supported module or a combination of supported modules: <ul style="list-style-type: none"> 48 Port 64-Gbps Fibre Channel Switching Module 48 Port 32-Gbps Fibre Channel Switching Module 24/10 port SAN Extension Module 24 Port 40-Gbps Fibre Channel over Ethernet Module 48 Port 16-Gbps Fibre Channel Switching Module 48 Port 10-Gbps Fibre Channel over Ethernet Module 	12

Table 6-24 AC PSU Requirements for Grid Redundancy (continued)

Platform	Configurations	Minimum PSUs Required for Grid Redundancy
Cisco MDS 9710	Up to 8 x Cisco MDS 48 Port 64-Gbps Fibre Channel Switching Modules	4
	Up to 8 x Cisco MDS 48 Port 32-Gbps Fibre Channel Switching Modules	4
	Any other supported module or a combination of supported modules: <ul style="list-style-type: none"> • 48 Port 64-Gbps Fibre Channel Switching Module • 48 Port 32-Gbps Fibre Channel Switching Module • 24/10 port SAN Extension Module • 24 Port 40-Gbps Fibre Channel over Ethernet Module • 48 Port 16-Gbps Fibre Channel Switching Module • 48 Port 10-Gbps Fibre Channel over Ethernet Module 	6
Cisco MDS 9706	Up to 3 x Cisco MDS 48 Port 64-Gbps Fibre Channel Switching Modules	2
	Up to 3 x Cisco MDS 48 Port 32-Gbps Fibre Channel Switching Modules	2
	Any other supported module or a combination of supported modules: <ul style="list-style-type: none"> • 48 Port 64-Gbps Fibre Channel Switching Module • 48 Port 32-Gbps Fibre Channel Switching Module • 24/10 port SAN Extension Module • 24 Port 40-Gbps Fibre Channel over Ethernet Module • 48 Port 16-Gbps Fibre Channel Switching Module • 48 Port 10-Gbps Fibre Channel over Ethernet Module 	4

**Note**

The default power mode on Cisco MDS 9700 Series directors is combined mode. Grid redundancy needs to be explicitly configured.

SFP+ Transceiver Specifications

The Cisco MDS 9700 Series switch is compatible with SFP+ transceivers and cables that have LC connectors. The wavelength of each transceiver must match the transceiver on the other end of the cable, and the cable must not exceed the stipulated cable length for reliable communications.

Cisco SFP+ transceivers provide the uplink interfaces, laser transmit (Tx) and laser receive (Rx), and support 850 to 1610 nm nominal wavelengths, depending upon the transceiver.

Use only Cisco SFP+ transceivers on the Cisco MDS 9700 Series. Each Cisco SFP+ transceiver is encoded with model information that enables the switch to verify that the SFP+ transceiver meets the requirements for the switch.

This section provides the following topics:

- [Cisco Fibre Channel SFP+ Transceivers, page 6-129](#)

Cisco Fibre Channel SFP+ Transceivers

Table 6-25 lists the Cisco Fibre Channel transceivers.

Table 6-25 Cisco Fibre Channel Transceivers

Transceiver Module Product Number	Description	Type
DS-SFP-FC32G-SW	32-Gbps Fibre Channel SW SFP+	Short wavelength
DS-SFP-FC16G-SW	16-Gbps Fibre Channel SW, SFP+	Short wavelength
DS-SFP-FC10G-SW	10-Gbps Fibre Channel SW SFP+	Short wavelength
DS-SFP-FC8G-SW	8-Gbps Fibre Channel SW, SFP+	Short wavelength
DS-SFP-FC32G-LW	32-Gbps Fibre Channel LW SFP+	Long wavelength
DS-SFP-FC16G-LW	16-Gbps Fibre Channel LW, SFP+	Long wavelength
DS-SFP-FC10G-LW	10-Gbps Fibre Channel LW SFP+	Long wavelength
DS-SFP-FC8G-LW	8-Gbps Fibre Channel LW, SFP+	Long wavelength
DS-SFP-FC32G-ELW	32-Gbps Fibre Channel ELW SFP+	Extended long wavelength
DS-SFP-FC16G-ELW	16-Gbps Fibre Channel ELW, SFP+	Extended long wavelength
DS-SFP-FC8G-ER	8-Gbps Fibre Channel ER SFP+	Extended Reach
SFP-10G-ER	10GBASE-ER SFP Module	Extended Reach
SFP-10G-SR	10GBASE-SR SFP Module	Short Reach
SFP-10G-LR	10GBASE-LR SFP Module	Long Reach
DS-CWDM8Gxxxx	8-Gbps Fibre Channel CWDM SFP+	Coarse Wavelength-Division Multiplexing (CWDM)
DWDM-SFP10G xxxx	10GBASE-DWDM SFP+	Dense Wavelength-Division Multiplexing (DWDM). 40 different wavelengths are offered ¹ .

- For additional product numbers and information, see the dense wavelength-division multiplexing (DWDM) SFP optics data sheet: http://www.cisco.com/en/US/prod/collateral/modules/ps5455/ps6576/data_sheet_c78-711186.html.

General Specifications for Cisco 32-Gbps Fibre Channel SFP+ Transceivers

Table 6-26 provides the general specifications for Cisco Fibre Channel SFP+ transceivers.

Table 6-26 General Specifications for Cisco 32 Gbps Fibre Channel SFP+ Transceivers

SFP+	Wavelength (nanometer)	Fiber Type	Core Size (micron)	Baud Rate (GBd)	Cable Distance
DS-SFP-FC32G-SW	850	MMF	50.0	28.05	65 ft (20m) (OM2)
			50.0	28.05	230 ft (70m) (OM3)
			50.0	28.05	328 ft (100m) (OM4)
			50.0	28.05	328 ft (100m) (OM5)
			62.5	14.025	49 ft (15m) (OM1)
			50.0	14.025	115 ft (35m) (OM2)
			50.0	14.025	328 ft (100m) (OM3)
			50.0	14.025	410 ft (125m) (OM4)
			50.0	14.025	410 ft (125m) (OM5)
			62.5	8.5	69 ft (21m) (OM1)
			50.0	8.5	164 ft (50m) (OM2)
			50.0	8.5	492 ft (150m) (OM3)
			50.0	8.5	623 ft (190m) (OM4)
			50.0	8.5	623 ft (190m) (OM5)
DS-SFP-FC32G-LW	1310	SMF	9.0	28.05	6.2 mi (10 km)
			9.0	14.025	6.2 mi (10 km)
			9.0	8.5	6.2 mi (10 km)
DS-SFP-FC32G-ELW	1310	SMF	G.652	32G	25 km (15.5 mi)

Environmental and Power Requirements for Cisco 32-Gbps Fibre Channel SFP+ Transceivers

Table 6-27 provides the power specification for the Cisco 32-Gbps Fibre Channel SFP+ transceivers.

Table 6-27 Power Requirements Specification for Cisco 32-Gbps Fibre Channel SFP+ Transceivers

SFP+	Average Transmit Power (dBm)		Average Receive Power (dBm)		Fiber Loss Budget (dBm)			
	Max	Min	Max	Min	OM2	OM3	OM4	OM5
DS-SFP-FC32G-SW	2.0	-6.2	2.0	-8.2	1.68 (8 Gbps)	2.04 (8 Gbps)	2.04 (8 Gbps)	2.04 (8 Gbps)
					1.63 (16 Gbps)	1.86 (16 Gbps)	1.95 (16 Gbps)	1.95 (16 Gbps)
					2.02 (32 Gbps)	1.86 (32 Gbps)	1.86 (32 Gbps)	1.86 (32 Gbps)
DS-SFP-FC32G-LW	2.0	-5.0	2.0	-11.4	6.4 (8 Gbps)			
					6.4 (16 Gbps)			
					6.4 (32 Gbps)			
DS-SFP-FC32G-ELW	30	7	4.5	-15.8	20			

Table 6-28 provides the environment specification for the Cisco 32-Gbps Fibre Channel SFP+ transceivers.

Table 6-28 Environmental Specifications for Cisco 32-Gbps Fibre Channel SFP+ Transceivers

SFP+	Operating		Storage	
	Maximum	Minimum	Maximum	Minimum
DS-SFP-FC32G-SW	70°C	0°C	85°C	-40°C
DS-SFP-FC32G-LW				
DS-SFP-FC32G-ELW				

For information about safety, regulatory, and standards compliance, refer to the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family*.

General Specifications for Cisco 16-Gbps Fibre Channel SFP+ Transceivers

Table 6-29 provides the general specifications for Cisco Fibre Channel SFP+ transceivers.

Table 6-29 General Specifications for Cisco 16-Gbps Fibre Channel SFP+ Transceivers

SFP+	Wavelength (nanometer)	Fiber Type	Core Size (micron)	Baud Rate (GBd)	Cable Distance
DS-SFP-FC16G-SW	850	MMF	62.5	14.025	15 m (49 ft) (OM1)
			50.0	14.025	35 m (115 ft) (OM2)
			50.0	14.025	100 m (328 ft) (OM3)
			50.0	14.025	125 m (410 ft) (OM4)
			50.0	14.025	125 m (410 ft) (OM5)
			62.5	8.5	21 m (69 ft) (OM1)
			50.0	8.5	50 m (164 ft) (OM2)
			50.0	8.5	150 m (492 ft) (OM3)
			50.0	8.5	190 (623 ft) (OM4)
			50.0	8.5	190 (623 ft) (OM5)
			62.5	4.25	70 m (230 ft) (OM1)
			50.0	4.25	150 m (492 ft) (OM2)
			50.0	4.25	380 m (1247 ft) (OM3)
			5.0	4.25	400 m (1312 ft) (OM2)
DS-SFP-FC16G-LW	1310	SMF	9.0	14.025	10 km (6.2 miles)
			9.0	8.5	10 km (6.2 miles)
			9.0	4.25	10 km (6.2 miles)
DS-SFP-FC16G-ELW	1310	SMF	9.0	14.025	25 km (15.5 mile)
			9.0	8.5	25 km (15.5 mile)
			9.0	4.25	25 km (15.5 mile)

Environmental and Power Requirements for Cisco 16-Gbps Fibre Channel SFP+ Transceivers

Table 6-30 provides the power specification for the Cisco 16-Gbps Fibre Channel SFP+ transceivers.

Table 6-30 Power Requirements Specification for Cisco 16-Gbps Fibre Channel SFP+ Transceivers

SFP+	Average Transmit Power (dBm)		Average Receive Power (dBm)		Fiber Loss Budget (dBm)		
	Maximum	Minimum	Maximum	Minimum	(62.5 microns [OM1])	(50.0 microns [OM2])	(50.0 microns [OM3])
DS-SFP-FC16G-SW	-1.3	-7, 8	0	-10.3	2.08 (4 Gbps) 1.68 (8 Gbps) 1.63 (16 Gbps)	2.08 (4 Gbps) 1.68 (8 Gbps) 1.63 (16 Gbps)	2.88 (4 Gbps) 1.04 (8 Gbps) 1.86 (16 Gbps)
DS-SFP-FC16G-LW	1.3	-5.0	2.0	-10.0	7.8 (4 Gbps) 6.4 (8 Gbps) 6.4 (16 Gbps)		
DS-SFP-FC16G-ELW	-2.0	5.0	-14.0	2.0	10 (16 Gbps)		

Table 6-31 provides the environment specification for the Cisco 16-Gbps Fibre Channel SFP+ transceivers.

Table 6-31 Environmental Specifications for Cisco 16 Gbps Fibre Channel SFP+ Transceivers

SFP+	Operating		Storage	
	Maximum	Minimum	Maximum	Minimum
DS-SFP-FC16G-SW	70°C	0°C	85°C	-40°C
DS-SFP-FC16G-LW				
DS-SFP-FC16G-ELW				

For information about safety, regulatory, and standards compliance, refer to the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family*.

General Specifications for Cisco 8-Gbps Fibre Channel SFP+ Transceivers

Table 6-32 provides the general specifications for Cisco 8-Gbps Fibre Channel SFP+ transceivers.

Table 6-32 General Specifications for Cisco 8-Gbps Fibre Channel SFP+ Transceivers

SFP+	Wavelength (nanometer)	Fiber Type	Core Size (micon)	Baud Rate (GBd)	Cable Distance (meter)
DS-SFP-FC8G-SW	850	MMF	62.5	2.125	150 m (492 ft)
			62.5	4.250	(OM1)
			62.5	8.500	70 m (230 ft)
			50.0 (OM2)	2.125	21 m (69 ft)
			50.0 (OM2)	4.250	300 m (984 ft)
			50.0(OM2)	8.500	150 m (492 ft)
			50. 0 (OM3)	2.125	50 m (164 ft)
			50. 0 (OM3)	4.250	500 m (1640 ft)
			50. 0 (OM3)	8.500	380 m (1246 ft)
					150 m (492 ft)
DS-SFP-FC8G-LW	1310	SMF	9.0	2.125	6.2 miles (10 km)
			9.0	4.250	
			9.0	8.500	
DS-SFP-FC8G-ER	1550	SMF	9.0	2.125	40 km (24.85 miles)
			9.0	4.250	
			9.0	8.500	

Environmental and Power Requirements for Cisco 8-Gbps Fibre Channel SFP+ Transceivers

Table 6-33 provides the power specification for the Cisco 8-Gbps Fibre Channel SFP+ transceivers.

Table 6-33 Power Requirements Specification for Cisco 8-Gbps Fibre Channel SFP+ Transceivers

SFP	Average Transmit Power (dBm)		Average Receive Power (dBm)		Fiber Loss Budget (dBm)		
	Maximum	Minimum	Maximum	Minimum	62.5 microns	50.0 microns [OM2]	50.0 microns [OM3]
DS-SFP-FC8G-SW	-1.3	-10 (2 Gbps) -9 (4 Gbps) -8.2 (8 Gbps)	0	—	2.10 (2 Gbps) 1.78 (4 Gbps) 1.58 (8 Gbps)	2.62 (2 Gbps) 2.06 (4 Gbps) 1.68 (8 Gbps)	3.31 (2 Gbps) 2.88 (4 Gbps) 2.04 (8 Gbps)
DS-SFP-FC8G-LW	-3 (2 Gbps) -1 (4 Gbps) +0.5 (8 Gbps)	-11.7 (2 Gbps) -8.4 (4 Gbps) -8.4 (8 Gbps)	-3 (2 Gbps) -1 (4 Gbps) +0.5 (8 Gbps)	—	7.8 (2 Gbps) 7.8 (4 Gbps) 6.4 (8 Gbps)		
DS-SFP-FC8G-ER	4	- 47	14.1	—	10.9	—	—

Table 6-34 provides the environment specification for the Cisco 8-Gbps Fibre Channel SFP+ transceivers.

Table 6-34 Environmental Specifications for Cisco 8-Gbps Fibre Channel SFP+ Transceivers

SFP+	Operating		Storage	
	Maximum	Minimum	Maximum	Minimum
DS-SFP-FC8G-SW	70°C	0°C	85°C	-40°C
DS-SFP-FC8G-LW	70°C	0°C	85°C	-40°C
DS-SFP-FC8G-ER	70°C	0°C	85°C	-40°C

For information about safety, regulatory, and standards compliance, refer to the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family*.

Maximum Environmental and Electrical Ratings for Cisco Fibre Channel SFP+ Transceivers

Table 6-35 provides the maximum environmental and electrical ratings for Cisco Fibre Channel SFP+ transceivers.

Table 6-35 **Maximum Environmental and Electrical Ratings for Cisco Fibre Channel SFP+ Transceivers**

Parameter ¹	Symbol	Min.	Max. ²	Unit	Notes
Storage temperature	T _S	-40	85	°C	1
Case temperature	T _C	0	70	°C	1, 2
Relative humidity	RH	5	95	%	1

1. Do not operate outside the recommended operating conditions. Device reliability may be affected and damage to the device may occur over an extended period of time.
2. Absolute maximum ratings are those values beyond which damage to the device may occur if these limits are exceeded for other than a short period of time.

For information about safety, regulatory, and standards compliance, refer to the *Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family*.

10-Gigabit Fibre Channel over Ethernet Interface Distances and Options

Table 6-36 10-Gigabit Fibre Channel over Ethernet Interface Distances and Options

10-Gigabit Fibre Channel over Ethernet SFP+	Wavelength (nanometers)	Fiber and Cable Type	Core Size (microns)	Modal Bandwidth (MHz per km)	Cable Distance
SFP-10G-SR	850	MMF (FDDI-grade)	62.5	160	26 m
		MMF (OM1)	62.5	200	33 m
		MMF (400/400)	50.0	400	66 m
		MMF (OM2)	50.0	500	82 m
		MMF (OM3)	50.0	2000	300 m
		MMF (OM4)	50.0	4700	400 m
		MMF (OM5)	50.0	4700	400 m
SFP-10G-LRM	1310	MMF	62.5	500	220 m
			50	400	100 m
			50	500	220 m
		SMF	G.652	—	300 m
SFP-10G-LR	1310	SMF	G.652	—	10 km
SFP-10G-ER	1550	SMF	G.652	—	40 km
SFP-10G-ZR	1550	SMF	G.652	—	80 km
DWDM-SFP10G-xx.x x=		SMF	—	—	80 km
SFP-H10GB-CUxM (x=1, 3, or 5)	—	Twinax cable assembly, passive	—	—	1, 3, or 5 m
SFP-H10GB-ACUxM (x=7 or 10)	—	Twinax cable assembly, passive	—	—	7 or 10 m
SFP-10G-AOCxM(x=1, 2, 3, 5, 7, or 10)	—	Twinax cable assembly, passive	—	—	1, 2, 3, 5, 7, or 10 m

40 Gigabit Fibre Channel over Ethernet Interface Distances and Options

Table 6-37 40 Gigabit Fibre Channel over Ethernet Interface Distances and Options

10-Gigabit Fibre Channel over Ethernet SFP+	Wavelength (nanometers)	Fiber and Cable Type	Core Size (microns)	Modal Bandwidth (MHz per km)	Cable Distance ¹
QSFP-40G-SR4	850	MMF (OM2)	50.0	500	30m
QSFP-40G-SR4-S		MMF (OM3)	50.0	2000	100m
		MMF (OM4)	50.0	4700	150m ²
		MMF (OM5)	50.0	4700	150m
QSFP-40G-CSR4	850	MMF (OM1)	62.5	200	33m
QSFP-40G-CSR4-S		MMF (OM2)	50.0	500	82m
		MMF (OM3)	50.0	2000	300m
		MMF (OM4)	50.0	4700	400m
		MMF (OM5)	50.0	4700	400m
QSFP-40G-SR-BD	850/900	MMF (OM2)	50.0	500	30m
		MMF (OM3)	50.0	2000	100m
		MMF (OM4)	50.0	4700	150m
		MMF (OM5)	50.0	4700	150m
QSFP-H40G-AOCxM (x=1, 2, 3, 5, 7, or 10)	-	Active optical cable assembly	-	-	1, 2, 3, 5, 7, or 10m
QSFP-40GE-LR4	1310	SMF	G.652	-	6.21 miles (10 km)
QSFP-40GE-ER4	1310	SMF	G.652	-	40 km

1. Minimum cabling distance of 0.5m for -SR4 and -CSR4 modules according to the IEEE 802.3 standard.
2. Considered an engineered link with a maximum of 1 dB allocated to connectors and splice loss.



Cable and Port Specifications

This appendix provides the cable and port specifications, and includes the following sections:

- [Cables and Adapters Provided, page 7-137](#)
- [Console Port, page 7-138](#)
- [MGMT 10/100/1000 Ethernet Port, page 7-139](#)
- [Supported Power Cords and Plugs, page 7-140](#)

Cables and Adapters Provided

The Cisco MDS 9700 Series accessory kit includes the following items:

- RJ-45 rollover cable
- RJ-45/DSUB F/F adapter—RJ-45 to DB-25 female DTE adapter (labeled “Terminal”)
- RJ-45/DSUB R/P adapter—RJ-45 to DB-25 male DCE adapter (labeled “Modem”)



Note

Additional cables and adapters can be ordered from your customer service representative.



Note

If you purchased Cisco support through a Cisco reseller, contact the reseller directly. If you purchased support directly from Cisco Systems, contact Cisco Technical Support at this URL:
http://www.cisco.com/en/US/support/tsd_cisco_worldwide_contacts.html

Console Port

The console port is an asynchronous RS-232 serial port with an RJ-45 connector. You can use the RJ-45 rollover cable and the RJ-45/DSUB F/F adapter or the RJ-45F PC terminal adapter to connect the console port to a computer running terminal emulation software.

Console Port Pinouts

[Table 7-1](#) lists the pinouts for the console port on the Cisco MDS 9700 Series switch.

Table 7-1 Console Port Pinouts

Pin	Signal
1 ¹	RTS
2	DTR
3	TxD
4	GND
5	GND
6	RxD
7	DSR
8	CTS

1. Pin 1 is connected internally to pin 8.

Connecting the Console Port to a Computer Using the DB-25 Adapter

You can use the RJ-45 rollover cable and RJ-45/DSUB F/F adapter (labeled “Terminal”) to connect the console port to a computer running terminal emulation software. [Table 7-2](#) lists the pinouts for the console port, the RJ-45 rollover cable, and the RJ-45/DSUB F/F adapter.


Table 7-2 Port Mode Signaling and Pinouts with the DB-25 Adapter

Console Port	RJ-45 Rollover Cable		RJ4-5/DSUB F/F Terminal Adapter	Console Device
Signal	RJ-45 Pin	RJ-45 Pin	DB-25 Pin	Signal
RTS	1	8	5	CTS
DTR	2	7	6	DSR
TxD	3	6	3	RxD
GND	4	5	7	GND
GND	5	4	7	GND
RxD	6	3	2	TxD
DSR	7	2	20	DTR
CTS	8	1	4	RTS

MGMT 10/100/1000 Ethernet Port

The MGMT 10/100/1000 Ethernet port is an Ethernet port with an RJ-45 connector. You can use a modular, RJ-45, straight-through UTP cable to connect the management port to an external hub, switch, or router (see [Figure 7-1](#)).

Figure 7-1 RJ-45 Interface Cable Connector

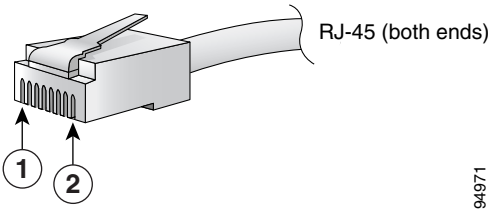

1	Pin 1	2	Pin 8
---	-------	---	-------

[Table 7-3](#) lists the connector pinouts and signal names for a 10/100/1000BASE-T management port (MDI) cable.


Note


The RJ-45 interface only uses pins 1, 2, 3, and 6.

Table 7-3 10/100/1000BASE-T Management Port Cable Pinout (MDI)

Pin	Signal
1	TD+
2	TD-
3	RD+
6	RD-
4	Not used
5	Not used
7	Not used
8	Not used

Figure 7-2 shows a schematic of the 10/100/1000BASE-T cable required to connect the management port to a switch or hub (not provided with the switch).

Figure 7-2 Twisted-Pair 10/100/1000BASE-T Cable Schematic

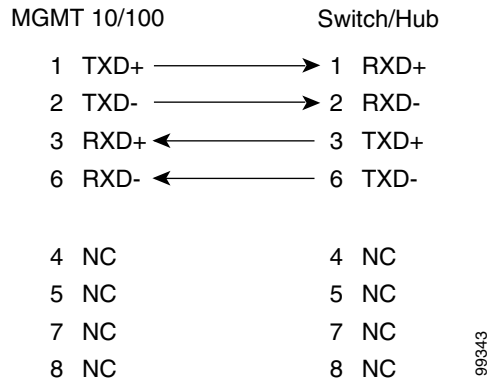

Supported Power Cords and Plugs

Each power supply has a separate power cord. Standard power cords or jumper power cords are available for connection to a power distribution unit having IEC 60320 C19 outlet receptacles.

Power Cords

The standard power cords have an IEC C19 connector on the end that plugs into the switch. The optional jumper power cords have an IEC C19 connector on the end that plugs into the switch, and an IEC C20 connector on the end that plugs into an IEC C19 outlet receptacle.



Note

Only the regular power cords or jumper power cords provided with the switch are supported.



Note

If you do not order the optional power cord with the system, you are responsible for selecting the appropriate power cord for the product. Using a non-compatible power cord with this product may result in electrical safety hazard. Orders delivered to Argentina, Brazil, and Japan must have the appropriate power cord ordered with the system.

Table 7-4 lists the power cords for the Cisco MDS 9700 Series switch and provides their lengths in feet and meters.


Table 7-4 Power Cords for the MDS 9700 Series Switch

Description	Length	
	Feet	Meters
MDS 9710 - 3000W Power Supply		
Power Cord, 250VAC 20A NEMA, 6-20 Plug, USA	13.12	4
Power Cord, 250VAC 20A NEMA L6-20 Twist Lock Plug, USA	13.58	4.14
Power Cord, 250VAC 16A CEE 7/7 Plug, EU	13.12	4
Power Cord, 250VAC 16A IEC 309 Plug, International	13.58	4.14
Power Cord, 250VAC 16A SEV 1011 Plug, Switzerland	8	2.44
Power Cord, 250VAC SABS 1661 Plug, South Africa	14	4.27
Power Cord, 250VAC 16A SI16S3 Plug, Israel	14	4.27
Power Cord 250VAC 16A, Src Plug EL224-C19, Brazil,	14	4.27
Power Cord 250VAC 16A, Src Plug IR2073-C19, Argentina,	14	4.27

Supported Plugs for 3000 W AC Power Supplies

Figure 7-3 shows the supported plugs for the 3000 W AC power supplies.

Figure 7-3 3000-W AC Power Supply Plugs

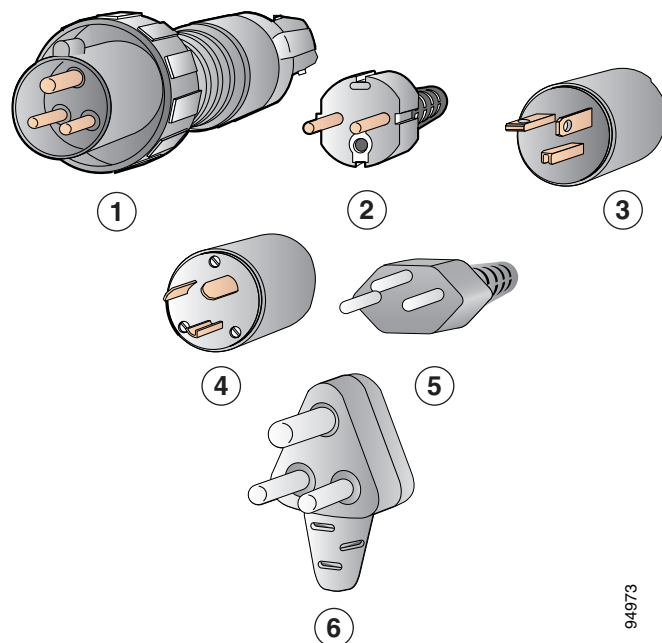

1	International (3000 W) IEC 309 (20 A)	4	North America (locking) (3000 W) NEMA L6-20 plug (2 0A)
2	Europe (3000 W) CEE 7/7 (16 A)	5	Switzerland (3000 W) 23 G SEV 1011 (16 A)
3	North America (non-locking) (3000) NEMA 6-20 plug (20 A)	6	South Africa (3000 W) EL 208, SABS 164-1 (16 A)


Figure 7-4 shows an additional plug that is supported for the 3000 W and 2500 W power supply, using 110 VAC.



Note

Using the plug in Figure 7-4 at 110 VAC results in 1450 W available to the system.

Figure 7-4 Additional Power Supply Plug Supported for 3000 W 110 VAC Only

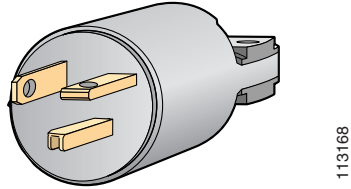

- | | |
|----------|--|
| 1 | NEMA 5-20P
North American power cord product ID: CAB-7513AC
110 VAC (20 A) |
|----------|--|

Power Supply AC Power Cords

Table 7-5 lists the specifications for the 3000 W AC power cords that are available for the AC-input power supply. Included in the table are references to illustrations of the power cords.

Table 7-5 Power Supply AC Power Cords

Locale	Power Cord Part Number	Source Plug Type	Cordset Rating	Power Cord Reference Illustration
North America/Japan	CAB-9K2A-NA	NEMA 5-20	20 A, 125 VAC	Figure 7-5
US/Japan	CAB-9K16A-US2	NMEA L6-20	16 A, 250 VAC	Figure 7-6
Australia	CAB-9K16A-AUS	AU20S3	16 A, 250 VAC	Figure 7-7
China	CAB-9k16A-CH	GB16C	16 A, 250 VAC	Figure 7-8
International	CAB-9K16A-INT	IEC 309	16A 250V AC	Figure 7-9
Switzerland	CAB-9K16A-SW	SEV 5934	16 A 250 VAC	Figure 7-10
Continental Europe	CAB-9K16A-EU	CEE7/7	16 A 250 VAC	Figure 7-11
Cabinet Jumper Power Cord	CAB-C19-CBN	C 20-C19	16 A 250 VAC	Figure 7-12

AC Power Cord Illustrations

This section contains the AC power cord illustrations. An AC power cord can be used with several power supplies. See the power supply specifications tables for the correct AC power cord illustrations for your power supply.

Figure 7-5 *CAB-9K20A-NA*

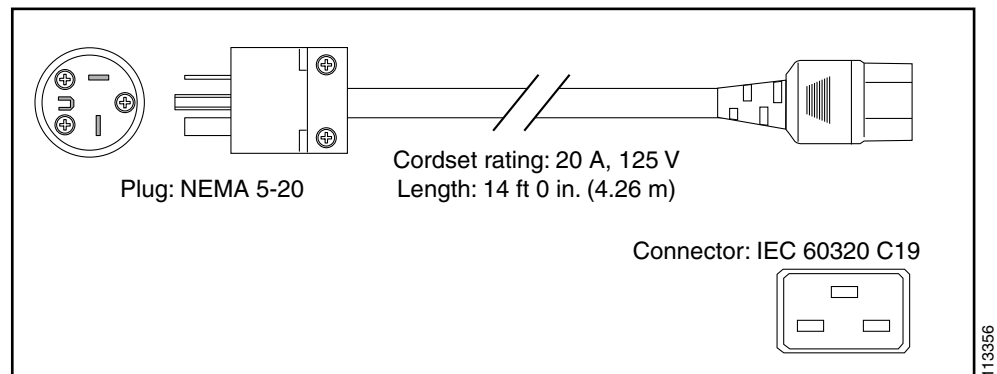


Figure 7-6 *CAB-9K16A-US2*

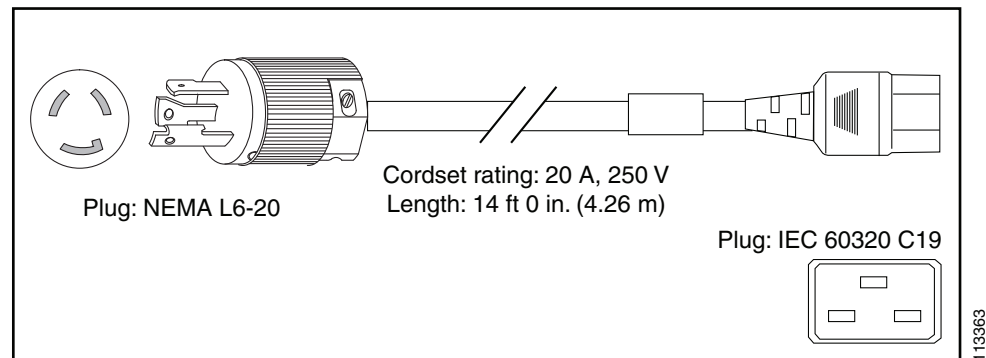


Figure 7-7 CAB-9K16A-AUS

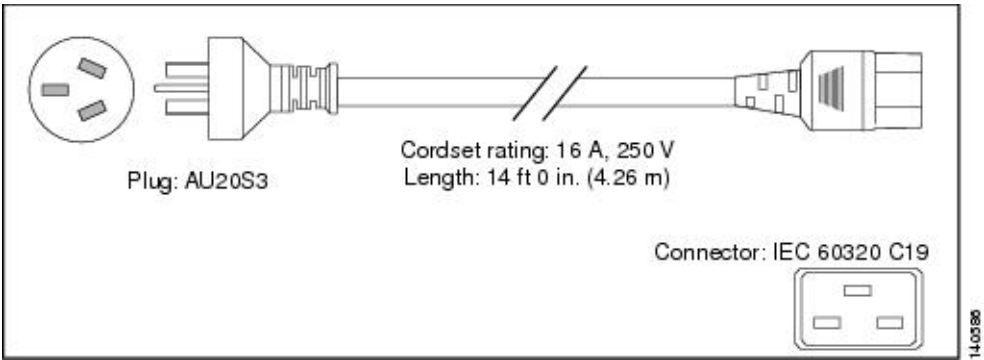


Figure 7-8 CAB-9K16A-CH

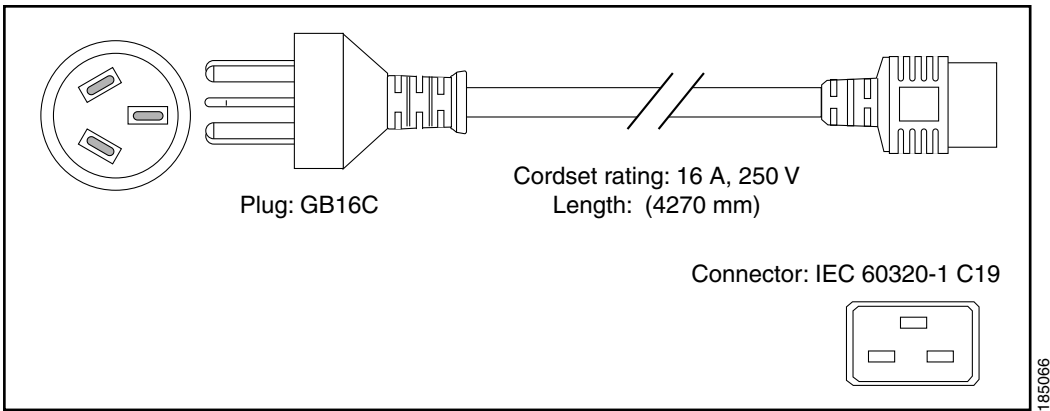


Figure 7-9 CAB-9K16A-INT




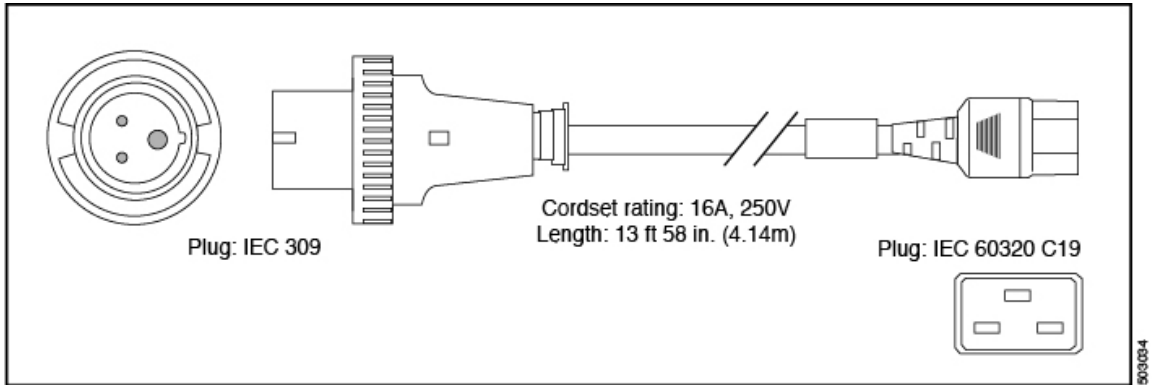


Figure 7-10 CAB-9K16A-SW**Figure 7-11 CAB-9K16A-EU****Figure 7-12 CAB-C19-CBN**

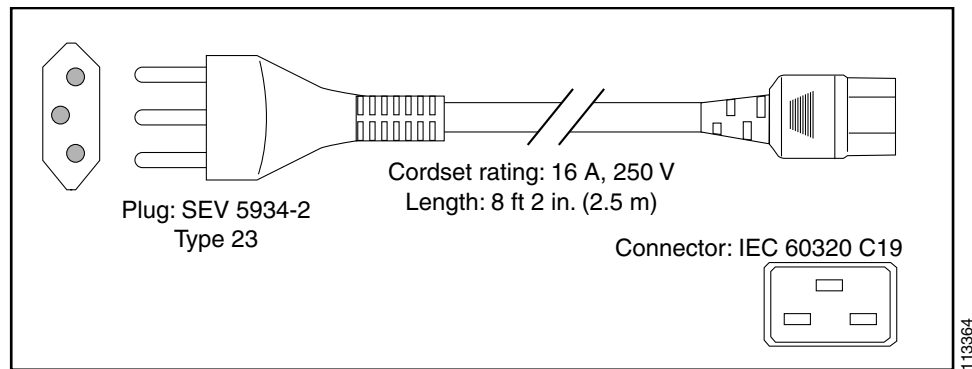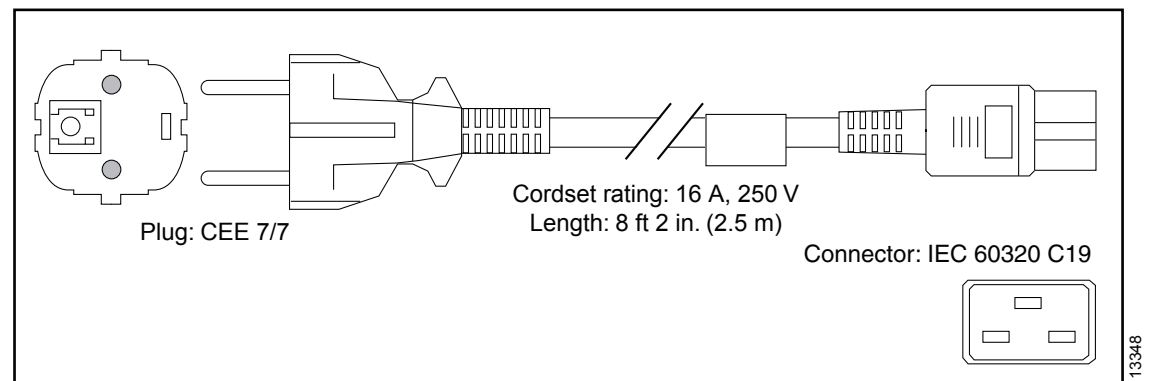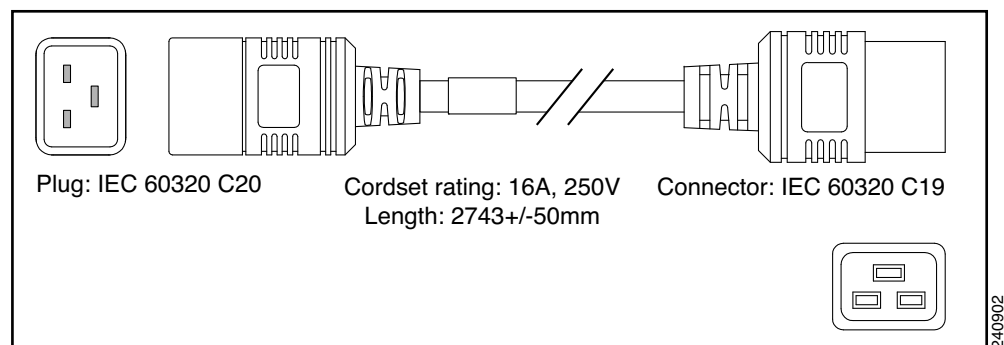

Site Planning and Maintenance Records

This appendix provides a Site Planning list and includes the following records to use when installing the Cisco MDS 9700 Series.

- [Contacting Customer Service, page 8-149](#)
- [Site Preparation Checklist, page 8-150](#)
- [Finding the Chassis Serial Number, page 8-150](#)



Note

For information on how to query the switch for configuration information, see *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide* or the *Cisco Fundamentals Configuration Guide for DCNM SAN*.

Contacting Customer Service

If you are unable to solve a startup problem after using the troubleshooting suggestions in this appendix, contact your customer service representative for assistance and further instructions. Before you call, have the following information ready to help your service provider assist you as quickly as possible:

- Date you received the switch.
- Chassis serial number. See the [“Finding the Chassis Serial Number” section on page 8-150](#).
- Type of software and release number.
- Maintenance agreement or warranty information.
- Brief description of the problem.
- Brief explanation of the steps you have already taken to isolate and resolve the problem.



Note

If you purchased Cisco support through a Cisco reseller, contact the reseller directly. If you purchased support directly from Cisco, contact Cisco Technical Support at this URL:
http://www.cisco.com/en/US/support/tsd_cisco_worldwide_contacts.html

Finding the Chassis Serial Number

You can find the chassis serial number label of the Cisco MDS 9700 Series on the chassis.

If you have CLI access, enter the **show sprom backplane 1** command to display the backplane contents, including the switch serial number.

Site Preparation Checklist

Planning the location and layout of your equipment rack or wiring closet is essential for successful switch operation, ventilation, and accessibility.

Consider heat dissipation when sizing the air-conditioning requirements for an installation. See [Table 6-1 on page 6-113](#) for the environmental requirements. See the [“Environmental and Power Requirements for Cisco 16-Gbps Fibre Channel SFP+ Transceivers”](#) section on page 6-132, the [“Maximum Environmental and Electrical Ratings for Cisco Fibre Channel SFP+ Transceivers”](#) section on page 6-136 for power and heat ratings.



Cisco MDS 9700 Series Accessory Kit Contents

This appendix lists and illustrates the Cisco MDS 9700 Series accessory kit contents (part number 53-4093-XX). (See [Table 9-1](#).)

Table 9-1 Cisco MDS 9700 Switch Accessory Kit Contents

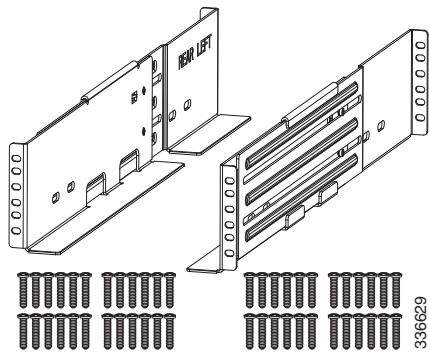
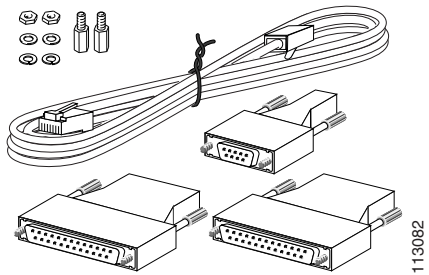

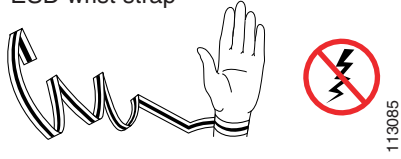
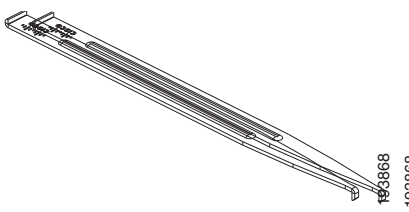
Part Number	Illustration	Description	
69-2503-XX		Support rack-mount bracket kit (includes the following parts)	1
		12-24 x 3/4-in. Phillips screws	2
		M6 x 19-mm Phillips screws	2
		10-32 x 3/4-inch screws	2
		Support rack-mount bracket	2
800-05097-XX		Console cable connector kit (includes the following parts)	2
		RJ-45 rollover cable	1
		DB-9F/RJ-45F PC terminal	1
		RJ-45/DSUB F/F adapter	1
		R-J45/DSUB R/P adapter	1
		DSUB screw lock kit	1
69-1815-XX		Ground lug kit (includes the following parts)	1
		Two-hole lug	1
		M4 x 8-mm Phillips pan-head screws	2

Table 9-1 Cisco MDS 9700 Switch Accessory Kit Contents (continued)

Part Number	Illustration	Description	Quantity
79-0087-XX	ESD wrist strap 	ESD wrist strap	1 per
700-29059-01		SFP Extractor	1 per
78-21186-XX	Not applicable	Product Documentation Pointer Card	1 per
78-17985-XX	Not applicable	China Management Methods Hazardous Substances Content Table	1 per

**Note**

If you do not receive any part listed in this document, contact Cisco Technical Support at this URL:
<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>

If you purchased this product through a Cisco reseller, you may receive additional contents in your kit, such as documentation, hardware, and power cables.

Each new switch ships with country-specific power cords—the shipped cords depend on your specification when placing a Cisco MDS switch order. The available power cords for the Cisco MDS 9710 Director are as follows:

- CAB-9K16A-AUS—power cord, 250-VAC 16-A, Src Plug A, Australia
- CAB-9K16A-CH—power cord 250-VAC 16-A, Src Plug GB16C, China
- CAB-9K16A-EU—power cord 250-VAC 16-A, Src Plug CEE, Europe
- CAB-9K16A-INT—power cord 250-VAC 16-A, Src Pl, International
- CAB-9K16A-ISR—power cord 250-VAC 16-A, Src Plug SI16, Israel
- CAB-9K16A-SA—power cord 250-VAC 16-A, Src Plug EL, South Africa
- CAB-9K16A-SW—power cord 250-VAC 16-A, Src Plug SEV 5, Switzerland
- CAB-9K16A-US1—power cord 250-VAC 16-A, Src Plug NE, US and Japan
- CAB-9K16A-US2—power cord 250-VAC 16-A, Src Plug NE, US and Japan
- CAB-9K16A-KOR—power cord 250-VAC 16-A, Korea, Src Plug
- CAB-9K20A-NA—power cord 125VAC 20A NEMA 5-20 Plug, North America/Japan
- CAB-9K16A-ARG—power cord 250VAC 16A, Argentina, Src Plug IR2073-C19
- CAB-9K16A-BRZ—power cord 250VAC 16A, Brazil, Src Plug EL224-C19
- CAB-C19-CBN—cabinet jumper power cord, 250 VAC 16A, C20-C19 Connector

The available power cords for the Cisco MDS 9718 Director are as listed in the Cisco MDS 9718 Multilayer Director Datasheet.

