

BOSE[®]



SoundTouch™ 130 home theater system



Owner's Guide • Guía del propietario • Notice d'utilisation

Important Safety Instructions

Please read this owner's guide carefully and save it for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in the owner's guide.



WARNINGS:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the product. Exposure to liquids may create a failure and/or fire hazard.
- Replace only with a AA (IEC LR06) alkaline battery (or batteries).
- Do not place naked flame sources, such as lighted candles, on or near the product.



CAUTIONS:

- Do not make unauthorized alterations to the product; doing so may compromise safety, regulatory compliance, system performance, and may void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.



WARNING: Contains small parts which may be a choking hazard. Not suitable for children under age 3.



WARNING: This product contains magnetic material. Contact your physician if you have questions on whether this might affect the operation of your implantable medical device.

NOTES:

- The product label is located on the bottom of the console.
- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- This product must be used indoors. It is neither designed nor tested for use outdoors, in recreational vehicles, or on boats.
- The speaker wire and interconnect cables included with the system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power supply or cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply or cord is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Regulatory Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For SoundTouch™ wireless adapter:

This equipment should be installed and operated with a minimum distance of 8 in. (20 cm) between this device and your body.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3 (B) / NMB-3 (B)

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.



Please dispose of used batteries properly, following local regulations. Do not incinerate.

廢電池請回收



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.



Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at:
www.Bose.com/compliance

	Names and Contents of Toxic or Hazardous Substances or Elements					
	Toxic or Hazardous Substances and Elements					
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (Cr(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	O	O	O	O	O
Metal parts	X	O	O	O	O	O
Plastic parts	O	O	O	O	O	O
Speakers	X	O	O	O	O	O
Cables	X	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364.
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572

Regulatory Information

Please complete and retain for your records:

Serial numbers can be found on the Acoustimass® module's connector panel and on the packaging for the remote control.

Model number: _____

Module serial number: _____

Remote serial number: _____

Console serial number: _____

Soundbar serial number: _____

Purchase date: _____

We suggest you keep your receipt with this owner's guide.

Date of manufacture

The four bolded digits in the serial number indicate the date of manufacture. The first digit is the year of manufacture; "5" is 2005 or 2015. Digits 2-4 are the month and date; "001" is January 1 and "365" is December 31.

China Importer: Bose Electronics (Shanghai) Company Limited, Part C, Plan 9, No. 353 North Riying Road, China (Shanghai) Pilot Free Trade Zone

EU Importer: Bose GP, Castleblayney Road, Carrickmacross, Ireland

Taiwan Importer: Bose Taiwan Branch, Room 905, 9F, Worldwide House, 131 Min Sheng East Rd, Section 3, Taipei, Taiwan, 105

App Store is a service mark of Apple Inc.

Amazon, Kindle and Fire are trademarks of Amazon.com, Inc. or its affiliates.

Android and Google Play are trademarks of Google Inc.

Blu-ray Disc™ and Blu-ray™ are trademarks of the Blu-ray Disc Association.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

 **DOLBY DIGITAL** Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

 For DTS patents, see <http://patents.dts.com>. Manufactured under license from Digital Theater Systems, INC. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. ©DTS, Inc. All Rights Reserved.

 The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



iHeartRadio is a registered trademark of iHeartMedia, Inc.

This product incorporates Spotify software which is subject to 3rd party licenses found here:

www.spotify.com/connect/third-party-licenses.

Spotify is a registered trademark of Spotify AB.

SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries.

Wi-Fi is a registered mark of the Wi-Fi Alliance.

© 2015 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Introduction

About your SoundTouch™ 130 home theater system.....	8
System Features.....	8
SoundTouch™	8
SoundTouch™ Features	8
Unpacking the system.....	9
Placement guidelines.....	10
Sample system placement.....	10

Setting Up the Acoustimass® Module

Attaching the rubber feet to the Acoustimass module	11
Connecting the Acoustimass module to power	12

Setting Up the Console

Connecting the console to your TV	13
Using the HDMI™ ARC connector.....	13
TVs without an HDMI™ ARC connector.....	14
Connecting the console to other sources.....	14
Connecting to HDMI™ compatible sources.....	14
Connecting to non HDMI™ compatible sources.....	15
Connecting to audio-only sources	15
Connecting the SoundTouch™ wireless adapter.....	22

Setting Up the Soundbar

Connecting the soundbar	16
Attaching the optional extension feet to the soundbar	17
Wall mounting the soundbar	17

Connecting the System to Power

Connecting the soundbar to power	18
Connecting the console to power.....	18

Starting Up the System

Installing the remote control's batteries	19
Powering on the system and selecting your language	19
Checking for sound.....	20

Contents

ADAPTiQ®

Running the ADAPTiQ® audio calibration.....	21
---	----

Setting up SoundTouch™

Adding the system to your Wi-Fi® network.....	22
Add the system to an existing SoundTouch™ account	22
Download and install the SoundTouch™ app	22
Connect the system to your home Wi-Fi® network.....	22

Using the System

Remote control buttons.....	23
Programming the universal remote control	24
Consumer Electronics Control	24
Test your HDMI™-connected sources for CEC.....	24
Program the remote to control your source.....	25
Source selection	26
Select a source connected to the Bose® system	26
Select a source connected to your TV	26
Universal source buttons and console connectors.....	26
Using the  button.....	27
SoundTouch™	27
Bluetooth® wireless technology	27
SIDE AUX	27
Adjusting the volume	28
Function buttons.....	28
Programming a non-Bose remote control.....	28

Using SoundTouch™

Accessing SoundTouch™	29
Using the SoundTouch™ app	29
Using the SoundTouch™ source.....	29

Bluetooth®

Pairing a Bluetooth® enabled device	30
Connecting to a paired Bluetooth® enabled device	31
Using the  button	31
Using the Bluetooth® feature on the paired device.....	31

Getting System Information

Using the System menu.....	32
Error messages	33
Acoustimass® module status indicator	33

Care and Maintenance

Troubleshooting	34
If your console cannot find the Acoustimass® module	37
ADAPTiQ® audio calibration error messages.....	37
Factory reset the system	38
Reset a source button on the remote control.....	38
Service connectors on the Acoustimass® module	38
Cleaning.....	39
Customer service.....	39
Limited warranty	39
Technical information.....	39

Appendix: Using a Computer for Setup

Important setup information.....	40
Using a desktop computer for setup	40
Setting up the system using a computer	40

Introduction

About your SoundTouch™ 130 home theater system

The SoundTouch™ 130 home theater system provides Bose® quality audio for video sources, SoundTouch™ and *Bluetooth*® technology.

System Features

- Advanced Bose audio processing provides natural and lifelike sound.
- ADAPTiQ® audio calibration optimizes sound quality.
- Display provides access to system settings and information.
- HDMI™ connectivity allows easy setup and ensures high-quality audio from your connected sources.
- Supports Consumer Electronics Control (CEC).
- Programmable universal remote can control your TV, cable/satellite box and other connected sources.
- Hideaway wireless Acoustimass® module provides impactful bass sound.
- Soundbar can be mounted on the wall (kit available separately).
- SoundTouch™ wireless adapter enables SoundTouch™ and *Bluetooth*® on your system.

SoundTouch™


SoundTouch™ provides clear, room-filling sound streamed wirelessly over your home Wi-Fi network. If you have Wi-Fi® at home, you're ready to enjoy your favorite music in any room you want.

SoundTouch™ Features


- Enjoy wireless access to Internet radio, music services and your music library.
- Access your favorite music easily with your personalized Presets.
- Wireless setup using your smartphone or tablet.
- Works with your existing home Wi-Fi network.
- Stream music from *Bluetooth*® enabled devices.
- Free SoundTouch™ app for your computer, smartphone, or tablet.
- Simply add additional systems at any time for a multi-room listening experience.
- Wide selection of Bose® audio systems lets you choose the right solution for any room.

Unpacking the system


Carefully unpack the carton and confirm that the following parts are included:

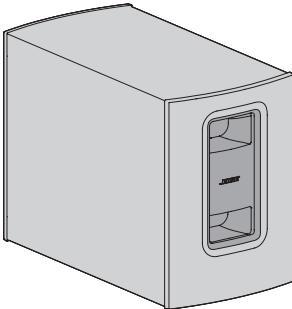


Acoustimass® module

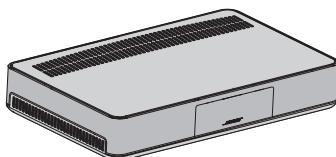

Console

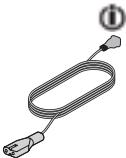


Acoustimass power cord

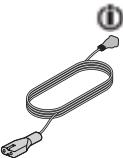

Console power cord



Soundbar power cord

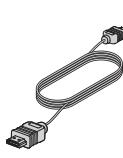


HDMI™ cable




Speaker cable




USB cable

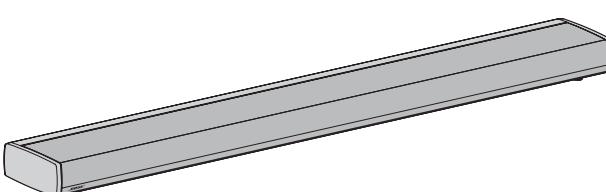


Soundbar

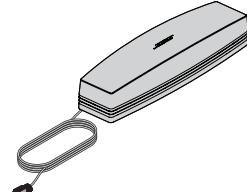

SoundTouch™ wireless adapter series II

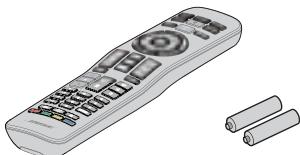

Universal remote control

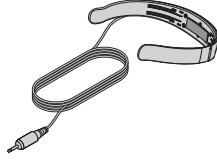

ADAPTiQ® headset



Rubber feet

The appropriate power cords for your region are supplied.

Note: If part of the system is damaged, do not use it. Contact your authorized Bose® dealer or Bose customer service. Refer to the contact sheet in the carton.


Introduction

Placement guidelines

To avoid wireless interference, keep other wireless equipment away from the system. Place the system outside of and away from metal cabinets, away from other audio/video components and away from direct heat sources.

Acoustimass® module	<ul style="list-style-type: none">• Stand the Acoustimass module on its rubber feet along the same wall as your TV, or along any other wall in the front third of the room.• Choose a stable and level surface. Vibration can cause the Acoustimass module to move, particularly on smooth surfaces like marble, glass or highly polished wood.• Make sure there is an AC (mains) outlet nearby.
Soundbar	<ul style="list-style-type: none">• Place the soundbar in front of your TV.• Do not place the soundbar inside a cabinet.• Make sure there is an AC (mains) outlet nearby.
Console	<ul style="list-style-type: none">• Place the console near your TV. Do NOT place the TV on top of your console.• Make sure there is an AC (mains) outlet nearby.
SoundTouch™ wireless adapter	<ul style="list-style-type: none">• Place the adapter 1 - 6 ft. (.3 - 1.8 m) away from the console, Acoustimass module and other wireless devices to avoid wireless interference.

Sample system placement

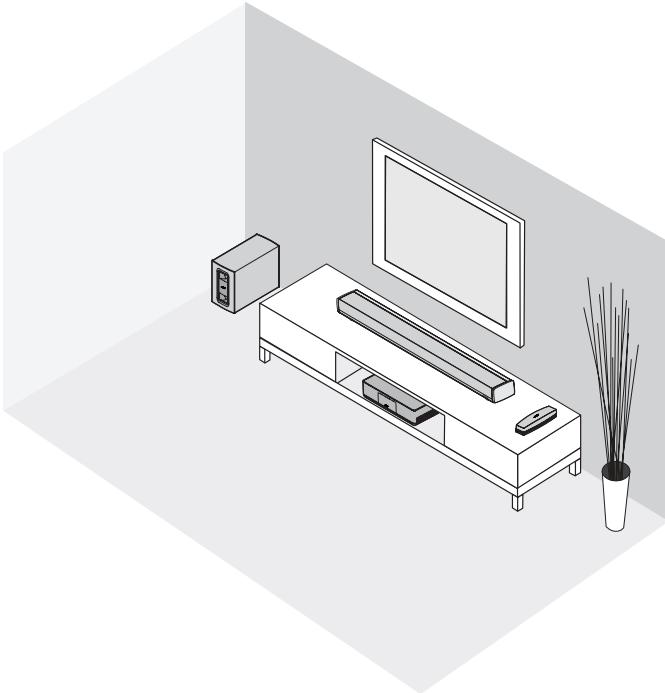


Setting Up the Acoustimass® Module

Attaching the rubber feet to the Acoustimass module


Attach the rubber feet to the Acoustimass module to protect your floor.

1. Turn the Acoustimass module upside down onto a soft surface to protect it from being damaged.
2. Attach the rubber feet to the bottom of the Acoustimass module.

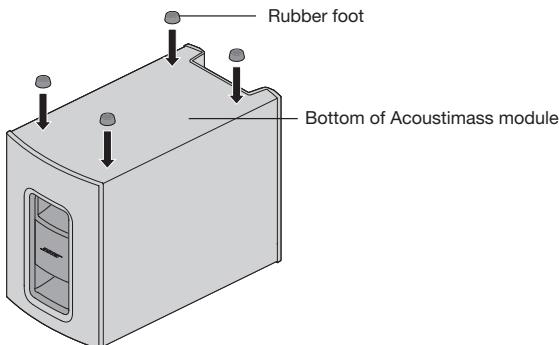

3. Place the Acoustimass module on its feet.

Caution: Do not place the Acoustimass module on its front, back end, side or top when in use.

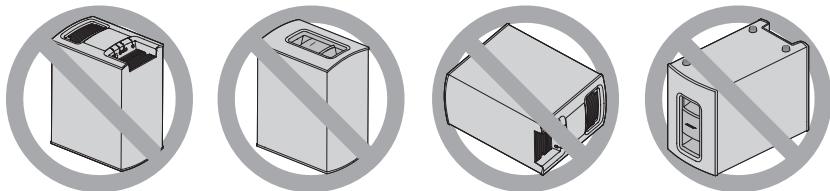


4. Remove all protective films. These may affect acoustic performance if left in place.

Setting Up the Acoustimass® Module

Connecting the Acoustimass module to power

1. Plug the power cord into the **Power** connector on the Acoustimass module.

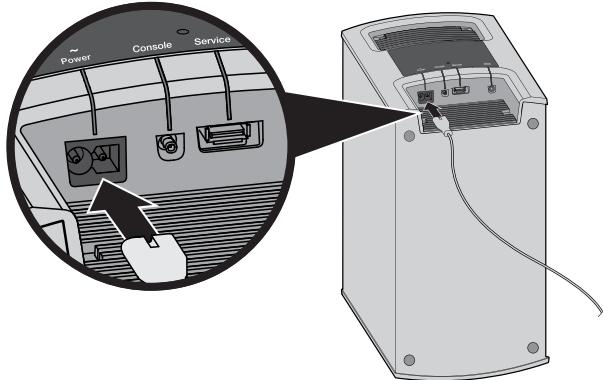

2. Plug the power cord into an AC (mains) outlet.


Connecting the console to your TV

Use your TV's HDMI connector labeled **ARC** or **Audio Return Channel** if available. If your TV does not have an HDMI ARC connector, see page 14.


Using the HDMI™ ARC connector

Use the Bose® HDMI cable to connect the console to your TV.

1. Disconnect your HDMI connected sources, such as a cable/satellite box, DVD or Blu-ray Disc™ player or game system, from your TV.
2. Insert one end of the Bose® HDMI cable into the **TV** connector on the console.

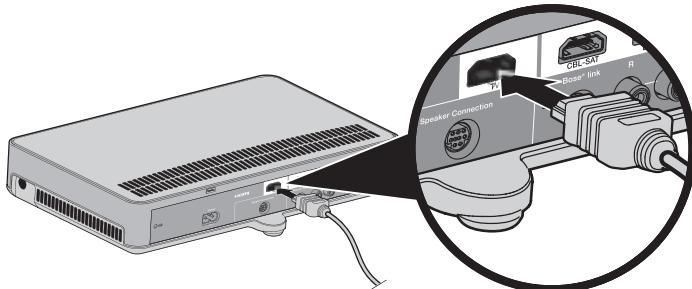

3. Insert the other end of the HDMI cable into your TV's **HDMI** connector.

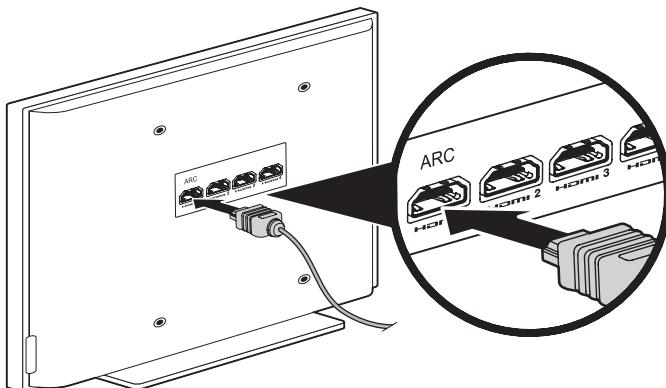

Setting Up the Console

TVs without an HDMI™ ARC connector

If your TV does not have an HDMI ARC connector, you may need to make a secondary connection to the console with an optical, coaxial or analog stereo audio cable. Without this secondary connection, you may not hear audio from the Bose® system.

Use a secondary connection in the following configurations:

- You are using internal sources (such as Internet applications or an over-the-air antenna).
- You are connecting sources to your TV.

Refer to your TV owner's guide for more information.

Tip: If your TV has IN and OUT audio connector panels, use audio **OUT** for your secondary connection.


Connecting the console to other sources

Connecting to HDMI™ compatible sources

You can connect the console to other sources, such as a cable/satellite box, DVD or Blu-ray Disc™ player or game system with an HDMI cable (available separately). If your source is non HDMI® compatible, see page 15 for configurations with devices that do not support HDMI.

1. Insert one end of an HDMI cable into your source's HDMI (OUT) connector.
2. Insert the other end of an HDMI cable into the appropriate HDMI connector on the console. For example, to connect a game system, connect an HDMI cable to the **GAME** connector.

Connect other sources to the appropriate HDMI connector on the console.

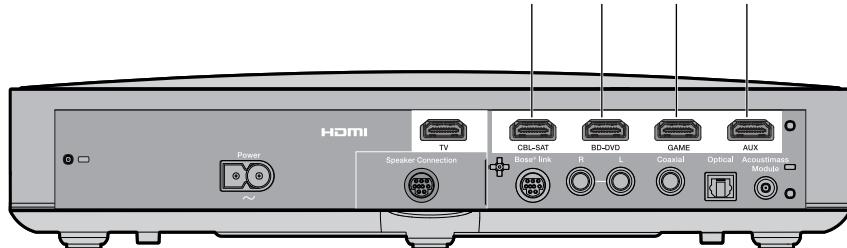

Connecting to non HDMI™ compatible sources

If your source is non HDMI compatible, connect it to your TV using audio and video cables (available separately). Refer to your TV owner's guide for more information.

Tip: If your source has IN and OUT audio connector panels, use audio **OUT**.


Connecting to audio-only sources

If your audio-only source, such as a media or CD player, is non HDMI compatible:

1. Connect your source to the console's optical, coaxial, analog or SIDE AUX (⊕) connector.
Note: You can use an optical, coaxial, analog or 3.5 mm audio cable (available separately).
2. Set the optical, coaxial, analog or SIDE AUX input for the appropriate source. You can access these settings using the System menu (see page 32).

Connecting the SoundTouch™ wireless adapter


Connect the adapter to the **Bose® link** connector on the console.

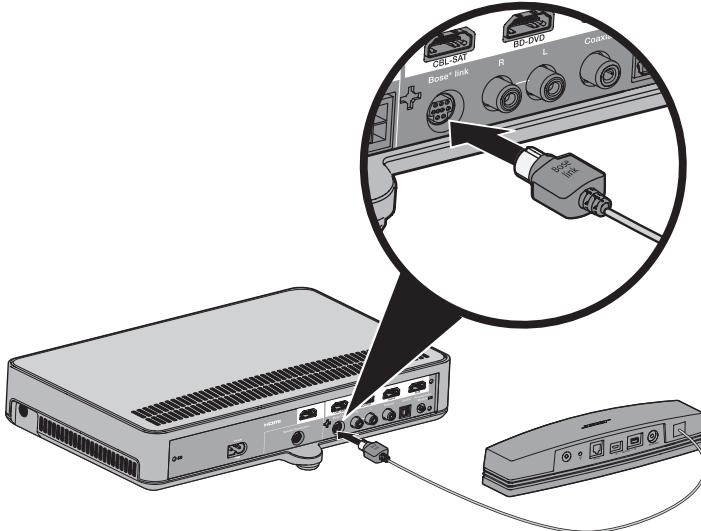


Setting Up the Soundbar

Connecting the soundbar

1. Insert one end of the speaker cable into the **Speaker Connection** connector on the console.

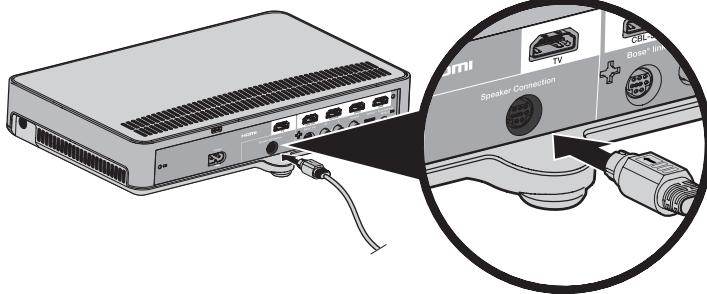


2. Insert the other end of the speaker cable into the **Audio IN** connector on the soundbar.

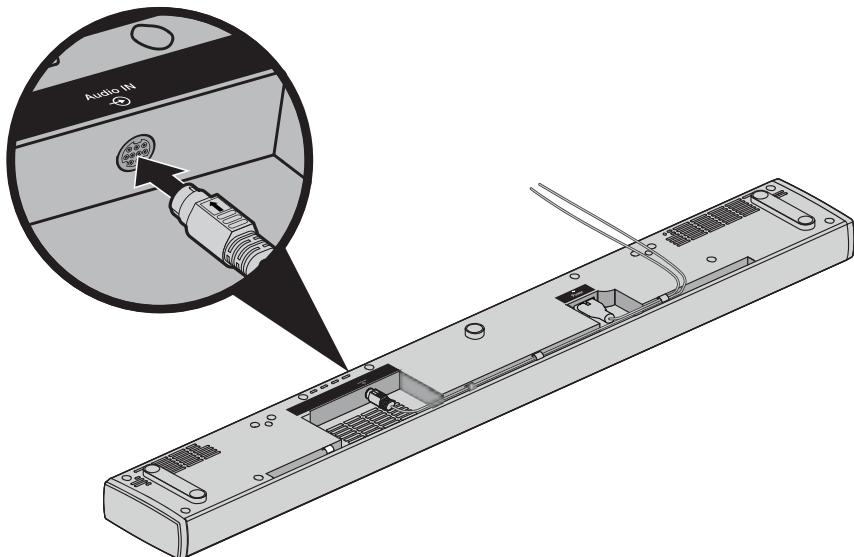

Attaching the optional extension feet to the soundbar

Attach the optional extension feet to raise the soundbar to create space underneath.

1. Turn the soundbar upside down onto a soft surface to protect it from being damaged.
2. Attach the extension feet to the bottom of the soundbar.

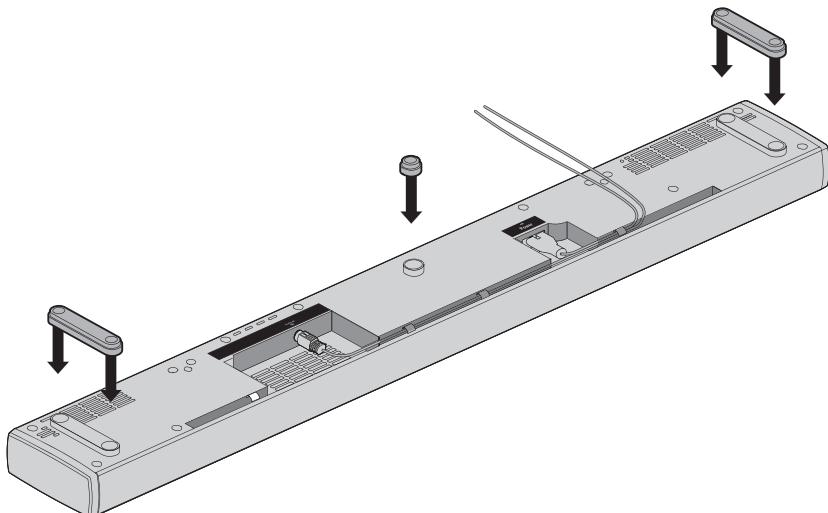

3. Place the soundbar on its feet.

Wall mounting the soundbar


You can mount the soundbar on a wall. To purchase the WB-135 Wall Mount Kit, contact your local Bose dealer or visit www.Bose.com

CAUTION: Do not use any other hardware to mount the soundbar.

Connecting the System to Power

Connecting the soundbar to power


1. Plug the power cord into the **Power** connector on the soundbar.

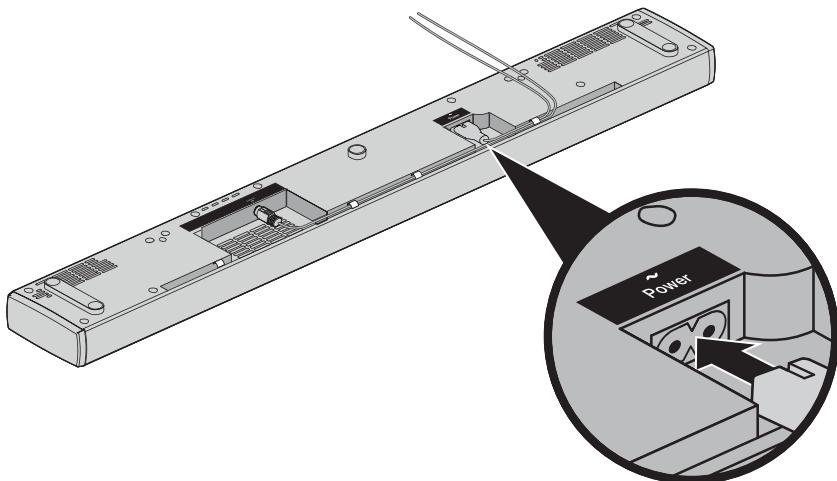

2. Plug the power cord into an AC (mains) outlet.

Connecting the console to power


1. Plug the power cord into the **Power** connector on the console.

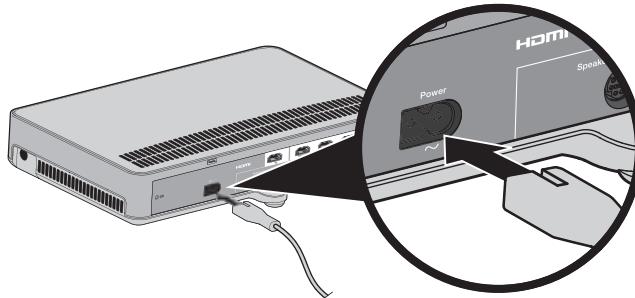

2. Plug the power cord into an AC (mains) outlet.

Installing the remote control's batteries

1. Slide open the battery compartment cover on the back of the remote control.

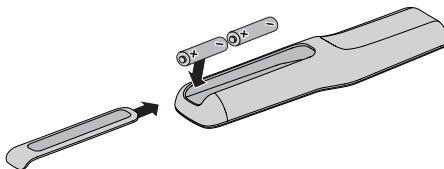


2. Insert the two provided AA (IEC-LR6) 1.5V batteries. Match the + and – symbols on the batteries with the + and – markings inside the compartment.
3. Slide the battery compartment cover back into place.

Powering on your system and selecting your language

1. Press  on the remote.

The console powers on and **10 LANGUAGE**  appears on the display.

Note: After first time startup, the display defaults to your last used source.

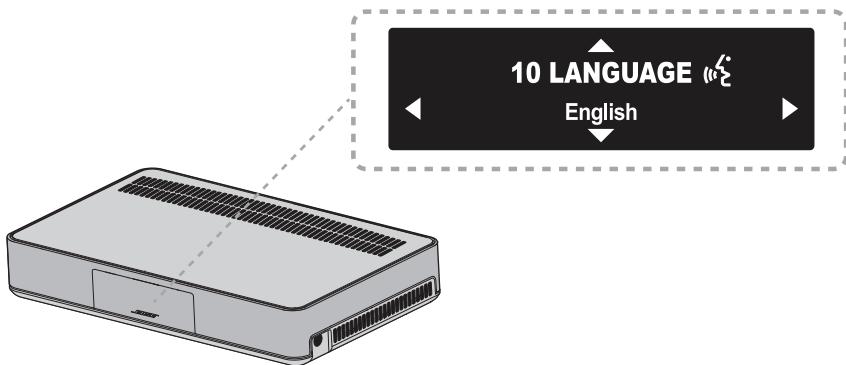

2. Press  and  to select your language.
3. Press .

Tip: Look for the  icon in the System menu if you select the wrong language.

The system powers off after sixteen minutes of inactivity. You can disable AUTO OFF using the System menu (see page 32).

Starting Up the System

Checking for sound

1. Power on your TV.
2. If you are using a cable/satellite box or other secondary source, power on this source.

Tip: If your secondary source is connected to your TV, select the appropriate TV input. You may need to use a different remote.

3. Power on the system.
4. Press the appropriate source button.
5. Check if sound is coming from the soundbar.

Note: If you do not hear sound from the soundbar, see “Troubleshooting” on page 34.

6. Press  on the remote control. Check that no sound is coming from the TV speakers.


Note: If you hear sound coming from your TV speakers, see “Troubleshooting” on page 34.

Running the ADAPTiQ® audio calibration

The ADAPTiQ audio calibration customizes the sound of the system to the acoustics of your listening area by taking five audio measurements. To perform an audio calibration, you need 10 minutes when the room is quiet.

1. Put the ADAPTiQ headset on your head.

During the ADAPTiQ audio calibration, a microphone on the top of the headset measures the sound characteristics of your room to determine optimal sound quality.

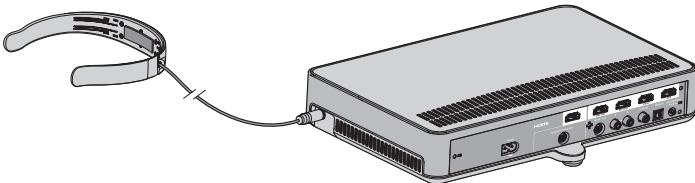

2. Insert the ADAPTiQ headset cable into the connector on the console.
3. Press on the remote control.
4. Press or until **14 ADAPTiQ** appears on the display.
5. Press .
6. Follow the voice prompts until the system completes the process.

Note: If you hear an error message and are unable to complete the ADAPTiQ audio calibration, see page 37.

7. Unplug the ADAPTiQ headset from the console and store it in a safe place.
Note: If you move or mount the system or move any furniture, run the ADAPTiQ audio calibration again to ensure optimal sound quality.

Setting up SoundTouch™

Adding the system to your Wi-Fi® network

You must download and install the SoundTouch™ app onto a smartphone or tablet that is connected to your network. The app guides you through connecting the system to your network.

Note: If you do not have a smartphone or tablet, you can use a computer for setup (see page 40).

Add the system to an existing SoundTouch™ account

If you have already set up SoundTouch™ for another system, you do not need to download the SoundTouch™ app again.

1. On your smartphone or tablet, select  to launch the app.
2. Select **EXPLORE > SETTINGS > Systems > ADD SYSTEM** to add another system.

The app guides you through setup.

Download and install the SoundTouch™ app

If this is your first time setting up a SoundTouch™ system, you must install the app. On your smartphone or tablet, download the **SoundTouch™ controller app**.



**Bose® SoundTouch™
controller app**

- iOS users: download from the App Store
- Android™ users: download from the Google Play™ store
- Amazon Kindle Fire users: download from the Amazon Appstore for Android

Connect the system to your home Wi-Fi® network


After you install the app, add the system to your network:

1. On your smartphone or tablet, select  to launch the app.
The app guides you through connecting the system to your Wi-Fi® network.
2. Follow the instructions in the app to complete setup, including creating a SoundTouch™ account, adding a music library and music services.

For more information on using SoundTouch™, see page 29 or download the SoundTouch™ wireless adapter series II owner's guide from the Bose website.

Remote control buttons

Use the remote to control sources connected to your system, adjust the system volume, change channels, use playback functions, enable cable/satellite box functions and navigate the System menu.

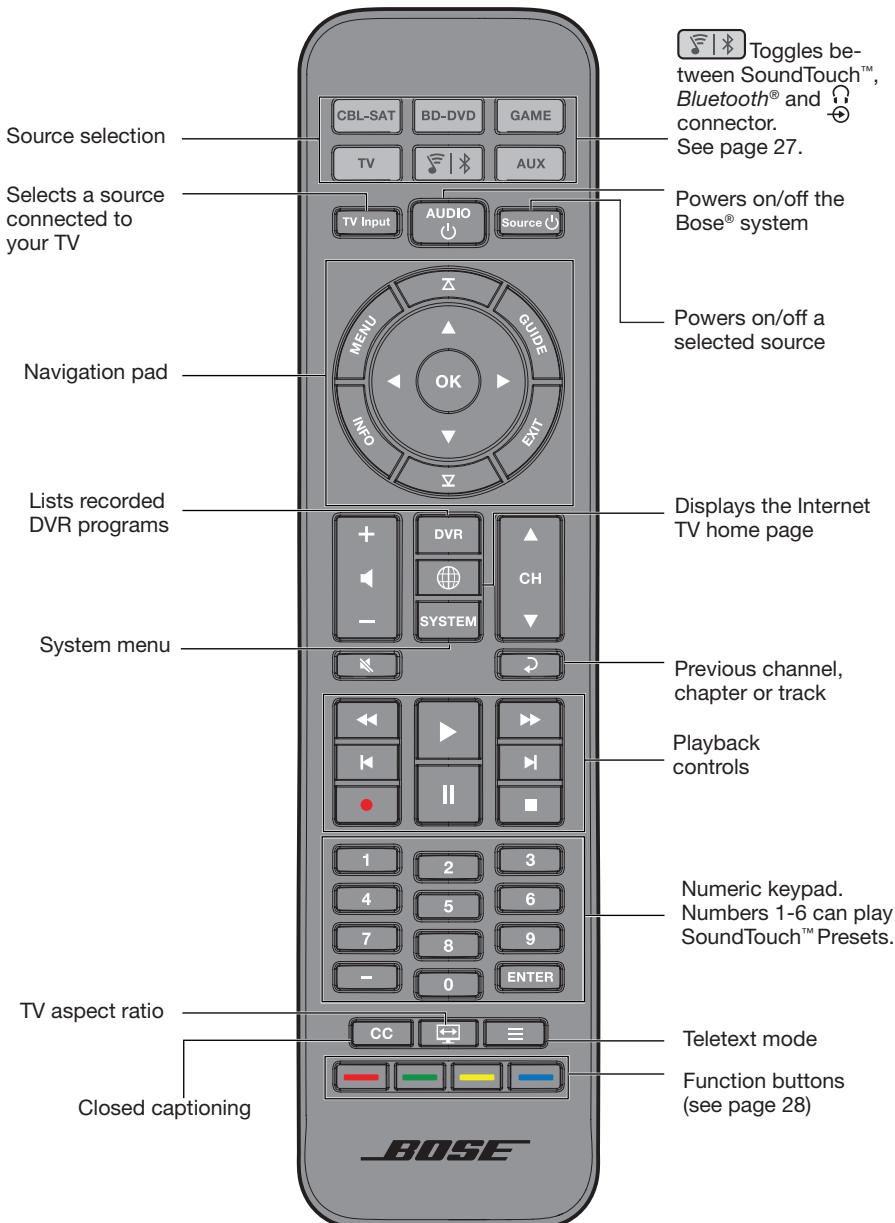

Using the System


Programming the universal remote control

You can use the remote to control your TV, cable/satellite box, DVD or Blu-ray Disc™ player, game system, DVR or other auxiliary source.

Consumer Electronics Control

The system supports Consumer Electronics Control (CEC). CEC allows you to control multiple HDMI™-connected sources without programming the remote. You can turn on/off CEC using the System menu (see page 32).

Your source may support CEC, but refer to it with a different name. Refer to your source owner's guide for more information.

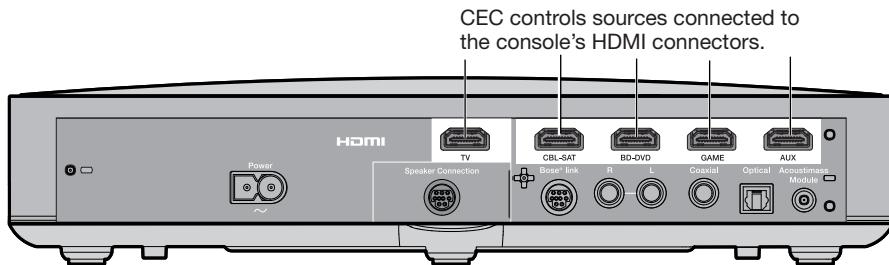

Tip: You may need to use your source or TV's system menu to enable CEC. Refer to your source owner's guide for more information.

Test your HDMI™ connected sources for CEC

If your sources successfully respond to their corresponding source buttons, you do not have to program your remote.

Note: Your HDMI connected source may not support CEC. Refer to your source owner's guide for more information.

1. Power on the Bose® system, your TV, and the source you are testing.
2. Press a variety of buttons that correspond with your source's functions.
3. Press the **Source** button. The source powers off.

If your source does not perform one of the functions, program the remote control (see page 25).

Program the remote to control your source

If your source does not support CEC, you can program the universal remote to control your source, such as a TV, DVD/Blu-ray Disc™ player, cable/satellite box, game system or DVR, by entering the code for your source's brand. There may be several codes for your source. You may need to perform this procedure multiple times to locate the correct code.

Locate your source's code

1. Power on your source.
2. Locate the code for your source's brand in the Universal Remote Device Codes book (provided).

Enter your source's code

1. On the remote control, press and hold the appropriate source button until all six source buttons glow, then release.

For example, to program your TV, press and hold  until all six source buttons glow, then release.

The appropriate source button continues to glow.

2. On the number keypad, enter the code for your source's brand and press + on the volume button.

Test your source's code

1. Test your source for basic functions. Follow the instructions for your source:
 - **TV:** press the channel buttons. Press . The settings menu appears. Press **◀** and **▶** to navigate.
 - **Cable/satellite box:** press . The programming guide appears. Press **◀** and **▶** to navigate.
 - **DVD or Blu-ray Disc™ player:** press . The settings menu appears. Press **◀** and **▶** to navigate.
 - **Game system:** press **◀** and **▶** to navigate through your menu.

2. Based on your source's response to basic functions:

• **Remote responds accurately:** press  to exit programming and save your settings.

• **Remote does not respond or does not respond accurately:**

- **If your source button glows:** press + on the volume button to move to the next code. Repeat steps 1-2 in "Test your source's code". You may need to repeat this procedure 30 or more times. If all six buttons blink three times, you have cycled through all codes for your source.
- **If your source button is off:** your remote exited programming mode. Repeat steps 1-2 in "Enter your source's code" and steps 1-2 in "Test your source's code".

Note: Your source may not be compatible with IR universal remote controls. Refer to your source's owner's guide for more information.

Using the System

Source selection

You can switch between sources by pressing the appropriate source button on the remote control. Before you begin, program the remote to control your source (see page 24).

Select a source connected to the Bose® system

If your source is connected to the console and does not use CEC, follow this procedure to set the console to the appropriate mode and turn on the source.

1. Power on the system.
2. Press the button for the source you want to control.
The source button glows.
3. Press **Source** .

The source powers on.

Select a source connected to your TV

If your source is connected to your TV, follow this procedure to select the appropriate TV input.

1. Power on the system, your TV and the appropriate source.
2. Press **TV Input** to select the correct input on your TV.
You may need to press **TV Input** several times to select the TV input for the source.
On some TVs, **TV Input** displays a menu. Use the remote control to choose the correct TV input and close this menu.

Universal source buttons and console connectors

The source buttons on your remote control correspond with the connectors on the back of the console. For example, **BD-DVD** corresponds with the **BD-DVD** HDMI™ connector.

Your source buttons work with any source that is connected to the corresponding connector. If you have a secondary DVD or Blu-ray Disc™ player and connect it to the **CBL-SAT** connector, it can be programmed to work with **CBL-SAT**.

Note: Ensure you are using the remote code appropriate for the source rather than the connection point when programming the remote.

Using the button

This multifunction button enables you to play music on your system.

- Access the SoundTouch™ source on your system
- Stream music from a connected Bluetooth® enabled device
- Access the SIDE AUX connector

Press  to toggle between SoundTouch™ (), Bluetooth (), and the SIDE AUX () connector.

SoundTouch™

You can control a subset of SoundTouch™ features on your system such as playback controls and Presets. See “Using SoundTouch™” on page 29.

Bluetooth® wireless technology

Your system has Bluetooth wireless technology which lets you stream music from Bluetooth enabled devices to your system. Your system stores eight previously connected devices in its pairing list. See page 31.

SIDE AUX

The  connector is a 3.5 mm connector located on the side of the console. When set as a connector for an audio in source, the connector can be accessed through the  toggle.

See “5 SIDE AUX” on page 32 for information on how to change the connector settings.

Using the System

Adjusting the volume

On the remote control:

- Press + to increase the volume.
- Press – to decrease the volume.
- Press  to mute or unmute the audio.

Note: If you hear sound coming from your TV, see “Troubleshooting” on page 34.

Function buttons

The red, green, yellow and blue buttons on the remote control correspond with the color-coded function buttons on your cable/satellite box, Blu-Ray Disc™ player or teletext functions.

- Cable/satellite box or Blu-Ray Disc™ player functions: refer to your cable/satellite box owner’s guide.
- Teletext functions: correspond with color-coded page numbers, headings or shortcuts on a teletext display.

Programming a non-Bose® remote control

You can program a non-Bose remote control, such as your cable/satellite box remote, to control the system. Refer to your non-Bose remote control owner’s guide or cable/satellite website for instructions.

Once programmed, the non-Bose remote controls basic functions such as power on/off and volume.

Accessing SoundTouch™

After you create a SoundTouch™ account, you are ready to enjoy SoundTouch™ on your system. You can access SoundTouch™ through the SoundTouch™ app or by pressing  on your remote control.

For more information on using SoundTouch™, download the SoundTouch™ wireless adapter series II owner's guide.

Using the SoundTouch™ app

The SoundTouch™ app is a software application that enables you to set up and control SoundTouch™ from your smartphone, tablet, or computer. Using the app, your smart device acts as a rich remote for the SoundTouch™ source.

- Easily personalize Presets to your favorite music.
- Explore Internet radio, music services and your music library.
- Manage system settings.

Using the SoundTouch™ source

Once you have set up SoundTouch™, you can use the remote to control a subset of features on your system:

- Personalize and play Presets using numbers 1-6 on the numeric keypad.
- Control playback (play, pause, stop, skip to the next track, etc.).

To start SoundTouch™:

Press  on your remote.

A SOUNDTOUCH message appears on the display.

Pairing a Bluetooth® enabled device

Bluetooth® wireless technology enables you to stream music from *Bluetooth* enabled smartphones, tablets, computers or other audio devices to your SoundTouch™ system. You can even stream music from *Bluetooth* enabled devices that are not part of your SoundTouch™ ecosystem, such as a guest's smartphone or tablet.


Before you can stream music from a *Bluetooth* enabled device, you must pair the device with your system.

1. On the remote control, press and release  until a *Bluetooth* pairing message appears on the display.

Note: Each time you press  the system toggles between SoundTouch™ () , *Bluetooth* () , and the  connector.

Make sure you see a *Bluetooth* pairing message on the display before you pair your device.

2. On your *Bluetooth*® enabled device, turn on the *Bluetooth* feature.
Tip: The *Bluetooth* feature is usually found in Settings. A gear icon () often represents Settings on the Home screen.

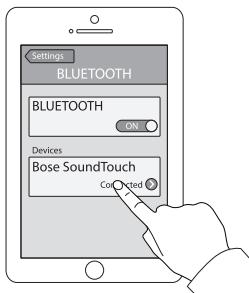

3. Select your SoundTouch™ system from the device list.
Once paired, your SoundTouch™ system's name appears connected in the device list.
4. On the *Bluetooth* enabled device, play music to stream to your system.

If you cannot pair your device

You may need to clear the system's *Bluetooth* pairing list (see "Troubleshooting" on page 34 for more information). After you clear the list, try pairing again.

Connecting to a paired Bluetooth® enabled device

You can stream audio from a *Bluetooth®* enabled device to your system. There are two ways to stream audio from a paired device to your SoundTouch™ system.

If there are multiple devices stored in the system's pairing list, it may take a minute or two for the paired device to connect. Your system's display indicates connection status.

Using the button

1. On the system's remote control, press and release  until a *Bluetooth* connecting message appears on the display.
The system connects to the last device that streamed to your system.
2. On the device, play music.
Tip: If a paired device is connected, you do not need to press .

If you cannot stream audio from a paired device

Your SoundTouch™ system may have lost connection to the device. Check the system's display. If the paired device is out of range of your system, move the device within range.

Using the *Bluetooth®* feature on the paired device

1. On the *Bluetooth* enabled device, turn on the *Bluetooth* feature.
2. Select your SoundTouch™ system from the device list.
3. Once connected, on the *Bluetooth* enabled device, play music to stream to your system.

Getting System Information

Using the System menu

Use the System menu to adjust audio levels, turn on/off features (such as AUTO OFF), change the language, set the coaxial, analog and optical inputs for a particular source, run the ADAPTiQ® audio calibration, pair your Acoustimass® module with the console or factory reset the system.

1. Press  on the remote.
2. Press  and  to scroll through the System menu.
3. Press  and  to adjust the settings.
4. Press .

Display	System state
1 AUDIO COMP	Off: (Default) No change to audio track. Enhance dialogue: Increases the level of dialogue and sound effects at low volume settings while providing full audio impact at high volume settings. Smart volume: Reduces the range of volume levels in a movie soundtrack so the difference between extremely loud outbursts and soft sounds is less noticeable. Note: Enhance dialogue and smart volume features are not available for SoundTouch™, Bluetooth®, or devices connected to the  connector.
2 AUDIO/VIDEO SYNC	Adjusts the audio delay to synchronize audio and video.
3 HDMI-CEC	Default On: (Default) Enables CEC (see page 24). Alternate On: Prevents unintended source switching and may fix CEC inconsistencies (see page 34). Off: Disables CEC.
4 AUTO OFF	Enable: (Default) The system powers off after sixteen minutes of inactivity (no sound coming from the system). Disable: The system will not automatically power off.
5 SIDE AUX	Audio in: Sets the  connector for an auxiliary source. Headphones: (Default) Sets the  connector as a headphone output. Note: If set to Headphones and a cable is connected, the soundbar is muted. Disconnect your headphones when not in use.
6 BASS LEVEL	Adjusts bass level.
7 TREBLE LEVEL	Adjusts treble level.

Getting System Information

Display	System state
8 CENTER LEVEL	Increases or decreases the level of dialogue for movies and TV.
9 SURROUND LEVEL	NOT AVAILABLE.
10 LANGUAGE 	Changes the language on the console and the ADAPTiQ audio calibration.
11 SET OPTICAL INPUT	Sets the optical connector to Auto/TV (Default), CBL SAT, BD DVD, GAME or AUX source.
12 SET COAXIAL INPUT	Sets the coaxial connector to Auto/TV (Default), CBL SAT, BD DVD, GAME or AUX source.
13 SET ANALOG INPUT	Sets the analog connector to Auto/TV (Default), CBL SAT, BD DVD, GAME or AUX source.
14 ADAPTiQ	Starts the ADAPTiQ audio calibration process.
15 PAIR ACOUSTIMASS	Reconnects the Acoustimass® module to the system.
16 FACTORY RESET	Sets the System menu and the ADAPTiQ audio calibration to the factory settings.

Error messages

Display	System state
ERROR Cannot find Acoustimass	The Acoustimass® module is not connected to the console.
ERROR Cannot find soundbar	The soundbar is not connected to the console.
<SOURCE> No signal	The source is not connected to the console, or the source is connected to the console and powered off.
SIDE AUX Nothing connected	The source is not connected to the  connector on the console.
ERROR Call Bose	Call Bose® customer service. Refer to the contact sheet in the carton.

Acoustimass® module status indicator

The status indicator on the back of the Acoustimass module provides information on system activity.

Indicator activity	Acoustimass module state
Amber	Connected to the console.
Blinking amber	Disconnected from the console.
Slow blinking amber	Available to make a wireless connection to the console.
Red	System error.

Care and Maintenance

Troubleshooting

Problem	What to do
No power	<ul style="list-style-type: none">Secure the Acoustimass® module's, soundbar's and console's power cords.Reconnect the Acoustimass module's, soundbar's and console's power cords firmly into an AC (mains) outlet.Use the remote control to power on the system.
No sound	<ul style="list-style-type: none">Unmute the system.Increase the volume.Plug the Acoustimass module, soundbar and console into a live AC (mains) outlet.Insert the speaker cable into the Speaker Connections connector, not the Bose® Link connector.Insert the HDMI™ cable into a connector on your TV labeled ARC or Audio Return Channel. If your TV does not have an HDMI ARC connector, use a secondary audio cable in addition to the HDMI cable (see page 14).If using a secondary audio cable, insert the cable into a connector on your TV labeled Output or OUT, not Input or IN.Secure all cable connections on the soundbar, TV and connected sources.If your source is connected to your TV, select the correct TV input (see page 26).Toggle CEC between Alternate On and Default On (see page 32).Disconnect headphones when not in use.If connecting your source through the  connector, enable Audio in using the System menu (see page 32). If you are connecting headphones to the  connector, enable Headphones using the System menu (see page 32). If you see the error message Cannot find Acoustimass, pair the Acoustimass module with the console (see page 37).Reset the system (see page 37).
Sound is coming from your TV speakers	<ul style="list-style-type: none">Insert the HDMI cable into a connector on your TV labeled ARC or Audio Return Channel (if available).Turn off your TV speakers (refer to your TV owner's guide).Decrease your TV volume to its lowest setting.
No or poor video	<ul style="list-style-type: none">Switch to a different source, then return to the affected source to try and re-establish a signal.Disconnect and reconnect the HDMI cable of the affected source.Disconnect and reconnect the HDMI cable from the console to the TV.Power off and on the affected source, TV and the console.If you assigned the optical, analog, or coaxial digital connector to one of your HDMI™ sources, change it back to Auto/TV (Default) using the system menu. See page 32.

Care and Maintenance

Problem	What to do
Remote control is inconsistent or does not work	<ul style="list-style-type: none"> • Match the + and – symbols on the batteries with the + and – markings inside the compartment (see page 19). • Replace the battery (see page 19). • Press the volume button on the remote control and see if the correct source button flashes. • Remove the protective film from the console. • If using CEC: <ul style="list-style-type: none"> - Point the remote control at the console. - Use the Alternate On setting (see page 32). - Disable CEC on your system (see page 32) and program the remote to control your source (see page 24). • If you have programmed the remote to control your source: <ul style="list-style-type: none"> - Point the remote control at the appropriate source. - Ensure you have entered the correct code for your source's brand. - Program the remote with another code (see page 24).
System does not sync with the correct source / selects the incorrect source after delay (CEC)	<ul style="list-style-type: none"> • Use the Alternate On setting (see page 32). • Disable CEC on your source (refer to your source owner's guide for more information). • Disable CEC on your system (see page 32) and program the remote to control your source (see page 24).
CEC inconsistent or does not work	<ul style="list-style-type: none"> • Use the Alternate On setting (see page 32). • Disable CEC on your source (refer to your source owner's guide for more information). • Disable CEC on your system (see page 32) and program the remote control (see page 24).
Poor or distorted sound	<ul style="list-style-type: none"> • Remove all protective films from the system. • Secure all cable connections on the soundbar, TV, and connected sources. • If you see the error message Cannot find Acoustimass: <ul style="list-style-type: none"> - Plug in the Acoustimass® module. - Pair the Acoustimass module with the console (see page 37). • If using the analog or  connector, decrease the volume on your source. • Factory reset the system (see page 37) and run the ADAPTiQ® audio calibration (see page 21).
Intermittent sound	<ul style="list-style-type: none"> • Secure all cable connections on the soundbar, TV, and connected sources. • Move system away from potential interference, such as a wireless router, cordless phone, television, microwave, etc. • Toggle CEC between Alternate On and Default On (see page 32).

Care and Maintenance

Problem	What to do
Cannot complete network setup	<ul style="list-style-type: none">• Connect the system to AC (mains) power.• Select correct network name and enter password.• Connect the device and SoundTouch™ system to the same Wi-Fi® network.• Place the wireless adapter within range of the router.• Enable Wi-Fi on the device (mobile or computer) you are using for setup.• If network name does not appear or is hidden, select Manually Connect to Another Network on the CONNECT TO HOME WI-FI NETWORK screen.• Close other open applications.• If using a computer for setup, check firewall settings to ensure that the SoundTouch™ app and SoundTouch™ Music Server are allowed programs.• Test your Internet connection by loading www.SoundTouch.com• Restart your mobile device, or computer, and router.• Uninstall the app, reset the adapter, and restart setup.
Cannot play Bluetooth® audio	<p>On your system:</p> <ul style="list-style-type: none">• Pair a device (page 30).• Try pairing a different device.• See “No sound”.• Set up SoundTouch™ first, and perform all system updates.• Clear the system’s pairing list using the SoundTouch™ app:<ul style="list-style-type: none">- Go to EXPLORE > SETTINGS > Systems and select your SoundTouch™ system.- Open the <i>Bluetooth</i> item and clear the pairing list. <p>On your mobile device:</p> <ul style="list-style-type: none">• Disable and re-enable the <i>Bluetooth</i> feature.• Remove the system from the <i>Bluetooth</i> menu. Pair again.• Refer to your <i>Bluetooth</i> enabled device’s documentation.

If your console cannot find the Acoustimass® module

The Acoustimass module and console are paired at the factory. However, if you see the error message **Cannot find Acoustimass** on the display, perform this pairing procedure:

1. Unplug the Acoustimass module.
2. Press  on the remote control.
3. Press ▼ until **15 PAIR ACOUSTIMASS** appears on the display.
4. Press .

Plug in Acoustimass appears on the display.

5. Plug the AC power cord into an AC (mains) outlet.

After the Acoustimass module connects to the console, **Pairing complete** appears on the display.

Note: For alternate connection options due to excessive wireless interference, contact customer service.

ADAPTiQ® audio calibration error messages

Listen to the voice prompts for the following error messages:

Error message	Problem	What to do
1	The microphone on the ADAPTiQ headset cannot detect sound.	<ul style="list-style-type: none">• Secure all speaker cables.• Ensure the microphone opening on the top of ADAPTiQ headset is not blocked.• Your ADAPTiQ headset may be damaged. Call Bose® customer service for replacement parts. Refer to the contact sheet in the carton.
2	The room is too loud.	Restart the ADAPTiQ audio calibration when the room is quiet.
3	The ADAPTiQ headset is too close to the speakers.	Move the ADAPTiQ headset farther away from the speakers.
4	The listening locations are too similar.	Move 1 - 2 ft. (.3 - .6 m) away from your previous listening location.
5	The ADAPTiQ headset cannot take measurements due to movement.	Hold your head still.

After correcting your problem, you must restart the ADAPTiQ audio calibration (see page 21).

If you hear a different error message, call Bose customer service for further instructions. Refer to the contact sheet in the carton.

Care and Maintenance

Factory reset the system

To troubleshoot problems, reset the System menu and the ADAPTiQ® audio calibration to the factory settings.

1. Press **SYSTEM** on the remote control.
2. Press **▼** until **16 FACTORY RESET** appears on the display.
3. Press **5**.
The system resets.
4. Run the ADAPTiQ audio calibration (see page 21).

Reset a source button on the remote control


If you are experiencing problems with a source button on the remote control, reset the source button to the factory settings.

After performing this procedure, your source button is in CEC mode.

1. On the remote control, press and hold the appropriate source button until all six source buttons glow, then release.
Only the appropriate source button glows.
2. On the number keypad, enter **0140**.

Service connectors on the Acoustimass® module

The Service and Data connectors are for service use only. Do not insert any cables into these connectors.

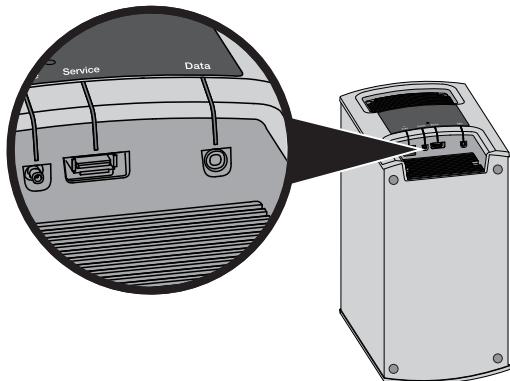

Cleaning

- Clean the surface of the system with a soft, dry cloth.
- Do not use any sprays near the system. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia or abrasives.
- Do not allow liquids to spill into any openings.

Customer service

For additional help using the system:

- Visit SoundTouch.com
- Contact Bose® Customer Service. Refer to the contact sheet in the carton.

Limited warranty

Your system is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

The warranty information provided with this product does not apply in Australia and New Zealand. See our website at www.Bose.com.au/warranty or www.Bose.co.nz/warranty for details of the Australia and New Zealand warranty.

Technical information

Acoustimass® module

Power rating: 100-240V ∼ 50/60Hz 150W

Console

Power rating: 100-240V ∼ 50/60Hz 60W

Soundbar

Power rating: 100-240V ∼ 50/60Hz 60W

Appendix: Using a Computer for Setup

Important setup information

- You can set up your system using a computer rather than a smartphone or tablet.
- Use a computer that is on your Wi-Fi® network.
- Use a computer where your music library is stored.
- You need the provided USB cable.*
- Do not connect the USB cable until the app instructs you to connect the cable.

*The SETUP A USB connector on the back of the system is for computer setup only. The USB connectors are not designed to charge smartphones, tablets, or similar devices.

Using a desktop computer for setup

If you are using a desktop computer, move the console and SoundTouch™ wireless adapter near the computer to set up your system. During setup, the app prompts you to connect the USB cable from the computer to the wireless adapter (temporarily).

After setup, disconnect the USB cable and the console from your computer and from AC (mains power) and move the system to its permanent location.

Setting up the system using a computer

1. On your computer, open a browser and go to:

SoundTouch.com/app

Tip: Use the computer where your music library is stored.

2. Download and run the SoundTouch™ app.
3. Connect the system to your home network (see page 21).

The app guides you through setup.



740979-0010

BOSE[®]

©2015 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM740979 Rev. 00

Our Commitment to You


We take great pride in designing each of our products with the goal of providing the highest-accuracy musical performance possible in the price range of that product. We strive to reproduce the musical sounds as closely as possible to those of the original performance. And we strive to avoid flashy sounds such as those associated with accentuated bass and/or treble frequencies. While those sounds may be initially attractive to the novice, they are not real and are not enduring. In addition, we use only the highest-quality parts and the latest assembly and quality control techniques to ensure the reliability and long life of our products.

Our reputation rests on our steadfast pursuit of this policy in music and entertainment systems for the home, the automobile, and businesses. At Bose, we are committed to investing in research that continually gives rise to new technologies for improving sound reproduction.

When you purchase any product from Bose, we encourage you to compare it, as we do, to competitive products for musical accuracy. We believe that this process will enhance your appreciation of the product you select. With best wishes from all of us at Bose for many years of enjoyable listening.

SoundTouch™ 130 home theater system

CAUTION: Refer to the owner's guide for safety-related information, troubleshooting, and additional setup, speaker placement and operating instructions.
PRECAUCIÓN: Consulte la guía del propietario para información relacionada a la seguridad, solución de problemas y configuración adicional, ubicación del altavoz y las instrucciones de funcionamiento.
ATTENTION : reportez-vous à la notice d'utilisation pour obtenir des instructions de sécurité, ainsi que des informations supplémentaires concernant l'installation, le placement de l'enceinte et le fonctionnement.

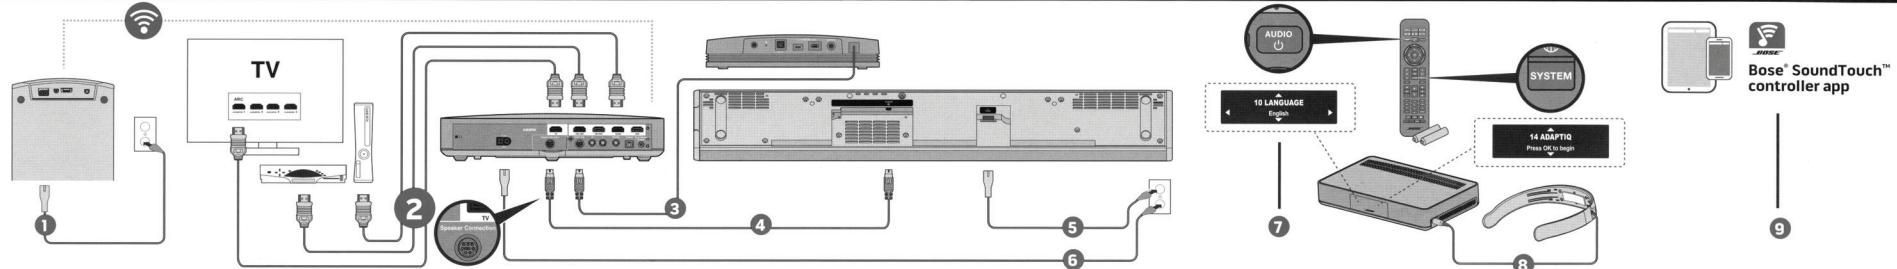

ENGLISH

Before you begin: Place the console, speakers, SoundTouch™ wireless adapter and Acoustimass® module.

1 Connect the Acoustimass module to power

- Plug the power cord into the module's Power connector.
- Plug the other end of the power cord into an AC (mains) outlet.

2 Connect the console to your TV and other devices

- Note: Use your TV's HDMI ARC connector if available.
- Insert the HDMI™ cable into the console's TV connector.
 - Insert the other end of the cable into your TV's HDMI connector.
 - Connect other devices to the console using HDMI cables.

Note: After completing setup, refer to the owner's guide to program the remote to your sources.

3 Connect the SoundTouch™ wireless adapter

Insert the Bose Link cable into the Bose Link connector on the console.

4 Connect the soundbar to the console

- Insert the speaker cable into the Speaker Connection connector on the console.
- Insert the other end of the cable into the **Audio IN** connector on the soundbar.

5 Connect the soundbar to power

- Plug the power cord into the Power connector on the soundbar.
- Plug the other end of the power cord into an AC (mains) outlet.

6 Connect the console to power

- Insert the power cord into the console's **Power** connector.
- Plug the other end of the power cord into an AC (mains) outlet.

7 Power on the system and select your language

- Install the batteries into the remote control.
- Press on the remote control.
- **10 LANGUAGE** appears on the display.
- Press or to select your language. Press .

8 Run ADAPTiQ® calibration

- Put the ADAPTiQ headset on your head.
- Insert the headset's cable into the connector on the side of the console.
- Press on the remote control. The System menu appears on the display.
- Press or until **14 ADAPTiQ** appears on the display.
- Press . Follow the voice prompts.

9 Set up SoundTouch™

Already using SoundTouch™? Go to EXPLORE > SETTINGS > Systems > ADD SYSTEM in the app.

New to SoundTouch™? Download the SoundTouch™ controller app.*

- iOS users: download from the App Store

- Android™ users: download from the Google Play™ store

- Amazon Kindle Fire users: download from the Amazon Appstore for Android

The app guides you through setup.

*If using a computer go to SoundTouch.com/app to download the app.

SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries. Amazon, Kindle and Fire are trademarks of Amazon.com, Inc. or its affiliates. App Store is a service mark of Apple Inc. Android and Google Play are trademarks of Google Inc. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

©2015 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.



To enable the *Bluetooth*® feature on your system, Set up SoundTouch™. See the quick start guide for setup information.

For at aktivere *Bluetooth*®-funktionen på dit system skal du konfigurere SoundTouch™. Se lynstartvejledningen for at få oplysninger om opsætningen.

Um die *Bluetooth*®-Funktion auf Ihrem System zu aktivieren, richten Sie SoundTouch™ ein. Informationen zum Einrichten finden Sie in der Kurzanleitung.

Om de *Bluetooth*®-functie op uw systeem in te schakelen, installeert u SoundTouch™. Zie de beknopte handleiding voor installatie-informatie.

Para activar la función de *Bluetooth*® en el sistema, debe instalar SoundTouch™. Consulte la guía de inicio rápido para obtener información sobre la instalación.

Voit ottaa *Bluetooth*®-ominiisuuden käyttöön järjestelmässäsi määrittämällä SoundTouch™-asetukset. Asetusten määrittämisestä on tietoa pikaoheessa.

Pour activer la fonction *Bluetooth*® sur votre système, configurez SoundTouch™. Reportez-vous au guide de démarrage rapide pour obtenir des informations de configuration.

Per abilitare la funzione *Bluetooth*® sul sistema, configurare SoundTouch™. Per informazioni sulla configurazione, consultare la guida rapida.

A *Bluetooth*®-funkció engedélyezéséhez a rendszeren telepítse a SoundTouch™ alkalmazást. A telepítéssel kapcsolatos információkért tekintse meg a rövid üzembe helyezési útmutatót.

Aby włączyć funkcję *Bluetooth*® w systemie, należy skonfigurować system SoundTouch™. Informacje dotyczące konfiguracji znajdują się w przewodniku szybkiego startu.

Para habilitar o recurso Bluetooth® em seu sistema, configure o SoundTouch™. Consulte o guia de início rápido para obter informações sobre a configuração.

För att aktivera Bluetooth®-funktionen i ditt system måste du först ställa in SoundTouch™. I snabbguiden finns information om hur gör inställningarna.

หากต้องการเปิดใช้งานคุณสมบัติ Bluetooth® บนระบบของคุณ ให้ตั้งค่า SoundTouch™ โปรดดูคู่มือการเริ่มต้นอย่างรวดเร็วสำหรับข้อมูลการตั้งค่าシステム에서 Bluetooth® 기능을 사용 설정하려면 SoundTouch™를 설치합니다. 설치 정보는 빠른 시작 안내서를 참조하십시오.

要启用系统中的 Bluetooth® 功能, 请设置 SoundTouch™。请参见快速入门指南了解设置信息。

要啟用系統中的 Bluetooth® 功能，請設定 SoundTouch™。請參閱快速入門手冊了解設定資訊。

システムのBluetooth®機能を有効にするには、SoundTouch™をセットアップします。セットアップ手順については、クイックスタートガイドをご覧ください。

لتمكين خاصية Bluetooth® في نظامك، قم بإعداد SoundTouch™. انظر دليل البدء السريع للحصول على معلومات الإعداد.



744331-0010

BOSE
Better sound through research®



You must set up your system on your Wi-Fi® network and perform ALL SYSTEM UPDATES before you can stream *Bluetooth*® audio.

Du skal konfigurere dit system på dit Wi-Fi®-netværk og gennemføre ALLE SYSTEMOPDATERINGER, inden du kan stremme *Bluetooth*®-audio.

Sie müssen das System in Ihrem Wi-Fi®-Netzwerk einrichten und ALLE SYSTEMUPDATES durchführen, bevor Sie *Bluetooth*®-Ton streamen können.

U moet uw systeem op uw Wi-Fi®-netwerk installeren en ALLE SYSTEEMUPDATES uitvoeren voordat u *Bluetooth*®-audio kunt streamen.

Debe configurar el sistema en la red Wi-Fi® y realizar TODAS LAS ACTUALIZACIONES DEL SISTEMA antes de que pueda transmitir audio por *Bluetooth*®.

Järjestelmään täytyy määrittää Wi-Fi®-verkon asetukset ja KAIKKI JÄRJESTELMÄPÄIVITYKSET TÄYTYY TEHDÄ ennen *Bluetooth*®-äänien virtauttamista.

Vous devez configurer votre système pour le connecter à votre réseau Wi-Fi® et effectuer TOUTES LES MISES À JOUR SYSTÈME avant d'être en mesure de transmettre du son *Bluetooth*® en streaming.

È necessario configurare il sistema sulla propria rete Wi-Fi® ed eseguire TUTTI GLI AGGIORNAMENTI DI SISTEMA per poter ascoltare l'audio *Bluetooth*® in streaming.

A rendszert be kell állítani a Wi-Fi® hálózat használatára, és a *Bluetooth*® funkcióval történő audioljátszás megkezdése előtt az ÖSSZES RENDSZERFRISSÍTÉST el kell végezni.

Du må koble system til Wi-Fi®-nettverket, og utføre ALLE SYSTEMOPPDATERINGER før du kan strømme *Bluetooth*®-lyd.

Należy skonfigurować system w sieci Wi-Fi® i zastosować WSZYSTKIE AKTUALIZACJE SYSTEMU, aby umożliwić strumieniowe przesyłanie audio przy użyciu połączeń *Bluetooth*®.

Você deve configurar seu sistema em sua rede Wi-Fi® e executar TODAS AS ATUALIZAÇÕES DO SISTEMA para poder transmitir áudio por *Bluetooth*®.

Du måste ställa in systemet för ditt trådlösa Wi-Fi®-nätverk och göra ALLA SYSTEMUPPDATERINGAR innan du kan strömma *Bluetooth*®-ljud.

Wi-Fi is a registered trademark of Wi-Fi Alliance®.

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc. and any use of such marks by Bose Corporation is under license.

©2015 Bose Corporation, The Mountain, Framingham, MA 01701-9168 USA AM757980 Rev. 00

คุณต้องตั้งค่าระบบของคุณบนเครื่อข่าย Wi-Fi® ของคุณ และดำเนินการ ขับเคลื่อนระบบทั้งหมด ก่อนที่คุณจะสามารถต่อรีมสัญญาณเสียง Bluetooth®
시스템을 Wi-Fi® 네트워크에서 설정하고 모든 시스템 업데이트를 수행해야 Bluetooth® 오디오를 스트리밍 할 수 있습니다.

必须在您的 Wi-Fi® 网络中设置系统并执行“系统全部更新”才能传输蓝牙® 音频。

必須在您的 Wi-Fi® 網路中設置系統並執行“系統全部更新”才能傳輸藍芽® 音訊。

Bluetooth®対応機器の音楽をストリーミング再生するには、Wi-Fi®ネットワーク上でシステムを設定して、システムアップデートをすべて実行する必要があります。

يجب إعداد نظامك على شبكة Wi-Fi® وأداء جميع تحديثات النظام قبل أن تتمكن من بث صوت Bluetooth® .



757980-0010

BOSE
Better sound through research®



Universal Remote Device Codes

Contents

TV	3
Cable-Satellite	4
DVD.....	6
Game	7
AUX.....	8

Universal Remote Device Codes

TV

3M	0980	CCE	0160	Elektra	1132	InFocus	0995
Aaxa	6132	Celera	1900	Element	3682	Initial	2017
Acer	1652	Champion	2647	Elite	0274	Insignia	2471
Admiral	0182	Changhong	1766	Emerson	0236	Inteq	0893
Advent	1754	Citizen	0046	Envision	0278	iRIS	4055
Affinity	6190	Claris	6616	Epson	2108	IRT	1830
Aiwa	0406	Coby	2056	ESA	2420	iSymphony	3863
Akai	0098	Commercial Solutions	2427	Fair Mate	6083	JCM	4630
Akura	0042	Conia	1806	Favi	7763	Jensen	0405
AOC	0137	Contex	4280	Fisher	0154	JVC	0053
Apex Digital	1550	Continental	4261	Fluid	4827	KDS	3383
Ario	7710	Coradir	4735	Fujimaro	2746	Ken Brown	2620
Astar	3127	Cornea	4957	Funai	0179	KLH	0408
Asus	4030	Craig	0161	Gateway	1168	Konka	1235
Atvio	6133	Curtis	1897	GE	0027	Lexus	6146
Audiosonic	0103	Curtis Mathes	0039	General Electric	1885	LG	0511
Audiovox	0105	Cytron	1594	GFM	4001	LodgingStar	4868
Auria	4770	Daewoo	0092	Gibralter	0333	LXI	0148
Aventura	2561	Daytek	2024	GoldStar	0056	MAG	3384
B & O	5274	Dell	2064	GPX	1720	Magnasonic	0848
Bang & Olufsen	0118	Digital Projection Inc.	3563	Haier	1767	Magnavox	0054
Baysonic	0465	Disney	2440	Hallmark	0351	Marantz	0128
BenQ	2391	Dukane	7825	Hannspree	3236	Matsushita	0478
BGH	3478	Dumont	0256	H-Buster	5926	Maxent	2434
Blue Light	6152	Durabrand	2191	Hewlett Packard	1671	Megatron	0485
Blue Sky	0134	Dynex	3686	Hisense	2159	Memorex	0037
Britânia	5900	Electric Mirror	4894	Hitachi	0145	MGA	0155
Broksonic	0184	Electrograph	2534	HP	2271	Microsonic	4673
		Electrohome	0381	Hyundai	1206	Midland	0493
		Electron	1898	iLo	2464	Mintek	1788

Universal Remote Device Codes

Miray.....	4998	Portland.....	0582	Silo.....	5740	Vidikron.....	0814
Mitsubishi.....	0150	Prima	0586	Silo Digital	5977	Vidtech	0815
Mitsui.....	3847	Prism	0588	Sony	0000	Viewsonic	1805
Mx Onda.....	1629	Proscan	0883	Soundesign	0178	Viore	3579
NAD.....	0513	Proton.....	0031	Spectroniq.....	3385	VisionQuest	4494
Naoki.....	6147	Provieu.....	2133	Speler	8195	VIZIO.....	2215
Naxa.....	3571	Pulsar	0599	Squareview	0706	Vuon	4421
NEC.....	0170	Pyle.....	2421	STI	6483	Waycon.....	1700
NetTV.....	2539	Pyle Home	5674	SunBriteTV	3117	Westinghouse	2258
New Acoustic Dimension	5601	Quasar	0055	Superscan	2222	White Westinghouse.....	0830
Nexus Electronics.....	4032	RCA	0047	Supersonic	2544	Wyse.....	2422
Nikko	0529	Realistic	0420	SVA.....	1813	Zenith	0017
Nimbro.....	4143	Runco	0632	Sylvania	0024		
Noblex.....	0534	Sampo	0032	Symphonic	0171		
Norcent.....	1838	Samsung	0060	Syntax	2432		
Nordmende.....	0537	Sansui.....	0067	Talent	3318		
NuVision	3355	Sanyo	0159	Tatung	0049		
Ölevia.....	5964	Sceptre	2541	TCL	2231		
Optimus.....	0546	Scotch	0855	Technics	0250		
Optique.....	6677	Scott	0309	Techwood	0750		
Orion.....	0549	Sears	0146	Teknika	0322		
Otic.....	2443	Seiki.....	6024	Telefunken	0757		
Panasonic.....	0051	Seiko Epson	5721	TMK.....	0736		
Panavox.....	4496	Seleco.....	0672	TNCi	1736		
PARK.....	4065	Semivox.....	0948	Tophouse	2157		
Philco.....	0030	Semp	0949	Tosaki	6145		
Philips.....	0081	Semp Toshiba.....	5722	Toshiba	0156		
Pioneer	0166	Serie Dorada.....	2906	TruTech	3444		
Planar	3573	Sharp	0093	TVS	2032		
Polaroid	2163	Sigmac	5138	Victor	0809		

Cable-Satellite

Access Communications.....	5025
Adams Cable TV.....	6386
ADB	1634
Air Link Communications	6659
Alcatel-Lucent	4817
Allegiance Communications....	7740
Amino	2125
Aquário	6186
Arion	3224
Armstrong	0083
Arris	4776
Arvig Communication Systems.....	5034
AT&T	0018
AT&T U-verse	7692

Universal Remote Device Codes

Atlantic Broadband.....	6171	Channel Master.....	0198	Evolution.....	2740	ISkyB	1219
ATMC.....	6389	Charter.....	4213	Exterity	4429	Jerrold	0003
AZ America.....	5128	ChoiceCable.....	6225	Fave TV.....	8005	JVC	0053
Azteca.....	3985	Cincinnati Bell.....	4848	Fidelity Communications.....	5048	Kaon	2465
Baja Broadband	5035	Cisco	3915	Fortec Star.....	1663	Kathrein	0411
Bell.....	5008	Claro	6221	Freesat.....	1164	KX.....	4009
Bell Aliant.....	8093	CMA Communications	6176	Frontier Communications.....	6172	Lemon	1242
Bell ExpressVu.....	1569	Cogeco	5028	General Communications.....	5049	Lumos Networks	5062
Bell Fibe TV	8078	ColbaNet	7592	General Instrument.....	0329	Massillon Cable	5055
Bell Satellite TV.....	8079	Comcast	1355	GOI	1704	Matanuska Telephone Association.....	5056
Bend Broadband	5036	Comporium.....	5046	Gold Box	1176	Mediacom.....	0482
Bevcomm	6557	Consolidated Communications	5047	Google.....	6599	Mediastream.....	8049
Blue Ridge Communications	5037	Coolsat	3547	Gradiente.....	0338	Megacable.....	6217
Bright House	4215	Coship	2364	Grande Communications	5051	MetroCast Cablevision	5057
brite-View	4520	Cox	4212	Great Plains Communications	6180	Mi-Connection.....	6431
Broadstripe.....	5038	Dalvi.....	2410	Guest-Tek	3391	Midcontinent Communications	5059
Buckeye Cable System	5039	Deuromedia.....	7683	GVT.....	7774	Mid-Hudson Cable	5058
Cable America.....	6181	Digeo	1678	Handan	2765	Motorola	0504
Cable Axion Digitel	5027	Digital Tech.....	6203	Hawaiian Telcom	6917	Movistar	4534
Cable Magico	4826	DirecTV	1988	HickoryTech.....	5052	Moxi.....	4777
Cable One	4216	Dish Mexico.....	6215	Homecast	2612	MTS	3524
Cablecom Mexico	6219	Dish Network.....	1989	HTS.....	0682	Myrio.....	0479
Cablemas	6218	Dishpro	1785	Huawei.....	4700	Nagra.....	3143
Cablevision.....	4214	DMT.....	1749	Hughes Network Systems.....	0791	NEOTION.....	2848
Canby Telcom.....	6182	Eagle Communications	6406	Humax	1200	NET	1636
Captive Works	3209	EastLink.....	6228	iBahn	8414	Netsat	1302
Cass Cable	5040	EchoStar	0280	i-Link.....	4852	NeuLion	8000
CCAP.....	6375	Elsys	6185	Indovision	1210	NewWave Communications	5060
Century.....	0197	Embratel	4577	Inter Mountain Cable.....	5053	Next Level.....	0943
CenturyLink	5042	Entone	3906	IPM	6121		

Universal Remote Device Codes

Nighthawk	4428	Scientific Atlanta.....	0008	Telmex	6220	Zinwell	1994
Norsat.....	0538	Semp	0949	Telus	4962	Zito Media	6177
Northland Communications	6173	Semp Toshiba.....	5722	Thomson	0771	ZTE	4702
NU Telecom.....	6441	Service Electric.....	5066	Time Warner	3602	ZyXEL	3770
Nuevo Siglo	6089	Shaw.....	4315	TiVo.....	1492		
Odobo	7984	Shaw Direct	4816	Transparent Video Systems....	4387		
Oi TV.....	6031	Shentel	5067	TransVideo.....	7999		
Omegasat.....	1319	Skitter.TV	5102	TV Cable.....	6224		
Openbox.....	3505	Sky Brasil.....	7861	TVA Digital	3525		
Optimum.....	5063	Sky Mexico	4322	TVS Cable.....	7656		
OrbiSat	6201	SkyAngel	8496	UEC	2136		
Pace	0558	Skyview	3369	Ultrasat	3557		
Panasonic.....	0051	Sogetel	4958	Verizon.....	1576		
Pansat	0878	Solomend	4893	Via Embratel	4578		
Paul Bunyan Communications	6179	Sonicview	3993	Vidéotron	5992		
Philips.....	0081	Source Cable.....	5029	ViewSat.....	3558		
Pioneer	0166	Star	1439	Vivo.....	4204		
Pioneer Telephone.....	5064	Star Choice.....	0950	VTR	4965		
Prime	3964	Suddenlink.....	4217	Wave Broadband.....	5070		
Prodea Systems	4818	Supercanal	6222	Wavevision	7664		
Qwest	7448	Supernova	1694	Wegener	3821		
RCA	0047	Tbaytel.....	7650	WEHCO Video	6174		
RCN.....	4377	TDS.....	7482	Westman Communications	5030		
Reach Broadband	7118	TDS Telecom	6724	WideOpenWest.....	4436		
Rogers	4314	Technicolor	4758	Windjammer Cable	6178		
Sagem	1386	Technotrend.....	2228	Windstream	6175		
Sagemcom	4858	Tecsat	1466	WOW!	8179		
Samsung	0060	Telecentro	6223	Xfinity	8096		
SaskTel	2178	Telefonica	2406	Yes.....	1672		
SatHawk.....	4892	Televisa.....	1481	Zenith	0017		

DVD

Accurian	2575
Akai.....	0098
Allegro	0311
Amvox	8726
Anthem	1031
Anthem Statement	5250
Apex Digital	1550
Aspire Digital	2262
Audio Authority.....	1689
Audiovox	0105
BBK	1055
Bel Canto Design	2202
Blaupunkt	0133
Blue Parade	1710
Blue Sky	0134
Broksonic	0184
California Audio Labs	0173
Cambridge Audio	2145
CineVision.....	1841
Citizen.....	0046
Coby	2056
Contel	3253
Cougar.....	6004

Universal Remote Device Codes

Curtis	1897	Kenwood	0417	Polk Audio	0647	Viore	3579
Daewoo	0092	KLH.....	0408	Presidian.....	3093	VIZIO.....	2215
Days	8712	Konik	8686	Proscan	0883	Vtrek	1893
Denon	0246	Lexicon	0433	RCA	0047	WB Electronics	4626
Digix	2441	LG.....	0511	RE-BL.....	4625	Xbox	1840
Diplomat	8683	Logitech.....	1655	Rio	1837	X-View	2990
Disney.....	2440	Magnavox.....	0054	RJTech.....	2556	Yamaha	0019
Durabrand	2191	Mallory.....	8713	Rotel	0630	Zenith	0017
Dynex	3686	Marantz	0128	Samsung	0060		
EletroVision.....	8729	Memorex	0037	Sansui.....	0067		
Emerson	0236	Microsoft	1756	Sanyo	0159		
Funai.....	0179	Mintek.....	1788	Schmartz	4004		
GE.....	0027	MXT	4522	Schneider	0665	A.C.Ryan	4453
General Electric	1885	NAD	0513	Semp	0949	ABS	2081
GFM.....	4001	Naxa	3571	Semp Toshiba.....	5722	Access HD	3786
Go Video.....	0334	Nell	8727	Sharp	0093	Accurian	2575
GoldStar	0056	Nesa	1787	Sherwood	0180	AirLink 101.....	4112
GPX	1720	New Acoustic Dimension	5601	Shinsonic.....	1769	AL Tech.....	3216
Greenhill	1692	NKS	8685	Solé	5978	Alienware	2082
Grundig.....	0345	Nyko	3830	Sonic Blue	1715	Alpha Digital	4085
Harman/Kardon	0356	Ölevia.....	5964	Sony	0000	AMTC	4079
Hitachi	0145	Onkyo	0102	Supersonic	2544	Apex Digital	1550
Initial	2017	Oppo	2634	Sylvania	0024	Apple	2414
Insignia	2471	Optimus.....	0546	Symphonic	0171	Artec	3746
Intec.....	3138	Orion.....	0549	TCL.....	2231	Asus	4030
Integra	1842	Panasonic.....	0051	Technics	0250	Audio Authority	1689
Irradio	1217	Philco.....	0030	Tectoy	6192	AutumnWave	3437
JBL	0399	Philips.....	0081	Theta Digital	0770	Axonix.....	3341
JVC	0053	Pioneer	0166	Toshiba	0156	Boxee	4583
jWin.....	2072	Polaroid	2163	Urban Concepts	1695	Cable Electronics	5330
						CASTi	3910

Game

A.C.Ryan	4453
ABS	2081
Access HD	3786
Accurian	2575
AirLink 101.....	4112
AL Tech.....	3216
Alienware	2082
Alpha Digital	4085
AMTC	4079
Apex Digital	1550
Apple	2414
Artec	3746
Asus	4030
Audio Authority	1689
AutumnWave	3437
Axonix.....	3341
Boxee	4583
Cable Electronics	5330
CASTi	3910

Universal Remote Device Codes


CE labs	3981	Howard Computers	2272	Northgate	2086	Systemax.....	2274
Centronics	4878	HP.....	2271	nSTREAMS.....	2013	TAD	6368
Ceton.....	8542	Hush	2499	Nyko	3830	Tagar Systems.....	2087
Channel Master	0198	iBUYPOWER	2090	OnAir Solution	3435	Tivax	4049
Coby	2056	iNet Access	5145	Panasonic.....	0051	Toshiba	0156
Coship	2364	Inkel	0391	Patriot	1338	Touch.....	2088
CyberPower.....	2083	Insignia	2471	PCT.....	5181	Venturer	1518
Daewoo	0092	Intec.....	3138	Philco.....	0030	Viewsonic	1805
Daytek	2024	Iomega.....	3872	Pinnacle Systems	1729	VIZIO.....	2215
Dell	2064	iView	4734	Pioneer	0166	Voodoo	2513
Digital Stream.....	3911	Kaleidescape	3215	Popcorn Hour	3862	WB Electronics	4626
Digiwave	3232	KWorld.....	2208	PrimeDTV	4828	Western Digital	4168
Dish Network.....	1989	LaCie	3201	RCA	0047	Winegard	0887
D-Link	2454	LG	0511	RE-BL	4625	Xbox	1840
DVICO.....	2607	Linksys	2151	Ricavision	2507	Xtreamer	4420
Echostar	0280	Logitech.....	1655	Roku	2457	Yamaha.....	0019
Elgato Systems	2608	Macro Image Technology	2175	Roomlinx	5149	Zenith	0017
Enseo.....	4170	Magnavox.....	0054	RTC	4879	Zentech	4091
Epson	2108	Media Center PC	2084	Samsung	0060	Zinwell	1994
Escient.....	1628	MediaGate	3627	Sasem	2508	ZT Group	2089
Firebird Systems.....	5022	Mediasonic	3433	Schmartz	4004	Zune	4530
Fusion.....	2748	Memorex	0037	Seagate	4466		
Fusion Research.....	3949	Micca.....	6593	Seiko Epson	5721		
Gateway	1168	MicroGEM	4084	Sherwood	0180		
GE.....	0027	Microsoft	1756	Sling Media.....	4273		
General Electric	1885	Mind	2085	Sony	0000		
Goodmind.....	0681	Minix	2198	Stack 9	2509		
Hauppauge.....	1554	MyHD	2174	Streamzap	1999		
Hewlett Packard	1671	Netgear.....	2574	Sunkey.....	4449		
HomeWorx.....	8348	NiveusMedia.....	6523	Sylvania	0024		

AUX

Aiwa.....	0406
Altec Lansing	2069
Apple	2414
Arcam	0077
Audyssey	6131
Burmester.....	0869

Universal Remote Device Codes

California Audio Labs	0173	Matsui.....	0477	SAE.....	0633
Carver.....	0191	McIntosh.....	0480	Sansui.....	0067
Cary Audio Design.....	1987	MCS	0456	Scandyna	4027
CCE	0160	Memorex	0037	Simaudio	2007
Curtis Mathes	0039	Miro	1693	Sonance	3244
Denon	0246	Mission	0499	Sonic Frontiers	1431
DirecTV.....	1988	MTC.....	0185	Sony	0000
DKK	0872	Myryad.....	1104	Sylvania	0024
DLO	3211	NAD	0513	TAG McLaren.....	1800
DMX Electronics.....	1697	New Acoustic Dimension	5601	TAG McLaren Audio	5784
Garrard	0326	NSM	0516	Tascam	0743
Genexxa	0330	Olive	3342	Teac	0041
Harman/Kardon.....	0356	Onkyo	0102	Technics	0250
Hitachi	0145	Optimus.....	0546	Thorens.....	1489
Humax	1200	Panasonic.....	0051	Thule Audio	1490
i.Sound	6510	Parasound	0566	TiVo.....	1492
iHome	3595	Philips	0081	Wards	0187
iLive	3357	Pioneer	0166	Xitel.....	3593
Insignia	2471	Polk Audio	0647	Yamaha.....	0019
Integra	1842	Primare	2008	Zonda	0846
iPort	3031	Proceed	1606		
Jamo.....	2199	Pro-Ject.....	4641		
JVC.....	0053	Pro-Ject Audio Systems.....	5669		
Kenwood	0417	Proton	0031		
Klipsch.....	2005	QED	0884		
Krell	0860	Quad.....	0601		
Linn.....	0437	Quasar	0055		
Logitech.....	1655	RCA	0047		
Magnavox.....	0054	Realistic	0420		
Marantz	0128	Rotel	0630		

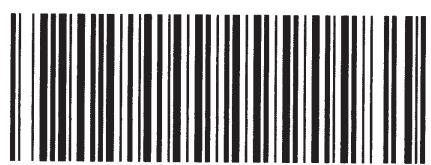

715330-0010

BOSE
Better sound through research[®]

©2014 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM715330 Rev.00

Bose Corporation

GLOBAL SUPPORT REGIONS

United States

1-800-905-1253
owners.bose.com

Australia

1800 061 046
bose.com.au

Belgique/België

bosebelgium.be

Canada

1-877-650-2073
bose.ca

China

86 400 880 2266
bose.cn

Danmark

bose.dk

Deutschland

0800 2673 444
bose.de

España

bose-es.com

Europe

(Other Markets)
bose.eu

Finland

bose.fi

France

bose.fr

Hong Kong

852 2123 9000
bose.hk

Hungaria

bose.hu

India

1800 11 2673
boseindia.com

Ireland

bose.ie

Italia

800 83 22 77
bose.it

Japan

0570 080 021
bose.co.jp

Latin America

(Other Markets)
508 614 6000

Luxembourg

bose.lu

Mexico

001 866 693 2673

Nederland

bose.nl

New Zealand

0800 501 511
bose.co.nz

Norge

bose.no

Österreich

bose.at

Polksa

bose.pl

Schweiz

bose.ch

Sverige

bose.se

Taiwan

886 2 2514 7977

United Arab Emirates

800 2673
bose.ae

United Kingdom

0800 279 7347
bose.co.uk

CORPORATE HEADQUARTERS

Bose Corporation

The Mountain, Framingham, MA 01701-9168 (USA)

global.Bose.com



744032-0010

©2015 Bose Corporation. CCO15931 AM744032-0010_00

BOSE
Better sound through research®