


## Owner's Manual

**Important!**  
Return your **Warranty**  
**Card** within 10 days of Sale

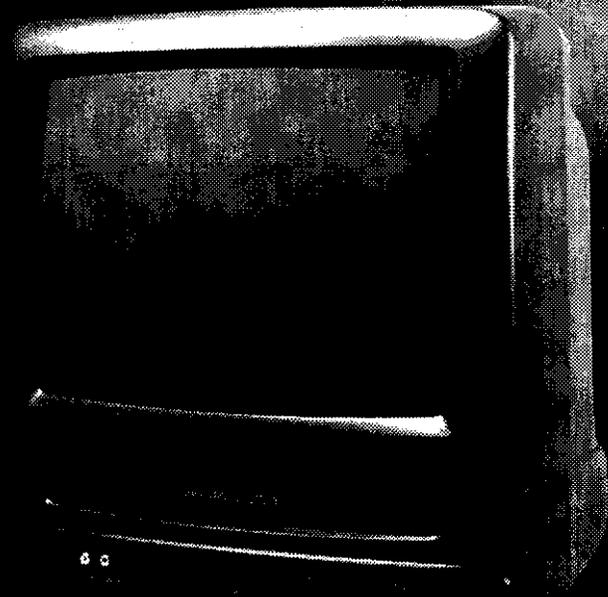

**PHILIPS** **MAGNAVOX**

# Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

## Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

## Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

## Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these

## safety symbols



**⚡** This "bolt of lightning" indicates that uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

**⚠** The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

**ATTENTION:** Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

## PHILIPS MAGNAVOX

*Congratulations on your purchase, and welcome to the "family!"*



### Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

 
And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome-and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,

Robert Minkhorst  
President and Chief Executive Officer

**P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**



## Introduction 3

### Welcome to your TV/VCR owner's manual.

This manual has seven sections: Setting Up Your TV/VCR; Description of Controls; Basic Operations; Recording Options; Playing Options; Additional Features; and Information You May Need. The instructions explain all of the TV/VCR's features, which are listed below.

#### Features

- A-B Repeat Play
- Automatic Head Cleaner
- Automatic Tracking Adjustment
- Blue Background
- Closed Caption
- Daylight-Savings Time
- Index Search
- 19 micron head, improves the picture quality during playback of SLP tapes
- On-Screen displays in English or Spanish
- On-Screen Menu Programming, accessible with remote control or front panel buttons
- One-Touch Recording
- Remote Control with capability to operate a Cable Box or Direct Broadcast System
- Remote Locator
- Repeat Play
- Skip Search
- Sleep Timer
- SmartClock™
- SmartLock™
- Smart Picture
- Timer Recording
- VCR Plus+ Programming System
- Wake Up Timer

#### Safety Precautions

**Warning:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

**Federal Communications Commission (FCC) Warning:** Any unauthorized changes or modifications to this equipment void the user's authority to operate it.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This TV/VCR, equipped with a High Quality (HQ) system, is compatible with existing Video Home System (VHS) equipment.

**Note to the Cable TV System Installer:** This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the National Electrical Code, which provides guidelines for proper grounding – in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

As an ENERGY STAR® Partner, Philips Consumer Electronics Company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark. Using products with the ENERGY STAR® label can save energy.

Saving energy reduces air pollution and lowers utility bills.

SmartClock™ and SmartLock™ are trademarks of Philips Consumer Electronics Company.

 
Copyright 1999 Philips Consumer Electronics Company. All rights reserved. VCR Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.



This owner's manual is made of recycled paper.

#### Helpful Hints

- Before doing anything else, record the TV/VCR's model and serial numbers in the spaces provided on page two. These numbers will help us assist you if you ever call for help.
- Your new product, its packaging, and this manual contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount that needs to be properly disposed. Your product uses batteries that should not be thrown away when depleted but should be disposed of as small chemical waste. Please find out about the local regulations on disposal of your old product, batteries, manual, and packaging whenever you replace existing equipment.



## 4 Table of Contents

.....

|   |       |
|---|-------|
| <b>Setting Up Your TV/VCR</b>                               |       |
| Introduction .....  | 3     |
| Table of Contents .....                                     | 4     |
| Before Using the TV/VCR .....                               | 5     |
| Hooking Up the TV/VCR .....                                 | 6-7   |
| Turning On the TV/VCR .....                                 | 8     |
| Language Selection .....                                    | 9     |
| Automatic Channel Setup .....                               | 10-11 |
| Setting the Clock .....                                     | 12-17 |
| Daylight-Savings Time .....                                 | 18    |
| Time Zone .....   | 19    |
| Setting the Remote to Operate a Cable Box/DBS .....         | 20-21 |
| <b>Description of Controls</b>                              |       |
| Front Panel .....   | 22    |
| Rear Panel .....  | 23    |
| Remote Control Buttons .....                                | 24-25 |
| Adjusting the Picture Controls .....                        | 26-27 |
| On-Screen Status Displays .....                             | 28    |
| <b>Basic Operations</b>                                     |       |
| Playing .....   | 29    |
| Recording .....   | 30    |
| <b>Recording Options</b>                                    |       |
| One-Touch Recording .....                                   | 31    |
| Rerecording (Tape Duplication) .....                        | 32    |
| Defeat Recording .....                                      | 33    |
| Timer Recording .....                                       | 34-37 |
| Setting Up the VCR Plus+ Programming System .....           | 38-39 |
| Timer Recording With the VCR Plus+ Programming System ..... | 40-41 |
| <b>Playing Options</b>                                      |       |
| Real-Time Counter Memory .....                              | 42    |
| Repeat Play .....   | 43    |
| A-B Repeat Play .....                                       | 44-45 |
| Playback Options .....                                      | 46    |
| <b>Additional Features</b>                                  |       |
| Blue Background .....                                       | 47    |
| SmartLock .....   | 48-51 |
| Sleep Timer .....   | 52    |
| Wake Up Timer .....   | 53    |
| Closed Caption .....  | 54-55 |
| Volume Bar .....  | 56    |
| Automatic Operation Features .....                          | 57    |
| Smart Picture .....   | 58    |
| Remote Locator .....  | 59    |
| Reminder .....  | 60    |
| Index Search .....  | 61    |
| <b>Information You May Need</b>                             |       |
| Specifications .....  | 62    |
| Glossary .....  | 63    |
| Helpful Hints .....   | 64-65 |
| Limited Warranty .....                                      | 66    |
| Index .....   | 67    |
| Accessories .....   | 68    |





## Before Using the TV/VCR 5

### Putting Batteries in the Remote Control

1

Remove the battery compartment lid on the bottom of the remote control by pressing in the tab, then pulling up the lid.

2


Place three AA batteries inside the battery compartment with their + and - ends aligned as indicated.

3

Replace the battery compartment lid.



1

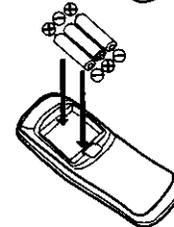

2



3

### Erasure Prevention


Video cassette tapes have record tabs to ensure that recordings are not accidentally erased.

1

To prevent accidental erasure, break off the tab with a screwdriver.

2

To record again, cover the hole with cellophane tape.

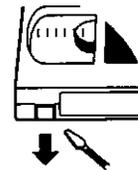

1



2

### Using the Remote Control

 
- ◆ Point the remote control at the TV/VCR's remote sensor, then press the COMBI button when using the remote control to operate the TV/VCR. Point the remote control at the Cable Box/DBS, then press the CABLE/DBS button when using the remote control to operate the Cable Box/DBS.
- ◆ Do not put objects between the remote control and the TV/VCR.

### TV/VCR Maintenance

- ◆ In this TV/VCR, use only tapes with the **VHS** mark. The use of other tapes may result in poor picture quality and excessive deposits on the video heads, which may not be covered by the warranty if damage occurs.
- ◆ Make sure any light adhesive stick-on notes are removed from the video cassette tape before putting the tape in the TV/VCR. Removable labels like these can jam the TV/VCR.
- ◆ Periodic maintenance is required to maintain your TV/VCR's excellent performance. This TV/VCR has an automatic head cleaning system. However, the video heads will eventually require cleaning or replacement. Only an authorized service center should perform this service.

#### Helpful Hints

- The remote control and its batteries are supplied.
- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.




## 6 Hooking Up the TV/VCR

Hook up your TV/VCR using one of the connections shown.

**A.**

### Hooking Up Your TV/VCR With a Cable Signal or Outdoor Antenna

Connect a Cable signal or an antenna to the ANT(enna) Jack.

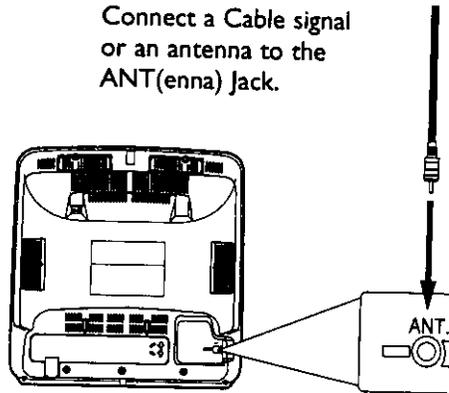


**B.**

### Hooking Up Your TV/VCR With a Cable Box

To view any channel, set the TV/VCR to the Cable Box output channel (channel 03 or 04). Then, select channels at the Cable Box.

Connect the Cable signal to the IN Jack on the Cable Box.

Connect an RF coaxial cable (75-ohm, not supplied) to the OUT Jack on the Cable Box and to the ANT(enna) Jack on the TV/VCR.

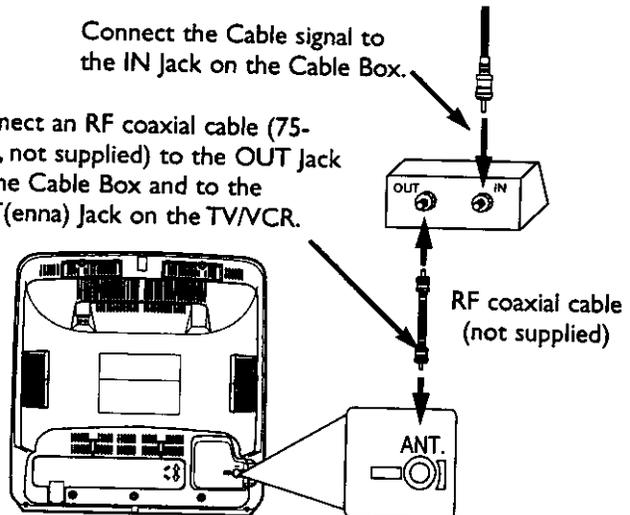


**C.**

### Hooking Up Your TV/VCR With an Indoor Antenna

To install a rod antenna (not supplied), push the stem of the antenna into the antenna hole on the top of the TV/VCR. Connect the antenna wire to the ANT(enna) Jack on the back of the TV/VCR as shown. Extend the antenna and adjust its length, direction, and angle for the clearest picture.

Rod Antenna (not supplied)

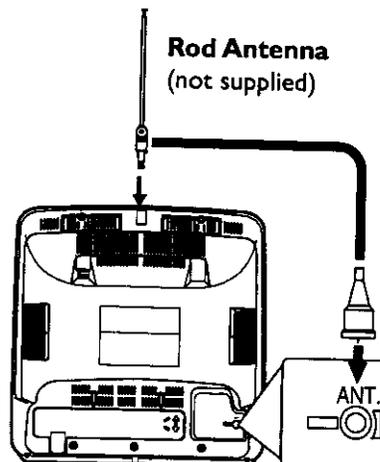


## Hooking Up the TV/VCR (cont'd) 7

D.

### Hooking Up Your TV/VCR to Another Video Source (VCR or Camcorder)

You may need this connection if you want to copy tapes. Details are on page 32.

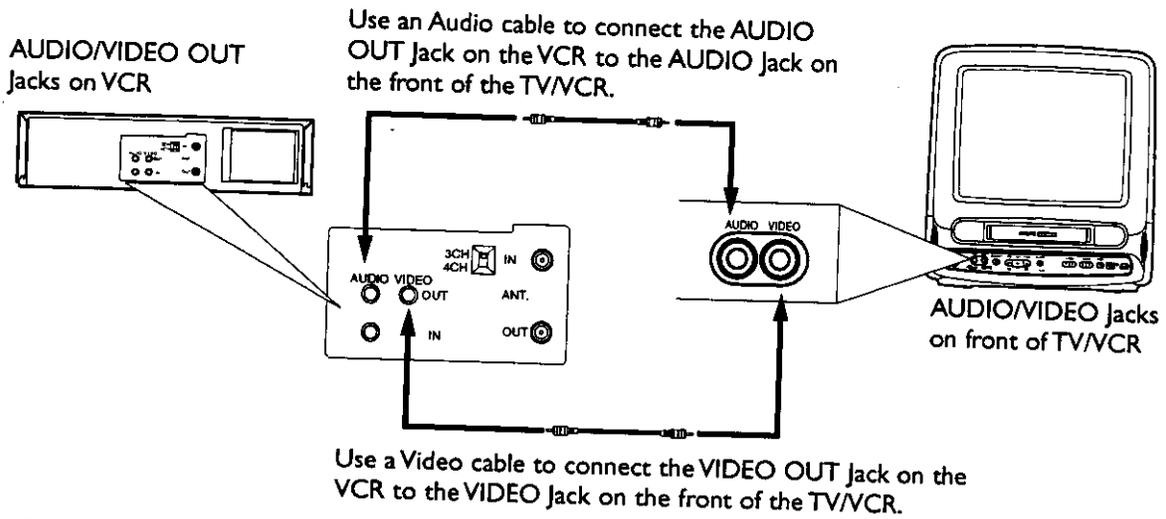

2


Plug in the TV/VCR.

3

Before you turn on the TV/VCR, go to page eight.

### Helpful Hints

- Before connecting an antenna or cable signal to the ANT(enna) Jack, make sure the pin is not bent. If the pin is bent, straighten it as illustrated, then connect the antenna or cable signal to the ANT(enna) Jack.
- A rod antenna (not supplied) is available from Philips Service Solutions Group. The part number is 4835 303 37006. To order, call 1-800-851-8885.
- Audio and video cables are not supplied.

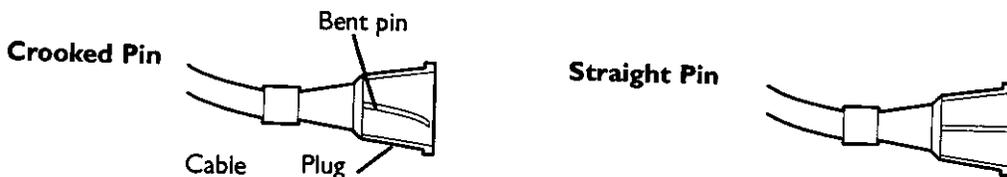


## 8 Turning On the TV/VCR

Before you turn on the TV/VCR, make sure batteries are in the remote control and the TV/VCR is hooked up correctly.

The instructions on this page work only when you turn on the TV/VCR for the first time.

1

Press the **POWER** button. The TV/VCR will come on and the screen shown below will appear.

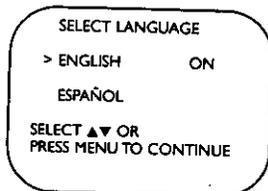


2

Press the **PLAY/▲** button or the **STOP/▼** button to select English or Spanish on-screen displays and menus.

3

Press the **MENU** button. The screen shown below will appear.

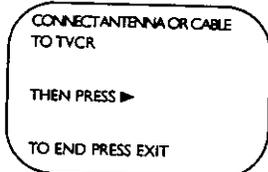


4

Press the **F.FWD/▶** button to begin automatic channel setup. The TV/VCR will memorize all available channels. When channels are set, CHANNELS ARE SET will appear on the screen briefly. Then the TV/VCR will go to the lowest channel programmed.

(If you try to set up channels when there is no antenna or cable connected to the TV/VCR, programming will appear to take place, but eventually a NO TV SIGNALS ... message will appear on the screen. Connect an antenna or cable to the ANT(enna) jack on the TV/VCR, then press the F.FWD/▶ button again. You may need to follow the steps on page 10 instead.)

5

Use the **CH(annel) ▲/▼** button or the **Number** buttons on the remote control to select a TV/VCR channel. Use the **VOL(ume) ▲/▼** button to adjust the sound.

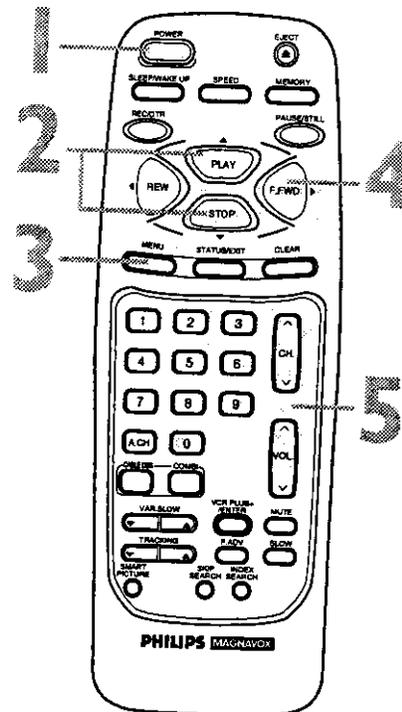

### Helpful Hints


- If you do not see any on-screen displays when you turn on the TV/VCR, check your hookups, then try again. If you still do not see any on-screen displays, follow the steps on pages nine-10 to select a language and set up channels.
- To skip step 2, press the **MENU** button. All on-screen displays will be in English. To skip step 4, press the **STATUS/EXIT** button. Channels will not be set up, and CHANNELS NOT SET will appear on the screen briefly.
- You cannot set up channels if you are using a Cable Box.
- Line Input mode will always be stored in the TV/VCR's memory as channel 00. When you select channel 00, A/V IN will appear on the screen briefly. Press the **CH(annel) ▲/▼** button or the **Number** buttons to select another channel.

## Language Selection 9

Follow the steps below to change the language of the on-screen displays and menus.


1

Press the **COMBI** button, then press the **MENU** button.

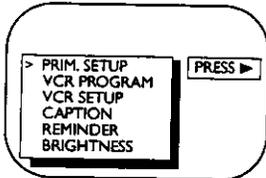


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

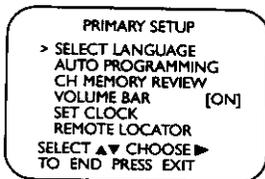

3

Press the **PLAY/▲** button or the **STOP/▼** button to choose **SELECT LANGUAGE**. Then, press the **F.FWD/▶** button.

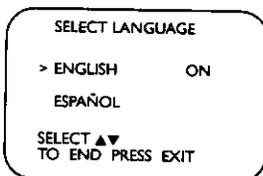


4

Press the **PLAY/▲** button or the **STOP/▼** button to select **ENGLISH** or **ESPAÑOL** (Spanish).

5

Press the **STATUS/EXIT** button.

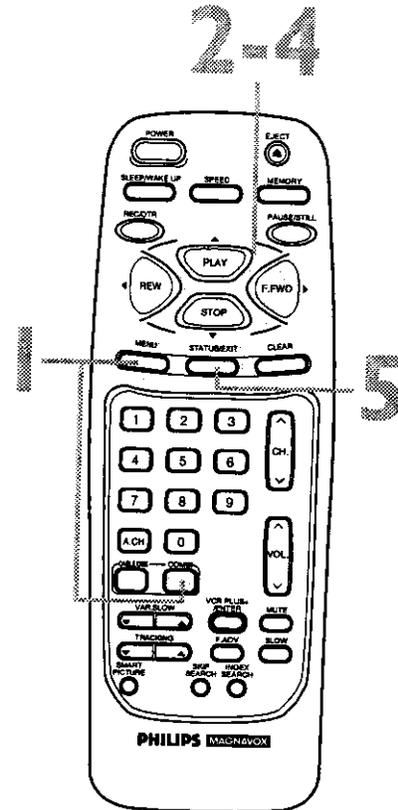


### Helpful Hint

- If you accidentally select Spanish and need English on-screen displays and menus:
  - 1) Press the **COMBI** button, then press the **MENU** button.
  - 2) Press the **PLAY/▲** button or the **STOP/▼** button to select **PREPARACION**, then press the **F.FWD/▶** button.
  - 3) Press the **PLAY/▲** button or the **STOP/▼** button to select **SELECCION IDIOMA**, then press the **F.FWD/▶** button.
  - 4) Press the **PLAY/▲** button or the **STOP/▼** button to select **ENGLISH**.
  - 5) Press the **STATUS/EXIT** button.


# 10 Automatic Channel Setup

Although the TV/VCR may automatically memorize the channels you receive when you turn it on for the first time, you may set up channels again by following the steps below.


**1** Press the **COMBI** button, then press the **MENU** button.

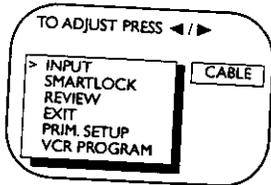

**2** Press the **PLAY/▲** button or the **STOP/▼** button to select **INPUT**. Press the **REW(ind)/◀** button or the **F.FWD/▶** button until **ANTENNA** or **CABLE** (whichever you have) appears beside **INPUT**.

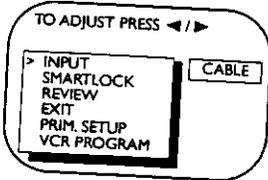


**3** Press the **STOP/▼** button repeatedly to select **PRIM. SETUP**, then press the **F.FWD/▶** button.

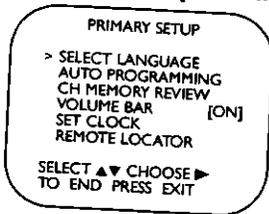

**4** Press the **PLAY/▲** button or the **STOP/▼** button to select **AUTO PROGRAMMING**, then press the **F.FWD/▶** button. **AUTO PROGRAMMING MEMORIZED CH ...** will appear on the screen. The TV/VCR will memorize all available channels.

**5** Wait for a few minutes. When setup is complete, **CHANNELS ARE SET** will appear on the screen. Then the programming of the lowest channel number placed in the TV/VCR's memory will appear on the screen. Now, when you press the **CH(annel) ▲/▼** button, you will scan only through channels you receive.

2-4

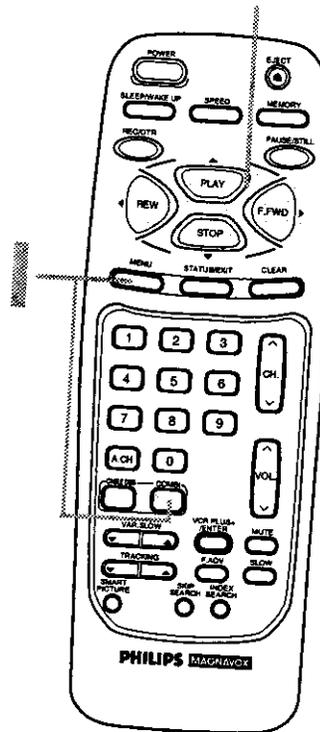

**5** Wait for the TV/VCR to set up channels.

### Helpful Hints


- Line Input mode will always be stored in the TV/VCR's memory as channel 00. You cannot delete it.
- You cannot program channels when the TV/VCR is on channel 00 (A/V INPUT will appear beside INPUT at step 2). Select ANTENNA or CABLE at step 2.

## Automatic Channel Setup (cont'd) 11

### Adding/Deleting Channels


1

Press the **COMBI** button, then press the **MENU** button.

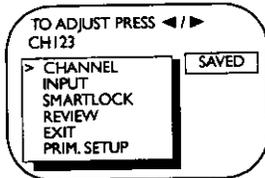


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **CHANNEL**.

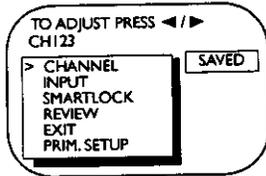

3

Press the **CH(annel) ▲/▼** button to select the channel you want to add or delete.

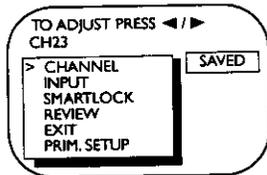

4


Press the **F.FWD/▶** button or the **REW(ind)/◀** button to select **SAVED** (to add that channel) or **DELETED** (to delete that channel).

Repeat steps 3-4 to add or delete other channels.

5

Press the **STATUS/EXIT** button.

Programming of the channel you added or deleted will appear.

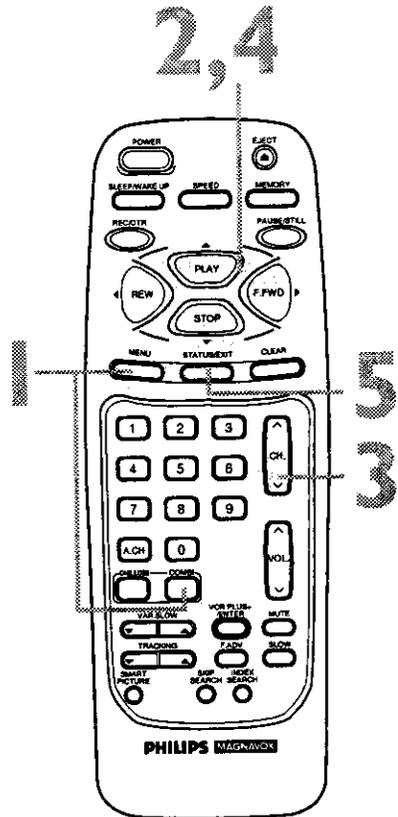

### Helpful Hint

- To review the channels memorized by the TV/VCR, follow these steps.
  - 1) Press the **COMBI** button, then press the **MENU** button.
  - 2) Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Press the **F.FWD/▶** button.
  - 3) Press the **PLAY/▲** button or the **STOP/▼** button to select **CH MEMORY REVIEW**. Press the **F.FWD/▶** button. A list of programmed channels will appear on the screen.
  - 4) If all the programmed channels don't fit on the screen, press the **F.FWD/▶** button. If you do not press the **F.FWD/▶** button within 10 seconds, the remaining channels will appear on the screen. (If there are no remaining channels, the previous menu will appear.) Or press the **REW(ind)/◀** button to see the previous screen of channels.
  - 5) Press the **STATUS/EXIT** button once or twice.

## 12 Setting the Clock

There are three ways to set the clock: Manually, with Automatic PBS Channel Selection, or with Manual PBS Channel Selection. With manual clock setting, you tell the TV/VCR the current time. With Automatic or Manual PBS Channel Selection, the TV/VCR gets the time from your local PBS station. If you use either Manual PBS Channel Selection or Automatic PBS Channel Selection, follow the steps on page 19 to have the TV/VCR maintain the clock according to your Time Zone.

**Cable Box users must set the clock manually.**


To set the clock manually, follow the steps on pages 12-13. To set the clock using Automatic PBS Channel Selection, follow the steps on pages 14-15. To set the clock using Manual PBS Channel Selection, follow the steps on pages 16-17.

Before you begin, make sure:


- The TV/VCR is hooked up and turned on.
- Channels are set up.
- Tape playback is stopped. You can not use Automatic or Manual PBS Channel Selection during tape playback.
- You make each entry within 60 seconds of the previous entry.

### Manual Clock Setting



**1** Press the **COMBI** button, then press the **MENU** button.

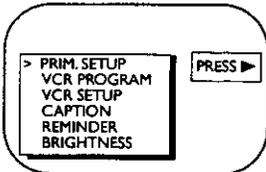

**2** Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

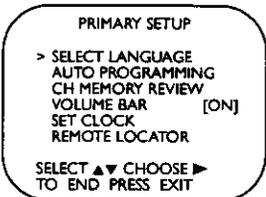

**3** Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**. Then, press the **F.FWD/▶** button.

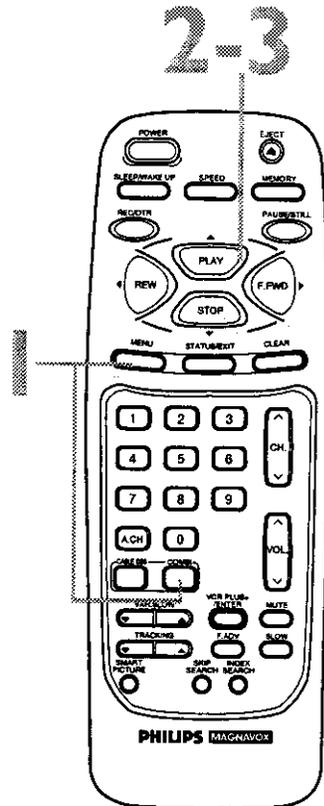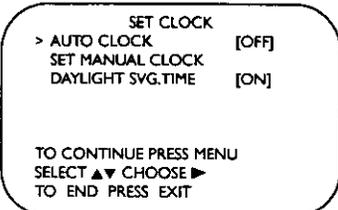


### Helpful Hints

- Entries that do not match the TV/VCR's calendar will cause a question mark (?) to appear on the screen.
- To make corrections while you are setting the clock, press the **CLEAR** button until the space for the number you want to correct is flashing. Then enter the correct number.

## Setting the Clock (cont'd) 13


4

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET MANUAL CLOCK**, then press the **F.FWD/▶** button.

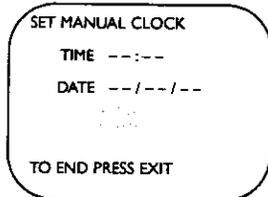


5

Press two **Number** buttons for the hour(s) and two **Number** buttons for the minute(s). Then press **1** for **AM** or **2** for **PM**. For example, for 9:30 PM, press 09, 30, 2.

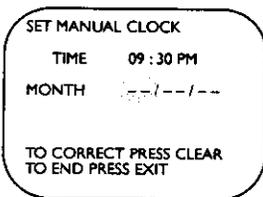

6


Press two **Number** buttons for the month, two **Number** buttons for the day, and two **Number** buttons for the year. For example, for July 1, 1999, press 07, 01, 99. The day of the week will appear automatically.

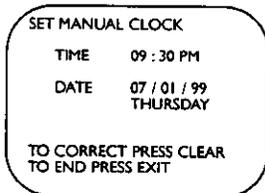

7

Press the **STATUS/EXIT** button.

5-6

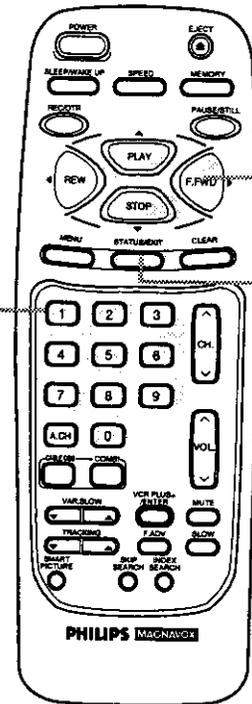

### Helpful Hint


- This VCR is ready for the year 2000 and the years beyond. To set a date in the year 2000, enter 00 for the year in step 6.

# 14 Setting the Clock (cont'd)

## Automatic PBS Channel Selection


1

Press the **COMBI** button, then press the **MENU** button.

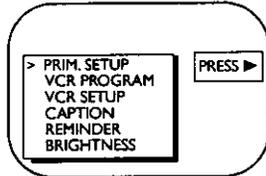


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

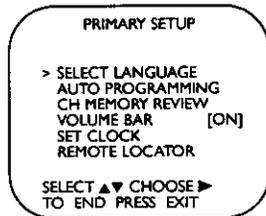



3

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**. Then, press the **F.FWD/▶** button.

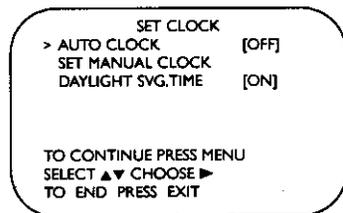

4

If **ON** appears beside **AUTO CLOCK**, press the **MENU** button. If **OFF** appears beside **AUTO CLOCK**, press the **F.FWD/▶** button so that **ON** appears to the right of **AUTO CLOCK**, then press the **MENU** button.

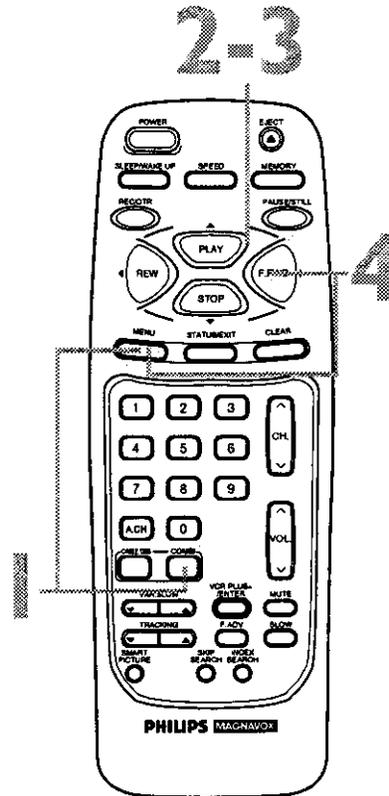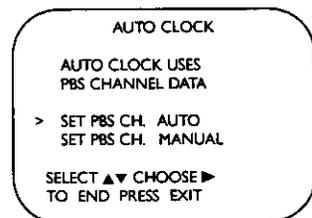




## Setting the Clock (cont'd) 15

5

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET PBS CH.AUTO**. Then, press the **F.FWD/▶** button.

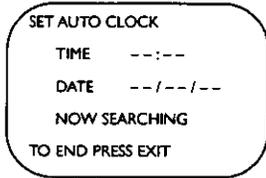


6


**NOW SEARCHING** flashes on the TV/VCR screen. However, you may see the message: "PLEASE TURN OFF TO SET AUTO CLOCK. PLEASE WAIT SEVERAL MINUTES." If this message appears, turn off the TV/VCR for several minutes. When you turn on the TV/VCR, the time will be set. If the time is not set, repeat steps 1-5. Or, follow the steps on pages 12-13 to set the clock manually or pages 16-17 to set the clock with Manual PBS Channel Selection.

7

When the TV/VCR finds the PBS channel, the time will appear on the screen. Press the **STATUS/EXIT** button.

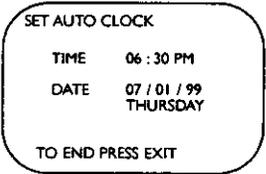


❖ If **CANNOT FIND CLOCK DATA** flashes on the TV/VCR screen, you will be prompted to turn off the TV/VCR. Turn off the TV/VCR. Leave it off for several minutes. When you turn on the TV/VCR again, the clock will be set.

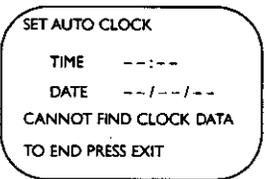

6

Wait for the TV/VCR to find the time.

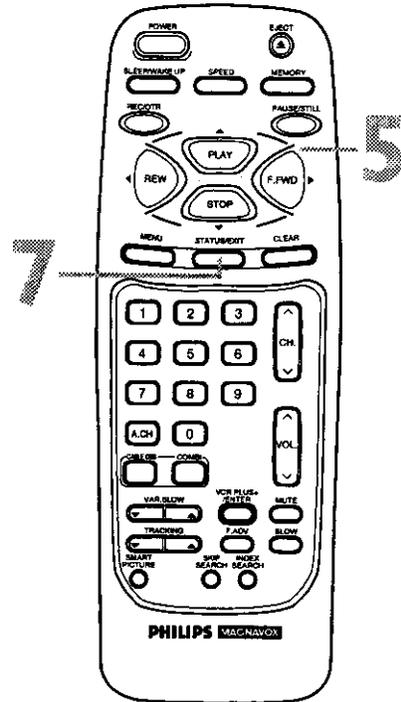

7

5


### Helpful Hints

- To display the time on the TV/VCR screen, press the **STATUS/EXIT** button. Details are on page 28.
- You cannot use the **AUTO CLOCK** feature if you don't receive a PBS channel that carries a time signal in your area. Set the clock manually.


## 16 Setting the Clock (cont'd)

### Manual PBS Channel Selection


1 Press the **COMBI** button, then press the **MENU** button.

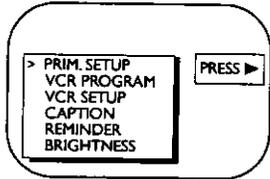



2 Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

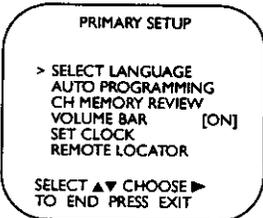

3 Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**. Then, press the **F.FWD/▶** button.

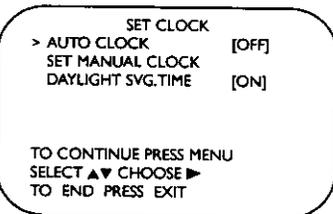


4 If **ON** appears beside **AUTO CLOCK**, press the **MENU** button. If **OFF** appears beside **AUTO CLOCK**, press the **F.FWD/▶** button so that **ON** appears to the right of **AUTO CLOCK**, then press the **MENU** button.

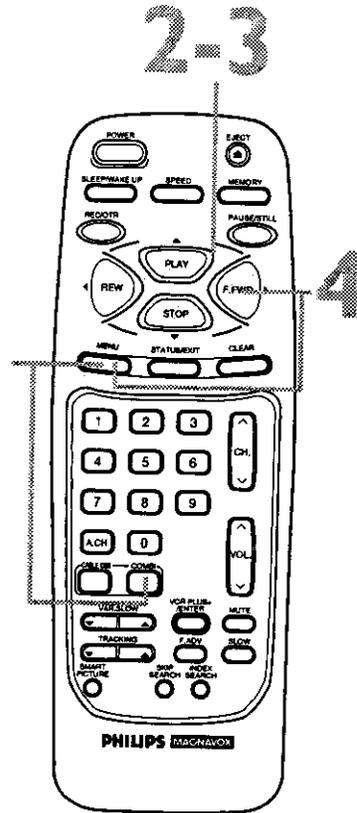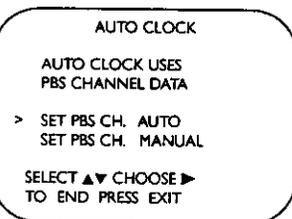

## Setting the Clock (cont'd) 17


5

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET PBS CH. MANUAL**. Then, press the **F.FWD/▶** button. The default channel (02) flashes.

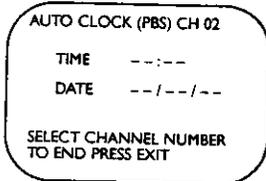

6

Use the Number buttons to select your PBS station.

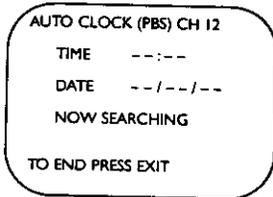


7

NOW SEARCHING flashes on the TV/VCR screen.


8

When the TV/VCR finds the clock data, the time will appear on the screen. Press the **STATUS/EXIT** button.

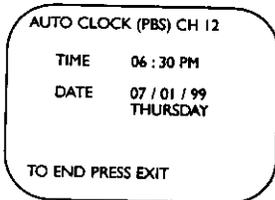

- If **CANNOT FIND CLOCK DATA** flashes on the TV/VCR screen and you know another PBS channel, press the **PLAY/▲** button or the **STOP/▼** button to choose **SELECT NEW PBS CH.** Then, press the **F.FWD/▶** button. Repeat step 6.
- If **CANNOT FIND CLOCK DATA** flashes on the TV/VCR screen and you do not know another channel, press the **PLAY/▲** button or the **STOP/▼** button to select **SET PBS CH. AUTO.** Then, press the **F.FWD/▶** button. The TV/VCR will search for the PBS channel automatically.
  - If the PBS channel is found, the time will appear on the screen.
  - If the PBS channel is not found, you will be prompted to turn off the TV/VCR. Leave it off for several minutes. When you turn on the TV/VCR again, the time will be set.

7 Wait for the TV/VCR to find the time.

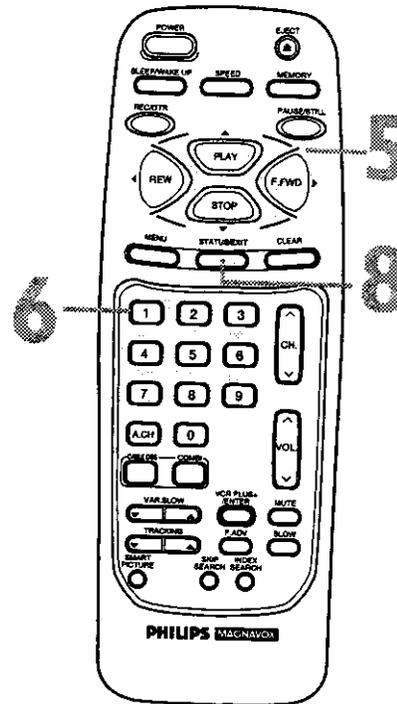

### Helpful Hints


- If you have an Antenna hookup, you may select channels 2-69 at step 6. If you have a cable connection, you may select channels 1-125 at step 6. Details about available memo-rized channels are on page 11.
- To display the time on the TV/VCR screen, press the **STATUS/EXIT** button. Details are on page 28.

## 18 Daylight-Savings Time

When the Daylight-Savings Time feature is ON, the TV/VCR clock will automatically move forward one hour on the first Sunday in April and move back one hour on the last Sunday in October. To turn Daylight-Savings Time ON or OFF, follow the steps below.


1

Press the **COMBI** button, then press the **MENU** button.

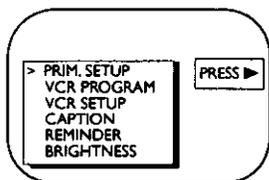


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

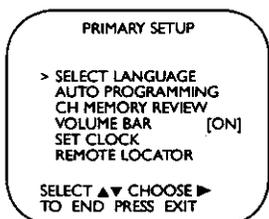

3

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**. Then, press the **F.FWD/▶** button.

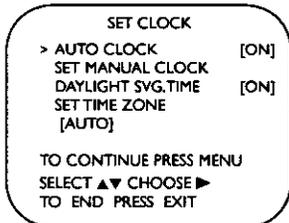


4

Press the **PLAY/▲** button or the **STOP/▼** button to select **DAYLIGHT SVG.TIME**. Then, press the **F.FWD/▶** button so that **ON** or **OFF** appears beside **DAYLIGHT SVG.TIME** (Daylight Savings Time).

5


Press the **STATUS/EXIT** button.

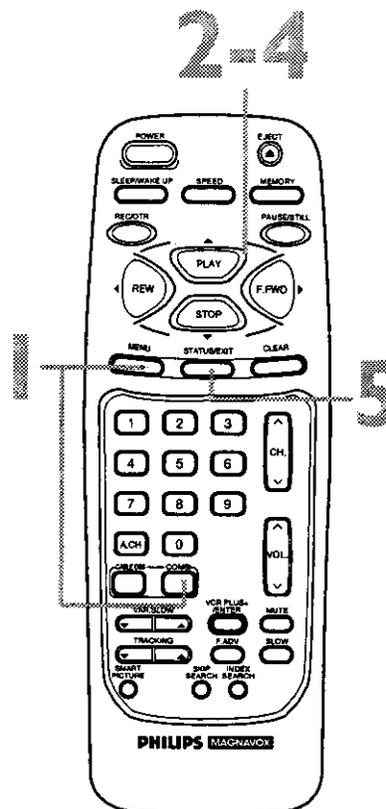


## Time Zone 19

When you set the clock using **AUTO CLOCK**, specify your time zone.  
 The TV/VCR will maintain the clock according to your time zone.


**1** Press the **COMBI** button, then press the **MENU** button.

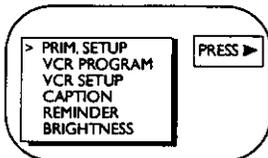

**2** Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

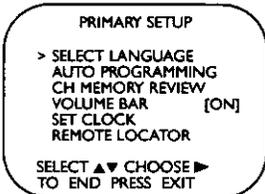

**3** Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**. Then, press the **F.FWD/▶** button.

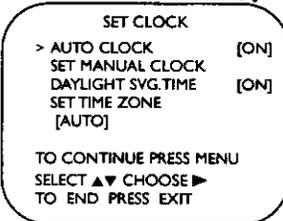


**4** Press the **PLAY/▲** button or the **STOP/▼** button to select **SET TIME ZONE**. Then, press the **F.FWD/▶** button.



**5** Press the **PLAY/▲** button or the **STOP/▼** button to select your time zone.

**6** Press the **MENU** button, then press the **STATUS/EXIT** button.

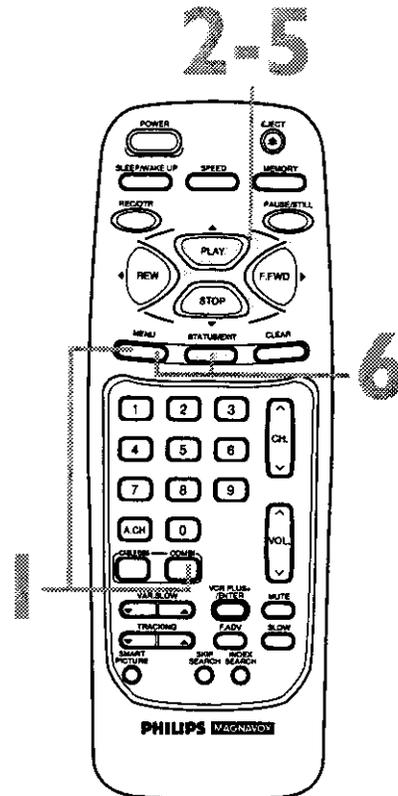

### Helpful Hints

- If you select **AUTO** at step 5, the TV/VCR will set the clock according to the time zone data of the PBS station it finds.
- You cannot select **SET TIME ZONE** at step 4 if **AUTO CLOCK** is set to **OFF**.

## 20 Setting the Remote to Operate a Cable Box/DBS

Your TV/VCR remote control **may** operate your Cable Box/DBS. If the remote control doesn't operate your Cable Box/DBS now, follow the steps below to program your remote control.

**1**

Turn on your Cable Box/DBS. Point the remote control at your Cable Box/DBS and **press the CABLE/DBS button. Then, press the POWER button.** If your Cable Box/DBS turns off, try the other Cable Box/DBS buttons (see pages 24- 25 for details). If your Cable Box/DBS doesn't turn off, or if the other buttons don't work, go to step 2.

**2**

Find the brand of your Cable Box/DBS on the lists below and remember the two-digit number beside it.

| CABLE BOX CODES             |                          |                          |
|-----------------------------|--------------------------|--------------------------|
| ARCHER.....01, 05, 06, 44   | MAGNAVOX.....26          | SAMSUNG.....05, 06,      |
| CABLETENNA.....01, 44       | MATSUSHITA               | 40, 42                   |
| CABLEVIEW.....04, 30,       | .....16, 17, 97          | SCIENTIFIC ATLANTA       |
| 42, 44, 52                  | MOVIE TIME.....42, 44    | .....08, 09              |
| CENTURY.....44              | NOVAVISION.....08, 09    | SIGNAL.....26            |
| CITIZEN.....04, 30,         | NSC/NEC.....40           | SL MARX.....06, 40, 42,  |
| 42, 44, 52                  | OAK.....11, 46           | 44, 52                   |
| CURTIS.....08, 09           | OAK SIGMA.....11, 46     | SPRUCER.....16, 17, 97   |
| DIAMOND.....01, 44          | PANASONIC.....16, 17, 97 | STANDARD COMPONENTS      |
| EAGLE.....26, 40, 62        | PHILIPS.....07, 23, 50   | .....42, 44              |
| EASTERN/REGENCY             | PIONEER.....05, 06       | STARGATE.....04, 06, 30, |
| .....28                     | PULSAR.....04, 30, 42,   | 40, 42, 44, 52           |
| GC BRAND.....04, 30,        | 44, 52                   | TELEVIEW.....06, 40, 42  |
| 42, 44, 52                  | QUEST.....05, 06         | TOCOM.....01, 33, 34, 42 |
| GEMINI/JASCO.....04         | RCA.....16, 17, 97       | UNIKA.....01, 44         |
| GENERAL ELECTRIC            | REALISTIC.....44         | UNIVERSAL.....42, 44, 52 |
| .....01, 57                 | RECOTON.....44           | VIDEOWAY.....07, 23, 50  |
| GENERAL INSTRUMENT          | REGAL.....14, 15, 28, 41 | VIEWSTAR.....26, 40, 62  |
| .....01, 02, 03, 04, 34, 83 | REMBRANDT                | ZENITH.....07, 23, 50    |
| HAMLIN.....14, 15, 28, 41   | .....01, 42, 44          |                          |
| JERROLD.....01, 02, 03,     |                          |                          |
| 04, 34, 83                  |                          |                          |

| DIRECT BROADCAST SYSTEM CODES |            |             |
|-------------------------------|------------|-------------|
| MAGNAVOX.....94,95            | RCA.....97 | SONY.....98 |


**3**

Press the **MUTE** button.

**4**

Within 30 seconds, press the **CABLE/DBS** button.

**2** Find your code.

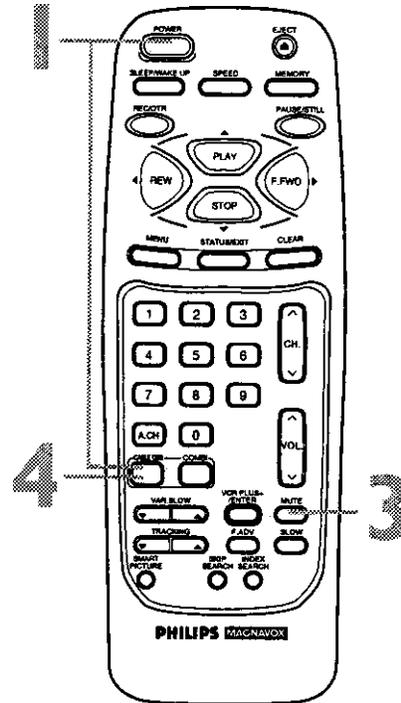


## Setting the Remote to Operate a Cable Box/DBS (cont'd) 21

5

Within 30 seconds, press the **Number** buttons to enter the two-digit code for your **Cable Box/DBS**. For example, if you have a Zenith Cable Box, press **Number** buttons 2, 3.

6

**Repeat step 1.** If the remote control works your **Cable Box/DBS**, you're finished. If the remote control still doesn't work your **Cable Box/DBS**, repeat steps 2-5, using a different code for your brand, if available.

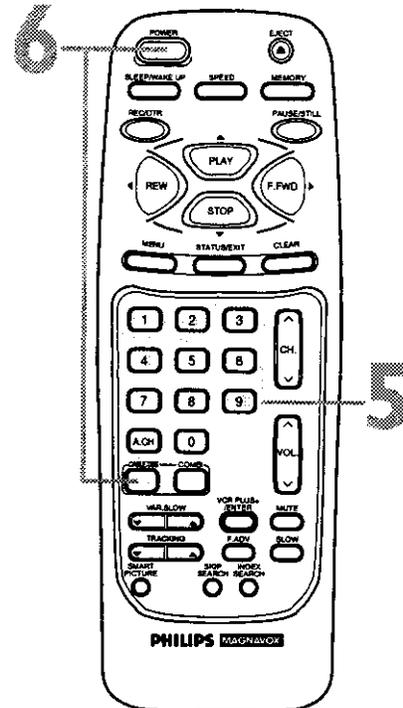

**There is no guarantee that the remote control will work your Cable Box or DBS.**

### Helpful Hints

- Although the remote control that comes with your TV/VCR will work most Cable Boxes and DBSs, it is possible that the remote control will not operate your Cable Box or DBS.
- The remote control may only operate some features of your Cable Box or DBS. For example, some Cable Boxes may only be turned on at the Cable Box, therefore the remote control will not be able to turn on the Cable Box.
- If you can not change the channels at the Cable Box by using the **Number** buttons, press the **CABLE/DBS** button before you press the **Number** buttons. It may change channels at the Cable Box.
- If you had to program the remote control to operate your Cable Box or DBS here, whenever you replace the batteries in the remote control, you will have to program the remote control again.

## 22 Front Panel

### Cassette Compartment

Insert a video cassette tape here.

### Wireless Remote Sensor

Receives a signal from your remote control so you can operate the TV/VCR from a distance.

### STOP/EJECT Button

Press once to stop the tape. When playback is stopped, press to eject the tape. Press to select an item in the menu.

### VIDEO Jack

Connect this jack to the video out jack of a camcorder or a VCR. Details are on page 32.

### AUDIO Jack

Connect this jack to the audio out jack of a camcorder or a VCR. Details are on page 32.

### EARPHONE Jack

Connect earphones (not supplied) here for personal listening.

### REW(ind) Button

When tape playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stays on the screen. Press to change a setting of a pop up menu item (for example, to adjust the BRIGHTNESS). Press to return to a previous menu.

### PLAY Button

Press to play a tape. Details are on page 29. Press to release Slow, Search or Still mode and return to normal playback. Details are on page 46. Press to select an item in the menu.

### F.FWD Button


When tape playback is stopped, press to fast forward the tape at high speed. During playback, press to fast forward the tape while the picture stays on the screen. Press to change a setting of a menu item (for example, to adjust the BRIGHTNESS).

### REC(ord)/OTR Button

Press once to start a recording. Details are on page 30. Press repeatedly to start a One-Touch Recording (an immediate timed recording, 30 minutes to eight hours long) of the channel you are watching. Details are on page 31.

### RECORD Light

This light appears during a recording. It flashes slowly when the TV/VCR power is turned off to set a timer recording. It blinks rapidly when a recording is paused or when the power is off for a timer recording, but there is no tape in the TV/VCR.

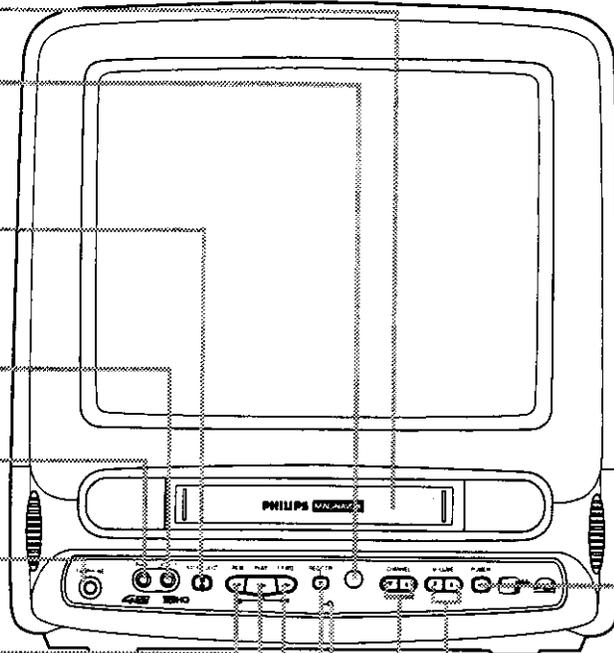

### VOLUME ▲/▼ Buttons

Press to adjust the sound level. Press the CHANNEL ▲ button and the VOLUME ▼ button on the TV/VCR at the same time to display the pop up menu. Press again to remove the pop up menu.


### CHANNEL ▲/▼ Buttons

Press to scan through the TV/VCR channels. During tape playback, press to adjust the tracking. Details are on page 57. Press the CHANNEL ▲ button and the VOLUME ▼ button on the TV/VCR at the same time to display the pop up menu. Press again to remove the pop up menu.

### POWER Button

Press to turn the power on or off. Press to activate the Remote Locator. Details are on page 59.

## Rear Panel 23

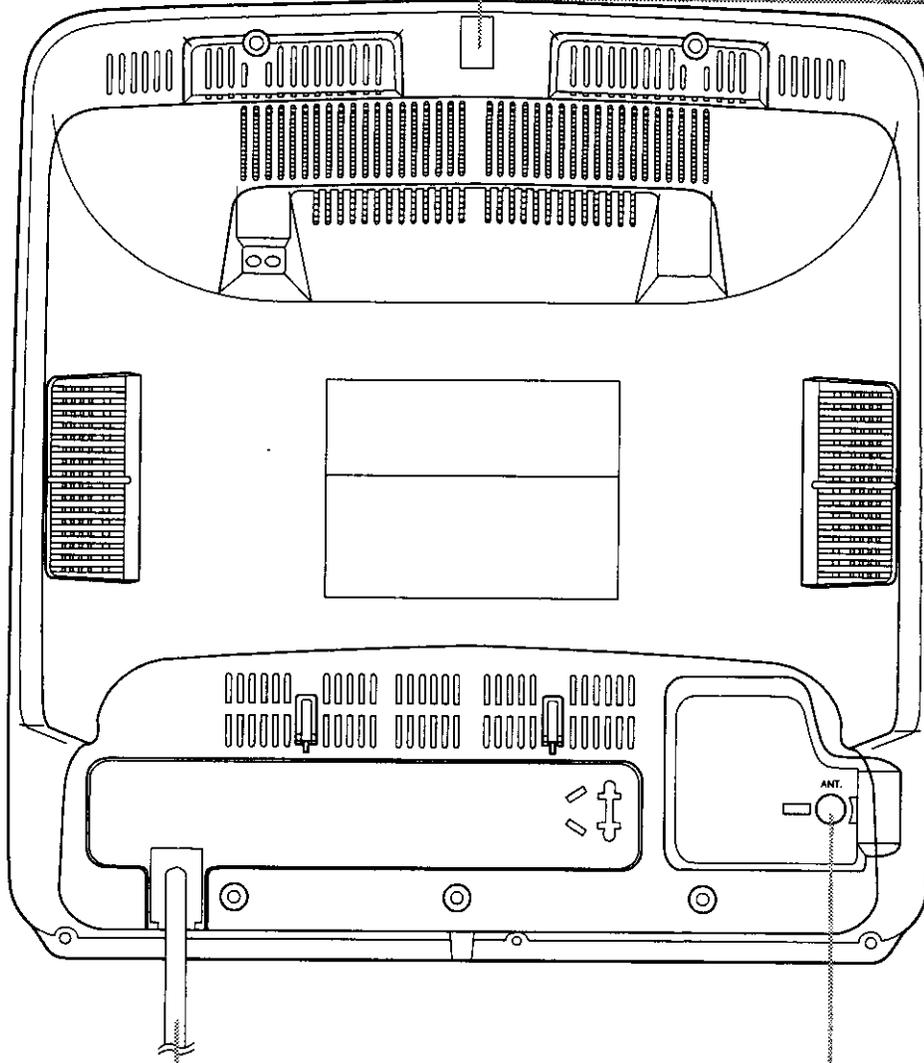

### AC Power Cord

Connect to a standard AC outlet to supply power to the TV/VCR.

### ANT(enna) Jack

Connect your antenna or cable here. Details are on page six.

### Antenna Hole

Connect the stem of an indoor antenna here. Details are on page six.

## 24 Remote Control Buttons

### EJECT Button

Press to eject the tape.

### SPEED Button

Press to select the recording speed (SP or SLP).

### POWER Button

Press to turn on or off the TV/VCR, Cable Box, or Direct Broadcast System. (You must first press the COMBI or CABLE/DBS button.) *Details are on pages five and 20-21.*

### SLEEP/WAKE UP Button

Press to set the Sleep Timer. *Details are on page 52.* Press to set the Wake Up Timer. *Details are on page 53.*

### PLAY/▲ Button

Press to play a tape. *Details are on page 29.* Press to release Slow, Search or Still mode and return to normal playback. *Details are on page 46.* Press to select an item in the menu.

### MENU Button

Press to display the pop up menu. You also may use the buttons on the front panel of the TV/VCR to access the pop up menu. *Details are on page 22.*

### Number Buttons

Use to select channels and to program TV/VCR functions (such as setting the clock).

#### ◆ Cable Users

Enter channel numbers as a two-digit number for the quickest results. For example, to select channel 6, press 0,6. If you only press the Number 6 button, channel 6 will be selected after a brief delay. (There also may be a brief delay when you select channels 10, 11, and 12.) If you want to select channels 100 and above, enter channel numbers as a three-digit number. For example, to select channel 117, press 1, 1, 7.

#### ◆ Antenna Users

Enter channel numbers as a two-digit number for the quickest results. For example, to select channel 5, press 0,5. If you only press the Number 5 button, channel 5 will be selected after a brief delay. You may only select channels 2-69.

### A.CH (Alternate Channel) Button

Press to return to the TV channel you were viewing immediately before switching to your current channel.

### SMART PICTURE Button

Press repeatedly to select a Smart Picture mode. *Details are on page 58.*

### TRACKING ▲/▼ Button

Press during tape playback to adjust the tracking. *Details are on page 57.*

### SKIP SEARCH Button


Press during playback to fast forward past 30 seconds of the tape. Press up to six times in a row to skip up to three minutes of the tape.

### F(rame).ADV(ance) Button

Press when in Still mode to advance the picture one frame at a time. *Details are on page 46.*

### INDEX SEARCH Button

Press to fast forward or rewind to the starting points of programs that you have recorded on a tape. *Details are on page 61.*

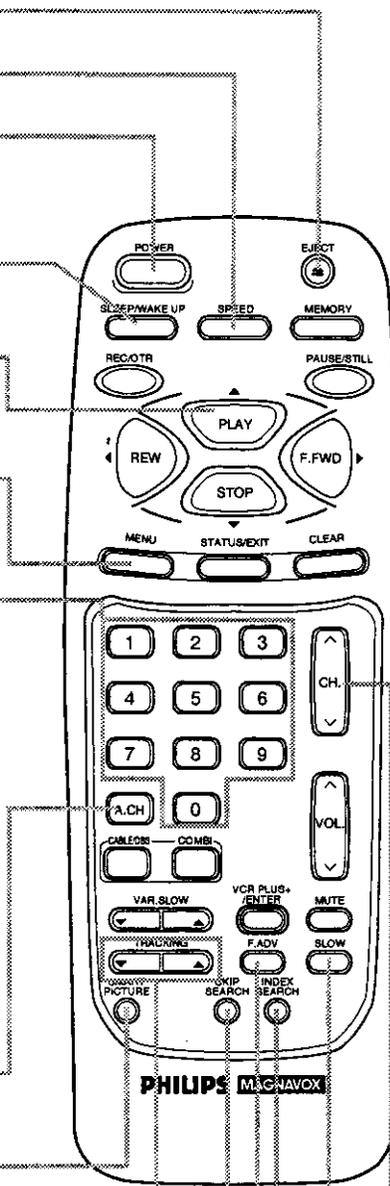

### SLOW Button

During tape playback, press to view the picture in slow motion. *Details are on page 46.*

### CH(annel) ▲/▼ Button

Press to scan through the channels at the Cable Box/DBS.

## Remote Control Buttons (cont'd) 25

### PAUSE/STILL Button

During recording, press to temporarily stop the recording. Press again to resume recording. *Details are on page 30.* You cannot pause a One-Touch Recording.

During tape playback, press to freeze the picture (still). *Details are on page 46.*

### MEMORY Button

Press to memorize a tape position at which the real-time counter was set to 0:00:00. *Details are on page 42.* Or, press to memorize the start and end positions on a tape when setting up A-B Repeat Play. *Details are on pages 44-45.*

### REC(ord)/OTR Button

Press once to start a recording. *Details are on page 30.* Or, press repeatedly to start a One-Touch Recording (an immediate timed recording, 30 minutes to eight hours long) of the channel you are watching. *Details are on page 31.*

### REW(ind)/◀ Button

When tape playback is stopped, press to rewind the tape at high speed. During tape playback, press to rewind the tape while the picture stays on the screen. *Details are on page 46.*

Press to change a setting of a menu item or to return to a previous menu.

### STATUS/EXIT Button

Press to see the status display. Press again to remove the status display. *Details are on page 28.* Press to remove the menu.

### CLEAR Button

Press to erase incorrect data when programming TV/VCR functions. Also, press to reset the real-time counter to 0:00:00. *Details are on page 42.*

### CABLE/DBS Button

Press to operate the Cable Box or Direct Broadcast System.

### VAR(iable). SLOW Button

During slow motion tape playback, press to vary the playback speed from 1/6 to 1/30 of normal speed. *Details are on page 46.*

### COMBI Button

Press to operate the TV/VCR.

### VCR PLUS+/ENTER Button

Press to set a timer recording with the VCR Plus+ programming system. *Details are on pages 38-41.*

### MUTE Button

Press to eliminate the TV/VCR's sound. Press again to return to the previous volume level.

### VOL(ume) ▲/▼ Button

Press to adjust the sound level. If you press the VOL(ume) ▲/▼ button when the sound is muted, the sound will be restored.


### STOP/▼ Button

Press to stop the tape. Press to select an item in the menu.

### F.FWD/▶ Button

When tape playback is stopped, press to fast forward the tape at high speed. During tape playback, press to fast forward the tape while the picture stays on the screen. *Details are on page 46.*

Press to change the setting of an item in the menu or press to proceed to the next menu.

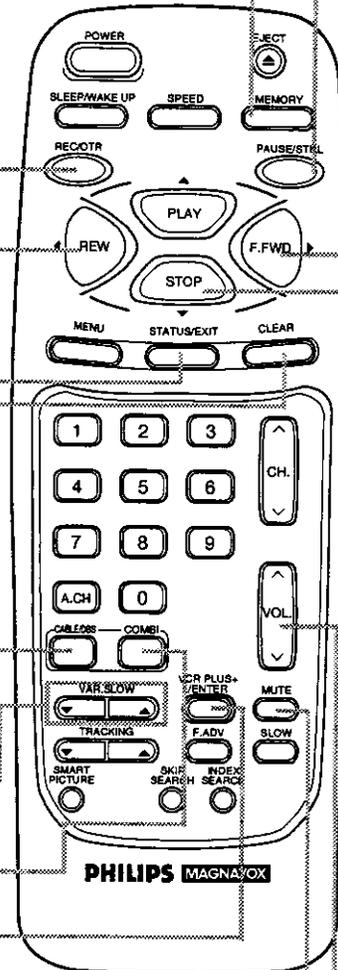


### Helpful Hints

- Press the COMBI button before pressing other TV/VCR buttons; press the CABLE/DBS button before pressing other Cable Box/DBS buttons.
- The buttons with a shaded description also may operate features of your Cable Box/DBS.

## 26 Adjusting the Picture Controls

Follow these steps to adjust the TV/VCR's brightness, picture, color, tint, and sharpness.


**1**  
Press the **COMBI** button, then press the **MENU** button.

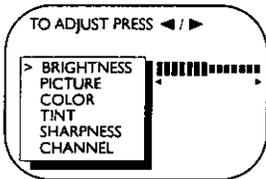

**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select the desired control (**BRIGHTNESS**, for example).

**3**  
Press the **REW(ind)/◀** button or the **F.FWD▶** button to adjust the picture control. (Refer to the chart on page 27.)

**4**  
When you finish, press the **STATUS/EXIT** button.

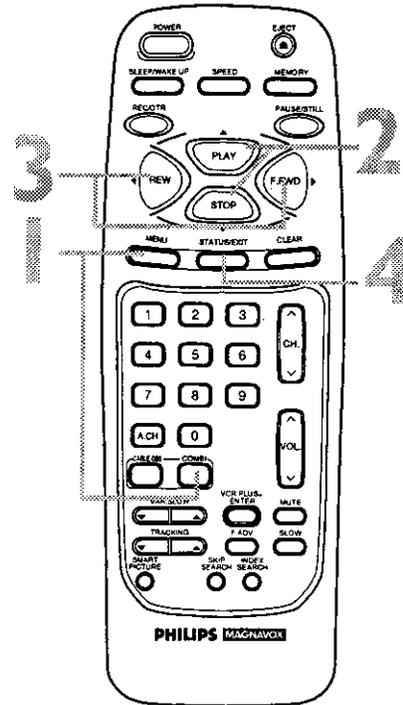



### Helpful Hints

- The on-screen menus shown on page 27 will disappear if no adjustments are made within 60 seconds.
- The original settings will probably give you the best picture quality. To set the picture controls to the original settings, see page 58.

## Adjusting the Picture Controls (cont'd) 27

|                   | Decrease             | Increase             |
|-------------------|----------------------|----------------------|
| <b>BRIGHTNESS</b> | decreased brightness | increased brightness |
| <b>PICTURE</b>    | decreased contrast   | increased contrast   |
| <b>COLOR</b>      | paler                | more brilliant       |
| <b>TINT</b>       | more purple          | more green           |
| <b>SHARPNESS</b>  | softer               | clearer              |

Press the REW(ind)/◀ button to decrease a picture control. Press the F.FWD/▶ button to increase a picture control.

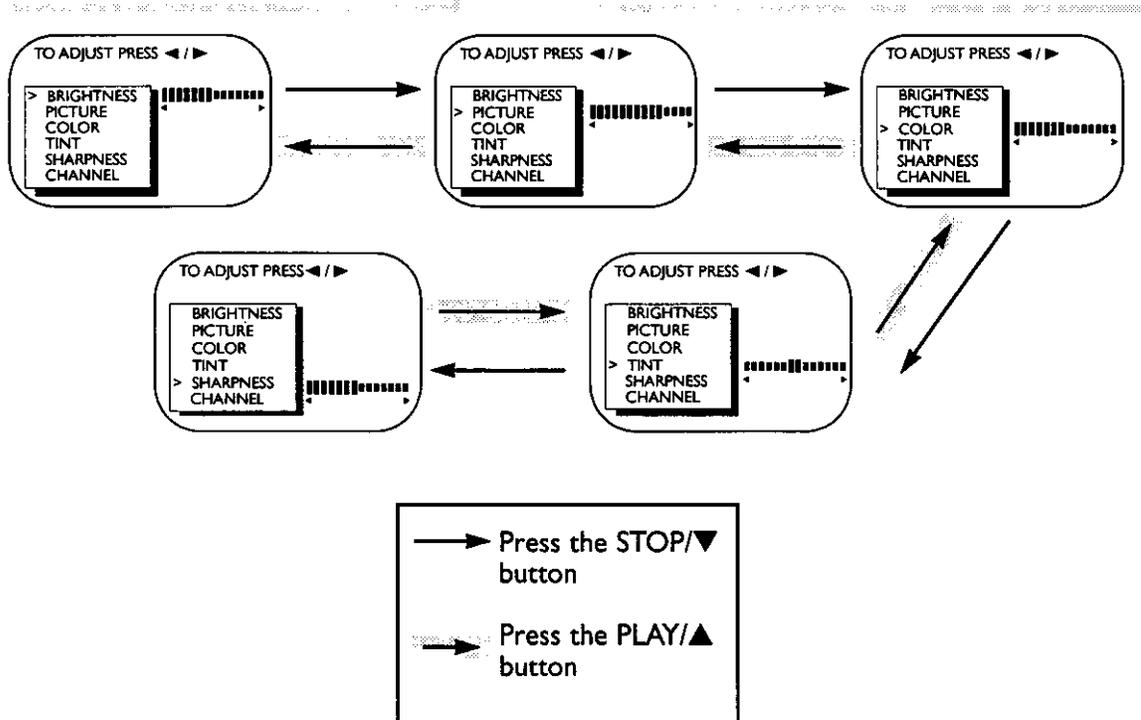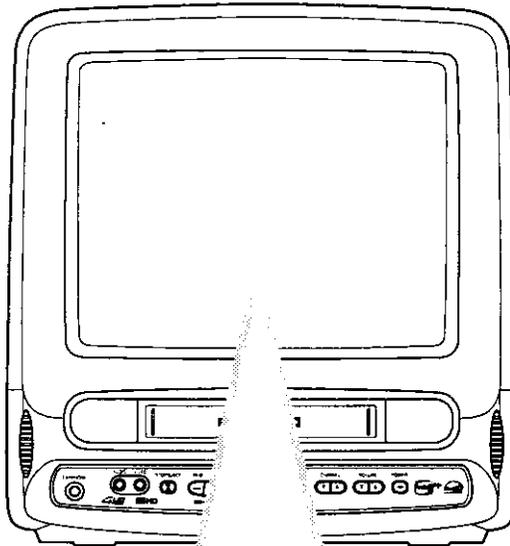

## 28 On-Screen Status Displays

A status display will appear when you press the STATUS/EXIT button or certain function buttons. The contents of the status display will vary. To choose the status display mode, follow the steps below.

If you select **STATUS ON**, then select **COUNTER ONLY OFF**:


- Whenever you press the STOP/▼ button or the PLAY/▲ button, the status display will appear for five seconds. Portions of the status display also may appear when you press other function buttons.

If you select **STATUS ON**, then select **COUNTER ONLY ON**:

- Whenever you press the PLAY/▲ button, the status display will appear for five seconds. After five seconds, only the counter will remain on the screen. Portions of the status display also may appear when you press other function buttons.

If you select **STATUS OFF**:

- The status display will not appear when you press function buttons. You must press the STATUS/EXIT button to see the status display.

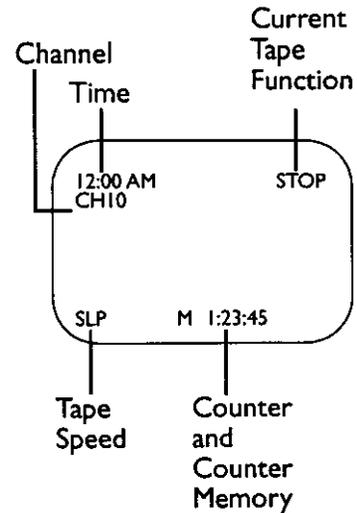

1

Press the **COMBI** button, then press the **MENU** button.

2


Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SETUP**, then press the **F.FWD/▶** button.

3

Press the **PLAY/▲** button or the **STOP/▼** button to select **ON-SCREEN MODE**, then press the **F.FWD/▶** button.

4

Press the **PLAY/▲** button or the **STOP/▼** button to select **STATUS**, then press the **F.FWD/▶** button so that **ON** or **OFF** appears beside **STATUS**.

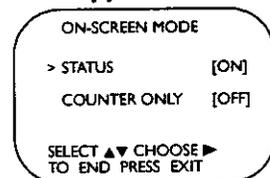

5

If you set **STATUS** to **OFF**, go to step 6. If you set **STATUS** to **ON**, press the **PLAY/▲** button or the **STOP/▼** button to select **COUNTER ONLY**, then press the **F.FWD/▶** button so that **ON** or **OFF** appears beside it.

6

Press the **STATUS/EXIT** button.

### Helpful Hint

- You cannot view closed captions during recording or tape playback if **COUNTER ONLY** is set to **ON**. Details are on pages 54-55.

## Playing 29

Follow the steps below to play a tape.

1

**Insert a tape in the TV/VCR.** The power will come on. If the tape's record tab has been removed, playback should start automatically.

2

**If playback does not start automatically, press the COMBI button, then press the PLAY/▲ button to start playback.**

3

**Press the STOP/▼ button to stop playback.**


4

**Press the REW(ind)/◀ button to rewind the tape.**

5

**Press the EJECT button to remove the tape.**

Insert a tape in the TV/VCR.

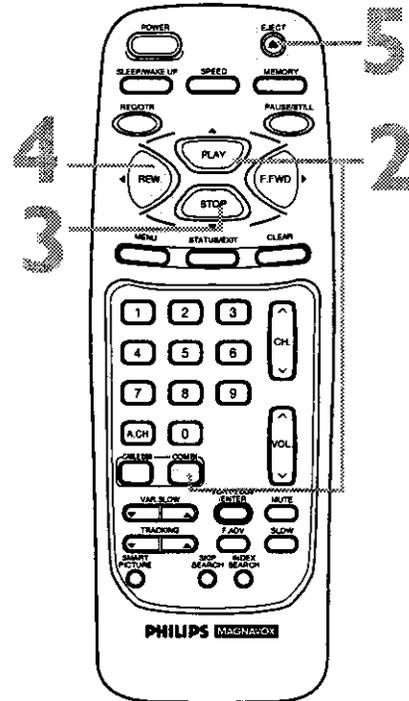

### Helpful Hints

- If the tape you want to play is already in the TV/VCR, turn on the TV/VCR power, then press the COMBI button, then press the PLAY/▲ button.
- Playback features and options are on pages 42-46.

## 30 Recording

Read and follow the steps below to record a TV program.

1

Press the **COMBI** button, then place a tape with its record tab intact (see page five) in the TV/VCR. The power will come on. Or, if the tape is already in the TV/VCR, press the **POWER** button to turn on the TV/VCR, if necessary.

2

Press the **SPEED** button until the desired tape speed appears on the TV/VCR screen. Details about tape speed are given below.

3

Use the **CH(annel)**  $\Delta/\nabla$  button or the **Number** buttons to select the channel to be recorded. (Channels cannot be changed during recording.)

4

Press the **REC(ord)/OTR** button once to start recording. The **RECORD** light will glow.

- If there is not a tape in the TV/VCR, **NO CASSETTE** flashes on the screen briefly.
- If the tape does not have a record tab, **PROTECTED CASSETTE CANNOT RECORD** flashes on the screen briefly. The TV/VCR will eject the tape. Insert another tape.

5

To pause the recording (for example, during commercials), press the **PAUSE/STILL** button. The **RECORD** light will flash. To resume recording, press the **PAUSE/STILL** button again or the **REC(ord)/OTR** button. The **RECORD** light will glow.


6

To stop recording, press the **STOP/▼** button.

### Tape Speeds

This chart shows the recording/playback time for three types of video cassettes (T160, T120, and T60). There are three playback speeds: SP, LP, and SLP. During playback, the VCR selects the tape speed automatically. When recording, you can change the tape speed using the **SPEED** button. You cannot record in LP speed.

| Tape Speed                       | Cassette type / Playback Time |        |        |
|----------------------------------|-------------------------------|--------|--------|
|                                  | T160                          | T120   | T60    |
| SP(Standard Play)                | 2 hrs.<br>40 mins.            | 2 hrs. | 1 hr.  |
| LP(Long Play)<br>(playback only) | 5 hrs.<br>20 mins.            | 4 hrs. | 2 hrs. |
| SLP(Super Long Play)             | 8 hrs.                        | 6 hrs. | 3 hrs. |

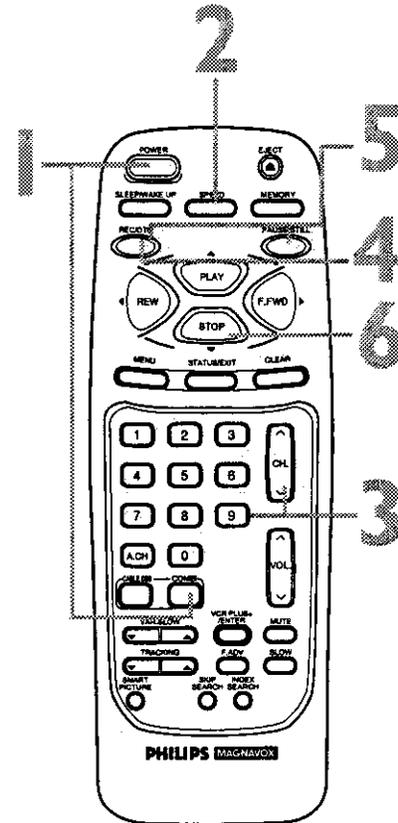

### Helpful Hints

- You cannot record one channel while watching another.
- Recording options are on pages 31-41.
- You cannot record if **DEFEAT RECORDING** is set to **ON**. (**REC DEFEATED** will flash on the screen.) Details are on page 33.
- If you pause a recording for more than five minutes, the TV/VCR will switch to Stop mode automatically to protect the video cassette tape from damage.
- You can change the tape speed with the **SPEED** button while a recording is in progress, but some distortion may appear on the tape.

## One-Touch Recording 31

The One-Touch Recording (OTR) function allows you to program an immediate timed recording from 30 minutes to eight hours long without setting the timer.


Before you begin, make sure:

- ◆ Channels are set up.
- ◆ There is a tape in the TV/VCR. The record tab must be intact.

**1** Press the **COMBI** button, then use the **CH(annel)**  $\Delta/V$  button or the **Number** buttons to select the channel you want to record.


**2** Press the **SPEED** button until the desired recording speed (**SP** or **SLP**) appears on the screen. *Details are on page 30.*

**3** Press the **REC(ord)/OTR** button repeatedly until the desired recording length appears in the upper right corner of the screen. Recording will begin immediately. The **RECORD** light will appear.

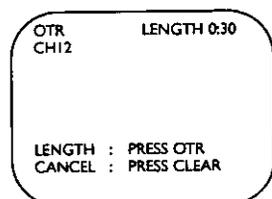

**4** To stop an **OTR** before recording is finished, press the **STOP/EJECT** button on the **TV/VCR**. Or, press the **REC(ord)/OTR** button, then press the **CLEAR** button, then press the **STOP/∇** button on the remote control.

**4** Press the **STOP/EJECT** button on the **TV/VCR** to stop the **OTR**.

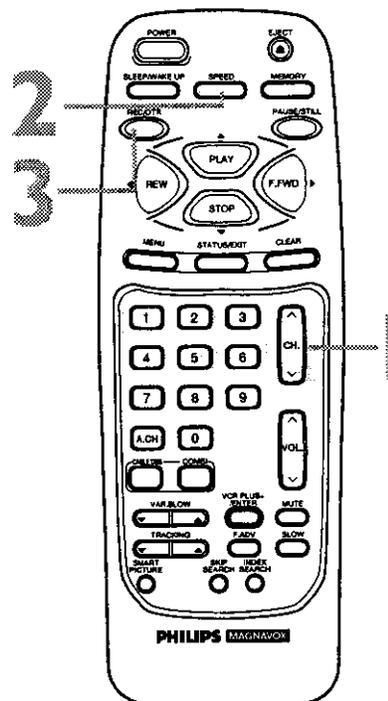


### Helpful Hints

- To check the time remaining for an OTR after the OTR has been set, press the **STATUS/EXIT** button.
- To change the recording length while an OTR is in progress, press the **REC(ord)/OTR** button until the desired recording length appears on the screen.
- You can not pause an OTR.
- To cancel an OTR but continue recording, press the **REC(ord)/OTR** button, then press the **CLEAR** button.
- You cannot record if **DEFEAT RECORDING** is set to **ON**. Details are on page 33.
- You can change the tape speed with the **SPEED** button while a recording is in progress, but some distortion may appear on the tape.
- If the end of the tape is reached during an OTR, the **VCR** will eject the tape and turn itself off.

## 32 Rerecording (Tape Duplication)

AUDIO and VIDEO OUT Jacks on source unit  
(VCR or Camcorder)

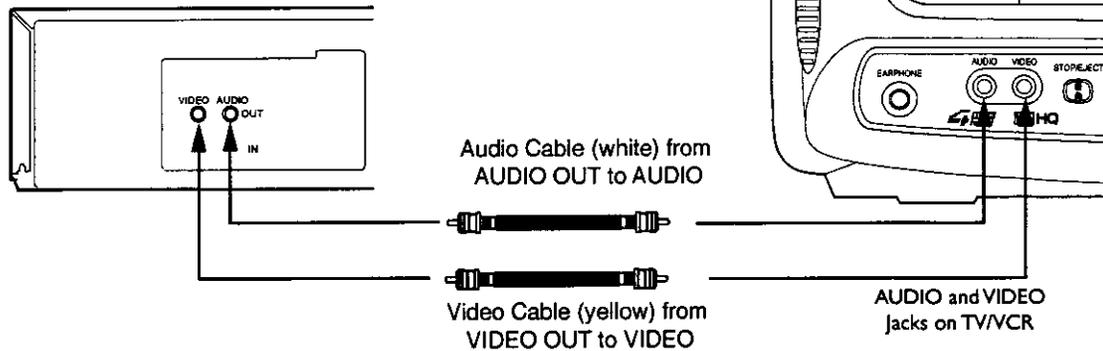

1

Make the connections shown above, using audio and video cables. (Make sure the source unit is connected to a power source.)

2

The source unit (VCR or camcorder) will play your tape. Insert a prerecorded tape in the source unit. If playback begins, press the STOP button on the unit.

3

The TV/VCR will record your tape. Insert a blank tape in the TV/VCR. Make sure the tape's record tab is intact. The TV/VCR power will turn on automatically.

4

Point the TV/VCR remote control at the TV/VCR. Press the COMBI button, then press Number buttons 0, 0 so that A/V IN appears on the screen.

5

Point the TV/VCR remote control at the TV/VCR. Press the SPEED button until the desired tape speed (SP or SLP) appears on the screen.

6

Press the PLAY button on the source unit and the REC(ord)/OTR button on your TV/VCR at the same time. Copying will begin.

7

To stop copying, press the STOP/EJECT button on the TV/VCR, then stop the tape on the source unit (VCR or camcorder).


### Helpful Hints

- Unauthorized recording of copyrighted television programs, video tapes, or other materials may infringe on the rights of copyright owners and violate copyright laws.
- Different brands of equipment may operate differently.
- Make sure all connections are secure. Otherwise, you may not record both picture and sound.
- Audio and video cables are not included.


## Defeat Recording 33

Follow the steps below to prevent accidental recording.


**1**  
Press the **COMBI** button, then press the **MENU** button.

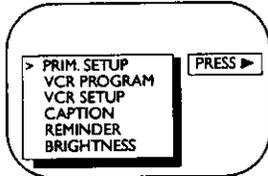

**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SETUP**, then press the **F.FWD/▶** button.


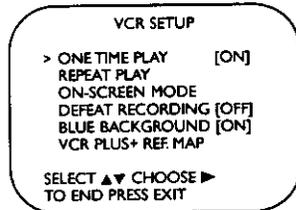


**3**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **DEFEAT RECORDING**, then press the **F.FWD/▶** button so that **ON** appears beside **DEFEAT RECORDING**.

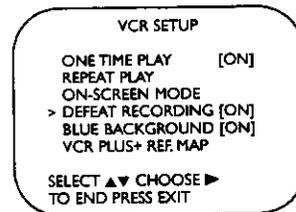

**4**  
Press the **STATUS/EXIT** button.

**5**  
Now, **REC DEFEATED** will flash on the screen when you press the **REC(ord)/OTR** button.

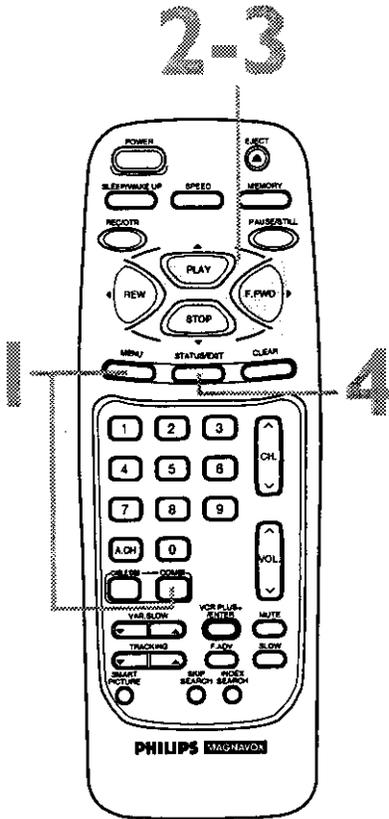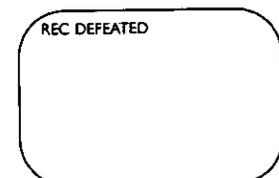

### Helpful Hints

- You can not set **DEFEAT RECORDING** to **ON** while a recording is in progress.
- If you set **DEFEAT RECORDING** to **ON** after a timer recording has been set, the timer recording will not occur.
- You can not program a timer recording if **DEFEAT RECORDING** is set to **ON**.
- To set **DEFEAT RECORDING** to **OFF**, repeat steps 1-2 above. At step 3, press the **PLAY/▲** button or the **STOP/▼** button to select **DEFEAT RECORDING**, then press the **F.FWD/▶** button so that **OFF** appears beside **DEFEAT RECORDING**. Press the **STATUS/EXIT** button.


## 34 Timer Recording

Follow the steps below to program the TV/VCR to record TV programs while you're away from home. The TV/VCR will turn itself on, record, and turn itself off automatically. Before you begin, make sure:


- The clock is set. If not, **CLOCK MUST BE SET** appears, followed by the **SET CLOCK** menu.
- Channels are set up.
- There is a tape in the TV/VCR. (Make sure the tape's record tab is intact and the tape is long enough to record the program.)

**Complete each step within 60 seconds of completing the previous step. If you don't, you may start again at step 1.**

**1** Press the **COMBI** button, then press the **MENU** button.

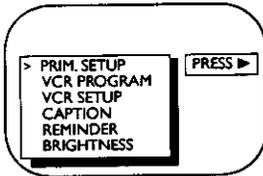



**2** Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR PROGRAM**, then press the **F.FWD/▶** button.

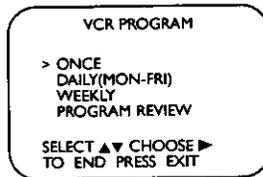

**3** Press the **PLAY/▲** button or the **STOP/▼** button to select a **ONCE, DAILY, OR WEEKLY** recording. Then, press the **F.FWD/▶** button.

- **ONCE:** The TV/VCR will record a TV program on any day you choose, up to 12 months away.
- **DAILY:** The TV/VCR will record every day from Monday to Friday – starting at the same time and recording the same channel for the same length of time.
- **WEEKLY:** The TV/VCR will record the same channel on the same day, at the same time, and for the same length of time every week.

**Daily Recording (example)**

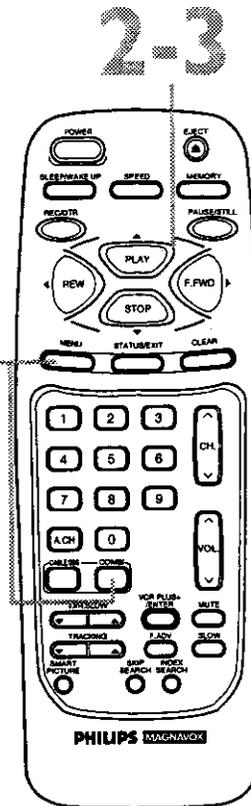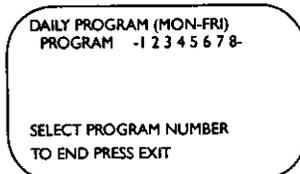

### Helpful Hints

- If the power fails, programmed timer recordings will be restored when the clock is reset. (The clock will reset itself automatically if you are using the **AUTO CLOCK** feature. Details are on pages 14-17. If you are not using the **AUTO CLOCK** feature, reset the clock manually. Details are on pages 12-13.) The timer recording will not occur only if the timer recording was scheduled to take place during the power failure.
- You cannot set a timer recording if **DEFEAT RECORDING** is set to **ON**. Details are on page 33.

## Timer Recording (cont'd) 35

# 4


Use the **Number buttons (1-8)** to select a position in which to store the timer recording. Flashing numbers indicate an open position (one in which a timer recording has not been stored yet).

**NOTE:** If you select a number that already has been used to store a timer recording, **PREVIOUSLY SET PROGRAM** will appear on the screen for a few seconds. Then information about the program in that position will appear on the screen. If this happens, press the **STATUS/EXIT** button. Then use the Number buttons to select another position.

# 5


Use the **Number buttons** to enter the channel of the TV program you want to record.

- If you are recording from line input, press 0, 0. A/V IN will appear on the screen.
- If you are recording using a Cable Box, enter the Cable Box output channel (03 or 04). Be sure to select the channel of the TV program at the Cable Box and leave the Cable Box on for the timer recording.

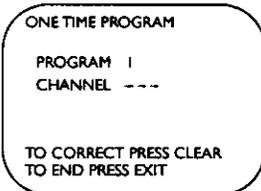


# 6

Press two **Number buttons** for the hour(s) you want the recording to begin. Press two **Number buttons** for the minute(s) you want the recording to begin. Press **1** for **AM** or **2** for **PM**. For example, for 9:30 PM, press 09, 30, 2.

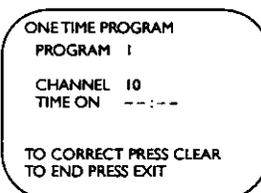


# 7

Follow the instructions in step 6 to set the recording's **stop time**. (AM or PM will be set automatically.)

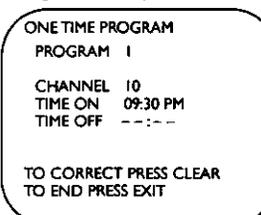

**Instructions continue on page 36.**

# 4-7

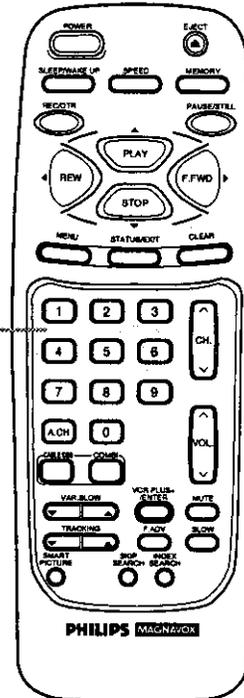

### Helpful Hints

- If the numbers entered do not match the TV/VCR's calendar, the entry will be rejected and a question mark will appear on the screen.
- To make corrections while you are programming a timer recording, press the **CLEAR** button until the cursor is flashing on the item you want to change. Then enter the correct information.

## 36 Timer Recording (cont'd)


8

Press the **Number 1** button to record in **SP** speed or press the **Number 2** button to record in **SLP** speed. Details about tape speed are on page 30. You cannot use the **SPEED** button at this time.



9

Press two **Number** buttons for the month and two **Number** buttons for the day you want the program to record. For example, for July 10, 1999, press 07, 10. The day of the week and the year will be displayed automatically. (You cannot program the TV/VCR to record more than one year in advance.)

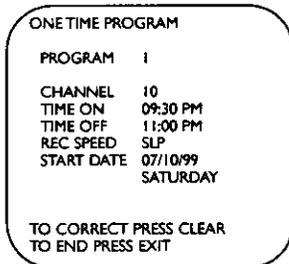


10

Press the **STATUS/EXIT** button. PROGRAM WAS COMPLETED PLEASE TURN OFF FOR TIMER RECORDING will appear on the screen.

- If there is not a tape in the TV/VCR, PLEASE INSERT CASSETTE also appears on the screen.
- If there is a tape without a record tab in the TV/VCR, PLEASE REMOVE CASSETTE also appears on the screen. If this happens, insert a different tape.
- If PROGRAM NOT COMPLETED appears, start again at step 1.

11

Press the **POWER** button to turn off the TV/VCR power. The **RECORD** light will flash slowly if a tape is in the TV/VCR. If you forget to turn off the TV/VCR, PLEASE TURN OFF FOR TIMER RECORDING appears on the TV/VCR screen two minutes before a timer recording starts.

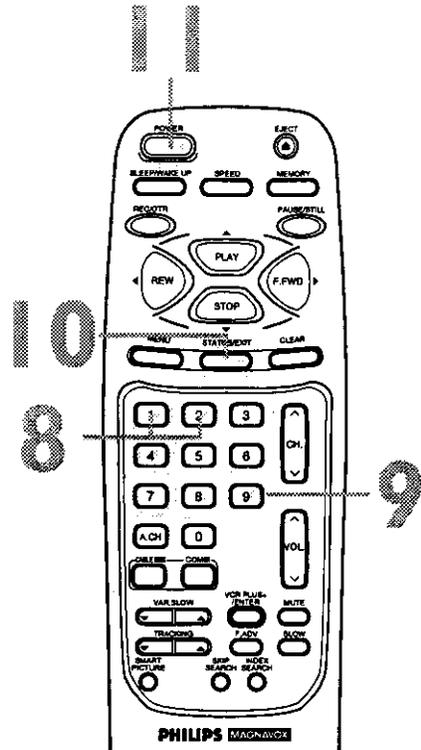

**Turn off the TV/VCR for the recording. Insert a tape in the TV/VCR. Leave the Cable Box/DBS on (if applicable).**

### Helpful Hints

- PROGRAM NOT COMPLETED CLASH may appear on the screen when you finish setting a timer recording. This means that the timer recording you just programmed and another timer recording overlap, and thus the current timer recording will not be carried out.
- To stop a started timer recording, press the **STOP/EJECT** button on the TV/VCR. Please see page 64 for more Helpful Hints.

## Timer Recording (cont'd) 37

### Checking or Clearing Timer Recordings

**1**  
With the TV/VCR on, press the **COMBI** button, then press the **MENU** button.


**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR PROGRAM**, then press the **F.FWD/▶** button.

**3**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **PROGRAM REVIEW**, then press the **F.FWD/▶** button. The timer recording information for the program in the lowest numbered position will appear on the screen. If no timer recordings are programmed, nothing will happen when you select **PROGRAM REVIEW** and press the **F.FWD/▶** button.

**4**  
Press the **F.FWD/▶** button to display information about the next programmed timer recording. (If you do not press a button within 10 seconds, information about the next programmed timer recording will appear.) This will continue until all positions have been displayed. Then, the menu will disappear. You can exit the Program Review at any time by pressing the **STATUS/EXIT** button.

**5**  
To cancel the timer recording displayed, press the **CLEAR** button. Either the display will disappear or information about other timer recordings will appear. If you do not press any other buttons, the display will disappear after all timer recordings have been displayed.

**6**  
Repeat steps 1 - 4 to make sure you have cleared the correct position.

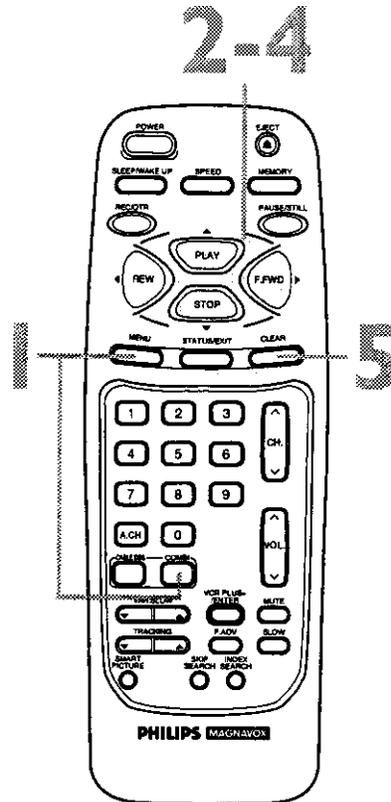



## Setting Up the VCR Plus+ Programming System (cont'd) 39

2

Now, compare the channel numbers you have written in the VCR PLUS+ CH. and CABLE/TV CH. columns. You'll notice that some stations have VCR Plus+ and Cable/TV channel numbers that are the same, and other stations have channel numbers that do not match. Where the channel numbers DO NOT match, you must tell the TV/VCR the VCR Plus+ and Cable/TV channel numbers according to the following steps.

- Make each entry within 60 seconds of the previous entry.

3

Press the **COMBI** button, then press the **MENU** button.

4

Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SETUP**, then press the **F.FWD/▶** button.

5

Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR PLUS+ REF. MAP**, then press the **F.FWD/▶** button.

| VCR PLUS+ | CROSS REF MAP | CABLE/TV |
|-----------|---------------|----------|
| 124       | ---           | ---      |
| 125       | ---           | ---      |
| 01        | ----▶         | ---      |
| 02        | ---           | ---      |
| 03        | ---           | ---      |

TO SELECT CH PRESS ▲▼  
THEN ENTER CH NO.  
TO END PRESS EXIT

6

Look at the lists you filled in on page 38. For stations whose **VCR Plus+** and **Cable/TV** channels do not match, press the **PLAY/▲** button or the **STOP/▼** button until the arrow is beside the **VCR Plus+** channel you need. Then, press the **Number** buttons to enter the corresponding **Cable/TV** channel from your list. (Enter a "0" before single-digit channels for the quickest results.) Continue this process until you have entered all the stations on your list.

Note: If you are using a Cable Box/DBS, the Cable/TV channel will be 03 or 04 (the Cable Box/DBS output channel) for every VCR Plus+ channel. You must set the Cable Box/DBS to the channel you want to record; leave the Cable Box/DBS on for the timer recording.

| VCR PLUS+ | CROSS REF MAP | CABLE/TV |
|-----------|---------------|----------|
| 124       | ---           | ---      |
| 125       | ---           | ---      |
| 01        | ----▶         | 23       |
| 02        | ---           | ---      |
| 03        | ---           | ---      |


TO SELECT CH PRESS ▲▼  
TO DELETE PRESS CLEAR  
TO END PRESS EXIT

7

Press the **STATUS/EXIT** button.

2

Examine the lists on page 38.

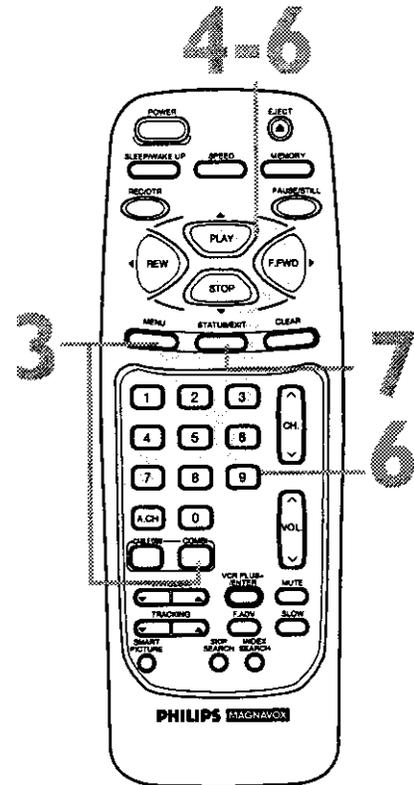

### Helpful Hints

- To correct a Cable/TV channel number, repeat the steps on this page.
- To clear a Cable/TV channel number, repeat steps 3-5 on this page. Then, press the CH(annel) ▲/▼ button to select it. Press the CLEAR button, then press the STATUS/EXIT button.
- To select line input for the Cable/TV channel, press 0,0.A/V IN will appear on the screen.


## 40 Timer Recording With the VCR Plus+ Programming System

Follow the steps below to program a timer recording using the PlusCode programming numbers in your TV guide. Before you begin, make sure:


- The clock has been set. If not, CLOCK MUST BE SET appears.
- Channels are programmed.
- There is a tape in the TV/VCR (make sure the tape's record tab is intact and the tape is long enough to record the program).
- You have completed the steps on pages 38-39.

**Complete each step within 60 seconds of completing the previous step. If you don't, you may return to step 1.**

**1**  
Press the **COMBI** button, then press the **VCR PLUS+/ENTER** button.


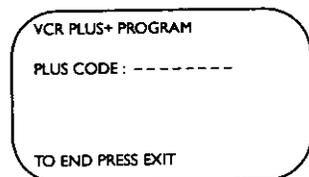


**2**  
Press the **Number** buttons to enter the **PlusCode** programming number of the program you wish to record (this number is different for every program, and it can be three to eight digits long). **Finally**, press the **VCR PLUS+/ENTER** button.

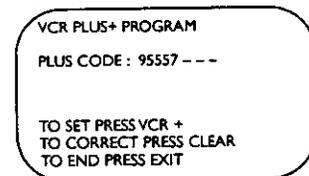

**3**  
Press the **PLAY/▲** button or the **STOP/▼** button to select a **ONCE, DAILY, OR WEEKLY** recording. Then, press the **F.FWD/▶** button.

- **ONCE:** The VCR will record a TV program on any day you choose, up to 12 months away.
- **DAILY:** The VCR will record every day from Monday to Friday – starting at the same time and recording for the same length of time.
- **WEEKLY:** The VCR will record on the same day, at the same time, and for the same length of time every week.

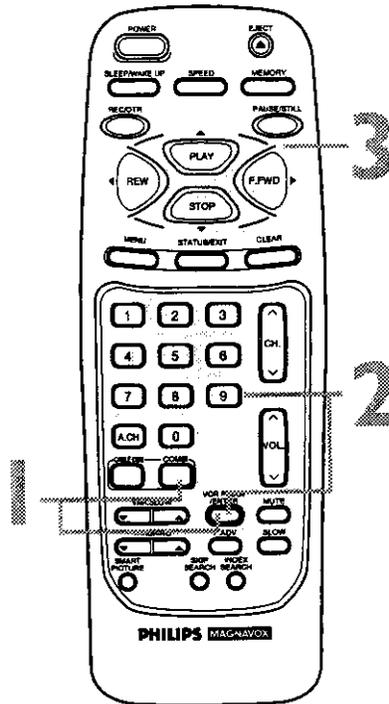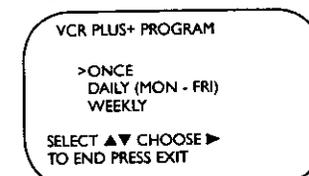

### Helpful Hints

- You cannot set a timer recording if **DEFEAT RECORDING** is set to **ON**. Details are on page 33.
- If **CODE ERROR** flashes after you enter the PlusCode programming number and press the **VCR PLUS+/ENTER** button, the number you entered was incorrect (for example, too short). If this happens, enter the correct number.
- **CLASH** may flash on the screen after you complete step 2. This means that the timer recording you just programmed and another timer recording overlap, and thus the current timer recording will not be carried out.

## Timer Recording With the VCR Plus+ Programming System (cont'd) 41

### 4

Press the **Number 1** button to record in **SP** speed or the **Number 2** button to record in **SLP** speed. Your selection will appear to the right of REC SPEED on the screen, although SP=1 SLP=2 will continue to flash. For details about tape speed, see pages 30 and 63. You cannot use the SPEED button at this time.

| ONETIME PROGRAM   |          |
|-------------------|----------|
| PROGRAM           | 1        |
| CHANNEL           | 09       |
| TIME ON           | 10:30 PM |
| TIME OFF          | 11:30 PM |
| REC SPEED         | SLP      |
| SP=1              | SLP=2    |
| START DATE        | 07/10/99 |
|                   | SATURDAY |
| TO END PRESS EXIT |          |


### 5

Press the **STATUS/EXIT** button. PROGRAM WAS COMPLETED / PLEASE TURN OFF FOR TIMER RECORDING will appear on the screen.

- If there is not a tape in the TV/VCR, PLEASE INSERT CASSETTE also appears on the screen.
- If there is a tape without a record tab in the TV/VCR, PLEASE REMOVE CASSETTE also appears on the screen. If this happens, insert a different tape.

### 6

Turn off the **TV/VCR** power. The REC(ord) light will flash. If you forget to turn off the TV/VCR, PLEASE TURN OFF FOR TIMER RECORDING appears on the TV/VCR screen two minutes before a timer recording starts.

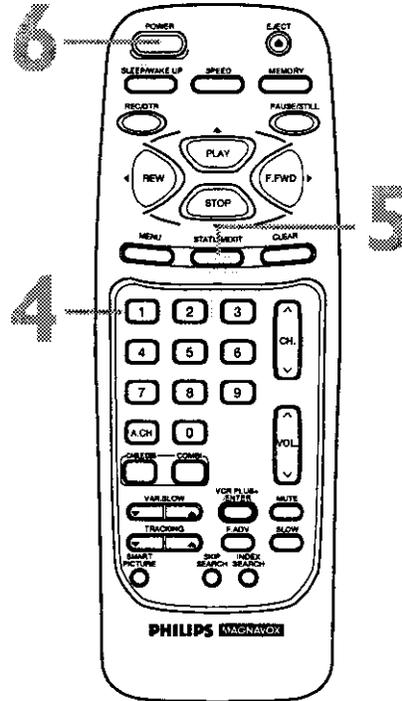

**Turn off the TV/VCR for the recording. Insert a tape in the TV/VCR. Leave the Cable Box/DBS on (if applicable).**

### Helpful Hints

- To exit the VCR Plus+ programming system at any time, press the STATUS/EXIT button. The display will disappear from the screen.
- To stop a started timer recording, press the STOP/EJECT button on the TV/VCR.

## 42 Real-Time Counter Memory


Follow the steps below to reset the real-time counter to zero at a tape location you want to refer to later.

1

Play, fast forward, or rewind a tape to the location that you would like to refer to later. Stop the tape.


2

Press the **STATUS/EXIT** button. The real-time counter will appear on the screen.

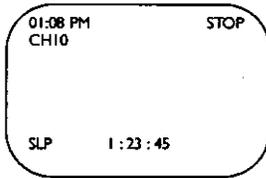


3

While the counter remains on the screen, press the **CLEAR** button to reset the real-time counter to zero.

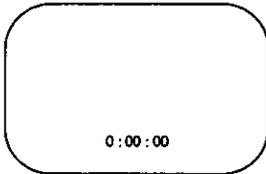


4

While the counter remains on the screen, press the **MEMORY** button so that **M** appears on the screen. To erase a real-time counter memory, press the **MEMORY** button so that the **M** disappears from the screen.

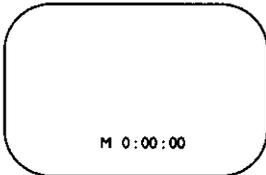

5

To go to a tape location where the real-time counter was reset to zero, press the **REW(ind)/◀** button or the **F.FWD/▶** button when playback is stopped. When the tape reaches the point at which the counter was set to zero, the tape will stop. Press the **PLAY/▲** button to watch the tape.

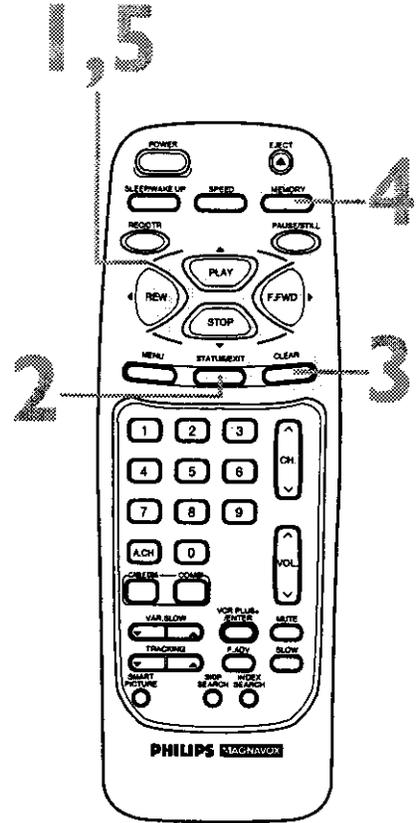

### Helpful Hints


- The real-time counter memory will not function during Repeat Play mode. Details are on page 43.
- You may only set one real-time counter memory at a time. If you set the real-time counter to zero at a second location, the previous real-time counter to zero setting will be lost.

## Repeat Play 43

Follow the steps below to program the TV/VCR to play a tape over and over.


1

Press the **COMBI** button, then press the **MENU** button.

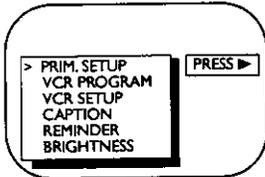


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SETUP**, then press the **F.FWD/▶** button.

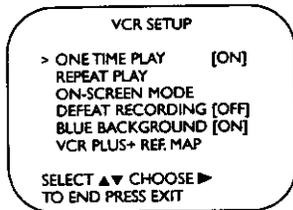


3

Press the **PLAY/▲** button or the **STOP/▼** button to select **REPEAT PLAY**, then press the **F.FWD/▶** button so that **ON** appears beside **REPEAT PLAY**.

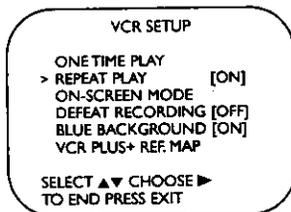

4

Press the **STATUS/EXIT** button. Now, when a tape has finished playing, the TV/VCR will rewind it and start playback again. (TV programming will appear while the tape is rewinding.)

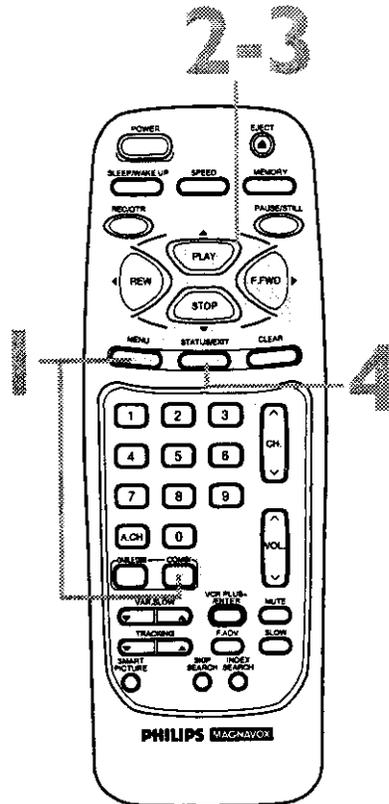

### Helpful Hints


- The TV/VCR will stay in Repeat Play mode until you set ONE TIME PLAY to ON, even if the TV/VCR is turned off. To set ONE TIME PLAY to ON, follow steps 1-2 above. Then, press the PLAY/▲ button or the STOP/▼ button to select ONE TIME PLAY. Press the F.FWD/▶ button so that ON appears beside ONE TIME PLAY. Then, press the STATUS/EXIT button.
- The real-time counter memory will not function during Repeat Play mode.

## 44 A-B Repeat Play


Follow the steps below to program the TV/VCR to play the material between two specified points (A and B) on a tape over and over again.

**1**  
Insert a tape in the TV/VCR.


**2**  
Press the **COMBI** button, then press the **MENU** button.

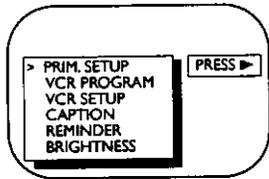


**3**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SETUP**, then press the **F.FWD/▶** button.

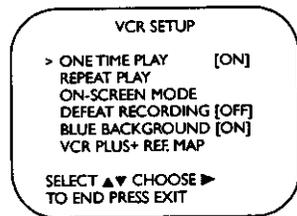


**4**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **REPEAT PLAY**.

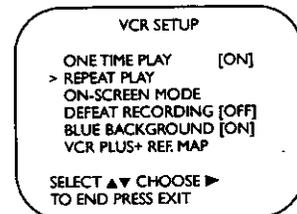

**5**  
Press the **F.FWD/▶** button repeatedly so that **A-B** appears beside **REPEAT PLAY**.

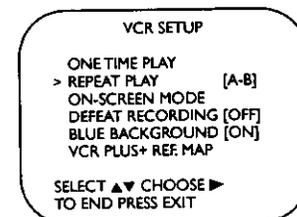

Insert a tape in the TV/VCR.

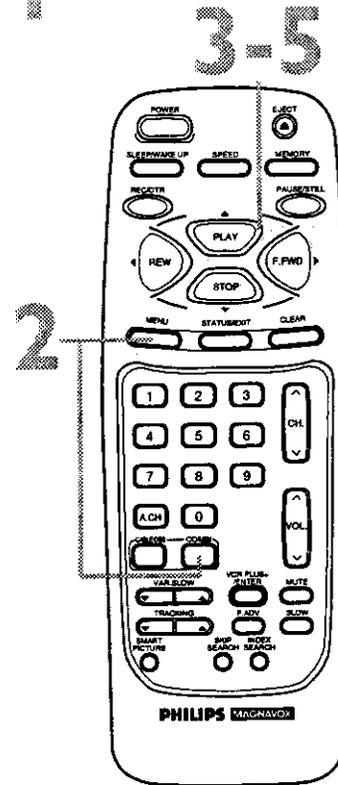


### Helpful Hints

- To cancel A-B Repeat Play, set **ONE TIME PLAY** to **ON**. To set **ONE TIME PLAY** to **ON**, follow steps 2-3 above. Then, press the **PLAY/▲** button or the **STOP/▼** button to select **ONE TIME PLAY**. Press the **F.FWD/▶** button so that **ON** appears beside **ONE TIME PLAY**. Then, press the **STATUS/EXIT** button.
- The end position (B) must be later on the tape than the start position (A).

## A-B Repeat Play (cont'd) 45


6

Press the **STATUS/EXIT** button to remove the menu. A-B REPEAT will appear on the screen. Beneath it, the letter A will flash beside the real-time counter.

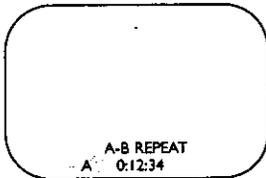

7

Play, fast forward, or rewind the tape to the position at which you want to begin playback. Stop the tape, then press the **MEMORY** button to set the start position (A). The flashing A will become a flashing B.

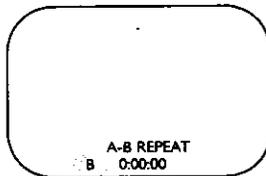

8


Play or fast forward the tape to the position at which you want playback to end. Stop the tape, then press the **MEMORY** button to set the end position (B).

- The length of time between the start position (A) and the end position (B) must be at least three minutes.

9

The TV/VCR will immediately rewind the tape to the start position (A) and repeat playback to the end position (B) over and over. (TV programming will appear while the tape is rewinding.)

7-8

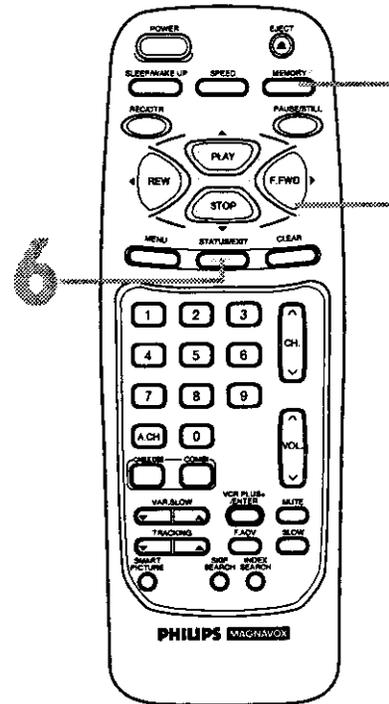

### Helpful Hints

- The counter cannot be memorized or reset when you are using this feature.
- Positions A and B will be erased when you press the REC(ord)/OTR button.
- A-B REPEAT will not appear on the screen at step 6 if a tape is not in the TV/VCR. NO CASSETTE will flash on the screen briefly.
- You cannot rewind or fast forward beyond points A or B when you are using this feature.
- A-B Repeat Play will be retained if you turn off the TV/VCR power. However, if you eject the tape, A-B Repeat Play will be cancelled.

## 46 Playback Options

### Forward and Reverse Searching (SP/LP/SLP)


**1**  
During tape playback, press and release the FFWD/▶ button or the REW(ind)/◀ button. A fast forward or reverse picture search will begin.

**2**  
To return to normal playback, press the PLAY/▲ button.

### Super High Speed Searching (LP/SLP)

**1**  
During tape playback, press the FFWD/▶ button or the REW(ind)/◀ button, then press again. The TV/VCR will now search in super high speed.

**2**  
To return to normal playback, press the PLAY/▲ button.

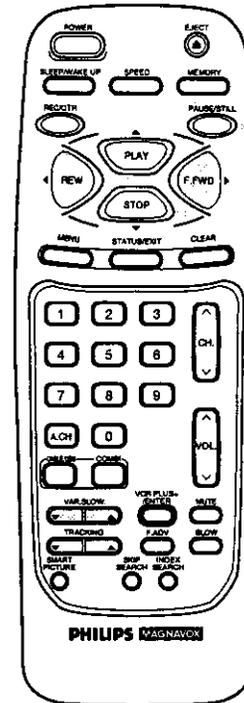

### Viewing a Still Picture

**1**  
During tape playback, press the PAUSE/STILL button. A still picture will appear on the screen.

**2**  
To advance the still picture frame-by-frame, press the F(rame). ADV(ance) button.

**3**  
To release the still picture and return to normal playback, press the PLAY/▲ button.

### Viewing a Slow Motion Picture

**1**  
During tape playback, press the SLOW button. The tape will play in slow motion.

**NOTE:** You can control the speed of slow motion playback by pressing the VAR(iable). SLOW button.

**2**  
To release Slow mode and return to normal playback, press the PLAY/▲ button.

#### Helpful Hints

- Slow and Still modes will automatically switch to Stop mode after five minutes to protect the TV/VCR and the tape from damage.
- SP/LP/SLP means this feature will work with tapes recorded in Standard Play, Long Play, or Super Long Play. For details about tape speed, see page 30.
- LP/SLP means this feature will work with tapes recorded in Long Play and Super Long Play. For details on tape speed, see page 30.
- During forward and reverse searching, horizontal noise bars will appear on the TV/VCR screen.
- Tapes recorded in SLP speed will have the clearest picture in Still mode.


## Blue Background 47

If you want the TV screen to be solid blue when a weak signal is received, set BLUE BACKGROUND to ON. The screen will be blue and the sound will be muted. Or, if you want to receive the weak signal, set BLUE BACKGROUND to OFF. When you select a channel that is receiving a weak signal, you will see and hear the static in the TV programming.

To set BLUE BACKGROUND to ON or OFF, follow the steps below.


1

Press the **COMBI** button, then press the **MENU** button.

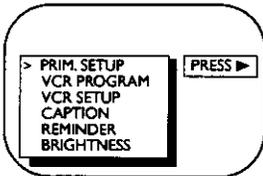


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SETUP**, then press the **F.FWD/▶** button.

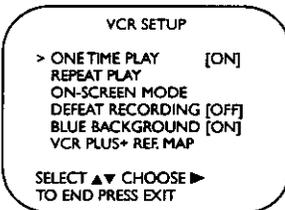


3

Press the **PLAY/▲** button or the **STOP/▼** button to select **BLUE BACKGROUND**. Then, press the **F.FWD/▶** button repeatedly so that **OFF** (or **ON**) appears beside **BLUE BACKGROUND**.

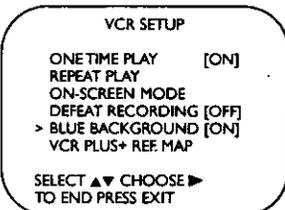

4

Press the **STATUS/EXIT** button.

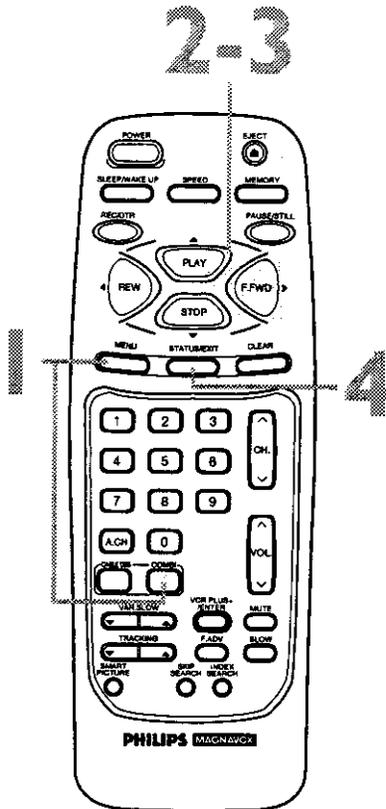


## 48 SmartLock

SmartLock enables parents to prevent their children from watching inappropriate material on TV.


SmartLock reads the ratings for programming (except for news and sports programs, unedited movies on premium cable channels, and Emergency Broadcast System signals), then denies access to programming if the program's rating meets or exceeds the limitations you select. The ratings are defined on page 51.

To block ratings, follow the steps below.


**1**  
Press the **COMBI** button, then press the **MENU** button.

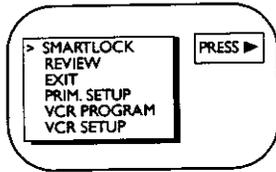



**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **SMARTLOCK**. Then, press the **F.FWD/▶** button.

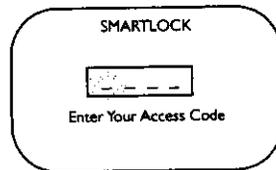

**3**  
Use the **Number** buttons to enter your access code. The default code is 0711. If you have not set up your personal access code, you should use 0711. (To set up your personal access code, see page 50.)

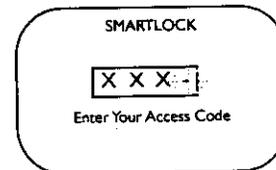

**4**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **BLOCK**. Then, press the **F.FWD/▶** button.

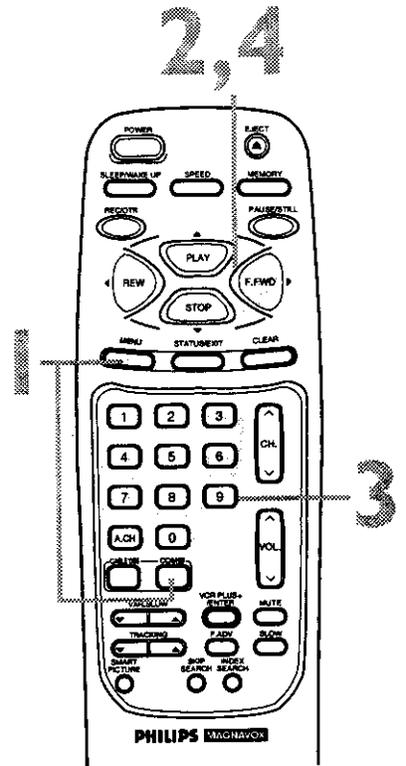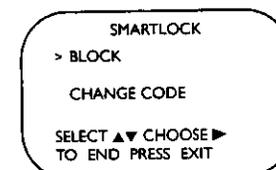


### Helpful Hints

- If the "Incorrect Access Code..." message appears after step 3, enter the correct access code.
- Programming may be rated by the Motion Picture Association of America (MPAA) or according to the Television Parental Guidelines. In order to block any inappropriate programming, set your limits in both places (Movie Ratings and Parental Guidelines). You will complete steps 1-7 twice, choosing Movie Ratings at step 5 the first time, then choosing Parental Guidelines at step 5 the second time.
- Tape playback will not be available on a tape if the rating of the tape is blocked.
- If you enter the access code once, you may change channels without seeing the "CHANNEL XX BLOCKED" message again. If you turn off the TV/VCR power, you will be asked for the access code again when you tune to a blocked channel.

## SmartLock (cont'd) 49

5



Press the **PLAY/▲** button or the **STOP/▼** button to select **Movie Ratings** or **Parental Guidelines**. Then, press the **F.FWD/▶** button.

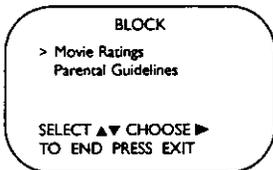

6

Press the **PLAY/▲** button or the **STOP/▼** button to select the rating you want to block. Then, press the **F.FWD/▶** button so that **ON** appears beside the rating.

For example, if you set PG to ON, you may not view PG programming because the block is on. Programs with a PG or higher rating will be blocked. A "CHANNEL XX BLOCKED..." message will appear when someone tries to access such programming.

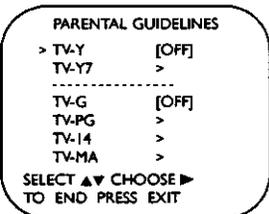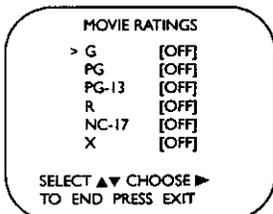


More specific sub-ratings are available for TV-Y7, TV-PG, TV-14, and TV-MA. (See example below.) When you press the **F.FWD/▶** button to turn on TV-Y7, TV-PG, TV-14 or TV-MA, additional sub-ratings will appear.

If you select the rating category, such as TV-PG, and turn it on or off, the specific sub-ratings, such as V for violence, will turn on or off automatically. You can always turn specific sub-ratings on or off by selecting them individually. However, you may only set a sub-rating to ON if the rating category is set to ON.

Ratings are defined on page 51.


### Example of specific sub-ratings

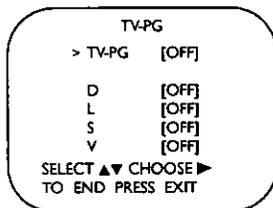

7

Press the **STATUS/EXIT** button.

5-6

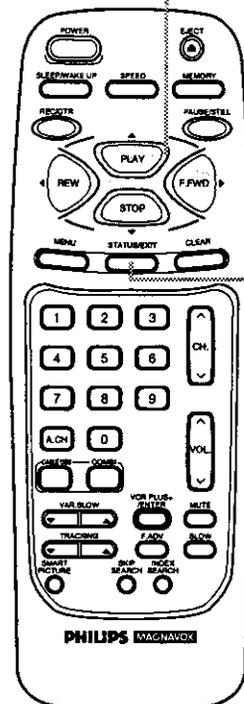

7


### Helpful Hints

- If the "CHANNEL XX BLOCKED..." or "PLAYBACK BLOCKED..." message appears and you want to view this programming, enter your access code. The channel will remain blocked until you enter the correct code. If you do not know the code, you will have to select another channel or press the **STOP/▼** button.
- Ratings will remain blocked even after a power failure.
- You cannot access the menu when the "CHANNEL XX BLOCKED..." or "PLAYBACK BLOCKED..." message appears.


## 50 SmartLock (cont'd)

To change the access code, follow these steps.


**1**  
Press the **COMBI** button, then press the **MENU** button.

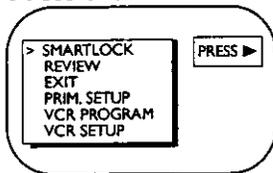


**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **SMARTLOCK**. Then, press the **F.FWD/▶** button.

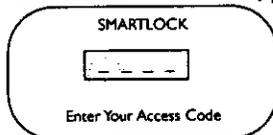


**3**  
Use the **Number** buttons to enter your old access code. The default code is 0711. If you have never set up your personal access code, use 0711 now. After you enter the code, the SMARTLOCK menu will appear.

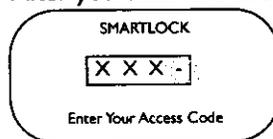


**4**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **CHANGE CODE**. Then, press the **F.FWD/▶** button.

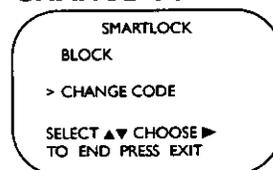

**5**  
Use the **Number** buttons to enter your desired access code in the **New Code** space. Then, enter the same code in the **Confirm Code** space. Your new access code should be recorded. You will return to the SMARTLOCK menu.

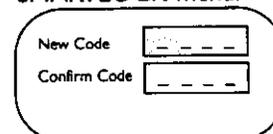

**6**  
Press the **STATUS/EXIT** button.

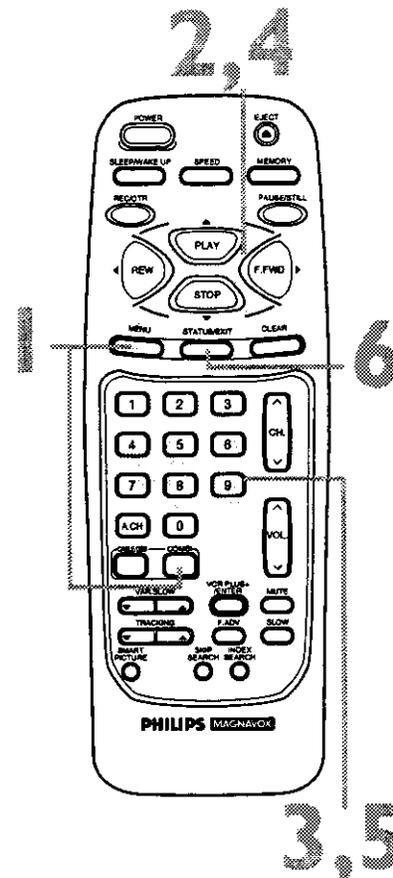


### Helpful Hints

- In order to protect the privacy of the access code, an X will appear on the screen instead of the number you enter.
- If a "Wrong Code..." message appears on the screen after you complete step 5, you entered the wrong numbers in the Confirm Code space. Repeat the steps on this page.
- You cannot use the default code after you set up your personal access code.
- If a power failure occurs, the default code, 0711, will be the active access code again.
- If you connect the power cord to an AC outlet that is controlled by a wall switch, your personal access code will be erased every time you turn off the power at the wall switch. The default code will be the active code again.

## SmartLock (cont'd) 51

To check the SmartLock settings, follow these steps.

Press the **COMBI** button, then press the **MENU** button.

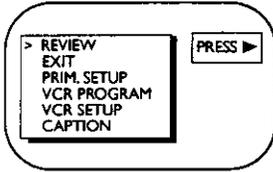

2

Press the **PLAY/▲** button or the **STOP/▼** button to select **REVIEW**. Then, press the **F.FWD/▶** button so that the **SmartLock settings appear**.


Ratings that are blocked will appear on the screen.

An "X" will appear if a specific sub-rating is blocked, such as V for Violence in the TV-14 category.

| BLOCKED RATINGS     |       |       |       |   |
|---------------------|-------|-------|-------|---|
| Movie Ratings       | G     | PG-13 | NC-17 |   |
| Parental Guidelines | TV-Y7 |       |       |   |
| -----               |       |       |       |   |
| TV-G                | D     | L     | S     | V |
| TV-PG               |       | x     | x     | x |
| TV-14               | x     | x     | x     | x |
| TV-MA               | -     | x     | x     | x |

3

Press the **STATUS/EXIT** button.

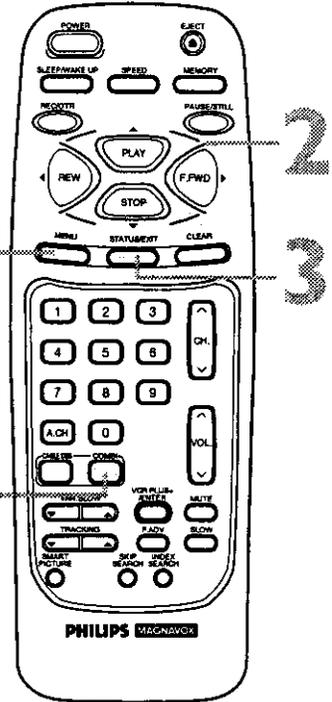

### RATING EXPLANATIONS

For Movie Ratings

- G - General Audience
- PG - Parental Guidance suggested.
- PG-13 - Unsuitable for children under 13
- R - Restricted; under 17 requires accompanying parent or adult guardian
- NC-17 - No one under 17 admitted
- X - Mature audience only


For Parental Guidelines

- V - Violence
- S - Sexual situations
- L - Language
- D - Inappropriate dialogue
- FV - Fantasy Violence may frighten children under seven; TV-Y7 category only. Some cartoons may have this rating.
- TV-Y - Appropriate for all children
- TV-Y7 - Appropriate for children seven and older
- TV-G - General Audience
- TV-PG - Parental Guidance suggested.
- TV-14 - Unsuitable for children under 14
- TV-MA - Mature audience only


## 52 Sleep Timer

Use the sleep timer to program the TV/VCR to shut off in a certain amount of time.


Press the **COMBI** button, then press the **SLEEP/WAKE UP** button.

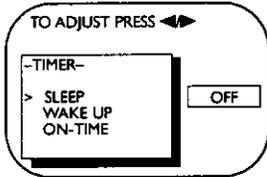

Press the **PLAY/▲** button or the **STOP/▼** button to select **SLEEP**. Then press the **REW(ind)/s** button or the **F.FWD/B** button to select **30 MIN(utes)**, **60 MIN(utes)**, **90 MIN(utes)**, or **120 MIN(utes)**. (You can not set the sleep timer during a recording.)

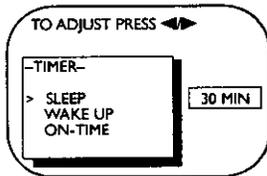

Press the **STATUS/EXIT** button. The TV/VCR will shut itself off after the specified amount of time. One minute before the TV/VCR shuts itself off, the seconds will count down on the screen. **GOOD NIGHT** appears on the TV/VCR screen 10 seconds before the TV/VCR shuts itself off.

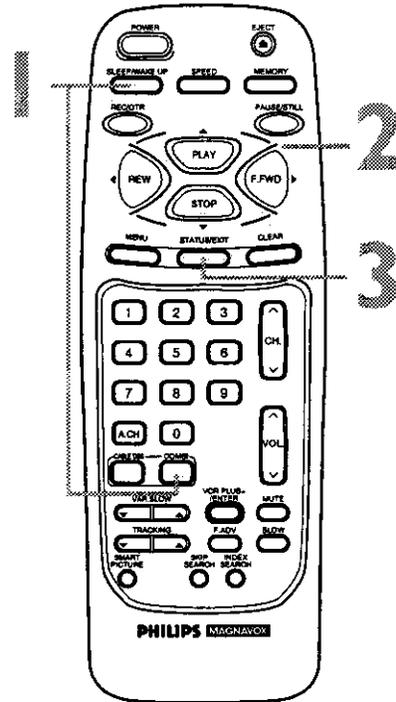

### Helpful Hints


- To cancel the sleep timer, press the **COMBI** button, then press the **SLEEP/WAKE UP** button. Press the **PLAY/▲** button or the **STOP/▼** button to select **SLEEP**, then press the **REW(ind)/◀** button or the **F.FWD/▶** button to select **OFF**. Press the **STATUS/EXIT** button.
- To see how much time remains before the TV/VCR shuts itself off, press the **SLEEP/WAKE UP** button once. To remove the display, press the **STATUS/EXIT** button.

## Wake Up Timer 53

The Wake Up Timer turns on the TV/VCR automatically at a specified time within the next 24 hours. You may set the TV/VCR to turn on at a TV channel (the channel at which the TV/VCR was set last) or with VCR playback. To set the Wake Up Timer, follow the steps below. Before you begin:


- Make sure the clock is set. If the clock has never been set, **CLOCK MUST BE SET** will appear on the screen after you select **WAKE UP** at step 2. Then the **SET CLOCK** menu will appear.
- Make sure a tape is in the TV/VCR if you want the TV/VCR to start tape playback at the specified time.
- Make sure no timer recordings are set for the time at which you want the TV/VCR power to come on.

**Press the COMBI button, then press the SLEEP/WAKE UP button.**

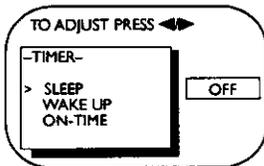


2

**Press the PLAY/▲ button or the STOP/▼ button to select WAKE UP. Then, press the REW(ind)/◀ button or the F.FWD/▶ button to select TV ON or VCR ON.**

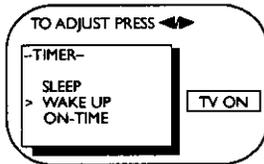

3

**Press the PLAY/▲ button or the STOP/▼ button to select ON-TIME. Then, press the REW(ind)/◀ button or the F.FWD/▶ button to select your desired wake up time. Each press of the REW(ind)/◀ button or the F.FWD/▶ button will increase (or decrease) the time by 10 minutes.**

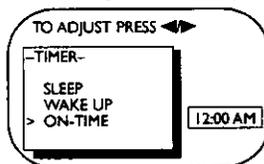


4

**Press the STATUS/EXIT button.**

5

**Press the POWER button to turn off the TV/VCR. The TV/VCR will turn itself on at the specified time.**

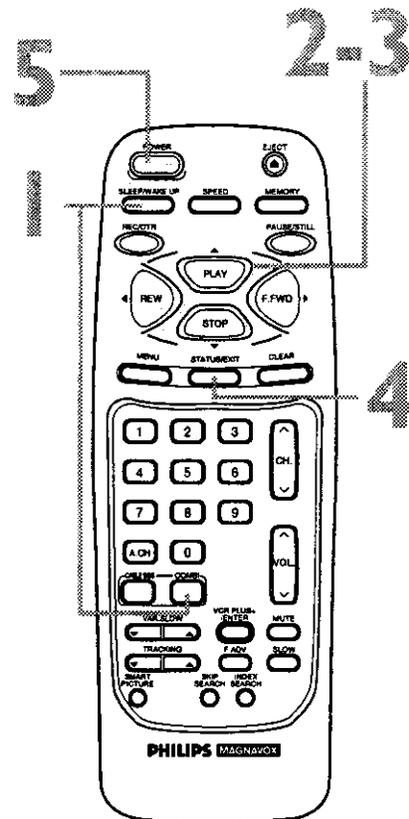

### Helpful Hint

- To cancel the Wake Up Timer, follow step 1 above. At step 2, press the REW(ind)/◀ button or the F.FWD/▶ button to select OFF. Press the STATUS/EXIT button.


## 54 Closed Caption

When you watch a program that is being broadcast with closed captions, you can access on-screen boxes containing the program's dialogue (for example, what a character is saying), dialogue in a foreign language, or information (such as a channel guide, schedule, or announcements). Follow the steps below to select closed captions.

Not all TV programs and commercials are broadcast with closed captions. Similarly, all types of closed captions (second language, half-screen text, etc.) are not always broadcast. If closed captioning is not broadcast, you cannot receive it. This does not indicate a problem with the TV/VCR. Refer to your area's TV program listings for the shows offered with closed captions.


1

Press the **COMBI** button, then press the **MENU** button.

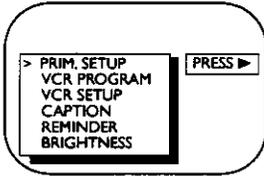

2

Press the **PLAY/▲** button or the **STOP/▼** button to select **CAPTION**.

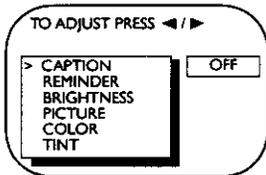


3


Press the **REW(ind)/◀** button or the **F.FWD▶** button to select your desired mode.

The selected closed caption mode will appear beside **CAPTION** on the screen.

- **CAPTION1** displays standard closed captions (what a character is saying).
- **CAPTION2** displays foreign language closed captions (foreign language words showing what a character is saying).
- **TEXT1** and **TEXT2** display half-screen text (such as a channel guide, schedule, or announcement).
- **OFF** turns closed captions off. Captions will not appear on the screen.

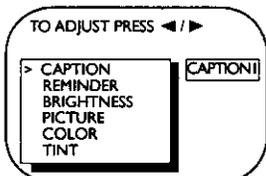

**Example:**  
**CAPTION1**  
**Menu**  
**Screen**

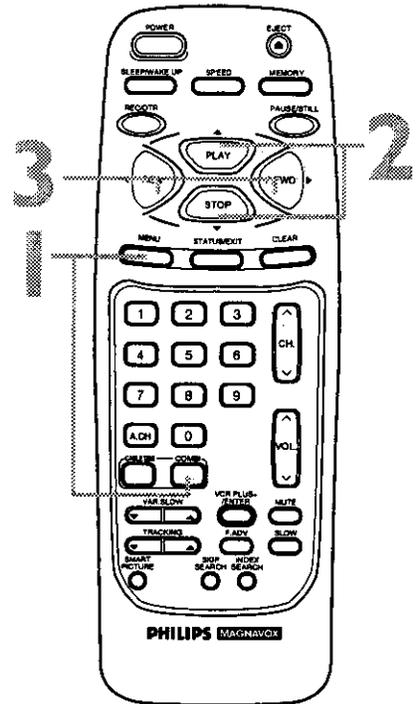


### Helpful Hint

- To cancel closed captions, follow steps 1-2. At step 3, press the **REW(ind)/◀** button or the **F.FWD▶** button to select **OFF**. Press the **STATUS/EXIT** button.


## Closed Caption (cont'd) 55

4


Press the **STATUS/EXIT** button. The type of closed captions you selected at step 3 will appear on the screen if available.

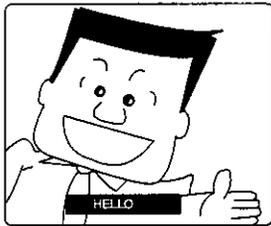

Standard Closed Captions

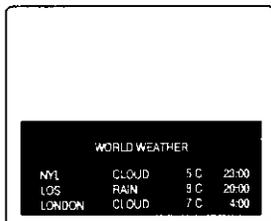

Half-screen text

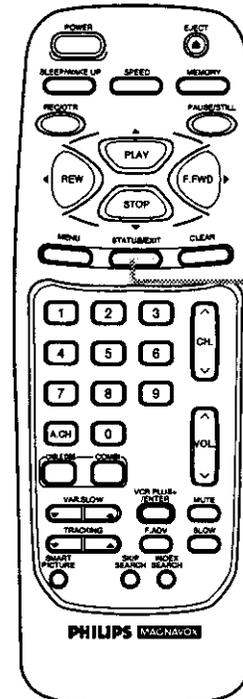


### Helpful Hints

- You cannot view closed captions during recording or tape playback if **COUNTER ONLY** is set to **ON**. Details are on page 28.
- Abbreviations, symbols, and other grammatical shortcuts are often used in order to keep pace with the on-screen action. This does not indicate a problem with the TV/VCR.
- When you change channels, the closed captions may be delayed for a few seconds.
- When you adjust the volume or mute the volume, closed captions may be delayed for a few seconds.


## 56 Volume Bar

Usually, the volume bar appears when you press the VOL(ume)  $\Delta/\nabla$  button. If you do not need it, set the VOLUME BAR to OFF. For example, when you watch a program that is being broadcast with closed captions, you may choose to set the VOLUME BAR to OFF so the captions can remain on the screen. The captions will remain on the screen even when you press the VOL(ume)  $\Delta/\nabla$  button or the MUTE button.

**1** Press the **COMBI** button, then press the **MENU** button.

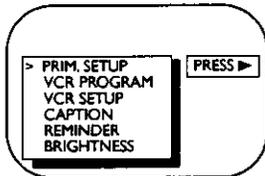


**2** Press the **PLAY/▲** button or the **STOP/▼** button to select **PRIM. SETUP**. Then, press the **F.FWD/▶** button.

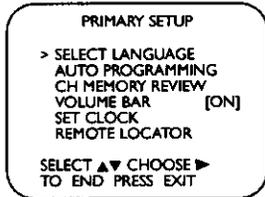

**3** Press the **PLAY/▲** button or the **STOP/▼** button to select **VOLUME BAR**, then press the **F.FWD/▶** button. Each press of the **F.FWD/▶** button will turn the VOLUME BAR ON or OFF.

**4** Press the **STATUS/EXIT** button.

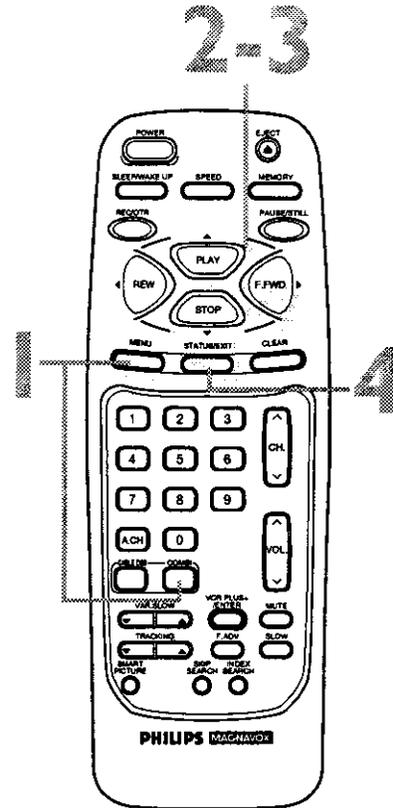

## Automatic Operation Features 57

.....  
The following playback features will always operate.

### Automatic Playback

When you put a tape in the TV/VCR, the power will come on automatically. If the tape's record tab is missing, playback will begin. If a timer recording is set, the power will not come on automatically when you insert a tape with the record tab intact. If a timer recording is set and the TV/VCR power is off, the TV/VCR will eject the tape if the record tab is missing.

### Automatic Rewind, Eject, Off

When a tape is played, fast forwarded, or recorded to its end, the TV/VCR will rewind the tape, stop, turn itself off, and eject the tape. If a real-time counter memory is set, the TV/VCR may only rewind the tape to the point at which the real-time counter is set to zero. The TV/VCR will not turn itself off or eject the tape.

### Memory Rewind, Power Off

When the POWER button is pressed while the TV/VCR is rewinding a tape, REW → POWER OFF will appear on the screen. The TV/VCR will turn itself off when the tape has finished rewinding. If a real-time counter memory is set, the TV/VCR may only rewind the tape to the point at which the counter was set to zero, then turn itself off.

### Tape Eject

A tape can be ejected with the TV/VCR power on or off (but the TV/VCR must be plugged in). If a timer recording is programmed, a tape can not be ejected when the power is off. Turn on the TV/VCR power, then eject the tape. Be sure to insert a tape and turn off the TV/VCR power for the timer recording.

### Automatic Tracking Adjustment


The TV/VCR automatically adjusts the tracking to give you the best possible picture quality. With some recordings, however, you may get a better picture using the manual tracking controls (see below).

### Manual Tracking

To adjust the tracking manually, press the CHANNEL ▲/▼ buttons on the TV/VCR or the TRACKING ▲/▼ button on the remote control.

Tracking returns to Automatic Tracking Adjustment when a tape is inserted or when the STOP/▼ button is pressed.

Before  
Tracking  
Adjustment

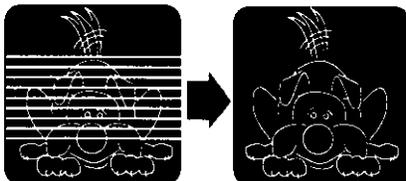

After  
Tracking  
Adjustment


## 58 Smart Picture

The Smart Picture feature allows you to improve the TV/VCR's picture when viewing sports, a movie, or video games; to improve the picture when the antenna/cable signal is weak; or to reset the picture controls to their original settings.

Press the **SMART PICTURE** button repeatedly until the Smart Picture mode you want appears on screen. The following options will be available.

|                    |   |
|--------------------|---|
| <b>SPORTS</b>      | Use to watch a sports program.                                |
| <b>MOVIE</b>       | Use to watch a movie.   |
| <b>WEAK SIGNAL</b> | Use when the picture is weak.                                 |
| <b>VIDEO GAMES</b> | Use when playing a video game.                                |
| <b>TV RESET</b>    | Use to reset the picture controls to their original settings. |

Your selection will remain on the screen for about 10 seconds, then disappear.

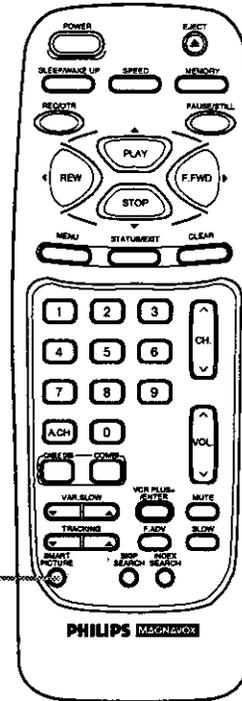

# Remote Locator 59

Your TV/VCR can find your remote control for you. When you press the POWER button on the TV/VCR to turn on the TV/VCR, your remote control beeps and LOCATING REMOTE appears on the screen. The remote control will beep for about 30 seconds. Or, press any button on the remote control to stop the beeping.

## If another remote control beeps...

The TV/VCR may find other remote controls. If this occurs, you can program the TV/VCR to find only its remote control. Follow the steps below.

**1**  
Press the COMBI button, then press the MENU button.

**2**  
Press the PLAY/▲ button or the STOP/▼ button to select PRIM. SETUP, then press the F.FWD/▶ button.

**3**  
Press the PLAY/▲ button or the STOP/▼ button to select REMOTE LOCATOR, then press the F.FWD/▶ button.

PRESS MUTE THEN PAUSE KEY  
TO CHANGE CODE FROM 4  
TO END PRESS EXIT

**4**  
Press the MUTE button, then press the PAUSE/STILL button.


YOUR REMOTE LOCATOR CODE IS 4  
PRESS ANY DIGIT TO CHANGE CODE  
TO END PRESS EXIT

**5**  
Press one Number button (0 - 9) to enter a single-digit code for your remote control. Your remote control will beep briefly.

YOUR REMOTE LOCATOR CODE HAS BEEN CHANGED  
NEW CODE IS 3  
TO END PRESS EXIT

**6**  
Press the STATUS/EXIT button.

If another remote control beeps ...

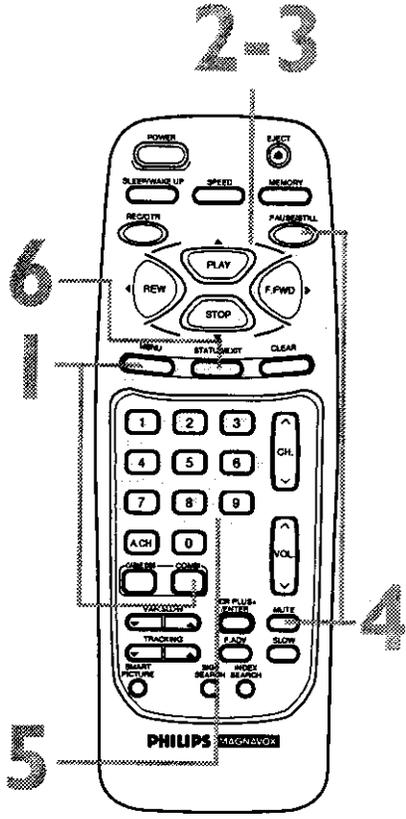

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


**Helpful Hint**  
• The volume will be delayed while the LOCATING REMOTE message appears on the screen. Press the STATUS/EXIT button to remove the message and restore the volume.

## 60 Reminder


The channel number will remain on the screen at all times when you set REMINDER to ON. The exception is when closed captioning is selected or during tape playback.

Set REMINDER to ON or OFF by following the steps below.


**1**  
Press the **COMBI** button, then press the **MENU** button.

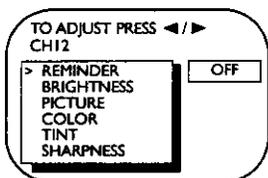


**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **REMINDER**.

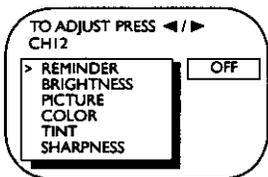

**3**  
Press the **REW(ind)/◀** button or the **F.FWD/▶** button to select **ON** or **OFF**. Each press of the **REW(ind)/◀** button or the **F.FWD/▶** button turns **REMINDER ON** or **OFF**.

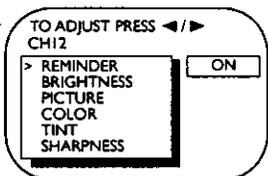

**4**  
Press the **STATUS/EXIT** button.

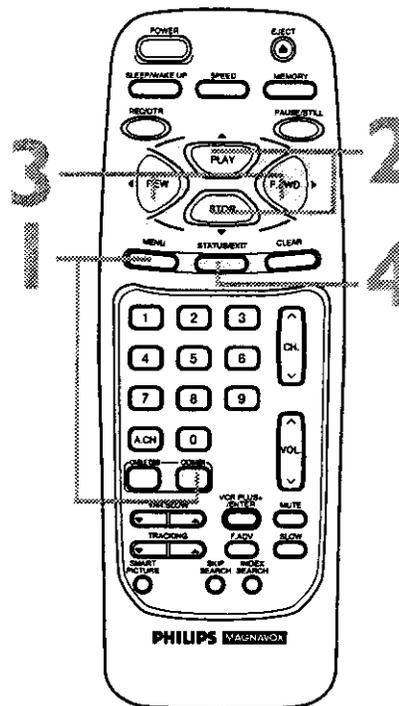


## Index Search 61


This feature allows you to index the starting points of programs that you have recorded on a tape. Then, you can easily rewind or fast forward to that point.

### Example:

If you are watching program number 4 and you want to fast forward to program number 7, skip three programs.

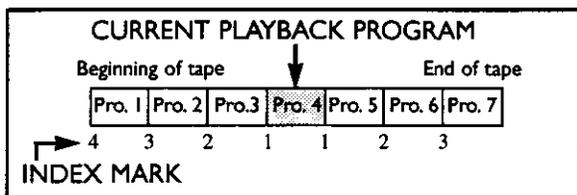


1 Press the **COMBI** button, then press the **INDEX SEARCH** button to bring up the index search display. There must be a tape in the TV/VCR.

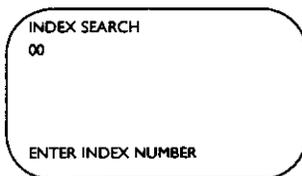

2 Within 10 seconds, use the Number buttons to enter the number of programs that you want to skip. For example, to skip three programs, press Number buttons 0, 3. If you do not make an entry within 10 seconds, the TV/VCR will exit Index Search mode.

3 Within 10 seconds, press the **F.FWD/▶** button or the **REW(ind)/◀** button to skip forward or backward. The TV/VCR will fast forward or rewind to the beginning of the desired program, then begin playback. (The program numbers count down on the screen as the searching progresses. To remove the on-screen counter, press the **INDEX SEARCH** button once.)

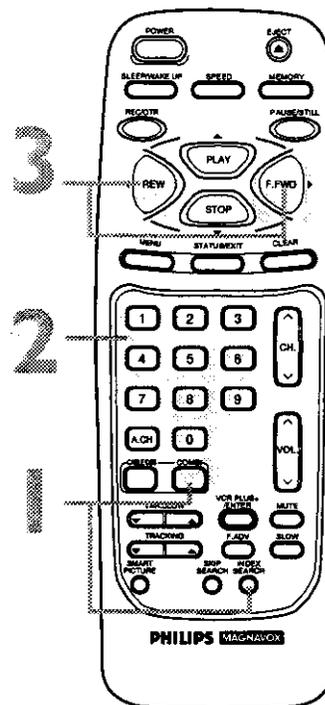

### Helpful Hints

- Every time an index mark is skipped, the number of programs decreases by one.
- Up to 20 index marks may be searched.
- This function will not operate in recording mode.
- Press the **STOP/▼** button to stop the search.
- An index mark will be made automatically when a recording begins.
- The index mark is not made at a point at which recording is paused.
- The time gap between index marks should be greater than 1 minute for SP recording, 2 minutes for LP recording, and 3 minutes for SLP recording.

## 62 Specifications

---

### General

CRT: 13-inch in line gun  
Television system: NTSC-M  
Closed caption system: Section 15.119, FCC  
(Federal Communications Commission) Standard  
Video Heads: Four heads  
Tape width: 1/2 inch (12.65 mm)  
Tape speed  
SP: 33.35 mm/sec.  
LP: 16.67 mm/sec.  
SLP: 11.12 mm/sec.  
Operating Temperature: 41°F (5°C) to 104°F (40°C)  
Relative Humidity: 10% to 75%  
Power requirement: AC 120V, 60Hz  
Power consumption: 65W  
Sound output: 1W  
Dimensions:  
15-13/16" (H) x 15-3/16" (W) x 14-13/16" (D)  
402mm x 386mm x 376mm  
Weight: 24.3 lbs (11.0 kg)

### Tuner Broadcast Channels

VHF 2-13, UHF 14-69

### Cable TV Channels

Midband: A - I  
Superband: J - W  
Hyperband: A-5 - A-1  
Special Channel: 5A  
Ultraband: 37 - 94, 100 - 125

### Terminals

Antenna In: VHF/UHF 75 ohms unbalanced  
Video In: RCA connector  
Audio In: RCA connector  
Earphone: 3.5 mm CES

### Electrical Specifications

Video input level: 0.5~2.0Vp-p  
Audio input level: -10dBv  
Video S/N ratio  
SP: More than 42dB $\mu$   
Audio S/N ratio  
SP: More than 38dB

*Designs and specifications are subject to change without notice and without our legal obligation.*

## Glossary 63

**AUDIO Jack:** jack located on the front of the TV/VCR which is used to record audio from another source.

**Automatic Channel Setup:** process in which the TV/VCR scans all available channels and places the ones you receive in its memory. Then, when you push the CHANNEL ▲/▼ buttons, you only scan through channels you receive.

**Bands:** settings that allow you to tune channels.

- **Antenna** – VHF (very high frequency; channels 2-13) and UHF (ultra high frequency; channels 14-69).
- **Cable** – all standard channels can be received without a Cable Box.

**Brightness:** adjusting increases or decreases the brightness of the color on the screen.

**Color:** adjusting pales or brightens the TV/VCR color.

**Dubbing:** copying a tape using a VCR.

**HQ:** high quality; a feature in the TV/VCR circuitry which provides enhanced picture detail.

**Line Input:** The channel to which you set your TV/VCR during dubbing. The line input channel is always channel 00 (A/V IN).

**Mode:** a TV/VCR operation.

**OTR:** One-Touch Recording; a timed recording that starts immediately and records for 30 minutes to eight hours, whichever you specify.

**Picture:** adjusting increases or decreases the contrast of the picture on the screen.

**Sharpness:** adjusting softens or clarifies the picture on the screen.

**Tape Speeds:** how fast the tape travels during playback or recording.

- **SP** (standard play) – fastest tape speed (recording time for a T120 tape is approximately two hours); best picture quality.
- **LP** (long play) – average tape speed; playback only.
- **SLP** (super long play) – slowest tape speed (recording time for a T120 tape is approximately six hours).

**Tint:** adjusting changes the tints of the picture on the TV/VCR from purple to green.

**VIDEO Jack:** jack located on the front of the TV/VCR which is used to record video from another source.

## 64 Helpful Hints

---

If you are having problems with your product, check this list of problems and possible solutions before requesting service. You may be able to solve the problem yourself.

If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is displayed on the back of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representatives will be happy to assist you.

### Location

For safe operation and satisfactory performance of your TV/VCR, remember the following:

- Shield it from direct sunlight and keep it away from sources of intense heat.
- Avoid dusty or humid places.
- Avoid places with insufficient ventilation. Do not block the ventilation openings at the top and bottom of the TV/VCR. Do not place the TV/VCR on a carpet, as this will block the ventilation openings.
- Avoid locations subject to strong vibrations.
- Do not place the TV/VCR near strong magnetic fields.
- Do not move the TV/VCR from a cold place to a hot place, or vice versa.

### Electrical Shock and Fire Hazards

- Do not handle the power cord with wet hands.
- Do not pull the power cord when disconnecting the TV/VCR from the AC (alternating current) wall outlet. Grasp it by the plug.
- If water is spilled on the TV/VCR, unplug the power cord immediately and take the TV/VCR to an authorized service center.
- Do not put your fingers or objects into the TV/VCR cassette compartment.
- Do not place anything on top of the TV/VCR.

### Dew Warning (Moisture Condensation)

- Moisture may condense inside the unit when it is moved from a cold place to a warm place, after heating a cold room, or when the humidity is high. There is no warning that moisture has accumulated in your TV/VCR. If you try to play a tape in a TV/VCR in which moisture has accumulated, the tape and the TV/VCR could be damaged. If you think moisture may have accumulated inside the TV/VCR, keep the TV/VCR power on (but do not play a tape) for at least two hours. This will allow the TV/VCR to dry.

### TV/VCR will not perform a timer recording.

- Make sure the recording start and stop times are set correctly (pages 34-37). Midnight is 12 a.m. Noon is 12 p.m.
- Make sure the TV/VCR power is off.
- Make sure the clock is set (pages 12-17).
- Make sure there is a tape in the TV/VCR. The tape must have a record tab.
- If the power fails, programmed timer recordings will be restored when the clock is reset. (The clock will reset itself automatically if you are using the AUTO CLOCK feature. *Details are on pages 14-17.* If you are not using the AUTO CLOCK feature, reset the clock manually. *Details are on pages 12-13.*) The timer recording will not occur only if the timer recording was scheduled to take place during the power failure.
- Make sure DEFEAT RECORDING is set to OFF (page 33).

### TV/VCR will not record.

- Make sure the tape has a record tab (page five).
- Make sure DEFEAT RECORDING is set to OFF (page 33).
- Plug the power cord into an active AC outlet (page seven).
- Check your hookups (pages six-seven).
- Set up the channels (page 10).

## Helpful Hints (cont'd) 65

.....  
**The remote control is not available, or the remote control will not access the pop up menu.**

- Use the buttons on the front panel of the TV/VCR to access the pop up menu (page 22). You can not enter numbers (for example, to program a timer recording) using the front panel buttons.

**TV/VCR has no power.**

- Make sure the power plug is completely connected to an AC (alternating current) outlet.

**Channel reception is poor.**

- Check connections, then set up the channels again (page 10).

**TV/VCR does not have a picture.**

- Adjust the antenna (page six).
- Adjust the TV/VCR picture controls (pages 26-27).

**TV/VCR has poor sound or no sound.**

- Adjust the volume.
- Press the MUTE button to restore the volume.

**Tape playback is poor or tape is destroyed.**

- Adjust the tracking. *Details are on page 57.*
- If moisture has accumulated in your TV/VCR, keep the power on for at least two hours, but do not try to play a tape. *Details are on page 64.*

**TV/VCR does not display closed captions.**

- Make sure COUNTER ONLY is set to OFF. *Details are on page 28.*
- Make sure closed captioning is available for the program. Refer to the TV listings in your local newspaper.

**Remote control does not operate TV/VCR.**

- Aim the remote control directly at the TV/VCR's remote sensor. *Details are on pages five and 22.*
- Remove all obstacles between the remote control and the TV/VCR.
- Inspect and replace the batteries in the remote control. *Details are on page five.*

**Number buttons won't work for channels above 69.**

- Select CABLE from the INPUT section of the pop up menu, then let the TV/VCR set up the channels. *Details are on page 10.*
- Enter channel numbers as a two-digit number. If you want to select channels 100 and above, enter channel numbers as a three-digit number. *(Details are on page 24.)*

**TV/VCR can't receive channels above 13.**

- Select CABLE from the INPUT section of the pop up menu, then let the TV/VCR set up the channels. *Details are on page 10.*

**A tape can't be inserted into the TV/VCR.**

- Insert the tape window side up, with the record tab facing you.
- Make sure a tape isn't already in the TV/VCR by pressing the STOP/EJECT button on the TV/VCR.
- Gently push on the center of the tape. Never force a tape into the TV/VCR.
- If a timer recording is set and the TV/VCR power is off, the TV/VCR will eject the tape if the record tab is missing.

**A tape can't be removed from the TV/VCR.**

- Make sure the power plug is completely connected to an AC (alternating current) outlet.
- If a timer recording is programmed, turn on the TV/VCR power, then eject the tape. Be sure to insert a tape and turn off the TV/VCR power for the timer recording.

**TV/VCR ejects the tape when you try to start a recording.**

- Make sure the tape has a record tab. *Details are on page five.*

**The cylinder rotates when tape playback is stopped.**

- To enable the quick play mechanism, the cylinder will rotate for about five minutes. This is normal. The quick play mechanism switches the tape mechanism from Stop to Play in just one second.



## 66 Limited Warranty

### TV/VCR COMBINATION

90 Days Free Labor/One Year Free Parts Exchange (Two Years Free Exchange on Color Picture Tube)

This product must be carried in for repair.

#### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

#### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

#### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- damage caused by the use of non-VHS tapes or tapes that have not been tested and labeled for use in two, four, six, and eight hour VHS recorders.
- a product that is used for commercial or institutional purposes.

#### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there

may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

#### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

#### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

#### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Take the product to a Philips factory service center (see enclosed list) or authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. Centers may keep defective parts.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

#### TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

#### REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

This warranty gives you specific legal rights. You may have other rights which vary from state to state.


## Index 67

- a-b repeat play ..... 44-45  
 accessories ..... 68  
 ant(enna) jack ..... 6, 23  
 audio jack ..... 7, 22, 32  
 automatic  
   playback ..... 57  
   rewind ..... 57  
 batteries ..... 5  
 blue background ..... 47  
 brightness, adjusting ..... 26-27  
 cable/dbs button ..... 20-21, 25  
 channel  
   above 100 ..... 24  
   adding ..... 11  
   buttons ..... 22, 24, 57  
   deleting ..... 11  
   reviewing ..... 11  
   setup ..... 10  
 clear button ..... 25  
 clock ..... 12-17  
 closed caption system ..... 54-55  
 color, adjusting ..... 26-27  
 combi button ..... 25  
 connections ..... 6-7  
 contents, table of ..... 4  
 controls  
   remote ..... 24-25  
   tv/vcr ..... 22  
 counter only mode ..... 28  
 daylight-savings time ..... 18  
 defeat recording ..... 33  
 duplication ..... 32  
 earphone jack ..... 22  
 erasure prevention ..... 5  
 f.adv button ..... 24, 46  
 fast forward search ..... 46  
 f.fwd▶ button ..... 25, 46  
 f.fwd button ..... 22  
 front panel ..... 22  
 glossary ..... 63  
 helpful hints ..... 64-65  
 hookups ..... 6-7, 32  
 index search ..... 61  
 language selection ..... 9  
 line input mode ..... 10, 32, 63  
 long play ..... 30, 63  
 lp ..... 30, 63  
 memory  
   button ..... 25, 42, 44-45  
   real-time counter ..... 42  
   rewind, power off ..... 57  
 menu  
   button ..... 24  
   front panel button access ..... 22  
 mute button ..... 25  
 number buttons ..... 24  
 one-touch recording ..... 31  
 pause/still button ..... 25, 46  
 picture, adjusting ..... 26-27  
 play button ..... 22, 24  
 playback options ..... 46  
 playing ..... 29  
 power  
   button ..... 22, 24  
   cord ..... 7, 23  
 real-time counter memory ..... 42  
 rear panel ..... 23  
 rec/otr button ..... 22, 25  
 record light ..... 22  
 recording ..... 30  
 reminder ..... 60  
 remote  
   control  
     buttons ..... 24-25  
     using ..... 5  
   locator ..... 59  
   sensor ..... 22  
 repeat play ..... 43  
 rerecording ..... 32  
 rew(ind) button ..... 22  
 rew(ind)/◀ button ..... 25, 46  
 rewinding ..... 46  
 safety precautions ..... 3  
 searching ..... 46  
 sensor (remote) ..... 22  
 sharpness, adjusting ..... 26-27  
 skip search button ..... 24  
 sleep timer ..... 52  
 slow  
   button ..... 24, 46  
   motion playback ..... 46  
 slp ..... 30, 63  
 smart picture  
   button ..... 24  
   setting ..... 58  
 smartclock ..... 14-17  
 smartlock ..... 48-51  
 sp ..... 30, 63  
 specifications ..... 62  
 standard play ..... 30, 63  
 status display ..... 28  
 status/exit button ..... 25, 28  
 still picture ..... 46  
 stop/▼ button ..... 25  
 stop/eject button ..... 22  
 super high speed searching ..... 46  
 super long play ..... 30, 63  
 table of contents ..... 4  
 tape  
   duplication ..... 32  
   speed ..... 30, 63  
 time  
   setting ..... 12-17  
   zone ..... 19  
 timer recording  
   cancelling ..... 37  
   reviewing ..... 37  
   setting ..... 34-36  
   with vcr plus+ programming  
     system ..... 40-41  
 tint, adjusting ..... 26-27  
 tracking ..... 57  
 var.slow button ..... 25, 46  
 vcr plus+  
   /enter button ..... 25, 40  
   programming system ..... 38-41  
   timer recording ..... 40-41  
 video jack ..... 7, 22, 32  
 volume bar ..... 56  
 warranty ..... 66



# SUPPLIED ACCESSORIES

*The following items are supplied with your TV/VCR; they are provided to help you use or set up your TV/VCR.*

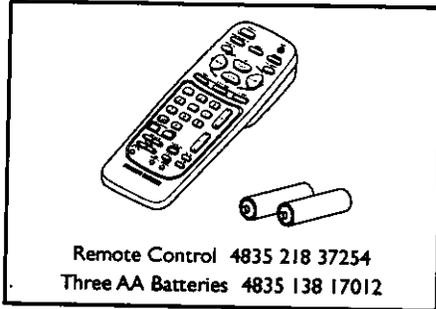

Remote Control 4835 218 37254  
Three AA Batteries 4835 138 17012


# OPTIONAL ACCESSORIES

*The following additional items are not provided with your TV/VCR, but they are designed for use with your new TV/VCR. To order these optional accessories, contact us at:*


**Philips Parts & Accessories Marketing Department  
401 East Old Andrew Johnson Highway  
P.O. Box 555  
Jefferson City, TN 37760  
1-800-851-8885.**




VHS Cassette Rewinder  
#M61117

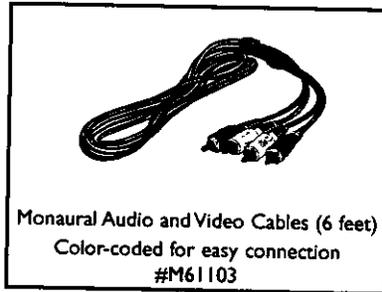

Monaural Audio and Video Cables (6 feet)  
Color-coded for easy connection  
#M61103

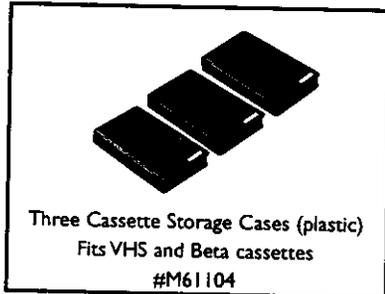

Three Cassette Storage Cases (plastic)  
Fits VHS and Beta cassettes  
#M61104

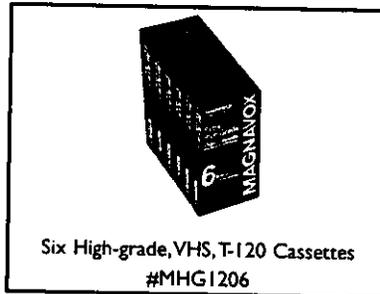

Six High-grade, VHS, T-120 Cassettes  
#MHG1206



As an ENERGY STAR® Partner, Philips Consumer Electronics Company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark.



This owner's manual is made of recycled paper.

IB8130E001  
Printed In Malaysia  
0EMN0???? / T5014UQ \*\*\*\*\*