

# History

Version	Modification	Date	Remark
Ver.1.0	Released 2022 CAC Multi-position AHU for North America	22. 12. 09	

## **Features & Benefits**

#### CAC Single - Superior performance

## Stabilize the atmosphere with broad temperature allowance and control


Samsung is dedicated to supporting comfortable living and working environments based on the strength of its technologies. With a single unit, CAC Single delivers reliable comfort and control over multiple areas to ensure a pleasant atmosphere in any climate.

#### Wide temperature performance

No matter how extreme the temperature, the highperforming CAC Single can handle the conditionwithout the need for an additional unit. Featuring a wide temperature allowance, it can cool in heat of up to 50 and provide warmth in the freezing cold of -20°C to ensure a constant and comfortable home environment.

#### Ideal comfort in minutes

The CAC Single digital inverter air conditioner works at maximum capacity at startup. As soon as the temperature reaches the desired or set temperature, CAC Single performs fine adjustments to cope with any changes. This means less temperature fluctuation and ideal comfort in a matter of minutes.

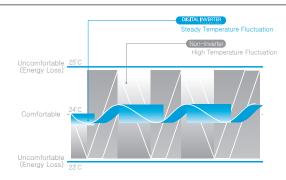

#### Versatile piping installation

CAC Single outdoor units offer a selection of pipe directions. The internal pipe connection ports allow four different pipe directions, supporting a neater, more organized-looking unit upon installation.



#### Various selection of Discharging

Flexible installation by simply adjusting discharging direction


- Top & Left Side Discharge: Basic direction placing the product vertically or horizontally
- Right Side Discharge: By simply changing location of condensate drain pan to the right, installers can place the product with right side discharge
- Bottom Discharge: With easy application of down-flow kit, installers can flip over the product and adjust discharging direction to bottom



## Nomenclature

#### **US Code**

#### **Model Name**

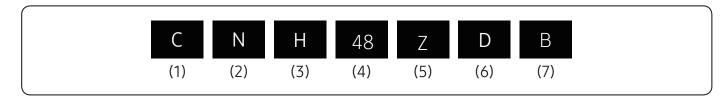

#### (1) Classification

С	CAC

### (2) Product Type

N	Indoor Unit
Χ	Outdoor Unit

#### (3) Mode

Α	Universal
С	Cooling Only
Н	Heat Pump

#### (4) Capacity

X1,000 Btu/h (2	digits)

#### (5-2) Feature1 (Outdoor Unit)

Α	Inv+Side+General Temp
S	Inv+Side+Low Temp
Q	Inv+Side+Tropical Temp
F	Inv+Top+Tropical Temp

#### (6) Feature

F	Flagship
S	Standard
D	Deluxe
Р	Premium

#### (7) Version

<b>B</b> 2022
---------------


#### (5-1) Product Notation (Indoor Unit)

1	1 Way Cassette / Wind-Free 1Way Cassette
N	(Wind-Free) 4 Way Cassette (600x600)
4	(Wind-Free) 4 Way Cassette
6	360 Cassette
L	LSP Duct
Н	HSP Duct
С	Ceiling
J	Console
Α	AR9500 (Wall Mounted)
Т	MAX4 (Wall Mounted)
Z	Multi-position AHU

## Nomenclature

#### Indoor Unit

#### **Model Name**

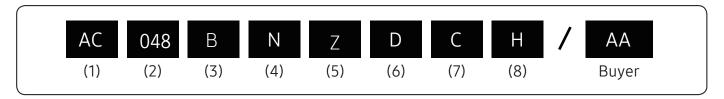

#### (1) Classification

AC	CAC
(2) Capacity	
	X1,000 Btu/h (3 digits)
	71,000 btu/11 (5 digits)
(3) Version	
_	
В	2022

#### (5) Product Notation

1	1 Way Cassette / Wind-Free 1Way Cassette
N	(Wind-Free) 4 Way Cassette (600x600)
4	(Wind-Free) 4 Way Cassette
6	360 Cassette
L	LSP Duct
Н	HSP Duct
С	Ceiling
J	Console
Α	AR9500 (Wall Mounted)
Т	MAX4 (Wall Mounted)
Z	Multi-position AHU

### (4) Product Type

N	Indoor Unit
Χ	Outdoor Unit

#### (6) Feature

F	Flagship
S	Standard
D	Deluxe
Р	Premium

### (7) Rating Voltage

<b>С</b> 1Ф, 208-230V,60Hz
----------------------------


#### (8) Mode

С	Cooling Only
Н	Heat Pump

## Nomenclature

#### **Outdoor Unit**

#### **Model Name**

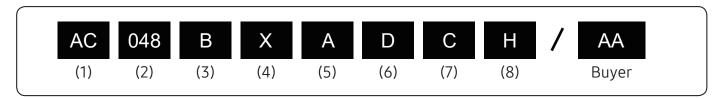

#### (1) Classification

AC	CAC

Α	Inv+Side+General Temp
S	Inv+Side+Low Temp
Q	Inv+Side+Tropical Temp
F	Inv+Top+Tropical Temp

### (2) Capacity

 x 1000 Btu/h (3	digits)	

#### (6) Feature2

F	Flagship	
S	Standard	
D	Deluxe	
Р	Premium	

### (3) Version

В	2022

### (7) Rating Voltage

С	1Ф, 208~230V, 60Hz
Н	3Ф, 400V, 60Hz

### (4) Product Type

N	Indoor Unit (NASA)
Χ	Outdoor Unit (NASA)

#### (8) Mode

Н	Heat Pump(R410A)
С	Cooling Only(R410A)
Е	Heat Pump(R22)
D	Cooling Only(R22)

# Line-up

## Indoor unit

		Capacity ( kBtu/h)										
Model	18	24	30	36	42	48						
Multi-position AHU												

## **Outdoor Unit**

	Capacity ( kBtu/h)										
Model	18	24	30	36	42	48					
1Phase											

## Contents

Multi-position AHU	9
Outdoor Units	33
Installation	52

1. Specification	10
2. Summary Table	14
3. Capacity Table	15
4. Dimensional Drawing	21
5. Electrical Wiring Diagram	24
6. Sound Data	25
7. Fan characteristics (P-Q Curve)	29

Madal Ni		Indoor Unit			AC018BNZDCH/AA	AC024BNZDCH/AA	AC030BNZDCH/AA
Model Na	anie	Outdoor Unit			AC018BXADCH/AA	AC024BXADCH/AA	AC030BXADCH/AA
LIC Codo		Indoor Unit			CNH18ZDB	CNH24ZDB	CNH30ZDB
US Code		Outdoor Unit			CXH18ADB	CXH24ADB	CXH30ADB
	Mode	<u>'</u>		-	Heat Pump	Heat Pump	Heat Pump
				kW	1.47 / 5.28 / 6.45	2.34 / 7.03 / 8.79	2.49 / 8.79 / 9.96
			Cooling	Btu/h	5,000 / 18,000 / 22,000	8,000 / 24,000 / 30,000	8,500 / 30,000 / 34,000
	Dorformanco	Capacity		US RT	0.42 / 1.50 / 1.83	0.67 / 2.00 / 2.50	0.71 / 2.50 / 2.83
	Performance	(Min/Std/Max)		kW	1.47 / 5.86 / 8.50	2.05 / 7.91 / 10.26	2.11 / 9.38 / 10.84
			Heating	Btu/h	5,000 / 20,000 / 29,000	7,000 / 27,000 / 35,000	7,200 / 32,000 / 37,000
				US RT	0.42 / 1.67 / 2.42	0.58 / 2.25 / 2.92	0.60 / 2.67 / 3.08
		Power Input	Cooling	kW	0.49 / 1.73 / 2.60	0.65 / 2.47 / 3.27	0.65 / 3.16 / 4.16
		(Min/Std/Max)	Heating	KVV	0.43 / 1.89 / 4.51	0.53 / 2.83 / 5.30	0.54 / 3.13 / 5.30
	Power	Current Input	Cooling	А	3.0 / 7.9 / 11.5	4.3 / 11.2 / 14.5	4.6 / 14.2 / 18.5
	Power	(Min/Std/Max)	Heating	A	2.6 / 8.6 / 20.0	3.5 / 12.7 / 24.0	3.6 / 14.0 / 24.0
		Current	MCA	А	20.1	24.1	24.0
		Current	MOP	А	25.0	30.0	30.0
		EER2	Cooling	-	3.05	2.84	2.78
		EERZ	Cooling(US)	(Btu/h)/W	10.40	9.70	9.50
	Efficiency	COP2	Heating	W/W	3.10	2.80	3.00
Cuctor		SEER2		-	16.2	16.9	16.6
System		HSPF2		-	8.1	7.9	7.5
		Liquid Pipe		Туре	Flare	Flare	Flare
		Liquiu Pipe		Φ, mm(inch)	6.35 (1/4)	6.35 (1/4)	9.52 (3/8)
		Gas Pipe		Туре	Flare	Flare	Flare
	Dino	Gas Pipe		Φ, mm(inch)	12.7 (1/2)	15.88 (5/8)	15.88 (5/8)
	Pipe Connections	Heat Insulation		-	Both liquid and gas pipes	Both liquid and gas pipes	Both liquid and gas pipes
	Connections		Standard	m (ft)	7.5 (24.6) 7.5 (24.6)		7.5 (24.6)
		Pipe Length	Max.	m (ft) 50 (164.0) 50 (164.0)		50 (164.0)	50 (164.0)
		(ODU-IDU)	Elevation	m (ft)	30 (98.4)	30 (98.4)	30 (98.4)
			Chargeless	m (ft)	7.5 (24.6)	7.5 (24.6)	7.5 (24.6)
	Wiring	C	Min.	mm <sup>2</sup>	0.75	0.75	0.75
	Connections	Communication	Remark	-	F1,F2	F1,F2	F1,F2
		Туре	"	-	R410A	R410A	R410A
	Refrigerant	Facility Character		kg	2.0	2.6	2.6
		Factory Charging		lbs	4.41	5.73	5.73
	Option Code	Standard		-	01E2FC-105020-2F343C-370000	01E2FC-105020-27484F-370000	01E2FC-105020-275A5E-370000
	Option Code	Install		-	020010-100000-200000-300000	020010-100000-200000-300000	020010-100000-200000-300000
	Power Supply			Ф,#,V,Hz	1,2,208-230,60	1,2,208-230,60	1,2,208-230,60
		Туре		-	Fin & Tube	Fin & Tube	Fin & Tube
	Heat	Material	Fin	-	Al	Al	Al
	Exchanger	Material	Tube	-	Cu	Cu	Cu
		Fin Treatment		-	Green Hydrophile	Green Hydrophile	Green Hydrophile
		Туре		-	Sirocco	Sirocco	Sirocco
		O		Γ.	1	1	1
		Quantity		EA	1	1	•
		Quantity			17.0/15.0/14.0	21.5/18.0/15.5	28.5/26.0/24.0
	Fan	Air Flow Rate	H/M/L	m³/min	17.0/15.0/14.0	21.5/18.0/15.5	28.5/26.0/24.0
	Fan		H/M/L				
Indoo	Fan	Air Flow Rate	H/M/L Min/Std/Max	m³/min ft³/min l/s	17.0/15.0/14.0 600/530/494 283/250/233	21.5/18.0/15.5 759/636/547 358/300/258	28.5/26.0/24.0 1007/918/848 475/433/400
Indoor	Fan	Air Flow Rate  External Static Pressue		m³/min ft³/min	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0
Indoor Unit	Fan Motor	Air Flow Rate  External Static Pressue Type		m <sup>3</sup> /min ft <sup>3</sup> /min l/s In Wg	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM
	Fan Motor	Air Flow Rate  External Static Pressue Type Output		m³/min ft³/min l/s In Wg - W x n	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1
		Air Flow Rate  External Static Pressue Type Output Drain Pipe		m <sup>3</sup> /min ft <sup>3</sup> /min l/s In Wg	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM
	Fan Motor	Air Flow Rate  External Static Pressue Type Output Drain Pipe Sound Pressure Level	Min/Std/Max  H/M/L	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35
	Fan Motor Drain	Air Flow Rate  External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Leve	Min/Std/Max  H/M/L	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A) dB(A)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35
	Fan Motor Drain	Air Flow Rate  External Static Pressue  Type Output Drain Pipe Sound Pressure Level Sound Power Level Net Weight	Min/Std/Max  H/M/L	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34 58 44.5 (98.1)	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35 59 44.5 (98.1)	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35 59 57.0 (125.7)
	Fan Motor Drain Sound	Air Flow Rate  External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Leve	Min/Std/Max  H/M/L	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A) dB(A)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34 58 44.5 (98.1) 49.0 (108.0)	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35 59 44.5 (98.1) 49.0 (108.0)	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35 59 57.0 (125.7) 62.5 (137.8)
	Fan Motor Drain	Air Flow Rate  External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Lev Net Weight Gross Weight	Min/Std/Max  H/M/L	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A) kg(lbs)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34 58 44.5 (98.1)	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35 59 44.5 (98.1)	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35 59 57.0 (125.7)
	Fan Motor Drain Sound	Air Flow Rate  External Static Pressue  Type Output Drain Pipe Sound Pressure Level Sound Power Level Net Weight	Min/Std/Max  H/M/L	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A) kg(lbs) kg(lbs)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34 58 44.5 (98.1) 49.0 (108.0)	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35 59 44.5 (98.1) 49.0 (108.0)	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35 59 57.0 (125.7) 62.5 (137.8)
	Fan Motor Drain Sound External	Air Flow Rate  External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Lev Net Weight Gross Weight	Min/Std/Max  H/M/L el  WxHxD)	m³/min ft³/min l/s In Wg - W x n Φ, inch dB(A) kg(lbs) kg(lbs)	17.0/15.0/14.0 600/530/494 283/250/233 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 40/37/34 58 44.5 (98.1) 49.0 (108.0) 445 x 1,092 x 533	21.5/18.0/15.5 759/636/547 358/300/258 0/0.58/0.8 ECM 290 x 1 FPT 3/4" 41/38/35 59 44.5 (98.1) 49.0 (108.0) 445 x 1,092 x 533	28.5/26.0/24.0 1007/918/848 475/433/400 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 41/38/35 59 57.0 (125.7) 62.5 (137.8) 533 x 1,219 x 533

Model Na	ımo	Indoor Unit			AC018BNZDCH/AA	AC024BNZDCH/AA	AC030BNZDCH/AA		
Model Na	iiie	Outdoor Unit			AC018BXADCH/AA	AC024BXADCH/AA	AC030BXADCH/AA		
US Code		Indoor Unit			CNH18ZDB	CNH24ZDB	CNH30ZDB		
US Code		Outdoor Unit			CXH18ADB	CXH24ADB	CXH30ADB		
	Casing	Material		-	Steel	Steel	Steel		
	Control	Infrared remote	control	=	AR-EH04U	AR-EH04U	AR-EH04U		
	System	Wired remote co	ntrol	=					
Indoor		Drain Pump		-	-	-	-		
Unit	Drain Pump	Max.lifting Height / [	Displacement	in / gal/h	-	-	-		
Unit	Additional	Air Filter Base (option, for vercal in			VFB-1 (MERV 8)	VFB-1 (MERV 8)	VFB-2 (MERV 8)		
	Accessories				VHK-103A	VHK-103A	VHK-205A		
		Heater kit (option, s	see NOTE 5)	-	VHK-105A	VHK-105A	VHK-210A		
	Power Supply			Ф,#,V,Hz	1,2,208-230,60	1,2,208-230,60			
		Туре		=	Fin & Tube	Fin & Tube	Fin & Tube		
	Heat		Fin	=	AL	Al	Al		
	Exchanger	Material	Tube	-	Cu Cu		Cu		
		Fin Treatment		-	Anti-Corrosion	Anti-Corrosion	Anti-Corrosion		
	Compressor	Model		_	UG8T265FXAEW	UG8T300FUBJUSG			
		Туре		_	Twin BLDC	Twin BLDC			
		Output		kW	2.32	2.82			
		Oil	Туре	-	POE	POE			
			Initial Charge	cc (fl oz)	700	700 1200			
		Туре		-	Propeller	Propellar	Propellar		
		Discharge direct	ion	-	Front	Front	Front		
		Quantity		EA	1	1	Anti-Corrosion UG8T300FUBJUSG Twin BLDC 2.82 POE 1200 Propellar Front 1 76 2,684		
	Fan	, ,		m <sup>3</sup> /min	61	76	AR-EH04U N MWR-WG00UN / MWR-SH11UN VFB-2 (MERV 8)  VHK-205A VHK-210A 1,2,208-230,60 Fin & Tube Al Cu Anti-Corrosion UG8T300FUBJUSG Twin BLDC 2.82 POE 1200 Propellar Front 1 76		
Dutdoor		Air Flow Rate	H/M/L	ft³/min	2,154	2,684			
Jnit			.,.,_	l/s	1,017	1,267			
		Туре		-	BLDC	BLDC			
	Fan Motor	Output		Wxn	125 x 1	125 x 1			
		Sound Pressure	Cooling	dB(A)	48	50			
	Sound	Level	Heating	dB(A)	48	52			
	Souria	Sound Power Lev		dB(A)	62	65			
		Net Weight	VEL	kg(lbs)	53.7 (118.4)	72.0 (158.7)	7.1		
		Gross Weight		kg(lbs)	57.7 (127.2)	77.0 (169.8)			
	External			mm	880 x 798 x 310	940 x 998 x 330			
	Dimension	Net Dimensions	(WxHxD)	inch	34.65 x 31.42 x 12.20	37.01 x 39.29 x 12.99			
	5			mm	1,023 x 881 x 413	995 x 1,096 x 426			
		Gross Dimension	is (WxHxD)	inch	40.28 x 34.69 x 16.26	39.17 x 43.15 x 16.77	,		
	Casing	Material	Body	-	40.28 X 34.09 X 10.20				
	Operating	Cooling	Dody	°C (°F)	-18~50 (0~122)	-18~50 (0~122)	-18~50 (0~122)		
	Temp. Range			°C (°F)	-25~24 (-13~75)	-25~24 (-13~75)	-20~24 (-4~75)		
	renip. Kange	ricating		C(1F)	-23~24 (-13~/3)	-25~24 (-15~/5)	-20~24 (-4~/3)		



- Specification may be subject to change without prior notice.
   1) Performances are based on the following test conditions.

   Cooling:Indoortemperature: 80°F(26.7°C) DB, 67°F(19.4°C) WB, Outdoortemperature: 95°F(35°C) DB, 75°F(23.9°C) WB
   Heating: Indoortemperature: 70°F(21.1°C) DB, 60°F(15.6°C) WB, Outdoortemperature: 47°F(8.3°C) DB, 43°F(6.1°C) WB
   Equivalent refrigerant piping length 7.5m(24.6ft), Level differences: 0m(0ft))

   Select wire size based on the value of MCA
   Sound pressure level is obtained in an anechoic room.

   Sound pressure level is a relative value, depending on the distance and acoustic environment.
   Sound pressure level may differ depending on operation condition.
   dBA = A-weighted sound pressure level / Reference acoustic pressure 0 dB = 20uPa

   Sound power level is an absolute value that a sound source generates.

   dBA = A-weighted sound power level
   Reference power: 1pW / Measured according to ISO 3741

   VHK-\*03/05/10A: 3/5/10[kW] supplemental electric heat kit.
   These products contain R410A which is fluorinated greenhouse gas.

  - 6) These products contain R410A which is fluorinated greenhouse gas.

Madal NI		Indoor Unit			AC036BNZDCH/AA	AC042BNZDCH/AA	AC048BNZDCH/AA		
Model Na	ame	Outdoor Unit			AC036BXADCH/AA	AC042BXADCH/AA	AC048BXADCH/AA		
US Code		Indoor Unit			CNH36ZDB	CNH42ZDB	AC048BXADCH/AA CNH48ZDB CXH48ADB Heat Pump 3.66 / 14.07 / 15.24 12,500 / 48,000 / 52,00 1.04 / 4.00 / 4.33 3.22 / 15.53 / 18.46 11,000 / 53,000 / 63,00 0.92 / 4.42 / 5.25 0.97 / 5.45 / 6.69 0.82 / 5.55 / 7.67 5.1 / 24.2 / 29.4 4.4 / 24.6 / 32.0 32.8 40 2.58 8.80 2.58 8.80 2.80 16.7 8.1 Flare 9.52 (3/8) Flare 15.88 (5/8) Both liquid and gas pipe 7.5 (24.6) 75 (24.6) 0.75 F1,F2 R-410A 3.4 7.50 01E2FC-105020-278C9B-37000		
02 Code		Outdoor Unit			CXH36ADB	CXH42ADB	CXH48ADB		
	Mode	•		-	Heat Pump	Heat Pump	Heat Pump		
				kW	2.93 / 10.55 / 10.84	3.52 / 12.31 / 13.48	3.66 / 14.07 / 15.24		
			Cooling	Btu/h	10,000 / 36,000 / 37,000	12,000 / 42,000 / 46,000	12,500 / 48,000 / 52,000		
	D 6	Capacity		US RT	0.83 / 3.00 / 3.08	1.00 / 3.50 / 3.83	1.04 / 4.00 / 4.33		
	Performance	(Min/Std/Max)		kW	2.93 / 11.72 / 14.65	3.08 / 13.77 / 17.58			
			Heating	Btu/h	10,000 / 40,000 / 50,000	10,500 / 47,000 / 60,000			
				US RT	0.83 / 3.33 / 4.17	0.88 / 3.92 / 5.00			
		Power Input	Cooling		0.92 / 3.75 / 4.88	0.94 / 4.42 / 5.60			
		(Min/Std/Max)	Heating	kW	0.80 / 3.91 / 6.09	0.81 / 4.92 / 7.40			
		Current Input	Cooling		5.0 / 16.8 / 21.7	5.1 / 19.8 / 24.8			
	Power	(Min/Std/Max)	Heating	Α	4.3 / 17.5 / 24.0	4.4 / 22.1 / 32.0			
			MCA	А	24.5	32.2			
		Current	MOP	A	35	40			
			Cooling	-	2.81	2.78			
		EER2	Cooling(US)	(Btu/h)/W	9.60	9.50			
	Efficiency	COP2	Heating	W/W	3.00	2.80			
	Efficiency	SEER2	riedting	-	16.6	17.5			
System		HSPF2			8.4				
				Tunc	8.4 Flare				
		Liquid Pipe		Type Φ. mm(inch)	9.52 (3/8)				
				., , ,					
		Gas Pipe	71			8.4 8.1 Flare Flare 2 (3/8) 9.52 (3/8) Flare Flare 88 (5/8) 15.88 (5/8) and gas pipes Both liquid and gas pipes (24.6) 7.5 (24.6)			
	Pipe	Haat laaulatiaa		Φ, mm(inch)	15.88 (5/8)				
	Connections	Heat Insulation	Ic. 1 1	-	Both liquid and gas pipes				
		Direct could	Standard	m (ft)	,	7.5 (24.6)			
		Pipe Length	Max.	m (ft)	75 (246.0)	75 (246.0)			
		(ODU-IDU)	Elevation	m (ft)	30 (98.4)	30 (98.4)			
			Chargeless	m (ft)	7.5 (24.6)	7.5 (24.6)			
	Wiring	Communication	Min.	mm <sup>2</sup>	0.75	0.75			
	Connections	Communication	Remark	1	F1,F2	F1,F2	F1,F2		
		Type		-	R-410A	R-410A	R-410A		
	Refrigerant	Factory Charging		kg	2.9	3.4	3.4		
		actory charging		lbs	6.39	7.50	7.50		
	Option Code	Standard		-	01E2FC-105020-276975-370005	01E2FC-105020-277D89-37000D	01E2FC-105020-278C9B-37000D		
	Option code	Install		-	020010-100000-200000-300000	020010-100000-200000-300000	020010-100000-200000-300000		
	Power Supply			Φ,#,V,Hz	1,2,208-230,60	1,2,208-230,60	1,2,208-230,60		
		Туре		-	Fin & Tube	Fin & Tube	Fin & Tube		
	Heat	Material	Fin	-	Al	Al	Al		
	Exchanger	Material	Tube	-	Cu	Cu	Cu		
		Fin Treatment		-	Green Hydrophile	Green Hydrophile	Green Hydrophile		
		Туре		-	Sirocco	Sirocco	Sirocco		
		Quantity		EA	1	1	1		
		Quantity		7	34.8/30.4/25.5	37.1/34.0/31.0	42.3/39.3/35.6		
				m³/min	J4.0/JU.4/ZJ.J				
	Fan	Air Flow Rate	H/M/L	m <sup>3</sup> /min ft <sup>3</sup> /min			1494/1388/1257		
	Fan	Air Flow Rate	H/M/L	ft³/min	1229/1074/901	1310/1201/1095			
	Fan	Air Flow Rate		ft³/min l/s	1229/1074/901 580/507/425	1310/1201/1095 618/567/517	705/655/593		
Indoor	Fan		H/M/L Min/Std/Max	ft³/min	1229/1074/901	1310/1201/1095	705/655/593		
		External Static Pressue Type		ft³/min l/s	1229/1074/901 580/507/425	1310/1201/1095 618/567/517	705/655/593 0/0.58/1.0		
	Fan Motor	External Static Pressue Type Output		ft³/min l/s	1229/1074/901 580/507/425 0/0.58/1.0	1310/1201/1095 618/567/517 0/0.58/1.0	705/655/593 0/0.58/1.0 ECM		
		External Static Pressue Type		ft³/min l/s In Wg -	1229/1074/901 580/507/425 0/0.58/1.0	1310/1201/1095 618/567/517 0/0.58/1.0 ECM	705/655/593 0/0.58/1.0 ECM 590 x 1		
	Fan Motor	External Static Pressue Type Output	Min/Std/Max	ft <sup>3</sup> /min l/s In Wg - W x n Φ, inch	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4"	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4"	705/655/593 0/0.58/1.0 ECM 590 x 1 FPT 3/4"		
	Fan Motor	External Static Pressue Type Output Drain Pipe		ft <sup>3</sup> /min l/s In Wg - W x n	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1	705/655/593 0/0.58/1.0 ECM 590 x 1 FPT 3/4"		
	Fan Motor Drain	External Static Pressue Type Output Drain Pipe Sound Pressure	Min/Std/Max  H/M/L	ft <sup>3</sup> /min l/s In Wg - W x n Φ, inch	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4"	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4"	705/655/593 0/0.58/1.0 ECM 590 x 1 FPT 3/4" 47/45/43		
	Fan Motor Drain	External Static Pressue Type Output Drain Pipe Sound Pressure Level	Min/Std/Max  H/M/L	ft <sup>3</sup> /min l/s In Wg - W x n Φ, inch dB(A)	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 45/42/39	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 46/43/40	705/655/593 0/0.58/1.0 ECM 590 x 1 FPT 3/4" 47/45/43		
	Fan Motor Drain	External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Lev	Min/Std/Max  H/M/L	ft <sup>3</sup> /min l/s In Wg - W x n Φ, inch dB(A)	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 45/42/39	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 46/43/40	705/655/593 0/0.58/1.0 ECM 590 x 1 FPT 3/4" 47/45/43		
	Fan Motor Drain	External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Lev Net Weight Gross Weight	Min/Std/Max  H/M/L	ft <sup>3</sup> /min l/s In Wg  - W x n Φ, inch dB(A) kg(lbs) kg(lbs)	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 45/42/39 63 57.0 (125.7) 62.5 (137.8)	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 46/43/40 64 75.5 (166.4) 81.5 (179.7)	705/655/593  0/0.58/1.0  ECM 590 x 1  FPT 3/4"  47/45/43  65 75.5 (166.4) 81.5 (179.7)		
Indoor Unit	Fan Motor Drain Sound	External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Lev Net Weight	Min/Std/Max  H/M/L	ft <sup>3</sup> /min l/s In Wg  - W x n Φ, inch dB(A) kg(lbs) kg(lbs) mm	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 45/42/39 63 57.0 (125.7) 62.5 (137.8) 533 x 1,219 x 533	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 46/43/40 64 75.5 (166.4) 81.5 (179.7) 622 x 1,492 x 553	705/655/593  0/0.58/1.0  ECM  590 x 1  FPT 3/4"  47/45/43  65  75.5 (166.4)  81.5 (179.7)  622 x 1,492 x 553		
	Fan Motor Drain Sound External	External Static Pressue Type Output Drain Pipe Sound Pressure Level Sound Power Lev Net Weight Gross Weight	Min/Std/Max  H/M/L el  WxHxD)	ft <sup>3</sup> /min l/s In Wg  - W x n Φ, inch dB(A) kg(lbs) kg(lbs)	1229/1074/901 580/507/425 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 45/42/39 63 57.0 (125.7) 62.5 (137.8)	1310/1201/1095 618/567/517 0/0.58/1.0 ECM 410 x 1 FPT 3/4" 46/43/40 64 75.5 (166.4) 81.5 (179.7)	705/655/593  0/0.58/1.0  ECM  590 x 1  FPT 3/4"  47/45/43  65  75.5 (166.4)  81.5 (179.7)		

NA - d - l NI -		Indoor Unit			AC036BNZDCH/AA	AC042BNZDCH/AA	AC048BNZDCH/AA		
Model Na	ime	Outdoor Unit							
LIC C. I.		Indoor Unit			CNH36ZDB	CNH42ZDB	CNH48ZDB		
US Code		Outdoor Unit			CXH36ADB	CO36BXADCH/AA			
	Casing	Material		-	Steel	Steel	Steel		
	Control	Infrared remote	control	-	AR-EH04U	AR-EH04U	AR-EH04U		
	System	Wired remote co	ntrol	=	MWR-WG00UN / MWR-SH11UN	MWR-WG00UN / MWR-SH11UN	MWR-WG00UN / MWR-SH11UN		
Indoor	D D	Drain Pump		-	-	-	-		
Unit	Drain Pump	Max.lifting Height / [	isplacement	in / gal/h	-	-	-		
UIIIL		Air Filter Base		,	VED 3 (MEDV 0)	VED 7 (MEDV 0)	VED 7 (MEDV 0)		
	Additional	(option, for vercal in	nstallation)	ı	VFB-2 (MERV 8)	VFB-3 (MERV 8)	VFB-3 (MERV 8)		
	Accessories	Heater kit (ontion s	:oo NOTE 5)		VHK-205A	VHK-305A	VHK-305A		
		ricater kit (option, s	icc NOTE 3/		VHK-210A	VHK-310A			
	Power Supply			Φ,#,V,Hz	1,2,208-230,60	1,2,208-230,60	1,2,208-230,60		
		Туре		-	Fin & Tube	Fin & Tube	Fin & Tube		
	Heat	Material	Fin	İ	Al	Al	Al		
	Exchanger	Material	Tube	-	Cu	Cu	Cu		
		Fin Treatment		ii e	Anti-Corrosion	Anti-Corrosion	Anti-Corrosion		
	Compressor	Model		ii e	UG5TK1450FJXSG	UG5TK1450FJXSG	UG5TK1450FJXSG		
		Туре		ii e	Twin BLDC	Twin BLDC	Twin BLDC		
		Output		kW	4.19	4.19	4.19		
		Oil	Туре	-	PVE	PVE			
			Initial Charge	cc (fl oz)	1700	1700	1700		
		Туре		=	Propellar	Propellar	Propellar		
		Discharge directi	ion	=	Front	Front	Front		
	Fan	Quantity		EA	2	2	2		
	Fall			m³/min	100	100	Fin & Tube  Al  Cu  Anti-Corrosion  UG5TK1450FJXSG  Twin BLDC  4.19  PVE  1700  Propellar  Front  2  100  3,532  1,667  BLDC		
Outdoor		Air Flow Rate	H/M/L	ft³/min	3,532	3,532	3,532		
Unit				l/s	1,667	1,667	1,667		
	Fan Motor	Туре	•	1	BLDC	BLDC	BLDC		
	Fall Motol	Output		Wxn	125 x 2	125 x 2	125 x 2		
		Sound Pressure	Cooling	dB(A)	52	53	56		
	Sound	Level	Heating	dB(A)	54	55	58		
		Sound Power Lev	/el	dB(A)	69	70	72		
		Net Weight		kg(lbs)	86.0(189.6)	88.5(195.1)	88.5(195.1)		
		Gross Weight		kg(lbs)	95.5 (210.5)	98.0(216.1)	98.0(216.1)		
	External	Net Dimensions	(\\(\)\(\)\(\)\(\)	mm	940 x 1,210 x 330	940 x 1,210 x 330	940 x 1,210 x 330		
	Dimension	Net Dimensions	(WXHXD)	inch	37.01 x 47.64 x 12.99 37.01 x 47.64 x 12.99		37.01 x 47.64 x 12.99		
		Cross Dimension	s (MVLIVD)	mm	995 x 1,388 x 426 995 x 1,388 x 426		995 x 1,388 x 426		
		Gross Dimension	2 (MXHXD)	inch	39.17 x 54.65 x 16.77 39.17 x 54.65 x 16.77		39.17 x 54.65 x 16.77		
	Casing	Material	Body	-	Steel	Steel	Steel		
	Operating	Cooling		°C (°F)	-18~50 (0~122)	-18~50 (0~122)			
	Temp. Range	Heating		°C (°F)	-20~24 (-4~75)	-18~50 (0~122) -20~24 (-4~75)	-20~24 (-4~75)		



- Specification may be subject to change without prior notice.
   1) Performances are based on the following test conditions.
   Cooling: Indoor temperature: 80°F(26.7°C) DB, 67°F(19.4°C) WB, Outdoor temperature: 95°F(35°C) DB, 75°F(23.9°C) WB
   Heating: Indoor temperature: 70°F(21.1°C) DB, 60°F(15.6°C) WB, Outdoor temperature: 47°F(8.3°C) DB, 43°F(6.1°C) WB
   Equivalent refrigerant piping length 7.5m(24.6ft), Level differences: 0m(0ft))
   2) Select wire size based on the value of MCA
   3) Sound pressure level is obtained in an anechoic room.
   Sound pressure level is a relative value, depending on the distance and acoustic environment.
   Sound pressure level may differ depending on operation condition.
   dBA = A-weighted sound pressure level / Reference acoustic pressure 0 dB = 20uPa
   4) Sound power level is an absolute value that a sound source generates.
   dBA = A-weighted sound power level
   Reference power: 1pW / Measured according to ISO 3741
   5) VHK-\*03/05/10A: 3/5/10[kW] supplemental electric heat kit.
   6) These products contain R410A which is fluorinated greenhouse gas.

  - 6) These products contain R410A which is fluorinated greenhouse gas.

# 2. Summary Table

## **Multi-position AHU**

#### **Performance Characteristics**

	Net		Capac	ity		Airflow	Sound Pressure Level	Cound Dower Lovel
Model Code	Weight (lbs)		Cooling (Btu/h)	Heating (Btu/h)	Fan Speed	(Cooling/Heating) (CFM)	(dBA)	(dBA)
		Max.	22,000	29,000	High	600 / 600	40	58
CNH18ZDB (AC018BNZDCH/AA)	98.1	Std.	18,000	20,000	Mid	530 / 530	37	-
(ACOTODINZDCIT/AA)		Min.	5,000	5,000	Low	494 / 494	34	-
		Max.	30,000	35,000	High	759 / 759	41	59
CNH24ZDB (AC024BNZDCH/AA)	98.1	Std.	24,000	27,000	Mid	636 / 636	38	-
(ACUZ4BINZDCI I/AA)		Min.	8,000	7,000	Low	547 / 547	35	-
		Max.	34,000	37,000	High	1,007 / 1,007	41	59
CNH30ZDB (AC030BNZDCH/AA)	125.7	Std.	30,000	32,000	Mid	918 / 918	38	-
(ACOJOBNZDCII/AA)		Min.	8,500	7,200	Low	848 / 848	35	-
		Max.	37,000	50,000	High	1,229 / 1,229	45	63
CNH36ZDB (AC036BNZDCH/AA)	125.7	Std.	36,000	40,000	Mid	1,074 / 1,074	42	-
(ACOJOBNZDCII/AA)		Min.	10,000	10,000	Low	901 / 901	39	-
		Max.	46,000	60,000	High	1,310 / 1,310	46	64
CNH42ZDB (AC042BNZDCH/AA)	166.4	Std.	42,000	47,000	Mid	1,201 / 1,201	43	-
(ACU4ZBINZDCI I/AA)		Min.	12,000	10,500	Low	1,095 / 1,095	40	-
		Max.	52,000	63,000	High	1,494 / 1,494	47	65
CNH48ZDB (AC048BNZDCH/AA)	166.4	Std.	48,000	53,000	Mid	1,388 / 1,388	45	-
(ACU40DINZDCH/AA)		Min.	12,500	11,000	Low	1,257 / 1,257	43	-



• Sound data is based on cooling operation.

#### **Electric Characteristics**

Мо	del		Outdoor U	nit		Inp	ut Curren	ıt (Ampei	res)	Power Supply	
Indoor Unit	Outdoor Unit	Rated	Voltage	e rang	e	Outdo	or Unit	Indoor	Total	MCA(A)	MOP(A)
indoor Unit	Outdoor Offic	Hz	Volts	Min.	Max	Cooling	Heating	Unit	Total	MCA(A)	MOP(A)
CNH18ZDB (AC018BNZDCH/AA)	CXH18ADB (ACO18 <b>B</b> XADCH/AA)	60	208 to 230	187	253	17.94	17.94	1.50	19.44	20.1	25
CNH24ZDB (AC024BNZDCH/AA)	CXH24ADB (AC024BXADCH/AA)	60	208 to 230	187	253	21.94	21.94	2.10	24.04	24.1	30
CNH30ZDB (AC030BNZDCH/AA)	CXH30ADB (AC030BXADCH/AA)	60	208 to 230	187	253	21.50	21.50	2.50	24.00	24.0	30
CNH36ZDB (AC036BNZDCH/AA)	CXH36ADB (ACO36BXADCH/AA)	60	208 to 230	187	253	20.88	20.88	3.60	24.48	24.5	35
CNH42ZDB (ACO42BNZDCH/AA)	CXH42ADB (ACO42BXADCH/AA)	60	208 to 230	187	253	28.63	28.63	3.40	32.03	32.2	40
CNH48ZDB (ACO48BNZDCH/AA)	CXH48ADB(AC048BXADCH/AA)	60	208 to 230	187	253	28.63	28.63	4.10	32.73	32.8	40

- MCA: Minimum circuit amperes
- MOP: Maximum Overcurrent Protective Device
- Select wire size based on the value of MCA

### **Multi-position AHU**

### (1) CNH18ZDB(AC018BNZDCH/AA) + CXH18ADB (AC018BXADCH/AA)

### Cooling

TC: Total Capacity, SHC: Sensible Heat Capacity, PI: Power Input

Outdoor								I	ndoor	Tempe	rature (	°F, DB	/WB)								
Temp.		68 / 57			72 / 61			77 / 64			80 / 67		82 / 70			86 / 72		90 / 75			
(°F, DB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
( F, DB)	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW
0	15.9	11.5	1.22	16.8	11.9	1.25	17.5	12.2	1.27	18.0	12.6	1.30	18.4	12.5	1.31	19.3	12.3	1.32	20.2	12.1	1.35
70	19.9	14.4	1.30	21.0	14.8	1.33	21.8	15.3	1.36	22.5	15.8	1.38	23.0	15.6	1.40	24.1	15.4	1.41	25.3	15.1	1.44
95	15.9	11.5	1.63	16.8	11.9	1.66	17.5	12.2	1.70	18.0	12.6	1.73	18.4	12.5	1.75	19.3	12.3	1.76	20.2	12.1	1.80
115	16.2	12.1	2.69	17.1	12.4	2.74	17.8	12.8	2.80	18.4	13.2	2.85	18.7	13.1	2.88	19.7	13.0	2.91	20.6	12.7	2.97
122	14.3	11.8	2.61	15.1	12.2	2.66	15.7	12.6	2.71	16.2	13.0	2.77	16.5	12.8	2.80	17.4	12.7	2.82	18.2	12.4	2.88

## Heating

TC : Total Capacity, PI : Power Input

Outdoor	Indoor Temperature (°F, DB)												
Temperature	6	61		64		68		70		2	2	!4	
(°F, DB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	
( ۲, ۵۵)	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	
-13	14.4	2.53	14.3	2.51	14.1	2.48	14.0	2.46	13.9	2.43	13.7	2.41	
-4	20.6	3.88	20.4	3.85	20.2	3.81	20.0	3.77	19.8	3.73	19.6	3.69	
14	26.8	4.67	26.5	4.63	26.3	4.58	26.0	4.54	25.7	4.49	25.5	4.45	
32	24.7	3.12	24.5	3.08	24.2	3.05	24.0	3.02	23.8	2.99	23.5	2.96	
47	20.6	1.95	20.4	1.93	20.2	1.91	20.0	1.89	19.8	1.87	19.6	1.85	
75.2	26.8	2.24	26.5	2.22	26.3	2.20	26.0	2.17	25.7	2.15	25.5	2.13	

## NOTE

### **Multi-position AHU**

### (2) CNH24ZDB(AC024BNZDCH/AA) + CXH24ADB (AC024BXADCH/AA)

### Cooling

TC: Total Capacity, SHC: Sensible Heat Capacity, PI: Power Input

Outdoor								I	ndoor	Tempe	ature (	°F, DB	/ WB)								
Temp.		68 / 57			72 / 61			77 / 64			80 / 67	'		82 / 70			86 / 72			90 / 75	
(°F, DB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
( F, DB)	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW
0	26.5	19.2	1.39	27.9	19.8	1.42	29.1	20.4	1.45	30.0	21.0	1.48	30.6	20.8	1.50	32.1	20.6	1.51	33.7	20.2	1.54
70	23.8	17.2	1.74	25.0	17.7	1.78	26.1	18.3	1.82	26.9	18.8	1.85	27.4	18.6	1.87	28.8	18.4	1.89	30.2	18.1	1.93
95	21.2	15.3	2.32	22.3	15.8	2.37	23.3	16.3	2.42	24.0	16.8	2.47	24.5	16.6	2.49	25.7	16.5	2.52	27.0	16.1	2.57
115	21.2	17.5	3.60	22.3	18.1	3.68	23.3	18.6	3.75	24.0	19.2	3.83	24.5	19.0	3.87	25.7	18.8	3.91	27.0	18.4	3.98
122	18.0	15.8	3.25	19.0	16.3	3.32	19.8	16.8	3.39	20.4	17.3	3.46	20.8	17.2	3.49	21.8	17.0	3.53	22.9	16.7	3.60

## Heating

TC: Total Capacity, PI: Power Input

Outdoor					Indo	or Tempera	ature (°F, D	B)				
	6	51	6	4	6	8	7	0	2	.2	2	24
Temperature	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
(°F, DB)	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW
-13	16.7	2.62	16.5	2.60	16.4	2.57	16.2	2.55	16.0	2.52	15.9	2.50
-4	27.8	5.32	27.5	5.26	27.3	5.21	27.0	5.16	26.7	5.11	26.5	5.06
14	27.8	5.10	27.5	5.05	27.3	5.00	27.0	4.95	26.7	4.90	26.5	4.85
32	30.6	3.79	30.3	3.75	30.0	3.72	29.7	3.68	29.4	3.64	29.1	3.61
47	27.8	2.92	27.5	2.89	27.3	2.86	27.0	2.83	26.7	2.80	26.5	2.77
75.2	37.6	3.64	37.2	3.61	36.8	3.57	36.5	3.54	36.1	3.50	35.7	3.47

## NOTE

### **Multi-position AHU**

### (3) CNH30ZDB(AC030BNZDCH/AA) + CXH30ADB (AC030BXADCH/AA)

### Cooling

TC: Total Capacity, SHC: Sensible Heat Capacity, PI: Power Input

Outdoor								I	ndoor	Tempe	rature (	°F, DB	/WB)								
Temp.		68 / 57			72 / 61			77 / 64			80 / 67			82 / 70			86 / 72			90 / 75	
	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
(°F, DB)	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW
0	33.2	24.0	1.78	34.9	24.7	1.82	36.4	25.5	1.86	37.5	26.3	1.90	38.3	26.0	1.91	40.2	25.7	1.93	42.2	25.2	1.97
70	29.7	21.5	2.23	31.3	22.1	2.28	32.6	22.8	2.32	33.6	23.5	2.37	34.3	23.3	2.39	36.0	23.1	2.42	37.8	22.6	2.47
95	26.5	19.2	2.97	27.9	19.8	3.03	29.1	20.4	3.10	30.0	21.0	3.16	30.6	20.8	3.19	32.1	20.6	3.22	33.7	20.2	3.29
115	23.9	19.7	3.87	25.1	20.3	3.95	26.2	21.0	4.03	27.0	21.6	4.11	27.5	21.4	4.15	28.9	21.2	4.19	30.4	20.7	4.27
122	19.9	17.5	3.42	21.0	18.0	3.49	21.8	18.6	3.56	22.5	19.1	3.63	23.0	18.9	3.67	24.1	18.7	3.71	25.3	18.4	3.78

## Heating

TC: Total Capacity, PI: Power Input

Outdoor					Indo	or Temper	ature (°F, D	В)				
	6	51	6	4	6	8	7	0	2	2	2	.4
Temperature	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
(°F, DB)	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW
-4	28.0	4.99	27.7	4.94	27.5	4.89	27.2	4.84	26.9	4.79	26.7	4.74
14	33.0	5.64	32.6	5.59	32.3	5.53	32.0	5.48	31.7	5.42	31.4	5.37
32	36.3	4.19	35.9	4.15	35.6	4.11	35.2	4.07	34.8	4.03	34.5	3.99
47	33.0	3.22	32.6	3.19	32.3	3.16	32.0	3.13	31.7	3.10	31.4	3.07
75.2	44.5	4.03	44.1	3.99	43.6	3.95	43.2	3.91	42.8	3.87	42.3	3.83

## NOTE

### **Multi-position AHU**

### (4) CNH36ZDB(AC036BNZDCH/AA) + CXH36ADB (AC036BXADCH/AA)

## Cooling

TC: Total Capacity, SHC: Sensible Heat Capacity, PI: Power Input

Outdoor								I	Indoor	Tempe	ature (	°F, DB	/WB)								
Temp.		68 / 57			72 / 61			77 / 64			80 / 67			82 / 70			86 / 72			90 / 75	
(°F, DB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
( F, DD)	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW
0	36.6	26.4	3.53	38.6	27.3	3.60	40.2	28.1	3.68	41.4	29.0	3.75	42.2	28.7	3.79	44.3	28.4	3.83	46.6	27.8	3.90
70	38.2	27.6	3.18	40.2	28.5	3.24	41.9	29.3	3.31	43.2	30.2	3.38	44.1	29.9	3.41	46.3	29.6	3.44	48.6	29.0	3.51
95	31.8	23.0	3.53	33.5	23.7	3.60	34.9	24.4	3.68	36.0	25.2	3.75	36.7	24.9	3.79	38.6	24.7	3.83	40.5	24.2	3.90
115	28.7	23.7	4.24	30.2	24.4	4.32	31.4	25.1	4.41	32.4	25.9	4.50	33.0	25.7	4.55	34.7	25.4	4.59	36.4	24.9	4.68
122	23.9	20.9	3.18	25.1	21.6	3.24	26.2	22.3	3.31	27.0	23.0	3.38	27.5	22.7	3.41	28.9	22.5	3.44	30.4	22.0	3.51

## Heating

TC: Total Capacity, PI: Power Input

Outdoor					Indo	or Tempera	ature (°F, D	В)				
	6	51	6	4	6	8	7	0	2	2	2	4
Temperature	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
(°F, DB)	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW
-4	34.0	5.25	33.7	5.20	33.3	5.15	33.0	5.10	32.7	5.05	32.3	5.00
14	37.1	5.24	36.7	5.19	36.4	5.13	36.0	5.08	35.6	5.03	35.3	4.98
32	39.2	4.23	38.8	4.19	38.4	4.15	38.0	4.11	37.6	4.06	37.2	4.02
47	41.2	4.03	40.8	3.99	40.4	3.95	40.0	3.91	39.6	3.87	39.2	3.83
75.2	47.4	3.63	46.9	3.59	46.5	3.55	46.0	3.52	45.5	3.48	45.1	3.45

## NOTE

### **Multi-position AHU**

### (5) CNH42ZDB(ACO42BNZDCH/AA) + CXH42ADB (ACO42BXADCH/AA)

### Cooling

TC: Total Capacity, SHC: Sensible Heat Capacity, PI: Power Input

Outdoor								I	ndoor	Tempe	rature (	°F, DB	/ WB)								
Temp.		68 / 57			72 / 61			77 / 64			80 / 67	'		82 / 70			86 / 72			90 / 75	
•	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
(°F, DB)	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW
0	42.7	30.9	4.16	45.0	31.8	4.24	46.9	32.8	4.33	48.3	33.8	4.42	49.3	33.5	4.46	51.7	33.1	4.51	54.3	32.5	4.60
70	44.6	32.2	3.74	46.9	33.2	3.82	48.9	34.2	3.90	50.4	35.3	3.98	51.4	34.9	4.02	54.0	34.6	4.06	56.7	33.9	4.14
95	37.2	26.8	4.16	39.1	27.7	4.24	40.7	28.5	4.33	42.0	29.4	4.42	42.8	29.1	4.46	45.0	28.8	4.51	47.2	28.2	4.60
115	31.6	26.1	4.58	33.2	26.9	4.67	34.6	27.7	4.76	35.7	28.6	4.86	36.4	28.3	4.91	38.2	28.0	4.96	40.1	27.4	5.06
122	26.0	22.8	3.95	27.4	23.5	4.03	28.5	24.2	4.12	29.4	25.0	4.20	30.0	24.7	4.24	31.5	24.5	4.28	33.1	24.0	4.37

## Heating

TC: Total Capacity, PI: Power Input

Outdoor					Indo	or Tempera	ature (°F, D	В)				
Temperature	6	51	6	4	6	8	7	0	2	2	2	.4
(°F, DB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
( F, DD)	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW
-4	40.2	6.32	39.8	6.25	39.4	6.19	39.0	6.13	38.6	6.07	38.2	6.01
14	46.0	6.84	45.5	6.78	45.1	6.71	44.7	6.64	44.2	6.58	43.8	6.51
32	46.0	5.32	45.5	5.27	45.1	5.22	44.7	5.17	44.2	5.11	43.8	5.06
47	48.4	5.07	47.9	5.02	47.5	4.97	47.0	4.92	46.5	4.87	46.1	4.82
75.2	55.7	4.56	55.1	4.52	54.6	4.47	54.1	4.43	53.5	4.38	53.0	4.34

## NOTE

### **Multi-position AHU**

### (6) CNH48ZDB(ACO48BNZDCH/AA) + CXH48ADB (ACO48BXADCH/AA)

### Cooling

TC: Total Capacity, SHC: Sensible Heat Capacity, PI: Power Input

Outdoor								I	ndoor <sup>*</sup>	Tempe	ature (	°F, DB	/WB)								
Temp.		68 / 57			72 / 61			77 / 64			80 / 67			82 / 70			86 / 72			90 / 75	
(°F, DB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
( F, DB)	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW	MBH	MBH	kW
0	48.8	35.3	5.13	51.4	36.4	5.23	53.5	37.5	5.34	55.2	38.6	5.45	56.3	38.3	5.50	59.1	37.9	5.56	62.1	37.1	5.67
70	51.0	36.8	4.62	53.6	37.9	4.71	55.9	39.1	4.81	57.6	40.3	4.91	58.8	39.9	4.95	61.7	39.5	5.00	64.8	38.7	5.10
95	42.5	30.7	5.13	44.7	31.6	5.23	46.6	32.6	5.34	48.0	33.6	5.45	49.0	33.3	5.50	51.4	32.9	5.56	54.0	32.3	5.67
115	34.0	28.0	4.87	35.8	28.9	4.97	37.2	29.8	5.07	38.4	30.7	5.18	39.2	30.4	5.23	41.1	30.1	5.28	43.2	29.5	5.39
122	27.6	24.2	4.10	29.1	25.0	4.19	30.3	25.7	4.27	31.2	26.5	4.36	31.8	26.3	4.40	33.4	26.0	4.45	35.1	25.5	4.54

## Heating


TC : Total Capacity, PI : Power Input

Outdoor					Indo	or Tempera	ature (°F, D	B)				
Temperature	6	51	6	4	6	8	7	0	2	.2	2	!4
(°F, DB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
( F, DD)	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW	MBH	kW
-4	41.2	6.39	40.8	6.32	40.4	6.26	40.0	6.20	39.6	6.14	39.2	6.08
14	49.1	7.43	48.7	7.36	48.2	7.29	47.7	7.22	47.2	7.14	46.8	7.07
32	51.9	6.00	51.4	5.94	50.9	5.89	50.4	5.83	49.8	5.77	49.3	5.71
47	54.6	5.72	54.1	5.66	53.5	5.61	53.0	5.55	52.5	5.49	51.9	5.44
75.2	62.8	5.15	62.2	5.10	61.6	5.04	61.0	5.00	60.3	4.95	59.7	4.90



## **Multi-position AHU**


CNH18ZDB(AC018BNZDCH/AA), CNH24ZDB(AC024BNZDCH/AA)

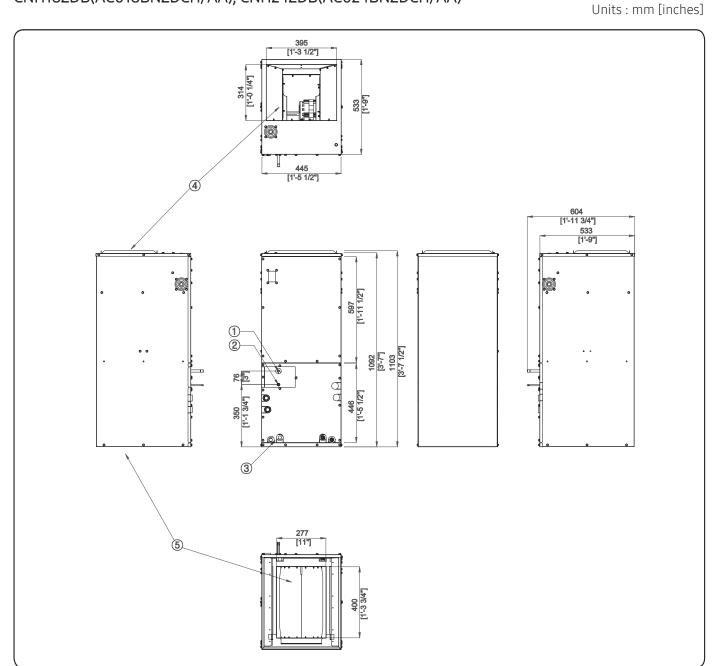

Na	None	Descri	ption
No.	Name	CNH18ZDB	CNH24ZDB
1	Gas pipe connection	Ф12.7(1/2")	Ф15.88(5/8")
2	Liquid pipe connection	Ф6.35	(1/4")
3	Drain pipe connection	FPT 3	3/4"
4	Air outlet		
5	Air intake		

## **Multi-position AHU**


CNH30ZDB(AC030BNZDCH/AA), CNH36ZDB (AC036BNZDCH/AA)

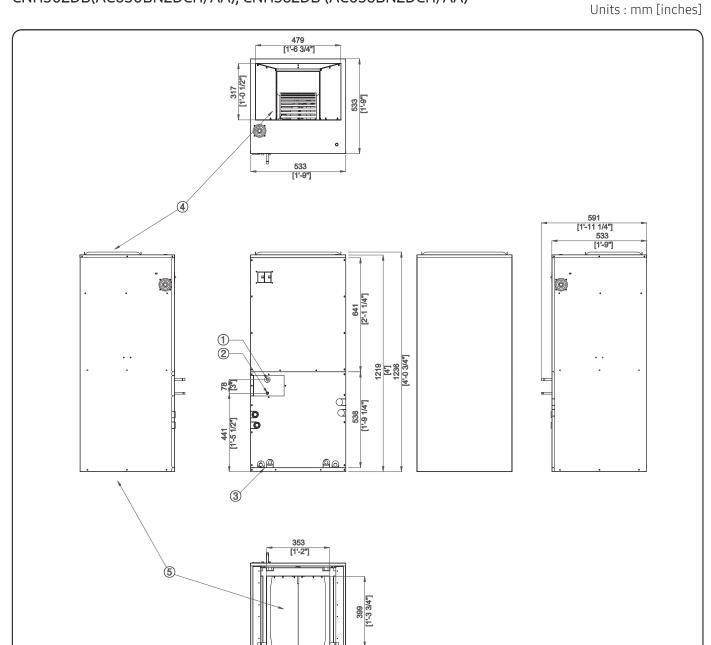

No.	Name	Description
1	Gas pipe connection	Ф15.88(5/8)
2	Liquid pipe connection	Ф9.52(3/8)
3	Drain pipe connection	FPT 3/4"
4	Air outlet	
5	Air intake	

## **Multi-position AHU**


CNH42ZDB(AC042BNZDCH/AA), CNH48ZDB (AC048BNZDCH/AA)

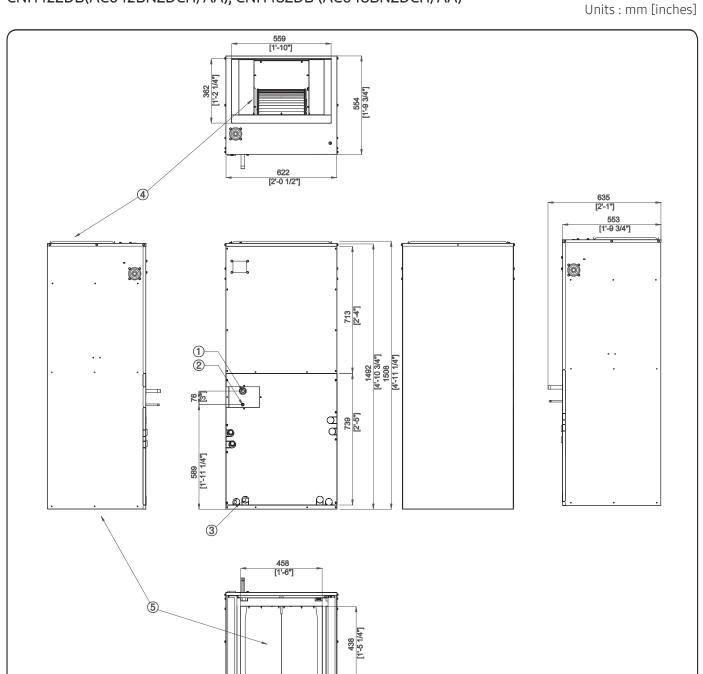

No.	Name	Description	
1	Gas pipe connection	Ф15.88(5/8)	
2	Liquid pipe connection	Ф9.52(3/8)	
3	Drain pipe connection	FPT 3/4"	
4	Air outlet		
5	Air intake		

## 5. Electrical Wiring Diagram

#### **Multi-position AHU**

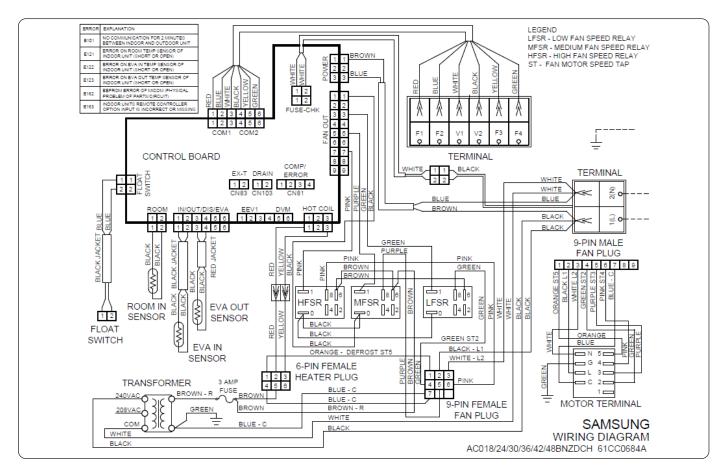


CONTROL BOARD	Printed circuit board(MAIN)	MFSR	MEDIUM FAN SPEED RELAY	EVA-IN(10K)	Thermistor EVA IN
EX-T	EXTERNAL CONTROL	HFSR	HIGH FAN SPEED RELAY	EVA-OUT(10K)	Thermistor EVA OUT
LFSR	LOW FAN SPEED RELAY	ROOM(10K)	Thermistor ROOM	DISCHARGE(10K)	Thermistor DISCHARGE

- This wiring diagram applies only to the indoor unit.
- Colors BLK: black, BRN: brown, SKY-BLU: sky-blue, GRN/YEL: green/yellow, RED: red, YEL: yellow, ORG: orange, BLU: blue, WHT:white
- For connection wiring indoor-outdoor transmission F1-F2, indoor-wired remotecontroller transmission F3-F4, refer to the installation manual
- Protective earth(screw)

#### Multi-position AHU

#### Sound Pressure level


Unit: dB(A)

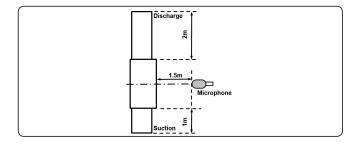


Model	High	Mid	Low
CNH18ZDB (AC018BNZDCH/AA)	40	37	34
CNH24ZDB (AC024BNZDCH/AA)	41	38	35
CNH30ZDB (AC030BNZDCH/AA)	41	38	35
CNH36ZDB (AC036BNZDCH/AA)	45	42	39


NC Curve



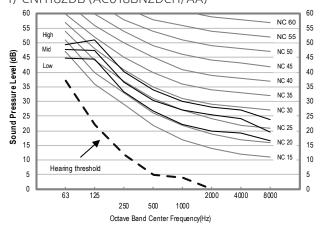


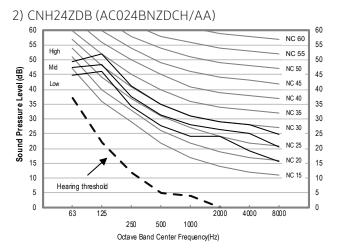

#### 3) CNH30ZDB (AC030BNZDCH/AA)

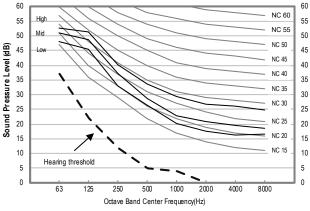

#### 4) CNH36ZDB (AC036BNZDCH/AA)

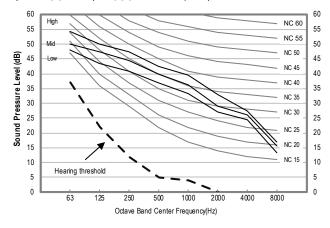

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20μPa

### **Multi-position AHU**

#### Sound Pressure level

Unit: dB(A)


Discharge
Jm
1.5m _
Microphone
Suction

Model	High	Mid	Low
CNH42ZDB (ACO42BNZDCH/AA)	46	43	40
CNH48ZDB (ACO48BNZDCH/AA)	47	45	43

- NC Curve
  - 5) CNH42ZDB (ACO42BNZDCH/AA)

#### NC 60 55 NC 55 50 Mid Sound Pressure Level (dB) 45 NC 45 40 NC 40 35 NC 35 30 25 25 NC 25 20 20 15 15 10 10 Hearing threshold 5 5 0 125 500 1000 2000 8000 Octave Band Center Frequency(Hz)

#### 6) CNH48ZDB (ACO48BNZDCH/AA)

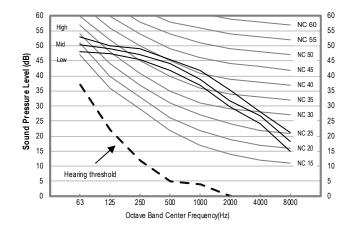

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20µPa


### **Multi-position AHU**

#### Sound Power level


NOTE

- Specifications may be subject to change without prior notice
  - Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level.
  - Reference power: 1pW.
  - Measured according to ISO 3741.
- NC Curve

#### 1) CNH18ZDB (AC018BNZDCH/AA)

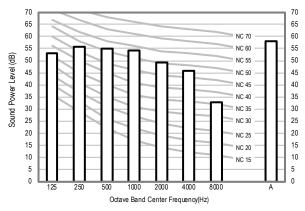


#### 3) CNH30ZDB (AC030BNZDCH/AA)

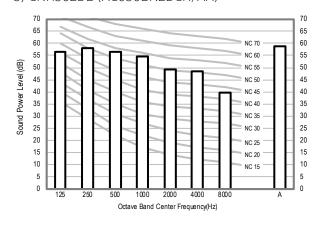


#### Unit: dB(A)

Model	Cooling
CNH18ZDB (ACO18BNZDCH/AA)	58
CNH24ZDB (AC024BNZDCH/AA)	59
CNH30ZDB (AC030BNZDCH/AA)	59
CNH36ZDB (AC036BNZDCH/AA)	63

#### 2) CNH24ZDB (AC024BNZDCH/AA)

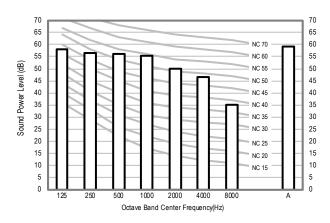

#### 4) CNH36ZDB (ACO36BNZDCH/AA)

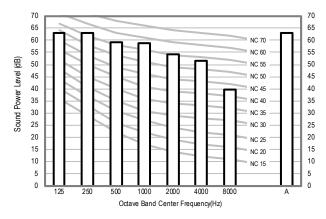

### **Multi-position AHU**


#### Sound Power level

NOTE


- Specifications may be subject to change without prior notice
  - Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level.
  - Reference power: 1pW.
  - Measured according to ISO 3741.

#### • NC Curve

#### 5) CNH42ZDB (ACO42BNZDCH/AA)

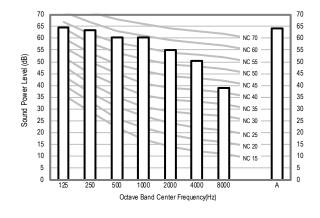

#### 6) CNH48ZDB (AC048BNZDCH/AA)

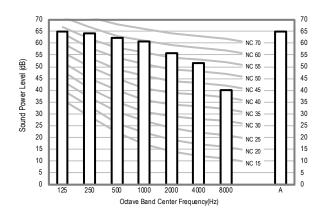

Model

CNH42ZDB (ACO42BNZDCH/AA)

CNH48ZDB (ACO48BNZDCH/AA)

Unit: dB(A)

Cooling


64

65


# 7. Fan characteristics (P-Q Curve)

## **Multi-position AHU**

## CNH18ZDB (AC018BNZDCH/AA)

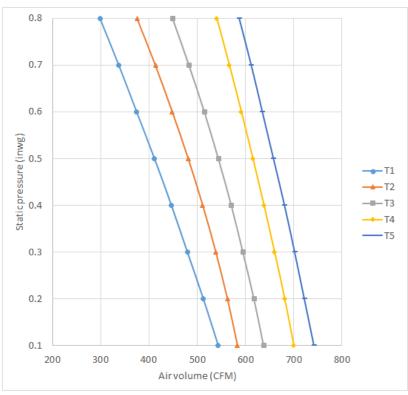

## CNH24ZDB (AC024BNZDCH/AA)

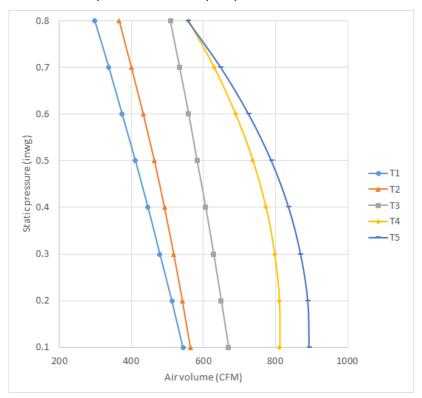


T1	Low speed tap
T2	Medium-low speed tap
T3	Medium speed tap
T4	Medium-high speed tap
T5	High speed tap


# 7. Fan characteristics (P-Q Curve)

## **Multi-position AHU**

### CNH30ZDB (AC030BNZDCH/AA)

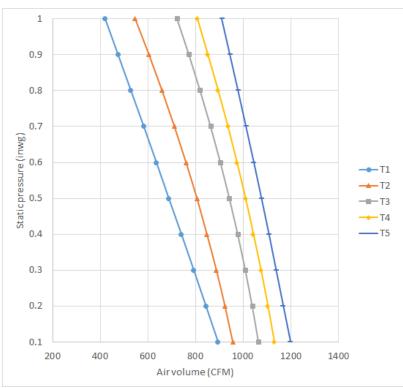

#### CNH36ZDB (AC036BNZDCH/AA)

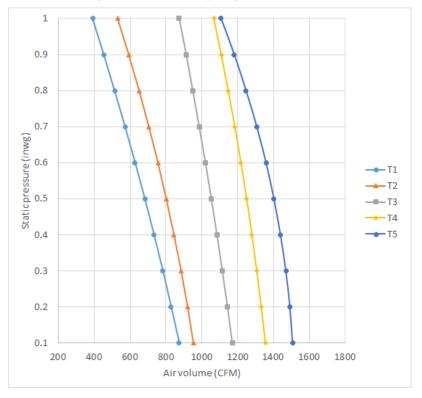


T1	Low speed tap
T2	Medium-low speed tap
T3	Medium speed tap
T4	Medium-high speed tap
T5	High speed tap


# 7. Fan characteristics (P-Q Curve)

## **Multi-position AHU**

### CNH42ZDB (AC042BNZDCH/AA)

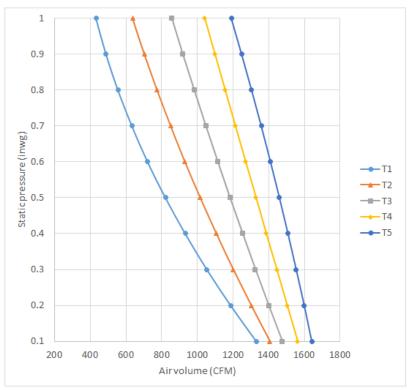

### CNH48ZDB (AC048BNZDCH/AA)

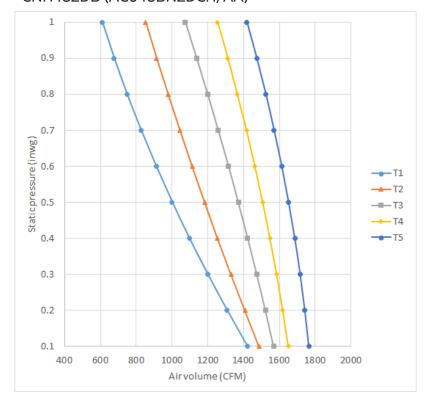

T1	Low speed tap		
T2	Medium-low speed tap		
T3	Medium speed tap		
T4	Medium-high speed tap		
T5	High speed tap		

## **Outdoor Units**

1. Summary Table	33
2. Dimensional Drawing	34
3. Center of Gravity	37
4. Electrical Wiring Diagram	39
5. Sound Data	41
6. Capacity Correction	45
7. Operation Range	47
8. Piping Diagram	48

# 1. Summary Table

### **Outdoor Units**

### **Performance Characteristics**

Capacity	Madal Cada	Net Size (WxHxD inch)	Net Weight (lbs)	Airflow (CFM)	Sound Pressure Level (dBA)		Sound Power
(Btu/h)	Model Code				Cooling	Heating	Level (dBA)
18,000	CXH18ADB (AC018BXADCH/AA)	34.65 x 31.42 x 12.20	118.4	2,154	48	48	62
24,000	CXH24ADB (AC024BXADCH/AA)	37.01 x 39.29 x 12.99	158.7	2,684	50	52	65
30,000	CXH30ADB (AC030BXADCH/AA)	37.01 x 39.29 x 12.99	158.7	2,684	50	52	67
36,000	CXH36ADB (AC036BXADCH/AA)	37.01 x 47.64 x 12.99	189.6	3,532	52	54	69
42,000	CXH42ADB (AC042BXADCH/AA)	37.01 x 47.64 x 12.99	195.1	3,532	53	55	70
48,000	CXH48ADB (AC048BXADCH/AA)	37.01 x 47.64 x 12.99	195.1	3,532	56	58	72




• Sound power level is based on cooling operation.

### **Outdoor Units**

## CXH18ADB (AC018BXADCH/AA)

Units: mm [inches]

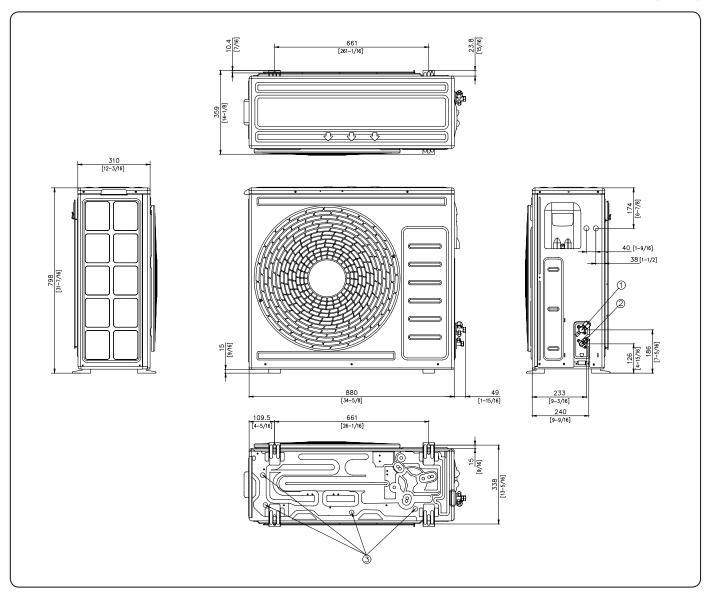


No.	Name	Description
1	Refrigerant liquid pipe	Φ 12.7mm(1/2")
2	Refrigerant gas pipe	Φ 6.35mm(1/4")
3	Drain hole	-

### **Outdoor Units**

## CXH24ADB (ACO24BXADCH/AA), CXH30ADB (ACO30BXADCH/AA)

Units: mm [inches]

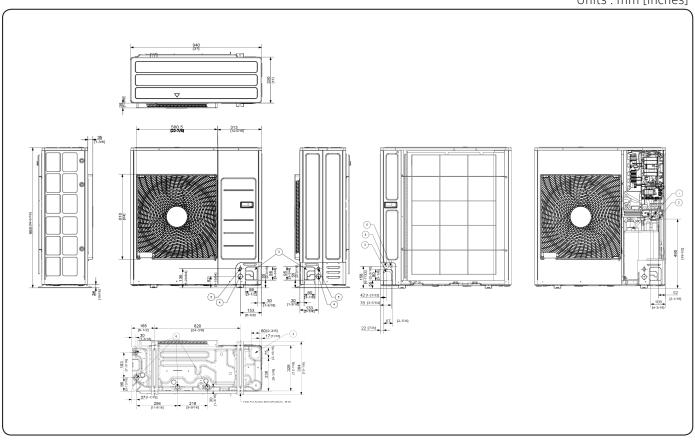


No.	Name	Description	
		CXH24ADB (AC024BXADCH/AA)	CXH30ADB(AC030BXADCH/AA)
1	Refrigerant liquid pipe	Φ 6.35mm(1/4")	Φ 9.52mm(3/8")
2	Refrigerant gas pipe	Φ 15.88mm(5/8")	
3	Piping intake knockout hole	Front / Side / Rear / Bottom	
4	Power wiring conduit	Front / Side / Rear , Φ 34mm(1-3/8")	
5	Communication wiring conduit	Front / Side / Rear , Φ 22mm(7/8")	
6	Drain Hole	-	Connect with the provided drain plug

### **Outdoor Units**

CXH36ADB (ACO36BXADCH/AA), CXH42ADB (ACO42BXADCH/AA), CXH48ADB (ACO48BXADCH/AA)

Units : mm [inches]

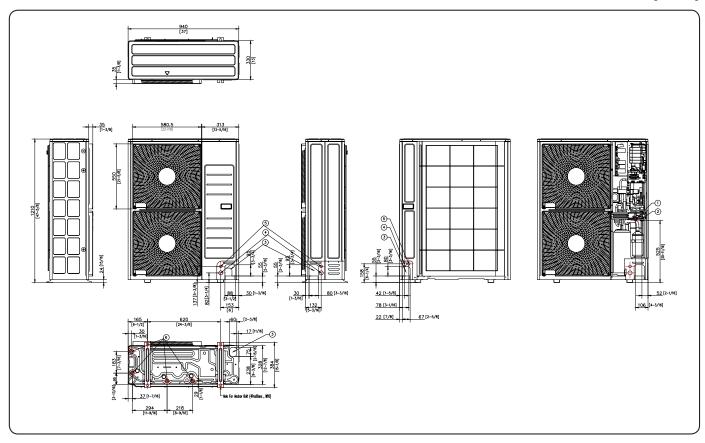


No.	Name	Description	
1	Refrigerant liquid pipe	Φ 9.52mm(3/8")	
2	Refrigerant gas pipe	Φ 15.88mm(5/8")	
3	Piping intake knockout hole	Front / Side / Rear / Bottom	
4	Power wiring conduit	Front / Side / Rear , Φ 34mm(1-3/8")	
5	Communication wiring conduit	Front / Side / Rear , Φ 22mm(7/8")	
6	Drain Hole	Connect with the provided drain plug	

# 3. Center of Gravity

### **Outdoor Units**


CXH18ADB (AC018BXADCH/AA)

Units: mm [inches]

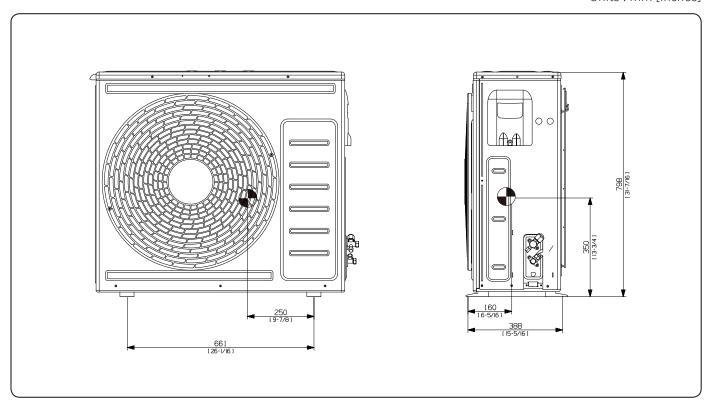

### CXH24ADB (ACO24BXADCH/AA), CXH30ADB (ACO30BXADCH/AA)

Units : mm [inches]

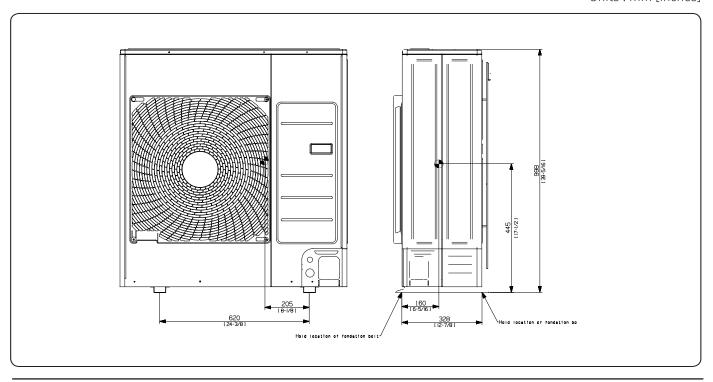


# 3. Center of Gravity

### **Outdoor Units**

CXH36ADB (ACO36BXADCH/AA), CXH42ADB (ACO42BXADCH/AA), CXH48ADB (ACO48BXADCH/AA)


Units: mm [inches]

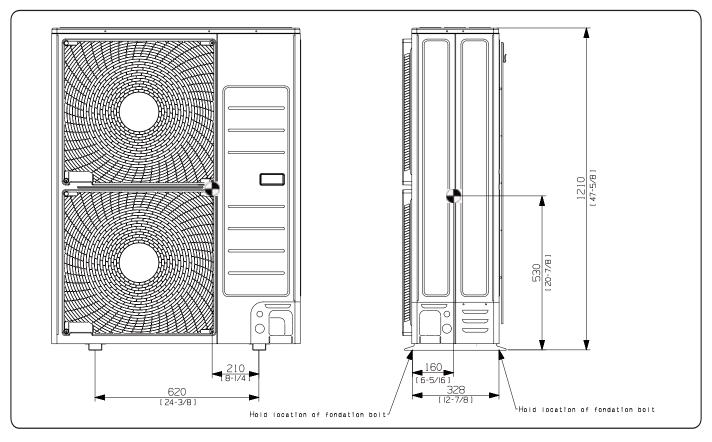

# 4. Electrical Wiring Diagram

#### **Outdoor Units**

### CXH18ADB (AC018BXADCH/AA)

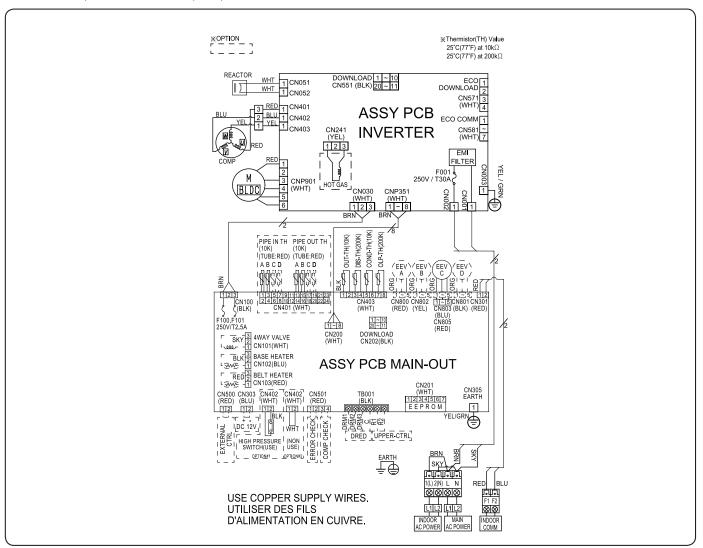


MAIN PCB	Printed circuit board(MAIN)	EEV	Electronic Expansion Valve		
INVERTER PCB	nted circuit board(INVERTER)  M-BLDC		BLDC Motor		
OLT-TH(200K)	LT-TH(200K) Thermistor OLP		Thermistor DISCHARGE		
OUT-TH(10K)	Thermistor AMBIENT	COND-TH(10K)	Thermistor CONDENSOR		

- This wiring diagram applies only to the outdoor unit.
- Colors blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue
- When operating, don't short circuit the protection device (High Pressure switch)
- For connection wiring indoor-outdoor transmission F1-F2, outdoor-outdoor transmission OF1-OF2, refer to the installation manual.
- ♣ Protective earth(screw), ☐☐ : connector, ┡ : The wire quantity

## 4. Electrical Wiring Diagram

#### **Outdoor Units**

CXH24ADB (ACO24BXADCH/AA), CXH30ADB (ACO30BXADCH/AA), CXH36ADB (ACO36BXADCH/AA) CXH42ADB (ACO42BXADCH/AA), CXH48ADB (ACO48BXADCH/AA)

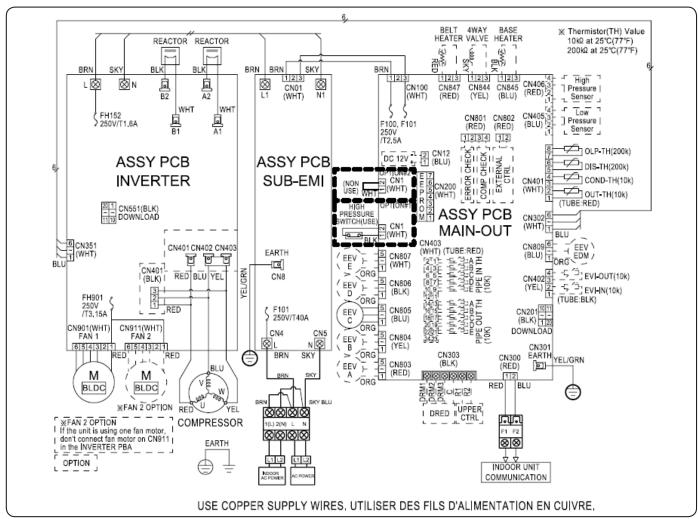

MAIN PCB	Printed circuit board(MAIN)	EEV	Electronic Expansion Valve
INVERTER PCB	Printed circuit board(INVERTER)	M-BLDC	BLDC Motor
EMI	Printed circuit board(EMI)	DIS-TH(200K)	Thermistor DISCHARGE
OLT-TH(200K)	TH(200K) Thermistor OLP COND-TH(10K)		Thermistor CONDENSOR
OUT-TH(10K)	Thermistor AMBIENT		

- This wiring diagram applies only to the outdoor unit.
- Colors blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue
- When operating, don't shortcircuit the protection device (High Pressure switch)
- For connection wiring indoor-outdoor transmission F1-F2, outdoor-outdoor transmission OF1-OF2, refer to the installation manual.
- ♣ Protective earth(screw), Ⅲ : connector, ۖ : The wire quantity

#### **Outdoor Units**


### Sound Pressure level

Unit: dB(A)


_	
1.5m	Front

Model	Cooling	Heating
CXH18ADB (AC018BXADCH/AA)	48	48
CXH24ADB (AC024BXADCH/AA)	50	52
CXH30ADB (AC030BXADCH/AA)	50	52
CXH36ADB (AC036BXADCH/AA)	52	54


- NC Curve
  - 1) CXH18ADB (AC018BXADCH/AA)

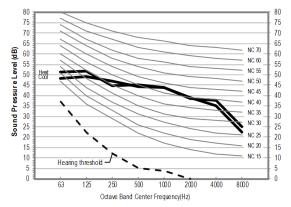




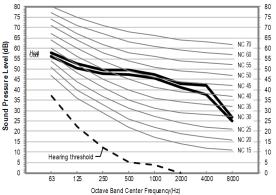

#### 3) CXH30ADB (AC030BXADCH/AA)

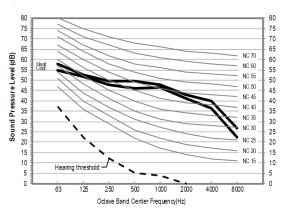

#### 4) CXH36ADB (ACO36BXADCH/AA)

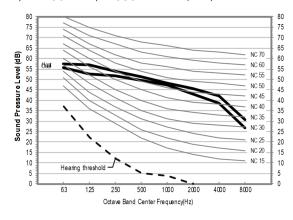

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20μPa

### **Outdoor Units**


### Sound Pressure level

Unit: dB(A)


Microp	phone   1m
1.5m	Front

Model	Cooling	Heating
CXH42ADB (ACO42BXADCH/AA)	53	55
CXH48ADB (ACO48BXADCH/AA)	56	58

- NC Curve
  - 1) CXH42ADB (ACO42BXADCH/AA)

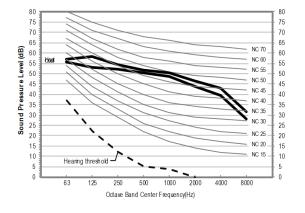

### 2) CXH48ADB (ACO48BXADCH/AA)

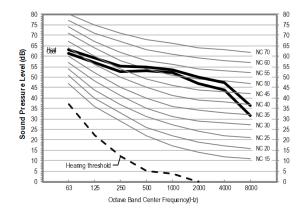

- Specifications may be subject to change without prior notice.
  - Sound pressure level is obtained in an anechoic room.
  - Sound pressure level is a relative value, depending on the distance and acoustic environment.
  - Sound pressure level may differ depending on operation condition.
  - dBA = A weighted sound pressure level
  - Reference acoustic pressure 0 dB = 20μPa

### **Outdoor Units**


### Sound Power level

NOTE


- Specifications may be subject to change without prior notice
  - Sound power level is an absolute value that a sound source generates.
  - dBA = A-weighted sound power level.
  - Reference power: 1pW.
  - Measured according to ISO 3741.

### • NC Curve

### 1) CXH18ADB (AC018BXADCH/AA)

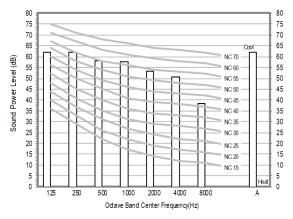


#### 3) CXH30ADB (AC030BXADCH/AA)

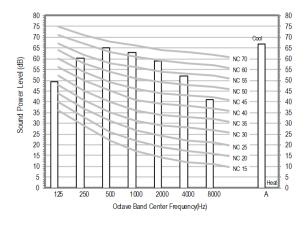


### Unit: dB(A)

Model	Cooling
CXH18ADB (AC018BXADCH/AA)	62
CXH24ADB (AC024BXADCH/AA)	65
CXH30ADB (AC030BXADCH/AA)	67
CXH36ADB (AC036BXADCH/AA)	69

#### 2) CXH24ADB (AC024BXADCH/AA)

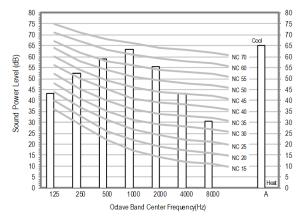

### 4) CXH36ADB (ACO36BXADCH/AA)

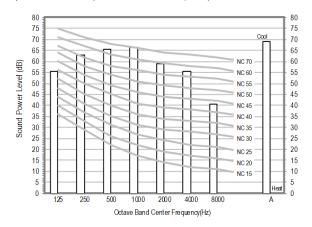


### **Outdoor Units**

### Sound Power level


NOTE

• Specifications may be subject to change without prior notice

- Sound power level is an absolute value that a sound source generates.
- dBA = A-weighted sound power level.
- Reference power: 1pW.
- Measured according to ISO 3741.
- NC Curve
  - 1) CXH42ADB (ACO42BXADCH/AA)

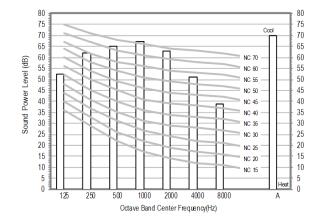

# 2) CXH48ADB (AC048BXADCH/AA)

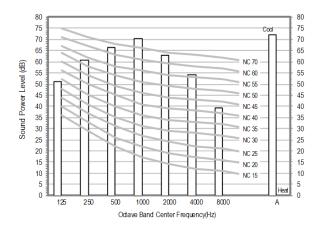

Model

CXH42ADB (AC042BXADCH/AA)

CXH48ADB (ACO48BXADCH/AA)

Unit: dB(A)

Cooling

70


72

# 6. Capacity Correction

### **Outdoor Units**

CNH18ZDB(AC018BNZDCH/AA)+CXH18ADB(AC018BXADCH/AA) CNH24ZDB(AC024BNZDCH/AA)+CXH24ADB(AC024BXADCH/AA) CNH30ZDB(AC030BNZDCH/AA)+CXH30ADB(AC030BXADCH/AA)

### Cooling

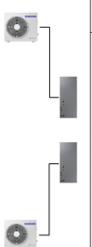

							.1. /6.3				
			1			Pipe Ler	ngth (ft)				
		24.6	32.8	49.2	65.6	82.0	98.4	114.8	131.2	147.6	164.0
	98.4	-	-	-	-	-	0.94	0.93	0.92	0.91	0.90
	82.0	-	-	-	-	0.96	0.94	0.93	0.92	0.91	0.90
	65.6	-	-	-	0.97	0.96	0.94	0.93	0.92	0.91	0.90
	49.2	-	-	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
(ft)	32.8	-	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
ence	16.4	1.00	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
ffer	0.0	1.00	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
Level Difference	-16.4	1.00	0.98	0.97	0.96	0.95	0.94	0.93	0.92	0.90	0.88
eve	-32.8	-	0.98	0.97	0.96	0.95	0.94	0.92	0.91	0.89	0.87
	-49.2	-	-	0.97	0.96	0.94	0.93	0.92	0.90	0.88	0.85
	-65.6	-	-	-	0.95	0.94	0.93	0.91	0.89	0.87	0.83
	-82.0	-	-	-	-	0.94	0.92	0.91	0.89	0.86	0.82
	-98.4	-	-	-	-	-	0.92	0.90	0.88	0.85	0.80

### Heating



						Pipe Ler	ngth (ft)				
24.6 32.8 49.2 65.6 82.0 98.4 114.8 131.2 1											164.0
	98.4	-	-	-	-	-	0.94	0.93	0.92	0.91	0.90
	82.0	-	-	-	-	0.96	0.94	0.93	0.92	0.91	0.90
	65.6	-	-	-	0.97	0.96	0.94	0.93	0.92	0.91	0.90
	49.2	-	-	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
(£)	32.8	-	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
- ence	16.4	1.00	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
ffer	0.0	1.00	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
i i	-16.4	1.00	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
Level Difference	-32.8	-	0.99	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
_	-49.2	-	-	0.98	0.97	0.96	0.94	0.93	0.92	0.91	0.90
	-65.6	-	-	-	0.97	0.96	0.94	0.93	0.92	0.91	0.90
	-82.0	-	-	-	-	0.96	0.94	0.93	0.92	0.91	0.90
	-98.4	-	-	-	-	-	0.94	0.93	0.92	0.91	0.90

# 6. Capacity Correction

### **Outdoor Units**

CNH36ZDB(AC036BNZDCH/AA)+CXH36ADB(AC036BXADCH/AA) CNH42ZDB(AC042BNZDCH/AA)+CXH42ADB(AC042BXADCH/AA) CNH48ZDB(AC048BNZDCH/AA)+CXH48ADB(AC048BXADCH/AA)

### Cooling



		1														
								Pipe	<b>Length</b>	ı (ft)						
		16.4	32.8	49.2	65.6	82.0	98.4	114.8	131.2	147.6	164.0	180.4	196.9	213.3	229.7	246.1
	98.4	-	-	-	-	-	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	82.0	-	-	-	-	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	65.6	-	-	-	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	49.2	-	-	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
e (#)	32.8	-	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
ence	16.4	1.00	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
Level Difference	0.0	1.00	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
<u></u>	-16.4	1.00	0.99	0.98	0.97	0.96	0.95	0.95	0.94	0.93	0.92	0.91	0.90	0.89	0.88	0.87
-eve	-32.8	-	0.98	0.98	0.97	0.96	0.95	0.94	0.93	0.93	0.92	0.91	0.90	0.89	0.87	0.85
-	-49.2	-	-	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.90	0.89	0.88	0.86	0.84
	-65.6	-	-	-	0.96	0.95	0.95	0.94	0.93	0.92	0.91	0.90	0.89	0.88	0.86	0.83
	-82.0	-	-	-	-	0.95	0.94	0.93	0.93	0.92	0.91	0.90	0.88	0.87	0.85	0.81
	-98.4	-	-	-	-	-	0.94	0.93	0.92	0.91	0.90	0.89	0.88	0.86	0.84	0.80

### Heating



		1														
			Pipe Length (ft)													
		16.4	32.8	49.2	65.6	82.0	98.4	114.8	131.2	147.6	164.0	180.4	196.9	213.3	229.7	246.1
	98.4	-	-	-	-	-	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	82.0	-	-	-	-	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	65.6	-	-	-	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	49.2	-	-	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
(ft)	32.8	-	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
ence	16.4	1.00	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
Difference	0.0	1.00	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
ij	-16.4	1.00	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
Level	-32.8	-	0.99	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	-49.2	-	-	0.98	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	-65.6	-	-	-	0.97	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	-82.0	-	-	-	-	0.97	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88
	-98.4	-	-	-	-	-	0.96	0.95	0.94	0.93	0.92	0.91	0.91	0.90	0.89	0.88

# 7. Operation Range

### **Outdoor Units**

	Mode	Indoor temperature	Indoor humidity		
С	ooling	18°C to 32°C (64°F to 90°F)	10 0 10 0 0		
Г	Orying	18°C to 32°C (64°F to 90°F)	-18°C to 50°C (0°F to 122°F)	80% or less	
Heating	~ 24kBtu/h	30°C(86°F) or less	-25°C to 24°C (-13°F to 75°F)	-	
rieating	30 ~ 48kBtu/h	30 C(00 1) 01 tess	-20°C to 24°C (-4°F to 75°F)	-	


## ■ NOTE

- The assumed installation conditions are follows
  - The pipe length(including elbow) is 7.5m(24.6ft).
  - The level difference is 0 m.

# 8. Piping Diagram

### **Outdoor Units**


CNH18ZDB(AC018BNZDCH/AA)+CXH18ADB(AC018BXADCH/AA)

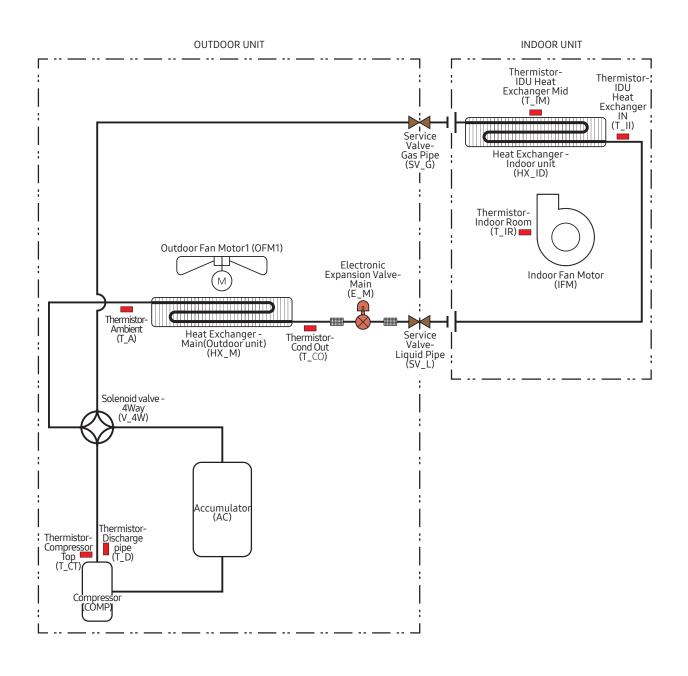

# 8. Piping Diagram

### **Outdoor Units**


CNH24ZDB(AC024BNZDCH/AA)+CXH24ADB(AC024BXADCH/AA) CNH30ZDB(AC030BNZDCH/AA)+CXH30ADB(AC030BXADCH/AA)

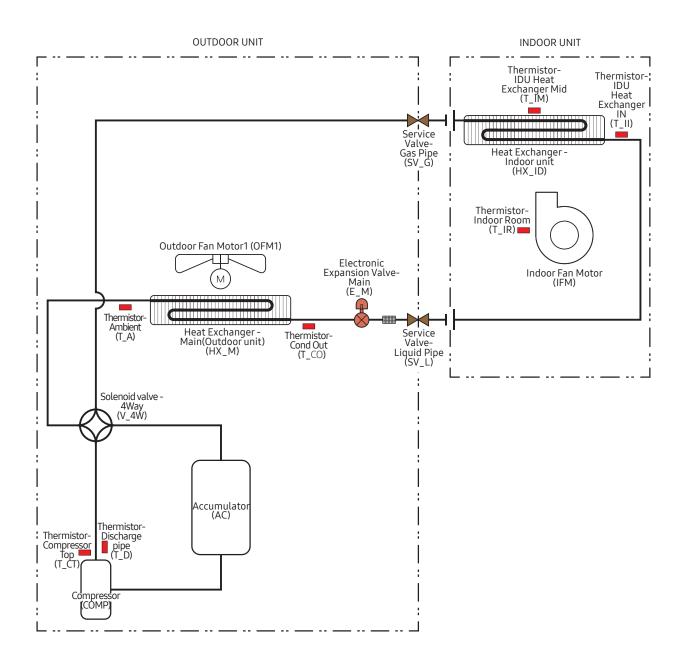

# 8. Piping Diagram

### **Outdoor Units**

CNH36ZDB(AC036BNZDCH/AA)+CXH36ADB(AC036BXADCH/AA) CNH42ZDB(AC042BNZDCH/AA)+CXH42ADB(AC042BXADCH/AA) CNH48ZDB(AC048BNZDCH/AA)+CXH48ADB(AC048BXADCH/AA)

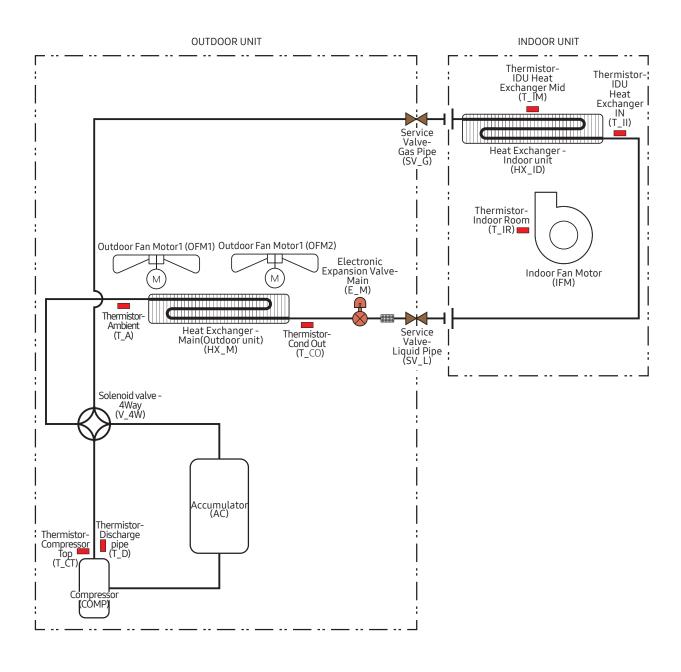

### **Multi-position AHU**

### Selecting the installation location

Decide the installation location, with the consideration of the following conditions, under user's approval.

- · Place where airflow is not disturbed
- Place on flat surface where the structure can bear the weight and vibration of the indoor unit. (If the structure is not strong enough, indoor unit may fall and be damaged or cause personal injury.)
- Place where sufficient space can be guaranteed for maintenance and other services.
- Place where condensation can be drained easily.
- Place that allows refrigerant pipe connection within allowable distance.
- Place where indoor unit will not be exposed to direct sunlight.
- Place that can keep the distance of at least 3.28 ft (1 m) between power/communication cable and any electronic
  devices (depending on the circumstances, problem may occur even if you secure 3.28 ft (1 m) of distance).


### Indoor unit installation

Refrigerant pipe work must be done before installing the indoor unit.

#### Location

Access for servicing is an important factor in the location of any air handler. Provide a minimum of 30 inches in front of the appliance for access to the control box, heating elements, blower and air filters. This access may be provided by a closet door or by locating the appliance so that a wall or partition is not less than 30 inches from the front access panel. Location is usually predetermined. Refer to figure below. Check with owner's or dealer's installation plans. If location has not been decided, consider the following in choosing a suitable location.

- Select a location with adequate structural support, space for service access, and clearance for return and supply duct connections.
- 2. Normal operating sound levels may be objectionable if the air handler is placed directly over or under some rooms such as bedrooms, study, etc.
- Caution should be taken to locate the unit so that supply and return air ducts are about the same length causing even air distribution of supply and return air to and from the living spaces.
- Locate appliance where electrical supply wiring can be easily routed to main electrical panel and where electrical wiring will
  not be damaged.
- 5. Locate appliance where control wiring can be easily routed to the controller and where the wiring will not be damaged.
- 6. Locate appliance where refrigerant lines can be easily routed from the evaporator coil to the system.
- 7. Locate the appliance where condensate lines can be easily routed to an available drain. Be sure to route condensate drain piping so as not to obstruct access to the air filter.
- 8. The coil is installed in a draw-thru application and will create a negative pressure situation in the condensate drain system. To prevent condensate from being drawn into the blower it is recommended to trap the primary (Main) and secondary (Overflow) drain line. Refer to Drain Pipe and Drain Hose section in these instructions. If the secondary drain is not used, it must be capped. This unit has a connection terminal for drain system monitoring. Refer to Wiring Work section for information regarding connection of field-provided condensate overflow devices in these instructions.
- 9. The draw-thru design will cause exterior surface of cabinet to sweat when unit is installed in a non-conditioned space such as an attic or garage. Installer must provide protection such as full size auxiliary drain pan on all units installed in a non-conditioned space to prevent damage from condensation runoff. Some states, cities and counties require additional insulation to be installed on the exterior casing of the air handler to prevent sweating. Refer to the state, city, county or local code for insulation requirement to be sure the installation is in compliance. It is recommended that air handlers installed in non-conditioned spaces be insulated on the exterior of the entire cabinet, including the front access panel with one (1) inch thick fiberglass with the vapor barrier on the outside.
- 10. Ensure sufficient space for the bottom of the product (H dimension) so that a downward slope of 1/100 can be maintained for drain piping, as described for the intake duct installation and in "Drain pipe installation".

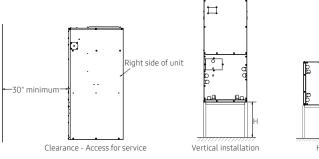




### **Multi-position AHU**

This appliance is approved for zero (0) inches clearance to combustible material on any part of the air handler exterior casing and the inlet or outlet ducts providing NO electric heater is being used. There is a one (1) inch clearance on the supply plenum and supply air duct when an electric heater is installed in the appliance. Refer to Table below for clearance to combustibles information.

To a Cin ala	n (in shee) Deals (in shee)		C:d (:b)	Front	of unit	Decet (in all an)
Top (inche	25)	Back (inches)	Sides (inches)	Alcove (inches)	Closet (inches)	Duct (inches)
0		0	0	30	6	1*

<sup>\*</sup> when electric heat kit accessory is installed

#### Return air requirements

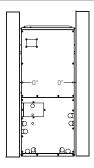

#### Return Air Requirements

In order for the air handler to work properly, a closet or alcove must have a certain total free area opening for the return air. For A/C and HP Air Handlers 1/3 HP Blower Motor

Minimum 200 in<sup>2</sup> free area opening

• Use Return Grille that can supply sufficient air to ensure proper performance.


#### For A/C and HP Air Handlers 1/2 HP Blower Motors

- Minimum 250 in² free area opening
- Use Return Grille that can supply sufficient air to ensure proper performance.

#### For A/C and HP Air Handlers with Electric Heat use 3/4 HP Blower Motor

- Minimum 390 in<sup>2</sup> free area opening
- Use Return Grille that can supply sufficient air to ensure proper performance.

The return air opening can be located in the floor, on a closet front door or in a side wall above the air handler casing. If opening for the return air is located in the floor, side walls, or closet door anywhere below the appliance casing, a 6 inch minimum clearance between the appliance and the wall or door must be provided on the side where the return is located to provide for proper air flow. The 6 inch minimum clearance is not required if there is a return grille installed above the appliance casing, providing the grille has a sufficient return air opening.

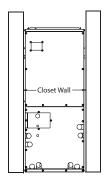

#### Typical Closet Installations

Provisions shall be made to permit the air in the rooms and the living spaces to return to the air handler. Failure to comply may cause a reduction in the amount of return air available to the blower, causing reduced air flow resulting in improper heating and cooling of the living space. The reduced air may cause the air flow handler to cycle on the limit causing premature heating element failure (if electric heat kits are installed).


#### Upflow Accessory Filter Box Kit

An accessory filter box kit can be used on the return air end of the air handler when configured in the upflow position. The filter kit is placed over the return plenum in the floor and sealed to the plenum using sealant or caulking material and/or tape. The air handler is placed on top of the return filter box and the return opening sealed to prevent leaks.

### Multi-position AHU



Make sure the flow arrow on the air filter is pointing towards the coil.

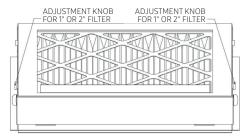


Accessory Air Filter Box for 1" or 2" Air Filters. Filter Size Adjustment knob is on both sides.

#### FILTER BASE ASSEMBLY KIT MODEL NUMBERS - FIELD INSTALLED, PURCHASED SEPARATELY

VFB-1 – 16" X 20" X 2" Small Cabinet (12/18/24K) VFB-2 – 20" X 20" X 2" Medium Cabinet (30/36K) VFB-3 – 20" X 24" X 2" Large Cabinet (42/48K)

#### **Arrangement:**

Unit is shipped from the factory arranged to be installed in an upflow or horizontal left (right to left air flow) position. Horizontal left means when the unit is laid on its side and you are facing the unit, the supply air opening is to the left and the return opening is to the right. These models are field convertible to a horizontal right (left to right) air flow position.

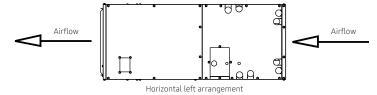

### **Upflow application**

In an upflow installation the discharge outlet is at the top. Care should be taken to insure unit is level to permit proper condensate drainage. Normal upflow installation will be in a closet or basement. If installed in a closet, it must have a platform framed in. The platform must have an opening centered in the closet that measures at least 12 inches in height from the floor. A filter frame and filter can be used that covers the opening and is sealed to prevent air by-passing the filter. A filter grille can be used that is located as described in RETURN AIR REQUIREMENTS section. The minimum filter size is shown in the table below.

Standard throw away air filter @ 300 ft/min or less	Pleated Air Filter @ 500 ft/min or less
800 CFM = 20 x 20 x 1	800 CFM = 16 x 16 x 1
1000 CFM = 20 x 25 x 1	1000 CFM = 18 x 20 x 1
1200 CFM = 20 x 30 x 1	1200 CFM = 20 x 20 x 1
1400 CFM = 25 x 30 x 1	1400 CFM = 20 x 20 x 1
1600 CFM = 25 x 30 x 1	1600 CFM = 20 x 25 x 1
1800 CFM = 30 x 30 x 1	1800 CFM = 20 x 30 x 1 or two 20 x 15 x 1
2000 CFM = 30 x 40 x 1 or two 30 x 20 x 1	2000 CFM = 20 x 30 x 1 or two 20 x 15 x 1
2400 CFM = 30 x 40 x 1 or two 30 x 20 x 1	2400 CFM = 25 x 30 x 1 or two 14 x 30 x 1

Another option is to use the Filter Base Accessory Kit. This filter base is placed on the closet floor and secured with screws. The unit is placed on top of the filter base and secured to the base with screws. Use seal strip, tape or calking to seal between the unit and the base.


Connect the supply air outlet to a plenum to the top of the unit and secure it with screws. Use a Non-tape sealant such as mastic or an aerosol sealant to seal duct leakage. If installed in a basement, run supply and return duct work in accordance with local codes. Use a Non-tape sealant such as mastic or an aerosol sealant to seal duct leakage.

### **Multi-position AHU**

#### Horizontal application

Horizontal applications will normally be used in an attic or crawl space. This type of installation requires supply air plenum or duct to be connected to the supply collar and a return air plenum or duct be attached to the unit inlet collar. The supply ducts will be connected to the supply air plenum and routed through the attic to a register in each room. Use a Non-tape sealant such as mastic or an aerosol sealant to prevent leaks in the ducts and the plenum.


The opposite end of the return air duct is attached to a return filter grille housing. The filter grille is usually located in a wall, just below the ceiling or the ceiling in a hallway. Use a Nontape sealant such as mastic or an aerosol sealant to prevent leaks in the ducts and the plenum.

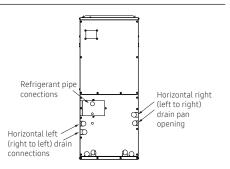

### Horizontal right application (left to right)

The unit is shipped to be installed without modification in a right to left configuration. For left to right applications:

- 1. Remove the unit access panels
- 2. Remove the cooling coil after disassembling bracket coil and plate.
- 3. Move the condensate drain pan to the right side of the unit chassis.
- 4. Move the Evap In temperature sensor to holder of the right side.
- 5. Reinstall the cooling coil.
- 6. Connect the condensate drains and refrigerant lines. DRY NITROGEN MUST BE FLOWED THROUGH REFRIGERANT LINES DURING SOLDERING OPERATION.
- 7. Reinstall unit access panels.
  - \* In all horizontal applications in which the unit is installed above a finished ceiling and/or living space, it is recommended that a secondary drain pan (field supplied) is installed under the entire unit to avoid damage to the ceiling in the event of condensate overflow.

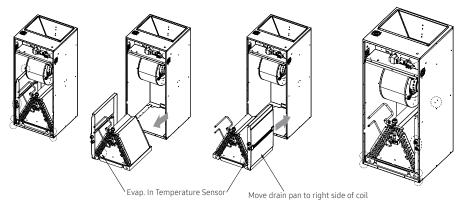

#### Closet installation

Prior to installing the air handler make sure holes are cut into the floor for refrigerant tubing, drain line, electrical wiring, and control wiring.

- 1. Remove the top shipping cover and corner posts.
- 2. Remove the bottom shipping cover.
- 3. Remove the blower and control box access panel (door).
- 4. Remove the coil compartment access panel (door).
- 5. Place the unit into position by sliding the unit over the duct opening until the opening in the unit lines up with the duct opening in the floor.
- 6. Secure the unit to the floor by drilling two holes through the air handler base at the left and right front inside corners of the cabinet. Use two screws to secure the unit to the floor.
- 7. Use calking, sealers, and/or tape to seal between the floor base and the opening on the unit or between the opening on the unit and the duct in the floor.
- 8. Connect the electrical supply wires and the control wires in the control box.
- 9. Connect the refrigerant lines to the coil, DRY NITROGEN MUST BE FLOWED THROUGH REFRIGERANT LINES DURING SOLDERING OPERATION.
- 10. Re-install the coil compartment access panel (door) and secure with the screws that were removed in step 3.
- 11. Re-install the blower and control box access panel (door) and secure with the screws that were removed in step 2.

### **Multi-position AHU**

Air Handlers with DX type evaporator coils require liquid and suction piping sized in accordance with condensing unit manufacturer's instructions. The evaporator coils have sweat copper connections. Refrigerant lines should be soldered with silver solder or high temperature brazing alloy.

DRY NITROGEN MUST BE FLOWED THROUGH REFRIGERANT LINES DURING SOLDERING OPERATION.
REFER TO OUTDOOR UNIT INSTALLATION MANUALS FOR PRESSURE CHECKING AND VACUUM DRYING PROCEDURES.
There are two refrigerant pipes of differing diameters:

- A smaller one for the liquid refrigerant
- A larger one for the gas refrigerant
- The inside of copper pipe must be clean & have no dust.

Prepare the connecting pipe referring to the list below.


· Refrigerant pipe diameters

Unit: inch(mm)

	AC012/018BNZDCH	AC024BNZDCH	AC030/036/042/048BNZDCH
Liquid pipe	1/4 (6.35)	1/4 (6.35)	3/8 (9.52)
Gas pipe	1/2 (12.7)	5/8 (15.88)	5/8 (15.88)

## Drain pipe installation

The air handler "A" coil drain pan has two ¾" NPT (Φ19.05mm) female primary and two secondary connections (left or right hand). The horizontal pan has two ¾" NPT (Φ19.05mm) female, one primary and one secondary. Piping from each fitting used is to have 2 inch (50.8mm) minimum trap and each run in such a manner as to provide enough slope for adequate drainage to a visible area. Do not pipe these two fittings together into a common drain. Prime drain with water before operating the unit by pouring water into the condensate pan. Cap unused connections.

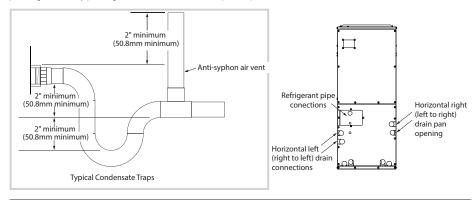



- Make sure to keep the drain hose from getting tangled or loosened (on the connection part).
- Insulate all condensate pipes connected to the indoor unit to prevent condensation formation.
   Condensate formation on condensate pipes can lead to property damage and unsafe environment conditions.

When passing the drain hose through the hole drilled in the wall, make sure to avoid following cases.



- Since the draining is of natural drain type, install the drain hose in downward direction.
- If you do not tie the drain hose with a cable tie, leakage may occur
- Drain pipe may get clogged if there is any foreign substances within the drain pan, so you must remove
  any foreign substances after completing the installation.

### Multi-position AHU

### Wiring Work




- For personal safety be sure to turn the electrical power "OFF" at the main entrance (Home
  Circuit Breaker Box) and at the unit control box circuit breakers before attempting any service or
  maintenance operations. Homeowners should never attempt to perform any maintenance which
  requires opening the air handler control box door.
- This air handler is not equipped with a shield that covers the line voltage electrical supply wires and
  the circuit breaker connections. Take precautions to prevent accidental electrical shock. Be sure to
  turn the electrical power "OFF" at the main entrance (Home Circuit Breaker Box) and at the control box
  circuit breakers before removing the front panel.

### Power supply wiring

- · The unit internal wiring is complete except for the power supply and control wires.
- The use of cable connectors on incoming power supply wires to relieve any strain on wiring is recommended.
- Follow the steps below to connect the power supply wires.
- Supply voltage is 208/230V, 1ø, 60 Hz.
- If you are installing optional heat kits, refer to the heat kit installation instructions for line voltage connection instructions

### Wiring diagram

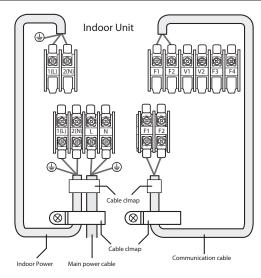

**Outdoor Unit** 


### Between Indoor and Outdoor Connection cable Specifications(Common in use)

	Indoor Power supply		
Power Supply	Max/Min(V)	Indoor Power cable	Communication Cable
208~230V/60Hz	±10%	0.0039in <sup>2</sup> ↑,3wires (2.5mm <sup>2</sup> ↑,3wires)	0.0012 inch <sup>2</sup> ↑, 2 wires (0.75mm <sup>2</sup> ↑, 2 wires)

- Selecting wire size must comply with local and national code.
- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F)
- Screws on terminal block must not be unscrewed with the torque less than 12 kgf•cm (0.86 lbf•ft).
- Since it has the external power supply, refer to the outdoor unit installation manual for MAIN POWER.

### **Multi-position AHU**

### Terminal Block SPEC (Indoor)

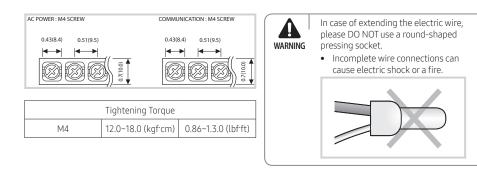


## Wiring Work

### Single circuit line wiring connections



If an accessory heat kit is installed, power must enter the unit on the top or the top-left side of the unit as shown below (A).

- 1. Before wiring work, you must turn off all power source.
- 2. Only copper power cables should be used.
- 3. Remove the blower and control box access panel (door).
- 4. Install the cable connectors on the 7/8" diameter holes on the right side of the control box.
- 5. Insert the wires through the holes in the casing and through the cable connectors.
- 6. Connect the black supply wire to the L1[1(L)] high voltage connection terminal with compressed ring terminals.
- Connect the white supply wire to the L2[2(N)] high voltage connection terminal with compressed ring terminals.
- Connect the green wire to the ground lug near the supply wire connections with a compressed ring terminal and tighten the ground screw. Make sure to leave extra slack in the ground wire to allow service to the unit without disconnecting the ground wire.

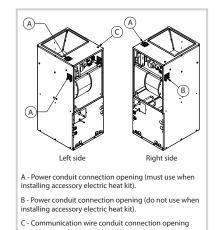


**IMPORTANT** - All insulation on field wiring must be rated at 140°F (60°C) or higher. Please refer to the wiring diagrams on the air handler or the tables in this manual for more information.


IMPORTANT - Refer to the NEC National Electrical Code (NFPA 70) or the Canadian Electrical Code, Part I (CSA C22.1) and local codes for wiring material requirements.

### Multi-position AHU


#### Power supply wiring with accessory electric heat kit

- 1. Before wiring work, you must turn off all power source.
- 2. Only copper power cables should be used.
- 3. Remove the blower and control box access panel (door).
- 4. Install the cable connectors on the 7/8" diameter holes on the left side of the control box.
- Connect the included power pigtail leads with ring connectors (included with heat kit) to 1(L) and 2(N) terminals located on the right side of the control box.
- Route the power pigtail leads through the control box opening pictured below and route to the left side of the control box for connection to the heat breakers in a later step.

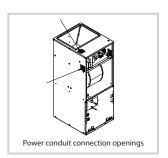

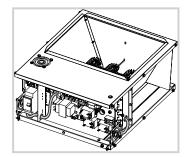

- 7. Swing the hinged control plate outward exposing the back side of the control box. Remove the screws holding the electric heat kit block off plate. Save the screws.
- 8. Carefully pass the accessory heating element through the rectangular opening in the discharge of the air handler and secure the heating element with the screws from step 8. Heating element support rod must be seated in the hole on the opposite side of the discharge.

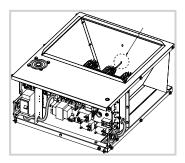


- 9. Install the breakers at the front-left of the control box.
- 10. Connect the power pigtail leads that are connected to 1(L) and 2(N) to the bottom of the breakers.
- 11. Insert the power wires through the holes in the casing and through the cable connectors.
- 12. In order to use heating function, you need change the installation option code. Set SEG10 to 1. For more information on changing the option code, refer to "Setting an indoor unit installation option".

### Power supply wiring with accessory electric heat kit


- 13. Strip  $\frac{1}{2}$ " of the insulation on the end of each power wire.
- 14. Connect the black supply wire to the high voltage connection lug on the accessory heat kit breaker.
- 15. Connect the white supply wire to the other high voltage connection lug on the accessory heat kit breaker.

### **Multi-position AHU**

16. Connect the green (ground) wire to the ground lug to the left of the accessory heat kit breakers and tighten the ground lug screw. Make sure to leave extra slack in the ground wire to allow service to the unit without disconnecting the ground wire. If the heat kit requires 2 circuits (dual circuit), both circuit ground wires must be connected to a ground lug (dual circuit kits have two individual ground lugs).

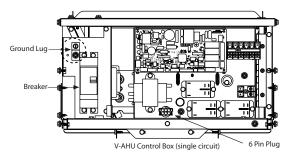

- 17. Connect the six pin male plug on the electric heater assembly to the six pin female plug mounted at the bottom of the control assembly door.
- 18. Remove the wiring diagram from the accessory heat kit. Remove the paper that covers the adhesive back and place the electric heat wiring diagram over the wiring diagram located on the blower housing.
- 19. Route temperature sensor from the accessory electric heat kit to the lower section of the AHU cabinet. Attach the sensor to the bottom of the liquid pipe as shown below with included wire ties.

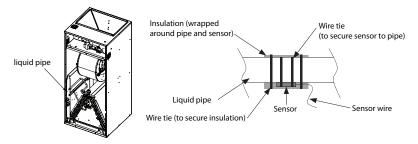

- 20. Wrap included insulation around the sensor and secure with included wire ties.
- 21. Remove the breaker opening cover plate on the AHU door and secure the doors to the unit.

NOTE: The electric heat kits are equipped with either one or two circuit breakers. These circuit breakers protect the wiring inside of the AHU in the event of a short circuit. Additionally, these breakers provide a means of disconnecting the power to the unit. The circuit breakers in the AHU's are not meant to protect the branch circuit wiring between the furnace and the building's breaker panel. If sheathed cable is used, refer to NEC National Electrical Code (NFPA 70) or the Canadian Electrical Code, Part I (CSA C22.1) and local codes for additional requirements concerning supply circuit wiring. Electrical data can be found in page 21.

**IMPORTANT** - All installation on field wiring must be rated at 60°C or higher. Please refer to the wiring diagrams on the furnace or the tables this manual for more information. The 15kW and 20kW models may be connected to a single or dual branch circuit. Refer to the NEC National Electrical Code (NFPA 70) or the Canadian Electrical Code, Part I (CSA C22.1) and local codes for wiring material requirements.

### Multi-position AHU

### Power supply connections

If the air handler has been installed prior to installing the electric heaters or if an older unit is being replaced, the supply power wires must be checked to make sure the wires are the proper sizes to handle the current load for the heaters. Refer to table below for correct wire size. If the supply power wire size is incorrect, new wires will need to be installed. Follow the instructions "Power supply wiring" of these instructions for proper installation.

	ELECTRICAL DATA																				
		Electric Heater Data						Minimum Circuit Ampacity (MCA)			Maximum Overcurrent Protection (MOCP)			Minimum Wire Size (AWG)			(AWG)	Short- Current	Circuit t Rating		
				Amps		Amps	Amps	208V	208V	230V	230V		208V		230V	Circu	uit 1	Circu	uit 2	"SC	CR"
Indoor Unit	ç,	1111	1111	208V	208V	230V	230V	2001	2001	2501	2001	(3,4)	(3,4)	(3,4)	(3,4)	167°F		167°F			
Model	Circuit Qtv.	kW (208V)	kW (230V)	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	Circuit	(75°C)	140°F	(75°C)	140°F	kA rms	V
	Qty.	(2001)	(2301)	1	2	1	7	1	7	1	2	1	7	1	7	/ 194°F	(60°C)	194°F	(60°C)	symmetrical	maximum
					_	·	-		_		'   -	'	-	'	-	(90°C)		(90°C)			
	SMALL CABINET-NOMINAL1.0, 1.5 & 2.0 TONS (0 To 5 Kw)																				
AC012BNZDCH	1	2.25	2.76	10.83	-	11.98	-	15.43	-	16.68	-	20.0	-	20.0	-	#12	#12	-	-	N/A	N/A
ACO18BN7DCH	1	2.25	2.76	10.83	-	11.98	-	15.80	-	16.93	-	20.0	-	20.0	-	#12	#12	-	-	N/A	N/A
ACUTODINZUCIT	1	3.76	4.59	18.06	-	19.97	-	24.83	-	26.91	-	30.0	-	30.0	-	#10	#10	-	-	N/A	N/A
ACO24BN7DCH	1	2.25	2.76	10.83	-	11.98	-	16.70	-	17.71	-	20.0	-	20.0	-	#12	#12	-	-	N/A	N/A
AC024DINZDCI1	1	3.76	4.59	18.06	-	19.97	-	25.73	-	27.70	-	30.0	-	30.0	-	#10	#10	-	-	N/A	N/A
						MEI	MUIC	CABIN	ET-NO	MINA	2.5, 3	10T O.	<b>VS (0 T</b>	o 10 K	w)					,	
AC030BN7DCH	1	3.75	4.59	18.03	-	19.97	-	26.30	-	28.22	-	30.0	-	30.0	-	#10	#10	-	-	N/A	N/A
ACOJODINZDCIT	1	7.50	9.18	36.06	-	39.93	-	48.83	-	53.17	-	50.0	-	60.0	-	#6	#6	-	-	N/A	N/A
AC036BN7DCH	1	3.76	4.59	18.06	-	19.97	-	27.99	-	29.65	-	30.0	-	30.0	-	#10	#10	-	-	N/A	N/A
ACOJODINZDCIT	1	7.51	9.18	36.11	-	39.93	-	50.56	-	54.61	-	60.0	-	60.0	-	#4	#4	-	-	N/A	N/A
					L	ARGE	CABIN	IET-NO	MINA	L 4.0,	4.5, 5.	0, 6.0	TONS	(0 To 2	0 Kw)						
AC042BN7DCH	1	3.76	4.59	18.06	-	19.97	-	27.47	-	29.39	-	30.0	-	30.0	-	#10	#10	-	-	N/A	N/A
MCU42DIVZUCH	1	7.51	9.18	36.11	-	39.93	-	50.04	-	54.35	-	60.0	-	60.0	-	#4	#4	-	-	N/A	N/A
	1	3.76	4.59	18.06	-	19.97	-	28.74	-	30.30	-	30.0	-	35.0	-	#10	#6	-	-	N/A	N/A
AC048BNZDCH	1	7.51	9.18	36.11	-	39.93	-	51.31	-	55.26	-	60.0	-	60.0	-	#4	#4	-	-	N/A	N/A
	2	11.27	13.78	18.06	36.11	19.97	39.93	22.57	51.31	24.96	55.26	30.0	60.0	30.0	60.0	#10	#4	#10	#4	5	240

- 1. Rated Motor Amps (at DOE External Static Rating Point)
- 2. Fuse or HACR Breaker
- 3. Maximum Overcurrent Device, Overcurrent Protection Installed On Breaker Models Are Sized Per MCA
  - To prevent damage, carefully insert the electric heating assembly through the rectangular opening in the front of the
    discharge opening so the heat element support rod is seated into the hole on the back side of the discharge opening.
  - After installing the electric heater, a one inch clearance must be maintained on all sides of the supply air duct and/or
    plenum for a minimum of thirty six inches from the air handler discharge opening.


### **Multi-position AHU**

### **Communication wiring connections**

- Communication wires connect through side of air handler.
- Use an approved connector at the cabinet of the unit to prevent pulling or shorting of control wires.



- Control wire must be rated for 600V minimum.
- Control wire insulation must be rated for temperatures up to 90°C.
- 1. Insert the wires through the holes of the right side on the top casing and through the cable connectors.
- 2. Connect the communication wires to the F1/F2 connection terminal with compressed ring terminals.
- 3. Connect F3, F4 (for communication) when installing the wired remote control.

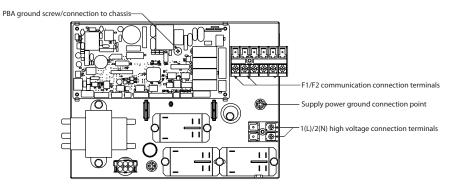


#### Outdoor Units

### Choosing the installation location

#### Installation location requirements

- Do not place the outdoor unit on its side or upside down. Failing to do so may cause the compressor lubrication oil to run into the cooling circuit and lead to serious damage to the unit.
- Install the unit in a well-ventilated location away from direct sunlight or strong winds.
- Install the unit in a location that would not obstruct any passageways or thoroughfares.
- Install the unit in a location that would not inconvenience or disturb your neighbors, as they could be affected by the noise or the airflow coming from the unit.
- Install the unit in a location where the pipes and the cables can be easily connected to the indoor unit.
- Install the unit on a flat, stable surface that can withstand the weight of the unit. Otherwise, the unit can generate noise and vibration during operation.
- Install the unit so that the air flow is directed towards the open area.
- Maintain sufficient clearance around the outdoor unit, especially from a radio, computer, stereo system, etc.

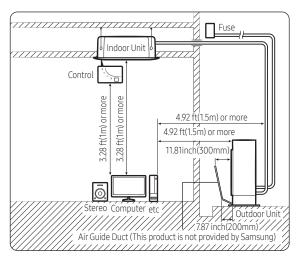


### **!** CAUTION


- You have just purchased a system air conditioner and it has been installed by your installation specialist.
- This device must be installed according to the national electrical rules.
- If your outdoor unit exceeds a net weight of 132.2 lb(60 kg). do not install it on a suspended wall, but stand it on a floor.
- The reliability of our product cannot be guaranteed under conditions of "A" or less.

Outdoor Model	"A"
AC018/024BXADCH	-13°F(-25°C)
AC030/036/042/048BXADCH	-4°F(-20°C)

- When installing the outdoor unit at the seaside, make sure that it is not directly exposed to sea breeze. If you cannot find an adequate place free from direct sea breeze, construct a protection wall or a protective fence.
  - Install the outdoor unit in a place (such as near buildings etc.) where it can be prevented from sea breeze. Failure to do so may cause a damage to the outdoor unit.

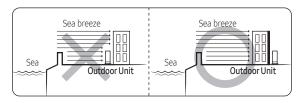

- If you cannot avoid installing the outdoor unit at the seaside, construct a protection wall around to block the sea breeze.
- Construct a protection wall with a solid material such as concrete to block the sea breeze. Make sure that the height and the width of the wall are 1.5 times larger than the size of the outdoor unit. Also, secure a space larger than 27.6 inch(700mm) between the protection wall and the outdoor unit for exhausted air to ventilate.

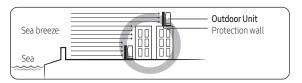

### ∴ CAUTION


Depending on the condition of the power supply, unstable power or voltage may cause malfunction of parts or control system (example: on a boat or places using power supplied from electric generator, etc.).

#### **Outdoor Units**

- Install the unit in a place where water can drain smoothly.
- If you have any difficulty finding installation location as prescribed above, contact your manufacturer for details.
- Consider that the salinity particles clinging to the external panels should be sufficiently washed out. Be sure to clean sea water and dust from the outdoor unit heat exchanger and apply a corrosion inhibitor on it at least once a year.
- Because the residual water at the bottom of the outdoor unit significantly promotes corrosion, make sure that the slope does not disturb drainage.
  - Keep the floor level so that rain does not accumulate.
  - Be careful not to block the drain hole due to foreign substance.
- Check the condition of the product periodically.
  - Check the installation site every 3 months and perform anti-corrosion treatment such as R-Pro supplied by SAMSUNG (Code: MOK-220SA) or commercial water repellent grease and wax, etc., based on the product condition.
  - When the product is to be shut down for a long period of time, such as off-peak hours, take appropriate measures like covering the product.
- If the product installed within 1640.4 ft of seashore, special anti-corrosion treatment is required.
  - \* Please contact your local SAMSUNG representative for further details.

### **⚠** CAUTION

 In areas with heavy snow fall, piled snow could block the air intake. To avoid this incident, install a frame that is higher than estimated snow fall. In addition, install a snow-proof hood to avoid snow from piling on the outdoor unit.

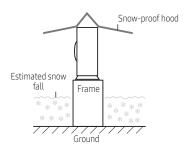

#### **Outdoor unit dimensions**


Unit: inch (mm) A Type AC018BXADCH 12.20 (310) 26.02 (661) 42 (798 34.65 (880) 1.93 (49) В Туре AC024BXADCH, AC030BXADCH 37.01 (940) 24.41 (620) 38.46 (977) C Type AC036BXADCH, AC042BXADCH, AC048BXADCH 24.41 (620) 46.65 (1185) 47.64 (1210)

### **Outdoor Units**

#### Minimum clearances for the outdoor unit


### When installing 1 outdoor unit


Unit: inch (mm)

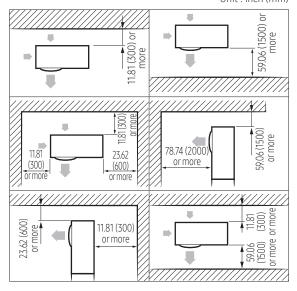

#### When installing more than 1 outdoor unit

Unit: inch (mm)

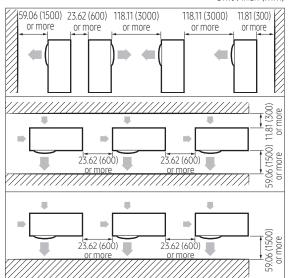

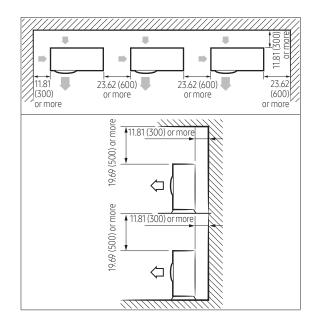


### **↑** CAUTION

 The outdoor unit must be installed according to the specified distances in order to permit accessibility from each side, to guarantee correct operation, maintenance, and repair of the unit.
 The components of the outdoor unit must be reachable and removable under safe conditions for people and the unit.

### **⚠ WARNING**

• Should adopt bar type louver. Don't use a type of rain resistance louver.

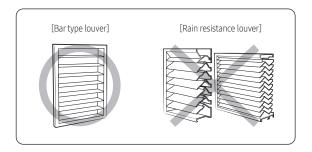



- Louver specifications.
  - Angle criteria : less than 20°
  - Opening ratio criteria: greater than 80%

#### Outdoor Units

### Moving the outdoor unit with wire rope

- 1 Before carrying the outdoor unit, fasten two wire ropes of 26.25 ft (8m) or longer, as shown in the figure.
- 2 To prevent damages or scratches effectively, insert a piece of cloth between the outdoor unit and the ropes.
- 3 Move the outdoor unit.

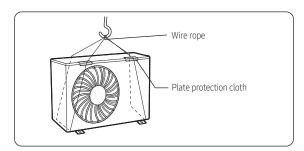

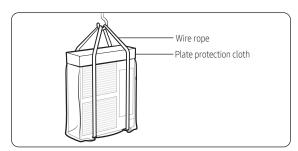


### Fixing the outdoor unit in place


Install the outdoor unit on a rigid and stable base to prevent disturbance from any noise caused by vibration. When installing the unit on tall stands or in a location exposed to strong winds, fix the unit securely to the ground or structure.

- 1 Position the outdoor unit so that the air flow is directed towards the outside, as indicated by the arrows on the top of the unit.
- **2** Attach the outdoor unit to the appropriate support using anchor bolts.
  - The ground wire for the telephone line cannot be used to ground the air conditioner.
- **3** Dif the outdoor unit is exposed to strong winds, install shield plates around the outdoor unit, so that the fan can operate correctly.




 Install provided rubber legs to prevent vibration and noise.

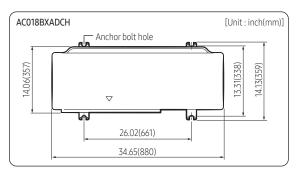

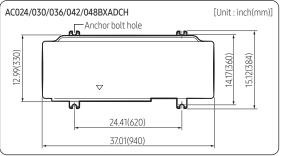


### **A** CAUTION

- Install a drain outlet at the lowest end around the base for outdoor unit drainage
- When installing the outdoor unit on the roof, waterproof the unit and check the ceiling strength.

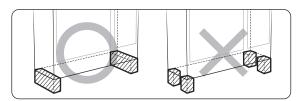

### Optional: Fixing the outdoor unit to a wall with a rack

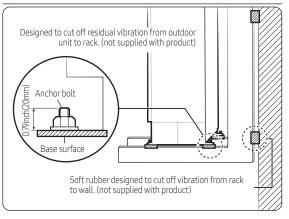

 Install a proper grommet in order to reduce noise and residual vibration transferred by the outdoor unit towards the wall.

#### **Outdoor Units**

### **A** CAUTION

- Make sure that the wall can support the weights of the rack and the outdoor unit.
- Install the rack close to the column as much as possible.
- When installing an air guide duct, be sure to check the following:
  - The screws do not damage the copper pipe.
  - The air guide duct is fixed firmly on the guard fan.

# Connecting the power cables, communication cable, and controllers

You must connect the following three electrical cables to the outdoor unit:

- The main power cable between the auxiliary circuit breaker and the outdoor unit.
- The outdoor-to-indoor power cable between the outdoor unit and the indoor unit.
- The communication cable between the outdoor unit and the indoor unit.


### CAUTION

- During installation, make first the refrigerant connections and then the electrical connections. If the unit is being removed, first disconnect the electrical cables and then the refrigerant connections.
- Connect the air conditioner to the earthing system before making the electrical connections.


### Connecting wire conduits

When connecting cables between the indoor unit and the outdoor unit, use conduits to protect the cables.

- 1 Drill holes on the conduit plate in accordance with their use and quantity.
  - AC018BXADCH
    - Drill conduit holes on the side cabinet. (knock out holes)

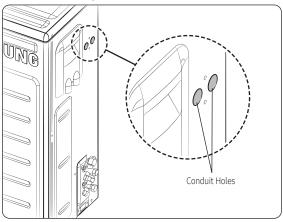

- AC024/030/036/042/048BXADCH
  - Use a nipper to remove conduit holes from the lower part of the cabinet.
     (Do not remove it by hammering.)

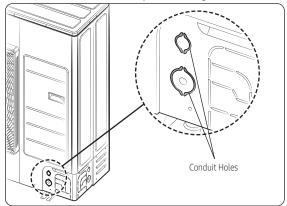


- 2 Insert the cables through the conduits, and then fix the conduits to the conduit plate with the lock nuts.
- **3** Apply silicone to the end of the hose to prevent rain from entering the hose.



- **4** Connect the cables to the outdoor units. For how to connect the cables, refer to the next page.
- **5** Attach the conduit plate to the product.

### Air conditioning system examples

When using earth leakage circuit breaker (ELCB) for a single phase

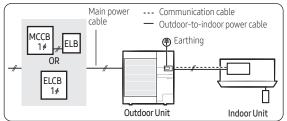

\* The appearance of the unit may be different from the picture depending on the model.


### **!** CAUTION

- If the outdoor unit is installed in a location vulnerable to an electric leak or submergence, make sure to install an ELCB.
- AC018BXADCH, AC024BXADCH: ELCB must be installed since this product is equipped with a base heater.


### **Outdoor Units**

### Connecting the main power cable

### When using ELB for AC018BXADCH (1-phase)

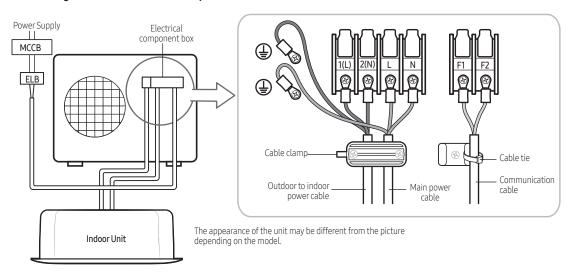

### When using ELB for AC024/030/036/042/048BXADCH (1-phase)

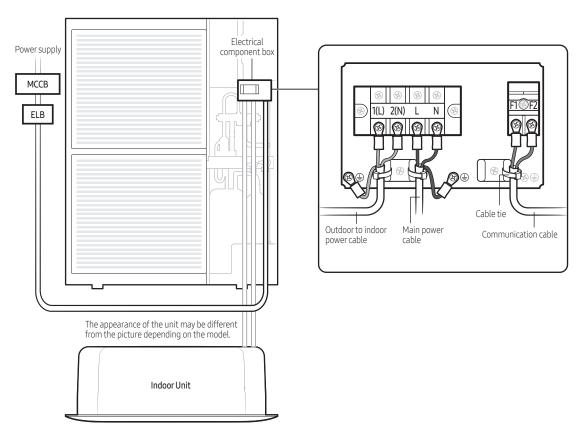

#### **Outdoor Units**


### ♠ CAUTION

- You should connect the power cable into the power cable terminal and fasten it with a clamp.
- The unbalanced power must be maintained within 2% of supply rating.
- If the power is unbalanced greatly, it may shorten the life of the condenser. If the unbalanced power is exceeded over 4% of supply rating, the indoor unit is protected, stopped and the error mode indicates.
- To protect the product from water and possible shock, you should keep the power cable and the connection cord of the indoor and outdoor units within ducts. (with appropriate IP rating and material selection for your application)
- Ensure that main supply connection is made through a switch that disconnects all poles, with contact gap of a least 0.12 inch(3mm).
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Keep distances of 1.97 inch(50mm) or more between power cable and communication cable.

### Main power terminal block specifications


AC018BXADCH (1-phase)

[Unit:inch(mm)]

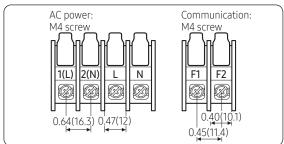

AC024/030/036/042/048BXADCH (1-phase)

[Unit:inch(mm)]

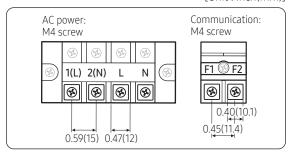

#### Main power cable specifications

The power cable is not supplied with air conditioner.

- Select the power supply cable in accordance with relevant local and national regulations.
- Wire size must comply with the applicable local and national code.
- Specifications for local wiring power cord and branch wiring are in compliance with local cord.

### **Outdoor Units**

Mod	del			Outo	door	Indoor		
Outdoor	Indoor	Power Source	RLA (A)		Rated input current of the power conversion equipment		MCA (A)	MOP (A)
	A COLODNIAD CIT			FAN1(A)	FAN2(A)	FAN(A)		
	AC018BN1DCH					0.42		
	AC018BN4DCH					0.79		
	AC018BN6DCH AC018BNADCH					0.79		
AC018BXADCH			12.7	1.25			20.1	25.0
ACUIODAADCH	AC018BNHDCH AC018BNJDCH		12./	1.25	-	2.10 0.49	20.1	25.0
	AC018BNLDCH					1.06		
	AC018BNNDCH AC018BNZDCH					0.30 1.50		
	AC018BN2DCH AC024BN4DCH		15.9	1.25		0.79	24.1	
	AC024BN4DCH					0.79		
AC024BXADCH	AC024BNADCH				_	0.79		30.0
ACOZADAADCII	AC024BNHDCH					2.10		30.0
	AC024BN7DCH					2.10		
	AC030BN4DCH		16.2	1.25		0.79	24.0	
	AC030BN6DCH					0.79		
AC030BXADCH	AC030BNHDCH	208~230V/60Hz			-	2.10		30.0
71005057015011	AC030BNTDCH					0.51		
	AC030BNZDCH					2.50		
	AC036BN4DCH					0.79		
	AC036BN6DCH				1,25	0.79		35.0
AC036BXADCH	AC036BNHDCH		14.7	1.25		3.50	24.5	
	AC036BNTDCH				5	0.51		
	AC036BNZDCH					3.60		
	AC042BN4DCH					0.79		
4.00.405.// 5.01	AC042BN6DCH		0.5.5	4.0-	4.6-	0.79	70.0	40.0
AC042BXADCH	AC042BNHDCH		20.9	1.25	1.25	3.50	32.2	40.0
	AC042BNZDCH					3.40		
	AC048BN4DCH					0.79		
AC0.4057/45CI	AC048BN6DCH		200	1.25	1.25	0.79	70.0	40.0
AC048BXADCH	AC048BNHDCH		20.9			3.50	32.8	
	AC048BNZDCH					4.10		


### **Outdoor Units**




- RLA is based on AHRI 210/240 cooling standard condition [Indoor temp.: 26.7 °C / 80 °F(DB) / 19.46 °C / 67 °F(WB), Outdoor temp.: 35 °C / 95 °F(DB)]
- Voltage tolerance is ± 10 %.
- Maximum allowable voltage between phases is 2 %.
- Symbols
  - RLA: Rated Load Ampere (A)
  - MOC: Maximum Operating Current (A)
  - MCA: Minimum Circuit Ampere (A)
  - MOP: Maximum Overcurrent Protective Device (A)
- Voltage range
  - Units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
- Maximum allowable voltage variation between phases is 2%.
- Wire size & type must comply with the applicable local and national code.
  - Wire size: Based on the value of MCA.
  - Wire type:
     1-phase: 60245 IEC57(IEC) or H05RN-F(CENELEC)
     grade or more

### Silence mode controller wiring diagram with External controller

AC018BXADCH

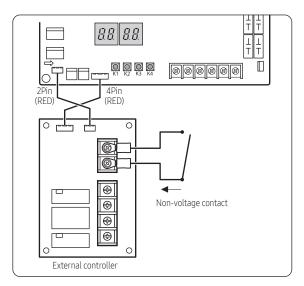


• AC024/030/036/042/048BXADCH

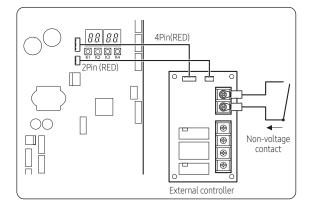


### **Outdoor Units**

# Connecting the outdoor-to-indoor power cable and the communication cable

AC018BXADCH

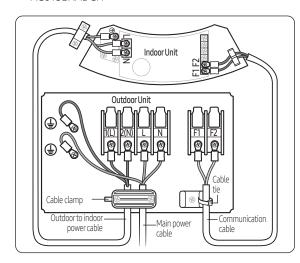

• AC024/030/036/042/048BXADCH

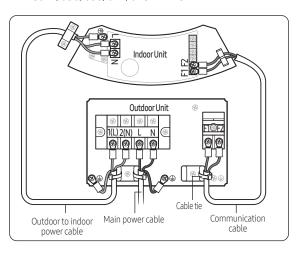


### NOTE

- Lay the electrical wiring so that the front cover does not rise up when doing wiring work and attach the front cover securely.
- Ground wire for the indoor unit and outdoor unit connection cable must be clamped to a soft copper tin-plated eyelet terminal with M4 screw hole(NOT SUPPLIED WITH UNIT ACCESSORIES).
- The appearance of the unit may be different from the picture depending on the model.

# Outdoor-to-indoor power terminal specifications

- Connect the cables to the terminal board using the compressed ring terminal.
- Cover a solderless ring terminal and a connector part of the power cable and then connect it.

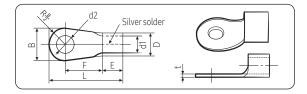

### **Outdoor Units**

Nominal	Nominal	I	В		D		d1		F	L	(	d2	t
dimensions for cable [mm2(inch2)]	dimensions for screw [mm(inch)]	dimoncion	Allowance [mm(inch)]	Standard dimension [mm(inch)]	Allowance [mm(inch)]	Standard dimension [mm(inch)]	Allowance [mm(inch)]	Min. [mm (inch)]	Min. [mm (inch)]	Max. [mm (inch)]	Standard dimension [mm(inch)]	Allowance [mm(inch)]	Min. [mm (inch)]
4/6	4(3/8)	9.5(3/8)	±0.2	5.6(1/4)	+0.3(+0.011)	7 //1/0\	±0.2	Z /1/A\	5 (3/16)	20 (3/4)	4.3 (3/16)	+0.2 (+0.007) 0(0)	0.9
(0.006/ 0.009)	8(3/16)	15(9/16)	(±0.007)	5.0(1/4)	-0.2(-0.007)	0.2(-0.007) 3.4(1/8)		6 (1/4)	9 (3/8)	28.5 (1-1/8)	8.4 (1-3/16)	+0.4 (+0.015) 0(0)	(0.03)
10(0.01)	8(3/16)	15(9/16)	±0.2 (±0.007)	7.1(1/4)	+0.3(+0.011) -0.2(-0.007)	4.5(3/16)	±0.2 (±0.007)	7.9 (5/16)	9 (3/8)	30 (1-3/16)	8.4 (1-3/16)	+0.4 (+0.015) 0(0)	1.15 (0.04)
16(0.02)	8(3/16)	16(10/16)	±0.2 (±0.007)	9(3/8)	+0.3(+0.011) -0.2(-0.007)	5.8(1/4)	±0.2 (±0.007)	9.5 (5/16)	13 (1/2)	33 (1-5/16)	8.4 (1-3/16)	+0.4 (+0.015) 0(0)	1.45 (0.05)
25(0.03)	8(3/16)	12(1/2)	±0.3	11.5(7/16)	11.5(7/1/) +0.5(+0.019)	7.7(5/16)	±0.2	11 (3/8)	15 (5/8)	34 (1-	8.4 (1-3/16)	+0.4 (+0.015)	1.7
23(0.03)	8(3/16)	16.5(10/16)	(±0.011)	11.3(7/10)	-0.2(-0.007)	7.7(3/10)	(±0.007)	11 (3/6)	13 (1/2)	3/8)	8.4 (1-3/16)	0(0)	(0.06)
7E(0.0E)	8(3/16)	16(10/16)	±0.3	17 7/1/2\	+0.5(+0.019)	0.4/7.(0)	±0.2	12.5	13 (1/2)	38 (1-1/2)	8.4 (1-3/16)	+0.4 (+0.015)	1.8
35(0.05)	8(3/16)	22(7/8)	(±0.011)	13.3(1/2)	-0.2(-0.007)	9.4(3/8)	(±0.007)	(1/2)	13 (1/2)	43 (1- 11/16)	8.4 (1-3/16)	0(0)	(0.07)
50(0.07)	8(3/16)	22(7/8)	±0.3 (±0.011)	13.5(1/2)	+0.5(+0.019) -0.2(-0.007)	11.4(7/16)	±0.3 (±0.011)	17.5 (11/16)	14 (9/16)	50 (2)	8.4 (1-3/16)	+ 0.4(+0.015) 0(0)	1.8 (0.07)
70(0.10)	8(3/16)	24(1)	±0.4 (±0.015)	17.5(11/16)	+0.5(+0.019) -0.4(-0.015)	13.3(1/2)	±0.4 (±0.015)	18.5 (3/4)	20 (3/4)	51 (2)	8.4 (1-3/16)	+ 0.4(+0.015) 0(0)	2.0 (0.078)

- Connect the rated cables only.
- Connect using a driver which is able to apply the rated torque to the screws.
- If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.

Tightening torque								
	lbf•ft	N•m						
M4	0.87 to 1.30	0.8 to 1.2						
M5	1.45 to 2.17	2.0 to 3.0						

### **⚠** CAUTION

- When connecting cables, you can connect the cables to the electrical part or connect them through the holes below depending on the spot.
- Connect the communication cable between the indoor and outdoor units through a conduit to protect against external forces, and feed the conduit through the wall together with refrigerant piping.
- Remove all burrs at the edge of the knock-out hole and secure the cable to the outdoor knock-out using lining and bushing with an electrical insulation such as rubber and so on.
- Must keep the cable in a protection tube.
- Keep distances of 1.97 inch(50mm) or more between power cable and communication cable.
- When the cables are connected through the hole, remove the Plate bottom.


### **Outdoor Units**

# Outdoor-to-indoor power and communication cables specifications

Indoor unit : MPAH(AC\*\*\*BNZ\*\*\*)

Indoor power supply								
Power supply	Max/Min (V)	Indoor power cable						
1Ф, 208-230V~, 60Hz	±10%	0.0039 inch²↑ (2.5mm² ↑), 3 wires						
Communication cable								
0.0012 inch	0.0012 inch <sup>2</sup> ↑ (0.75mm <sup>2</sup> ↑), 2 wires							

- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F)
- When installing the indoor unit in a computer room or network room, use the double shielded (tape aluminum / polyester braid + copper) cable of FROHH2R type.

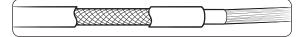



Images and data in this book may subject to change without prior notice.