 


amazonbasics

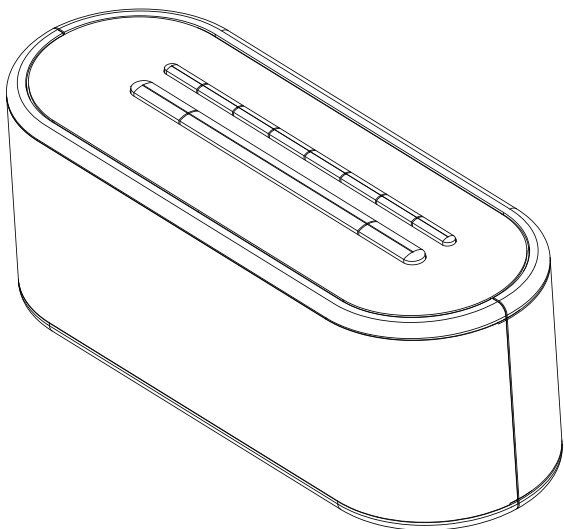

## FM Dual Alarm Clock Radio with USB Charging Port and Bluetooth®

Radorreloj FM Dual con Alarma, Puerto de Carga USB y Bluetooth®

Radio Réveil FM à Double Alarme avec Port de Chargement USB et Fonction Bluetooth®

B07DQQPF1T

■	English .....	3
---	---------------	---

## Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Amazon.com, Inc. or its affiliates is under license.



## Install Back-Up Battery

- The back-up battery saves the time for you in case of a loss of power. To install the back-up battery, open the battery compartment on the bottom of the wireless audio system and install 2 AAA batteries (not included). Then close the battery compartment again.

## Plug In

 
- Plug the AC power adapter into the 5 V jack on the back of the wireless audio system.
- Plug the other end into a wall outlet or surge protector.

## Set The Time


- When you first plug in the audio system, the hours digits on the clock start flashing—it's time to set the time!



If the hours digits aren't flashing, press and hold the TIME SET button until they do.

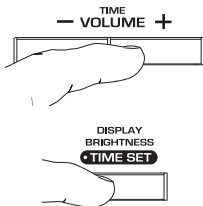

 - Use the **TIME/VOLUME - / +** buttons to set the hour.
- For PM, go past 12 (the PM indicator illuminates on the clock).
- To go faster, press and hold.
- Press the **TIME SET** button again to finish setting the hour. The minutes digits start flashing.



- Use the **TIME/VOLUME -** and **+** buttons to set the minutes. To go faster, press and hold.



- Press the **TIME SET** button again to finish setting the minutes.

## Pair + Connect Bluetooth®

### BLUETOOTH



- Press the **BLUETOOTH** button. After a few seconds, the audio system says “Pairing” and the Bluetooth indicator on the clock starts blinking.



- Enable Bluetooth on your device (if it is not already enabled).



- Choose “**B07DQQPF1T**” from the list of devices available
- After a few seconds, the audio system says “Connected” and the Bluetooth indicator on the clock turns solid blue.



- Start playing audio on your device. The audio system starts streaming this audio wirelessly.
- See the ***Listening to Bluetooth*** section for more information.

# Bluetooth® Wireless Connection Tips

- Make sure the Bluetooth function of your device is turned on.
- The Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters). This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to the speaker, move closer to it.

## Using the Audio System

### Setting the Alarm

1. Press and hold the **ALARM SET** button. The hours digit on the clock starts flashing.
2. Use the **TIME/VOLUME –** or **+** buttons to set the hour. For PM, go past 12. To go faster, press and hold.
3. Press the **ALARM SET** button again to finish setting the hour. The minutes digits start flashing.
4. Use the **TIME/VOLUME –** or **+** buttons to set the minutes. To go faster, press and hold.
5. Press the **ALARM SET** button again to finish setting the minutes.



#### NOTICE

You can set the source for your alarm to a simple beeping, FM radio or a Bluetooth audio source. Press the **ALARM SOURCE** button when you've set the alarm to go through the options.

### Listening to the Radio

1. Press the **FM** button to switch to FM radio.
2. Use the **◀ TRACK/TUNING** and **TRACK/ TUNING ▶** buttons to go through stations. Press and hold to scan faster.
3. To turn the radio off, press the **OFF** button.



#### NOTICE

The thin wire on the back of the audio system is the antenna for FM reception.

### Listening to Bluetooth


- If you've already paired a Bluetooth device to this audio system, simply press the **BLUETOOTH** button on the audio system to reconnect at any time.



#### IMPORTANT

Make sure Bluetooth is enabled on your device and that the device is in range!

- **To adjust volume:** Press the **– VOLUME +** buttons on the audio system, or use the volume controls on your Bluetooth device.

- **To pause/continue playback:** Press the **PLAY•PAUSE**  button on the audio system, or use the playback controls on your device.
- **To change tracks:** Press the **⏮ TRACK** and **TRACK ⏭** buttons on the audio system, or use the transport controls on your device.
- **To connect to a different Bluetooth device:** Press and hold the **BLUETOOTH** button for 3 seconds to reinitiate pairing mode. Then connect to the B07DQQPF1T through your phone's Bluetooth menu.

## Using the Sleep timer

The Sleep timer automatically turns the audio system off after a set amount of time.

1. Play the audio you want to listen to—FM radio or Bluetooth.
2. Press the **SLEEP** button—the timer starts at 90 minutes. Additional presses decrease the timer by 10 minutes to “Off.”

**SLEEP**



## Using the USB Charger

This audio system offers USB charging on its back panel. Simply connect your device's charging cable (not included) to the USB CHARGING port on the back panel of the audio system.

**USB  
CHARGING**



## Using Smart Snooze

When your alarm goes off, all buttons on the product will trigger the snooze function, not just the **SNOOZE** button. The Beep, FM, or Bluetooth indicator on the clock's front panel blinks while the alarm is snoozing.

**To turn Smart Snooze off:** Press the **OFF** button.



### IMPORTANT

When the alarm goes off, pressing any button except for OFF triggers smart snooze. So, for example, if you're listening to music from the radio or a Bluetooth device, and the alarm goes off, pressing the Volume buttons will trigger smart snooze, not increase the volume. The music will stop and the display will show '09', meaning that there are 9 minutes left in the snooze. To turn off Smart Snooze, press the Off button.

# IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

## **⚠ WARNING TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, KEEP AWAY THIS PRODUCT FROM WATER AND HIGH HEAT.**

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this product near water.
- Clean only with a dry cloth.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this product during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/product combination to avoid injury from tipping over.



**Portable Cart Warning**

- Unplug this product during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Always leave sufficient space around the product for ventilation. Do not place the product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Keep away from high heat and fire.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- To be completely disconnected from the power input, the power plug of the product shall be disconnected from the power supply.
- The power plug is a disconnect device. The power plug should not be obstructed OR should be easily accessed during intended use.
- This apparatus is intended to be used in moderate climates.

## Battery Warnings

- Always insert batteries correctly with regard to polarity (+ and -) as marked on the battery and the product.
- Exhausted batteries should be immediately removed from product and properly disposed.

# SAVE THESE INSTRUCTIONS



# FCC Compliance Statement

1. This product complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
  - (1) this product may not cause harmful interference, and
  - (2) this product must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**FCC Interference Statement:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada Regulatory Information

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B)

# Care and Maintenance

- Always use a soft cloth to clean the product. Never use any product containing alcohol or other solvents as they may damage the surface.
- Use caution when plugging the power transformers in an AC outlet to avoid the risk of electric shock.
- If the product is used outside on a deck or patio, make sure you bring it indoors in the event of a rainstorm to prevent possible damage.
- Do not operate or store the system in extreme temperatures (below 32°F and above 122°F).

# Specifications

Dimension (L x W x H):	8.26 x 3.07 x 2.95 in
Weight:	1.07 lbs
Power Input:	100 - 240 V~, 50 / 60 Hz, 300 mA
Power consumption:	10 W
USB output:	5 V 1A / 5 W

# Warranty Information

To obtain a copy of the warranty for this product:



Visit [amazon.com/AmazonBasics/Warranty](https://amazon.com/AmazonBasics/Warranty)

— or —



Contact Customer Service at 1-866-216-1072

## Feedback

### Love it? Hate it?

Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

Please visit: [amazon.com/review/review-your-purchases#](https://amazon.com/review/review-your-purchases#)



For further services:



Visit [amazon.com/gp/help/customer/contact-us](https://amazon.com/gp/help/customer/contact-us)

— or —



Contact Customer Service at 1-866-216-1072

**amazonbasics**

[amazon.com/AmazonBasics](https://amazon.com/AmazonBasics)

MADE IN CHINA