



---

Junos<sup>®</sup> OS

CLI User Guide

Release

12.1X46-D10



---

Modified: 2016-08-08

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos<sup>®</sup> OS CLI User Guide*

12.1X46-D10

Copyright © 2016, Juniper Networks, Inc.

All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

**END USER LICENSE AGREEMENT**

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	xv
	Documentation and Release Notes . . . . .	xv
	Supported Platforms . . . . .	xv
	Using the Examples in This Manual . . . . .	xv
	Merging a Full Example . . . . .	xvi
	Merging a Snippet . . . . .	xvi
	Documentation Conventions . . . . .	xvii
	Documentation Feedback . . . . .	xix
	Requesting Technical Support . . . . .	xix
	Self-Help Online Tools and Resources . . . . .	xix
	Opening a Case with JTAC . . . . .	xx
<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>CLI Overview . . . . .</b>	<b>3</b>
	Introducing the Junos OS Command-Line Interface . . . . .	3
	Key Features of the CLI . . . . .	3
	Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies . . . . .	5
	Junos OS CLI Command Modes . . . . .	5
	CLI Command Hierarchy . . . . .	6
	Configuration Statement Hierarchy . . . . .	6
	Moving Among Hierarchy Levels . . . . .	6
	Other Tools to Configure and Monitor Devices Running Junos OS . . . . .	7
	Commands and Configuration Statements for Junos-FIPS . . . . .	8
<b>Chapter 2</b>	<b>CLI Online Help . . . . .</b>	<b>9</b>
	Getting Online Help from the Junos OS Command-Line Interface . . . . .	9
	Getting Help About Commands . . . . .	9
	Getting Help About a String in a Statement or Command . . . . .	10
	Getting Help About Configuration Statements . . . . .	11
	Getting Help About System Log Messages . . . . .	11
	Junos OS CLI Online Help Features . . . . .	11
	Help for Omitted Statements . . . . .	11
	Using CLI Command Completion . . . . .	12
	Using Command Completion in Configuration Mode . . . . .	12
	Displaying Tips About CLI Commands . . . . .	12

<b>Chapter 3</b>	<b>CLI Operational Mode . . . . .</b>	<b>15</b>
	Overview of Junos OS CLI Operational Mode Commands . . . . .	15
	CLI Command Categories . . . . .	15
	Commonly Used Operational Mode Commands . . . . .	16
	Junos OS Operational Mode Commands That Combine Other Commands . . . . .	18
	Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS	
	Operational Commands . . . . .	19
	Controlling the Scope of an Operational Mode Command . . . . .	20
	Operational Mode Commands on a TX Matrix Router or TX Matrix Plus	
	Router . . . . .	21
	Examples of Routing Matrix Command Options . . . . .	21
	Using the Pipe (   ) Symbol to Filter Junos Command Output . . . . .	23
	Using Regular Expressions with the Pipe (   ) Symbol to Filter Junos Command	
	Output . . . . .	24
	Pipe (   ) Filter Functions in the Junos OS command-line interface . . . . .	25
	Comparing Configurations . . . . .	25
	Counting the Number of Lines of Output . . . . .	27
	Displaying Output in XML Tag Format . . . . .	27
	Displaying the RPC tags for a Command . . . . .	27
	Ignoring Output That Does Not Match a Regular Expression . . . . .	27
	Displaying Output from the First Match of a Regular Expression . . . . .	28
	Retaining Output After the Last Screen . . . . .	28
	Displaying Output Beginning with the Last Entries . . . . .	28
	Displaying Output That Matches a Regular Expression . . . . .	29
	Preventing Output from Being Paginated . . . . .	29
	Sending Command Output to Other Users . . . . .	29
	Resolving IP Addresses . . . . .	30
	Saving Output to a File . . . . .	30
	Trimming Output by Specifying the Starting Column . . . . .	30
<b>Chapter 4</b>	<b>CLI Configuration Mode . . . . .</b>	<b>33</b>
	Understanding Junos OS CLI Configuration Mode . . . . .	33
	Configuration Mode Commands . . . . .	34
	Configuration Statements and Identifiers . . . . .	35
	Configuration Statement Hierarchy . . . . .	37
	Modifying the Junos OS Configuration . . . . .	39
	Commit Operation When Multiple Users Configure the Software . . . . .	39
	Forms of the configure Command . . . . .	40
	Additional Details About Specifying Junos Statements and Identifiers . . . . .	42
	Specifying Statements . . . . .	42
	Performing CLI Type-Checking . . . . .	44
<b>Chapter 5</b>	<b>CLI Advanced Features . . . . .</b>	<b>47</b>
	Using Keyboard Sequences to Move Around and Edit the Junos OS CLI . . . . .	47
	Using Wildcard Characters in Interface Names . . . . .	49
	Using Global Replace in a Junos Configuration . . . . .	49
<b>Chapter 6</b>	<b>CLI Commit Operations . . . . .</b>	<b>51</b>
	Junos OS Commit Model for Router or Switch Configuration . . . . .	51
	Commit Operation When Multiple Users Configure the Software . . . . .	52

	Junos OS Batch Commits Overview . . . . .	53
	Aggregation and Error Handling . . . . .	53
<b>Chapter 7</b>	<b>Configuration Groups . . . . .</b>	<b>55</b>
	Understanding the Junos Configuration Groups . . . . .	55
	Configuration Groups Overview . . . . .	55
	Inheritance Model . . . . .	56
	Configuring Configuration Groups . . . . .	56
<b>Chapter 8</b>	<b>Configuration Management . . . . .</b>	<b>57</b>
	Understanding How the Junos Configuration Is Stored . . . . .	57
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 9</b>	<b>Getting Started with Junos OS Configuration . . . . .</b>	<b>61</b>
	Entering and Exiting the Junos OS CLI Configuration Mode . . . . .	61
	Displaying the Current Junos OS Configuration . . . . .	63
	Example: Displaying the Current Junos OS Configuration . . . . .	64
	Displaying set Commands from the Junos OS Configuration . . . . .	65
	Example: Displaying set Commands from the Configuration . . . . .	66
	Example: Displaying Required set Commands at the Current Hierarchy Level . . . . .	66
	Example: Displaying set Commands with the match Option . . . . .	67
	Displaying Users Currently Editing the Configuration . . . . .	67
	Displaying Additional Information About the Configuration . . . . .	68
	Using the configure exclusive Command . . . . .	71
	Updating the configure private Configuration . . . . .	72
	Getting Started with the Junos OS Command-Line Interface . . . . .	72
	Switching Between Junos OS CLI Operational and Configuration Modes . . . . .	74
	Configuring a User Account on a Device Running Junos OS . . . . .	76
	Example: Configuring a Routing Protocol . . . . .	78
	Shortcut . . . . .	79
	Longer Configuration . . . . .	79
	Making Changes to a Routing Protocol Configuration . . . . .	81
<b>Chapter 10</b>	<b>Updating the Junos OS Configuration . . . . .</b>	<b>85</b>
	Adding Junos Configuration Statements and Identifiers . . . . .	85
	Deleting a Statement from a Junos Configuration . . . . .	87
	Example: Deleting a Statement from the Junos Configuration . . . . .	88
	Copying a Junos Statement in the Configuration . . . . .	89
	Example: Copying a Statement in the Junos Configuration . . . . .	90
	Issuing Relative Junos Configuration Mode Commands . . . . .	91
	Renaming an Identifier in a Junos Configuration . . . . .	91
	Example: Renaming an Identifier in a Junos Configuration . . . . .	91
	Inserting a New Identifier in a Junos Configuration . . . . .	92
	Example: Inserting a New Identifier in a Junos Configuration . . . . .	92
	Deactivating and Reactivating Statements and Identifiers in a Junos Configuration . . . . .	94
	Examples: Deactivating and Reactivating Statements and Identifiers in a Junos Configuration . . . . .	95

	Adding Comments in a Junos Configuration . . . . .	96
	Example: Including Comments in a Junos Configuration . . . . .	97
	Using Regular Expressions to Delete Related Items from a Junos Configuration . . . . .	99
	Example: Using the Wildcard Command with the Range Option . . . . .	100
<b>Chapter 11</b>	<b>Committing a Junos OS Configuration . . . . .</b>	<b>105</b>
	Verifying a Junos Configuration . . . . .	105
	Example: Protecting the Junos OS Configuration from Modification or Deletion . . . . .	105
	Committing a Junos OS Configuration . . . . .	112
	Committing a Junos Configuration and Exiting Configuration Mode . . . . .	114
	Activating a Junos Configuration but Requiring Confirmation . . . . .	115
	Scheduling a Junos Commit Operation . . . . .	116
	Monitoring the Junos Commit Process . . . . .	117
	Adding a Comment to Describe the Committed Configuration . . . . .	118
	Backing Up the Committed Configuration on the Alternate Boot Drive . . . . .	119
	Example: Configuring Junos OS Batch Commits . . . . .	120
	Junos OS Batch Commits Overview . . . . .	120
	Aggregation and Error Handling . . . . .	120
	Example: Configuring Batch Commit Server Properties . . . . .	121
<b>Chapter 12</b>	<b>Loading a Junos OS Configuration . . . . .</b>	<b>129</b>
	Loading a Configuration from a File . . . . .	129
	Examples: Loading a Configuration from a File . . . . .	131
<b>Chapter 13</b>	<b>Synchronizing the Junos OS Configuration . . . . .</b>	<b>135</b>
	Synchronizing Routing Engines . . . . .	135
<b>Chapter 14</b>	<b>Creating and Applying Junos OS Configuration Groups . . . . .</b>	<b>137</b>
	Creating a Junos Configuration Group . . . . .	137
	Applying a Junos Configuration Group . . . . .	139
	Example: Configuring and Applying Junos Configuration Groups . . . . .	140
	Example: Creating and Applying Configuration Groups on a TX Matrix Router . .	142
	Disabling Inheritance of a Junos OS Configuration Group . . . . .	143
	Using Wildcards with Configuration Groups . . . . .	145
	Example: Using Conditions to Apply Configuration Groups . . . . .	148
	Using Conditions to Apply Configuration Groups Overview . . . . .	148
	Example: Configuring Conditions for Applying Configuration Groups . . . . .	148
	Example : Configuring Sets of Statements with Configuration Groups . . . . .	151
	Example: Configuring Interfaces Using Junos OS Configuration Groups . . . . .	152
	Example: Configuring a Consistent IP Address for the Management Interface . .	154
	Example: Configuring Peer Entities . . . . .	155
	Establishing Regional Configurations . . . . .	157
	Selecting Wildcard Names . . . . .	159
	Using Junos OS Defaults Groups . . . . .	160
	Example: Referencing the Preset Statement From the Junos defaults Group . .	161
	Example: Viewing Default Statements That Have Been Applied to the Configuration . . . . .	162

<b>Chapter 15</b>	<b>CLI Online Help</b> . . . . .	<b>163</b>
	Examples: Using Command Completion in Configuration Mode . . . . .	163
	Examples: Using the Junos OS CLI Command Completion . . . . .	165
	Displaying the Junos OS CLI Command and Word History . . . . .	166
<b>Chapter 16</b>	<b>CLI Configuration Mode</b> . . . . .	<b>167</b>
	Example: Using the configure Command . . . . .	167
<b>Chapter 17</b>	<b>Controlling the CLI Environment</b> . . . . .	<b>169</b>
	Example: Controlling the CLI Environment . . . . .	169
<b>Chapter 18</b>	<b>CLI Advanced Features</b> . . . . .	<b>171</b>
	Example: Using Global Replace in a Junos Configuration—Using the \n Back Reference . . . . .	171
	Example: Using Global Replace in a Junos Configuration—Replacing an Interface Name . . . . .	172
	Example: Using Global Replace in a Junos Configuration—Using the upto Option . . . . .	173
<b>Chapter 19</b>	<b>Configuration Statements</b> . . . . .	<b>175</b>
	apply-groups . . . . .	176
	apply-groups-except . . . . .	177
	commit-interval (Batch Commits) . . . . .	177
	groups . . . . .	178
	days-to-keep-error-logs (Batch Commits) . . . . .	180
	deactivate . . . . .	181
	delete . . . . .	182
	edit . . . . .	183
	exit . . . . .	184
	help . . . . .	185
	insert . . . . .	186
	load . . . . .	187
	maximum-aggregate-pool (Batch Commits) . . . . .	188
	maximum-entries (Batch Commits) . . . . .	189
	protect . . . . .	190
	quit . . . . .	191
	rename . . . . .	192
	rename . . . . .	193
	replace . . . . .	194
	rollback . . . . .	195
	run . . . . .	196
	save . . . . .	197
	server (Batch Commits) . . . . .	198
	set . . . . .	199
	status . . . . .	200
	top . . . . .	201
	traceoptions (Batch Commits) . . . . .	202
	unprotect . . . . .	203
	up . . . . .	204
	update . . . . .	205

	when .....	206
	wildcard delete .....	207
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 20</b>	<b>CLI Operational Mode .....</b>	<b>211</b>
	Interface Naming Conventions Used in the Junos OS Operational	
	Commands .....	211
	Physical Part of an Interface Name .....	211
	Logical Part of an Interface Name .....	212
	Channel Identifier Part of an Interface Name .....	212
<b>Chapter 21</b>	<b>Routine Monitoring .....</b>	<b>213</b>
	Checking the Status of a Device Running Junos OS .....	213
	Monitoring Who Uses the Junos OS CLI .....	215
	Viewing Files and Directories on a Device Running Junos OS .....	216
	Directories on the Router or Switch .....	216
	Listing Files and Directories .....	217
	Specifying Filenames and URLs .....	219
	Displaying Junos OS Information .....	220
	Managing Programs and Processes Using Junos OS Operational Mode	
	Commands .....	222
	Showing Software Processes .....	222
	Restarting a Junos OS Process .....	224
	Stopping the Junos OS .....	225
	Rebooting the Junos OS .....	226
	Using the Junos OS CLI Comment Character # for Operational Mode	
	Commands .....	227
	Example: Using Comments in Junos OS Operational Mode Commands .....	227
<b>Chapter 22</b>	<b>Managing the CLI Environment .....</b>	<b>229</b>
	Controlling the Junos OS CLI Environment .....	229
	Setting the Terminal Type .....	230
	Setting the CLI Prompt .....	230
	Setting the CLI Directory .....	230
	Setting the CLI Timestamp .....	230
	Setting the Idle Timeout .....	230
	Setting the CLI to Prompt After a Software Upgrade .....	230
	Setting Command Completion .....	231
	Displaying CLI Settings .....	231
	Overview of Junos OS CLI Operational Mode Commands .....	231
	CLI Command Categories .....	231
	Commonly Used Operational Mode Commands .....	233
	Setting the Junos OS CLI Screen Length and Width .....	234
	Setting the Screen Length .....	234
	Setting the Screen Width .....	234
	Understanding the Screen Length and Width Settings .....	235
<b>Chapter 23</b>	<b>CLI Advanced Features .....</b>	<b>237</b>
	Common Regular Expressions to Use with the replace Command .....	237



<b>Chapter 24</b>	<b>Junos OS CLI Environment Commands . . . . .</b>	<b>239</b>
	set cli complete-on-space . . . . .	240
	set cli directory . . . . .	241
	set cli idle-timeout . . . . .	242
	set cli prompt . . . . .	243
	set cli restart-on-upgrade . . . . .	244
	set cli screen-length . . . . .	245
	set cli screen-width . . . . .	246
	set cli terminal . . . . .	247
	set cli timestamp . . . . .	248
	set date . . . . .	249
	show cli . . . . .	250
	show cli authorization . . . . .	252
	show cli directory . . . . .	253
	show cli history . . . . .	254
<b>Chapter 25</b>	<b>Operational Commands . . . . .</b>	<b>255</b>
	(pipe) . . . . .	256
	activate . . . . .	258
	annotate . . . . .	259
	commit . . . . .	260
	configure . . . . .	263
	copy . . . . .	265
	file . . . . .	266
	help . . . . .	267
	request . . . . .	268
	restart . . . . .	270
	set . . . . .	280
	show . . . . .	281
	show configuration . . . . .	282
	show   display inheritance . . . . .	285
	show   display omit . . . . .	286
	show   display set . . . . .	287
	show   display set relative . . . . .	288
	show groups junos-defaults . . . . .	289
	show system commit . . . . .	290
<b>Part 4</b>	<b>Troubleshooting</b>	
<b>Chapter 26</b>	<b>Troubleshooting Procedures . . . . .</b>	<b>295</b>
	Returning to the Most Recently Committed Junos Configuration . . . . .	295
	Returning to a Previously Committed Junos OS Configuration . . . . .	295
	Returning to a Configuration Prior to the One Most Recently Committed . . . . .	296
	Displaying Previous Configurations . . . . .	296
	Comparing Configuration Changes with a Prior Version . . . . .	297
	Creating and Returning to a Rescue Configuration . . . . .	299
	Saving a Configuration to a File . . . . .	300
	Creating and Returning to a Rescue Configuration . . . . .	301
	Rolling Back Junos OS Configuration Changes . . . . .	302

Part 5                      Index

                                 Index ..... 307

# List of Figures

<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>CLI Overview</b> .....	<b>3</b>
	Figure 1: Monitoring and Configuring Routers .....	3
	Figure 2: Committing a Configuration .....	5
	Figure 3: Configuration Statement Hierarchy Example .....	6
<b>Chapter 3</b>	<b>CLI Operational Mode</b> .....	<b>15</b>
	Figure 4: Commands That Combine Other Commands .....	18
	Figure 5: Command Output Options .....	19
<b>Chapter 4</b>	<b>CLI Configuration Mode</b> .....	<b>33</b>
	Figure 6: Configuration Mode Hierarchy of Statements .....	37
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 11</b>	<b>Committing a Junos OS Configuration</b> .....	<b>105</b>
	Figure 7: Confirm a Configuration .....	116
<b>Chapter 12</b>	<b>Loading a Junos OS Configuration</b> .....	<b>129</b>
	Figure 8: Overriding the Current Configuration .....	131
	Figure 9: Using the replace Option .....	132
	Figure 10: Using the merge Option .....	132
	Figure 11: Using a Patch File .....	133
	Figure 12: Using the set Option .....	133
<b>Chapter 18</b>	<b>CLI Advanced Features</b> .....	<b>171</b>
	Figure 13: Replacement by Object .....	173
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 21</b>	<b>Routine Monitoring</b> .....	<b>213</b>
	Figure 14: Restarting a Process .....	225



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xv</b>
	Table 1: Notice Icons . . . . .	xvii
	Table 2: Text and Syntax Conventions . . . . .	xviii
<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>CLI Overview</b> . . . . .	<b>3</b>
	Table 3: CLI Configuration Mode Navigation Commands . . . . .	7
<b>Chapter 3</b>	<b>CLI Operational Mode</b> . . . . .	<b>15</b>
	Table 4: Commonly Used Operational Mode Commands . . . . .	17
	Table 5: Common Regular Expression Operators in Operational Mode Commands . . . . .	24
<b>Chapter 4</b>	<b>CLI Configuration Mode</b> . . . . .	<b>33</b>
	Table 6: Summary of Configuration Mode Commands . . . . .	34
	Table 7: Configuration Mode Top-Level Statements . . . . .	36
	Table 8: Forms of the configure Command . . . . .	41
	Table 9: CLI Configuration Input Types . . . . .	44
<b>Chapter 5</b>	<b>CLI Advanced Features</b> . . . . .	<b>47</b>
	Table 10: CLI Keyboard Sequences . . . . .	47
	Table 11: Wildcard Characters for Specifying Interface Names . . . . .	49
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 21</b>	<b>Routine Monitoring</b> . . . . .	<b>213</b>
	Table 12: Directories on the Router . . . . .	216
	Table 13: show system process extensive Command Output Fields . . . . .	224
<b>Chapter 22</b>	<b>Managing the CLI Environment</b> . . . . .	<b>229</b>
	Table 14: Commonly Used Operational Mode Commands . . . . .	233
<b>Chapter 23</b>	<b>CLI Advanced Features</b> . . . . .	<b>237</b>
	Table 15: Common Regular Expressions to Use with the replace Command . . . . .	237
	Table 16: Replacement Examples . . . . .	238
<b>Chapter 24</b>	<b>Junos OS CLI Environment Commands</b> . . . . .	<b>239</b>
	Table 17: show cli Output Fields . . . . .	250
<b>Chapter 25</b>	<b>Operational Commands</b> . . . . .	<b>255</b>
	Table 18: show system commit Output Fields . . . . .	290



# About the Documentation

- [Documentation and Release Notes on page xv](#)
- [Supported Platforms on page xv](#)
- [Using the Examples in This Manual on page xv](#)
- [Documentation Conventions on page xvii](#)
- [Documentation Feedback on page xix](#)
- [Requesting Technical Support on page xix](#)

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- [J Series](#)
- [LN Series](#)
- [SRX Series](#)

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```



2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

## Documentation Conventions

Table 1 on page xvii defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xviii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols <b>ospf area area-id</b>] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast</b>   <b>multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members</b> [ <i>community-ids</i> ]
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

---

## GUI Conventions

---

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes:  
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:  
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# Overview

- [CLI Overview on page 3](#)
- [CLI Online Help on page 9](#)
- [CLI Operational Mode on page 15](#)
- [CLI Configuration Mode on page 33](#)
- [CLI Advanced Features on page 47](#)
- [CLI Commit Operations on page 51](#)
- [Configuration Groups on page 55](#)
- [Configuration Management on page 57](#)



## CHAPTER 1

# CLI Overview

- [Introducing the Junos OS Command-Line Interface on page 3](#)
- [Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies on page 5](#)
- [Other Tools to Configure and Monitor Devices Running Junos OS on page 7](#)
- [Commands and Configuration Statements for Junos-FIPS on page 8](#)

## Introducing the Junos OS Command-Line Interface

---


**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

The Junos OS command-line interface (CLI) is the software interface you use to access a device running Junos OS—whether from the console or through a network connection.

The Junos OS CLI is a Juniper Networks-specific command shell that runs on top of a FreeBSD UNIX-based operating system kernel. By leveraging industry-standard tools and utilities, the CLI provides a powerful set of commands that you can use to monitor and configure devices running Junos OS (see [Figure 1 on page 3](#)). The CLI is a straightforward command interface. You type commands on a single line, and the commands are executed when you press Enter.

**Figure 1: Monitoring and Configuring Routers**

 Use the JUNOS CLI to monitor and configure Juniper Networks routers.

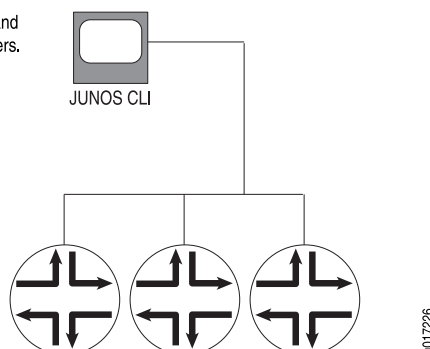

## Key Features of the CLI

The Junos OS CLI commands and statements follow a hierarchical organization and have a regular syntax. The Junos OS CLI provides the following features to simplify CLI use:

- Consistent command names—Commands that provide the same type of function have the same name, regardless of the portion of the software on which they are operating. For example, all **show** commands display software information and statistics, and all **clear** commands erase various types of system information.
- Lists and short descriptions of available commands—Information about available commands is provided at each level of the CLI command hierarchy. If you type a question mark (?) at any level, you see a list of the available commands along with a short description of each command. This means that if you already are familiar with the Junos OS or with other routing software, you can use many of the CLI commands without referring to the documentation.
- Command completion—Command completion for command names (keywords) and for command options is available at each level of the hierarchy. To complete a command or option that you have partially typed, press the Tab key or the Spacebar. If the partially typed letters begin a string that uniquely identifies a command, the complete command name appears. Otherwise, a beep indicates that you have entered an ambiguous command, and the possible completions are displayed. Completion also applies to other strings, such as filenames, interface names, usernames, and configuration statements.

If you have typed the mandatory arguments for executing a command in the operational or configuration mode the CLI displays <[Enter]> as one of the choices when you type a question mark (?). This indicates that you have entered the mandatory arguments and can execute the command at that level without specifying any further options. Likewise, the CLI also displays <[Enter]> when you have reached a specific hierarchy level in the configuration mode and do not have to enter any more mandatory arguments or statements.

- Industry-standard technology—With FreeBSD UNIX as the kernel, a variety of UNIX utilities are available on the Junos OS CLI. For example, you can:
  - Use regular expression matching to locate and replace values and identifiers in a configuration, filter command output, or examine log file entries.
  - Use Emacs-based key sequences to move around on a command line and scroll through the recently executed commands and command output.
  - Store and archive Junos OS device files on a UNIX-based file system.
    - Use standard UNIX conventions to specify filenames and paths.
  - Exit from the CLI environment and create a UNIX C shell or Bourne shell to navigate the file system, manage router processes, and so on.

**Related  
Documentation**

- [Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies on page 5](#)
- [Getting Started with the Junos OS Command-Line Interface on page 72](#)
- [Other Tools to Configure and Monitor Devices Running Junos OS on page 7](#)
- [Commands and Configuration Statements for Junos-FIPS on page 8](#)



## Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

The Junos OS command-line interface (CLI) commands and statements are organized under two command modes and various hierarchies. The following sections provide you an overview of the Junos OS CLI command modes and commands and statements hierarchies:

- [Junos OS CLI Command Modes on page 5](#)
- [CLI Command Hierarchy on page 6](#)
- [Configuration Statement Hierarchy on page 6](#)
- [Moving Among Hierarchy Levels on page 6](#)


### Junos OS CLI Command Modes

The Junos OS CLI has two modes:

- **Operational mode**—This mode displays the current status of the device. In operational mode, you enter commands to monitor and troubleshoot the Junos OS, devices, and network connectivity.
- **Configuration mode**—A configuration for a device running on Junos OS is stored as a hierarchy of statements. In configuration mode, you enter these statements to define all properties of the Junos OS, including interfaces, general routing information, routing protocols, user access, and several system and hardware properties.

When you enter configuration mode, you are actually viewing and changing a file called the *candidate configuration*. The candidate configuration file enables you to make configuration changes without causing operational changes to the current operating configuration, called the *active configuration*. The router or switch does not implement the changes you added to the candidate configuration file until you commit them, which activates the configuration on the router or switch (see [Figure 2 on page 5](#)). Candidate configurations enable you to alter your configuration without causing potential damage to your current network operations.

 **Figure 2: Committing a Configuration**

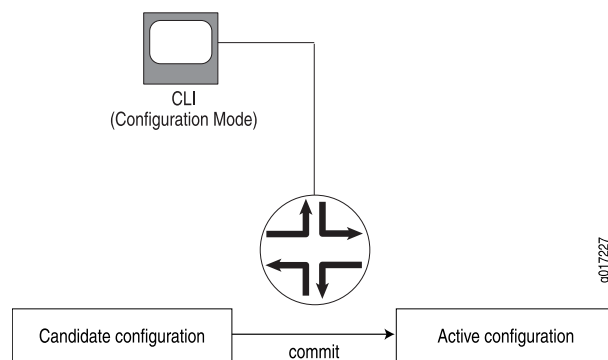

## CLI Command Hierarchy

CLI commands are organized in a hierarchy. Commands that perform a similar function are grouped together under the same level of the hierarchy. For example, all commands that display information about the system and the system software are grouped under the **show system** command, and all commands that display information about the routing table are grouped under the **show route** command.


To execute a command, you enter the full command name, starting at the top level of the hierarchy. For example, to display a brief view of the routes in the routing table, use the command **show route brief**.

## Configuration Statement Hierarchy

The configuration statement hierarchy has two types of statements: *container statements*, which are statements that contain other statements, and *leaf statements*, which do not contain other statements. All of the container and leaf statements together form the *configuration hierarchy*.

Figure 3 on page 6 illustrates a part of the hierarchy tree. The **protocols** statement is a top-level statement at the trunk of the configuration tree. The **ospf**, **area**, and **interface** statements are all subordinate container statements of a higher statement (they are branches of the hierarchy tree), and the **hello-interval** statement is a leaf on the tree.

 **Figure 3: Configuration Statement Hierarchy Example**

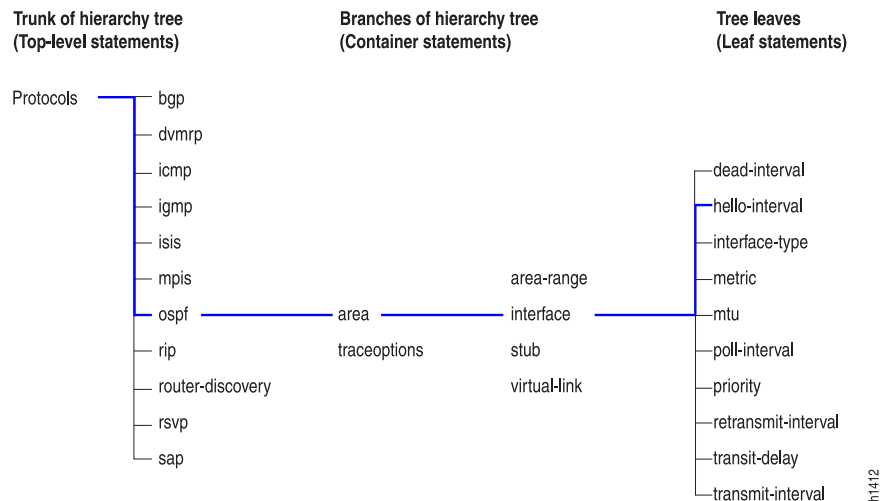

## Moving Among Hierarchy Levels

You can use the CLI commands in Table 3 on page 7 to navigate the levels of the configuration statement hierarchy.

Table 3: CLI Configuration Mode Navigation Commands

Command	Description
<b>edit</b> <i>hierarchy-level</i>	Moves to an existing configuration statement hierarchy or creates a hierarchy and moves to that level.
<b>exit</b>	Moves up the hierarchy to the previous level where you were working. This command is, in effect, the opposite of the <b>edit</b> command. Alternatively, you can use the <b>quit</b> command. The <b>exit</b> and <b>quit</b> commands are interchangeable.
<b>up</b>	Moves up the hierarchy one level at a time.
<b>top</b>	Moves directly to the top level of the hierarchy.

**Related Documentation**

- [Introducing the Junos OS Command-Line Interface on page 3](#)
- [Getting Started with the Junos OS Command-Line Interface on page 72](#)

## Other Tools to Configure and Monitor Devices Running Junos OS

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

Apart from the command-line interface, Junos OS also supports the following applications, scripts, and utilities that enable you to configure and monitor devices running Junos OS:

- J-Web graphical user interface (GUI)—Allows you to monitor, configure, troubleshoot, and manage the router on a client by means of a Web browser with Hypertext Transfer Protocol (HTTP) or HTTP over Secure Sockets Layer (HTTPS) enabled. For more information, see the *J-Web Interface User Guide*.
- Junos XML management protocol—Application programmers can use the Junos XML management protocol to monitor and configure Juniper Networks routers. Juniper Networks provides a Perl module with the API to help you more quickly and easily develop custom Perl scripts for configuring and monitoring routers. For more information, see the *Junos XML Management Protocol Developer Guide*.
- NETCONF Application Programming Interface (API)—Application programmers can also use the NETCONF XML management protocol to monitor and configure Juniper Networks routers. For more information, see the *NETCONF XML Management Protocol Developer Guide*.
- Junos OS commit scripts and self-diagnosis features—You can define scripts to enforce custom configuration rules, use commit script macros to provide simplified aliases for frequently used configuration statements, and configure diagnostic event policies and actions associated with each policy. For more information, see the *Junos OS Configuration and Operations Automation Library*.
- Management Information Bases (MIBs)—You can use enterprise-specific and standard MIBs to retrieve information about the hardware and software components on a Juniper

Networks router. For more information about MIBs, see the *SNMP MIBs and Traps Monitoring and Troubleshooting Guide for Security Devices*.

- Related Documentation**
- [Introducing the Junos OS Command-Line Interface on page 3](#)
  - [Getting Started with the Junos OS Command-Line Interface on page 72](#)
  - [Commands and Configuration Statements for Junos-FIPS on page 8](#)

---

## Commands and Configuration Statements for Junos-FIPS

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, T Series](#)

Junos-FIPS enables you to configure a network of Juniper Networks routers in a Federal Information Processing Standards (FIPS) 140-2 environment.

The Junos-FIPS software environment requires the installation of FIPS software by a crypto officer. In Junos-FIPS, some Junos OS commands and statements have restrictions and some additional configuration statements are available. For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS*.

- Related Documentation**
- [Junos Secure Configuration Guide for Common Criteria and Junos-FIPS](#)

## CHAPTER 2

# CLI Online Help

- [Getting Online Help from the Junos OS Command-Line Interface on page 9](#)
- [Junos OS CLI Online Help Features on page 11](#)

## Getting Online Help from the Junos OS Command-Line Interface

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

The Junos OS command-line interface (CLI) has a context-sensitive online help feature that enables you to access information about commands and statements from the Junos OS CLI. This topic contains the following sections:

- [Getting Help About Commands on page 9](#)
- [Getting Help About a String in a Statement or Command on page 10](#)
- [Getting Help About Configuration Statements on page 11](#)
- [Getting Help About System Log Messages on page 11](#)

## Getting Help About Commands

Information about commands is provided at each level of the CLI command hierarchy. You can type a question mark to get help about commands:

- If you type the question mark at the command-line prompt, the CLI lists the available commands and options. For example, to view a list of top-level operational mode commands, type a question mark (?) at the command-line prompt.

```
user@host> ?
Possible completions:
clear          Clear information in the system
configure      Manipulate software configuration information
file           Perform file operations
help           Provide help information
mtrace         Trace mtrace packets from source to receiver.
monitor        Real-time debugging
ping           Ping a remote target
quit           Exit the management session
request        Make system-level requests
restart        Restart a software process
set            Set CLI properties, date, time, craft display text
show           Show information about the system
ssh            Open a secure shell to another host
start          Start a software process
```

```
telnet      Telnet to another host
test        Diagnostic debugging commands
traceroute  Trace the route to a remote host
user@host>
```

- If you type the question mark after entering the complete name of a command or command option, the CLI lists the available commands and options and then redisplay the command names and options that you typed.

```
user@host> clear ?
Possible completions:
arp          Clear address-resolution information
bgp          Clear BGP information
chassis      Clear chassis information
firewall     Clear firewall counters
igmp        Clear IGMP information
interfaces  Clear interface information
ilmi        Clear ILMI statistics information
isis        Clear IS-IS information
ldp         Clear LDP information
log         Clear contents of a log file
mpls        Clear MPLS information
msdp        Clear MSDP information
multicast   Clear Multicast information
ospf        Clear OSPF information
pim         Clear PIM information
rip         Clear RIP information
route       Clear routing table information
rsvp        Clear RSVP information
snmp        Clear SNMP information
system      Clear system status
vrrp        Clear VRRP statistics information
user@host> clear
```

- If you type the question mark in the middle of a command name, the CLI lists possible command completions that match the letters you have entered so far. It then redisplay the letters that you typed. For example, to list all operational mode commands that start with the letter *c*, type the following:

```
user@host> c?
Possible completions:
clear      Clear information in the system
configure  Manipulate software configuration information
user@host> c
```

- For introductory information on using the question mark or the help command, you can also type **help** and press Enter:

```
user@host> help
```

## Getting Help About a String in a Statement or Command

You can use the **help** command to display help about a text string contained in a statement or command name:

**help** *apropos* *string*

*string* is a text string about which you want to get help. This string is used to match statement or command names as well as to match the help strings that are displayed for the statements or commands.

If the string contains spaces, enclose it in quotation marks ( " " ). You can also specify a regular expression for the string, using standard UNIX-style regular expression syntax.

In configuration mode, this command displays statement names and help text that match the string specified. In operational mode, this command displays command names and help text that match the string specified.

## Getting Help About Configuration Statements

You can display help based on text contained in a statement name using the **help topic** and **help reference** commands:

```
help topic word  
help reference statement-name
```

The **help topic** command displays usage guidelines for the statement based on information that appears in the Junos OS feature guides. The **help reference** command displays summary information about the statement based on the summary descriptions that appear in the Junos OS feature guides.

## Getting Help About System Log Messages

You can display help based on a system log tag using the **help syslog** command:

```
help syslog syslog-tag
```

The **help syslog** command displays the contents of a system log message.

- Related Documentation**
- [Junos OS CLI Online Help Features on page 11](#)
  - [Getting Started with the Junos OS Command-Line Interface on page 72](#)

---

## Junos OS CLI Online Help Features

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The Junos OS CLI online help provides the following features for ease of use and error prevention:

- [Help for Omitted Statements on page 11](#)
- [Using CLI Command Completion on page 12](#)
- [Using Command Completion in Configuration Mode on page 12](#)
- [Displaying Tips About CLI Commands on page 12](#)

## Help for Omitted Statements

If you have omitted a required statement at a particular hierarchy level, when you attempt to move from that hierarchy level or when you issue the **show** command in configuration mode, a message indicates which statement is missing. For example:

```
[edit protocols pim interface so-0/0/0]  
user@host# top  
Warning: missing mandatory statement: 'mode'
```

```
[edit]
user@host# show
protocols {
  pim {
    interface so-0/0/0 {
      priority 4;
      version 2;
      # Warning: missing mandatory statement(s): 'mode'
    }
  }
}
```

## Using CLI Command Completion

The Junos OS CLI provides you a command completion option that enables Junos OS to recognize commands and options based on the initial few letters you typed. That is, you do not always have to remember or type the full command or option name for the CLI to recognize it.

- To display all possible command or option completions, type the partial command followed immediately by a question mark.
- To complete a command or option that you have partially typed, press Tab or the Spacebar. If the partially typed letters begin a string that uniquely identifies a command, the complete command name appears. Otherwise, a prompt indicates that you have entered an ambiguous command, and the possible completions are displayed.

Command completion also applies to other strings, such as filenames, interface names, and usernames. To display all possible values, type a partial string followed immediately by a question mark. To complete a string, press Tab.

## Using Command Completion in Configuration Mode

The CLI command completion functions also apply to the commands in configuration mode and to configuration statements. Specifically, to display all possible commands or statements, type the partial string followed immediately by a question mark. To complete a command or statement that you have partially typed, press Tab or the Spacebar.

Command completion also applies to identifiers, with one slight difference. To display all possible identifiers, type a partial string followed immediately by a question mark. To complete an identifier, you must press Tab. This scheme allows you to enter identifiers with similar names; then press the Spacebar when you are done typing the identifier name.

## Displaying Tips About CLI Commands

To get tips about CLI commands, issue the **help tip cli** command. Each time you enter the command, a new tip appears. For example:

```
user@host> help tip cli
Junos tip:
```



Use 'request system software validate' to validate the incoming software against the current configuration without impacting the running system.

user@host> help tip cli

Junos tip:

Use 'commit and-quit' to exit configuration mode after the commit has succeeded. If the commit fails, you are left in configuration mode.

You can also enter **help tip cli *number*** to associate a tip with a number. This enables you to recall the tip at a later time. For example:

user@host> help tip cli 10

JUNOS tip:

Use '#' in the beginning of a line in command scripts to cause the rest of the line to be ignored.

user@host> help tip cli

JUNOS tip:

Use the 'apply-groups' statement at any level of the configuration hierarchy to inherit configuration statements from a configuration group.

user@host>

**Related  
Documentation**

- [Getting Started with the Junos OS Command-Line Interface on page 72](#)
- [Examples: Using the Junos OS CLI Command Completion on page 165](#)



## CHAPTER 3

# CLI Operational Mode

- [Overview of Junos OS CLI Operational Mode Commands on page 15](#)
- [Junos OS Operational Mode Commands That Combine Other Commands on page 18](#)
- [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 19](#)
- [Controlling the Scope of an Operational Mode Command on page 20](#)
- [Using the Pipe \( | \) Symbol to Filter Junos Command Output on page 23](#)
- [Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output on page 24](#)
- [Pipe \( | \) Filter Functions in the Junos OS command-line interface on page 25](#)

## Overview of Junos OS CLI Operational Mode Commands

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series](#)

This topic provides an overview of Junos OS CLI operational mode commands and contains the following sections:

- [CLI Command Categories on page 15](#)
- [Commonly Used Operational Mode Commands on page 16](#)

### CLI Command Categories

When you log in to a device running Junos OS and the CLI starts, there are several broad groups of CLI commands:

- **Commands for controlling the CLI environment**—Some set commands in the **set** hierarchy configure the CLI display screen. For information about these commands, see [“Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies” on page 5](#).
- **Commands for monitoring and troubleshooting**—The following commands display information and statistics about the software and test network connectivity. Detailed command descriptions are provided in [CLI Explorer](#).
  - **clear**—Clear statistics and protocol database information.
  - **mtrace**—Trace mtrace packets from source to receiver.

- **monitor**—Perform real-time debugging of various software components, including the routing protocols and interfaces.
- **ping**—Determine the reachability of a remote network host.
- **show**—Display the current configuration and information about interfaces, routing protocols, routing tables, routing policy filters, system alarms, and the chassis.
- **test**—Test the configuration and application of policy filters and autonomous system (AS) path regular expressions.
- **traceroute**—Trace the route to a remote network host.
- Commands for connecting to other network systems—The **ssh** command opens Secure Shell connections, and the **telnet** command opens telnet sessions to other hosts on the network. For information about these commands, see [CLI Explorer](#).
- Commands for copying files—The **copy** command copies files from one location on the router or switch to another, from the router or switch to a remote system, or from a remote system to the router or switch. For information about these commands, see [CLI Explorer](#).
- Commands for restarting software processes—The commands in the **restart** hierarchy restart the various Junos OS processes, including the routing protocol, interface, and SNMP. For information about these commands, see [CLI Explorer](#).
- A command—**request**—for performing system-level operations, including stopping and rebooting the router or switch and loading Junos OS images. For information about this command, see [CLI Explorer](#).
- A command—**start**—to exit the CLI and start a UNIX shell. For information about this command, see [CLI Explorer](#).
- A command—**configure**—for entering configuration mode, which provides a series of commands that configure Junos OS, including the routing protocols, interfaces, network management, and user access. For information about the CLI configuration commands, see “[Understanding Junos OS CLI Configuration Mode](#)” on page 33.
- A command—**quit**—to exit the CLI. For information about this command, see [CLI Explorer](#).

## Commonly Used Operational Mode Commands

[Table 4 on page 17](#) lists some operational commands you may find useful for monitoring router or switch operation. For a complete description of operational commands, see the Junos OS command references.



**NOTE:** The QFX3500 switch does not support the IS-IS, OSPF, BGP, MPLS, and RSVP protocols.

Table 4: Commonly Used Operational Mode Commands

Items to Check	Description	Command
Software version	Versions of software running on the router or switch	<b>show version</b>
Log files	Contents of the log files	<b>monitor</b>
	Log files and their contents and recent user logins	<b>show log</b>
Remote systems	Host reachability and network connectivity	<b>ping</b>
	Route to a network system	<b>tracert</b>
Configuration	Current system configuration	<b>show configuration</b>
Manipulate files	List of files and directories on the router or switch	<b>file list</b>
	Contents of a file	<b>file show</b>
Interface information	Detailed information about interfaces	<b>show interfaces</b>
Chassis	Chassis alarm status	<b>show chassis alarms</b>
	Information currently on craft display	<b>show chassis craft-interface</b>
	Router or switch environment information	<b>show chassis environment</b>
	Hardware inventory	<b>show chassis hardware</b>
Routing table information	Information about entries in the routing tables	<b>show route</b>
Forwarding table information	Information about data in the kernel's forwarding table	<b>show route forwarding-table</b>
IS-IS	Adjacent routers or switches	<b>show isis adjacency</b>
OSPF	Display standard information about OSPF neighbors	<b>show ospf neighbor</b>
BGP	Display information about BGP neighbors	<b>show bgp neighbor</b>
MPLS	Status of interfaces on which MPLS is running	<b>show mpls interface</b>
	Configured LSPs on the router or switch, as well as all ingress, transit, and egress LSPs	<b>show mpls lsp</b>
	Routes that form a label-switched path	<b>show route label-switched-path</b>

Table 4: Commonly Used Operational Mode Commands (*continued*)

Items to Check	Description	Command
RSVP	Status of interfaces on which RSVP is running	<b>show rsvp interface</b>
	Currently active RSVP sessions	<b>show rsvp session</b>
	RSVP packet and error counters	<b>show rsvp statistics</b>


- Related Documentation**
- [Junos OS Operational Mode Commands That Combine Other Commands on page 18](#)
  - [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 19](#)

## Junos OS Operational Mode Commands That Combine Other Commands

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

In some cases, some Junos OS operational commands are created from a combination of other operational commands. These commands can be useful shortcuts for collecting information about the device, as shown in [Figure 4 on page 18](#).

 Figure 4: Commands That Combine Other Commands

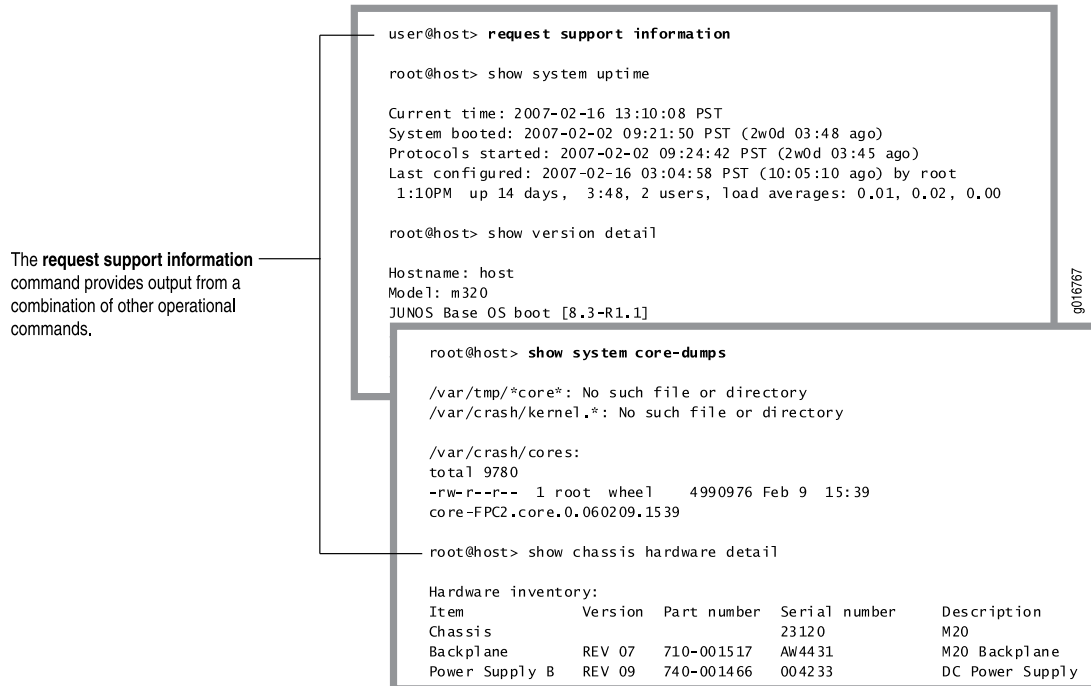

- Related Documentation**
- [Overview of Junos OS CLI Operational Mode Commands on page 15](#)
  - [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 19](#)

## Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series

The Junos OS operational mode commands can include **brief**, **detail**, **extensive**, or **terse** options. You can use these options to control the amount of information you want to view.

1. Use the ? prompt to list options available for the command. For example:

```
user@host> show interfaces fe-1/1/1 ?
Possible completions:
<[Enter]>          Execute this command
brief              Display brief output
descriptions       Display interface description strings
detail             Display detailed output
extensive           Display extensive output
media              Display media information
snmp-index         SNMP index of interface
statistics         Display statistics and detailed output
terse              Display terse output
|                 Pipe through a command
```

2. Choose the option you wish to use with the command. (See [Figure 5 on page 19.](#))

**Figure 5: Command Output Options**

Command output with the **brief** option.

```
user@host> show interfaces fe-1/1/1 brief
Physical interface: fe-1/1/1, Enabled, Physical link is Down
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback:
Disabled, Source filtering: Disabled,
Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags   : None
```

Command output with the **terse** option.

```
user@host> show interfaces fe-1/1/1 terse
Interface      Admin Link Proto  Local      Remote
fe-1/1/1       up    down
```

Command output with the **extensive** option.

```
user@host> show interfaces fe-1/1/1 extensive
Physical interface: fe-1/1/1, Enabled, Physical link is Down
Interface index: 141, SNMP ifIndex: 33, Generation: 24
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback:
Disabled, Source filtering: Disabled,
Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags   : None
CoS queues   : 4 supported, 4 maximum usable queues
Hold-times   : Up 0 ms, Down 0 ms
Current address: 00:90:69:d0:f8:9e, Hardware address: 00:90:69:d0:f8:9e
Last flapped : 2007-02-02 09:26:25 PST (2w0d 03:40 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
---(more)---
```

- Related Documentation**
- [Overview of Junos OS CLI Operational Mode Commands on page 15](#)
  - [Controlling the Scope of an Operational Mode Command on page 20](#)

---

## Controlling the Scope of an Operational Mode Command

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The Junos OS CLI operational commands include options that you can use to identify specific components on a device running Junos OS. For example:

1. Type the **show interfaces** command to display information about all interfaces on the router.

```
user@host> show interfaces
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 23
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,

  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 13861 (00:00:05 ago), Output: 13891 (00:00:01 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Opened, mp1s:
Not-configured
  CHAP state: Closed
  PAP state: Closed
  CoS queues   : 4 supported, 4 maximum usable queues
  Last flapped : 2008-06-02 17:16:14 PDT (1d 14:21 ago)
  Input rate    : 40 bps (0 pps)
  Output rate   : 48 bps (0 pps)

---(more)---
```

2. To display information about a specific interface, type that interface as a command option:

```
user@host> show interfaces fe-0/1/3
Physical interface: fe-0/1/3, Enabled, Physical link is Up
  Interface index: 135, SNMP ifIndex: 30
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, MAC-REWRITE Error:
None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:05:85:8f:c8:22, Hardware address: 00:05:85:8f:c8:22
  Last flapped   : 2008-06-02 17:16:15 PDT (1d 14:28 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Active alarms  : None
  Active defects : None

user@host>
```



## Operational Mode Commands on a TX Matrix Router or TX Matrix Plus Router

When you issue operational mode commands on the TX Matrix router, CLI command options allow you to restrict the command output to show only a component of the routing matrix rather than the routing matrix as a whole.

These are the options shown in the CLI:

- **scc**—The TX Matrix router (or switch-card chassis)
- **sfc**—The TX Matrix Plus router (or switch-fabric chassis)
- **lcc *number***—A specific T640 router (in a routing matrix based on a TX Matrix router) or a TX Matrix Plus router (in a routing matrix based on a TX Matrix Plus router)
- **all-lcc**—All T640 routers (in a routing matrix based on a TX Matrix router) or all T1600 routers (in a routing matrix based on a TX Matrix Plus router)

If you specify none of these options, then the command applies by default to the whole routing matrix: the TX Matrix router and all connected T640 routers or the TX Matrix Plus router and all connected T1600 routers.

## Examples of Routing Matrix Command Options

The following output samples, using the **show version** command, demonstrate some different options for viewing information about the routing matrix.

```
user@host> show version ?
Possible completions:
<[Enter]>      Execute this command
all-lcc        Show software version on all LCC chassis
brief          Display brief output
detail         Display detailed output
lcc            Show software version on specific LCC (0..3)
scc            Show software version on the SCC
|             Pipe through a command
```

### Sample Output: No Routing Matrix Options Specified

```
user@host> show version
scc-re0:
-----
Hostname: scc
Model: TX Matrix
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
lcc0-re0:
-----
Hostname: lcc0
Model: t640
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
```

```
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
JUNOS Support Tools Package [7.0-20040630.0]
lcc1-re0:
```

```
-----
Hostname: lcc1
Model: t640
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
JUNOS Support Tools Package [7.0-20040630.0]
```

#### Sample Output: TX Matrix Router Only (scc Option)

```
user@host> show version scc
Hostname: scc
Model: TX Matrix
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
```

#### Sample Output: Specific T640 Router (lcc number Option)

```
user@host> show version lcc 0
lcc0-re0:
-----
Hostname: lcc0
Model: t640
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
JUNOS Support Tools Package [7.0-20040630.0]
```

#### Sample Output: All T640 Routers (all-lcc Option)

```
user@host> show version all-lcc
lcc0-re0:
-----
Hostname: lcc0
Model: t640
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
```

```

JUNOS Support Tools Package [7.0-20040630.0]
tcc1-re0:
-----
Hostname: tcc1
Model: t640
JUNOS Base OS boot [7.0-20040630.0]
JUNOS Base OS Software Suite [7.0-20040629.0]
JUNOS Kernel Software Suite [7.0-20040630.0]
JUNOS Packet Forwarding Engine Support (T-Series) [7.0-20040630.0]
JUNOS Routing Software Suite [7.0-20040630.0]
JUNOS Online Documentation [7.0-20040630.0]
JUNOS Crypto Software Suite [7.0-20040630.0]
JUNOS Support Tools Package [7.0-20040630.0]

```

#### Related Documentation

- [Interface Naming Conventions Used in the Junos OS Operational Commands on page 211](#)
- [Using the Junos OS CLI Comment Character # for Operational Mode Commands on page 227](#)

## Using the Pipe ( | ) Symbol to Filter Junos Command Output

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

The Junos OS enables you to filter command output by adding the pipe ( | ) symbol when you enter a command.

For example:

```

user@host> show rip neighbor ?
Possible completions:
  <[Enter]>      Execute this command
  <name>         Name of RIP neighbor
  instance      Name of RIP instance
  logical-system Name of logical system, or 'all'
  |             Pipe through a command

```

The following example lists the filters that can be used with the pipe symbol ( | ):

```

user@host> show rip neighbor | ?
Possible completions:
  count          Count occurrences
  display        Show additional kinds of information
  except         Show only text that does not match a pattern
  find           Search for first occurrence of pattern
  hold           Hold text without exiting the --More-- prompt
  last           Display end of output only
  match          Show only text that matches a pattern
  no-more        Don't paginate output
  request        Make system-level requests
  resolve        Resolve IP addresses
  save           Save output text to file
  trim           Trim specified number of columns from start of line

```

For the **show configuration** command only, an additional compare filter is available:

```

user@host> show configuration | ?
Possible completions:
  compare        Compare configuration changes with prior version
  ...

```

You can enter any of the pipe filters in conjunction. For example:

```
user@host> command | match regular-expression | save filename
```

#### Related Documentation

- [Pipe \( | \) Filter Functions in the Junos OS command-line interface on page 25](#)
- [Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output on page 24](#)

## Using Regular Expressions with the Pipe ( | ) Symbol to Filter Junos Command Output

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

The **except**, **find**, and **match** filters used with the pipe symbol employ regular expressions to filter output. Juniper Networks uses the regular expressions as defined in POSIX 1003.2. If the regular expressions contain spaces, operators, or wildcard characters, enclose the expression in quotation marks.

**Table 5: Common Regular Expression Operators in Operational Mode Commands**

Operator	Function
	Indicates that a match can be one of the two terms on either side of the pipe.
^	Used at the beginning of an expression, denotes where a match should begin.
\$	Used at the end of an expression, denotes that a term must be matched exactly up to the point of the \$ character.
[ ]	Specifies a range of letters or digits to match. To separate the start and end of a range, use a hyphen ( - ).
( )	Specifies a group of terms to match.

For example, if a command produces the following output:

```
12
22
3 21
4
```

a pipe filter of **| match 2** displays the following output:

```
12
22
3 21
```

and a pipe filter of **| except 1** displays the following output:

```
22
4
```

- Related Documentation**
- [Using the Pipe \( | \) Symbol to Filter Junos Command Output on page 23](#)
  - [Pipe \( | \) Filter Functions in the Junos OS command-line interface on page 25](#)

## Pipe ( | ) Filter Functions in the Junos OS command-line interface

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

This topic describes the pipe ( | ) filter functions that are supported in the Junos OS command-line interface (CLI):

- [Comparing Configurations on page 25](#)
- [Counting the Number of Lines of Output on page 27](#)
- [Displaying Output in XML Tag Format on page 27](#)
- [Displaying the RPC tags for a Command on page 27](#)
- [Ignoring Output That Does Not Match a Regular Expression on page 27](#)
- [Displaying Output from the First Match of a Regular Expression on page 28](#)
- [Retaining Output After the Last Screen on page 28](#)
- [Displaying Output Beginning with the Last Entries on page 28](#)
- [Displaying Output That Matches a Regular Expression on page 29](#)
- [Preventing Output from Being Paginated on page 29](#)
- [Sending Command Output to Other Users on page 29](#)
- [Resolving IP Addresses on page 30](#)
- [Saving Output to a File on page 30](#)
- [Trimming Output by Specifying the Starting Column on page 30](#)

### Comparing Configurations

The **compare** filter compares the candidate configuration with either the current committed configuration or a configuration file and displays the differences between the two configurations. To compare configurations, enter **compare** after the pipe ( | ) symbol:

```
[edit]
user@host# show | compare [filename] rollback n
```

**filename** is the full path to a configuration file.

**n** is the index into the list of previously committed configurations. The most recently saved configuration is 0. If you do not specify arguments, the candidate configuration is compared against the active configuration file (`/config/juniper.conf`).

The comparison output uses the following conventions:

- Statements that are only in the candidate configuration are prefixed with a plus sign (+).
- Statements that are only in the comparison file are prefixed with a minus sign (–).

- Statements that are unchanged are prefixed with a single blank space ( ).

For example:

```
user@host> show configuration system | compare rollback 9
[edit system]
+ host-name nutmeg;
+ backup-router 192.168.71.254;
- ports {
-     console log-out-on-disconnect;
- }
[edit system name-server]
+ 172.17.28.11;
  172.17.28.101 { ... }
[edit system name-server]
  172.17.28.101 { ... }
+ 172.17.28.100;
+ 172.17.28.10;
[edit system]
- scripts {
-     commit {
-         allow-transients;
-     }
- }
+ services {
+     ftp;
+     rlogin;
+     rsh;
+     telnet;
+ }
```

Starting with Junos OS Release 8.3, output from the **show | compare** command has been enhanced to more accurately reflect configuration changes. This includes more intelligent handling of order changes in lists. For example, consider names in a group that are reordered as follows:

```
groups {      groups {
group_xmp;    group_xmp;
group_cmp;    group_grp;
group_grp;    group_cmp;
}             }
```

In previous releases, output from the **show | compare** command looked like the following:

```
[edit groups]
- group_xmp;
- group_cmp;
- group_grp;
+ group_xmp;
+ group_grp;
+ group_cmp;
```

Now, output from the **show | compare** command looks like the following:

```
[edit groups]
group_xmp {...}
! group_grp {...}
```

## Counting the Number of Lines of Output

To count the number of lines in the output from a command, enter **count** after the pipe symbol ( | ). For example:

```
user@host> show configuration | count
Count: 269 lines
```

## Displaying Output in XML Tag Format

To display command output in XML tag format, enter **display xml** after the pipe symbol ( | ).

The following example displays the **show cli directory** command output as XML tags:

```
user@host> show cli directory | display xml
<rpc-reply xmlns:junos="http://xml.juniper.net/junos/7.5I0/junos">
  <cli>
    <working-directory>/var/tmp/</working-directory>
  </cli>
  <cli>
    <banner></banner>
  </cli>
</rpc-reply>
```

## Displaying the RPC tags for a Command

To display the remote procedure call (RPC) XML tags for an operational mode command, enter **display xml rpc** after the pipe symbol ( | ).

The following example displays the RPC tags for the **show route** command:

```
user@host> show route | display xml rpc
<rpc-reply xmlns:junos="http://xml.juniper.net/junos/10.1I0/junos">
  <rpc>
    <get-route-information>
    </get-route-information>
  </rpc>
  <cli>
    <banner></banner>
  </cli>
</rpc-reply>
```

## Ignoring Output That Does Not Match a Regular Expression

To ignore text that matches a regular expression, specify the **except** command after the pipe symbol ( | ). If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks. For information on common regular expression operators, see [“Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output” on page 24](#).

The following example displays all users who are logged in to the router, except for the user **root**:

```
user@host> show system users | except root
```

```

      8:28PM  up 1 day, 13:59, 2 users, load averages: 0.01, 0.01, 0.00
USER      TTY FROM                LOGIN@  IDLE WHAT
sheep     p0  baa.juniper.net    7:25PM    - cli

```

## Displaying Output from the First Match of a Regular Expression

To display output starting with the first occurrence of text matching a regular expression, enter **find** after the pipe symbol ( | ). If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks. For information on common regular expression operators, see [“Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output” on page 24](#).

The following example displays the routes in the routing table starting at IP address **208.197.169.0**:

```

user@host> show route | find 208.197.169.0
208.197.169.0/24    *[Static/5] 1d 13:22:11
                  > to 192.168.4.254 via so-3/0/0.0
224.0.0.5/32      *[OSPF/10] 1d 13:22:12, metric 1
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
47.0005.80ff.f800.0000.0108.0001.1921.6800.4015.00/160
                  *[Direct/0] 1d 13:22:12
                  > via lo0.0

```

The following example displays the first CCC entry in the forwarding table:

```

user@host> show route forwarding-table | find ccc
Routing table: ccc
MPLS:
Interface.Label   Type RtRef Nexthop          Type Index NhRef Netif
default          perm  0          Type Index NhRef Netif
0                user  0          recv  5      2
1                user  0          recv  5      2
32769            user  0          ucst  45     1 fe-0/0/0.534
fe-0/0/0. (CCC)  user  0          indr  44     2
                  10.0.16.2  Push 32768, Push

```

## Retaining Output After the Last Screen

To not return immediately to the CLI prompt after viewing the last screen of output, enter **hold** after the pipe symbol ( | ). The following example prevents returning to the CLI prompt after you have viewed the last screen of output from the **show log log-file-1** command:

```

user@host> show log log-file-1 | hold

```

This filter is useful when you want to scroll or search through output.

## Displaying Output Beginning with the Last Entries

To display text starting from the end of the output, enter **last <lines>** after the pipe symbol ( | ).

The following example displays the last entries in **log-file-1** file:

```

user@host> show log log-file-1 | last

```



This filter is useful for viewing log files in which the end of the file contains the most recent entries.



**NOTE:** When the number of lines requested is less than the number of lines that the screen length setting permits you to display, Junos returns as many lines as permitted by the screen length setting. That is, if your screen length is set to 20 lines and you have requested only the last 10 lines, Junos returns the last 19 lines instead of the last 10 lines.

## Displaying Output That Matches a Regular Expression

To display output that matches a regular expression, enter **match *regular-expression*** after the pipe symbol ( | ). If the regular expression contains any spaces, operators, or wildcard characters, enclose it in quotation marks. For information on common regular expression operators, see [“Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output” on page 24](#).

The following example matches all the Asynchronous Transfer Mode (ATM) interfaces in the configuration:

```
user@host> show configuration | match at-
at-2/1/0 {
at-2/1/1 {
at-2/2/0 {
at-5/2/0 {
at-5/3/0 {
```

## Preventing Output from Being Paginated

By default, if output is longer than the length of the terminal screen, you are provided with a **---(more)---** message to display the remaining output. To display the remaining output, press the Spacebar.

To prevent the output from being paginated, enter **no-more** after the pipe symbol ( | ).

The following example displays output from the **show configuration** command all at once:

```
user@host> show configuration | no-more
```

This feature is useful, for example, if you want to copy the entire output and paste it into an e-mail.

## Sending Command Output to Other Users

To display command output on the terminal of a specific user logged in to your router, or on the terminals of all users logged in to your router, enter **request message (all | user *account@terminal*)** after the pipe symbol ( | ).

If you are troubleshooting your router and, for example, talking with a customer service representative on the phone, you can use the **request message** command to send your representative the command output you are currently viewing on your terminal.

The following example sends the output from the **show interfaces** command you enter on your terminal to the terminal of the user **root@tty1**:

```
user@host> show interfaces | request message user root@tty1
```

The user **root@tty1** sees the following output appear on the terminal screen:

```
Message from user@host on /dev/tty0 at 10:32 PST...
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5
  Type: Software-Pseudo, MTU: Unlimited...
```

## Resolving IP Addresses

If the output of a command displays an unresolved IP address, you can enter **| resolve** after the command to display the name associated with the IP address. The **resolve** filter enables the system to perform a reverse DNS lookup of the IP address. If DNS is not enabled, the lookup fails and no substitution is performed.

To perform a reverse DNS lookup of an unresolved IP address, enter **resolve <full-names>** after the pipe symbol ( **|** ). If you do not specify the **full-names** option, the name is truncated to fit whatever field width limitations apply to the IP address.

The following example performs a DNS lookup on any unresolved IP addresses in the output from the **show ospf neighbors** command:

```
user@host> show ospf neighbors | resolve
```

## Saving Output to a File

When command output is lengthy, when you need to store or analyze the output, or when you need to send the output in an e-mail or by FTP, you can save the output to a file. By default, the file is placed in your home directory on the router.

To save command output to a file, enter **save filename** after the pipe symbol ( **|** ).

The following example saves the output from the **request support information** command to a file named **my-support-info.txt**:

```
user@host> request support information | save my-support-info.txt
Wrote 1143 lines of output to 'my-support-info.txt'
user@host>
```

## Trimming Output by Specifying the Starting Column

Output appears on the terminal screen in terms of rows and columns. The first alphanumeric character starting at the left of the screen is in column 1, the second character is in column 2, and so on. To display output starting from a specific column (thus trimming the leftmost portion of the output), enter **trim columns** after the pipe symbol ( **|** ). The **trim** filter is useful for trimming the date and time from the beginning of system log messages.

The following example displays output from the **show system storage** command, filtering out the first 10 columns:

```
user@host> show system storage | trim 11
```

**Related  
Documentation**

- [Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output on page 24](#)
- [Using the Pipe \( | \) Symbol to Filter Junos Command Output on page 23](#)



## CHAPTER 4

# CLI Configuration Mode

- [Understanding Junos OS CLI Configuration Mode on page 33](#)
- [Modifying the Junos OS Configuration on page 39](#)
- [Commit Operation When Multiple Users Configure the Software on page 39](#)
- [Forms of the configure Command on page 40](#)
- [Additional Details About Specifying Junos Statements and Identifiers on page 42](#)

## Understanding Junos OS CLI Configuration Mode

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series](#)

You can configure all properties of Junos OS, including interfaces, general routing information, routing protocols, and user access, as well as several system hardware properties.

As described in “[Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies](#)” on [page 5](#), a router configuration is stored as a hierarchy of statements. In configuration mode, you create the specific hierarchy of configuration statements that you want to use. When you have finished entering the configuration statements, you commit them, which activates the configuration on the router.

You can create the hierarchy interactively or you can create an ASCII text file that is loaded onto the router or switch and then committed.

This topic covers:

- [Configuration Mode Commands on page 34](#)
- [Configuration Statements and Identifiers on page 35](#)
- [Configuration Statement Hierarchy on page 37](#)

## Configuration Mode Commands

Table 6 on page 34 summarizes each CLI configuration mode command. The commands are organized alphabetically.

**Table 6: Summary of Configuration Mode Commands**

Command	Description
<b>activate</b>	Remove the <b>inactive:</b> tag from a statement, effectively reading the statement or identifier to the configuration. Statements or identifiers that have been activated take effect when you next issue the <b>commit</b> command.
<b>annotate</b>	Add comments to a configuration. You can add comments only at the current hierarchy level.
<b>commit</b>	Commit the set of changes to the database and cause the changes to take operational effect.
<b>copy</b>	Make a copy of an existing statement in the configuration.
<b>deactivate</b>	Add the <b>inactive:</b> tag to a statement, effectively commenting out the statement or identifier from the configuration. Statements or identifiers marked as inactive do not take effect when you issue the <b>commit</b> command.
<b>delete</b>	Delete a statement or identifier. All subordinate statements and identifiers contained within the specified statement path are deleted with it.
<b>edit</b>	Move inside the specified statement hierarchy. If the statement does not exist, it is created.
<b>exit</b>	Exit the current level of the statement hierarchy, returning to the level prior to the last edit command, or exit from configuration mode. The <b>quit</b> and <b>exit</b> commands are synonyms.
<b>extension</b>	Manage configurations that are contributed by SDK application packages. Either display or delete user-defined configuration contributed by the named SDK application package. A configuration defined in any native Junos OS package is never deleted by the extension command.
<b>help</b>	Display help about available configuration statements.
<b>insert</b>	Insert an identifier into an existing hierarchy.
<b>load</b>	Load a configuration from an ASCII configuration file or from terminal input. Your current location in the configuration hierarchy is ignored when the load operation occurs.

Table 6: Summary of Configuration Mode Commands (*continued*)

Command	Description
<b>quit</b>	Exit the current level of the statement hierarchy, returning to the level prior to the last edit command, or exit from configuration mode. The <b>quit</b> and <b>exit</b> commands are synonyms.
<b>rename</b>	Rename an existing configuration statement or identifier.
<b>replace</b>	Replace identifiers or values in a configuration.
<b>rollback</b>	Return to a previously committed configuration. The software saves the last 10 committed configurations, including the rollback number, date, time, and name of the user who issued the <b>commit configuration</b> command.
<b>run</b>	Run a top-level CLI command without exiting from configuration mode.
<b>save</b>	Save the configuration to an ASCII file. The contents of the current level of the statement hierarchy (and below) are saved, along with the statement hierarchy containing it. This allows a section of the configuration to be saved, while fully specifying the statement hierarchy.
<b>set</b>	Create a statement hierarchy and set identifier values. This is similar to <b>edit</b> except that your current level in the hierarchy does not change.
<b>show</b>	Display the current configuration.
<b>status</b>	Display the users currently editing the configuration.
<b>top</b>	Return to the top level of configuration command mode, which is indicated by the <b>[edit]</b> banner.
<b>up</b>	Move up one level in the statement hierarchy.
<b>update</b>	Update a private database.
<b>wildcard</b>	Delete a statement or identifier. All subordinate statements and identifiers contained within the specified statement path are deleted with it. You can use regular expressions to specify a pattern. Based on this pattern, you search for items that contain these patterns and delete them.

## Configuration Statements and Identifiers

You can configure router or switch properties by including the corresponding statements in the configuration. Typically, a statement consists of a keyword, which is fixed text, and, optionally, an identifier. An identifier is an identifying name that you can define, such as

the name of an interface or a username, which enables you and the CLI to differentiate among a collection of statements.

Table 7 on page 36 describes top-level CLI configuration mode statements.



**NOTE:** The QFX3500 switch does not support the IS-IS, OSPF, BGP, LDP, MPLS, and RSVP protocols.

**Table 7: Configuration Mode Top-Level Statements**

Statement	Description
<b>access</b>	Configure the Challenge Handshake Authentication Protocol (CHAP).
<b>accounting-options</b>	Configure accounting statistics data collection for interfaces and firewall filters. .
<b>chassis</b>	Configure properties of the router chassis, including conditions that activate alarms and SONET/SDH framing and concatenation properties. .
<b>class-of-service</b>	Configure class-of-service parameters. For information about the statements in this hierarchy, see the <i>Junos OS CoS Library for Security Devices</i> .
<b>firewall</b>	Define filters that select packets based on their contents. .
<b>forwarding-options</b>	Define forwarding options, including traffic sampling options. .
<b>groups</b>	Configure configuration groups. .
<b>interfaces</b>	Configure interface information, such as encapsulation, interfaces, virtual channel identifiers (VCIs), and data-link connection identifiers (DLCIs). For information about the statements in this hierarchy, see the <i>Junos OS Interfaces Library for Security Devices</i> .
<b>policy-options</b>	Define routing policies, which allow you to filter and set properties in incoming and outgoing routes. .
<b>protocols</b>	Configure routing protocols, including BGP, IS-IS, LDP, MPLS, OSPF, RIP, and RSVP. For information about the statements in this hierarchy, see the chapters that discuss how to configure the individual routing protocols in the <i>Junos OS Routing Protocols Library for Security Devices</i> and the <i>MPLS Feature Guide for Security Devices</i> .
<b>routing-instances</b>	Configure multiple routing instances. For information about the statements in this hierarchy, see the <i>Junos OS Routing Protocols Library for Security Devices</i> .
<b>routing-options</b>	Configure protocol-independent routing options, such as static routes, autonomous system numbers, confederation members, and global tracing (debugging) operations to log. For information about the statements in this hierarchy, see the <i>Junos OS Routing Protocols Library for Security Devices</i> .
<b>security</b>	Configure IP Security (IPsec) services. .



Table 7: Configuration Mode Top-Level Statements (*continued*)


Statement	Description
<b>snmp</b>	Configure SNMP community strings, interfaces, traps, and notifications. For information about the statements in this hierarchy, see the <i>SNMP MIBs and Traps Monitoring and Troubleshooting Guide for Security Devices</i> .
<b>system</b>	Configure systemwide properties, including the hostname, domain name, Domain Name System (DNS) server, user logins and permissions, mappings between hostnames and addresses, and software processes. .

For specific information on configuration statements, see [CLI Explorer](#).

## Configuration Statement Hierarchy

The Junos OS configuration consists of a hierarchy of *statements*. There are two types of statements: *container statements*, which are statements that contain other statements, and *leaf statements*, which do not contain other statements (see [Figure 6 on page 37](#)). All of the container and leaf statements together form the *configuration hierarchy*.

 Figure 6: Configuration Mode Hierarchy of Statements

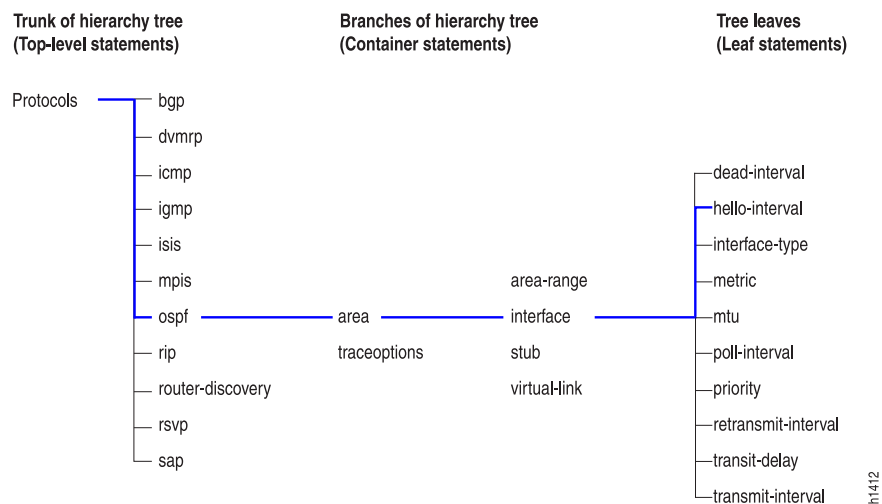

Each statement at the top level of the configuration hierarchy resides at the trunk (or root level) of a hierarchy tree. The top-level statements are container statements, containing other statements that form the tree branches. The leaf statements are the leaves of the hierarchy tree. An individual hierarchy of statements, which starts at the trunk of the hierarchy tree, is called a *statement path*. [Figure 6 on page 37](#) illustrates the hierarchy tree, showing a statement path for the portion of the protocol configuration hierarchy that configures the hello interval on an interface in an OSPF area.

The **protocols** statement is a top-level statement at the trunk of the configuration tree. The **ospf**, **area**, and **interface** statements are all subordinate container statements of a higher statement (they are branches of the hierarchy tree); and the **hello-interval** statement is a leaf on the tree which in this case contains a data value: the length of the hello interval, in seconds.

The CLI represents the statement path shown in [Figure 6 on page 37](#) as **[edit protocols ospf area *area-number* interface *interface-name*]** and displays the configuration as follows:

```
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
      }
      interface so-0/0/1 {
        hello-interval 5;
      }
    }
  }
}
```

The CLI indents each level in the hierarchy to indicate each statement's relative position in the hierarchy and generally sets off each level with braces, using an open brace at the beginning of each hierarchy level and a closing brace at the end. If the statement at a hierarchy level is empty, the braces are not printed.

Each leaf statement ends with a semicolon. If the hierarchy does not extend as far as a leaf statement, the last statement in the hierarchy ends with a semicolon.

The configuration hierarchy can also contain “oneliners” at the last level in the hierarchy. Oneliners remove one level of braces in the syntax and display the container statement, its identifiers, the child or leaf statement and its attributes all on one line. For example, in the following sample configuration hierarchy, the line **level 1 metric 10** is a oneliner because the **level** container statement with identifier **1**, its child statement **metric**, and its corresponding attribute **10** all appear on a single line in the hierarchy:

```
[edit protocols]
isis {
  interface ge-0/0/0.0 {
    level 1 metric 10;
  }
}
```

Likewise, in the following example, **dynamic-profile *dynamic-profile-name* aggregate-clients;** is a oneliner because the **dynamic-profile** statement, its identifier ***dynamic-profile-name***, and leaf statement **aggregate-clients** all appear on one line when you run the **show** command in the configuration mode:

```
[edit forwarding-options]
user@host# show
dhcp-relay {
  dynamic-profile dynamic-profile-name aggregate-clients;
}
```

**Related  
Documentation**

- [Entering and Exiting the Junos OS CLI Configuration Mode on page 61](#)

## Modifying the Junos OS Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To configure a device running Junos OS or to modify an existing Junos configuration, you add statements to the configuration. For each statement hierarchy, you create the hierarchy starting with a statement at the top level and continuing with statements that move progressively lower in the hierarchy.

To modify the hierarchy, you use two configuration mode commands:

- **edit**—Moves to a particular hierarchy level. If that hierarchy level does not exist, the **edit** command creates it. The **edit** command has the following syntax:

```
edit <statement-path>
```

- **set**—Creates a configuration statement and sets identifier values. After you issue a **set** command, you remain at the same level in the hierarchy. The **set** command has the following syntax:

```
set <statement-path> statement <identifier>
```

**statement-path** is the hierarchy to the configuration statement and the statement itself. If you have already moved to the statement's hierarchy level, you can omit the statement path. **statement** is the configuration statement itself. **identifier** is a string that identifies an instance of a statement.

You cannot use the **edit** command to change the value of identifiers. You must use the **set** command.

### Related Documentation

- [Displaying the Current Junos OS Configuration on page 63](#)
- [Adding Junos Configuration Statements and Identifiers on page 85](#)
- [Using the configure exclusive Command on page 71](#)
- [Updating the configure private Configuration on page 72](#)
- [Issuing Relative Junos Configuration Mode Commands on page 91](#)

## Commit Operation When Multiple Users Configure the Software

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

Up to 32 users can be in configuration mode simultaneously, and they all can be making changes to the configuration. All changes made by all users are visible to everyone editing the configuration—the changes become visible as soon as the user presses the Enter key at the end of a command that changes the configuration, such as **set**, **edit**, or **delete**.

When any of the users editing the configuration issues a **commit** command, all changes made by all users are checked and activated.

If you enter configuration mode with the **configure private** command, each user has a private candidate configuration to edit somewhat independently of other users. When

you commit the configuration, only your own changes get committed. To synchronize your copy of the configuration after other users have committed changes, you can run the **update** command in configuration mode. A commit operation also updates all of the private candidate configurations. For example, suppose user X and user Y are both in **configure private** mode, and user X commits a configuration change. When user Y performs a subsequent commit operation and then views the new configuration, the new configuration seen by user Y includes the changes made by user X.

If you enter configuration mode with the **configure exclusive** command, you lock the candidate configuration for as long as you remain in configuration mode, allowing you to make changes without interference from other users. Other users can enter and exit configuration mode, but they cannot commit the configuration. This is true even if the other users entered configuration mode before you enter the **configure exclusive** command. For example, suppose user X is already in the **configure private** or **configure** mode. Then suppose user Y enters the **configure exclusive** mode. User X cannot commit any changes to the configuration, even if those changes were entered before user Y logged in. If user Y exits **configure exclusive** mode, user X can then commit the changes made in **configure private** or **configure** mode.

- Related Documentation**
- [Committing a Junos OS Configuration on page 112](#)
  - [Forms of the configure Command on page 40](#)
  - [Displaying Users Currently Editing the Configuration on page 67](#)

---

## Forms of the configure Command

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The Junos OS supports three forms of the **configure** command: **configure**, **configure private**, and **configure exclusive**. These forms control how users edit and commit configurations and can be useful when multiple users configure the software. See [Table 8 on page 41](#).

Table 8: Forms of the configure Command

Command	Edit Access	Commit Access
<b>configure</b>	<ul style="list-style-type: none"> <li>No one can lock the configuration. All users can make configuration changes.</li> </ul> <p>When you enter configuration mode, the CLI displays the following information:</p> <ul style="list-style-type: none"> <li>A list of other users editing the configuration.</li> <li>Hierarchy levels the users are viewing or editing.</li> <li>Whether the configuration has been changed, but not committed.</li> <li>When multiple users enter conflicting configurations, the most recent change to be entered takes precedence.</li> </ul>	<ul style="list-style-type: none"> <li>No one can lock the configuration. All users can commit all changes to the configuration.</li> <li>If you and another user make changes and the other user commits changes, your changes are committed as well.</li> </ul>
<b>configure exclusive</b>	<ul style="list-style-type: none"> <li>One user locks the configuration and makes changes without interference from other users.</li> <li>Other users can enter and exit configuration mode, but they cannot commit the configuration.</li> <li>If you enter configuration mode while another user has locked the configuration (with the <b>configure exclusive</b> command), the CLI displays the user and the hierarchy level the user is viewing or editing.</li> <li>If you enter configuration mode while another user has locked the configuration, you can forcibly log out that user with the <b>request system logout</b> operational mode command. For details, see <a href="#">CLI Explorer</a>.</li> </ul>	
<b>configure private</b>	<ul style="list-style-type: none"> <li>Multiple users can edit the configuration at the same time.</li> <li>Each user has a private candidate configuration to edit independently of other users.</li> <li>When multiple users enter conflicting configurations, the first commit operation takes precedence over subsequent commit operations.</li> </ul>	<ul style="list-style-type: none"> <li>When you commit the configuration, the router verifies that the operational (running) configuration has not been modified by another user before accepting your private candidate configuration as the new operational configuration.</li> <li>If the configuration has been modified by another user, you can merge the modifications into your private candidate configuration and attempt to commit again.</li> </ul>

**Related Documentation**

- [Committing a Junos OS Configuration on page 112](#)
- [Example: Using the configure Command on page 167](#)
- [Displaying Users Currently Editing the Configuration on page 67](#)
- [Using the configure exclusive Command on page 71](#)
- [Updating the configure private Configuration on page 72](#)
- [Displaying set Commands from the Junos OS Configuration on page 65](#)

---

## Additional Details About Specifying Junos Statements and Identifiers

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

This topic provides more detailed information about CLI container and leaf statements so that you can better understand how you must specify them when creating ASCII configuration files. It also describes how the CLI performs type checking to verify that the data you entered is in the correct format.

- [Specifying Statements on page 42](#)
- [Performing CLI Type-Checking on page 44](#)

### Specifying Statements

Statements are shown one of two ways, either with braces or without:

- Statement name and identifier, with one or more lower level statements enclosed in braces:

```
statement-name1 identifier-name {  
    statement-name2;  
    additional-statements;  
}
```

- Statement name, identifier, and a single identifier:

```
statement-name identifier-name1 identifier-name2;
```

The ***statement-name*** is the name of the statement.

The ***identifier-name*** is a name or other string that uniquely identifies an instance of a statement. An identifier is used when a statement can be specified more than once in a configuration.

When specifying a statement, you must specify either a statement name or an identifier name, or both, depending on the statement hierarchy.

You specify identifiers in one of the following ways:

- ***identifier-name***—The ***identifier-name*** is a keyword used to uniquely identify a statement when a statement can be specified more than once in a statement.
- ***identifier-name value***—The ***identifier-name*** is a keyword, and the ***value*** is a required option variable.

- ***identifier-name* [*value1 value2 value3* ...]**—The ***identifier-name*** is a keyword that accepts multiple values. The brackets are required when you specify a set of values; however, they are optional when you specify only one value.

The following examples illustrate how statements and identifiers are specified in the configuration:

```
protocol {          # Top-level statement (statement-name).
  ospf {           # Statement under "protocol" (statement-name).
    area 0.0.0.0 {  # OSPF area "0.0.0.0" (statement-name identifier-name),
      interface so-0/0/0 { # which contains an interface named "so-0/0/0."
        hello-interval 25; # Identifier and value (identifier-name value).
        priority 2;        # Identifier and value (identifier-name value).
        disable;          # Flag identifier (identifier-name).
      }
      interface so-0/0/1; # Another instance of "interface," named so-0/0/1,
    }                    # this instance contains no data, so no braces
  }                      # are displayed.
}

policy-options {    # Top-level statement (statement-name).
  term term1 {       # Statement under "policy-options"
    # (statement-name value).
    from {           # Statement under "term" (statement-name).
      route-filter 10.0.0.0/8 orlonger reject; # One identifier ("route-filter")
with
      route-filter 127.0.0.0/8 orlonger reject; # multiple values.
      route-filter 128.0.0.0/16 orlonger reject;
      route-filter 149.20.64.0/24 orlonger reject;
      route-filter 172.16.0.0/12 orlonger reject;
      route-filter 191.255.0.0/16 orlonger reject;
    }
    then {           # Statement under "term" (statement-name).
      next term;     # Identifier (identifier-name).
    }
  }
}
```

When you create an ASCII configuration file, you can specify statements and identifiers in one of the following ways. However, each statement has a preferred style, and the CLI uses that style when displaying the configuration in response to a configuration mode **show** command.

- Statement followed by identifiers:

***statement-name identifier-name* [...] *identifier-name value* [...];**

- Statement followed by identifiers enclosed in braces:

```
statement-name {
  identifier-name;
  [...]
  identifier-name value;
  [...]
}
```

- For some repeating identifiers, you can use one set of braces for all the statements:

```
statement-name {
  identifier-name value1;
  identifier-name value2;
```

}

## Performing CLI Type-Checking

When you specify identifiers and values, the CLI performs type checking to verify that the data you entered is in the correct format. For example, for a statement in which you must specify an IP address, the CLI requires you to enter an address in a valid format. If you have not, an error message indicates what you need to type. [Table 9 on page 44](#) lists the data types the CLI checks.

**Table 9: CLI Configuration Input Types**

Data Type	Format	Examples
Physical interface name (used in the <b>[edit interfaces]</b> hierarchy)	<i>type-fpc/pic/port</i>	Correct: so-0/0/1  Incorrect: so-0
Full interface name	<i>type-fpc/pic/port&lt;:channel&gt;.logical</i>	Correct: so-0/0/1.0  Incorrect: so-0/0/1
Full or abbreviated interface name (used in places other than the <b>[edit interfaces]</b> hierarchy)	<i>type-&lt;fpc&lt;/pic/port&gt;&gt;&lt;&lt;:channel&gt;.logical&gt;</i>	Correct: so, so-1, so-1/2/3:4.5
IP address	<i>0xhex-bytesoctet&lt;.octet&lt;.octet.&lt;octet&gt;&gt;&gt;</i>	Correct: 1.2.3.4, 0x01020304, 128.8.1, 128.8  Sample translations:  1.2.3 becomes 1.2.3.0 0x01020304 becomes 1.2.3.4 0x010203 becomes 0.1.2.3
IP address (destination prefix) and prefix length	<i>0xhex-bytes&lt;/length&gt;octet&lt;octet&lt;.octet.&lt;octet&gt;&gt;&gt;&lt;/length&gt;</i>	Correct: 10/8, 128.8/16, 1.2.3.4/32, 1.2.3.4  Sample translations:  1.2.3 becomes 1.2.3.0/32 0x01020304 becomes 1.2.3.4/32 0x010203 becomes 0.1.2.3/32 default becomes 0.0.0.0/0
International Organization for Standardization (ISO) address	<i>hex-nibble&lt;hex-nibble ...&gt;</i>	Correct: 47.1234.2345.3456.00, 47.123423453456.00, 47.12.34.23.45.34.56.00  Sample translations:  47.123456 becomes 47.1234.56 47.12.34.56 becomes 47.1234.56 47.12.3456 becomes 47.1234.56



Table 9: CLI Configuration Input Types (*continued*)

Data Type	Format	Examples
OSPF area identifier (ID)	<i>Oxhex-bytesoctet&lt;.octet&lt;.octet.&lt; octet &gt;&gt;&gt; decimal-number</i>	<b>Correct:</b> 54, 0.0.0.54, 0x01020304, 1.2.3.4  <b>Sample translations:</b>  54 becomes 0.0.0.54  257 becomes 0.0.1.1 128.8 becomes 128.8.0.0 0x010203 becomes 0.1.2.3

**Related Documentation** • [Entering and Exiting the Junos OS CLI Configuration Mode on page 61](#)



## CHAPTER 5

# CLI Advanced Features

- [Using Keyboard Sequences to Move Around and Edit the Junos OS CLI on page 47](#)
- [Using Wildcard Characters in Interface Names on page 49](#)
- [Using Global Replace in a Junos Configuration on page 49](#)

### Using Keyboard Sequences to Move Around and Edit the Junos OS CLI

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can use keyboard sequences in the Junos OS command-line interface (CLI) to move around and edit the command line. You can also use keyboard sequences to scroll through a list of recently executed commands. [Table 10 on page 47](#) lists some of the CLI keyboard sequences. They are the same as those used in Emacs.

**Table 10: CLI Keyboard Sequences**

Category	Action	Keyboard Sequence
Move the Cursor	Move the cursor back one character.	Ctrl+b
	Move the cursor back one word.	Esc+b or Alt+b
	Move the cursor forward one character.	Ctrl+f
	Move the cursor forward one word.	Esc+f or Alt+f
	Move the cursor to the beginning of the command line.	Ctrl+a
	Move the cursor to the end of the command line.	Ctrl+e

Table 10: CLI Keyboard Sequences (*continued*)

Category	Action	Keyboard Sequence
Delete Characters	Delete the character before the cursor.	Ctrl+h, Delete, or Backspace
	Delete the character at the cursor.	Ctrl+d
	Delete all characters from the cursor to the end of the command line.	Ctrl+k
	Delete all characters on the command line.	Ctrl+u or Ctrl+x
	Delete the word before the cursor.	Ctrl+w, Esc+Backspace, or Alt+Backspace
	Delete the word after the cursor.	Esc+d or Alt+d
Insert Recently Deleted Text	Insert the most recently deleted text at the cursor.	Ctrl+y
Redraw the Screen	Redraw the current line.	Ctrl+l
Display Previous Command Lines	Scroll backward through the list of recently executed commands.	Ctrl+p
	Scroll forward through the list of recently executed commands.	Ctrl+n
	Search the CLI history in reverse order for lines matching the search string.	Ctrl+r
	Search the CLI history by typing some text at the prompt, followed by the keyboard sequence. The CLI attempts to expand the text into the most recent word in the history for which the text is a prefix.	Esc+/ sequence
Display Previous Command Words	Scroll backward through the list of recently entered words in a command line.	Esc+. or Alt+.
Repeat Keyboard Sequences	Specify the number of times to execute a keyboard sequence. <i>number</i> can be from 1 through 9 and <i>sequence</i> is the keyboard sequence that you want to execute.	Esc+ <i>number</i> sequence or Alt+ <i>number</i> sequence

**Related Documentation**

- [Using Wildcard Characters in Interface Names on page 49](#)

- [Using Global Replace in a Junos Configuration on page 49](#)

## Using Wildcard Characters in Interface Names

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can use wildcard characters in the Junos OS operational commands to specify groups of interface names without having to type each name individually. [Table 11 on page 49](#) lists the available wildcard characters. You must enclose all wildcard characters except the asterisk (\*) in quotation marks (" ").

**Table 11: Wildcard Characters for Specifying Interface Names**

Wildcard Character	Description
<b>* (asterisk)</b>	Match any string of characters in that position in the interface name. For example, <b>so*</b> matches all SONET/SDH interfaces.
<b>"[character&lt;character...&gt;]"</b>	Match one or more individual characters in that position in the interface name. For example, <b>so-"[03]"*</b> matches all SONET/SDH interfaces in slots 0 and 3.
<b>"[!character&lt;character...&gt;]"</b>	Match all characters except the ones included in the brackets. For example, <b>so-"[!03]"*</b> matches all SONET/SDH interfaces except those in slots 0 and 3.
<b>"[character1-character2]"</b>	Match a range of characters. For example, <b>so-"[0-3]"*</b> matches all SONET/SDH interfaces in slots 0, 1, 2, and 3.
<b>"[!character1-character2]"</b>	Match all characters that are not in the specified range of characters. For example, <b>so-"[!0-3]"*</b> matches all SONET/SDH interfaces in slots 4, 5, 6, and 7.

- Related Documentation**
- [Using Keyboard Sequences to Move Around and Edit the Junos OS CLI on page 47](#)
  - [Using Global Replace in a Junos Configuration on page 49](#)

## Using Global Replace in a Junos Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can make global changes to variables and identifiers in a Junos configuration by using the **replace** configuration mode command. This command replaces a pattern in a configuration with another pattern. For example, you can use this command to find and replace all occurrences of an interface name when a PIC is moved to another slot in the router.

```
user@host# replacepattern pattern1 with pattern2 <upto n>
```

**pattern** *pattern1* is a text string or regular expression that defines the identifiers and values you want to replace in the configuration.

***pattern2*** is a text string or regular expression that replaces the identifiers and values located with ***pattern1***.

Juniper Networks uses standard UNIX-style regular expression syntax (as defined in POSIX 1003.2). If the regular expression contains spaces, operators, or wildcard characters, enclose the expression in quotation marks. Greedy qualifiers (match as much as possible) are supported. Lazy qualifiers (match as little as possible) are not.

The **upto *n*** option specifies the number of objects replaced. The value of ***n*** controls the total number of objects that are replaced in the configuration (not the total number of times the pattern occurs). Objects at the same hierarchy level (siblings) are replaced first. Multiple occurrences of a pattern within a given object are considered a single replacement. For example, if a configuration contains a **010101** text string, the command **replace pattern 01 with pattern 02 upto 2** replaces **010101** with **020202** (instead of **020201**). Replacement of **010101** with **020202** is considered a single replacement (***n* = 1**), not three separate replacements (***n* = 3**).

If you do not specify an **upto** option, all identifiers and values in the configuration that match ***pattern1*** are replaced.

The **replace** command is available in configuration mode at any hierarchy level. All matches are case-sensitive.

#### Related Documentation

- [Common Regular Expressions to Use with the replace Command on page 237](#)
- [Example: Using Global Replace in a Junos Configuration—Using the \n Back Reference on page 171](#)
- [Example: Using Global Replace in a Junos Configuration—Replacing an Interface Name on page 172](#)
- [Example: Using Global Replace in a Junos Configuration—Using the upto Option on page 173](#)
- [Using Wildcard Characters in Interface Names on page 49](#)
- [Using Keyboard Sequences to Move Around and Edit the Junos OS CLI on page 47](#)

## CHAPTER 6

# CLI Commit Operations

- [Junos OS Commit Model for Router or Switch Configuration on page 51](#)
- [Commit Operation When Multiple Users Configure the Software on page 52](#)
- [Junos OS Batch Commits Overview on page 53](#)

## Junos OS Commit Model for Router or Switch Configuration

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

The router or switch configuration is saved using a commit model: that is, a candidate configuration is modified as desired and then committed to the system. Once a configuration has been committed, the router or switch checks the configuration for syntax errors, and if no errors are found, the configuration is saved as **juniper.conf.gz** and activated. The former active configuration file is saved as the first rollback configuration file (**juniper.conf.1.gz**), and all other rollback configuration files are incremented by 1. For example, **juniper.conf.1.gz** is incremented to **juniper.conf.2.gz**, making it the second rollback configuration file. The router or switch can have a maximum of 49 rollback configurations (1–49) saved on the system.

On the router or switch, the active configuration file and the first three rollback files (**juniper.conf.gz.1**, **juniper.conf.gz.2**, **juniper.conf.gz.3**) are located in the **/config** directory. If the file **rescue.conf.gz** is saved on the system, this file should also be saved in the **/config** directory. The factory default files are located in the **/etc/config** directory.

There are two mechanisms used to propagate the configurations between Routing Engines within a router or switch:

- Synchronization—Propagates a configuration from one Routing Engine to a second Routing Engine within the same router or switch chassis.



**NOTE:** The QFX3500 switch has only one Routing Engine.

---

To synchronize configurations, use the **commit synchronize** CLI command. If one of the Routing Engines is locked, the synchronization fails. If synchronization fails because of a locked configuration file, you can use the **commit synchronize force** command. This command overrides the lock and synchronizes the configuration files.

- **Distribution**—Propagates a configuration across the routing plane on a multichassis router or switch. Distribution occurs automatically. There is no user command available to control the distribution process. If a configuration is locked during a distribution of a configuration, the locked configuration does not receive the distributed configuration file, so the synchronization fails. You need to clear the lock before the configuration and resynchronize the routing planes.



**NOTE:** When you use the **commit synchronize force** CLI command on a multichassis platform, the forced synchronization of the configuration files does not affect the distribution of the configuration file across the routing plane. If a configuration file is locked on a router or switch remote from the router or switch where the command was issued, the synchronization fails on the remote router or switch. You need to clear the lock and reissue the **synchronize** command.

**Related  
Documentation**

- *Configuring the Junos OS for the First Time on a Router or Switch with a Single Routing Engine*

---

## Commit Operation When Multiple Users Configure the Software

---

**Supported Platforms**    EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

Up to 32 users can be in configuration mode simultaneously, and they all can be making changes to the configuration. All changes made by all users are visible to everyone editing the configuration—the changes become visible as soon as the user presses the Enter key at the end of a command that changes the configuration, such as **set**, **edit**, or **delete**.

When any of the users editing the configuration issues a **commit** command, all changes made by all users are checked and activated.

If you enter configuration mode with the **configure private** command, each user has a private candidate configuration to edit somewhat independently of other users. When you commit the configuration, only your own changes get committed. To synchronize your copy of the configuration after other users have committed changes, you can run the **update** command in configuration mode. A commit operation also updates all of the private candidate configurations. For example, suppose user X and user Y are both in **configure private** mode, and user X commits a configuration change. When user Y performs a subsequent commit operation and then views the new configuration, the new configuration seen by user Y includes the changes made by user X.

If you enter configuration mode with the **configure exclusive** command, you lock the candidate configuration for as long as you remain in configuration mode, allowing you to make changes without interference from other users. Other users can enter and exit configuration mode, but they cannot commit the configuration. This is true even if the other users entered configuration mode before you enter the **configure exclusive** command. For example, suppose user X is already in the **configure private** or **configure** mode. Then suppose user Y enters the **configure exclusive** mode. User X cannot commit any changes



to the configuration, even if those changes were entered before user Y logged in. If user Y exits **configure exclusive** mode, user X can then commit the changes made in **configure private** or **configure** mode.

**Related Documentation**

- [Committing a Junos OS Configuration on page 112](#)
- [Forms of the configure Command on page 40](#)
- [Displaying Users Currently Editing the Configuration on page 67](#)

## Junos OS Batch Commits Overview

**Supported Platforms** [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

Junos OS provides a batch commit feature that aggregates or merges multiple configuration edits from different CLI sessions or users and adds them to a batch commit queue. A batch commit server running on the device takes one or more jobs from the batch commit queue, applies the configuration changes to the shared configuration database, and then commits the configuration changes in a single commit operation.

Batches are prioritized by the commit server based on priority of the batch specified by the user or the time when the batch job is added. When one batch commit is complete, the next set of configuration changes are aggregated and loaded into the batch queue for the next session of the batch commit operation. Batches are created until there are no commit entries left in the queue directory.

When compared to the regular commit operation where all commits are independently committed sequentially, batch commits save time and system resources by committing multiple small configuration edits in a single commit operation.

Batch commits are performed from the **[edit batch]** configuration mode. The commit server properties can be configured at the **[edit system commit server]** hierarchy level.

## Aggregation and Error Handling

When there is a load-time error in one of the aggregated jobs, the commit job that encounters the error is discarded and the remaining jobs are aggregated and committed.

For example, if there are five commit jobs (**commit-1**, **commit-2**, **commit-3**, **commit-4**, and **commit-5**) being aggregated, and **commit-3** encounters an error while loading, **commit-3** is discarded and **commit-1**, **commit-2**, **commit-4**, and **commit-5** are aggregated and committed.

If there is an error during the commit operation when two or more jobs are aggregated and committed, the aggregation is discarded and each of those jobs is committed individually like a regular commit operation.

For example, if there are five commit jobs (**commit-1**, **commit-2**, **commit-3**, **commit-4**, and **commit-5**) that are aggregated and if there is a commit error caused because of **commit-3**, the aggregation is discarded, **commit-1**, **commit-2**, **commit-3**, **commit-4**, and **commit-5** are committed individually, and the CLI reports a commit error for **commit-3**.



## CHAPTER 7

# Configuration Groups

- [Understanding the Junos Configuration Groups on page 55](#)

## Understanding the Junos Configuration Groups

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

This topic provides you an overview of the configuration groups feature and the inheritance model in Junos OS, and contains the following sections:

- [Configuration Groups Overview on page 55](#)
- [Inheritance Model on page 56](#)
- [Configuring Configuration Groups on page 56](#)

## Configuration Groups Overview

The configuration groups feature in Junos OS enables you to create a group containing configuration statements and to direct the inheritance of that group's statements in the rest of the configuration. The same group can be applied to different sections of the configuration, and different sections of one group's configuration statements can be inherited in different places in the configuration.

Configuration groups enable you to create smaller, more logically constructed configuration files, making it easier to configure and maintain Junos OS. For example, you can group statements that are repeated in many places in the configuration, such as when configuring interfaces, and thereby limit updates to just the group.

You can also use wildcards in a configuration group to allow configuration data to be inherited by any object that matches a wildcard expression.

The configuration group mechanism is separate from the grouping mechanisms used elsewhere in the configuration, such as BGP groups. Configuration groups provide a generic mechanism that can be used throughout the configuration but that are known only to Junos OS command-line interface (CLI). The individual software processes that perform the actions directed by the configuration receive the expanded form of the configuration; they have no knowledge of configuration groups.

## Inheritance Model

Configuration groups use true inheritance, which involves a dynamic, ongoing relationship between the source of the configuration data and the target of that data. Data values changed in the configuration group are automatically inherited by the target. The target need not contain the inherited information, although the inherited values can be overridden in the target without affecting the source from which they were inherited.

This inheritance model allows you to see only the instance-specific information without seeing the inherited details. A command pipe in configuration mode allows you to display the inherited data.

## Configuring Configuration Groups

For areas of your configuration to inherit configuration statements, you must first put the statements into a configuration group and then apply that group to the levels in the configuration hierarchy that require the statements.

To configure configuration groups and inheritance, you can include the **groups** statement at the **[edit]** hierarchy level:

```
[edit]
groups {
  group-name {
    configuration-data;
  }
}
```

Include the **apply-groups** [ *group-names* ] statement anywhere in the configuration that the configuration statements contained in a configuration group are needed.

### Related Documentation

- [Creating a Junos Configuration Group on page 137](#)

## CHAPTER 8

# Configuration Management

- [Understanding How the Junos Configuration Is Stored on page 57](#)

## Understanding How the Junos Configuration Is Stored

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series](#)

When you edit a configuration, you work in a copy of the current configuration to create a candidate configuration. The changes you make to the candidate configuration are visible in the CLI immediately, so if multiple users are editing the configuration at the same time, all users can see all changes.

To have a candidate configuration take effect, you *commit* the changes. At this point, the candidate file is checked for proper syntax, activated, and marked as the current, operational software configuration file. If multiple users are editing the configuration, when you commit the candidate configuration, all changes made by all the users take effect.

In addition to saving the current configuration, the CLI saves the current operational version and the previous 49 versions of committed configurations. The most recently committed configuration is version 0, which is the current operational version and the default configuration that the system returns to if you roll back to a previous configuration. The oldest saved configuration is version 49.

The currently operational Junos OS configuration is stored in the file `juniper.conf` and the last three committed configurations are stored in the files `juniper.conf.1`, `juniper.conf.2`, and `juniper.conf.3`. These four files are located in the directory `/config`, which is on the switch's hard disk. The remaining 46 previous versions of committed configurations, the files `juniper.conf.4` through `juniper.conf.49`, are stored in the directory `/var/db/config` on the hard disk.

- Related Documentation**
- [Returning to the Most Recently Committed Junos Configuration on page 295](#)
  - [Returning to a Previously Committed Junos OS Configuration on page 295](#)
  - [Loading a Configuration from a File on page 129](#)



## PART 2

# Configuration

- [Getting Started with Junos OS Configuration on page 61](#)
- [Updating the Junos OS Configuration on page 85](#)
- [Committing a Junos OS Configuration on page 105](#)
- [Loading a Junos OS Configuration on page 129](#)
- [Synchronizing the Junos OS Configuration on page 135](#)
- [Creating and Applying Junos OS Configuration Groups on page 137](#)
- [CLI Online Help on page 163](#)
- [CLI Configuration Mode on page 167](#)
- [Controlling the CLI Environment on page 169](#)
- [CLI Advanced Features on page 171](#)
- [Configuration Statements on page 175](#)





## CHAPTER 9

# Getting Started with Junos OS Configuration

- [Entering and Exiting the Junos OS CLI Configuration Mode on page 61](#)
- [Displaying the Current Junos OS Configuration on page 63](#)
- [Example: Displaying the Current Junos OS Configuration on page 64](#)
- [Displaying set Commands from the Junos OS Configuration on page 65](#)
- [Displaying Users Currently Editing the Configuration on page 67](#)
- [Displaying Additional Information About the Configuration on page 68](#)
- [Using the configure exclusive Command on page 71](#)
- [Updating the configure private Configuration on page 72](#)
- [Getting Started with the Junos OS Command-Line Interface on page 72](#)
- [Switching Between Junos OS CLI Operational and Configuration Modes on page 74](#)
- [Configuring a User Account on a Device Running Junos OS on page 76](#)
- [Example: Configuring a Routing Protocol on page 78](#)

## Entering and Exiting the Junos OS CLI Configuration Mode

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You configure Junos OS by entering configuration mode and creating a hierarchy of configuration mode statements.

- To enter configuration mode, use the **configure** command.

When you enter configuration mode, the following configuration mode commands are available:

```
user@host>configure
entering configuration mode

[edit]
user@host#?
possible completions:
  <[Enter]>      Execute this command
  activate       Remove the inactive tag from a statement
  annotate       Annotate the statement with a comment
  commit         Commit current set of changes
```

copy	Copy a statement
deactivate	Add the inactive tag to a statement
delete	Delete a data element
edit	Edit a sub-element
exit	Exit from this level
help	Provide help information
insert	Insert a new ordered data element
load	Load configuration from ASCII file
quit	Quit from this level
rename	Rename a statement
replace	Replace character string in configuration
rollback	Roll back to previous committed configuration
run	Run an operational-mode command
save	Save configuration to ASCII file
set	Set a parameter
show	Show a parameter
status	Show users currently editing configuration
top	Exit to top level of configuration
up	Exit one level of configuration
wildcard	Wildcard operations

[edit]  
user@host>

Users must have configure permission to view and use the **configure** command. When in configuration mode, a user can view and modify only those statements for which they have access privileges set. For more information, see the *Access Privilege Administration Guide*.

- If you enter configuration mode and another user is also in configuration mode, a message shows the user's name and what part of the configuration the user is viewing or editing:

```
user@host> configure
Entering configuration mode
Users currently editing the configuration:
  root terminal d0 (pid 4137) on since 2008-04-09 23:03:07 PDT, idle 7w6d 08:22

[edit]
The configuration has been changed but not committed

[edit]
user@host#
```

Up to 32 users can be in configuration mode simultaneously, and they all can make changes to the configuration at the same time.

- To exit configuration mode, use the **exit configuration-mode** configuration mode command from any level, or use the **exit** command from the top level. For example:

```
[edit protocols ospf area 0.0.0.0 interface so-0/0/0]
user@host# exit configuration-mode
exiting configuration mode
user@host>

[edit]
user@host# exit
exiting configuration mode
user@host>
```

If you try to exit from configuration mode using the **exit** command and the configuration contains changes that have not been committed, you see a message and prompt:

```
[edit]
user@host# exit
The configuration has been changed but not committed
Exit with uncommitted changes? [yes,no] (yes) <Enter>
Exiting configuration mode
user@host>
```

- To exit with uncommitted changes without having to respond to a prompt, use the **exit configuration-mode** command. This command is useful when you are using scripts to perform remote configuration.

```
[edit]
user@host# exit configuration-mode
The configuration has been changed but not committed
Exiting configuration mode
user@host>
```

#### Related Documentation

- [Understanding Junos OS CLI Configuration Mode on page 33](#)
- [Modifying the Junos OS Configuration on page 39](#)
- [Commit Operation When Multiple Users Configure the Software on page 39](#)
- [Displaying the Current Junos OS Configuration on page 63](#)
- [Displaying set Commands from the Junos OS Configuration on page 65](#)
- [Issuing Relative Junos Configuration Mode Commands on page 91](#)
- [Using the configure exclusive Command on page 71](#)
- [Updating the configure private Configuration on page 72](#)
- [Switching Between Junos OS CLI Operational and Configuration Modes on page 74](#)

## Displaying the Current Junos OS Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To display the current configuration for a device running Junos OS, use the **show** configuration mode command. This command displays the configuration at the current hierarchy level or at the specified level.

```
user@host# show <statement-path>
```

The configuration statements appear in a fixed order, interfaces appear alphabetically by type, and then in numerical order by slot number, PIC number, and port number. Note that when you configure the router, you can enter statements in any order.

You also can use the CLI operational mode **show configuration** command to display the last committed current configuration, which is the configuration currently running on the router:

```
user@host> show configuration
```

When you show a configuration, a timestamp at the top of the configuration indicates when the configuration was last changed:

```
## Last commit: 2006-07-18 11:21:58 PDT by echen
version 8.3
```

If you have omitted a required statement at a particular hierarchy level, when you issue the **show** command in configuration mode, a message indicates which statement is missing. As long as a mandatory statement is missing, the CLI continues to display this message each time you issue a **show** command. For example:

```
[edit]
user@host# show
protocols {
  pim {
    interface so-0/0/0 {
      priority 4;
      version 2;
      # Warning: missing mandatory statement(s): 'mode'
    }
  }
}
```

**Related  
Documentation**

- [Example: Displaying the Current Junos OS Configuration on page 64](#)
- [Displaying set Commands from the Junos OS Configuration on page 65](#)

---

## Example: Displaying the Current Junos OS Configuration

---

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following example shows how you can display the current Junos configuration. To display the entire configuration:

```
[edit]
user@host# set protocols ospf area 0.0.0.0 interface so-0/0/0 hello-interval 5
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
      }
    }
  }
}
```

Display a particular hierarchy in the configuration:

```
[edit]
user@host# show protocols ospf area 0.0.0.0
interface so-0/0/0 {
  hello-interval 5;
}
```

Move down a level and display the configuration at that level:

```
[edit]
user@host# edit protocols ospf area 0.0.0.0
[edit protocols ospf area 0.0.0.0]
user@host# show
interface so-0/0/0 {
    hello-interval 5;
}
```

Display all of the last committed configuration:

```
[edit]
user@host# set protocols ospf area 0.0.0.0 interface so-0/0/0 hello-interval 5
[edit]
user@host# commit
commit complete
[edit]
user@host# quit
exiting configuration mode
user@host> show configuration
## Last commit: 2006-08-10 11:21:58 PDT by user
version 8.3
protocols {
    ospf {
        area 0.0.0.0 {
            interface so-0/0/0 {
                hello-interval 5;
            }
        }
    }
}
```

#### Related Documentation

- [Displaying the Current Junos OS Configuration on page 63](#)

## Displaying set Commands from the Junos OS Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

In configuration mode, you can display the configuration as a series of configuration mode commands required to re-create the configuration. This is useful if you are not familiar with how to use configuration mode commands or if you want to cut, paste, and edit the displayed configuration.

To display the configuration as a series of configuration mode commands, which are required to re-create the configuration from the top level of the hierarchy as **set** commands, issue the **show** configuration mode command with the **display set** option:

```
user@host# show | display set
```

This topic contains the following examples:

- [Example: Displaying set Commands from the Configuration on page 66](#)
- [Example: Displaying Required set Commands at the Current Hierarchy Level on page 66](#)
- [Example: Displaying set Commands with the match Option on page 67](#)

### Example: Displaying set Commands from the Configuration

Display the **set** commands from the configuration at the **[edit interfaces]** hierarchy level:

```
[edit interfaces fe-0/0/0]
user@host# show
unit 0 {
  family inet {
    address 192.107.1.230/24;
  }
  family iso;
  family mpls;
}
inactive: unit 1 {
  family inet {
    address 10.0.0.1/8;
  }
}
user@host# show | display set
set interfaces fe-0/0/0 unit 0 family inet address 192.107.1.230/24
set interfaces fe-0/0/0 unit 0 family iso
set interfaces fe-0/0/0 unit 0 family mpls
set interfaces fe-0/0/0 unit 1 family inet address 10.0.0.1/8
deactivate interfaces fe-0/0/0 unit 1
```

To display the configuration as a series of configuration mode commands required to re-create the configuration from the current hierarchy level, issue the **show** configuration mode command with the **display set relative** option:

```
user@host# show | display set relative
```

### Example: Displaying Required set Commands at the Current Hierarchy Level

Display the configuration as a series of configuration mode commands required to re-create the configuration from the current hierarchy level:

```
[edit interfaces fe-0/0/0]
user@host# show
unit 0 {
  family inet {
    address 192.107.1.230/24;
  }
  family iso;
  family mpls;
}
inactive: unit 1 {
  family inet {
    address 10.0.0.1/8;
  }
}
```

```

}
user@host# show | display set relative
set unit 0 family inet address 192.107.1.230/24
set unit 0 family iso
set unit 0 family mpls
set unit 1 family inet address 10.0.0.1/8
deactivate unit 1

```

To display the configuration as **set** commands and search for text matching a regular expression by filtering output, specify the **match** option after the pipe ( | ):

```
user@host# show | display set | match regular-expression
```

### Example: Displaying set Commands with the match Option

Display IP addresses associated with an interface:

```

xe-2/3/0 {
  unit 0 {
    family inet {
      address 192.107.9.106/30;
    }
  }
}
so-5/1/0 {
  unit 0 {
    family inet {
      address 192.107.9.15/32 {
        destination 192.107.9.192;
      }
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.1/32;
    }
  }
}
user@host# show interfaces | display set | match address
set interfaces xe-2/3/0 unit 0 family inet address 192.168.9.106/30
set interfaces so-5/1/0 unit 0 family inet address 192.168.9.15/32 destination 192.168.9.192
set interfaces lo0 unit 0 family inet address 127.0.0.1/32

```

#### Related Documentation

- [Displaying the Current Junos OS Configuration on page 63](#)

## Displaying Users Currently Editing the Configuration

#### Supported Platforms

[EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To display the users currently editing the configuration, use the **status** configuration mode command:

```
user@host# status
```

```
Users currently editing the configuration:
rchen terminal p0 (pid 55691) on since 2006-03-01 13:17:25 PST
[edit interfaces]
```

The system displays who is editing the configuration (**rchen**), where the user is logged in (**terminal p0**), the date and time the user logged in (**2006-03-01 13:17:25 PST**), and what level of the hierarchy the user is editing (**[edit interfaces]**).

If you issue the **status** configuration mode command and a user has scheduled a candidate configuration to become active for a future time, the system displays who scheduled the commit (**root**), where the user is logged in (**terminal d0**), the date and time the user logged in (**2002-10-31 14:55:15 PST**), and that a commit is pending (**commit at**).

```
[edit]
user@host# status
Users currently editing the configuration:
root terminal d0 (pid 767) on since 2002-10-31 14:55:15 PST, idle 00:03:09
commit at
```

For information about how to schedule a commit, see [“Scheduling a Junos Commit Operation” on page 116](#).

If you issue the **status** configuration mode command and a user is editing the configuration in configure exclusive mode, the system displays who is editing the configuration (**root**), where the user is logged in (**terminal d0**), the date and time the user logged in (**2002-11-01 13:05:11 PST**), and that a user is editing the configuration in configure exclusive mode (**exclusive [edit]**).

```
[edit]
user@host# status
Users currently editing the configuration:
root terminal d0 (pid 2088) on since 2002-11-01 13:05:11 PST
exclusive [edit]
```

- Related Documentation**
- [Forms of the configure Command on page 40](#)
  - [Using the configure exclusive Command on page 71](#)

---

## Displaying Additional Information About the Configuration

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

In configuration mode only, to display additional information about the configuration, use the **display detail** command after the pipe ( **|** ) in conjunction with a **show** command. The additional information includes the help string that explains each configuration statement and the permission bits required to add and modify the configuration statement.

```
user@host# show <hierarchy-level> | display detail
```

For example:

```
[edit]
user@host# show | display detail
```



```

##
## version: Software version information
## require: system
##
version "3.4R1 [tlim]";
system {
  ##
  ## host-name: Host name for this router
  ## match: ^[:alnum:]._-]+$
  ## require: system
  ##
}
host-name router-name;
##
## domain-name: Domain name for this router
## match: ^[:alnum:]._-]+$
## require: system
##
domain-name isp.net;
##
## backup-router: Address of router to use while booting
##
backup-router 192.168.100.1;
root-authentication {
  ##
  ## encrypted-password: Encrypted password string
  ##
  encrypted-password "$ABC123"; # SECRET-DATA
}
##
## name-server: DNS name servers
## require: system
##
name-server {
  ##
  ## name-server: DNS name server address
  ##
  208.197.1.0;
}
login {
  ##
  ## class: User name (login)
  ## match: ^[:alnum:]._-]+$
  ##
  class super-user {
    ##
    ## permissions: Set of permitted operation categories
    ##
    permissions all;
  }
  ...
  ##
  ## services: System services
  ## require: system
  ##
  services {

```

```
## services: Service name
##
ftp;
##
## services: Service name
##
telnet;
##
}
syslog {
##
## file-name: File to record logging data
##
file messages {
##
## Facility type
## Level name
##
any notice;
##
## Facility type
## Level name
##
authorization info;
}
}
}
chassis {
alarm {
sonet {
##
## lol: Loss of light
## alias: loss-of-light
##
lol red;
}
}
}
interfaces {
##
## Interface name
##
at-2/1/1 {
atm-options {
##
## vpi: Virtual path index
## range: 0 .. 255
## maximum-vcs: Maximum number of virtual circuits on this VP
##
vpi 0 maximum-vcs 512;
}
##
## unit: Logical unit number
## range: 0 .. 16384
##
unit 0 {
```

```

    ##
    ## vci: ATM point-to-point virtual circuit identifier ([vpi.]vci)
  }
  ##
  vci 0.128;
}
}
...

```

#### Related Documentation

- [Displaying set Commands from the Junos OS Configuration on page 65](#)

## Using the `configure exclusive` Command

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

If you enter configuration mode with the **`configure exclusive`** command, you lock the candidate *global* configuration (also known as the *shared configuration* or *shared configuration database*) for as long as you remain in configuration mode, allowing you to make changes without interference from other users. Other users can enter and exit configuration mode, but they cannot commit the configuration.

If another user has locked the configuration, and you need to forcibly log the person out, enter the operational mode command **`request system logout pid pid_number`**.

If you enter configuration mode and another user is also in configuration mode and has locked the configuration, a message identifies the user and the portion of the configuration that the user is viewing or editing:

```

user@host> configure
Entering configuration mode
Users currently editing the configuration:
root terminal p3 (pid 1088) on since 2000-10-30 19:47:58 EDT, idle 00:00:44
exclusive [edit interfaces so-3/0/0 unit 0 family inet]

```

In configure exclusive mode, any uncommitted changes are discarded when you exit:

```

user@host> configure exclusive
warning: uncommitted changes will be discarded on exit
Entering configuration mode
[edit]
user@host# set system host-name cool
[edit]
user@host# quit
The configuration has been changed but not committed
warning: Auto rollback on exiting 'configure exclusive'
Discard uncommitted changes? [yes,no] (yes)
warning: discarding uncommitted changes
load complete
Exiting configuration mode

```

When you use the **yes** option to exit configure exclusive mode, Junos OS discards your uncommitted changes and rolls back your configuration. The **no** option allows you to continue editing or to commit your changes in configure exclusive mode.

When a user exits from configure exclusive mode while another user is in configure private mode, Junos OS will roll back any uncommitted changes.

**Related  
Documentation**

- [Adding Junos Configuration Statements and Identifiers on page 85](#)
- [Forms of the configure Command on page 40](#)

---

## Updating the configure private Configuration

---

**Supported Platforms**   [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

When you are in configure private mode, you must work with a copy of the most recently committed shared configuration. If the global configuration changes, you can issue the **update** command to update your private candidate configuration. When you do this, your private candidate configuration contains a copy of the most recently committed configuration with your private changes merged in. For example:

```
[edit]
user@host# update
[edit]
user@host#
```



**NOTE:** Merge conflicts can occur when you issue the **update** command.

You can also issue the **rollback** command to discard your private candidate configuration changes and obtain the most recently committed configuration:

```
[edit]
user@host# rollback
[edit]
user@host#
```

**Related  
Documentation**

- [Forms of the configure Command on page 40](#)

---

## Getting Started with the Junos OS Command-Line Interface

---

**Supported Platforms**   [LN Series](#)

As an introduction to the Junos OS command-line interface (CLI), this topic provides instructions for simple steps you take after installing Junos OS on the device. It shows you how to start the CLI, view the command hierarchy, and make small configuration changes. The related topics listed at the end of this topic provide you more detailed information about using the CLI.

**NOTE:**

- The instructions and examples in this topic are based on sample M Series and T Series routers. You can use them as a guideline for entering commands on your devices running Junos OS.
- Before you begin, make sure your device hardware is set up and Junos OS is installed. You must have a direct console connection to the device or network access using SSH or Telnet. If your device is not set up, follow the installation instructions provided with the device before proceeding.

To log in to a router and start the CLI:

1. Log in as **root**.

The root login account has superuser privileges, with access to all commands and statements.

2. Start the CLI:

```
root# cli
root@>
```

The > command prompt shows you are in operational mode. Later, when you enter configuration mode, the prompt will change to #.



**NOTE:** If you are using the root account for the first time on the device, remember that the device ships with no password required for root, but the first time you commit a configuration with Junos OS Release 7.6 or later, you must set a root password. Root access is not allowed over a telnet session. To enable root access over an SSH connection, you must configure the `system services ssh root-login allow` statement.

The CLI includes several ways to get help about commands. This section shows some examples of how to get help:

1. Type **?** to show the top-level commands available in operational mode.

```
root@> ?
```

Possible completions:

clear	Clear information in the system
configure	Manipulate software configuration information
diagnose	Invoke diagnose script
file	Perform file operations
help	Provide help information
monitor	Show real-time debugging information
mtrace	Trace multicast path from source to receiver
ping	Ping remote target
quit	Exit the management session
request	Make system-level requests
restart	Restart software process
set	Set CLI properties, date/time, craft interface message
show	Show system information
ssh	Start secure shell on another host

start	Start shell
telnet	Telnet to another host
test	Perform diagnostic debugging
traceroute	Trace route to remote host

2. Type **file ?** to show all possible completions for the **file** command.

```
root@> file ?
```

Possible completions:

<[Enter]>	Execute this command
archive	Archives files from the system
checksum	Calculate file checksum
compare	Compare files
copy	Copy files (local or remote)
delete	Delete files from the system
list	List file information
rename	Rename files
show	Show file contents
source-address	Local address to use in originating the connection
	Pipe through a command

3. Type **file archive ?** to show all possible completions for the **file archive** command.

```
root@> file archive ?
```

Possible completions:

compress	Compresses the archived file using GNU gzip (.tgz)
destination	Name of created archive (URL, local, remote, or floppy)
source	Path of directory to archive

#### Related Documentation

- [Getting Online Help from the Junos OS Command-Line Interface on page 9](#)
- [Switching Between Junos OS CLI Operational and Configuration Modes on page 74](#)
- [Checking the Status of a Device Running Junos OS on page 213](#)
- [Configuring a User Account on a Device Running Junos OS on page 76](#)
- [Example: Configuring a Routing Protocol on page 78](#)
- [Examples: Using the Junos OS CLI Command Completion on page 165](#)

---

## Switching Between Junos OS CLI Operational and Configuration Modes

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

When you monitor and configure a device running Junos OS, you may need to switch between operational mode and configuration mode. When you change to configuration mode, the command prompt also changes. The operational mode prompt is a right angle bracket (>) and the configuration mode prompt is a pound sign (#).

To switch between operational mode and configuration mode:

1. When you log in to the router and type the **cli** command, you are automatically in operational mode:

```
--- JUNOS 9.2B1.8 built 2008-05-09 23:41:29 UTC
% cli
user@host>
```

2. To enter configuration mode, type the **configure** command or the **edit** command from the CLI operation mode. For example:

```
user@host> configure
Entering configuration mode
```

```
[edit]
user@host#
```

The CLI prompt changes from **user@host>** to **user@host#** and a banner appears to indicate the hierarchy level.

3. You can return to operational mode in one of the following ways:

- To commit the configuration and exit:

```
[edit]
user@host# commit and-quit
commit complete
Exiting configuration mode
user@host>
```

- To exit without committing:

```
[edit]
user@host# exit
Exiting configuration mode
user@host>
```

When you exit configuration mode, the CLI prompt changes from **user@host#** to **user@host>** and the banner no longer appears. You can enter or exit configuration mode as many times as you wish without committing your changes.

4. To display the output of an operational mode command, such as **show**, while in configuration mode, issue the **run** configuration mode command and then specify the operational mode command:

```
[edit]
user@host# run operational-mode-command
```

For example, to display the currently set priority value of the Virtual Router Redundancy Protocol (VRRP) primary router while you are modifying the VRRP configuration for a backup router:

```
[edit interfaces xe-4/2/0 unit 0 family inet vrrp-group 27]
user@host# show
virtual-address [ 192.168.1.15 ];
[edit interfaces xe-4/2/0 unit 0 family inet vrrp-group 27]
user@host# run show vrrp detail
Physical interface: xe-5/2/0, Unit: 0, Address: 192.168.29.10/24
Interface state: up, Group: 10, State: backup
Priority: 190, Advertisement interval: 3, Authentication type: simple
```

```
Preempt: yes, VIP count: 1, VIP: 192.168.29.55
Dead timer: 8.326, Master priority: 201, Master router: 192.168.29.254
[edit interfaces xe-4/2/0 unit 0 family inet vrrp-group 27]
user@host# set priority ...
```

- Related Documentation**
- [Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies on page 5](#)
  - [Getting Online Help from the Junos OS Command-Line Interface on page 9](#)
  - [Configuring a User Account on a Device Running Junos OS on page 76](#)

---

## Configuring a User Account on a Device Running Junos OS

---

**Supported Platforms**    EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

This topic describes how to log on to a device running Junos OS using a root account and configure a new user account. You can configure an account for your own use or create a test account.

To configure a new user account on the device:

1. Log in as root and enter configuration mode:

```
root@host> configure
[edit]
root@host#
```

The prompt in brackets ([**edit**]), also known as a *banner*, shows that you are in configuration edit mode at the top of the hierarchy.

2. Change to the [**edit system login**] section of the configuration:

```
[edit]
root@host# edit system login
[edit system login]
root@host#
```

The prompt in brackets changes to [**edit system login**] to show that you are at a new level in the hierarchy.

3. Now add a new user account:

```
[edit system login]
root@host# edit user nchen
```

This example adds an account **nchen** (for Nathan Chen).

4. Configure a full name for the account. If the name includes spaces, enclose the entire name in quotation marks (" "):

```
[edit system login user nchen]
root@host# set full-name "Nathan Chen"
```

5. Configure an account class. The account class sets the user access privileges for the account:

```
[edit system login user nchen]
```



```
root@host# set class super-user
```

6. Configure an authentication method and password for the account:

```
[edit system login user nchen]
root@host# set authentication plain-text-password
New password:
Retype new password:
```

When the new password prompt appears, enter a clear-text password that the system can encrypt, and then confirm the new password.

7. Commit the configuration:

```
[edit system login user nchen]
root@host# commit
commit complete
```

Configuration changes are not activated until you commit the configuration. If the commit is successful, a **commit complete** message appears.

8. Return to the top level of the configuration, and then exit:

```
[edit system login user nchen]
root@host# top
[edit]
root@host# exit
Exiting configuration mode
```

9. Log out of the device:

```
root@host> exit
% logout Connection closed.
```

10. To test your changes, log back in with the user account and password you just configured:

```
login: nchen
Password: password
--- Junos 8.3-R1.1 built 2005-12-15 22:42:19 UTC
nchen@host>
```

When you log in, you should see the new username at the command prompt.

You have successfully used the CLI to view the device status and perform a simple configuration change. See the related topics listed in this section for more information about the Junos OS CLI features.



**NOTE:** For complete information about the commands to issue to configure your device, including examples, see the Junos OS feature guides.

---

**Related  
Documentation**

- [Getting Started with the Junos OS Command-Line Interface on page 72](#)
- [Getting Online Help from the Junos OS Command-Line Interface on page 9](#)
- [Displaying the Junos OS CLI Command and Word History on page 166](#)
- [Example: Configuring a Routing Protocol on page 78](#)

---

## Example: Configuring a Routing Protocol

---

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

This topic provides a sample configuration that describes how to configure an OSPF backbone area that has two SONET interfaces.

The final configuration looks like this:

```
[edit]
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
        dead-interval 20;
      }
      interface so-0/0/1 {
        hello-interval 5;
        dead-interval 20;
      }
    }
  }
}
```

This topic contains the following examples of configuring a routing protocol:

- [Shortcut on page 79](#)
- [Longer Configuration on page 79](#)
- [Making Changes to a Routing Protocol Configuration on page 81](#)

## Shortcut

You can create a shortcut for this entire configuration with the following two commands:

```
[edit]
user@host# set protocols ospf area 0.0.0.0 interface so-0/0/0 hello-interval 5
dead-interval 20
[edit]
user@host# set protocols ospf area 0.0.0.0 interface so-0/0/1 hello-interval 5
dead-interval 20
```

## Longer Configuration

This section provides a longer example of creating the previous OSPF configuration. In the process, it illustrates how to use the different features of the CLI.

1. Enter configuration mode by issuing the **configure** top-level command:

```
user@host> configure
entering configuration mode
[edit]
user@host#
```

Notice that the prompt has changed to a pound sign (#) to indicate configuration mode.

2. To create the above configuration, you start by editing the **protocols ospf** statements:

```
[edit]
user@host# edit protocols ospf
[edit protocols ospf]
user@host#
```

3. Now add the OSPF area:

```
[edit protocols ospf]
user@host# edit area 0.0.0.0
[edit protocols ospf area 0.0.0.0]
user@host#
```

4. Add the first interface:

```
[edit protocols ospf area 0.0.0.0]
user@host# edit interface so0
[edit protocols ospf area 0.0.0.0 interface so-0/0/0]
user@host#
```

You now have four nested statements.

5. Set the hello and dead intervals.

```
[edit protocols ospf area 0.0.0.0 interface so-0/0/0]
user@host#set ?
```

```
user@host# set hello-interval 5
user@host# set dead-interval 20
user@host#
```

6. You can see what is configured at the current level with the **show** command:

```
[edit protocols ospf area 0.0.0.0 interface so-0/0/0]
user@host# show
hello-interval 5;
dead-interval 20;
[edit protocols ospf area 0.0.0.0 interface so-0/0/0]
user@host#
```

7. You are finished at this level, so back up a level and take a look at what you have so far:

```
[edit protocols ospf area 0.0.0.0 interface so-0/0/0]
user@host# up
[edit protocols ospf area 0.0.0.0]
user@host# show
interface so-0/0/0 {
    hello-interval 5;
    dead-interval 20;
}
[edit protocols ospf area 0.0.0.0]
user@host#
```

The **interface** statement appears because you have moved to the **area** statement.

8. Add the second interface:

```
[edit protocols ospf area 0.0.0.0]
user@host# edit interface so-0/0/1
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# set hello-interval 5
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# set dead-interval 20
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# up
[edit protocols ospf area 0.0.0.0]
user@host# show
interface so-0/0/0 {
    hello-interval 5;
    dead-interval 20;
}
interface so-0/0/1 {
    hello-interval 5;
    dead-interval 20;
}
[edit protocols ospf area 0.0.0.0]
user@host#
```

9. Back up to the top level and see what you have:

```
[edit protocols ospf area 0.0.0.0]
user@host# top
[edit]
user@host# show
protocols {
    ospf {
```

```

    area 0.0.0.0 {
        interface so-0/0/0 {
            hello-interval 5;
            dead-interval 20;
        }
        interface so-0/0/1 {
            hello-interval 5;
            dead-interval 20;
        }
    }
}
[edit]
user@host#

```

This configuration now contains the statements you want.

10. Before committing the configuration (and thereby activating it), verify that the configuration is correct:

```

[edit]
user@host# commit check
configuration check succeeds
[edit]
user@host#

```

11. Commit the configuration to activate it on the router:

```

[edit]
user@host# commit
commit complete
[edit]
user@host#

```

## Making Changes to a Routing Protocol Configuration

Suppose you decide to use different dead and hello intervals on interface **so-0/0/1**. You can make changes to the configuration.

1. Go directly to the appropriate hierarchy level by typing the full hierarchy path to the statement you want to edit:

```

[edit]
user@host# edit protocols ospf area 0.0.0.0 interface so-0/0/1
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# show
hello-interval 5;
dead-interval 20;
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# set hello-interval 7
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# set dead-interval 28
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# top
[edit]
user@host# show
protocols {

```

```
ospf {
  area 0.0.0.0 {
    interface so-0/0/0 {
      hello-interval 5;
      dead-interval 20;
    }
    interface so-0/0/1 {
      hello-interval 7;
      dead-interval 28;
    }
  }
}
[edit]
user@host#
```

2. If you decide not to run OSPF on the first interface, delete the statement:

```
[edit]
user@host# edit protocols ospf area 0.0.0.0
[edit protocols ospf area 0.0.0.0]
user@host# delete interface so-0/0/0
[edit protocols ospf area 0.0.0.0]
user@host# top
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/1 {
        hello-interval 7;
        dead-interval 28;
      }
    }
  }
}
[edit]
user@host#
```

Everything inside the statement you deleted was deleted with it. You can also eliminate the entire OSPF configuration by simply entering **delete protocols ospf** while at the top level.

3. If you decide to use the default values for the hello and dead intervals on your remaining interface but you want OSPF to run on that interface, delete the hello and dead interval timers:

```
[edit]
user@host# edit protocols ospf area 0.0.0.0 interface so-0/0/1
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# delete hello-interval
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# delete dead-interval
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# top
[edit]
user@host# show
```

```

protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/1;
    }
  }
}
[edit]
user@host#

```

You can set multiple statements at the same time as long as they are all part of the same hierarchy (the path of statements from the top inward, as well as one or more statements at the bottom of the hierarchy). This feature can reduce considerably the number of commands you must enter.

4. To go back to the original hello and dead interval timers on interface **so-0/0/1**, enter:

```

[edit]
user@host# edit protocols ospf area 0.0.0.0 interface so-0/0/1
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# set hello-interval 5 dead-interval 20
[edit protocols ospf area 0.0.0.0 interface so-0/0/1]
user@host# exit
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/1 {
        hello-interval 5;
        dead-interval 20;
      }
    }
  }
}
[edit]
user@host#

```

5. You also can re-create the other interface, as you had it before, with only a single entry:

```

[edit]
user@host# set protocols ospf area 0.0.0.0 interface so-0/0/1 hello-interval 5
dead-interval 20
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
        dead-interval 20;
      }
      interface so-0/0/1 {
        hello-interval 5;
        dead-interval 20;
      }
    }
  }
}

```

```
    }  
  }  
}  
[edit]  
user@host#
```

**Related  
Documentation**

- [Getting Started with the Junos OS Command-Line Interface on page 72](#)
- [Displaying the Junos OS CLI Command and Word History on page 166](#)
- [Interface Naming Conventions Used in the Junos OS Operational Commands on page 211](#)



## CHAPTER 10

# Updating the Junos OS Configuration

- [Adding Junos Configuration Statements and Identifiers on page 85](#)
- [Deleting a Statement from a Junos Configuration on page 87](#)
- [Example: Deleting a Statement from the Junos Configuration on page 88](#)
- [Copying a Junos Statement in the Configuration on page 89](#)
- [Example: Copying a Statement in the Junos Configuration on page 90](#)
- [Issuing Relative Junos Configuration Mode Commands on page 91](#)
- [Renaming an Identifier in a Junos Configuration on page 91](#)
- [Example: Renaming an Identifier in a Junos Configuration on page 91](#)
- [Inserting a New Identifier in a Junos Configuration on page 92](#)
- [Example: Inserting a New Identifier in a Junos Configuration on page 92](#)
- [Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94](#)
- [Examples: Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 95](#)
- [Adding Comments in a Junos Configuration on page 96](#)
- [Example: Including Comments in a Junos Configuration on page 97](#)
- [Using Regular Expressions to Delete Related Items from a Junos Configuration on page 99](#)
- [Example: Using the Wildcard Command with the Range Option on page 100](#)

---

## Adding Junos Configuration Statements and Identifiers

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

All properties of a device running Junos OS are configured by including *statements* in the configuration. A statement consists of a keyword, which is fixed text, and, optionally, an *identifier*. An identifier is an identifying name which you define, such as the name of an interface or a username, and which allows you and the CLI to discriminate among a collection of statements.

For example, the following list shows the statements available at the top level of configuration mode:

```
user@host# set?
Possible completions:
> accounting-options  Accounting data configuration
+ apply-groups        Groups from which to inherit configuration data
> chassis             Chassis configuration
> class-of-service    Class-of-service configuration
> firewall            Define a firewall configuration
> forwarding-options  Configure options to control packet sampling
> groups              Configuration groups
> interfaces          Interface configuration
> policy-options      Routing policy option configuration
> protocols           Routing protocol configuration
> routing-instances   Routing instance configuration
> routing-options     Protocol-independent routing option configuration
> snmp                Simple Network Management Protocol
> system              System parameters
```

An angle bracket ( > ) before the statement name indicates that it is a container statement and that you can define other statements at levels below it. If there is no angle bracket ( > ) before the statement name, the statement is a leaf statement; you cannot define other statements at hierarchy levels below it.

A plus sign (+) before the statement name indicates that it can contain a set of values. To specify a set, include the values in brackets. For example:

```
[edit]
user@host# set policy-options community my-as1-transit members [65535:10 65535:11]
```

In some statements, you can include an identifier. For some identifiers, such as interface names, you must specify the identifier in a precise format. For example, the interface name **so-0/0/0** refers to a SONET/SDH interface that is on the Flexible PIC Concentrator (FPC) in slot 0, in the first PIC location, and in the first port on the Physical Interface Card (PIC). For other identifiers, such as interface descriptive text and policy and firewall term names, you can specify any name, including special characters, spaces, and tabs.

You must enclose in quotation marks (double quotes) identifiers and any strings that include a space or tab character or any of the following characters:

```
( ) [ ] { } ! @ # $ % ^ & | ' = ?
```

If you do not type an option for a statement that requires one, a message indicates the type of information required. In this example, you need to type an area number to complete the command:

```
[edit]
user@host# set protocols ospf area<Enter>
^
syntax error, expecting <identifier>
```

#### Related Documentation

- [Modifying the Junos OS Configuration on page 39](#)
- [Deleting a Statement from a Junos Configuration on page 87](#)
- [Copying a Junos Statement in the Configuration on page 89](#)

- [Renaming an Identifier in a Junos Configuration on page 91](#)
- [Using the configure exclusive Command on page 71](#)
- [Additional Details About Specifying Junos Statements and Identifiers on page 42](#)
- [Displaying the Current Junos OS Configuration on page 63](#)

---

## Deleting a Statement from a Junos Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To delete a statement or identifier from a Junos configuration, use the **delete** configuration mode command. Deleting a statement or an identifier effectively "unconfigures" the functionality associated with that statement or identifier, returning that functionality to its default condition.

```
user@host# delete <statement-path> <identifier>
```

When you delete a statement, the statement and all its subordinate statements and identifiers are removed from the configuration.

For statements that can have more than one identifier, when you delete one identifier, only that identifier is deleted. The other identifiers in the statement remain.

To delete the entire hierarchy starting at the current hierarchy level, do not specify a statement or an identifier in the **delete** command. When you omit the statement or identifier, you are prompted to confirm the deletion:

```
[edit]
user@host# delete
Delete everything under this level? [yes, no] (no)
Possible completions:
no    Don't delete everything under this level
yes   Delete everything under this level
Delete everything under this level? [yes, no] (no)
```



**NOTE:** You cannot delete multiple statements or identifiers within a hierarchy using a single delete command. You must delete each statement or identifier individually using multiple delete commands. For example, consider the following configuration at the [edit system] hierarchy level:

```
system {
  host-name host-211;
  domain-name domain-122;
  backup-router 192.168.71.254;
  arp;
  authentication-order [ radius password tacplus ];
}
```

To delete the domain-name, host-name, and backup-router from the configuration, you cannot issue a single delete command:

```
user@host> delete system hostname host-211 domain-name domain-122 backup-router
192.168.71.254
```

You can only delete each statement individually:

```
user@host delete system host-name host-211
user@host delete system domain-name domain-122
user@host delete system backup-router 192.168.71.254
```

#### Related Documentation

- [Example: Deleting a Statement from the Junos Configuration on page 88](#)
- [Adding Junos Configuration Statements and Identifiers on page 85](#)
- [Copying a Junos Statement in the Configuration on page 89](#)

## Example: Deleting a Statement from the Junos Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following example shows how to delete the **ospf** statement, effectively unconfiguring OSPF on the router:

```
[edit]
user@host# set protocols ospf area 0.0.0.0 interface so-0/0/0 hello-interval 5
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
      }
    }
  }
}
[edit]
user@host# delete protocols ospf
[edit]
user@host# show
```

```
[edit]
user@host#
```

Delete all statements from the current level down:

```
[edit]
user@host# edit protocols ospf area 0.0.0.0
[edit protocols ospf area 0.0.0.0]
user@host# set interface so-0/0/0 hello-interval 5
[edit protocols ospf area 0.0.0.0]
user@host# delete
Delete everything under this level? [yes, no] (no) yes
[edit protocols ospf area 0.0.0.0]
user@host# show
[edit]
user@host#
```

Unconfigure a particular property:

```
[edit]
user@host# set interfaces so-3/0/0 speed 100mb
[edit]
user@host# show
interfaces {
  so-3/0/0 {
    speed 100mb;
  }
}
[edit]
user@host# delete interfaces so-3/0/0 speed
[edit]
user@host# show
interfaces {
  so-3/0/0;
}
```

- [Example: Using Global Replace in a Junos Configuration—Using the upto Option on page 173](#)
- [Deleting a Statement from a Junos Configuration on page 87](#)

## Copying a Junos Statement in the Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

When you have many similar statements in a Junos configuration, you can add one statement and then make copies of that statement. Copying a statement duplicates that statement and the entire hierarchy of statements configured under that statement. Copying statements is useful when you are configuring many physical or logical interfaces of the same type.

To make a copy of an existing statement in the configuration, use the configuration mode **copy** command:

```
user@host# copy existing-statement to new-statement
```

Immediately after you have copied a portion of the configuration, the configuration might not be valid. You must check the validity of the new configuration, and if necessary, modify either the copied portion or the original portion for the configuration to be valid.

- Related Documentation**
- [Example: Copying a Statement in the Junos Configuration on page 90](#)
  - [Adding Junos Configuration Statements and Identifiers on page 85](#)

---

## Example: Copying a Statement in the Junos Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following example shows how you can create one virtual connection (VC) on an interface, and then copy its configuration to create a second VC:

```
[edit interfaces]
user@host# show
at-1/0/0 {
  description "PAIX to MAE West"
  encapsulation atm-pvc;
  unit 61 {
    point-to-point;
    vci 0.61;
    family inet {
      address 10.0.1.1/24;
    }
  }
}
[edit interfaces]
user@host# edit at-1/0/0
[edit interfaces at-1/0/0]
user@host# copy unit 61 to unit 62
[edit interfaces at-1/0/0]
user@host# show
description "PAIX to MAE West"
encapsulation atm-pvc;
unit 61 {
  point-to-point;
  vci 0.61;
  family inet {
    address 10.0.1.1/24;
  }
}
unit 62 {
  point-to-point;
  vci 0.61;
  family inet {
    address 10.0.1.1/24;
  }
}
```

- Related Documentation**
- [Copying a Junos Statement in the Configuration on page 89](#)

## Issuing Relative Junos Configuration Mode Commands

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The **top** or **up** command followed by another configuration command, including **edit**, **insert**, **delete**, **deactivate**, **annotate**, or **show** enables you to quickly move to the top of the hierarchy or to a level above the area you are configuring.

To issue configuration mode commands from the top of the hierarchy, use the **top** command; then specify a configuration command. For example:

```
[edit interfaces fxp0 unit 0 family inet]
user@host# top edit system login
[edit system login]
user@host#
```

To issue configuration mode commands from a location higher up in the hierarchy, use the **up** configuration mode command; specify the number of levels you want to move up the hierarchy and then specify a configuration command. For example:

```
[edit protocols bgp]
user@host# up 2 activate system
```

**Related Documentation**

- [Displaying the Current Junos OS Configuration on page 63](#)

## Renaming an Identifier in a Junos Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

When modifying a Junos configuration, you can rename an identifier that is already in the configuration. You can do this either by deleting the identifier (using the **delete** command) and then adding the renamed identifier (using the **set** and **edit** commands), or you can rename the identifier using the **rename** configuration mode command:

```
user@host# rename <statement-path> identifier1 to identifier2
```

**Related Documentation**

- [Adding Junos Configuration Statements and Identifiers on page 85](#)
- [Example: Renaming an Identifier in a Junos Configuration on page 91](#)
- [Inserting a New Identifier in a Junos Configuration on page 92](#)

## Example: Renaming an Identifier in a Junos Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

This example shows how you can change the Network Time Protocol (NTP) server address to **10.0.0.6** using the **rename** configuration mode command:

```
[edit]
user@host# rename system network-time server 10.0.0.7 to server 10.0.0.6
```

**Related  
Documentation**

- [Renaming an Identifier in a Junos Configuration on page 91](#)

---

## Inserting a New Identifier in a Junos Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

When configuring a device running Junos OS, you can enter most statements and identifiers in any order. Regardless of the order in which you enter the configuration statements, the CLI always displays the configuration in a strict order. However, there are a few cases where the ordering of the statements matters because the configuration statements create a sequence that is analyzed in order.

For example, in a routing policy or firewall filter, you define terms that are analyzed sequentially. Also, when you create a named path in dynamic MPLS, you define an ordered list of the transit routers in the path, starting with the first transit router and ending with the last one.

To modify a portion of the configuration in which the statement order matters, use the **insert** configuration mode command:

```
user@host# insert <statement-path> identifier1 (before | after) identifier2
```

If you do not use the **insert** command, but instead simply configure the identifier, it is placed at the end of the list of similar identifiers.

**Related  
Documentation**

- [Renaming an Identifier in a Junos Configuration on page 91](#)
- [Example: Renaming an Identifier in a Junos Configuration on page 91](#)
- [Example: Inserting a New Identifier in a Junos Configuration on page 92](#)
- [Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94](#)

---

## Example: Inserting a New Identifier in a Junos Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

Insert policy terms in a routing policy configuration. Note that if you do not use the **insert** command, but rather just configure another term, the added term is placed at the end of the existing list of terms. Also note that you must create the term, as shown in this example, before you can place it with the **insert** command.

```
[edit]
user@host# show
policy-options {
  policy-statement statics {
    term term1 {
      from {
        route-filter 192.168.0.0/16 orlonger;
        route-filter 224.0.0.0/3 orlonger;
      }
    }
  }
}
```



```

        then reject;
    }
    term term2 {
        from protocol direct;
        then reject;
    }
    term term3 {
        from protocol static;
        then reject;
    }
    term term4 {
        then accept;
    }
}
}
[edit]
user@host# rename policy-options policy-statement statics term term4 to term term6
[edit]
user@host# set policy-options policy-statement statics term term4 from protocol local
[edit]
user@host# set policy-options policy-statement statics term term4 then reject
[edit]
user@host# set policy-options policy-statement statics term term5 from protocol
    aggregate
[edit]
user@host# set policy-options policy-statement statics term term5 then reject
[edit]
user@host# insert policy-options policy-statement statics term term4 after term term3
[edit]
user@host# insert policy-options policy-statement statics term term5 after term term4
[edit]
user@host# show policy-options policy-statement statics
term term1 {
    from {
        route-filter 192.168.0.0/16 orlonger;
        route-filter 224.0.0.0/3 orlonger;
    }
    then reject;
}
term term2 {
    from protocol direct;
    then reject;
}
term term3 {
    from protocol static;
    then accept;
}
term term4 {
    from protocol local;
    then reject;
}
term term5 {
    from protocol aggregate;
    then reject;
}
term term6 {

```

```
    then accept;  
}
```

Insert a transit router in a dynamic MPLS path:

```
[edit protocols mpls path ny-sf]  
user@host# show  
1.1.1.1;  
2.2.2.2;  
3.3.3.3 loose;  
4.4.4.4 strict;  
6.6.6.6;  
[edit protocols mpls path ny-sf]  
user@host# insert 5.5.5.5 before 6.6.6.6  
[edit protocols mpls path ny-sf]  
user@host# set 5.5.5.5 strict  
[edit protocols mpls path ny-sf]  
user@host# show  
1.1.1.1;  
2.2.2.2;  
3.3.3.3 loose;  
4.4.4.4 strict;  
5.5.5.5 strict;  
6.6.6.6;
```

- Related Documentation**
- [Inserting a New Identifier in a Junos Configuration on page 92](#)
  - [Adding Junos Configuration Statements and Identifiers on page 85](#)

---

## Deactivating and Reactivating Statements and Identifiers in a Junos Configuration

---

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

In a Junos configuration, you can deactivate statements and identifiers so that they do not take effect when you issue the **commit** command. Any deactivated statements and identifiers are marked with the **inactive:** tag. They remain in the configuration, but are not activated when you issue a **commit** command.

To deactivate a statement or identifier, use the **deactivate** configuration mode command:

```
user@host# deactivate (statement identifier )
```

To reactivate a statement or identifier, use the **activate** configuration mode command:

```
user@host# activate (statement identifier )
```

In both commands, the **statement** and **identifier** you specify must be at the current hierarchy level.



**NOTE:** In Junos OS Release 10.3 and later, you can only deactivate identifiers or complete one-liner statements. You cannot deactivate just parts of a one-liner, such as only child or leaf statements. For example, in the following configuration:

```
[edit forwarding-options]
dhcp-relay {
  dynamic-profile dynamic-profile-name aggregate-clients;
}
```

You can deactivate the complete one-liner **dynamic profile** *dynamic-profile-name* aggregate-clients. However, you cannot deactivate *only* the aggregate-clients statement from the one-liner statement.

In some portions of the configuration hierarchy, you can include a **disable** statement to disable functionality. One example is disabling an interface by including the **disable** statement at the **[edit interface *interface-name*]** hierarchy level. When you deactivate a statement, that specific object or property is completely ignored and is not applied at all when you issue a **commit** command. When you disable a functionality, it is activated when you issue a **commit** command but is treated as though it is down or administratively disabled.

#### Related Documentation

- [Examples: Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 95](#)
- [Adding Junos Configuration Statements and Identifiers on page 85](#)

## Examples: Deactivating and Reactivating Statements and Identifiers in a Junos Configuration

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

Deactivate an interface in the configuration:

```
[edit interfaces]
user@host# show
at-5/2/0 {
  traceoptions {
    traceflag all;
  }
  atm-options {
    vpi 0 maximum-vcs 256;
  }
  unit 0 {
    ...
  }
}
[edit interfaces]
user@host# deactivate at-5/2/0
[edit interfaces]
user@host# show
inactive: at-5/2/0 {
  traceoptions {
```

```
        traceflag all;
    }
    ...
}
}
```

Reactivate the interface:

```
[edit interfaces]
user@host# activate at-5/2/0
[edit interfaces]
user@host# show
at-5/2/0 {
    traceoptions {
        traceflag all;
    }
    ...
}
```

**Related  
Documentation**

- [Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94](#)

---

## Adding Comments in a Junos Configuration

---

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can include comments in a Junos configuration to describe any statement in the configuration. You can add comments interactively in the CLI and by editing the ASCII configuration file.

When you add comments in configuration mode, they are associated with a statement at the current level. Each statement can have one single-line comment associated with it. Before you can associate a comment with a statement, the statement must exist. The comment is placed on the line preceding the statement.

To add comments to a configuration, use the **annotate** configuration mode command:

```
user@host# annotate statement "comment-string"
```

***statement*** is the configuration statement to which you are attaching the comment; it must be at the current hierarchy level. If a comment for the specified ***statement*** already exists, it is deleted and replaced with the new comment.

***comment-string*** is the text of the comment. The comment text can be any length, and you must type it on a single line. If the comment contains spaces, you must enclose it in quotation marks. In the comment string, you can include the comment delimiters `/* */` or `#`. If you do not specify any, the comment string is enclosed with the `/* */` comment delimiters.

To delete an existing comment, specify an empty comment string:

```
user@host# annotate statement ""
```

When you edit the ASCII configuration file and add comments, they can be one or more lines and must precede the statement they are associated with. If you place the comments in other places in the file, such as on the same line following a statement or on a separate line following a statement, they are removed when you use the **load** command to open the configuration into the CLI.

When you include comments in the configuration file directly, you can format comments in the following ways:

- Start the comment with a **/\*** and end it with a **\*/**. The comment text can be on a single line or can span multiple lines.
- Start the comment with a **#** and end it with a new line (carriage return).

If you add comments with the **annotate** command, you can view the comments within the configuration by entering the **show** configuration mode command or the **show configuration** operational mode command.

When configuring interfaces, you can add comments about the interface by including the **description** statement at the **[edit interfaces interface-name]** hierarchy level. Any comments you include appear in the output of the **show interfaces** commands. .



**NOTE:** The Junos OS supports annotation up to the last level in the configuration hierarchy, including oneliners. However, annotation of parts (the child statements or identifiers within the oneliner) of the oneliner is not supported. For example, in the following sample configuration hierarchy, annotation is supported up to the level 1 parent hierarchy, but not supported for the metric child statement:

```
[edit protocols]
  isis {
    interface ge-0/0/0.0 {
      level 1 metric 10;
    }
  }
}
```

#### Related Documentation

- [Adding Junos Configuration Statements and Identifiers on page 85](#)
- [Example: Including Comments in a Junos Configuration on page 97](#)

## Example: Including Comments in a Junos Configuration

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

To add comments to a Junos configuration:

```
[edit]
user@host# show
protocols {
  ospf {
```

```

        area 0.0.0.0 {
            interface so-0/0/0 {
                hello-interval 5;
            }
        }
    }
}
[edit]
user@host# edit protocols ospf
[edit protocols ospf]
user@host# set area 0.0.0.0
user@host# annotate area 0.0.0.0 "Backbone area configuration added June 15, 1998"
[edit protocols ospf]
user@host# edit area 0.0.0.0
[edit protocols ospf area 0.0.0.0]
user@host# annotate interface so0 "Interface from router sj1 to router sj2"
[edit protocols ospf area 0.0.0.0]
user@host# top
[edit]
user@host# show
protocols {
    ospf {
        /* Backbone area configuration added June 15, 1998 */
        area 0.0.0.0 {
            /* Interface from router sj1 to router sj2 */
            interface so-0/0/0 {
                hello-interval 5;
            }
        }
    }
}
[edit]
user@host#

```

The following excerpt from a configuration example illustrates how to enter comments in a configuration file:

```

/* This comment goes with routing-options */
routing-options {
    /* This comment goes with routing-options traceoptions */
    traceoptions {
        /* This comment goes with routing-options traceoptions tracefile */
        tracefile rpd size 1m files 10;
        /* This comment goes with routing-options traceoptions traceflag task */
        traceflag task;
        /* This comment goes with routing-options traceoptions traceflag general */
        traceflag general;
    }
    autonomous-system 10458; /* This comment is dropped */
}
routing-options {
    rib-groups {
        ifrg {
            import-rib [ inet.0 inet.2 ];
            /* A comment here is dropped */
        }
    }
}

```

```

dvmrp-rib {
  import-rib inet.2;
  export-rib inet.2;
  /* A comment here is dropped */
}
/* A comment here is dropped */
}
/* A comment here is dropped */
}

```

**Related  
Documentation**

- [Adding Comments in a Junos Configuration on page 96](#)

## Using Regular Expressions to Delete Related Items from a Junos Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The Junos OS command-line interface (CLI) enables you to delete related configuration items simultaneously, such as channelized interfaces or static routes, by using a single command and regular expressions. Deleting a statement or an identifier effectively “unconfigures” the functionality associated with that statement or identifier, returning that functionality to its default condition.

You can only delete certain parts of the configuration where you normally put multiple items, for example, interfaces. However, you cannot delete “groups” of different items; for example:

```

user@host# show system services
ftp;
rlogin;
rsh;
ssh {
  root-login allow;
}
telnet;
[edit]
user@host# wildcard delete system services *
syntax error.

```

When you delete a statement, the statement and all its subordinate statements and identifiers are removed from the configuration.

To delete related configuration items, issue the **wildcard** configuration mode command with the **delete** option and specify the statement path, the items to be summarized with a regular expression, and the regular expression.

```

user@host# wildcard delete <statement-path> <identifier> <regular-expression>

```



**NOTE:** When you use the **wildcard** command to delete related configuration items, the regular expression must be the final statement.

If the Junos OS matches more than eight related items, the CLI displays only the first eight items.

**Deleting Interfaces from the Configuration** Delete multiple T1 interfaces in the range from **t1-0/0/0:0** through **t1-0/0/0:23**:

```
user@host# wildcard delete interfaces t1-0/0/0:.*
matched: t1-0/0/0:0
matched: t1-0/0/0:1
matched: t1-0/0/0:2
Delete 3 objects? [yes,no] (no) no
```

**Deleting Routes from the Configuration** Delete static routes in the range from **172.0.0.0** to **172.255.0.0**:

```
user@host# wildcard delete routing-options static route 172.*
matched: 172.16.0.0/12
matched: 172.16.14.0/24
matched: 172.16.100.0/24
matched: 172.16.128.0/19
matched: 172.16.160.0/24
matched: 172.17.12.0/23
matched: 172.17.24.0/23
matched: 172.17.28.0/23
...
Delete 13 objects? [yes,no] (no)
```

**Related Documentation**

- [Disabling Inheritance of a Junos OS Configuration Group on page 143](#)

---

## Example: Using the Wildcard Command with the Range Option

---

**Supported Platforms** [EX Series](#), [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

- [Requirements on page 100](#)
- [Overview on page 100](#)
- [Configuration on page 101](#)
- [Verification on page 103](#)

### Requirements

This example uses the following hardware and software components:

- M Series, MX Series, T Series or EX Series device
- Junos OS Release 12.1 or later running on the device

### Overview

The **range** option with the **wildcard** command enables you to specify ranges in **activate**, **deactivate**, **delete**, **protect**, **set**, **show**, and **unprotect** commands. You can use ranges to specify a range of interfaces, logical units, VLANs, and other numbered elements. The **wildcard range** option expands the command you entered into multiple commands, each of which corresponds to one item in the range.

The **wildcard range** option enables you to configure multiple configuration statements using a single **set** command, instead of configuring each of them individually. For example,



to configure 24 Gigabit Ethernet interfaces with different port numbers, you can use a single **wildcard range set** command instead of 24 individual **set interfaces** commands.

Similarly, to deactivate a group of 30 logical interfaces, you can use the **wildcard range deactivate** command instead of deactivating each logical interface individually.

You can use **wildcard range** with the **active**, **deactivate**, **delete**, **protect**, **set**, **show**, and **unprotect** configuration commands:

```
user@host# wildcard range ?
```

Possible completions:

activate	Remove the inactive tag from a statement
deactivate	Add the inactive tag to a statement
delete	Delete a data element
protect	Protect the statement
set	Set a parameter
show	Show a parameter
unprotect	Unprotect the statement

You can also specify all configuration hierarchy levels and their child configuration statements in the CLI by using **wildcard range** with the **set** option:

Possible completions:

```
> > access          Network access configuration
> > access-profile   Access profile for this instance
> > accounting-options Accounting data configuration
> > applications     Define applications by protocol characteristics
...
```

## Configuration

The following examples show how to configure multiple configuration statements in a single step by using the **range** option with the **wildcard** configuration command:

- [Using the Range Option for Configuring a Series of Named Identifiers for a Configuration Statement on page 101](#)
- [Specifying Multiple Ranges in the Syntax on page 102](#)
- [Specifying a Range and Unique Numbers In the Syntax on page 102](#)
- [Excluding Some Values from a Range on page 103](#)
- [Specifying a Range with a Step Number on page 103](#)

### Using the Range Option for Configuring a Series of Named Identifiers for a Configuration Statement

#### Step-by-Step Procedure

You can configure a series of identifiers for a configuration statement, by specifying a numerical range of values for the identifiers.

- To configure a series of the same type of interface with different port numbers (0 through 23), specify the range for the port numbers by using the following format:

[edit]

```
user@host# wildcard range set interfaces ge-0/0/[0-23] unit 0 family vpls
```

**Results** Expands to 24 different **set** commands to configure interfaces with port numbers ranging from 0 through 23:

```
[edit]
user@host# set interfaces ge-0/0/0 unit 0 family vpls
user@host# set interfaces ge-0/0/1 unit 0 family vpls
user@host# set interfaces ge-0/0/2 unit 0 family vpls
...
user@host# set interfaces ge-0/0/23 unit 0 family vpls
```

---

### Specifying Multiple Ranges in the Syntax

**Step-by-Step Procedure** You can have multiple ranges specified in a **wildcard range** command. Each range must be separated by a comma. You can also have overlapping ranges.

- To specify more than one range in the syntax, include the minimum and maximum values for each range, separated by a comma.

```
[edit]
user@host# wildcard range protect event-options policy p[1-3,5-7,6-9]
```

**Results** Expands to the following **set** commands:

```
[edit]
user@host# set protect event-options policy p1
user@host# set protect event-options policy p2
user@host# set protect event-options policy p3
user@host# set protect event-options policy p5
user@host# set protect event-options policy p6
user@host# set protect event-options policy p7
user@host# set protect event-options policy p8
user@host# set protect event-options policy p9
```

---

### Specifying a Range and Unique Numbers In the Syntax

**Step-by-Step Procedure** You can also specify a combination of a range and unique numbers in the syntax of the **wildcard range** command.

- To specify a range and unique numbers, separate them with a comma.

```
[edit]
user@host# wildcard range protect event-options policy p[1-3,5,7,10]
```

**Results** Expands to the following **set** commands:

```
[edit]
user@host# set protect event-options policy p1
user@host# set protect event-options policy p2
user@host# set protect event-options policy p3
user@host# set protect event-options policy p5
user@host# set protect event-options policy p7
user@host# set protect event-options policy p10
```

### Excluding Some Values from a Range

- Step-by-Step Procedure** You can exclude certain values from a range by marking the numbers or the range of numbers to be excluded by using an exclamation mark.
- To exclude certain values from a range, include the portion to be excluded with ! in the syntax.
- ```
[edit]
user@host# wildcard range protect event-options policy p[1-5,!3-4]
```

**Results** Expands to the following **set** commands:

```
[edit]
user@host# set protect event-options policy p1
user@host# set protect event-options policy p2
user@host# set protect event-options policy p5
```

### Specifying a Range with a Step Number

- Step-by-Step Procedure** You can provide a step number for a range to have a constant interval in the range.
- To provide a step, include the step value in the syntax preceded by a forward slash (/).
- ```
[edit]
user@host# wildcard range protect event-options policy p[1-10/2]
```

**Results** Expands to the following **set** commands:

```
[edit]
user@host# set protect event-options policy p1
user@host# set protect event-options policy p3
user@host# set protect event-options policy p5
user@host# set protect event-options policy p7
user@host# set protect event-options policy p9
```

## Verification

Confirm that the configuration is working properly.

- [Checking the Configuration on page 103](#)

### Checking the Configuration

- Purpose** Check the configuration created using the **wildcard range** option. The following sample shows output for the configuration described in “Using the Range Option for Configuring a Series of Named Identifiers for a Configuration Statement” on page 101.

**Action** user@host> show configuration interfaces

```
ge-0/0/0 {  
    unit 0 {  
        family vpls;  
    }  
}  
ge-0/0/1 {  
    unit 0 {  
        family vpls;  
    }  
}  
ge-0/0/2 {  
    unit 0 {  
        family vpls;  
    }  
}  
ge-0/0/3 {  
    unit 0 {  
        family vpls;  
    }  
}  
...  
ge-0/0/23 {  
    unit 0 {  
        family vpls;  
    }  
}
```

**Meaning** The output indicates that 24 Gigabit Ethernet interfaces ranging from **ge-0/0/0** through **ge-0/0/23** are created.

**Related Documentation**

- [Using Wildcard Characters in Interface Names on page 49](#)

## CHAPTER 11

# Committing a Junos OS Configuration

- [Verifying a Junos Configuration on page 105](#)
- [Example: Protecting the Junos OS Configuration from Modification or Deletion on page 105](#)
- [Committing a Junos OS Configuration on page 112](#)
- [Committing a Junos Configuration and Exiting Configuration Mode on page 114](#)
- [Activating a Junos Configuration but Requiring Confirmation on page 115](#)
- [Scheduling a Junos Commit Operation on page 116](#)
- [Monitoring the Junos Commit Process on page 117](#)
- [Adding a Comment to Describe the Committed Configuration on page 118](#)
- [Backing Up the Committed Configuration on the Alternate Boot Drive on page 119](#)
- [Example: Configuring Junos OS Batch Commits on page 120](#)

## Verifying a Junos Configuration

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

To verify that the syntax of a Junos configuration is correct, use the configuration mode **commit check** command:

```
[edit]
user@host# commit check
configuration check succeeds
[edit]
user@host#
```

If the **commit check** command finds an error, a message indicates the location of the error.

- Related Documentation**
- [Adding Junos Configuration Statements and Identifiers on page 85](#)
  - [Committing a Junos OS Configuration on page 112](#)

## Example: Protecting the Junos OS Configuration from Modification or Deletion

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, T Series](#)

This example shows how to use the **protect** and **unprotect** commands in the configuration mode to protect and unprotect the CLI configuration.

- [Requirements on page 106](#)
- [Overview on page 106](#)
- [Protecting a Parent-Level Hierarchy on page 107](#)
- [Protecting a Child Hierarchy on page 107](#)
- [Protecting a Configuration Statement Within a Hierarchy on page 107](#)
- [Protecting a List of Identifiers for a Configuration Statement on page 108](#)
- [Protecting an Individual Member from a Homogenous List on page 108](#)
- [Unprotecting a Configuration on page 109](#)
- [Verification on page 109](#)

## Requirements

This example uses the following hardware and software components:

- A J Series, M Series, MX Series, or T Series device
- Junos OS 11.2 or later running on all devices

## Overview

The Junos OS enables you to protect the device configuration from being modified or deleted by other users. This can be accomplished by using the **protect** command in the configuration mode of the CLI. Likewise, you can also unprotect a protected configuration by using the **unprotect** command.

These commands can be used at any level of the configuration hierarchy—a top-level parent hierarchy or a configuration statement or an identifier within the lowest level of the hierarchy.

If a configuration hierarchy is protected, users cannot perform the following activities:

- Deleting or modifying a hierarchy or a statement or identifier within the protected hierarchy
- Inserting a new configuration statement or an identifier within the protected hierarchy
- Renaming a statement or identifier within the protected hierarchy
- Copying a configuration into a protected hierarchy
- Activating or deactivating statements within a protected hierarchy
- Annotating a protected hierarchy

## Protecting a Parent-Level Hierarchy

- Step-by-Step Procedure** To protect a configuration at the top level of the hierarchy:
- Identify the hierarchy that you want to protect and issue the **protect** command for the hierarchy at the **[edit]** hierarchy level.
- For example, if you want to protect the entire **[edit access]** hierarchy level, issue the following command:

```
[edit]
user@host# protect access
```

**Results** Protects all elements under the parent hierarchy.



### NOTE:

- If you issue the **protect** command for a hierarchy that is not used in the configuration, the Junos OS CLI displays the following error message:

```
[edit]
user@host# protect access
warning: statement not found
```

## Protecting a Child Hierarchy

- Step-by-Step Procedure** To protect a child hierarchy contained within a parent hierarchy:
- Navigate to the parent container hierarchy. Use the **protect** command for the hierarchy at the parent level.
- For example, if you want to protect the **[edit system syslog console]** hierarchy level, use the following command at the **[edit system syslog]** hierarchy level.

```
[edit system syslog]
user@host# protect console
```

**Results** Protects all elements under the child hierarchy.

## Protecting a Configuration Statement Within a Hierarchy

- Step-by-Step Procedure** To protect a configuration statement within a hierarchy level:
- Navigate to the hierarchy level containing the statement that you want to protect and issue the **protect** command for the hierarchy.
- For example, if you want to protect the **host-name** statement under the **[edit system]** hierarchy level, issue the following command:

```
[edit system]
user@host# protect host-name
```

## Protecting a List of Identifiers for a Configuration Statement

**Step-by-Step Procedure** Some configuration statements can take multiple values. For example, the **address** statement at the **[edit system login deny-sources]** hierarchy level can take a list of hostnames, IPv4 addresses, or IPv6 addresses. Suppose you have the following configuration:

```
[edit system login]
deny-sources {
  address [ 172.17.28.19 172.17.28.20 172.17.28.21 172.17.28.22];
}
```

- To protect all the addresses for the **address** statement, issue the following command at the **[edit]** level:

```
[edit]
user@host# protect system login deny-sources address
```

**Results** All the addresses ([172.17.28.19 172.17.28.20 172.17.28.21 172.17.28.22]) for the **address** statement are protected.

## Protecting an Individual Member from a Homogenous List

**Step-by-Step Procedure** Suppose you have the following configuration:

```
[edit groups ]
test1 {
  system {
    name-server {
      10.1.2.1;
      10.1.2.2;
      10.1.2.3;
      10.1.2.4;
    }
  }
}
```

- To protect one or more individual addresses for the **name-server** statement, issue the following command at the **[edit]** level:

```
[edit]
user@host# protect groups test1 system name-server 10.1.2.1
user@host# protect groups test1 system name-server 10.1.2.4
```

**Results** Addresses 10.1.2.1 and 10.1.2.4 are protected.



## Unprotecting a Configuration

- Step-by-Step Procedure** Suppose you have the following configuration at the **[edit system]** hierarchy level:
- ```
protect: system {
  host-name bigping;
  domain-search 10.1.2.1;
  login {
    deny-sources {
      protect: address [ 172.17.28.19 172.17.28.173 172.17.28.0 174.0.0.0 ];
    }
  }
}
```
- To unprotect the entire **[edit system]** hierarchy level, issue the following command at the **[edit]** level:
 

```
[edit]
user@host# unprotect system
```
- Results** The entire **system** hierarchy level is unprotected.

## Verification

### Verify That a Hierarchy Is Protected Using the show Command

- Purpose** To check that a configuration hierarchy is protected.
- Action** In the configuration mode, issue the **show** command at the **[edit]** hierarchy level to see all the configuration hierarchies and configuration statements that are protected.



**NOTE:** All protected hierarchies or statements are prefixed with a **protect:** string.

```
...
protect: system {
  host-name bigping;
  domain-search 10.1.2.1;
  login {
    deny-sources {
      protect: address [ 172.17.28.19 172.17.28.173 172.17.28.0 174.0.0.0 ];
    }
  }
}
...
```

### Verify That a Hierarchy Is Protected by Attempting to Modify a Configuration

- Purpose** To verify that a configuration is protected by trying to modify the configuration using the **activate**, **copy**, **insert**, **rename**, and **delete** commands.

**Action** To verify that a configuration is protected:

1. Try using the **activate**, **copy**, **insert**, **rename**, and **delete** commands for a top-level hierarchy or a child-level hierarchy or a statement within the hierarchy.

For a protected hierarchy or statement, the Junos OS displays an appropriate warning that the command has not executed. For example:

```
protect: system {
  host-name a;
  inactive: domain-search [ a b ];
}
```

2. To verify that the hierarchy is protected, try issuing the **activate** command for the **domain-search** statement:

**[edit system]**

```
user@host# activate system domain-search
```

The Junos OS CLI displays an appropriate message:

```
warning: [system] is protected, 'system domain-search' cannot be activated
```

---

### Verify Usage of the protect Command

**Purpose** To view the **protect** commands used for protecting a configuration.

- Action**
1. Navigate to the required hierarchy.
  2. Issue the **show | display set relative** command.

```
user@host> show | display set relative
set system host-name bigping
set system domain-search 10.1.2.1
set system login deny-sources address 172.17.28.19
set system login deny-sources address 172.17.28.173
set system login deny-sources address 172.17.28.0
set system login deny-sources address 174.0.0.0
protect system login deny-sources address
protect system
```

---

### View the Configuration in XML

**Purpose** To check if the protected hierarchies or statements are also displayed in the XML. Protected hierarchies, statements, or identifiers are displayed with the **protect="protect"** attribute in the XML.

**Action** To view the configuration in XML:

1. Navigate to the hierarchy you want to view and issue the **show** command with the pipe symbol and option **| display xml**:

[edit system]

```

user@host# show | display xml
[edit]
user@host# show system | display xml
<rpc-reply xmlns:junos="http://xml.juniper.net/junos/11.2I0/junos">
  <configuration junos:changed-seconds="1291279234"
junos:changed-localtime="2010-12-02 00:40:34 PST">
    <system protect="protect">
      <host-name>bigping</host-name>
      <domain-search>10.1.2.1</domain-search>
      <login>
        <message>

          \jnpr

          \tUNAUTHORIZED USE OF THIS ROUTER
          \tIS STRICTLY PROHIBITED!

        </message>
        <class>
          <name>a</name>
          <allow-commands>commit-synchronize</allow-commands>
          <deny-commands>commit</deny-commands>
        </class>
        <deny-sources>
          <address protect="protect">172.17.28.19</address>
          <address protect="protect">172.17.28.173</address>
          <address protect="protect">172.17.28.0</address>
          <address protect="protect">174.0.0.0</address>
        </deny-sources>
      </login>
      <syslog>
        <archive>
          </archive>
        </syslog>
      </system>
    </configuration>
  <cli>
    <banner>[edit]</banner>
  </cli>
</rpc-reply>

```



**NOTE:** Loading an XML configuration with the `unprotect="unprotect"` tag unprotects an already protected hierarchy. For example, suppose you load the following XML hierarchy:

```
<protocols unprotect="unprotect">
  <ospf>
    <area>
      <name>0.0.0.0</name>
      <interface>
        <name>all</name>
      </interface>
    </area>
  </ospf>
</protocols>
```

The `[edit protocols]` hierarchy becomes unprotected if it is already protected.

---

## Committing a Junos OS Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To save Junos OS configuration changes to the configuration database and to activate the configuration on the router, use the **commit** configuration mode command. You can issue the **commit** command from any hierarchy level:

```
[edit]
user@host# commit
commit complete
[edit]
user@host#
```

When you enter the **commit** command, the configuration is first checked for syntax errors (**commit check**). Then, if the syntax is correct, the configuration is activated and becomes the current, operational router configuration.

You can issue the **commit** command from any hierarchy level.

A configuration commit can fail for any of the following reasons:

- The configuration includes incorrect syntax, which causes the commit check to fail.
- The candidate configuration that you are trying to commit is larger than 700 MB.
- The configuration is locked by a user who entered the **configure exclusive** command.

If the configuration contains syntax errors, a message indicates the location of the error, and the configuration is not activated. The error message has the following format:

```
[edit edit-path]
'offending-statement;'
error-message
```

For example:

```
[edit firewall filter login-allowed term allowed from]
'icmp-type [ echo-request echo-reply ]:'
keyword 'echo-reply' unrecognized
```

You must correct the error before recommitting the configuration. To return quickly to the hierarchy level where the error is located, copy the path from the first line of the error and paste it at the configuration mode prompt at the **[edit]** hierarchy level.

The uncommitted, candidate configuration file is `/var/run/db/juniper.db`. It is limited to 700 MB. If the commit fails with a message **configuration database size limit exceeded**, view the file size from configuration mode by entering the command `run file list /var/run/db detail`. You can simplify the configuration and reduce the file size by creating configuration groups with wildcards or defining less specific match policies in your firewall filters.



**NOTE:** CLI commit-time warnings displayed for configuration changes at the **[edit interfaces]** hierarchy level are removed and are logged as system log messages.

This is also applicable to VRRP configuration at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number* family (*inet* | *inet6*) address *address*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family (*inet* | *inet6*) address *address*]**

When you commit a configuration, you commit the entire configuration in its current form. If more than one user is modifying the configuration, committing it saves and activates the changes of all the users.

**NOTE:**

- If you are using Junos OS in a Common Criteria environment, system log messages are created whenever a secret attribute is changed (for example, password changes or changes to the RADIUS shared secret). These changes are logged during the following configuration load operations:

load merge  
load replace  
load override  
load update

For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS*.

- We do not recommend performing a commit operation on the backup Routing Engine when graceful Routing Engine switchover is enabled on the router.



**NOTE:** If you configure the same IP address for a management interface or internal interface such as fxp0 and an external physical interface such as ge-0/0/1, when graceful Routing Engine switchover (GRES) is enabled, the CLI displays an appropriate commit error message that identical addresses have been found on the private and public interfaces. In such cases, you must assign unique IP addresses for the two interfaces that have duplicate addresses.

The management Ethernet interface used for the TX Matrix Plus router, T1600 routers in a routing matrix, and PTX Series Packet Transport Switches, is em0. Junos OS automatically creates the router's management Ethernet interface, em0.

**Related  
Documentation**

- [Committing a Junos Configuration and Exiting Configuration Mode on page 114](#)
- [Activating a Junos Configuration but Requiring Confirmation on page 115](#)
- [Backing Up the Committed Configuration on the Alternate Boot Drive on page 119](#)
- [Forms of the configure Command on page 40](#)

## Committing a Junos Configuration and Exiting Configuration Mode

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

To save Junos OS configuration changes, activate the configuration on the device and exit configuration mode, using the **commit and-quit** configuration mode command. This command succeeds only if the configuration contains no errors.

[edit]

```

user@host# commit and-quit
commit complete
exiting configuration mode
user@host>

```



**NOTE:** We do not recommend performing a commit operation on the backup Routing Engine when graceful Routing Engine switchover is enabled on the router.

#### Related Documentation

- [Activating a Junos Configuration but Requiring Confirmation on page 115](#)

## Activating a Junos Configuration but Requiring Confirmation

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

When you commit the current candidate configuration, you can require an explicit confirmation for the commit to become permanent. This is useful if you want to verify that a configuration change works correctly and does not prevent access to the router. If the change prevents access or causes other errors, the router automatically returns to the previous configuration and restores access after the rollback confirmation timeout passes. This feature is called automatic rollback.

To commit the current candidate configuration but require an explicit confirmation for the commit to become permanent, use the **commit confirmed** configuration mode command:

```

[edit]
user@host# commit confirmed
commit confirmed will be automatically rolled back in 10 minutes unless confirmed
commit complete
#commit confirmed will be rolled back in 10 minutes
[edit]
user@host#

```

Once you have verified that the change works correctly, you can keep the new configuration active by entering a **commit** or **commit check** command within 10 minutes of the **commit confirmed** command. For example:

```

[edit]
user@host# commit check
commit confirmed will be automatically rolled back in 10 minutes unless confirmed
commit complete
#commit confirmed will be rolled back in 10 minutes
[edit]
user@host#

```

If the commit is not confirmed within a certain time (10 minutes by default), Junos OS automatically rolls back to the previous configuration and a broadcast message is sent to all logged-in users.


To show when a rollback is scheduled after a **commit confirmed** command, enter the **show system commit** command. For example:

```
user@host>show system commit
0 2005-01-05 15:00:37 PST by root via cli commit confirmed, rollback in 3mins
```

Like the **commit** command, the **commit confirmed** command verifies the configuration syntax and reports any errors. If there are no errors, the configuration is activated and begins running on the router.

Figure 7 on page 116 illustrates how the **commit confirmed** command works.

 Figure 7: Confirm a Configuration

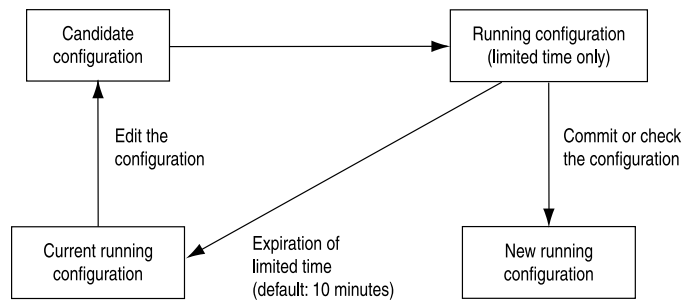

To change the amount of time before you have to confirm the new configuration, specify the number of minutes when you issue the command:

```
[edit]
user@host# commit confirmed minutes
commit complete
[edit]
user@host#
```

In Junos OS Release 11.4 and later, you can also use the **commit confirmed** command in the **[edit private]** configuration mode.

#### Related Documentation

- [Scheduling a Junos Commit Operation on page 116](#)
- [Committing a Junos OS Configuration on page 112](#)

## Scheduling a Junos Commit Operation

**Supported Platforms** EX Series, LN Series, M Series, MX Series, T Series

You can schedule when you want your candidate configuration to become active. To save Junos OS configuration changes and activate the configuration on the router at a future time or upon reboot, use the **commit at** configuration mode command, specifying **reboot** or a future time at the **[edit]** hierarchy level:

```
[edit]
user@host # commit at string
```

Where **string** is **reboot** or the future time to activate the configuration changes. You can specify time in two formats:



- A time value in the form **hh:mm[:ss]** (hours, minutes, and optionally seconds)—Commit the configuration at the specified time, which must be in the future but before 11:59:59 PM on the day the **commit at** configuration mode command is issued. Use 24-hour time for the **hh** value; for example, **04:30:00** is 4:30:00 AM, and **20:00** is 8:00 PM. The time is interpreted with respect to the clock and time zone settings on the router.
- A date and time value in the form **yyyy-mm-dd hh:mm[:ss]** (year, month, date, hours, minutes, and, optionally, seconds)—Commit the configuration at the specified day and time, which must be after the **commit at** command is issued. Use 24-hour time for the **hh** value. For example, **2003-08-21 12:30:00** is 12:30 PM on August 21, 2003. The time is interpreted with respect to the clock and time zone settings on the router.

Enclose the **string** value in quotation marks (" "). For example, **commit at "18:00:00"**. For date and time, include both values in the same set of quotation marks. For example, **commit at "2005-03-10 14:00:00"**.

A commit check is performed immediately when you issue the **commit at** configuration mode command. If the result of the check is successful, then the current user is logged out of configuration mode, and the configuration data is left in a read-only state. No other commit can be performed until the scheduled commit is completed.



**NOTE:** If Junos OS fails before the configuration changes become active, all configuration changes are lost.

You cannot enter the **commit at** configuration command after you issue the **request system reboot** command.

You cannot enter the **request system reboot** command once you schedule a commit operation for a specific time in the future.

You cannot commit a configuration when a scheduled commit is pending. For information about how to cancel a scheduled configuration by means of the **clear** command, see [CLI Explorer](#).



**NOTE:** We do not recommend performing a commit operation on the backup Routing Engine when graceful Routing Engine switchover is enabled on the router.

#### Related Documentation

- [Committing a Junos OS Configuration on page 112](#)
- [Monitoring the Junos Commit Process on page 117](#)

## Monitoring the Junos Commit Process

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To monitor the Junos commit process, use the **display detail** command after the pipe with the **commit** command:

```
user@host# commit | display detail
```

For example:

```
[edit]
user@host# commit | display detail
2003-09-22 15:39:39 PDT: exporting juniper.conf
2003-09-22 15:39:39 PDT: setup foreign files
2003-09-22 15:39:39 PDT: propagating foreign files
2003-09-22 15:39:39 PDT: complete foreign files
2003-09-22 15:39:40 PDT: copying configuration to juniper.data+
2003-09-22 15:39:40 PDT: dropping unchanged foreign files
2003-09-22 15:39:40 PDT: daemons checking new configuration
2003-09-22 15:39:41 PDT: commit wrapup...
2003-09-22 15:39:42 PDT: activating '/var/etc/ntp.conf'
2003-09-22 15:39:42 PDT: activating '/var/etc/kmd.conf'
2003-09-22 15:39:42 PDT: activating '/var/db/juniper.data'
2003-09-22 15:39:42 PDT: notifying daemons of new configuration
2003-09-22 15:39:42 PDT: signaling 'Firewall daemon', pid 24567, signal 1,
status 0
2003-09-22 15:39:42 PDT: signaling 'Interface daemon', pid 24568, signal 1,
status 0
2003-09-22 15:39:43 PDT: signaling 'Routing protocol daemon', pid 25679,
signal 1, status 0
2003-09-22 15:39:43 PDT: signaling 'MIB2 daemon', pid 24549, signal 1,
status 0
2003-09-22 15:39:43 PDT: signaling 'NTP daemon', pid 37863, signal 1, status 0
2003-09-22 15:39:43 PDT: signaling 'Sonet APS daemon', pid 24551, signal 1,
status 0
2003-09-22 15:39:43 PDT: signaling 'VRRP daemon', pid 24552, signal 1,
status 0
2003-09-22 15:39:43 PDT: signaling 'PFE daemon', pid 2316, signal 1, status 0
2003-09-22 15:39:43 PDT: signaling 'Traffic sampling control daemon', pid 24553
signal 1, status 0
2003-09-22 15:39:43 PDT: signaling 'IPsec Key Management daemon', pid
24556, signal 1, status 0
2003-09-22 15:39:43 PDT: signaling 'Forwarding UDP daemon', pid 2320,
signal 1, status 0
commit complete
```

**Related  
Documentation**

- [Committing a Junos OS Configuration on page 112](#)
- [Adding a Comment to Describe the Committed Configuration on page 118](#)

---

## Adding a Comment to Describe the Committed Configuration

---

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can include a comment that describes changes to the committed configuration. To do so, include the commit **comment** statement. The comment can be as long as 512 bytes and you must type it on a single line.

```
[edit]
user@host# commit comment comment-string
```

*comment-string* is the text of the comment.



**NOTE:** You cannot include a comment with the **commit check** command.

To add a comment to the **commit** command, include the **comment** statement after the **commit** command:

```
[edit]
user@host# commit comment "add user joe"
commit complete
[edit]
user@host#
```

To add a comment to the **commit confirmed** command, include the **comment** statement after the **commit confirmed** command:

```
[edit]
user@host# commit confirmed comment "add customer to port 27"
commit confirmed will be automatically rolled back in 10 minutes unless confirmed
commit complete
[edit]
user@host#
```

To view these commit comments, issue the **show system commit** operational mode command.

In Junos OS Release 11.4 and later, you can also use the **commit confirmed** command in the **[edit private]** configuration mode.

#### Related Documentation

- [Committing a Junos OS Configuration on page 112](#)
- [Backing Up the Committed Configuration on the Alternate Boot Drive on page 119](#)

## Backing Up the Committed Configuration on the Alternate Boot Drive

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

After you commit the configuration and are satisfied that it is running successfully, you should issue the **request system snapshot** command to back up the new software onto the **/altconfig** file system. If you do not issue the **request system snapshot** command, the configuration on the alternate boot drive will be out of sync with the configuration on the primary boot drive.

The **request system snapshot** command backs up the root file system to **/altroot**, and **/config** to **/altconfig**. The root and **/config** file systems are on the router's flash drive, and the **/altroot** and **/altconfig** file systems are on the router's hard disk (if available).



**NOTE:** To back up the file system on a J Series Services Router, you must specify a media type (primary compact flash drive, removable compact flash drive, or USB storage device) for backup. For more information about the `request system snapshot` command, see [CLI Explorer](#).

After you issue the `request system snapshot` command, you cannot return to the previous version of the software because the running and backup copies of the software are identical.

**Related Documentation**

- [Committing a Junos OS Configuration on page 112](#)

---

## Example: Configuring Junos OS Batch Commits

**Supported Platforms** [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

- [Junos OS Batch Commits Overview on page 120](#)
- [Example: Configuring Batch Commit Server Properties on page 121](#)

## Junos OS Batch Commits Overview

**Supported Platforms** [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

Junos OS provides a batch commit feature that aggregates or merges multiple configuration edits from different CLI sessions or users and adds them to a batch commit queue. A batch commit server running on the device takes one or more jobs from the batch commit queue, applies the configuration changes to the shared configuration database, and then commits the configuration changes in a single commit operation.

Batches are prioritized by the commit server based on priority of the batch specified by the user or the time when the batch job is added. When one batch commit is complete, the next set of configuration changes are aggregated and loaded into the batch queue for the next session of the batch commit operation. Batches are created until there are no commit entries left in the queue directory.

When compared to the regular commit operation where all commits are independently committed sequentially, batch commits save time and system resources by committing multiple small configuration edits in a single commit operation.

Batch commits are performed from the `[edit batch]` configuration mode. The commit server properties can be configured at the `[edit system commit server]` hierarchy level.

---

### Aggregation and Error Handling

When there is a load-time error in one of the aggregated jobs, the commit job that encounters the error is discarded and the remaining jobs are aggregated and committed.

For example, if there are five commit jobs (`commit-1`, `commit-2`, `commit-3`, `commit-4`, and `commit-5`) being aggregated, and `commit-3` encounters an error while loading, `commit-3`

is discarded and **commit-1**, **commit-2**, **commit-4**, and **commit-5** are aggregated and committed.

If there is an error during the commit operation when two or more jobs are aggregated and committed, the aggregation is discarded and each of those jobs is committed individually like a regular commit operation.

For example, if there are five commit jobs (**commit-1**, **commit-2**, **commit-3**, **commit-4**, and **commit-5**) that are aggregated and if there is a commit error caused because of **commit-3**, the aggregation is discarded, **commit-1**, **commit-2**, **commit-3**, **commit-4**, and **commit-5** are committed individually, and the CLI reports a commit error for **commit-3**.

## Example: Configuring Batch Commit Server Properties

**Supported Platforms** [M Series](#), [MX Series](#), [T Series](#)

This example shows how to configure batch commit server properties to manage batch commit operations.

- [Requirements on page 121](#)
- [Overview on page 121](#)
- [Configuration on page 121](#)
- [Verification on page 123](#)

### Requirements

This example uses the following hardware and software components:

- MX Series 3D Universal Edge Router
- Junos OS Release 12.1 or later running on the device

### Overview

You can control how the batch commit queue is handled by the commit server by configuring the server properties at the **[edit system commit server]** hierarchy level. This enables you to control how many commit jobs are aggregated or merged into a single batch commit, the maximum number of jobs that can be added to the queue, days to keep batch commit error logs, interval between two batch commits, and tracing operations for batch commit operations.

### Configuration

<b>CLI Quick Configuration</b>	To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the <b>[edit]</b> hierarchy level. You can configure the commit server properties from either the regular <b>[edit]</b> mode or the <b>[edit batch]</b> mode.
<b>Device R0</b>	<pre> set system commit server maximum-aggregate-pool 4 set system commit server maximum-entries 500 set system commit server commit-interval 5 set system commit server days-to-keep-error-logs 30 </pre>

```
set system commit server traceoptions commitd_nov
set system commit server traceoptions flag all
```

### *Configuring the Commit Server Properties*

#### **Step-by-Step Procedure**

1. (Optional) Configure the number of commit transactions to aggregate or merge in a single commit operation.

The default value for **maximum-aggregate-pool** is 5.



**NOTE:** Setting **maximum-aggregate-pool** to 1 commits each of the jobs individually.

In this example, the number of commit transactions is set to 4 indicating that four different commit jobs are aggregated into a single commit before the commit operation is initiated.

```
[edit system commit server]
user@R0# set maximum-aggregate-pool 4
```

2. (Optional) Configure the maximum number of jobs allowed in a batch.

This limits the number of commits jobs that are added to the queue.

```
[edit system commit server]
user@R0# set maximum-entries 500
```



**NOTE:** If you set **maximum-entries** to 1, the commit server cannot add more than one job to the queue, and the CLI displays an appropriate message when you try to commit more than one job.

3. (Optional) Configure the time (in seconds) to wait before starting the next batch commit operation.

```
[edit system commit server]
user@R0# set commit-interval 5
```

4. (Optional) Configure the number of days to keep error logs.

The default value is 30 days.

```
[edit system commit server]
user@R0# set days-to-keep-error-logs 30
```

5. (Optional) Configure tracing operations to log batch commit events.

In this example, the filename for logging batch commit events is **commitd\_nov**, and all traceoption flags are set.

```
[edit system commit server]
user@R0# set traceoptions commitd_nov
user@R0# set traceoptions flag all
```

**Results** From configuration mode, confirm your configuration by entering the **show system commit server** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R0# show system commit server
maximum-aggregate-pool 4;
maximum-entries 500;
commit-interval 5;
days-to-keep-error-logs 30;
traceoptions {
  file commitd_nov;
  flag all;
}
```

### *Committing the Configuration from Batch Configuration Mode*

**Step-by-Step Procedure** To commit the configuration from the **[edit batch]** mode, do one of the following:

- Log in to the device and enter **commit**.  

```
[edit batch]
user@R0# commit
Added to commit queue request-id: 1000
```
- To assign a higher priority to a batch commit job, issue the **commit** command with the **priority** option.  

```
[edit batch]
user@R0# commit priority
Added to commit queue request-id: 1001
```
- To commit a configuration without aggregating the configuration changes with other commit jobs in the queue, issue the **commit** command with the **atomic** option.  

```
[edit batch]
user@R0# commit atomic
Added to commit queue request-id: 1002
```
- To commit a configuration without aggregating the configuration changes with other commit jobs in the queue, and issuing a higher priority to the commit job, issue the **commit** command with the **atomic priority** option.  

```
[edit batch]
user@R0# commit atomic priority
Added to commit queue request-id: 1003
```

### Verification

Confirm that the configuration is working properly.

- [Checking the Batch Commit Server Status on page 124](#)
- [Checking the Batch Commit Status on page 124](#)
- [Viewing the Patch Files in a Batch Commit Job on page 125](#)
- [Viewing the Trace Files for Batch Commit Operations on page 127](#)

### *Checking the Batch Commit Server Status*

**Purpose** Check the status of the batch commit server.

**Action** user@R0> **show system commit server**  
Commit server status : Not running

By default, the status of the commit server is **Not running**. The commit server starts running only when a batch commit job is added to the queue.

When a batch commit job is added to the queue, the status of the commit server changes to **Running**.

user@R0> **show system commit server**

Commit server status : Running  
Jobs in process:  
1003 1004 1005

**Meaning** The **Jobs in process** field lists the commit IDs of jobs that are in process.

### *Checking the Batch Commit Status*

**Purpose** Check the commit server queue for the status of the batch commits.



**Action** user@R0> show system commit server queue

```
Pending commits:
  Id: 1005
  Last Modified: Tue Nov  1 23:56:43 2011

Completed commits:
  Id: 1000
  Last Modified: Tue Nov  1 22:46:43 2011
  Status: Successfully committed 1000

  Id: 1002
  Last Modified: Tue Nov  1 22:50:35 2011
  Status: Successfully committed 1002

  Id: 1004
  Last Modified: Tue Nov  1 22:51:48 2011
  Status: Successfully committed 1004

  Id: 1007
  Last Modified: Wed Nov  2 01:08:04 2011
  Status: Successfully committed 1007

  Id: 1009
  Last Modified: Wed Nov  2 01:16:45 2011
  Status: Successfully committed 1009

  Id: 1010
  Last Modified: Wed Nov  2 01:19:25 2011
  Status: Successfully committed 1010

  Id: 1011
  Last Modified: Wed Nov  2 01:28:16 2011
  Status: Successfully committed 1011

Error commits:
  Id: 1008
  Last Modified: Wed Nov  2 01:08:18 2011
  Status: Error while committing 1008
```

**Meaning** **Pending commits** displays commit jobs that are added to the commit queue but are not committed yet. **Completed commits** displays the list of commit jobs that are successful. **Error commits** are commits that failed because of an error.

#### *Viewing the Patch Files in a Batch Commit Job*

**Purpose** View the timestamps, patch files, and the status of each of the commit jobs. Patch files show the configuration changes that occur in each commit operation that is added to the batch commit queue.

**Action** 1. Issue the **show system commit server queue patch** command to view the patches for all commit operations.

```
user@R0> show system commit server queue patch
Pending commits:
  none
```

## Completed commits:

```
Id: 1000
Last Modified: Tue Nov  1 22:46:43 2011
Status: Successfully committed 1000
```

## Patch:

```
[edit groups]
  rel { ... }
+ GRP-DHCP-POOL-NOACCESS {
+   access {
+     address-assignment {
+       pool <*> {
+         family inet {
+           dhcp-attributes {
+             maximum-lease-time 300;
+             grace-period 300;
+             domain-name verizon.net;
+             name-server {
+               4.4.4.1;
+               4.4.4.2;
+             }
+           }
+         }
+       }
+     }
+   }
+ }
```

```
Id: 1002
Last Modified: Tue Nov  1 22:50:35 2011
Status: Successfully committed 1002
```

## Patch:

```
[edit]
+ snmp {
+   community abc;
+ }
```

```
Id: 1010
Last Modified: Wed Nov  2 01:19:25 2011
Status: Successfully committed 1010
```

## Patch:

```
[edit system syslog]
  file test { ... }
+ file j {
+   any any;
+ }
```

## Error commits:

```
Id: 1008
Last Modified: Wed Nov  2 01:08:18 2011
Status: Error while committing 1008
```

## Patch:

```
[edit system]
+ radius-server {
+   10.1.1.1 port 222;
+ }
```

The output shows the changes in configuration for each commit job ID.

- To view the patch for a specific commit job ID, issue the **show system commit server queue patch id <id-number>** command.

```
user@R0> show system commit server queue patch id 1000
```

```
Completed commits:
```

```
Id: 1000
```

```
Last Modified: Tue Nov 1 22:46:43 2011
```

```
Status: Successfully committed 1000
```

```
Patch:
```

```
[edit system]
```

```
+ radius-server {
```

```
+   192.168.69.162 secret teH.bTc/RVbPM;
```

```
+   192.168.64.10 secret teH.bTc/RVbPM;
```

```
+   192.168.60.52 secret teH.bTc/RVbPM;
```

```
+   192.168.60.55 secret teH.bTc/RVbPM;
```

```
+   192.168.4.240 secret teH.bTc/RVbPM;
```

```
+ }
```

**Meaning** The output shows the patch created for a commit job. The + or - sign indicates the changes in the configuration for a specific commit job.

### *Viewing the Trace Files for Batch Commit Operations*

**Purpose** View the trace files for batch commit operations. You can use the trace files for troubleshooting purposes.

- Action** • Issue the **file show /var/log/<filename>** command to view all entries in the log file.

```
user@R0> file show /var/log/commitd_nov
```

The output shows commit server event logs and other logs for batch commits.

```
Nov 1 22:46:43 Successfully committed 1000
```

```
Nov 1 22:46:43 pausing after commit for 0 seconds
```

```
...
```

```
Nov 1 22:46:43 Done working on queue
```

```
...
```

```
Nov 1 22:47:17 maximum-aggregate-pool = 5
```

```
Nov 1 22:47:17 maximum-entries= 0
```

```
Nov 1 22:47:17 asynchronous-prompt = no
```

```
Nov 1 22:47:17 commit-interval = 0
```

```
Nov 1 22:47:17 days-to-keep-error-logs = -1
```

```
...
```

```
Nov 1 22:47:17 Added to commit queue request-id: 1001
```

```
Nov 1 22:47:17 Commit server status=running
```

```
Nov 1 22:47:17 No need to pause
```

```
...
```

```
Nov 1 22:47:18 Error while committing 1001
```

```
Nov 1 22:47:18 doing rollback
```

```
...
```

- To view log entries only for successful batch commit operations, issue the **file show /var/log/<filename>** command with the **| match committed** pipe option.

```
user@R0> file show /var/log/commitd_nov | match committed
```

The output shows batch commit job IDs for successful commit operations.

```
Nov 1 22:46:43 Successfully committed 1000
Nov 1 22:50:35 Successfully committed 1002
Nov 1 22:51:48 Successfully committed 1004
Nov 2 01:08:04 Successfully committed 1007
Nov 2 01:16:45 Successfully committed 1009
Nov 2 01:19:25 Successfully committed 1010
Nov 2 01:28:16 Successfully committed 1011
```

- To view log entries only for failed batch commit operations, issue the **file show** `/var/log/<filename>` command with the **| match "Error while"** pipe option.

```
user@R0> file show /var/log/commitd_nov | match "Error while"
```

The output shows commit job IDs for failed commit operations.

```
Nov 1 22:47:18 Error while committing 1001
Nov 1 22:51:10 Error while committing 1003
Nov 1 22:52:15 Error while committing 1005
...
```

- To view log entries only for commit server events, issue the **file show** `/var/log/<filename>` command with the **| match "commit server"** pipe option.

```
user@R0> file show /var/log/commitd_nov | match "commit server"
```

The output shows commit server event logs.

```
Nov 1 22:46:39 Commit server status=running
Nov 1 22:46:39 Commit server jobs=1000
Nov 1 22:46:43 Commit server status=not running
Nov 1 22:46:43 Commit server jobs=
Nov 1 22:47:17 Commit server status=running
Nov 1 22:47:18 Commit server jobs=1001
Nov 1 22:47:18 2 errors reported by commit server
Nov 1 22:47:18 Commit server status=not running
Nov 1 22:47:18 Commit server jobs=
Nov 1 22:50:31 Commit server status=running
Nov 1 22:50:31 Commit server jobs=1002
Nov 1 22:50:35 Commit server status=not running
Nov 1 22:50:35 Commit server jobs=
Nov 1 22:51:09 Commit server status=running
Nov 1 22:51:10 Commit server jobs=1003
Nov 1 22:51:10 2 errors reported by commit server
Nov 1 22:51:10 Commit server status=not running
...
```

## CHAPTER 12

# Loading a Junos OS Configuration

- [Loading a Configuration from a File on page 129](#)
- [Examples: Loading a Configuration from a File on page 131](#)

## Loading a Configuration from a File

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

You can create a file, copy the file to the local router, and then load the file into the CLI. After you have loaded the file, you can commit it to activate the configuration on the router, or you can edit the configuration interactively using the CLI and commit it at a later time.

You can also create a configuration while typing at the terminal and then load it. Loading a configuration from the terminal is generally useful when you are cutting existing portions of the configuration and pasting them elsewhere in the configuration.

To load an existing configuration file that is located on the router, use the **load** configuration mode command:

```
[edit]
user@host# load (factory-default | merge | override | patch | replace | set | update)
          filename <relative>
```

For information about specifying the filename, see [“Specifying Filenames and URLs” on page 219](#).

To load a configuration from the terminal, use the following version of the **load** configuration mode command. Type ^D to end input.

```
[edit]
user@host# load (factory-default | merge | override | patch | replace | set | update)
          terminal <relative>
```

To replace an entire configuration, specify the **override** option at any level of the hierarchy.

An override operation discards the current candidate configuration and loads the configuration in **filename** or the one that you type at the terminal. When you use the **override** option and commit the configuration, all system processes reparse the configuration. For an example, see [Figure 8 on page 131](#).

To replace portions of a configuration, specify the **replace** option. For this operation to work, you must include **replace:** tags in the file or configuration you type at the terminal. The software searches for the **replace:** tags, deletes the existing statements of the same name, if any, and replaces them with the incoming configuration. If there is no existing statement of the same name, the **replace** operation adds to the configuration the statements marked with the **replace:** tag. For an example, see [Figure 9 on page 132](#).

To replace only the configuration that has changed, specify the **update** option at any level of the hierarchy. An update operation compares the current configuration and the current candidate configuration, and loads only the changes between these configurations in *filename* or the one that you type at the terminal. When you use the update operation and commit the configuration, Junos OS attempts to notify the smallest set of system processes that are affected by the configuration change.

To combine the current configuration and the configuration in *filename* or the one that you type at the terminal, specify the **merge** option. A merge operation is useful when you are adding a new section to an existing configuration. If the existing configuration and the incoming configuration contain conflicting statements, the statements in the incoming configuration override those in the existing configuration. For an example, see [Figure 10 on page 132](#).

To change part of the configuration with a patch file and mark only those parts as changed, specify the **patch** option. For an example, see [Figure 11 on page 133](#).

To use the **merge**, **replace**, **set**, or **update** option without specifying the full hierarchy level, specify the **relative** option. For example:

```
[edit system]
user@host# show static-host-mapping
bob sysid 987.654.321ab
[edit system]
user@host# load replace terminal relative
[Type ^D at a new line to end input]
replace: static-host-mapping {
  bob sysid 0123.456.789bc;
}
load complete
[edit system]
user@host# show static-host-mapping
bob sysid 0123.456.789bc;
```

If, in an override or merge operation, you specify a file or type text that contains **replace:** tags, the **replace:** tags are ignored and the **override** or **merge** operation is performed.

If you are performing a **replace** operation and the file you specify or text you type does not contain any **replace:** tags, the **replace** operation is effectively equivalent to a **merge** operation. This might be useful if you are running automated scripts and cannot know in advance whether the scripts need to perform a **replace** or a **merge** operation. The scripts can use the **replace** operation to cover either case.

To load a configuration that contains the **set** configuration mode command, specify the **set** option. This option executes the configuration instructions line by line as they are

stored in a file or from a terminal. The instructions can contain any configuration mode command, such as **set**, **edit**, **exit**, and **top**. For an example, see [Figure 12 on page 133](#).

To copy a configuration file from another network system to the local router, you can use the SSH and Telnet utilities.



**NOTE:** If you are using Junos OS in a Common Criteria environment, system log messages are created whenever a secret attribute is changed (for example, password changes or changes to the RADIUS shared secret). These changes are logged during the following configuration load operations:

- load merge
- load replace
- load override
- load update

For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS*.

- Related Documentation
- [Examples: Loading a Configuration from a File on page 131](#)

### Examples: Loading a Configuration from a File

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

Figure 8: Overriding the Current Configuration

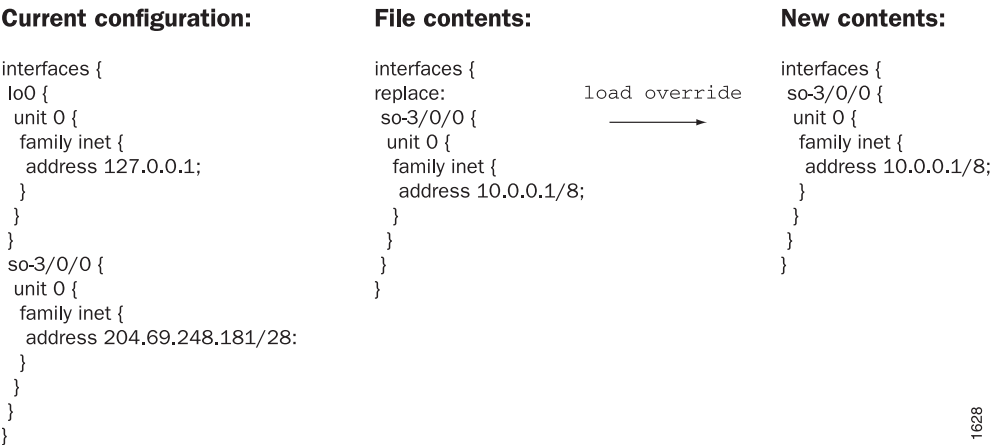 


Figure 9: Using the replace Option



Figure 10: Using the merge Option

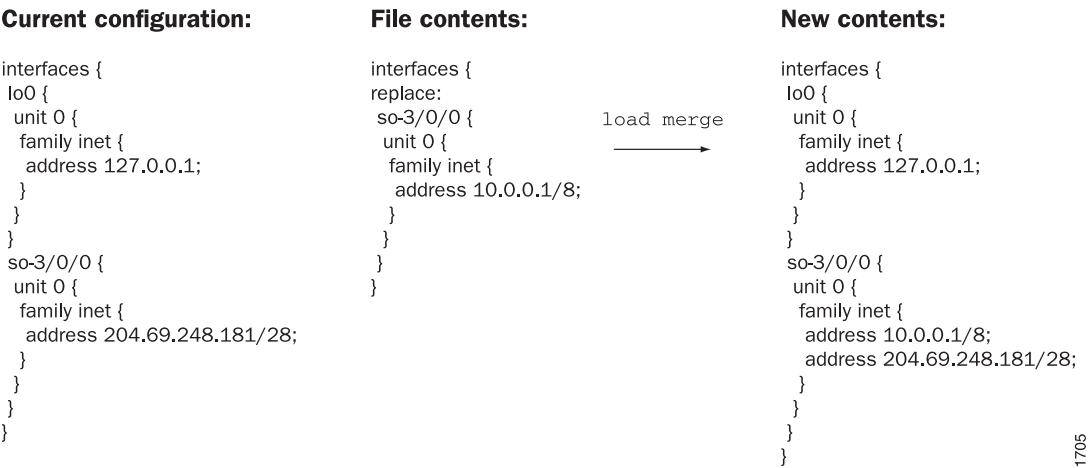




 Figure 11: Using a Patch File


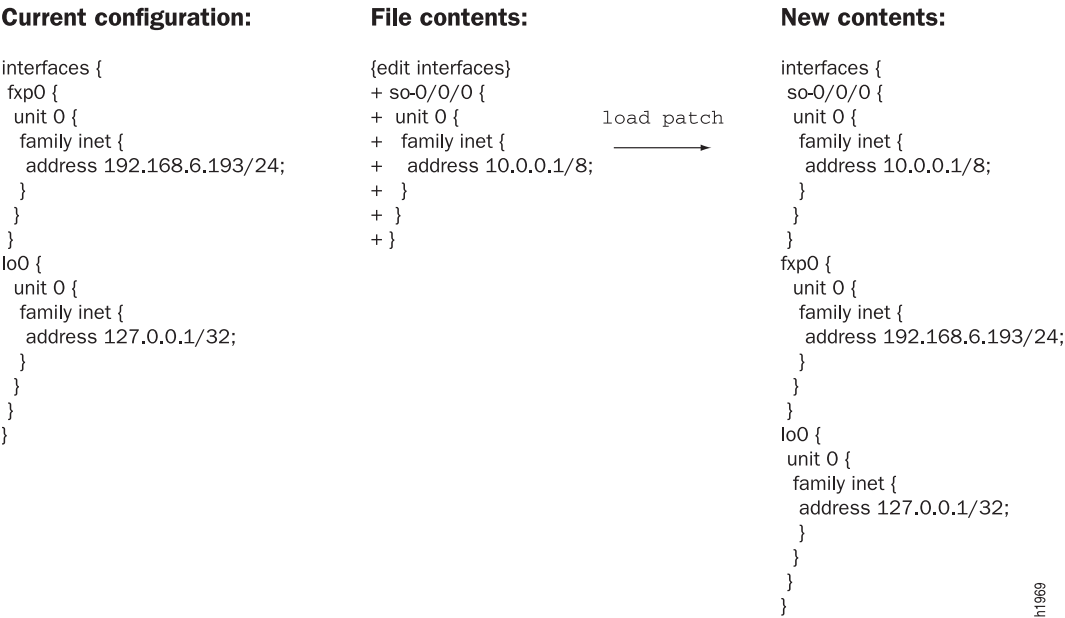


Figure 12: Using the set Option

 

Related Documentation

- [Loading a Configuration from a File on page 129](#)

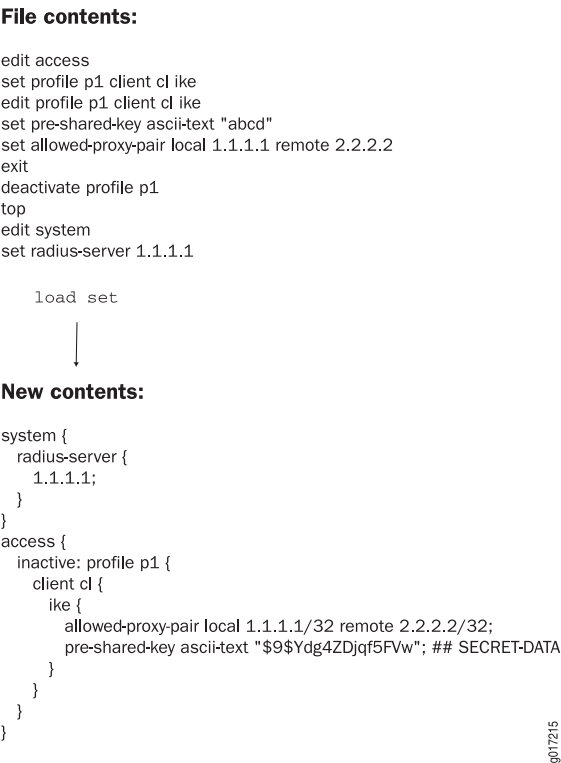

# Synchronizing the Junos OS Configuration

- [Synchronizing Routing Engines on page 135](#)

## Synchronizing Routing Engines

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

If your router has two Routing Engines, you can manually direct one Routing Engine to synchronize its configuration with the other by issuing the **commit synchronize** command. The Routing Engine on which you execute this command (requesting Routing Engine) copies and loads its candidate configuration to the other (responding Routing Engine). Both Routing Engines then perform a syntax check on the candidate configuration file being committed. If no errors are found, the configuration is activated and becomes the current operational configuration on both Routing Engines.

The **commit synchronize** command does not work if the responding Routing Engine has uncommitted configuration changes. However, you can enforce commit synchronization on the Routing Engines by using the **force** option. When you issue the **commit synchronize** command with the **force** option from one Routing Engine, the configuration sessions on the other Routing Engine will be terminated and its configuration synchronized with that on the Routing Engine from which you issued the command.



**NOTE:** We recommend that you use the **force** option only if you are unable to resolve the issues that caused the **commit synchronize** command to fail.

For example, if you are logged in to **re1** (requesting Routing Engine) and you want **re0** (responding Routing Engine) to have the same configuration as **re1**, issue the **commit synchronize** command on **re1**. **re1** copies and loads its candidate configuration to **re0**. Both Routing Engines then perform a syntax check on the candidate configuration file being committed. If no errors are found, **re1**'s candidate configuration is activated and becomes the current operational configuration on both Routing Engines.



**NOTE:** When you issue the `commit synchronize` command, you must use the groups `re0` and `re1`. For information about how to use the `apply-groups` statement, see [“Applying a Junos Configuration Group” on page 139](#).

The responding Routing Engine must be running Junos OS Release 5.0 or later.

To synchronize a Routing Engine's current operational configuration file with the other, log in to the Routing Engine from which you want to synchronize and issue the `commit synchronize` command:

```
[edit]
user@host# commit synchronize
commit complete
[edit]
user@host#
```



**NOTE:** You can also add the `commit synchronize` statement at the `[edit system]` hierarchy level so that a `commit` command automatically invokes a `commit synchronize` command by default. .

To enforce a `commit synchronize` on the Routing Engines, log in to the Routing Engine from which you want to synchronize and issue the `commit synchronize` command with the `force` option:

```
[edit]
user@host# commit synchronize force
re0:
re1:
commit complete
re0:
commit complete
[edit]
user@host#
```



**NOTE:**

- If you have nonstop routing enabled on your router, you must enter the `commit synchronize` command from the master Routing Engine after you make any changes to the configuration. If you enter this command on the backup Routing Engine, the Junos OS displays a warning and commits the configuration.
- Starting with Junos OS Release 9.3, accounting of backup Routing Engine events or operations is not supported on accounting servers such as TACACS+ or RADIUS. Accounting is only supported for events or operations on a master Routing Engine.

## CHAPTER 14

# Creating and Applying Junos OS Configuration Groups

- [Creating a Junos Configuration Group on page 137](#)
- [Applying a Junos Configuration Group on page 139](#)
- [Example: Configuring and Applying Junos Configuration Groups on page 140](#)
- [Example: Creating and Applying Configuration Groups on a TX Matrix Router on page 142](#)
- [Disabling Inheritance of a Junos OS Configuration Group on page 143](#)
- [Using Wildcards with Configuration Groups on page 145](#)
- [Example: Using Conditions to Apply Configuration Groups on page 148](#)
- [Example : Configuring Sets of Statements with Configuration Groups on page 151](#)
- [Example: Configuring Interfaces Using Junos OS Configuration Groups on page 152](#)
- [Example: Configuring a Consistent IP Address for the Management Interface on page 154](#)
- [Example: Configuring Peer Entities on page 155](#)
- [Establishing Regional Configurations on page 157](#)
- [Selecting Wildcard Names on page 159](#)
- [Using Junos OS Defaults Groups on page 160](#)
- [Example: Referencing the Preset Statement From the Junos defaults Group on page 161](#)
- [Example: Viewing Default Statements That Have Been Applied to the Configuration on page 162](#)

## Creating a Junos Configuration Group

---

**Supported Platforms**    EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

To create a configuration group, include the **groups** statement at the **[edit]** hierarchy level:

```
[edit]
groups {
  group-name {
    configuration-data;
  }
  lccn-re0 {
```

```
    configuration-data;
  }
  lccn-re1 {
    configuration-data;
  }
}
```

**group-name** is the name of a configuration group. You can configure more than one configuration group by specifying multiple **group-name** statements. However, you cannot use the prefix **junos-** in a group name because it is reserved for use by Junos OS. Similarly, the configuration group **juniper-ais** is reserved exclusively for Juniper Advanced Insight Solutions (AIS)-related configuration. For more information on the **juniper-ais** configuration group, see the *Juniper Networks Advanced Insight Solutions Guide*.

One reason for the naming restriction is a configuration group called **junos-defaults**. This preset configuration group is applied to the configuration automatically. You cannot modify or remove the **junos-defaults** configuration group. For more information about the Junos default configuration group, see [“Using Junos OS Defaults Groups” on page 160](#).

On routers that support multiple Routing Engines, you can also specify two special group names:

- **re0**—Configuration statements applied to the Routing Engine in slot 0.
- **re1**—Configuration statements applied to the Routing Engine in slot 1.

The configuration specified in group **re0** is only applied if the current Routing Engine is in slot 0; likewise, the configuration specified in group **re1** is only applied if the current Routing Engine is in slot 1. Therefore, both Routing Engines can use the same configuration file, each using only the configuration statements that apply to it. Each **re0** or **re1** group contains at a minimum the configuration for the hostname and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group also should contain the configuration for the backup router and static routes.

In addition, the TX Matrix router supports group names for the Routing Engines in each T640 router attached to the routing matrix. Providing special group names for all Routing Engines in the routing matrix allows you to configure the individual Routing Engines in each T640 router differently. Parameters that are not configured at the **[edit groups]** hierarchy level apply to all Routing Engines in the routing matrix.

**configuration-data** contains the configuration statements applied elsewhere in the configuration with the **apply-groups** statement. To have a configuration inherit the statements in a configuration group, include the **apply-groups** statement. For information about the **apply-groups** statement, see [“Applying a Junos Configuration Group” on page 139](#).

The group names for Routing Engines on the TX Matrix router have the following formats:

- **lccn-re0**—Configuration statements applied to the Routing Engine in slot 0 in a specified T640 router.
- **lccn-re1**—Configuration statements applied to the Routing Engine in slot 1 in a specified T640 router.

*n* identifies the T640 router and can be from 0 through 3. For example, to configure Routing Engine 1 properties for **lcc3**, you include statements at the **[edit groups lcc3-re1]** hierarchy level..



**NOTE:** The management Ethernet interface used for the TX Matrix Plus router, T1600 routers in a routing matrix, and PTX Series Packet Transport Switches, is **em0**. Junos OS automatically creates the router's management Ethernet interface, **em0**.

#### Related Documentation

- [Applying a Junos Configuration Group on page 139](#)
- [Using Junos OS Defaults Groups on page 160](#)
- [Understanding the Junos Configuration Groups on page 55](#)
- [Disabling Inheritance of a Junos OS Configuration Group on page 143](#)
- [Using Wildcards with Configuration Groups on page 145](#)
- [Example : Configuring Sets of Statements with Configuration Groups on page 151](#)

## Applying a Junos Configuration Group

**Supported Platforms** [EX Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To have a Junos configuration inherit the statements from a configuration group, include the **apply-groups** statement:

```
apply-groups [ group-names ];
```

If you specify more than one group name, list them in order of inheritance priority. The configuration data in the first group takes priority over the data in subsequent groups.

For routers that support multiple Routing Engines, you can specify **re0** and **re1** group names. The configuration specified in group **re0** is only applied if the current Routing Engine is in slot 0; likewise, the configuration specified in group **re1** is only applied if the current Routing Engine is in slot 1. Therefore, both Routing Engines can use the same configuration file, each using only the configuration statements that apply to it. Each **re0** or **re1** group contains at a minimum the configuration for the hostname and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group also should contain the configuration for the backup router and static routes.



**NOTE:** The management Ethernet interface used for the TX Matrix Plus router, T1600 routers in a routing matrix, and PTX Series Packet Transport Switches, is **em0**.

You can include only one **apply-groups** statement at each specific level of the configuration hierarchy. The **apply-groups** statement at a specific hierarchy level lists the configuration groups to be added to the containing statement's list of configuration groups.

Values specified at the specific hierarchy level override values inherited from the configuration group.

Groups listed in nested **apply-groups** statements take priority over groups in outer statements. In the following example, the BGP neighbor **10.0.0.1** inherits configuration data from group **one** first, then from groups **two** and **three**. Configuration data in group **one** overrides data in any other group. Data from group **ten** is used only if a statement is not contained in any other group.

```
apply-groups [ eight nine ten ];
protocols {
  apply-groups seven;
  bgp {
    apply-groups [ five six ];
    group some-bgp-group {
      apply-groups four;
      neighbor 10.0.0.1 {
        apply-groups [ one two three ];
      }
    }
  }
}
```

When you configure a group defined for the root level—that is, in the default logical system—you cannot successfully apply that group to a nondefault logical system under the **[edit logical-systems *logical-system-name*]** hierarchy level. Although the router accepts the commit if you apply the group, the configuration group does not take effect for the nondefault logical system. You can instead create an additional configuration group at the root level and apply it within the logical system. Alternatively, you can modify the original group so that it includes configuration for both the default and nondefault logical system hierarchy levels.

#### Related Documentation

- [Example: Configuring and Applying Junos Configuration Groups on page 140](#)
- [Disabling Inheritance of a Junos OS Configuration Group on page 143](#)
- [Creating a Junos Configuration Group on page 137](#)
- [Using Wildcards with Configuration Groups on page 145](#)
- [Example : Configuring Sets of Statements with Configuration Groups on page 151](#)

---

## Example: Configuring and Applying Junos Configuration Groups

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

In this example, the SNMP configuration is divided between the group **basic** and the normal configuration hierarchy.



There are a number of advantages to placing the system-specific configuration (SNMP contact) into a configuration group and thus separating it from the normal configuration hierarchy—the user can replace (using the **load replace** command) either section without discarding data from the other.

In addition, setting a contact for a specific box is now possible because the group data would be hidden by the router-specific data.

```
[edit]
groups {
  basic { # User-defined group name
    snmp { # This group contains some SNMP data
      contact "My Engineering Group";
      community BasicAccess {
        authorization read-only;
      }
    }
  }
}
apply-groups basic; # Enable inheritance from group "basic"
snmp { # Some normal (non-group) configuration
  location "West of Nowhere";
}
```

This configuration is equivalent to the following:

```
[edit]
snmp {
  location "West of Nowhere";
  contact "My Engineering Group";
  community BasicAccess {
    authorization read-only;
  }
}
```

For information about how to disable inheritance of a configuration group, see [“Disabling Inheritance of a Junos OS Configuration Group” on page 143](#).

#### Related Documentation

- [Example: Creating and Applying Configuration Groups on a TX Matrix Router on page 142](#)
- [Example: Configuring Interfaces Using Junos OS Configuration Groups on page 152](#)
- [Example: Configuring Peer Entities on page 155](#)
- [Example: Referencing the Preset Statement From the Junos defaults Group on page 161](#)
- [Example: Viewing Default Statements That Have Been Applied to the Configuration on page 162](#)
- [Example : Configuring Sets of Statements with Configuration Groups on page 151](#)
- [Example: Configuring a Consistent IP Address for the Management Interface on page 154](#)
- [Creating a Junos Configuration Group on page 137](#)

## Example: Creating and Applying Configuration Groups on a TX Matrix Router

**Supported Platforms**    [LN Series](#), [T640](#), [TX Matrix](#)

The following example shows how to configure and apply configuration groups on a TX Matrix Router:

```
[edit]
groups {
  re0 { # Routing Engine 0 on TX Matrix router
    system {
      host-name hostname;
      backup-router ip-address;
    }
    interfaces {
      fxp0 {
        unit 0 {
          family inet {
            address ip-address;
          }
        }
      }
    }
  }
  re1 { # Routing Engine 1 on TX Matrix router
    system {
      host-name hostname;
      backup-router ip-address;
    }
    interfaces {
      fxp0 {
        unit 0 {
          family inet {
            address ip-address;
          }
        }
      }
    }
  }
}
lcc0-re0 { # Routing Engine 0 on T640 router numbered 0
  system {
    host-name hostname;
    backup-router ip-address;
  }
  interfaces {
    fxp0 {
      unit 0 {
        family inet {
          address ip-address;
        }
      }
    }
  }
}
```

```
lcc0-re1 { # Routing Engine 1 on T640 router numbered 0
    system {
        host-name hostname;
        backup-router ip-address;
    }
    interfaces {
        fxp0 {
            unit 0 {
                family inet {
                    address ip-address;
                }
            }
        }
    }
}

apply-groups [ re0 re1 lcc0-re0 lcc0-re1 ];
```

## Related Documentation

- [Example: Configuring and Applying Junos Configuration Groups on page 140](#)
- [Creating a Junos Configuration Group on page 137](#)

## Disabling Inheritance of a Junos OS Configuration Group

## Supported Platforms

EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

To disable inheritance of a configuration group at any level except the top level of the hierarchy, include the **apply-groups-except** statement:

```
apply-groups-except [group-names];
```

This statement is useful when you use the **apply-group** statement at a specific hierarchy level but also want to override the values inherited from the configuration group for a specific parameter.

### Example: Disabling Inheritance on Interface so-1/1/0

In the following example, the **apply-groups** statement is applied globally at the interfaces level. The **apply-groups-except** statement is also applied at interface **so-1/1/0** so that it uses the default values for the **hold-time** and **link-mode** statements.

```
[edit]
groups { # "groups" is a top-level statement
  global { # User-defined group name
    interfaces {
      <*> {
        hold-time down 640;
        link-mode full-duplex;
      }
    }
  }
}
apply-groups global;
interfaces {
  so-1/1/0 {
    apply-groups-except global; # Disables inheritance from group "global"
    # so-1/1/0 uses default value for "hold-time"
```

```
    # and "link-mode"
  }
}
```

For information about applying a configuration group, see ["Applying a Junos Configuration Group" on page 139](#).

Configuration groups can add some confusion regarding the actual values used by the router, because configuration data can be inherited from configuration groups. To view the actual values used by the router, use the **display inheritance** command after the pipe ( | ) in a **show** command. This command displays the inherited statements at the level at which they are inherited and the group from which they have been inherited.

```
[edit]
user@host# show | display inheritance
snmp {
  location "West of Nowhere";
  ##
  ## 'My Engineering Group' was inherited from group 'basic'
  ##
  contact "My Engineering Group";
  ##
  ## 'BasicAccess' was inherited from group 'basic'
  ##
  community BasicAccess {
    ##
    ## 'read-only' was inherited from group 'basic'
    ##
    authorization read-only;
  }
}
```

To display the expanded configuration (the configuration, including the inherited statements) without the ## lines, use the **except** command after the pipe in a **show** command:

```
[edit]
user@host# show | display inheritance | except ##
snmp {
  location "West of Nowhere";
  contact "My Engineering Group";
  community BasicAccess {
    authorization read-only;
  }
}
```



**NOTE:** Using the `display inheritance | except ##` option removes all the lines with `##`. Therefore, you might also not be able to view information about passwords and other important data where `##` is used. To view the complete configuration details with all the information without just the comments marked with `##`, use the `no-comments` option with the `display inheritance` command:

```
[edit]
user@host# show | display inheritance no-comments
snmp {
  location "West of Nowhere";
  contact "My Engineering Group";
  community BasicAccess {
    authorization read-only;
  }
}
```

**Related  
Documentation**

- [Applying a Junos Configuration Group on page 139](#)
- [Understanding the Junos Configuration Groups on page 55](#)

## Using Wildcards with Configuration Groups

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can use wildcards to identify names and allow one statement to provide data for a variety of statements. For example, grouping the configuration of the **sonet-options** statement over all SONET/SDH interfaces or the dead interval for OSPF over all Asynchronous Transfer Mode (ATM) interfaces simplifies configuration files and eases their maintenance.

Using wildcards in normal configuration data is done in a style that is consistent with that used with traditional UNIX shell wildcards. In this style, you can use the following metacharacters:

- Asterisk ( `*` )—Matches any string of characters.
- Question mark ( `?` )—Matches any single character.
- Open bracket ( `[` )—Introduces a character class.
- Close bracket ( `]` )—Indicates the end of a character class. If the close bracket is missing, the open bracket matches a `[` rather than introduce a character class.
- A character class matches any of the characters between the square brackets. Within a configuration group, an interface name that includes a character class must be enclosed in quotation marks.
- Hyphen ( `-` )—Specifies a range of characters.
- Exclamation point ( `!` )—The character class can be complemented by making an exclamation point the first character of the character class. To include a close bracket

[**]**) in a character class, make it the first character listed (after the **!**, if any). To include a minus sign, make it the first or last character listed.

Wildcarding in configuration groups follows the same rules, but any term using a wildcard pattern must be enclosed in angle brackets *<pattern>* to differentiate it from other wildcarding in the configuration file.

```
[edit]
groups {
  sonet-default {
    interfaces {
      <so-*> {
        sonet-options {
          payload-scrambler;
          rfc-2615;
        }
      }
    }
  }
}
```

Wildcard expressions match (and provide configuration data for) existing statements in the configuration that match their expression only. In the previous example, the expression **<so-\*>** passes its **sonet-options** statement to any interface that matches the expression **so-\***.

The following example shows how to specify a range of interfaces:

```
[edit]
groups {
  gigabit-ethernet-interfaces {
    interfaces {
      "<ge-1/2/[5-8]>" {
        description "These interfaces reserved for Customer ABC";
      }
    }
  }
}
```

Angle brackets allow you to pass normal wildcarding through without modification. In any matching within the configuration, whether it is done with or without wildcards, the first item encountered in the configuration that matches is used. In the following example, data from the wildcarded BGP groups is inherited in the order in which the groups are listed. The preference value from **<\*a\*>** overrides the preference in **<\*b\*>**, just as the **p** value from **<\*c\*>** overrides the one from **<\*d\*>**. Data values from any of these groups override the data values from **abcd**.

```
[edit]
user@host# show
groups {
  one {
    protocols {
      bgp {
        group <*a*> {
          preference 1;
        }
      }
    }
  }
}
```

```

    }
    group <*b*> {
        preference 2;
    }
    group <*c*> {
        out-delay 3;
    }
    group <*d*> {
        out-delay 4;
    }
    group abcd {
        preference 10;
        hold-time 10;
        out-delay 10;
    }
}
}
}
}
protocols {
    bgp {
        group abcd {
            apply-groups one;
        }
    }
}
[edit]
user@host# show | display inheritance
protocols {
    bgp {
        group abcd {
            ##
            ## '1' was inherited from group 'one'
            ##
            preference 1;
            ##
            ## '10' was inherited from group 'one'
            ##
            hold-time 10;
            ##
            ## '3' was inherited from group 'one'
            ##
            out-delay 3;
        }
    }
}

```

**Related  
Documentation**

- [Selecting Wildcard Names on page 159](#)
- [Applying a Junos Configuration Group on page 139](#)
- [Creating a Junos Configuration Group on page 137](#)
- [Understanding the Junos Configuration Groups on page 55](#)

## Example: Using Conditions to Apply Configuration Groups

---

**Supported Platforms** [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

- [Using Conditions to Apply Configuration Groups Overview on page 148](#)
- [Example: Configuring Conditions for Applying Configuration Groups on page 148](#)

## Using Conditions to Apply Configuration Groups Overview

**Supported Platforms** [M Series](#), [MX Series](#), [T Series](#)

You can use the **when** statement at the **[edit groups group-name]** hierarchy level to define conditions under which a configuration group should be applied.

You can configure a group to be applied based on the type of **chassis**, **model**, or **routing-engine**, virtual chassis **member**, cluster **node**, and start and optional end **time** of day or date.

For example, you could use the **when** statement to create a generic configuration group for each type of node and then apply the configuration based on certain node properties, such as chassis or model.

## Example: Configuring Conditions for Applying Configuration Groups

**Supported Platforms** [M Series](#), [MX Series](#), [QFX Series](#), [T Series](#)

This example shows how to configure conditions under which a specified configuration group is to be applied.

- [Requirements on page 148](#)
- [Overview on page 148](#)
- [Configuration on page 149](#)

### Requirements

---

No special configuration beyond device initialization is required before you configure this example.

### Overview

---

You can configure your group configuration data at the **[edit groups group-name]** hierarchy level, then use the **when** statement to have the group applied based on conditions including: type of **chassis**, **model**, or **routing-engine**, virtual chassis **member**, cluster **node**, and start and optional end **time** of day or date.

If you specify multiple conditions in a single configuration group, all conditions must be met before the configuration group is applied.

You can specify the start time or the time duration for the configuration group to be applied. If only the start time is specified, the configuration group is applied at the specified time and it remains in effect until the time is changed. If the end time is specified, then



on each day, the applied configuration group is started and stopped at the specified times.

This example sets conditions in a configuration group, **test1**, such that this group is applied only when all of the following conditions are met: the router is a model MX240 router with chassis type LCC0, with a Routing Engine operating as RE0, is member0 of the virtual chassis on node0, and the configuration group will only be in effect from 9:00 a.m. until 5:00 p.m. each day. The configuration data has not yet been added to the **test1** group in this example.

### Configuration

#### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set groups test1 when model mx240
set groups test1 when chassis lcc0
set groups test1 when routing-engine re0
set groups test1 when member member0
set groups test1 when node node0
set groups test1 when time 9 to 5
```

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure conditions for configuration group **test1**:

1. Set the condition that identifies the model MX240 router.

```
[edit groups test1 when]
user@host# set model mx240
```

2. Set the condition that identifies the chassis type as **LCC0**.

```
[edit groups test1 when]
user@host# set chassis lcc0
```

3. Set the condition that identifies the Routing Engine operating as **RE0**.

```
[edit groups test1 when]
user@host# set routing-engine re0
```

4. Set the condition that identifies the virtual chassis **member0**.

```
[edit groups test1 when]
user@host# set member member0
```

5. Set the condition that identifies the cluster **node0**.

```
[edit groups test1 when]
user@host# set node node0
```

6. Set the condition that applies the group only between the hours of 9:00 a.m. and 5:00 p.m. daily.

```
[edit groups test1 when]
user@host# set time 9 to 5
```



**NOTE:** The syntax for specifying the time is: `time <start-time> [to <end-time>]` using the time format `yyyy-mm-dd.hh:mm`, `hh:mm`, or `hh`.

7. Commit the configuration.

**Results** From configuration mode, confirm your configuration by entering the **show groups** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@host# show groups test1
when {
  time 9 to 5;
  chassis lcc0;
  model mx240;
  routing-engine re0;
  member member0;
  node node0;
}
```

#### Verification

Confirm that the configuration is working properly.

- [Checking Group Inheritance with Conditional Data on page 150](#)

#### Checking Group Inheritance with Conditional Data

**Purpose** Verify that conditional data from a configuration group is inherited when applied.

**Action** The **show | display inheritance** operational command can be issued with the **when** data to display the conditional inheritance. Using this example, you could issue one of these commands to determine that the conditional data was inherited:

```
user@host> show | display inheritance when model mx240
user@host> show | display inheritance when chassis lcc0
user@host> show | display inheritance when routing-engine re0
user@host> show | display inheritance when member member0
user@host> show | display inheritance when node node0
user@host> show | display inheritance when time 9 to 5
```

- Related Documentation**
- [Understanding the Junos Configuration Groups on page 55](#)
  - [Creating a Junos Configuration Group on page 137](#)
  - [Applying a Junos Configuration Group on page 139](#)

## Example : Configuring Sets of Statements with Configuration Groups

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

When sets of statements exist in configuration groups, all values are inherited. For example:

```
[edit]
user@host# show
groups {
  basic {
    snmp {
      interface so-1/1/1.0;
    }
  }
}
apply-groups basic;
snmp {
  interface so-0/0/0.0;
}
[edit]
user@host# show | display inheritance
snmp {
  ##
  ## 'so-1/1/1.0' was inherited from group 'basic'
  ##
  interface [ so-0/0/0.0 so-1/1/1.0 ];
}
```

For sets that are not displayed within brackets, all values are also inherited. For example:

```
[edit]
user@host# show
groups {
  worldwide {
    system {
      name-server {
        10.0.0.100;
        10.0.0.200;
      }
    }
  }
}
apply-groups worldwide;
system {
  name-server {
    10.0.0.1;
    10.0.0.2;
  }
}
[edit]
user@host# show | display inheritance
system {
  name-server {
    ##
```

```
    ## '10.0.0.100' was inherited from group 'worldwide'
    ##
    10.0.0.100;
    ##
    ## '10.0.0.200' was inherited from group 'worldwide'
    ##
    10.0.0.200;
    10.0.0.1;
    10.0.0.2;
  }
}
```

- Related Documentation**
- [Understanding the Junos Configuration Groups on page 55](#)
  - [Creating a Junos Configuration Group on page 137](#)
  - [Applying a Junos Configuration Group on page 139](#)

---

## Example: Configuring Interfaces Using Junos OS Configuration Groups

---

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can use configuration groups to separate the common interface media parameters from the interface-specific addressing information. The following example places configuration data for ATM interfaces into a group called **atm-options**:

```
[edit]
user@host# show
groups {
  atm-options {
    interfaces {
      <at-*> {
        atm-options {
          vpi 0 maximum-vcs 1024;
        }
        unit <*> {
          encapsulation atm-snap;
          point-to-point;
          family iso;
        }
      }
    }
  }
}
apply-groups atm-options;
interfaces {
  at-0/0/0 {
    unit 100 {
      vci 0.100;
      family inet {
        address 10.0.0.100/30;
      }
    }
    unit 200 {
      vci 0.200;
```

```

        family inet {
            address 10.0.0.200/30;
        }
    }
}
[edit]
user@host# show | display inheritance
interfaces {
  at-0/0/0 {
    ##
    ## "atm-options" was inherited from group "atm-options"
    ##
    atm-options {
      ##
      ## "1024" was inherited from group "atm-options"
      ##
      vpi 0 maximum-vcs 1024;
    }
    unit 100 {
      ##
      ## "atm-snap" was inherited from group "atm-options"
      ##
      encapsulation atm-snap;
      ##
      ## "point-to-point" was inherited from group "atm-options"
      ##
      point-to-point;
      vci 0.100;
      family inet {
        address 10.0.0.100/30;
      }
      ##
      ## "iso" was inherited from group "atm-options"
      ##
      family iso;
    }
    unit 200 {
      ##
      ## "atm-snap" was inherited from group "atm-options"
      ##
      encapsulation atm-snap;
      ##
      ## "point-to-point" was inherited from group "atm-options"
      ##
      point-to-point;
      vci 0.200;
      family inet {
        address 10.0.0.200/30;
      }
      ##
      ## "iso" was inherited from group "atm-options"
      ##
      family iso;
    }
  }
}

```

```
}
[edit]
user@host# show | display inheritance | except ##
interfaces {
  at-0/0/0 {
    atm-options {
      vpi 0 maximum-vcs 1024;
    }
    unit 100 {
      encapsulation atm-snap;
      point-to-point;
      vci 0.100;
      family inet {
        address 10.0.0.100/30;
      }
      family iso;
    }
    unit 200 {
      encapsulation atm-snap;
      point-to-point;
      vci 0.200;
      family inet {
        address 10.0.0.200/30;
      }
      family iso;
    }
  }
}
```

**Related  
Documentation**

- [Understanding the Junos Configuration Groups on page 55](#)
- [Creating a Junos Configuration Group on page 137](#)
- [Interface Naming Conventions Used in the Junos OS Operational Commands on page 211](#)
- [Example: Configuring a Consistent IP Address for the Management Interface on page 154](#)

---

## Example: Configuring a Consistent IP Address for the Management Interface

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

On routers with multiple Routing Engines, each Routing Engine is configured with a separate IP address for the management interface (**fxp0**). To access the master Routing Engine, you must know which Routing Engine is active and use the appropriate IP address.

Optionally, for consistent access to the master Routing Engine, you can configure an additional IP address and use this address for the management interface regardless of which Routing Engine is active. This additional IP address is active only on the management interface for the master Routing Engine. During switchover, the address moves to the new master Routing Engine.

In the following example, address **10.17.40.131** is configured for both Routing Engines and includes a **master-only** statement. With this configuration, the **10.17.40.131** address is active only on the master Routing Engine. The address remains consistent regardless of

which Routing Engine is active. Address **10.17.40.132** is assigned to **fxp0** on **re0**, and **10.17.40.133** is assigned to **fxp0** on **re1**.

```
[edit groups re0 interfaces fxp0]
unit 0 {
  family inet {
    address 10.17.40.131/25 {
      master-only;
    }
    address 10.17.40.132/25;
  }
}
[edit groups re1 interfaces fxp0]
unit 0 {
  family inet {
    address 10.17.40.131/25 {
      master-only;
    }
    address 10.17.40.133/25;
  }
}
```

This feature is available on all routers that include dual Routing Engines. On a routing matrix composed of the TX Matrix router, this feature is applicable to the switch-card chassis (SCC) only. Likewise, on a routing matrix composed of a TX Matrix Plus router, this feature is applicable to the switch-fabric chassis (SFC) only.



#### NOTE:

- If you configure the same IP address for a management interface or internal interface such as **fxp0** and an external physical interface such as **ge-0/0/1**, when graceful Routing Engine switchover (GRES) is enabled, the CLI displays an appropriate commit error message that identical addresses have been found on the private and public interfaces. In such cases, you must assign unique IP addresses for the two interfaces that have duplicate addresses.
- The management Ethernet interface used for the TX Matrix Plus router, T1600 routers in a routing matrix, and PTX Series Packet Transport Switches, is **em0**. Junos OS automatically creates the router's management Ethernet interface, **em0**.

#### Related Documentation

- [Understanding the Junos Configuration Groups on page 55](#)
- [Creating a Junos Configuration Group on page 137](#)
- [Example: Configuring Interfaces Using Junos OS Configuration Groups on page 152](#)

## Example: Configuring Peer Entities

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

In this example, we create a group **some-isp** that contains configuration data relating to another Internet service provider (ISP). We can then insert **apply-group** statements at any point to allow any location in the configuration hierarchy to inherit this data.

```
[edit]
user@host# show
groups {
  some-isp {
    interfaces {
      <xe-*> {
        gigether-options {
          flow-control;
        }
      }
    }
    protocols {
      bgp {
        group <*> {
          neighbor <*> {
            remove-private;
          }
        }
      }
      pim {
        interface <*> {
          version 1;
        }
      }
    }
  }
}
interfaces {
  xe-0/0/0 {
    apply-groups some-isp;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
protocols {
  bgp {
    group main {
      neighbor 10.254.0.1 {
        apply-groups some-isp;
      }
    }
  }
  pim {
    interface xe-0/0/0.0 {
      apply-groups some-isp;
    }
  }
}
```



```

[edit]
user@host# show | display inheritance
interfaces {
  xe-0/0/0 {
    ##
    ## "gigether-options" was inherited from group "some-isp"
    ##
    gigether-options {
      ##
      ## "flow-control" was inherited from group "some-isp"
      ##
      flow-control;
    }
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
protocols {
  bgp {
    group main {
      neighbor 10.254.0.1 {
        ##
        ## "remove-private" was inherited from group "some-isp"
        ##
        remove-private;
      }
    }
  }
}
pim {
  interface xe-0/0/0.0 {
    ##
    ## "l" was inherited from group "some-isp"
    ##
    version 1;
  }
}
}

```

- Related Documentation**
- [Understanding the Junos Configuration Groups on page 55](#)
  - [Creating a Junos Configuration Group on page 137](#)
  - [Establishing Regional Configurations on page 157](#)

## Establishing Regional Configurations

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

In this example, one group is populated with configuration data that is standard throughout the company, while another group contains regional deviations from this standard:

```
[edit]
user@host# show
groups {
  standard {
    interfaces {
      <t3-*> {
        t3-options {
          compatibility-mode larscom subrate 10;
          idle-cycle-flag ones;
        }
      }
    }
  }
  northwest {
    interfaces {
      <t3-*> {
        t3-options {
          long-buildout;
          compatibility-mode kentrox;
        }
      }
    }
  }
}
apply-groups standard;
interfaces {
  t3-0/0/0 {
    apply-groups northwest;
  }
}
[edit]
user@host# show | display inheritance
interfaces {
  t3-0/0/0 {
    ##
    ## "t3-options" was inherited from group "northwest"
    ##
    t3-options {
      ##
      ## "long-buildout" was inherited from group "northwest"
      ##
      long-buildout;
      ##
      ## "kentrox" was inherited from group "northwest"
      ##
      compatibility-mode kentrox;
      ##
      ## "ones" was inherited from group "standard"
      ##
      idle-cycle-flag ones;
    }
  }
}
```

- Related Documentation**
- [Understanding the Junos Configuration Groups on page 55](#)
  - [Example: Configuring Peer Entities on page 155](#)

## Selecting Wildcard Names

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can combine wildcarding and thoughtful use of names in statements to tailor statement values:

```
[edit]
user@host# show
groups {
  mpls-conf {
    protocols {
      mpls {
        label-switched-path <*-major> {
          retry-timer 5;
          bandwidth 155m;
          optimize-timer 60;
        }
        label-switched-path <*-minor> {
          retry-timer 15;
          bandwidth 64k;
          optimize-timer 120;
        }
      }
    }
  }
}
apply-groups mpls-conf;
protocols {
  mpls {
    label-switched-path metro-major {
      to 10.0.0.10;
    }
    label-switched-path remote-minor {
      to 10.0.0.20;
    }
  }
}
[edit]
user@host# show | display inheritance
protocols {
  mpls {
    label-switched-path metro-major {
      to 10.0.0.10;
      ##
      ## "5" was inherited from group "mpls-conf"
      ##
      retry-timer 5;
      ## "155m" was inherited from group "mpls-conf"
      ##
    }
  }
}
```

```
bandwidth 155m;
##
## "60" was inherited from group "mpls-conf"
##
optimize-timer 60;
}
label-switched-path remote-minor {
to 10.0.0.20;
##
## "15" was inherited from group "mpls-conf"
##
retry-timer 15;
##
## "64k" was inherited from group "mpls-conf"
##
bandwidth 64k;
##
## "120" was inherited from group "mpls-conf"
##
optimize-timer 120;
}
}
```

Related Documentation

- [Using Wildcards with Configuration Groups on page 145](#)

---

## Using Junos OS Defaults Groups

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

Junos OS provides a hidden and immutable configuration group called **junos-defaults** that is automatically applied to the configuration of your router. The **junos-defaults** group contains preconfigured statements that contain predefined values for common applications. Some of the statements must be referenced to take effect, such as definitions for applications (for example, FTP or telnet settings). Other statements are applied automatically, such as terminal settings.



**NOTE:** Many identifiers included in the **junos-defaults** configuration group begin with the name **junos-**. Because identifiers beginning with the name **junos-** are reserved for use by Juniper Networks, you cannot define any configuration objects using this name.

You cannot include **junos-defaults** as a configuration group name in an **apply-groups** statement.

To view the full set of available preset statements from the Junos defaults group, issue the **show groups junos-defaults** configuration mode command at the top level of the configuration. The following example displays a partial list of Junos defaults groups:

```
user@host# show groups junos-defaults
# Make vt100 the default for the console port
```

```

system {
  ports {
    console type vt100;
  }
}
applications {
  # File Transfer Protocol
  application junos-ftp {
    application-protocol ftp;
    protocol tcp;
    destination-port 21;
  }
  # Trivial File Transfer Protocol
  application junos-tftp {
    application-protocol tftp;
    protocol udp;
    destination-port 69;
  }
  # RPC port mapper on TCP
  application junos-rpc-portmap-tcp {
    application-protocol rpc-portmap;
    protocol tcp;
    destination-port 111;
  }
  # RPC port mapper on UDP
}

```

To reference statements available from the **junos-defaults** group, include the selected **junos- *default-name*** statement at the applicable hierarchy level.

#### Related Documentation

- [Creating a Junos Configuration Group on page 137](#)
- [Example: Referencing the Preset Statement From the Junos defaults Group on page 161](#)
- [Example: Viewing Default Statements That Have Been Applied to the Configuration on page 162](#)

## Example: Referencing the Preset Statement From the Junos defaults Group

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following example is a preset statement from the Junos defaults group that is available for FTP in a stateful firewall:

```

[edit]
groups {
  junos-defaults {
    applications {
      application junos-ftp {# Use FTP default configuration
        application-protocol ftp;
        protocol tcp;
        destination-port 21;
      }
    }
  }
}

```

To reference a preset Junos default statement from the Junos defaults group, include the **junos-default-name** statement at the applicable hierarchy level. For example, to reference the Junos default statement for FTP in a stateful firewall, include the **junos-ftp** statement at the **[edit services stateful-firewall rule my-rule term my-term from applications]** hierarchy level:

```
[edit]
services {
  stateful-firewall {
    rule my-rule {
      term my-term {
        from {
          applications junos-ftp; #Reference predefined statement, junos-ftp
        }
      }
    }
  }
}
```

**Related  
Documentation**

- [Example: Viewing Default Statements That Have Been Applied to the Configuration on page 162](#)
- [Using Junos OS Defaults Groups on page 160](#)
- [Understanding the Junos Configuration Groups on page 55](#)
- [Creating a Junos Configuration Group on page 137](#)

---

## Example: Viewing Default Statements That Have Been Applied to the Configuration

**Supported Platforms**   [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

To view the Junos defaults that have been applied to the configuration, issue the **show | display inheritance defaults** command. For example, to view the inherited Junos defaults at the **[edit system ports]** hierarchy level:

```
user@host# show system ports | display inheritance defaults
## ## 'console' was inherited from group 'junos-defaults'
## 'vt100' was inherited from group 'junos-defaults'
## console type vt100;
```

If you choose not to use existing Junos default statements, you can create your own configuration groups manually.

To view the complete configuration information without the comments marked with **##**, use the **no-comments** option with the **display inheritance** command.

**Related  
Documentation**

- [Creating a Junos Configuration Group on page 137](#)
- [Configuring Configuration Groups on page 56](#)

## CHAPTER 15

# CLI Online Help

- [Examples: Using Command Completion in Configuration Mode on page 163](#)
- [Examples: Using the Junos OS CLI Command Completion on page 165](#)
- [Displaying the Junos OS CLI Command and Word History on page 166](#)

### Examples: Using Command Completion in Configuration Mode

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

List the configuration mode commands:

```
[edit]
user@host# ?
  <[Enter]>      Execute this command
  activate       Remove the inactive tag from a statement
  annotate       Annotate the statement with a comment
  commit        Commit current set of changes
  copy          Copy a statement
  deactivate     Add the inactive tag to a statement
  delete        Delete a data element
  edit          Edit a sub-element
  exit          Exit from this level
  extension     Extension operations
  help          Provide help information
  insert        Insert a new ordered data element
  load          Load configuration from ASCII file
  quit          Quit from this level
  rename        Rename a statement
  replace       Replace character string in configuration
  rollback      Roll back to previous committed configuration
  run           Run an operational-mode command
  save          Save configuration to ASCII file
  set           Set a parameter
  show          Show a parameter
  status        Show users currently editing configuration
  top           Exit to top level of configuration
  up            Exit one level of configuration
  wildcard      Wildcard operations
[edit]user@host#
```

List all the statements available at a particular hierarchy level:

```
[edit]
user@host# edit ?
```

```

Possible completions:
> accounting-options  Accounting data configuration
> chassis             Chassis configuration
> class-of-service    Class-of-service configuration
> firewall            Define a firewall configuration
> forwarding-options  Configure options to control packet sampling
> groups              Configuration groups
> interfaces          Interface configuration
> policy-options      Routing policy option configuration
> protocols           Routing protocol configuration
> routing-instances   Routing instance configuration
> routing-options     Protocol-independent routing option configuration
> snmp                Simple Network Management Protocol
> system              System parameters

```

```
user@host# edit protocols ?
```

```
Possible completions:
```

```

<[Enter]>           Execute this command
> bgp               BGP options
> connections       Circuit cross-connect configuration
> dvmrp             DVMRP options
> igmp              IGMP options
> isis              IS-IS options
> ldp               LDP options
> mpls              Multiprotocol Label Switching options
> msdp              MSDP options
> ospf              OSPF configuration
> pim               PIM options
> rip               RIP options
> router-discovery ICMP router discovery options
> rsvp              RSVP options
> sapSession        Advertisement Protocol options
> vrrp              VRRP options
|                   Pipe through a command

```

```
[edit]
```

```
user@host# edit protocols
```

```
List all commands that start with a particular letter or string:
```

```
user@host# edit routing-options a?
```

```
Possible completions:
```

```

> aggregate          Coalesced routes
> autonomous-system  Autonomous system number

```

```
[edit]
```

```
user@host# edit routing-options a
```

```
List all configured Asynchronous Transfer Mode (ATM) interfaces:
```

```
[edit]
```

```
user@host# edit interfaces at?
```

```

<interface_name>    Interface name
  at-0/2/0           Interface name
  at-0/2/1           Interface name

```

```
[edit]
```

```
user@host# edit interfaces at
```

```
Display a list of all configured policy statements:
```

```
[edit]
```

```
user@host# show policy-options policy-statement ?
```

```

<policy_name>       Name to identify a policy filter
  lo0only-v4         Name to identify a policy filter
  lo0only-v6         Name to identify a policy filter

```



lo2bgp                      Name to identify a policy filter

- Related Documentation**
- [Examples: Using the Junos OS CLI Command Completion on page 165](#)
  - [Displaying the Junos OS CLI Command and Word History on page 166](#)

## Examples: Using the Junos OS CLI Command Completion

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following examples show how you can use the command completion feature in Junos OS. Issue the **show interfaces** command:

```
user@host> sh<Space>ow i<Space>
'i' is ambiguous.
Possible completions:
igmp           Show information about IGMP
interface      Show interface information
isis           Show information about IS-IS

user@host> show in<Space>terfaces
Physical interface: at-0/1/0, Enabled, Physical link is Up
Interface index: 11, SNMP ifIndex: 65
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode
Speed: OC12, Loopback: None, Payload scrambler: Enabled
Device flags: Present Running
Link flags: 0x01
...

user@host>
```

Display a list of all log files whose names start with the string “messages,” and then display the contents of one of the files:

```
user@myhost> show log mes?
Possible completions:
<filename>Log file to display
messagesSize: 1417052, Last changed: Mar 3 00:33
messages.0.gzSize: 145575, Last changed: Mar 3 00:00
messages.1.gzSize: 134253, Last changed: Mar 2 23:00
messages.10.gzSize: 137022, Last changed: Mar 2 14:00
messages.2.grSize: 137112, Last changed: Mar 2 22:00
messages.3.gzSize: 121633, Last changed: Mar 2 21:00
messages.4.gzSize: 135715, Last changed: Mar 2 20:00
messages.5.gzSize: 137504, Last changed: Mar 2 19:00
messages.6.gzSize: 134591, Last changed: Mar 2 18:00
messages.7.gzSize: 132670, Last changed: Mar 2 17:00
messages.8.gzSize: 136596, Last changed: Mar 2 16:00
messages.9.gzSize: 136210, Last changed: Mar 2 15:00

user@myhost> show log mes<Tab>sages.4<Tab>.gz<Enter>
Jan 15 21:00:00 myhost newsyslog[1381]: logfile turned over
...
```

- Related Documentation**
- [Displaying the Junos OS CLI Command and Word History on page 166](#)

## Displaying the Junos OS CLI Command and Word History

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

To display a list of recent commands that you issued, use the **show cli history** command:

```
user@host> show cli history 3
01:01:44 -- show bgp next-hop-database
01:01:51 -- show cli history
01:02:51 -- show cli history 3
```

You can press Esc+. (period) or Alt+. (period) to insert the last word of the previous command. Repeat Esc+. or Alt+. to scroll backwards through the list of recently entered words. For example:

```
user@host> show interfaces terse fe-0/0/0
Interface      Admin  Link  Proto  Local  Remote
fe-0/0/0        up    up
fe-0/0/0.0      up    up    inet   192.168.220.1/30

user@host> <Esc>
user@host> fe-0/0/0
```

If you scroll completely to the beginning of the list, pressing Esc+. or Alt+. again restarts scrolling from the last word entered.

**Related Documentation**

- [Junos OS CLI Online Help Features on page 11](#)

## CHAPTER 16

# CLI Configuration Mode

- [Example: Using the configure Command on page 167](#)

### Example: Using the configure Command

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

If, when you enter configuration mode, another user is also in configuration mode, a message shows who the user is and what part of the configuration that user is viewing or editing:

```
user@host> configure
Entering configuration mode
Current configuration users:
root terminal p3 (pid 1088) on since 1999-05-13 01:03:27 EDT
[edit interfaces so-3/0/0 unit 0 family inet]
The configuration has been changed but not committed
[edit]
user@host#
```

If, when you enter configuration mode, the configuration contains changes that have not been committed, a message appears:

```
user@host> configure
Entering configuration mode
The configuration has been changed but not committed
[edit]
user@host#
```

**Related Documentation** • [Forms of the configure Command on page 40](#)



# Controlling the CLI Environment

- [Example: Controlling the CLI Environment on page 169](#)

## Example: Controlling the CLI Environment

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

The following example shows you how to change the default CLI environment:

```
user@host> set cli screen-length 66
Screen length set to 66
user@host> set cli screen-width 40
Screen width set to 40
user@host> set cli prompt "router1-san-jose > "
router1-san-jose > show cli
CLI complete-on-space set to on
CLI idle-timeout disabled
CLI restart-on-upgrade set to on
CLI screen length set to 66
CLI screen width set to 40
CLI terminal is 'xterm'
router1-san-jose >
```

- Related Documentation**
- [Setting the Junos OS CLI Screen Length and Width on page 234](#)
  - [Controlling the Junos OS CLI Environment on page 229](#)



## CHAPTER 18

# CLI Advanced Features

- [Example: Using Global Replace in a Junos Configuration—Using the \n Back Reference on page 171](#)
- [Example: Using Global Replace in a Junos Configuration—Replacing an Interface Name on page 172](#)
- [Example: Using Global Replace in a Junos Configuration—Using the upto Option on page 173](#)

### Example: Using Global Replace in a Junos Configuration—Using the \n Back Reference

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

The following example shows how you can use the `\n` back reference to replace a pattern:

```
[edit]
user@host# show interfaces
xe-0/0/0 {
    unit 0;
}
fe-3/0/1 {
    vlan-tagging;
    unit 0 {
        description "inet6 configuration. IP: 2000::c0a8::1bf5";
        vlan-id 100;
        family inet {
            address 17.10.1.1/24;
        }
        family inet6 {
            address 2000::c0a8:1bf5/3;
        }
    }
}

[edit]
user@host# replace pattern "(.):1bf5" with "\11bf5"
[edit]
user@host# show interfaces
xe-0/0/0 {
    unit 0;
}
fe-3/0/1 {
    vlan-tagging;
```

```
unit 0 {
  description "inet6 configuration. IP: 2000::c0a8:1bf5";
  vlan-id 100;
  family inet {
    address 17.10.1.1/24;
  }
  family inet6 {
    address 2000::c0a8:1bf5/3;
  }
}
```

The pattern `2000::c0a8:1bf5` is replaced with `2000::c0a8:1bf5`.

- Related Documentation**
- [Example: Using Global Replace in a Junos Configuration—Replacing an Interface Name on page 172](#)
  - [Using Global Replace in a Junos Configuration on page 49](#)

## Example: Using Global Replace in a Junos Configuration—Replacing an Interface Name

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following example shows how you can replace an interface name in a configuration:

```
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/0 {
        hello-interval 5;
      }
    }
  }
}
[edit]
user@host# replace so-0/0/0 with so-1/1/0
[edit]
user@host# show
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-1/1/0 {
        hello-interval 5;
      }
    }
  }
}
```

- Related Documentation**
- [Example: Using Global Replace in a Junos Configuration—Using the upto Option on page 173](#)
  - [Using Global Replace in a Junos Configuration on page 49](#)




## Example: Using Global Replace in a Junos Configuration—Using the upto Option

Supported Platforms **LN Series**

Consider the hierarchy shown in [Figure 13 on page 173](#). The text string **010101** appears in three places: the description sections of **ge-0/0/0**, **ge-0/0/0.0**, and **fe-0/0/1**. These three instances are three objects. The following example shows how you can use the **upto** option to perform replacements in a JUNOS configuration:


**Figure 13: Replacement by Object**

 Current Configuration:

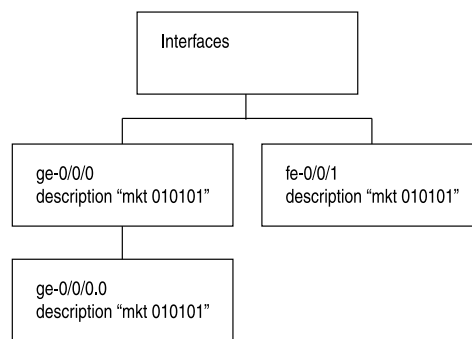

user@host > **replace pattern 01 with pattern 02 upto 2**

 Resulting Configuration:

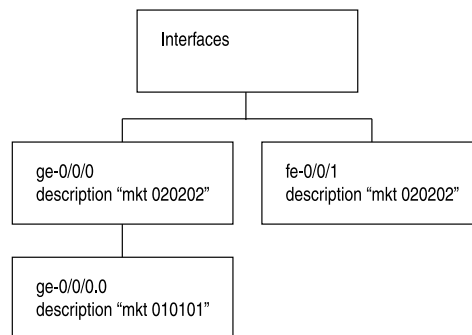

g017228

An **upto 2** option in the **replace** command converts **01** to **02** for two object instances. The objects under the main interfaces **ge-0/0/0** and **fe-0/0/1** will be replaced first (since these are siblings in the hierarchy level). Because of the **upto 2** restriction, the **replace** command replaces patterns in the first and second instance in the hierarchy (siblings), but not the third instance (child of the first instance).

```

user@host# show interfaces
ge-0/0/0 {
  description "mkt 010101"; #First instance in the hierarchy
  unit 0 {
    description "mkt 010101"; #Third instance in the hierarchy (child of the first instance)
  }
}

```

```
fe-0/0/1 {
  description "mkt 010101"; #second instance in the hierarchy (sibling of the first
  instance)
  unit 0 {
    family inet {
      address 200.200.20.2/24;
    }
  }
}
[edit]
user@host# replace pattern 01 with 02 upto 2
[edit]
user@host# commit
commit complete

[edit]
user@host# show interfaces
ge-0/0/0 {
  description "mkt 020202"; #First instance in the hierarchy
  unit 0 {
    description "mkt 010101"; #Third instance in the hierarchy (child of the first
    instance)
  }
}
fe-0/0/1 {
  description "mkt 020202"; #second instance in the hierarchy (sibling of the first
  instance)
  unit 0 {
    family inet {
      address 200.200.20.2/24;
    }
  }
}
```

**Related  
Documentation**

- [Using Global Replace in a Junos Configuration on page 49](#)

## CHAPTER 19

# Configuration Statements

- [apply-groups on page 176](#)
- [apply-groups-except on page 177](#)
- [commit-interval \(Batch Commits\) on page 177](#)
- [groups on page 178](#)
- [days-to-keep-error-logs \(Batch Commits\) on page 180](#)
- [deactivate](#)
- [delete](#)
- [edit](#)
- [exit](#)
- [help](#)
- [insert](#)
- [load](#)
- [maximum-aggregate-pool \(Batch Commits\) on page 188](#)
- [maximum-entries \(Batch Commits\) on page 189](#)
- [protect](#)
- [quit](#)
- [rename](#)
- [rename](#)
- [replace](#)
- [rollback](#)
- [run](#)
- [save](#)
- [server \(Batch Commits\) on page 198](#)
- [set](#)
- [status](#)
- [top](#)
- [traceoptions \(Batch Commits\) on page 202](#)
- [unprotect](#)

- [up](#)
- [update](#)
- [when on page 206](#)
- [wildcard delete](#)

---

## apply-groups

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">QFX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	<code>apply-groups [ <i>group-names</i> ];</code>
<b>Hierarchy Level</b>	All hierarchy levels
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Apply a configuration group to a specific hierarchy level in a configuration, to have a configuration inherit the statements in the configuration group.</p> <p>You can specify more than one group name. You must list them in order of inheritance priority. The configuration data in the first group takes priority over the data in subsequent groups.</p>
<b>Options</b>	<i>group-names</i> —One or more names specified in the <b>groups</b> statement.
<b>Required Privilege Level</b>	<code>configure</code> —To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Applying a Junos Configuration Group on page 139</a></li><li>• <a href="#">groups on page 178</a></li></ul>

## apply-groups-except

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series
<b>Syntax</b>	<code>apply-groups-except [ <i>group-names</i> ];</code>
<b>Hierarchy Level</b>	All hierarchy levels except the top level
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Disable inheritance of a configuration group.
<b>Options</b>	<i>group-names</i> —One or more names specified in the <b>groups</b> statement.
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">groups on page 178</a></li> <li>• <a href="#">Disabling Inheritance of a Junos OS Configuration Group on page 143</a></li> </ul>

## commit-interval (Batch Commits)

<b>Supported Platforms</b>	LN Series, M Series, MX Series, SRX Series
<b>Syntax</b>	<code>commit-interval <i>number-of-seconds-between-commits</i>;</code>
<b>Hierarchy Level</b>	[edit system commit server]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	For Junos OS batch commits, specify the time interval (in seconds) between two commit operations.
<b>Options</b>	<p><i>number-of-seconds-between-commits</i>—Time interval (in seconds) between two commit operations.</p> <p><b>Range:</b> 1 through 30 seconds.</p> <p><b>Default:</b> 5 seconds.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring Junos OS Batch Commits on page 120</a></li> </ul>

## groups

---

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

**Syntax**

```
groups {
  group-name {
    configuration-data;
    when {
      chassis chassis-id;
      member member-id;
      model model-id;
      node node-id;
      routing-engine routing-engine-id;
      time <start-time> [to <end-time>];
    }
    conditional-data;
  }
  lccn-re0 {
    configuration-data;
  }
  lccn-re1 {
    configuration-data;
  }
}
```

**Hierarchy Level** [edit]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Create a configuration group.

**Options** —

***group-name***—Name of the configuration group. To configure multiple groups, specify more than one ***group-name***.

***configuration-data***—The configuration statements that are to be applied elsewhere in the configuration with the **apply-groups** statement, to have the target configuration inherit the statements in the group.

**when *conditional-data***—Option introduced in Junos 11.3. The conditional statements that are to be applied when this configuration group is applied.

On routers that support multiple Routing Engines, you can also specify two special group names:

**re0**—Configuration statements that are to be applied to the Routing Engine in slot 0.

**re1**—Configuration statements that are to be applied to the Routing Engine in slot 1.

The configuration specified in group **re0** is applied only if the current Routing Engine is in slot 0; likewise, the configuration specified in group **re1** is applied only if the current Routing Engine is in slot 1. Therefore, both Routing Engines can use the same configuration file, each using only the configuration statements that apply to it. Each

**re0** or **re1** group contains at a minimum the configuration for the hostname and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group also should contain the configuration for the backup router and static routes.

(Routing matrix only) The TX Matrix router supports group names for the Routing Engines in each connected T640 router in the following formats:



**NOTE:** The management Ethernet interface used for the TX Matrix Plus router, T1600 routers in a routing matrix, and PTX Series Packet Transport Switches, is **em0**. Junos OS automatically creates the router's management Ethernet interface, **em0**.

- **lccn-re0**—Configuration statements applied to the Routing Engine in slot 0 of the specified T640 router that is connected to a TX Matrix router.
  - **lccn-re1**—Configuration statements applied to the specified to the Routing Engine in slot 1 of the specified T640 router that is connected to a TX Matrix router.
- n* identifies the T640 router and can be from 0 through 3.

The remaining statements are explained separately.

**Required Privilege Level**    configure—To enter configuration mode.

- Related Documentation**
- [Creating a Junos Configuration Group on page 137](#)
  - [apply-groups on page 176](#)
  - [apply-groups-except on page 177](#)

## days-to-keep-error-logs (Batch Commits)

---

<b>Supported Platforms</b>	<a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">SRX Series</a>
<b>Syntax</b>	days-to-keep-error-logs <i>days-to-keep-error-log-entries</i> ;
<b>Hierarchy Level</b>	[edit system commit server]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	For Junos OS batch commits, specify the number of days to keep the error logs.
<b>Options</b>	<i>days-to-keep-error-log-entries</i> —Number of days to keep the error logs. <b>Range:</b> 1 through 366 days <b>Default:</b> 1 day
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Junos OS Batch Commits on page 120</a></li></ul>



---

## deactivate

---

Supported Platforms	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
Syntax	deactivate ( <i>statement</i>   <i>identifier</i> )
Release Information	Command introduced before Junos OS Release 7.4.
Description	Add the <b>inactive:</b> tag to a statement, effectively commenting out the statement or identifier from the configuration. Statements or identifiers marked as inactive do not take effect when you issue the <b>commit</b> command.
Options	<p><b>identifier</b>—Identifier to which you are adding the <b>inactive:</b> tag. It must be an identifier at the current hierarchy level.</p> <p><b>statement</b>—Statement to which you are adding the <b>inactive:</b> tag. It must be a statement at the current hierarchy level.</p>
Required Privilege Level	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">activate on page 258</a></li><li>• <a href="#">delete on page 182</a></li><li>• <a href="#">Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94.</a></li></ul>

## delete

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	delete < <i>statement-path</i> > < <i>identifier</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Delete a statement or identifier. All subordinate statements and identifiers contained within the specified statement path are deleted with it.</p> <p>Deleting a statement or an identifier effectively “unconfigures” or disables the functionality associated with that statement or identifier.</p> <p>If you do not specify <i>statement-path</i> or <i>identifier</i>, the entire hierarchy, starting at the current hierarchy level, is removed.</p>
<b>Options</b>	<p><i>statement-path</i>—(Optional) Path to an existing statement or identifier. Include this if the statement or identifier to be deleted is not at the current hierarchy level.</p> <p><i>identifier</i>—(Optional) Name of the statement or identifier to delete.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">deactivate on page 181</a></li><li>• <a href="#">Deleting a Statement from a Junos Configuration on page 87</a></li></ul>

## edit

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	edit <i>statement-path</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Move inside the specified statement hierarchy. If the statement does not exist, it is created.</p> <p>You cannot use the <b>edit</b> command to change the value of identifiers. You must use the <b>set</b> command.</p>
<b>Options</b>	<i>statement-path</i> —Path to the statement.
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">set on page 199</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

## exit

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	exit <configuration-mode>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Exit the current level of the statement hierarchy, returning to the level prior to the last <b>edit</b> command, or exit from configuration mode. The <b>quit</b> and <b>exit</b> commands are synonyms.
<b>Options</b>	<p>none—Return to the previous edit level. If you are at the top of the statement hierarchy, exit configuration mode.</p> <p><b>configuration-mode</b>—(Optional) Exit from configuration mode.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">top on page 201</a></li><li>• <a href="#">up on page 204</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

## help

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	<pre>help &lt;(apropos <i>string</i>   reference &lt;<i>statement-name</i>&gt;   syslog &lt;<i>syslog-tag</i>&gt;   tip cli <i>number</i>   topic &lt;<i>word</i>&gt;)&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display help about available configuration statements or general information about getting help.
<b>Options</b>	<p><b>apropos <i>string</i></b>—(Optional) Display statement names and help text that matches the string specified. If the string contains spaces, enclose it in quotation marks (" "). You can also specify a regular expression for the string, using standard UNIX-style regular expression syntax.</p> <p><b>reference &lt;<i>statement-name</i>&gt;</b>—(Optional) Display summary information for the statement. This information is based on summary descriptions that appear in the Junos feature guides.</p> <p><b>syslog &lt;<i>syslog-tag</i>&gt;</b>—(Optional) Display information about system log messages.</p> <p><b>tip cli <i>number</i></b>—(Optional) Display a tip about using the CLI. Specify the number of the tip you want to view.</p> <p><b>topic &lt;<i>word</i>&gt;</b>—(Optional) Display usage guidelines for a topic or configuration statement. This information is based on subjects that appear in the Junos feature guides.</p> <p>Entering the <b>help</b> command without an option provides introductory information about how to use the <b>help</b> command.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Getting Online Help from the Junos OS Command-Line Interface on page 9</a></li> </ul>

## insert

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	insert < <i>statement-path</i> > <i>identifier1</i> (before   after) <i>identifier2</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Insert an identifier in to an existing hierarchy.
<b>Options</b>	<p><b>after</b>—Place <i>identifier1</i> after <i>identifier2</i>.</p> <p><b>before</b>—Place <i>identifier1</i> before <i>identifier2</i>.</p> <p><i>identifier1</i>—Existing identifier.</p> <p><i>identifier2</i>—New identifier to insert.</p> <p><i>statement-path</i>—(Optional) Path to the existing identifier.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Inserting a New Identifier in a Junos Configuration on page 92</a></li></ul>

## load

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series
<b>Syntax</b>	load (factory-default   merge   override   patch   replace   set   update) load ( <i>filename</i>   terminal) <relative>
<b>QFX Series</b>	load (dhcp-snooping <i>filename</i> )
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Load a configuration from an ASCII configuration file, from terminal input, or from the factory default. Your current location in the configuration hierarchy is ignored when the load operation occurs.
<b>Options</b>	<p><b>dhcp-snooping</b>—(QFX Series switches) Loads DHCP snooping entries.</p> <p><b>factory-default</b>—Loads the factory configuration. The factory configuration contains the manufacturer's suggested configuration settings. The factory configuration is the router or switch's first configuration and is loaded when the router or switch is first installed and powered on.</p> <p>On J Series Services Routers, pressing and holding down the Config button on the router for 15 seconds causes the factory configuration to be loaded and committed. However, this operation deletes all other configurations on the router; using the <b>load factory-default</b> command does not.</p> <p><b>filename</b>—Name of the file to load. For information about specifying the filename, see <a href="#">"Specifying Filenames and URLs" on page 219</a>.</p> <p><b>merge</b>—Combine the configuration that is currently shown in the CLI with the configuration.</p> <p><b>override</b>—Discard the entire configuration that is currently shown in the CLI and load the entire configuration. Marks every object as changed.</p> <p><b>patch</b>—Change part of the configuration and mark only those parts as changed.</p> <p><b>replace</b>—Look for a <b>replace</b> tag in <i>filename</i>, delete the existing statement of the same name, and replace it with the configuration.</p> <p><b>set</b>—Merge a set of commands with an existing configuration. This option executes the configuration instructions line by line as they are stored in a file or from a terminal. The instructions can contain any configuration mode command, such as <b>set</b>, <b>edit</b>, <b>exit</b>, and <b>top</b>.</p> <p><b>relative</b>—(Optional) Use the <b>merge</b> or <b>replace</b> option without specifying the full hierarchy level.</p> <p><b>terminal</b>—Use the text you type at the terminal as input to the configuration. Type Ctrl+d to end terminal input.</p>

**update**—Discard the entire configuration that is currently shown in the CLI, and load the entire configuration. Marks changed objects only.



**NOTE:** If you are using Junos OS in a Common Criteria environment, system log messages are created whenever a secret attribute is changed (for example, password changes or changes to the RADIUS shared secret). These changes are logged during the following configuration load operations:

```
load merge
load replace
load override
load update
```

For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS*.

<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Loading a Configuration from a File on page 129</a></li> </ul>

## maximum-aggregate-pool (Batch Commits)

<b>Supported Platforms</b>	LN Series, M Series, MX Series, SRX Series, T Series
<b>Syntax</b>	maximum-aggregate-pool <i>maximum-number-of-commits-to-aggregate</i> ;
<b>Hierarchy Level</b>	[edit system commit server]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	For Junos OS batch commits, specify the maximum number of individual commit operations that are aggregated or merged into a single commit operation.
<b>Options</b>	<p><b><i>maximum-number-of-commits-to-aggregate</i></b>—Maximum number of individual commit operations that are aggregated or merged into a single commit operation.</p> <p><b>Range:</b> 1 through 4294967295</p> <p><b>Default:</b> 5</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring Junos OS Batch Commits on page 120</a></li> </ul>



---

## maximum-entries (Batch Commits)

---

<b>Supported Platforms</b>	<a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">SRX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	maximum-entries <i>number-of-entries</i> ;
<b>Hierarchy Level</b>	[edit system commit server]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	For Junos OS batch commits, specify the maximum number of commit jobs that are included in the commit queue.
<b>Options</b>	<i>number-of-entries</i> —Maximum number of commit jobs that are included in the commit queue.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Junos OS Batch Commits on page 120</a></li></ul>

## protect

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	<code>protect (hierarchy   statement   identifier)</code>
<b>Release Information</b>	Command introduced in Junos OS Release 11.2.
<b>Description</b>	Protect a hierarchy, statement, or identifier from modification or deletion.
<b>Options</b>	none
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Protecting the Junos OS Configuration from Modification or Deletion on page 105</a></li></ul>

---

## quit

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	quit <configuration-mode>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Exit the current level of the statement hierarchy, returning to the level prior to the last <b>edit</b> command, or exit from configuration mode. The <b>quit</b> and <b>exit</b> commands are synonyms.
<b>Options</b>	<p>none—Return to the previous edit level. If you are at the top of the statement hierarchy, exit configuration mode.</p> <p><b>configuration-mode</b>—(Optional) Exit from configuration mode.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">top on page 201</a></li><li>• <a href="#">up on page 204</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

## rename

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Syntax** `rename <statement-path> identifier1 to identifier2`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Rename an existing configuration statement or identifier.

**Options** *identifier1*—Existing identifier to rename.

*identifier2*—New name of identifier.

*statement-path*—(Optional) Path to an existing statement or identifier.



**NOTE:** For example, to rename interface `ge-0/0/0.0` to `ge-0/0/10.0` at the following hierarchy level:

```
logical-systems {
  logical-system-abc {
    (...)
    protocols {
      ospf {
        area 0.0.0.0 {
          interface ge-0/1/0.0;
```

Issue the following command:

```
rename logical-systems logical-system-abc protocols ospf area 0.0.0.0 interface
ge-0/1/0.0.0 to interface ge-0/1/10.0
```

**Required Privilege Level** `configure`—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.

**Related Documentation**

- [Renaming an Identifier in a Junos Configuration on page 91](#)

## rename

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

**Syntax** `rename <statement-path> identifier1 to identifier2`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Rename an existing configuration statement or identifier.

**Options** *identifier1*—Existing identifier to rename.

*identifier2*—New name of identifier.

*statement-path*—(Optional) Path to an existing statement or identifier.



**NOTE:** For example, to rename interface `ge-0/0/0.0` to `ge-0/0/10.0` at the following hierarchy level:

```
logical-systems {
  logical-system-abc {
    (...)
    protocols {
      ospf {
        area 0.0.0.0 {
          interface ge-0/1/0.0;
```

Issue the following command:

```
rename logical-systems logical-system-abc protocols ospf area 0.0.0.0 interface
ge-0/1/0.0.0 to interface ge-0/1/10.0
```

**Required Privilege Level** `configure`—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.

**Related Documentation**

- [Renaming an Identifier in a Junos Configuration on page 91](#)

## replace

---

Supported Platforms	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
Syntax	replace pattern <i>pattern1</i> with <i>pattern2</i> <upto <i>n</i> >
Release Information	Command introduced in Junos OS Release 7.6.
Description	Replace identifiers or values in a configuration.
Options	<p><i>pattern1</i>—Text string or regular expression that defines the identifiers or values you want to match.</p> <p><i>pattern2</i>—Text string or regular expression that replaces the identifiers and values located with <i>pattern1</i>.</p> <p>Juniper Networks uses standard UNIX-style regular expression syntax (as defined in POSIX 1003.2). If the regular expression contains spaces, operators, or wildcard characters, enclose the expression in quotation marks. Greedy qualifiers (match as much as possible) are supported. Lazy qualifiers (match as little as possible) are not.</p> <p><b>upto <i>n</i></b>—Number of objects replaced. The value of <i>n</i> controls the total number of objects that are replaced in the configuration (not the total number of times the pattern occurs). Objects at the same hierarchy level (siblings) are replaced first. Multiple occurrences of a pattern within a given object are considered a single replacement. If you do not specify an <b>upto</b> option, all identifiers and values in the configuration that match <i>pattern1</i> are replaced.</p>
Required Privilege Level	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Using Global Replace in a Junos Configuration on page 49</a></li></ul>

## rollback

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, QFX Series, T Series
<b>Syntax</b>	rollback <number   rescue>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	<p>Return to a previously committed configuration. The software saves the last 50 committed configurations, including the rollback number, date, time, and name of the user who issued the <b>commit</b> configuration command.</p> <p>The currently operational Junos OS configuration is stored in the file <b>juniper.conf</b>, and the last three committed configurations are stored in the files <b>juniper.conf.1</b>, <b>juniper.conf.2</b>, and <b>juniper.conf.3</b>. These four files are located in the directory <b>/config</b>, which is on the router's flash drive. The remaining 46 previous committed configurations, the files <b>juniper.conf.4</b> through <b>juniper.conf.49</b>, are stored in the directory <b>/var/db/config</b>, which is on the router's hard disk.</p> <p>During rollback, the configuration you specify is loaded from the associated file. Only objects in the rollback configuration that differ from the previously loaded configuration are marked as changed (equivalent to <b>load update</b>).</p>
<b>Options</b>	<p>none (Optional)—Return to the most recently saved configuration.</p> <p><b>number</b>—(Optional) Configuration to return to. The range of values is from <b>0</b> through <b>49</b>. The most recently saved configuration is number <b>0</b>, and the oldest saved configuration is number <b>49</b>. The default is <b>0</b>.</p> <p><b>rescue</b>—(Optional) Return to the rescue configuration.</p>
<b>Required Privilege Level</b>	rollback—To roll back to configurations other than the one most recently committed.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Returning to a Previously Committed Junos OS Configuration on page 295</a></li> <li>• <a href="#">Creating and Returning to a Rescue Configuration on page 299</a></li> </ul>

## run

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	run <i>command</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Run a top-level CLI command without exiting from configuration mode.
<b>Options</b>	<i>command</i> —CLI top-level command.
<b>Required Privilege Level</b>	configure—To enter configuration mode.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding Junos OS CLI Configuration Mode on page 33</a></li></ul>



## save

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series

**Syntax** `save filename`

**QFX Series** `save (dhcp-snooping filename)`

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 11.1 for the QFX Series.

**Description** Save the configuration to an ASCII file. The contents of the current level of the statement hierarchy (and below) are saved, along with the statement hierarchy containing it. This allows a section of the configuration to be saved, while fully specifying the statement hierarchy.

When saving a file to a remote system, the software uses the **scp/ssh** protocol.

**Options** *filename*—Name of the saved file. You can specify a filename in one of the following ways:

- *filename*—File in the user's home directory (the current directory) on the local flash drive.
- *path/filename*—File on the local flash drive.
- */var/filename* or */var/path/filename*—File on the local hard disk.
- *a:filename* or *a:path/filename*—File on the local drive. The default path is / (the root-level directory). The removable media can be in MS-DOS or UNIX (UFS) format.
- *hostname:path/filename*, *hostname:filename*, *hostname:path/filename*, or *scp://hostname/path/filename*—File on an **scp/ssh** client. This form is not available in the worldwide version of Junos OS. The default path is the user's home directory on the remote system. You can also specify *hostname* as *username@hostname*.
- *ftp://hostname/path/filename*—File on an FTP server. You can also specify *hostname* as *username @hostname* or *username:password @hostname*. The default path is the user's home directory. To specify an absolute path, the path must start with the string **%2F**; for example, *ftp://hostname/%2Fpath/filename*. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required, and you do not specify the password or **prompt**, an error message is displayed:

```
user@host> file copy ftp://username@ftp.hostname.net//filename
file copy ftp.hostname.net: Not logged in.
user@host> file copy ftp://username:prompt@ftp.hostname.net//filename
```

Password for *username@ftp.hostname.net*:

- *http://hostname/path/filename*—File on a Hypertext Transfer Protocol (HTTP) server. You can also specify *hostname* as *username@hostname* or *username:password@hostname*. If a password is required and you omit it, you are prompted for it.
- *re0:/path/filename* or *re1:/path/filename*—File on a local Routing Engine.

**Required Privilege Level** configure—To enter configuration mode.

**Related Documentation**

- [Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94](#)

---

## server (Batch Commits)

---

**Supported Platforms** [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

**Syntax**

```
server {
  commit-interval <number-of-seconds-between-commits>;
  days-to-keep-error-logs <days-to-keep-error-log-entries>;
  maximum-aggregate-pool <maximum-number-of-commits-to-aggregate>;
  maximum-entries <number-of-entries>;
  traceoptions {
    file filename;
    files number;
    flag (all | batch | commit-server | configuration);
    size maximum-file-size;
    (world-readable | no-world-readable);
  }
}
```

**Hierarchy Level** [edit system commit]

**Release Information** Statement introduced in Junos OS Release 12.1.

**Description** For Junos OS batch commits, configure the batch commit server properties.  
  
The remaining statements are explained separately.

**Required Privilege Level** system—To view this statement in the configuration.  
system-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring Junos OS Batch Commits on page 120](#)

## set

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	set < <i>statement-path</i> > <i>identifier</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Create a statement hierarchy and set identifier values. This is similar to <b>edit</b> except that your current level in the hierarchy does not change.
<b>Options</b>	<p><i>identifier</i>—Name of the statement or identifier to set.</p> <p><i>statement-path</i>—(Optional) Path to an existing statement hierarchy level. If that hierarchy level does not exist, it is created.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">edit on page 183</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

## status

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	status
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display the users currently editing the configuration.
<b>Required Privilege Level</b>	configure—To enter configuration mode. <ul style="list-style-type: none"><li>• <a href="#">“Displaying Users Currently Editing the Configuration” on page 67.</a></li></ul>

---

## top

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	top < <i>configuration-command</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Return to the top level of configuration command mode, which is indicated by the <b>[edit]</b> banner.
<b>Options</b>	<i>configuration-command</i> —(Optional) Issue configuration mode commands from the top of the hierarchy.
<b>Required Privilege Level</b>	configure—To enter configuration mode.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li><li>• <a href="#">exit on page 184</a></li><li>• <a href="#">up on page 204</a></li></ul>

## traceoptions (Batch Commits)

**Supported Platforms** [LN Series](#), [M Series](#), [MX Series](#)

**Syntax**

```
traceoptions {
    file filename;
    files number;
    flag (all | batch | commit-server | configuration);
    size maximum-file-size;
    (world-readable | no-world-readable);
}
```

**Hierarchy Level** [edit system commit server]

**Release Information** Statement introduced in Junos OS Release 12.1.

**Description** For Junos OS batch commits, configure tracing operations.

**Options** **file *name***—Name of the file to receive the output of the tracing operation.



**NOTE:** If you configure traceoptions and do not explicitly specify a filename for logging the events, the batch commit events are logged in the commitd file (var/log/commitd) by default.

**files *number***—Maximum number of trace files.

**flag *flag***—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags:

- **all**—All tracing operations flags.
- **batch**—Tracing operations for batch events.
- **commit-server**—Tracing operations for commit server events.
- **configuration**—Tracing operations for the reading of configuration.

**size**—Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB).

**world-readable | no-world-readable**—**readable**—Grant all users permission to read archived log files, or restrict the permission only to the root user and users who have the Junos OS maintenance permission.

**Required Privilege Level**

system—To view this statement in the configuration.

system-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring Junos OS Batch Commits on page 120](#)

---

## unprotect

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, T Series
<b>Syntax</b>	unprotect ( <i>hierarchy</i>   <i>statement</i>   <i>identifier</i> )
<b>Release Information</b>	Command introduced in Junos OS Release 11.2.
<b>Description</b>	Unprotect a protected hierarchy, configuration statement, or an identifier.
<b>Options</b>	none
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">top on page 201</a></li><li>• <a href="#">up on page 204</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

## up

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	up <number> <configuration-command>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Move up one level in the statement hierarchy.
<b>Options</b>	<p>none—Move up one level in the configuration hierarchy.</p> <p><i>configuration-command</i>—(Optional) Issue configuration mode commands from a location higher in the hierarchy.</p> <p><i>number</i>—(Optional) Move up the specified number of levels in the configuration hierarchy.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li><li>• <a href="#">exit on page 184</a></li><li>• <a href="#">top on page 201</a></li></ul>



## update

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Syntax** update

**Release Information** Command introduced in Junos OS Release 7.5.

**Description** Update private candidate configuration with a copy of the most recently committed configuration, including your private changes.



**NOTE:** The `update` command is available only when you are in configure private mode.

**Required Privilege Level** configure—To enter configuration mode.

**Related Documentation**

- [Updating the configure private Configuration on page 72.](#)

## when

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, T Series
<b>Syntax</b>	<pre> when {   chassis <i>chassis-id</i>;   member <i>member-id</i>;   model <i>model-id</i>;   node <i>node-id</i>;   routing-engine <i>routing-engine-id</i>;   time &lt;<i>start-time</i>&gt; [to &lt;<i>end-time</i>&gt;]; } </pre>
<b>Hierarchy Level</b>	[edit groups <i>group-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.3.
<b>Description</b>	Define conditions under which the configuration group should be applied. Conditions include the type of chassis, model, or Routing Engine, virtual chassis member, cluster node, and start and optional end time of day. If you specify multiple conditions in a single configuration group, all conditions must be met before the configuration group is applied.
<b>Options</b>	<p><b>chassis</b> <i>chassis-id</i>—Specify the chassis type of the router. Valid types include SCC0, SCC1, LCC0, LCC1 ... LCC3.</p> <p><b>member</b> <i>member-id</i>—Specify the name of the member of the virtual chassis.</p> <p><b>model</b> <i>model-id</i>—Specify the model name of the router, such as m7i or tx100.</p> <p><b>node</b> <i>node-id</i>—Specify the cluster node.</p> <p><b>routing-engine</b> <i>routing-engine-id</i>—Specify the type of Routing Engine, re0 or re1.</p> <p><b>time</b> &lt;<i>start-time</i>&gt; [to &lt;<i>end-time</i>&gt;]—Specify the start time or time duration for this configuration group to be applied. If only the start time is specified, the configuration group is applied at the specified time and remains in effect until the time is changed. If the end time is specified, then on each day, the applied configuration group is started and stopped at the specified times. The syntax for specifying the time is: <b>time</b> &lt;<i>start-time</i>&gt; [to &lt;<i>end-time</i>&gt;] using the time format yyyy-mm-dd.hh:mm, hh:mm, or hh.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Creating a Junos Configuration Group on page 137</a></li> <li>• <a href="#">apply-groups on page 176</a></li> <li>• <a href="#">apply-groups-except on page 177</a></li> <li>• <a href="#">groups on page 178</a></li> </ul>

## wildcard delete

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	wildcard delete < <i>statement-path</i> > < <i>identifier</i> > < <i>regular-expression</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Delete a statement or identifier. All subordinate statements and identifiers contained within the specified statement path are deleted with it.</p> <p>Deleting a statement or an identifier effectively “unconfigures” or disables the functionality associated with that statement or identifier.</p> <p>If you do not specify <i>statement-path</i> or <i>identifier</i>, the entire hierarchy starting at the current hierarchy level is removed.</p>
<b>Options</b>	<p><i>identifier</i>—(Optional) Name of the statement or identifier to delete.</p> <p><i>regular-expression</i>—(Optional) The pattern based on which you want to delete multiple items. When you use the <b>wildcard</b> command to delete related configuration items, the <i>regular-expression</i> must be the final statement.</p> <p><i>statement-path</i>—(Optional) Path to an existing statement or identifier. Include this if the statement or identifier to be deleted is not at the current hierarchy level.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode. Other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Using Global Replace in a Junos Configuration—Using the upto Option on page 173.</a></li> </ul>



## PART 3

# Administration

- [CLI Operational Mode on page 211](#)
- [Routine Monitoring on page 213](#)
- [Managing the CLI Environment on page 229](#)
- [CLI Advanced Features on page 237](#)
- [Junos OS CLI Environment Commands on page 239](#)
- [Operational Commands on page 255](#)



## CHAPTER 20

# CLI Operational Mode

- [Interface Naming Conventions Used in the Junos OS Operational Commands on page 211](#)

## Interface Naming Conventions Used in the Junos OS Operational Commands

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

This topic explains the interface naming conventions used in the Junos OS operational commands, and contains the following sections:

- [Physical Part of an Interface Name on page 211](#)
- [Logical Part of an Interface Name on page 212](#)
- [Channel Identifier Part of an Interface Name on page 212](#)

### Physical Part of an Interface Name

The M Series Multiservices Edge Routers and the T Series Core Routers use one convention for interface naming, whereas the J Series Services Routers and the SRX Series Services Gateways use another.

- M Series and T Series interface names—On the M Series and T Series routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the PIC is located, and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

*type-fpc/pic/port*



**NOTE:** Exceptions to the *type-fpc/pic/port* physical description include the aggregated Ethernet and aggregated SONET/SDH interfaces, which use the syntax *aenumber* and *asnumber*, respectively.

- J Series and SRX interface names—On J Series and SRX devices, the unique name of each network interface has the following format to identify the physical device that corresponds to a single physical network connector:

*type-slot/pim-or-ioc/port*

For more information about J Series and SRX interface naming conventions, see the *Junos OS Interfaces Library for Security Devices*.

## Logical Part of an Interface Name

The logical unit part of the interface name corresponds to the logical unit number, which can be a number from 0 through 16,384. In the virtual part of the name, a period (.) separates the port and logical unit numbers:

- M Series and T Series routers:

*type-fpc/pic/port.logical*

- J Series and SRX devices:

*type-slot/pim-or-ioc/port:channel.unit*

## Channel Identifier Part of an Interface Name

The channel identifier part of the interface name is required only on channelized interfaces. For channelized interfaces, channel 0 identifies the first channelized interface. For channelized intelligent queuing (IQ) interfaces, channel 1 identifies the first channelized interface.



**NOTE:** Depending on the type of channelized interface, up to three levels of channelization can be specified. For more information, see the *Junos OS Interfaces Library for Security Devices*.

A colon (:) separates the physical and virtual parts of the interface name:

- M Series and T Series routers:

*type-fpc/pic/port:channel*

*type-fpc//pic/port:channel:channel*

*type-fpc/pic/port:channel:channel:channel*

- J Series and SRX devices:

*type-slot/pim-or-ioc/port:channel*

*type-slot/pim-or-ioc/port:channel:channel*

*type-slot/pim-or-ioc/port:channel:channel:channel*

### Related Documentation

- [Example: Configuring Interfaces Using Junos OS Configuration Groups on page 152](#)



## CHAPTER 21

# Routine Monitoring

- [Checking the Status of a Device Running Junos OS on page 213](#)
- [Monitoring Who Uses the Junos OS CLI on page 215](#)
- [Viewing Files and Directories on a Device Running Junos OS on page 216](#)
- [Displaying Junos OS Information on page 220](#)
- [Managing Programs and Processes Using Junos OS Operational Mode Commands on page 222](#)
- [Using the Junos OS CLI Comment Character # for Operational Mode Commands on page 227](#)
- [Example: Using Comments in Junos OS Operational Mode Commands on page 227](#)

## Checking the Status of a Device Running Junos OS

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

You can use **show** commands to check the status of the device and monitor the activities on the device.

To help you become familiar with **show** commands:

- Type **show ?** to display the list of **show** commands you can use to monitor the router:

```
root@> show ?
Possible completions:
  accounting      Show accounting profiles and records
  aps             Show Automatic Protection Switching information
  arp            Show system Address Resolution Protocol table entries
  as-path        Show table of known autonomous system paths
  bfd            Show Bidirectional Forwarding Detection information
  bgp            Show Border Gateway Protocol information
  chassis        Show chassis information
  class-of-service Show class-of-service (CoS) information
  cli            Show command-line interface settings
  configuration   Show current configuration
  connections     Show circuit cross-connect connections
  dvmrp          Show Distance Vector Multicast Routing Protocol
  info
  dynamic-tunnels Show dynamic tunnel information information
  esis           Show end system-to-intermediate system information
  firewall        Show firewall information
  helper         Show port-forwarding helper information
```

host	Show hostname information from domain name server
igmp	Show Internet Group Management Protocol information
ike	Show Internet Key Exchange information
ilmi	Show interim local management interface information
interfaces	Show interface information
ipsec	Show IP Security information
ipv6	Show IP version 6 information
isis	Show Intermediate System-to-Intermediate System info
l2circuit	Show Layer 2 circuit information
l2vpn	Show Layer 2 VPN information
lACP	Show Link Aggregation Control Protocol information
ldp	Show Label Distribution Protocol information
link-management	Show link management information
llc2	Show LLC2 protocol related information
log	Show contents of log file
mld	Show multicast listener discovery information
mpls	Show Multiprotocol Label Switching information
msdp	Show Multicast Source Discovery Protocol information
multicast	Show multicast information
ntp	Show Network Time Protocol information
ospf	Show Open Shortest Path First information
ospf3	Show Open Shortest Path First version 3 information
passive-monitoring	Show information about passive monitoring
pfe	Show Packet Forwarding Engine information
pgm	Show Pragmatic Generalized Multicast information
pim	Show Protocol Independent Multicast information
policer	Show interface policer counters and information
policy	Show policy information
ppp	Show PPP process information
rip	Show Routing Information Protocol information
ripng	Show Routing Information Protocol for IPv6 info
route	Show routing table information
rsvp	Show Resource Reservation Protocol information
sap	Show Session Announcement Protocol information
security	Show security information
services	Show services information
snmp	Show Simple Network Management Protocol information
system	Show system information
task	Show routing protocol per-task information
ted	Show Traffic Engineering Database information
version	Show software process revision levels
vpls	Show VPLS information
vrrp	Show Virtual Router Redundancy Protocol information

- Use the **show chassis routing-engine** command to view the Routing Engine status:

```

root@> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             31 degrees C / 87 degrees F
  CPU temperature         32 degrees C / 89 degrees F
  DRAM                    768 MB
  Memory utilization      84 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                1 percent
    Interrupt             0 percent
    Idle                  99 percent
  Model                   RE-2.0

```

```

Serial ID          b10000078c10d701
Start time         2005-12-28 13:52:00 PST
Uptime            12 days, 3 hours, 44 minutes, 19 seconds
Load averages:    1 minute   5 minute   15 minute
                  0.02      0.01      0.00

```

- Use the **show system storage** command to view available storage on the device:

```
root@> show system storage
```

Filesystem	Size	Used	Avail	Capacity	Mounted on
/dev/ad0s1a	865M	127M	669M	16%	/
devfs	1.0K	1.0K	0B	100%	/dev
devfs	1.0K	1.0K	0B	100%	/dev/
/dev/md0	30M	30M	0B	100%	/packages/mnt/jbase
/dev/md1	158M	158M	0B	100%	
/packages/mnt/jkernel-9.3B1.5					
/dev/md2	16M	16M	0B	100%	
/packages/mnt/jpfe-M7i-9.3B1.5					
/dev/md3	3.8M	3.8M	0B	100%	
/packages/mnt/jdocs-9.3B1.5					
/dev/md4	44M	44M	0B	100%	
/packages/mnt/jroute-9.3B1.5					
/dev/md5	12M	12M	0B	100%	
/packages/mnt/jcrypto-9.3B1.5					
/dev/md6	25M	25M	0B	100%	
/packages/mnt/jpfe-common-9.3B1.5					
/dev/md7	1.5G	196K	1.4G	0%	/tmp
/dev/md8	1.5G	910K	1.4G	0%	/mfs
/dev/ad0s1e	96M	38K	88M	0%	/config
procfs	4.0K	4.0K	0B	100%	/proc
/dev/ad1s1f	17G	2.6G	13G	17%	/var

#### Related Documentation

- [Displaying the Junos OS CLI Command and Word History on page 166](#)
- [Managing Programs and Processes Using Junos OS Operational Mode Commands on page 222](#)
- [Viewing Files and Directories on a Device Running Junos OS on page 216](#)

## Monitoring Who Uses the Junos OS CLI

### Supported Platforms LN Series

Depending upon how you configure Junos OS, multiple users can log in to the router, use the CLI, and configure or modify the software configuration.

If, when you enter configuration mode, another user is also in configuration mode, a notification message is displayed that indicates who the user is and what portion of the configuration the person is viewing or editing:

```

user@host> configure
Entering configuration mode
Users currently editing the configuration:
  root terminal d0 (pid 4137) on since 2008-04-09 23:03:07 PDT, idle 7w6d 08:22
  [edit]
The configuration has been changed but not committed

```

```
[edit]
user@host#
```

- Related Documentation
- [Entering and Exiting the Junos OS CLI Configuration Mode on page 61](#)
  - [Controlling the Junos OS CLI Environment on page 229](#)

## Viewing Files and Directories on a Device Running Junos OS

**Supported Platforms**    [EX Series](#), [LN Series](#), [M Series](#), [MX Series](#), [QFX Series](#), [T Series](#)

Junos OS stores information in files on the device, including configuration files, log files, and router software files. This topic shows some examples of operational commands that you can use to view files and directories on a device running Junos OS.

Sections include:

- [Directories on the Router or Switch on page 216](#)
- [Listing Files and Directories on page 217](#)
- [Specifying Filenames and URLs on page 219](#)

### Directories on the Router or Switch

[Table 12 on page 216](#) lists some standard directories on a device running Junos OS.

**Table 12: Directories on the Router**

Directory	Description
<code>/config</code>	This directory is located on the device's router's internal flash drive. It contains the active configuration ( <b>juniper.conf</b> ) and rollback files 1, 2, and 3.
<code>/var/db/config</code>	This directory is located on the router's device's hard drive and contains rollback files 4 through 49.
<code>/var/tmp</code>	This directory is located on the device's hard drive. It holds core files from the various processes on the Routing Engines. Core files are generated when a particular process crashes and are used by Juniper Networks engineers to diagnose the reason for failure.
<code>/var/log</code>	This directory is located on the device's hard drive. It contains files generated by both the device's logging function as well as the <b>traceoptions</b> command.
<code>/var/home</code>	This directory is located on the device's hard drive. It contains a subdirectory for each configured user on the device. These individual user directories are the default file location for many Junos OS commands.
<code>/altroot</code>	This directory is located on the device's hard drive and contains a copy of the root file structure from the internal flash drive. This directory is used in certain disaster recovery modes where the internal flash drive is not operational.

Table 12: Directories on the Router (*continued*)

Directory	Description
<code>/altconfig</code>	This directory is located on the device's hard drive and contains a copy of the <code>/config</code> file structure from the internal flash drive. This directory is also used in certain disaster recovery modes when the internal flash drive is not operational.

## Listing Files and Directories

You can view the device's directory structure as well as individual files by issuing the **file** command in operational mode.

1. To get help about the **file** command, type the following:

```
user@host> file ?
Possible completions:
<[Enter]>      Execute this command
archive        Archives files from the system
checksum       Calculate file checksum
compare        Compare files
copy           Copy files (local or remote)
delete         Delete files from the system
list           List file information
rename         Rename files
show           Show file contents
source-address Local address to use in originating the connection
|              Pipe through a command
user@host> file
```

Help shows that the **file** command includes several options for manipulating files.

2. Use the **list** option to see the directory structure of the device. For example, to show the files located in your home directory on the device:

```
user@host> file list
.ssh/
common
```

The default directory for the **file list** command is the home directory of the user logged in to the device. In fact, the user's home directory is the default directory for most of Junos OS commands requiring a filename.

3. To view the contents of other file directories, specify the directory location. For example:

```
user@host> file list /config
juniper.conf
juniper.conf.1.gz
juniper.conf.2.gz
juniper.conf.3.gz
```

4. You can also use the device's context-sensitive help system to locate a directory. For example:

```
user@host> file list /?
Possible completions:
<[Enter]>      Execute this command
```

```

<path>                Path to list
/COPYRIGHT             Size: 6355, Last changed: Feb 13 2005
/altconfig/           Last changed: Aug 07 2007
/altroot/             Last changed: Aug 07 2007
/bin/                 Last changed: Apr 09 22:31:35
/boot/                Last changed: Apr 09 23:28:39
/config/              Last changed: Apr 16 22:35:35
/data/                Last changed: Aug 07 2007
/dev/                 Last changed: Apr 09 22:36:21
/etc/                 Last changed: Apr 11 03:14:22
/kernel               Size: 27823246, Last changed: Aug 07 2007
/mfs/                 Last changed: Apr 09 22:36:49
/mnt/                 Last changed: Jan 11 2007
/modules/             Last changed: Apr 09 22:33:54
/opt/                 Last changed: Apr 09 22:31:00
/packages/            Last changed: Apr 09 22:34:38
/proc/                Last changed: May 07 20:25:46
/rdm.taf              Size: 498, Last changed: Apr 09 22:37:31
/root/                Last changed: Apr 10 02:19:45
/sbin/                Last changed: Apr 09 22:33:55
/staging/             Last changed: Apr 09 23:28:41
/tmp/                 Last changed: Apr 11 03:14:49
/usr/                 Last changed: Apr 09 22:31:34
/var/                 Last changed: Apr 09 22:37:30
user@host> file list /var/?
<[Enter]>             Execute this command
<path>                Path to list
/var/account/         Last changed: Jul 09 2007
/var/at/               Last changed: Jul 09 2007
/var/backups/          Last changed: Jul 09 2007
/var/bin/              Last changed: Jul 09 2007
/var/crash/            Last changed: Apr 09 22:31:08
/var/cron/             Last changed: Jul 09 2007
/var/db/               Last changed: May 07 20:28:40
/var/empty/           Last changed: Jul 09 2007
/var/etc/              Last changed: Apr 16 22:35:36
/var/heimdal/          Last changed: Jul 10 2007
/var/home/             Last changed: Apr 09 22:59:18
/var/jail/             Last changed: Oct 31 2007
/var/log/              Last changed: Apr 17 02:00:10
/var/mail/             Last changed: Jul 09 2007
/var/msg/              Last changed: Jul 09 2007
/var/named/            Last changed: Jul 10 2007
/var/packages/         Last changed: Jan 18 02:38:59
/var/pdb/              Last changed: Oct 31 2007
/var/preserve/         Last changed: Jul 09 2007
/var/run/              Last changed: Apr 17 02:00:01
/var/rundb/            Last changed: Apr 17 00:46:00
/var/rwho/             Last changed: Jul 09 2007
/var/sdb/              Last changed: Apr 09 22:37:31
/var/spool/            Last changed: Jul 09 2007
/var/sw/               Last changed: Jul 09 2007
/var/tmp/              Last changed: Apr 09 23:28:41
/var/transfer/         Last changed: Jul 09 2007
/var/yp/               Last changed: Jul 09 2007
user@host> file list /var/

```

5. You can also display the contents of a file. For example:

```

user@host>file show /var/log/inventory
Jul  9 23:17:46 CHASSISD release 8.4I0 built by builder on 2007-06-12 07:58:27
UTC

```

```

Jul  9 23:18:05 CHASSISD release 8.4IO built by builder on 2007-06-12 07:58:27
UTC
Jul  9 23:18:06 Routing Engine 0 - part number 740-003239, serial number
9000016755
Jul  9 23:18:15 Routing Engine 1 - part number 740-003239, serial number
9001018324
Jul  9 23:19:03 SSB 0 - part number 710-001951, serial number AZ8025
Jul  9 23:19:03 SSRAM bank 0 - part number 710-001385, serial number 243071
Jul  9 23:19:03 SSRAM bank 1 - part number 710-001385, serial number 410608
...

```

## Specifying Filenames and URLs

In some CLI commands and configuration statements—including **file copy**, **file archive**, **load**, **save**, **set system login user *username* authentication *load-key-file***, and **request system software add**—you can include a filename. On a routing matrix, you can include chassis information as part of the filename (for example, **lcc0**, **lcc0-re0**, or **lcc0-re1**).

You can specify a filename or URL in one of the following ways:

- **filename**—File in the user's current directory on the local flash drive. You can use wildcards to specify multiple source files or a single destination file. Wildcards are not supported in Hypertext Transfer Protocol (HTTP) or FTP.



**NOTE:** Wildcards are supported only by the **file (compare | copy | delete | list | rename | show)** commands. When you issue the **file show** command with a wildcard, it must resolve to one filename.

- **path/filename**—File on the local flash disk.
- **/var/filename** or **/var/path/filename**—File on the local hard disk. You can also specify a file on a local Routing Engine for a specific T640 router on a routing matrix:  

```
user@host> file delete lcc0-re0:/var/tmp/junk
```
- **a:filename** or **a:path/filename**—File on the local drive. The default path is **/** (the root-level directory). The removable media can be in MS-DOS or UNIX (UFS) format.
- **hostname:/path/filename**, **hostname:filename**, **hostname:path/filename**, or **scp://hostname/path/filename**—File on an **scp/ssh** client. This form is not available in the worldwide version of Junos OS. The default path is the user's home directory on the remote system. You can also specify **hostname** as **username@hostname**.
- **ftp://hostname/path/filename**—File on an FTP server. You can also specify **hostname** as **username@hostname** or **username:password@hostname**. The default path is the user's home directory. To specify an absolute path, the path must start with **%2F**; for example, **ftp://hostname/%2Fpath/filename**. To have the system prompt you for the password, specify **prompt** in place of the password. If a password is required, and you do not specify the password or **prompt**, an error message is displayed:

```

user@host> file copy ftp://username@ftp.hostname.net//filename
file copy ftp.hostname.net: Not logged in.

user@host> file copy ftp://username:prompt@ftp.hostname.net//filename
Password for username@ftp.hostname.net:

```

- **http://hostname/path/filename**—File on an HTTP server. You can also specify *hostname* as *username@hostname* or *username:password@hostname*. If a password is required and you omit it, you are prompted for it.
- **re0:/path/filename** or **re1:/path/filename**—File on a local Routing Engine. You can also specify a file on a local Routing Engine for a specific T640 router on a routing matrix:  

```
user@host> show log lcc0-re1:chassisd
```

**Related  
Documentation**

- [Displaying Junos OS Information on page 220](#)

---

## Displaying Junos OS Information

**Supported Platforms**   [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can display Junos OS version information and other status to determine if the version of Junos OS that you are running supports particular features or hardware.

To display Junos OS information:

1. Make sure you are in operational mode.
2. To display brief information and status for the kernel and Packet Forwarding Engine, enter the **show version brief** command. This command shows version information for Junos OS packages installed on the router. For example:

```
user@host> show version brief
Hostname: host
Model: m7i
JUNOS Base OS boot [9.1R1.8]
JUNOS Base OS Software Suite [9.1R1.8]
JUNOS Kernel Software Suite [9.1R1.8]
JUNOS Crypto Software Suite [9.1R1.8]
JUNOS Packet Forwarding Engine Support (M/T Common) [9.1R1.8]
JUNOS Packet Forwarding Engine Support (M7i/M10i) [9.1R1.8]
JUNOS Online Documentation [9.1R1.8]
JUNOS Routing Software Suite [9.1R1.8]
```

```
user@host>
```

If the **Junos Crypto Software Suite** is listed, the router has Canada and USA encrypted Junos OS. If the **Junos Crypto Software Suite** is not listed, the router is running worldwide nonencrypted Junos OS.

3. To display detailed version information, enter the **show version detail** command. This command display shows the hostname and version information for Junos OS packages installed on your router. It also includes the version information for each software process. For example:

```
user@host> show version detail

Hostname: host
Model: m20
JUNOS Base OS boot [8.4R1.13]
JUNOS Base OS Software Suite [8.4R1.13]
JUNOS Kernel Software Suite [8.4R1.13]
JUNOS Crypto Software Suite [8.4R1.13]
```



JUNOS Packet Forwarding Engine Support (M/T Common) [8.4R1.13]  
JUNOS Packet Forwarding Engine Support (M20/M40) [8.4R1.13]  
JUNOS Online Documentation [8.4R1.13]  
JUNOS Routing Software Suite [8.4R1.13]  
KERNEL 8.4R1.13 #0 built by builder on 2007-08-08 00:33:41 UTC  
MGD release 8.4R1.13 built by builder on 2007-08-08 00:34:00 UTC  
CLI release 8.4R1.13 built by builder on 2007-08-08 00:34:47 UTC  
RPD release 8.4R1.13 built by builder on 2007-08-08 00:45:21 UTC  
CHASSISD release 8.4R1.13 built by builder on 2007-08-08 00:36:59 UTC  
DFWD release 8.4R1.13 built by builder on 2007-08-08 00:39:32 UTC  
DCD release 8.4R1.13 built by builder on 2007-08-08 00:34:24 UTC  
SNMPD release 8.4R1.13 built by builder on 2007-08-08 00:42:24 UTC  
MIB2D release 8.4R1.13 built by builder on 2007-08-08 00:46:47 UTC  
APSD release 8.4R1.13 built by builder on 2007-08-08 00:36:39 UTC  
VRRPD release 8.4R1.13 built by builder on 2007-08-08 00:45:44 UTC  
ALARMD release 8.4R1.13 built by builder on 2007-08-08 00:34:30 UTC  
PFED release 8.4R1.13 built by builder on 2007-08-08 00:41:54 UTC  
CRAFTD release 8.4R1.13 built by builder on 2007-08-08 00:39:03 UTC  
SAMPLED release 8.4R1.13 built by builder on 2007-08-08 00:36:05 UTC  
ILMID release 8.4R1.13 built by builder on 2007-08-08 00:36:51 UTC  
RMOPD release 8.4R1.13 built by builder on 2007-08-08 00:42:04 UTC  
COSD release 8.4R1.13 built by builder on 2007-08-08 00:38:39 UTC  
FSAD release 8.4R1.13 built by builder on 2007-08-08 00:43:01 UTC  
IRSD release 8.4R1.13 built by builder on 2007-08-08 00:35:37 UTC  
FUD release 8.4R1.13 built by builder on 2007-08-08 00:44:36 UTC  
RTSPD release 8.4R1.13 built by builder on 2007-08-08 00:29:14 UTC  
SMARTD release 8.4R1.13 built by builder on 2007-08-08 00:13:32 UTC  
KSYNCD release 8.4R1.13 built by builder on 2007-08-08 00:33:17 UTC  
SPD release 8.4R1.13 built by builder on 2007-08-08 00:43:50 UTC  
L2TPD release 8.4R1.13 built by builder on 2007-08-08 00:43:12 UTC  
HTTPD release 8.4R1.13 built by builder on 2007-08-08 00:36:27 UTC  
PPPOED release 8.4R1.13 built by builder on 2007-08-08 00:36:04 UTC  
RDD release 8.4R1.13 built by builder on 2007-08-08 00:33:49 UTC  
PPPD release 8.4R1.13 built by builder on 2007-08-08 00:45:13 UTC  
DFCD release 8.4R1.13 built by builder on 2007-08-08 00:39:11 UTC  
  
LACPD release 8.4R1.13 built by builder on 2007-08-08 00:35:41 UTC  
USBD release 8.4R1.13 built by builder on 2007-08-08 00:30:01 UTC  
LFMD release 8.4R1.13 built by builder on 2007-08-08 00:35:52 UTC  
CFMD release 8.4R1.13 built by builder on 2007-08-08 00:34:45 UTC  
JDHCPD release 8.4R1.13 built by builder on 2007-08-08 00:35:40 UTC  
PGCPD release 8.4R1.13 built by builder on 2007-08-08 00:46:31 UTC  
SSD release 8.4R1.13 built by builder on 2007-08-08 00:36:17 UTC  
MSPD release 8.4R1.13 built by builder on 2007-08-08 00:33:42 UTC  
KMD release 8.4R1.13 built by builder on 2007-08-08 00:44:02 UTC  
PPMD release 8.4R1.13 built by builder on 2007-08-08 00:36:03 UTC  
LMPD release 8.4R1.13 built by builder on 2007-08-08 00:33:49 UTC  
LRMUXD release 8.4R1.13 built by builder on 2007-08-08 00:33:55 UTC  
PGMD release 8.4R1.13 built by builder on 2007-08-08 00:36:01 UTC  
BFDD release 8.4R1.13 built by builder on 2007-08-08 00:44:22 UTC  
SDXD release 8.4R1.13 built by builder on 2007-08-08 00:36:18 UTC  
AUDITD release 8.4R1.13 built by builder on 2007-08-08 00:34:40 UTC  
L2ALD release 8.4R1.13 built by builder on 2007-08-08 00:40:05 UTC  
EVENTD release 8.4R1.13 built by builder on 2007-08-08 00:39:55 UTC  
L2CPD release 8.4R1.13 built by builder on 2007-08-08 00:41:04 UTC  
MPLSOAMD release 8.4R1.13 built by builder on 2007-08-08 00:45:11 UTC  
jroute-dd release 8.4R1.13 built by builder on 2007-08-08 00:31:01 UTC  
jkernel-dd release 8.4R1.13 built by builder on 2007-08-08 00:30:30 UTC  
jcrypto-dd release 8.4R1.13 built by builder on 2007-08-08 00:30:12 UTC  
jdocs-dd release 8.4R1.13 built by builder on 2007-08-08 00:02:52 UTC

```
user@host>
```

**Related Documentation** • [Managing Programs and Processes Using Junos OS Operational Mode Commands on page 222](#)

## Managing Programs and Processes Using Junos OS Operational Mode Commands

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

This topic shows some examples of Junos operational commands that you can use to manage programs and processes on a device running Junos OS.

Sections include:

- [Showing Software Processes on page 222](#)
- [Restarting a Junos OS Process on page 224](#)
- [Stopping the Junos OS on page 225](#)
- [Rebooting the Junos OS on page 226](#)

### Showing Software Processes

To verify system operation or to begin diagnosing an error condition, you may need to display information about software processes running on the device.

To show software processes:

1. Make sure you are in operational mode.
2. Type the **show system processes extensive** command. This command shows the CPU utilization on the device and lists the processes in order of CPU utilization. For example:

```
user@host> show system processes extensive
```

```
last pid: 28689; load averages: 0.01, 0.00, 0.00 up 56+06:16:13 04:52:04
73 processes: 1 running, 72 sleeping
```

```
Mem: 101M Active, 101M Inact, 98M Wired, 159M Cache, 69M Buf, 286M Free
Swap: 1536M Total, 1536M Free
```

PID	USERNAME	PRI	NICE	SIZE	RES	STATE	TIME	WCPU	CPU	COMMAND
3365	root	2	0	21408K	4464K	select	511:23	0.00%	0.00%	chassisd
3508	root	2	0	3352K	1168K	select	32:45	0.00%	0.00%	l2ald
3525	root	2	0	3904K	1620K	select	13:40	0.00%	0.00%	dcd
5532	root	2	0	11660K	2856K	kqread	10:36	0.00%	0.00%	rpd
3366	root	2	0	2080K	828K	select	8:33	0.00%	0.00%	alarmd
3529	root	2	0	2040K	428K	select	7:32	0.00%	0.00%	irsd
3375	root	2	0	2900K	1600K	select	6:01	0.00%	0.00%	ppmd
3506	root	2	0	5176K	2568K	select	5:38	0.00%	0.00%	mib2d
4957	root	2	0	1284K	624K	select	5:16	0.00%	0.00%	ntpd
6	root	18	0	0K	0K	syncer	4:49	0.00%	0.00%	syncer
3521	root	2	0	2312K	928K	select	2:14	0.00%	0.00%	lfmd
3526	root	2	0	5192K	1988K	select	2:04	0.00%	0.00%	snmpd
3543	root	2	0	0K	0K	peer_s	1:46	0.00%	0.00%	peer proxy

```

3512 root      2   0 3472K 1044K select  1:44 0.00% 0.00% rmopd
3537 root      2   0   0K   0K peer_s  1:30 0.00% 0.00% peer proxy

3527 root      2   0 3100K 1176K select  1:14 0.00% 0.00% pfed
3380 root      2   0 3208K 1052K select  1:11 0.00% 0.00% bfdd
4136 root      2   0 11252K 3668K select  0:54 0.00% 0.00% cli
3280 root      2   0 2248K 1420K select  0:28 0.00% 0.00% eventd
3528 root      2   0 2708K 672K select  0:28 0.00% 0.00% dfwd
7 root       -2   0   0K   0K vlrwt  0:26 0.00% 0.00% vn1ru
3371 root      2   0 1024K 216K sbwait  0:25 0.00% 0.00% tnp.sn1pd

13 root     -18   0   0K   0K psleep  0:24 0.00% 0.00% vmuncacheda

3376 root      2   0 1228K 672K select  0:22 0.00% 0.00% smartd
5 root     -18   0   0K   0K psleep  0:17 0.00% 0.00% bufdaemon

3368 root      2   0 15648K 9428K select  0:17 0.00% 0.00% mgd
3362 root      2   0 1020K 204K select  0:15 0.00% 0.00% watchdog
3381 root      2   0 2124K 808K select  0:15 0.00% 0.00% lacpd
3524 root      2   0 6276K 1492K select  0:14 0.00% 0.00% kmd
3343 root     10   0 1156K 404K nanslp  0:14 0.00% 0.00% cron
---(more)---

```

[Table 13 on page 224](#) lists and describes the output fields included in this example. The fields are listed in alphabetical order.

Table 13: show system process extensive Command Output Fields

Field	Description
<b>COMMAND</b>	Command that is running.
<b>CPU</b>	Raw (unweighted) CPU usage. The value of this field is used to sort the processes in the output.
<b>last pid</b>	Last process identifier assigned to the process.
<b>load averages</b>	Three load averages, followed by the current time.
<b>Mem</b>	Information about physical and virtual memory allocation.
<b>NICE</b>	UNIX “nice” value. The nice value allows a process to change its final scheduling priority.
<b>PID</b>	Process identifier.
<b>PRI</b>	Current kernel scheduling priority of the process. A lower number indicates a higher priority.
<b>processes</b>	Number of existing processes and the number of processes in each state ( <b>sleeping</b> , <b>running</b> , <b>starting</b> , <b>zombies</b> , and <b>stopped</b> ).
<b>RES</b>	Current amount of resident memory, in KB.
<b>SIZE</b>	Total size of the process ( <b>text</b> , <b>data</b> , and <b>stack</b> ), in KB.
<b>STATE</b>	Current state of the process ( <b>sleep</b> , <b>wait</b> , <b>run</b> , <b>idle</b> , <b>zombi</b> , or <b>stop</b> ).
<b>Swap</b>	Information about physical and virtual memory allocation.
<b>USERNAME</b>	Owner of the process.
<b>WCPU</b>	Weighted CPU usage.

## Restarting a Junos OS Process

To correct an error condition, you might need to restart a software process running on the device. You can use the **restart** command to force a restart of a software process.



**CAUTION:** Do not restart a software process unless specifically asked to do so by your Juniper Networks customer support representative. Restarting a software process during normal operation of a device could cause interruption of packet forwarding and loss of data.

To restart a software process:

1. Make sure you are in operational mode.
2. Type the following command:

```
user@host> restart process-name < (immediately | gracefully | soft) >
```

- **process-name** is the name of the process that you want to restart. For example, **routing** or **class-of-service**. You can use the command completion feature of Junos OS to see a list of software processes that you can restart using this command.
- **gracefully** restarts the software process after performing clean-up tasks.
- **immediately** restarts the software process without performing any clean-up tasks.
- **soft** rereads and reactivates the configuration without completely restarting the software processes. For example, BGP peers stay up and the routing table stays constant.

The following example shows how to restart the routing process:

```
user@host> restart routing
Routing protocol daemon started, pid 751
```

When a process restarts, the process identifier (PID) is updated. (See [Figure 14 on page 225](#).)

Figure 14: Restarting a Process

	PID	USERNAME	PRI	NICE	SIZE	RES	STATE	TIME	WCPU	CPU	COMMAND
PID before restart	546	root	10	0	9096K	1720K	nanslp	0:21	0.00%	0.00%	chassisd
	<b>685</b>	<b>root</b>	<b>2</b>	<b>0</b>	<b>12716K</b>	<b>3840K</b>	<b>kqread</b>	<b>0:01</b>	<b>0.00%</b>	<b>0.00%</b>	<b>rp</b>
	553	root	2	0	8792K	1544K	select	0:01	0.00%	0.00%	mib2d
PID after restart	547	root	2	0	7732K	888K	select	0:00	0.00%	0.00%	alarmd
	545	root	2	0	10292K	2268K	select	0:00	0.00%	0.00%	dcd
	1	root	10	0	816K	520K	wait	0:00	0.00%	0.00%	init
	550	root	2	-12	1308K	692K	select	0:00	0.00%	0.00%	ntpd
	758	root	32	0	21716K	832K	RUN	0:00	0.00%	0.00%	top
	560	root	2	0	8208K	1088K	select	0:00	0.00%	0.00%	rmopd
	561	root	2	0	8188K	1156K	select	0:00	0.00%	0.00%	cosd
	559	root	2	0	1632K	840K	select	0:00	0.00%	0.00%	ilmid
	573	lab	2	0	7480K	2580K	select	0:00	0.00%	0.00%	cli
	<b>751</b>	<b>root</b>	<b>2</b>	<b>0</b>	<b>12716K</b>	<b>3944K</b>	<b>kqread</b>	<b>0:00</b>	<b>0.00%</b>	<b>0.00%</b>	<b>rp</b>
	558	root	2	20	8708K	1880K	select	0:00	0.00%	0.00%	samp
	555	root	2	0	1856K	932K	select	0:00	0.00%	0.00%	vrrpd
	686	root	2	0	7808K	940K	select	0:00	0.00%	0.00%	ap

## Stopping the Junos OS

To avoid damage to the file system and to prevent loss of data, you must always gracefully shut down Junos OS before powering off the device.



**NOTE:** SRX Series Services Gateway devices for the branch and EX Series Ethernet Switches support resilient dual-root partitioning.

If you are unable to shut down a device gracefully because of unexpected circumstances such as a power outage or a device failure, resilient dual-root partitioning prevents file corruption and enables a device to remain operational. In addition, it enables a device to boot transparently from the second root partition if the system fails to boot from the primary root partition.

Resilient dual-root partitioning serves as a backup mechanism for providing additional resiliency to a device when there is an abnormal shutdown. However, it is not an alternative to performing a graceful shutdown under normal circumstances.

To stop Junos OS:

1. Make sure you are in operational mode.
2. Enter the **request system halt** command. This command stops all system processes and halts the operating system. For example:

```
user@host> request system halt
Halt the system? [yes,no] (no) yes
shutdown: [pid 3110]
Shutdown NOW!
*** FINAL System shutdown message from root@host ***
System going down IMMEDIATELY
user@host> Dec 17 17:28:40 init: syslogd (PID 2514) exited with status=0 Normal
Exit
Waiting (max 60 seconds) for system process `bufdaemon' to stop...stopped
Waiting (max 60 seconds) for system process `syncer' to stop...stopped
syncing disks... 4
done
Uptime: 3h31m41s
ata0: resetting devices.. done
The operating system has halted.
Please press any key to reboot.
```

## Rebooting the Junos OS

After a software upgrade or to recover (occasionally) from an error condition, you must reboot Junos OS.

To reboot the Junos OS:

1. Make sure you are in operational mode.
2. Enter the **request system reboot** command. This command displays the final stages of the system shutdown and executes the reboot. Reboot requests are recorded to the system log files, which you can view with the **show log messages** command. For example:

```
user@host> request system reboot
Reboot the system? [yes,no] (no) yes
```

```

shutdown: [pid 845]
Shutdown NOW!
*** FINAL System shutdown message from root@host ***
System going down IMMEDIATELY
user@host> Dec 17 17:34:20 init: syslogd (PID 409) exited with status=0 Normal
Exit
Waiting (max 60 seconds) for system process `bufdaemon' to stop...stopped
Waiting (max 60 seconds) for system process `syncer' to stop...stopped
syncing disks... 10 6
done
Uptime: 2m45s
ata0: resetting devices.. done
Rebooting...

```

- Related Documentation**
- [Checking the Status of a Device Running Junos OS on page 213](#)
  - [Displaying Junos OS Information on page 220](#)

## Using the Junos OS CLI Comment Character # for Operational Mode Commands

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The comment character in Junos OS enables you to copy operational mode commands that include comments from a file and paste them into the CLI. A pound sign (#) at the beginning of the command-line indicates a comment line. This is useful for describing frequently used operational mode commands; for example, a user's work instructions on how to monitor the network. To add a comment to a command file, the first character of the line must be #. When you start a command with #, the rest of the line is disregarded by Junos OS.

To add comments in operational mode, start with a # and end with a new line (carriage return):

```
user@host> # comment-string
```

*comment-string* is the text of the comment. The comment text can be any length, but each comment line must begin with a #.

- Related Documentation**
- [Example: Using Comments in Junos OS Operational Mode Commands on page 227](#)

## Example: Using Comments in Junos OS Operational Mode Commands

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

The following example shows how to use comments in a file:

```

#Command 1: Show the router version
show version
#Command 2: Show all router interfaces
show interfaces terse

```

The following example shows how to copy and paste contents of a file into the CLI:

```
user@host> #Command 1: Show the router version
```

```
user@host> show version
Hostname: myhost
Model: m5
Junos Base OS boot [6.4-20040511.0]
Junos Base OS Software Suite [6.4-20040511.0]
Junos Kernel Software Suite [6.4-20040511.0]
Junos Packet Forwarding Engine Support (M5/M10) [6.4-20040511.0] Junos Routing
  Software Suite [6.4-20040511.0] Junos Online Documentation [6.4-20040511.0] Junos
  Crypto Software Suite [6.4-20040511.0]
user@host> # Command 2: Show all router interfaces
user@host> show interfaces terse
Interface Admin Link Proto Local Remote
fe-0/0/0 up up
fe-0/0/1 up down
fe-0/0/2 up down
mo-0/1/0 up
mo-0/1/0.16383 up up inet 10.0.0.1 --> 10.0.0.17
so-0/2/0 up up
so-0/2/1 up up
dsc up up
fxp0 up up
fxp0.0 up up inet 192.168.70.62/21
fxp1 up up
fxp1.0 up up tnp 4
gre up up
ipip up up
lo0 up up
lo0.0 up up inet 127.0.0.1 --> 0/0
lo0.16385 up up inet
```

**Related Documentation**

- [Using the Junos OS CLI Comment Character # for Operational Mode Commands on page 227](#)



## CHAPTER 22

# Managing the CLI Environment

- [Controlling the Junos OS CLI Environment on page 229](#)
- [Overview of Junos OS CLI Operational Mode Commands on page 231](#)
- [Setting the Junos OS CLI Screen Length and Width on page 234](#)

## Controlling the Junos OS CLI Environment

---

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

In operational mode, you can control the Junos OS command-line interface (CLI) environment. For example, you can specify the number of lines that are displayed on the screen or your terminal type. The following output lists the options that you can use to control the CLI environment:

```
user@host>set cli ?
Possible completions:
  complete-on-space  Set whether typing space completes current word
  directory          Set working directory
  idle-timeout       Set maximum idle time before login session ends
  logical-system     Set default logical system
  prompt            Set CLI command prompt string
  restart-on-upgrade Set whether CLI prompts to restart after software upgrade

  screen-length      Set number of lines on screen
  screen-width       Set number of characters on a line
  terminal           Set terminal type
  timestamp          Timestamp CLI output
```



**NOTE:** When you use SSH to log in to the router or log in from the console when its terminal type is already configured, your terminal type, screen length, and screen width are already set.

This chapter discusses the following topics:

- [Setting the Terminal Type on page 230](#)
- [Setting the CLI Prompt on page 230](#)
- [Setting the CLI Directory on page 230](#)
- [Setting the CLI Timestamp on page 230](#)

- [Setting the Idle Timeout on page 230](#)
- [Setting the CLI to Prompt After a Software Upgrade on page 230](#)
- [Setting Command Completion on page 231](#)
- [Displaying CLI Settings on page 231](#)

## Setting the Terminal Type

To set the terminal type, use the **set cli terminal** command:

```
user@host> set cli terminal terminal-type
```

The terminal type can be one of the following: **ansi**, **vt100**, **small-xterm**, or **xterm**.

## Setting the CLI Prompt

The default CLI prompt is **user@host>**. To change this prompt, use the **set cli prompt** command. If the prompt string contains spaces, enclose the string in quotation marks ( " ").

```
user@host> set cli prompt string
```

## Setting the CLI Directory

To set the current working directory, use the **set cli directory** command:

```
user@host> set cli directory directory
```

**directory** is the pathname of working directory.

## Setting the CLI Timestamp

By default, CLI output does not include a timestamp. To include a timestamp in CLI output, use the **set cli timestamp** command:

```
user@host> set cli timestamp [format time-date-format | disable]
```

If you do not specify a timestamp format, the default format is **Mmm dd hh:mm:ss** (for example, Feb 08 17:20:49). Enclose the format in single quotation marks ( ' ).

## Setting the Idle Timeout

By default, an individual CLI session never times out after extended times, unless the **idle-timeout** statement has been included in the user's login class configuration. To set the maximum time an individual session can be idle before the user is logged off the router, use the **set cli idle-timeout** command:

```
user@host> set cli idle-timeout timeout
```

**timeout** can be 0 through 100,000 minutes. Setting **timeout** to 0 disables the timeout.

## Setting the CLI to Prompt After a Software Upgrade

By default, the CLI prompts you to restart after a software upgrade. To disable the prompt for an individual session, use the **set cli restart-on-upgrade off** command:

```
user@host> set cli restart-on-upgrade off
```

To reenable the prompt, use the **set cli restart-on-upgrade on** command:

```
user@host> set cli restart-on-upgrade on
```

## Setting Command Completion

By default, you can press Tab or the Spacebar to have the CLI complete a command.

To have the CLI allow only a tab to complete a command, use the **set cli complete-on-space off** command:

```
user@host> set cli complete-on-space off
Disabling complete-on-space
user@host>
```

To reenable the use of both spaces and tabs for command completion, use the **set cli complete-on-space on** command:

```
user@host> set cli complete-on-space on
Enabling complete-on-space
user@host>
```

## Displaying CLI Settings

To display the current CLI settings, use the **show cli** command:

```
user@host> show cli
CLI screen length set to 24
CLI screen width set to 80
CLI complete-on-space set to on
```

**Related Documentation**

- [Example: Controlling the CLI Environment on page 169](#)

---

## Overview of Junos OS CLI Operational Mode Commands

**Supported Platforms**    [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

This topic provides an overview of Junos OS CLI operational mode commands and contains the following sections:

- [CLI Command Categories on page 231](#)
- [Commonly Used Operational Mode Commands on page 233](#)

## CLI Command Categories

When you log in to a device running Junos OS and the CLI starts, there are several broad groups of CLI commands:

- Commands for controlling the CLI environment—Some set commands in the **set** hierarchy configure the CLI display screen. For information about these commands, see [“Understanding the Junos OS CLI Modes, Commands, and Statement Hierarchies” on page 5](#).
- Commands for monitoring and troubleshooting—The following commands display information and statistics about the software and test network connectivity. Detailed command descriptions are provided in [CLI Explorer](#).
  - **clear**—Clear statistics and protocol database information.
  - **mtrace**—Trace mtrace packets from source to receiver.
  - **monitor**—Perform real-time debugging of various software components, including the routing protocols and interfaces.
  - **ping**—Determine the reachability of a remote network host.
  - **show**—Display the current configuration and information about interfaces, routing protocols, routing tables, routing policy filters, system alarms, and the chassis.
  - **test**—Test the configuration and application of policy filters and autonomous system (AS) path regular expressions.
  - **traceroute**—Trace the route to a remote network host.
- Commands for connecting to other network systems—The **ssh** command opens Secure Shell connections, and the **telnet** command opens telnet sessions to other hosts on the network. For information about these commands, see [CLI Explorer](#).
- Commands for copying files—The **copy** command copies files from one location on the router or switch to another, from the router or switch to a remote system, or from a remote system to the router or switch. For information about these commands, see [CLI Explorer](#).
- Commands for restarting software processes—The commands in the **restart** hierarchy restart the various Junos OS processes, including the routing protocol, interface, and SNMP. For information about these commands, see [CLI Explorer](#).
- A command—**request**—for performing system-level operations, including stopping and rebooting the router or switch and loading Junos OS images. For information about this command, see [CLI Explorer](#).
- A command—**start**—to exit the CLI and start a UNIX shell. For information about this command, see [CLI Explorer](#).
- A command—**configure**—for entering configuration mode, which provides a series of commands that configure Junos OS, including the routing protocols, interfaces, network management, and user access. For information about the CLI configuration commands, see [“Understanding Junos OS CLI Configuration Mode” on page 33](#).
- A command—**quit**—to exit the CLI. For information about this command, see [CLI Explorer](#).

## Commonly Used Operational Mode Commands

Table 4 on page 17 lists some operational commands you may find useful for monitoring router or switch operation. For a complete description of operational commands, see the Junos OS command references.



**NOTE:** The QFX3500 switch does not support the IS-IS, OSPF, BGP, MPLS, and RSVP protocols.

**Table 14: Commonly Used Operational Mode Commands**

Items to Check	Description	Command
Software version	Versions of software running on the router or switch	<b>show version</b>
Log files	Contents of the log files	<b>monitor</b>
	Log files and their contents and recent user logins	<b>show log</b>
Remote systems	Host reachability and network connectivity	<b>ping</b>
	Route to a network system	<b>traceroute</b>
Configuration	Current system configuration	<b>show configuration</b>
Manipulate files	List of files and directories on the router or switch	<b>file list</b>
	Contents of a file	<b>file show</b>
Interface information	Detailed information about interfaces	<b>show interfaces</b>
Chassis	Chassis alarm status	<b>show chassis alarms</b>
	Information currently on craft display	<b>show chassis craft-interface</b>
	Router or switch environment information	<b>show chassis environment</b>
	Hardware inventory	<b>show chassis hardware</b>
Routing table information	Information about entries in the routing tables	<b>show route</b>
Forwarding table information	Information about data in the kernel's forwarding table	<b>show route forwarding-table</b>
IS-IS	Adjacent routers or switches	<b>show isis adjacency</b>
OSPF	Display standard information about OSPF neighbors	<b>show ospf neighbor</b>
BGP	Display information about BGP neighbors	<b>show bgp neighbor</b>

Table 14: Commonly Used Operational Mode Commands (*continued*)

Items to Check	Description	Command
MPLS	Status of interfaces on which MPLS is running	<b>show mpls interface</b>
	Configured LSPs on the router or switch, as well as all ingress, transit, and egress LSPs	<b>show mpls lsp</b>
	Routes that form a label-switched path	<b>show route label-switched-path</b>
RSVP	Status of interfaces on which RSVP is running	<b>show rsvp interface</b>
	Currently active RSVP sessions	<b>show rsvp session</b>
	RSVP packet and error counters	<b>show rsvp statistics</b>

#### Related Documentation

- [Junos OS Operational Mode Commands That Combine Other Commands on page 18](#)
- [Understanding the Brief, Detail, Extensive, and Terse Options of Junos OS Operational Commands on page 19](#)

## Setting the Junos OS CLI Screen Length and Width

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

You can set the Junos OS command-line interface (CLI) screen length and width according to your specific requirements. This topic contains the following sections:

- [Setting the Screen Length on page 234](#)
- [Setting the Screen Width on page 234](#)
- [Understanding the Screen Length and Width Settings on page 235](#)

### Setting the Screen Length

The default CLI screen length is 24 lines. To change the length, use the **set cli screen-length** command:

```
user@host> set cli screen-length length
```

Setting the screen length to 0 lines disables the display of output one screen at a time. Disabling this UNIX **more**-type interface can be useful when you are issuing CLI commands from scripts.

### Setting the Screen Width

The default CLI screen width is 80 characters. To change the width, use the **set cli screen-width** command:

```
user@host> set cli screen-width width
```

## Understanding the Screen Length and Width Settings

The **cli screen-length** and **cli screen-width** settings in combination with each other and the size of the telnet or console window determine the extent of output displayed before each **--more--** prompt appears.

The following examples explain how the **cli screen-length** and **cli screen-width** values determine the appearance of the output:

- When the CLI screen width is set to the default value (80 characters) and the cli screen length to 10 lines, the **--more--** prompt appears on the tenth line of the output.
- When the CLI screen width is set to 20 characters and the CLI screen length is set to 6 lines in a telnet or console window that is wide enough to contain 40 characters, the **--more--** prompt appears on the fourth line of the output. Here each one of the first two lines has more than 20 characters and is counted as two lines. The third line contains the fifth line of output, and the fourth line contains the **--more--** prompt, which has to appear in the sixth line as per the setting.



**NOTE:** If you have inadvertently set the CLI screen width to a lower value that does not allow you to see the commands that you are typing, reset the CLI screen width with a higher value by entering the **set cli screen-width** command.



**TIP:** If you are not able to see the command that you are entering, type the command in a text editor and copy it at the command prompt.

### Related Documentation

- [Example: Controlling the CLI Environment on page 169](#)
- [Controlling the Junos OS CLI Environment on page 229](#)





# CLI Advanced Features

- [Common Regular Expressions to Use with the replace Command on page 237](#)

## Common Regular Expressions to Use with the replace Command

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Table 15: Common Regular Expressions to Use with the replace Command**

Operator	Function
	Indicates that a match can be one of the two terms on either side of the pipe.
^	Used at the beginning of an expression, denotes where a match should begin.
\$	Used at the end of an expression, denotes that a term must be matched exactly up to the point of the \$ character.
[ ]	Specifies a range of letters or digits to match. To separate the start and end of a range, use a hyphen ( - ).
( )	Specifies a group of terms to match. Stored as numbered variables. Use for back references as \1 \2 .... \9.
*	0 or more terms.
+	One or more terms.
.	Any character except for a space ( " ").
\	A backslash escapes special characters to suppress their special meaning. For example, \. matches . (period symbol).
\n	Back reference. Matches the <i>n</i> th group.
&	Back reference. Matches the entire match.

[Table 16 on page 238](#) lists some replacement examples.

Table 16: Replacement Examples

Command	Result
replace pattern myrouter with router1	Match: myrouter Result: router1
replace pattern "192.168\.(*)/24" with "10.2.1/28"	Match: 192.168.3.4/24 Result: 10.2.3.4/28
replace pattern "1.1" with "abc&def"	Match: 1.1 Result: abc1.1def
replace pattern 1.1 with "abc\&def"	Match: 1#1 Result: abc&def

**Related  
Documentation**

- [Using Global Replace in a Junos Configuration on page 49](#)
- [Example: Using Global Replace in a Junos Configuration—Using the \n Back Reference on page 171](#)

## CHAPTER 24

# Junos OS CLI Environment Commands

- `set cli complete-on-space`
- `set cli directory`
- `set cli idle-timeout`
- `set cli prompt`
- `set cli restart-on-upgrade`
- `set cli screen-length`
- `set cli screen-width`
- `set cli terminal`
- `set cli timestamp`
- `set date`
- `show cli`
- `show cli authorization`
- `show cli directory`
- `show cli history`

## set cli complete-on-space

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	set cli complete-on-space (off   on)
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Set the command-line interface (CLI) to complete a partial command entry when you type a space or a tab. This is the default behavior of the CLI.
<b>Options</b>	<b>off</b> —Turn off command completion.  <b>on</b> —Allow either a space or a tab to be used for command completion.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show cli on page 250</a></li></ul>
<b>List of Sample Output</b>	<a href="#">set cli complete-on-space on page 240</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

### Sample Output

#### set cli complete-on-space

In the following example, pressing the Spacebar changes the partial command entry from **com** to **complete-on-space**. The example shows how adding the keyword **off** at the end of the command disables command completion.

```
user@host> set cli com<Space>
user@host>set cli complete-on-space off
Disabling complete-on-space
```

## set cli directory

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	set cli directory <i>directory</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Set the current working directory.
<b>Options</b>	<i>directory</i> —Pathname of the working directory.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">set cli directory on page 241</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### set cli directory

```
user@host> set cli directory /var/tmp
Current directory: /var/tmp
```

## set cli idle-timeout

---

**Supported Platforms** [EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series](#)

**Syntax** `set cli idle-timeout  
<minutes>`

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Set the maximum time that an individual session can be idle before the user is logged off the router or switch.

**Options** *minutes*—(Optional) Maximum idle time. The range of values, in minutes, is 0 through 100,000. If you do not issue this command, and the user's login class does not specify this value, the user is never forced off the system after extended idle times. Setting the value to 0 disables the timeout.

**Required Privilege Level** view

**List of Sample Output** [set cli idle-timeout on page 242](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

### Sample Output

`set cli idle-timeout`

```
user@host> set cli idle-timeout 60  
Idle timeout set to 60 minutes
```

## set cli prompt

---

Supported Platforms	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
Syntax	set cli prompt <i>string</i>
Release Information	Command introduced before Junos OS Release 7.4.
Description	<p>Set the prompt so that it is displayed within the CLI.</p> <pre>user@host&gt; set cli prompt lab1-router&gt;</pre>
Options	<i>string</i> —CLI prompt string. To include spaces in the prompt, enclose the string in quotation marks. By default, the string is <i>username@hostname</i> .
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Setting the CLI Prompt on page 230</a></li></ul>

## set cli restart-on-upgrade

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	set cli restart-on-upgrade string (off   on)
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For an individual session, set the CLI to prompt you to restart the router after upgrading the software.</p> <pre>user@host&gt; set cli restart-on-upgrade on Enabling restart-on-upgrade</pre>
<b>Options</b>	<p><b>off</b>—Disables the prompt.</p> <p><b>on</b>—Enables the prompt.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Setting the CLI to Prompt After a Software Upgrade on page 230</a></li></ul>



---

## set cli screen-length

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

**Syntax** set cli screen-length *length*

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Set terminal screen length.

```
user@host> set cli screen-length 75
Screen length set to 75
```

**Options** *length*—Number of lines of text that the terminal screen displays. The range of values, in number of lines, is 24 through 100,000. The default is 24.

The point at which the ---(**more**)--- prompt appears on the screen is a function of this setting and the settings for the **set cli screen-width** and **set cli terminal** commands.

**Required Privilege Level** view

- Related Documentation**
- [Setting the Screen Length on page 234](#)
  - [Understanding the Screen Length and Width Settings on page 235](#)
  - [set cli screen-width on page 246](#)
  - [set cli terminal on page 247](#)
  - [show cli](#)

## set cli screen-width

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, SRX Series, T Series
<b>Syntax</b>	set cli screen-width <width>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Set the terminal screen width.</p> <pre>user@host&gt; set cli screen-width 132</pre> <p>Screen width set to 132</p>
<b>Options</b>	<p><b>width</b>—Number of characters in a line. The value is 0 or in the range of 0 through 1024. The default value is 80.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Setting the Screen Width on page 234</a></li><li>• <a href="#">set cli screen-length on page 245</a></li><li>• <a href="#">set cli terminal on page 247</a></li><li>• <a href="#">show cli</a></li></ul>

---

## set cli terminal

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	set cli terminal <i>terminal-type</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Set the terminal type.</p> <pre>user@host&gt; set cli terminal xterm</pre>
<b>Options</b>	<p><i>terminal-type</i>—Type of terminal that is connected to the Ethernet management port:</p> <ul style="list-style-type: none"><li>• <b>ansi</b>—ANSI-compatible terminal (80 characters by 24 lines)</li><li>• <b>small-xterm</b>—Small xterm window (80 characters by 24 lines)</li><li>• <b>vt100</b>—VT100-compatible terminal (80 characters by 24 lines)</li><li>• <b>xterm</b>—Large xterm window (80 characters by 65 lines)</li></ul>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Setting the Terminal Type on page 230</a></li></ul>

## set cli timestamp

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, SRX Series, T Series
<b>Syntax</b>	set cli timestamp (format <i>timestamp-format</i>   disable)
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Set a timestamp for CLI output.</p> <pre>user@host&gt; set cli timestamp format '%m-%d-%T' '04-21-17:39:13' CLI timestamp set to: '%m-%d-%T'</pre>
<b>Options</b>	<p><b>format <i>timestamp-format</i></b>—Set the data and time format for the timestamp. The timestamp format you specify can include the following placeholders in any order:</p> <ul style="list-style-type: none"><li>• <b>%m</b>—Two-digit month</li><li>• <b>%d</b>—Two-digit date</li><li>• <b>%T</b>—Six-digit hour, minute, and seconds</li></ul> <p>Enclose the format in single quotation marks ( ' ). Do not use spaces. Use a hyphen ( - ) or similar character to separate placeholders.</p> <p><b>disable</b>—Remove the timestamp from the CLI.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Setting the CLI Timestamp on page 230</a></li></ul>

## set date

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	set date ( <i>date-time</i>   ntp < <i>ntp-server</i> > <source-address <i>source-address</i> >)
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Set the date and time.  <pre>user@host&gt; set date ntp 21 Apr 17:22:02 ntpdate[3867]: step time server 172.17.27.46 offset 8.759252 sec</pre>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>date-time</i>—Specify date and time in one of the following formats: <ul style="list-style-type: none"> <li>• <i>YYYYMMDDHHMM.SS</i></li> <li>• “<i>month DD, YYYY HH:MM(am   pm)</i>”</li> </ul> </li> <li>• <i>ntp</i>—Configure the router to synchronize the current date and time setting with a Network Time Protocol (NTP) server.</li> <li>• <i>ntp-server</i>—(Optional) Specify the IP address of one or more NTP servers.</li> <li>• <i>source-address source-address</i>—(Optional) Specify the source address that is used by the router to contact the remote NTP server.</li> </ul>
<b>Required Privilege Level</b>	view

## show cli

Supported Platforms	<a href="#">SRX Series</a>
Syntax	show cli
Release Information	Command introduced before Junos OS Release 7.4.
Description	Display configured CLI settings.
Options	This command has no options.
Required Privilege Level	view
List of Sample Output	<a href="#">show cli on page 250</a>
Output Fields	<a href="#">Table 17 on page 250</a> lists the output fields for the <b>show cli</b> command. Output fields are listed in the approximate order in which they appear.

Table 17: show cli Output Fields

Field Name	Field Description
CLI complete-on-space	Capability to complete a partial command entry when you type a space or a tab: <b>on</b> or <b>off</b> .
CLI idle-timeout	Maximum time that an individual session can be idle before the user is logged out from the router or switch. When this feature is enabled, the number of minutes is displayed. Otherwise, the state is <b>disabled</b> .
CLI restart-on-upgrade	CLI is set to prompt you to restart the router or switch after upgrading the software: <b>on</b> or <b>off</b> .
CLI screen-length	Number of lines of text that the terminal screen displays.
CLI screen-width	Number of characters in a line on the terminal screen.
CLI terminal	Terminal type.
CLI is operating in	Mode: <b>enhanced</b> .
CLI timestamp	Date and time format for the timestamp. If the timestamp is not set, the state is <b>disabled</b> .
CLI working directory	Pathname of the working directory.

## Sample Output

show cli

```
user@host> show cli
CLI complete-on-space set to on
CLI idle-timeout disabled
CLI restart-on-upgrade set to on
```

```
CLI screen-length set to 47
CLI screen-width set to 132
CLI terminal is 'vt100'
CLI is operating in enhanced mode
CLI timestamp disabled
CLI working directory is '/var/tmp'
```

## show cli authorization

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, SRX Series, T Series

**Syntax** show cli authorization

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display the permissions for the current user.

```
user@host> show cli authorization
Current user: 'root' login: 'boojum' class '(root)'
Permissions:
Permissions:
  admin      -- Can view user accounts
  admin-control-- Can modify user accounts
  clear      -- Can clear learned network info
  configure  -- Can enter configuration mode
  control    -- Can modify any config
  edit       -- Can edit full files
  field      -- Can use field debug commands
  floppy     -- Can read and write the floppy
  interface  -- Can view interface configuration
  interface-control-- Can modify interface configuration
  network    -- Can access the network
  reset      -- Can reset/restart interfaces and daemons
  routing    -- Can view routing configuration
  routing-control-- Can modify routing configuration
  shell      -- Can start a local shell
  snmp       -- Can view SNMP configuration
  snmp-control-- Can modify SNMP configuration
  system     -- Can view system configuration
  system-control-- Can modify system configuration
  trace      -- Can view trace file settings
  trace-control-- Can modify trace file settings
  view       -- Can view current values and statistics
  maintenance -- Can become the super-user
  firewall   -- Can view firewall configuration
  firewall-control-- Can modify firewall configuration
  secret     -- Can view secret statements
  secret-control-- Can modify secret statements
  rollback   -- Can rollback to previous configurations
  security   -- Can view security configuration
  security-control-- Can modify security configuration
  access     -- Can view access configuration
  access-control-- Can modify access configuration
  view-configuration-- Can view all configuration (not including secrets)
  flow-tap    -- Can view flow-tap configuration
  flow-tap-control-- Can modify flow-tap configuration
  idp-profiler-operation-- Can Profiler data
  pgcp-session-mirroring-- Can view pgcp session mirroring configuration
  pgcp-session-mirroring-control-- Can modify pgcp session mirroring
  configuration
  storage     -- Can view fibre channel storage protocol configuration
  storage-control-- Can modify fibre channel storage protocol configuration
  all-control -- Can modify any configuration
```

**Required Privilege Level** view



## show cli directory

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Syntax** show cli directory

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display the current working directory.

```
user@host> show cli directory
Current directory: /var/tmp
```

**Required Privilege Level** view

## show cli history

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Syntax** `show cli history <count>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display a list of previous CLI commands.

```
user@host> show cli history
11:14:14 -- show arp
11:22:10 -- show cli authorization
11:27:12 -- show cli history
```

**Options** none—Display all previous CLI commands.

**count**—(Optional) Maximum number of commands to display.

**Required Privilege Level** view

**Related Documentation**

- [Displaying the Junos OS CLI Command and Word History on page 166](#)

## CHAPTER 25

# Operational Commands

- | (pipe)
- activate
- annotate
- commit
- configure
- copy
- file
- help
- request
- restart
- set
- show
- show configuration
- show | display inheritance
- show | display omit
- show | display set
- show | display set relative
- show groups junos-defaults
- show system commit

## | (pipe)

---

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

**Syntax** | (compare | count | display (changed | commit-scripts | detail | display set | inheritance | omit | xml) | except *pattern* | find *pattern* | hold | last *lines* | match *pattern* | no-more | request message (all | *account@terminal*) resolve <full-names> | save *filename* | trim *columns* )

**Release Information** Command introduced before Junos OS Release 7.4.  
display commit-scripts option added in Junos OS Release 7.4.

**Description** Filter the output of an operational mode or a configuration mode command.

- Options**
- compare (filename | rollback *n* )**—(Configuration mode only, and only with the **show** command) Compare configuration changes with another configuration file.
  - count**—Display the number of lines in the output.
  - display**—Display additional information about the configuration contents.
    - **changed**—Tag changes with **junos:changed attribute** (XML only).
    - **commit-scripts**—(Configuration mode only) Display all statements that are in a configuration, including statements that were generated by transient changes. For more information, see the *Junos OS Configuration and Operations Automation Library*.
    - **detail**—(Configuration mode only) Display configuration data detail.
    - **inheritance <brief | default | no-comments | groups | terse>**—(Configuration mode only) Display inherited configuration data and source group.
    - **omit**—(Configuration mode only) Display configuration statements omitted by the **apply-flags omit** configuration statement.
    - **set**—Display the configuration as a series of configuration mode commands required to re-create the configuration.
    - **xml**—(Operational mode only) Display the command output as Junos XML protocol (Extensible Markup Language [XML]) tags.
  - except *pattern***—Ignore text matching a regular expression when searching the output. If the regular expression contains spaces, operators, or wildcard characters, enclose it in quotation marks.
  - find *pattern***—Display the output starting at the first occurrence of text matching a regular expression. If the regular expression contains spaces, operators, or wildcard characters, enclose it in quotation marks (" ").
  - last *lines***—Display the last number of lines you want to view from the end of the configuration. However, when the number of lines requested is less than the number of lines that the screen length setting permits you to display, Junos returns as many lines

as permitted by the screen length setting. For more information on using the **last lines** option, see [“Displaying Output Beginning with the Last Entries” on page 28](#).

**hold**—Hold text without exiting the **--More--** prompt.

**match *pattern***—Search for text matching a regular expression. If the regular expression contains spaces, operators, or wildcard characters, enclose it in quotation marks.

**no-more**—Display output all at once rather than one screen at a time.

**resolve**—Convert IP addresses into Domain Name System (DNS) names. Truncates to fit original size unless **full-names** is specified. To prevent the names from being truncated, use the **full-names** option.

**request message (all | *account@terminal*)**—Display command output on the terminal of a specific user logged in to your router, or on the terminals of all users logged in to your router.

**save *filename***—Save the output to a file or URL. For information about specifying the filename, see [“Specifying Filenames and URLs” on page 219](#).

**trim *columns***—Trim specified number of columns from the start line.

**Required Privilege  
Level**

view

**Related  
Documentation**

- [Displaying the Current Junos OS Configuration on page 63](#).
- [Using the Pipe \( | \) Symbol to Filter Junos Command Output on page 23](#)
- [Using Regular Expressions with the Pipe \( | \) Symbol to Filter Junos Command Output on page 24](#)
- [Pipe \( | \) Filter Functions in the Junos OS command-line interface on page 25](#)

## activate

---

Supported Platforms	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">T Series</a>
Syntax	activate ( <i>statement</i>   <i>identifier</i> )
Release Information	Command introduced before Junos OS Release 7.4.
Description	Remove the <b>inactive:</b> tag from a statement, effectively adding the statement or identifier back to the configuration. Statements or identifiers that have been activated take effect when you next issue the <b>commit</b> command.
Options	<p><b>identifier</b>—Identifier from which you are removing the <b>inactive</b> tag. It must be an identifier at the current hierarchy level.</p> <p><b>statement</b>—Statement from which you are removing the <b>inactive</b> tag. It must be a statement at the current hierarchy level.</p>
Required Privilege Level	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">deactivate on page 181</a></li><li>• <a href="#">Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94</a></li></ul>

## annotate

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

**Syntax** `annotate statement "comment-string"`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Add comments to a configuration. You can add comments only at the current hierarchy level.

Any comments you add appear only when you view the configuration by entering the [show](#) command in configuration mode or the **show configuration** command in operational mode.



**NOTE:** The Junos OS supports annotation up to the last level in the configuration hierarchy, including onliners. However, annotation of parts (child statements or identifiers within a oneliner) of the onliner is not supported. For example, in the following sample configuration hierarchy, annotation is supported up to the onliner level 1, but not supported for the metric child statement and its attribute *10*:

```
[edit protocols]
  isis {
    interface ge-0/0/0.0 {
      level 1 metric 10;
    }
  }
}
```

**Options** *comment-string*—Text of the comment. You must enclose it in quotation marks. In the comment string, you can include the comment delimiters `/* */` or `#`. If you do not specify any, the comment string is enclosed with the `/* */` comment delimiters. If a comment for the specified *statement* already exists, it is deleted and replaced with the new comment.

*statement*—Statement to which you are attaching the comment.

**Required Privilege Level** `configure`—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.

**Related Documentation**

- [Adding Comments in a Junos Configuration on page 96](#)

## commit

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

**Syntax** `commit <<at <"string">> <and-quit> <check> <comment <"comment-string">>  
<confirmed> <display detail> <minutes> <synchronize><force>>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Commit the set of changes to the database and cause the changes to take operational effect.

**Options** `at <"string">`—(Optional) Save software configuration changes and activate the configuration at a future time, or upon reboot.

**string** is **reboot** or the future time to activate the configuration changes. Enclose the **string** value (including **reboot**) in quotation marks (" "). You can specify time in two formats:

- A time value in the form **hh:mm[:ss]** (hours, minutes, and optionally seconds)—Commit the configuration at the specified time, which must be in the future but before 11:59:59 PM on the day the **commit at** configuration command is issued. Use 24-hour time for the **hh** value; for example, **04:30:00** is 4:30:00 AM, and **20:00** is 8:00 PM. The time is interpreted with respect to the clock and time zone settings on the router.
- A date and time value in the form **yyyy-mm-dd hh:mm[:ss]** (year, month, date, hours, minutes, and, optionally, seconds)—Commit the configuration at the specified day and time, which must be after the **commit at** command is issued. Use 24-hour time for the **hh** value. For example, **2003-08-21 12:30:00** is 12:30 PM on August 21, 2003. The time is interpreted with respect to the clock and time zone settings on the router.

For example, **commit at "18:00:00"**. For date and time, include both values in the same set of quotation marks. For example, **commit at "2005-03-10 14:00:00"**.

A *commit check* is performed when you issue the **commit at** configuration mode command. If the result of the check is successful, then the current user is logged out of configuration mode, and the configuration data is left in a read-only state. No other commit can be performed until the scheduled commit is completed.



**NOTE:** If Junos OS fails before the configuration changes become active, all configuration changes are lost.

You cannot enter the **commit at** configuration command when there is a pending reboot.

You cannot enter the **request system reboot** command once you schedule a commit operation for a specific time in the future.

You cannot commit a configuration when a scheduled commit is pending. For information about how to use the **clear** command to cancel a scheduled configuration, see [CLI Explorer](#).



**and-quit**—(Optional) Commit the configuration and, if the configuration contains no errors and the commit succeeds, exit from configuration mode.

**check**—(Optional) Verify the syntax of the configuration, but do not activate it.

**comment** <"*comment-string*">—(Optional) Add a comment that describes the committed configuration. The comment can be as long as 512 bytes and must be typed on a single line. You cannot include a comment with the **commit check** command. Enclose *comment-string* in quotation marks (" "). For example, **commit comment "Includes changes recommended by SW Lab"**.

**confirmed** <*minutes*>—(Optional) Require that the commit be confirmed within the specified amount of time. To confirm a commit, enter either a **commit** or **commit check** command. If the commit is not confirmed within the time limit, the configuration rolls back automatically to the precommit configuration and a broadcast message is sent to all logged-in users. To show when a rollback is scheduled, enter the **show system commit** command. The allowed range is 1 through 65,535 minutes, and the default is 10 minutes.

In Junos OS Release 11.4 and later, you can also use the **commit confirmed** command in the **[edit private]** configuration mode.

**display detail**—(Optional) Monitors the commit process.



**NOTE:** In Junos OS Release 10.4 and later, if the number of commit details or messages exceeds a page when used with the **| display detail** pipe option, the **more** pagination option on the screen is no longer available. Instead, the messages roll up on the screen by default, just like using the **commit** command with the **| no more** pipe option.

**synchronize** <*force*>—(Optional) If your router has two Routing Engines, you can manually direct one Routing Engine to synchronize its configuration with the other by issuing the **commit synchronize** command. The Routing Engine on which you execute this command (request Routing Engine) copies and loads its candidate configuration to the other (responding Routing Engine). Both Routing Engines then perform a syntax check on the candidate configuration file being committed. If no errors are found, the configuration is activated and becomes the current operational configuration on both Routing Engines. The **commit synchronize** command does not work if the responding Routing Engine has uncommitted configuration changes. However, you can enforce commit synchronization on the Routing Engines by using the **force** option. When you issue the **commit synchronize** command with the **force** option from one Routing Engine, the configuration sessions on the other Routing Engine is terminated and its configuration synchronized with that on the Routing Engine from which you issued the command.



NOTE: When you issue the `commit synchronize` command, you must use the `apply-groups re0` and `re1` commands. For information about how to use groups, see [“Disabling Inheritance of a Junos OS Configuration Group” on page 143](#).

The responding Routing Engine must use Junos OS Release 5.0 or later.

**Required Privilege Level**

configure—To enter configuration mode.



NOTE: If you are using Junos OS in a Common Criteria environment, system log messages are created whenever a secret attribute is changed (for example, password changes or changes to the RADIUS shared secret). These changes are logged during the following configuration load operations:

```
load merge
load replace
load override
load update
```

For more information, see the *Secure Configuration Guide for Common Criteria and Junos-FIPS*

**Related Documentation**

- [Verifying a Junos Configuration on page 105](#), [Committing a Junos OS Configuration on page 112](#)
- [Scheduling a Junos Commit Operation on page 116](#)
- [Deactivating and Reactivating Statements and Identifiers in a Junos Configuration on page 94](#)
- [Monitoring the Junos Commit Process on page 117](#)
- [Adding a Comment to Describe the Committed Configuration on page 118](#)

## configure

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	configure <dynamic> <exclusive> <private>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Enter configuration mode. When this command is entered without any optional keywords, everyone can make configuration changes and commit all changes made to the configuration.
<b>Options</b>	<p><b>none</b>—Enter configuration mode.</p> <p><b>dynamic</b>—(Optional) Configure routing policies and certain routing policy objects in a dynamic database that is not subject to the same verification required in the standard configuration database. As a result, the time it takes to commit changes to the dynamic database is much shorter than for the standard configuration database. You can then reference these policies and policy objects in routing policies you configure in the standard database.</p> <p><b>exclusive</b>—(Optional) Lock the candidate configuration for as long as you remain in configuration mode, allowing you to make changes without interference from other users. Other users can enter and exit configuration mode, but they cannot change the configuration.</p> <p><b>private</b>—(Optional) Allow multiple users to edit different parts of the configuration at the same time and to commit only their own changes, or to roll back without interfering with one another's changes. You cannot commit changes in configure private mode when another user is in configure exclusive mode.</p>
<b>Required Privilege Level</b>	configure
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show configuration on page 282</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">configure on page 263</a>
<b>Output Fields</b>	When you enter this command, you are placed in configuration mode and the system prompt changes from <i>hostname&gt;</i> to <i>hostname#</i> .

## Sample Output

### configure

```
user@host> configure
```

```
Entering configuration mode  
[edit]  
user@host#
```

## copy

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	copy <i>existing-statement</i> to <i>new-statement</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Make a copy of an existing statement in the configuration.
<b>Options</b>	<i>existing-statement</i> —Statement to copy. <i>new-statement</i> —Copy of the statement.
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Copying a Junos Statement in the Configuration on page 89</a></li></ul>

## file

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">QFX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	<code>file &lt;archive   checksum   compare   copy   delete   list   rename   show   source address   archive&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Archive files from the device, copy files to and from the router or switch, calculate the file checksum, compare files, delete a file from the device, list files on the device, rename a file, show file contents, or show the local address to initiate a connection.
<b>Options</b>	<p><b>archive (Optional)</b> —Archive, and optionally compress, one or multiple local system files as a single file, locally or at a remote location.</p> <p><b>checksum (Optional)</b> —Calculate the Message Digest 5 (MD5) checksum of a file.</p> <p><b>compare (Optional)</b> —Compare two local files and describe the differences between them in default, context, or unified output styles.</p> <p><b>copy (Optional)</b> —Copy files from one place to another on the local switch or between the local switch and a remote system.</p> <p><b>delete (Optional)</b> —Delete a file on the local switch.</p> <p><b>list (Optional)</b> —Display a list of files on the local switch.</p> <p><b>rename (Optional)</b> —Rename a file on the local switch.</p> <p><b>show (Optional)</b> —Display the contents of a file.</p> <p><b>source address (Optional)</b> —Specify the source address of the local file.</p>
<b>Required Privilege Level</b>	maintenance
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Viewing Files and Directories on a Device Running Junos OS on page 216</a></li></ul>

## help

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	help < (apropos <i>string</i>   reference < <i>statement-name</i> >   syslog < <i>syslog-tag</i> >   tip cli <i>number</i>   topic < <i>word</i> >) >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. apropos option added in Junos OS Release 8.0.
<b>Description</b>	Display help about available operational commands, configuration statements, or general information about getting help. Entering the <b>help</b> command without an option provides introductory information about how to use the <b>help</b> and <b>?</b> commands.
<b>Options</b>	<p><b>apropos <i>string</i></b>—(Optional) Display command names and help text that matches the string specified. If the string contains spaces, enclose it in quotation marks ( " " ). You can also specify a regular expression for the string, using standard UNIX-style regular expression syntax.</p> <p><b>reference &lt;<i>statement-name</i>&gt;</b>—(Optional) Display summary information for a configuration statement. This information is based on summary descriptions that appear in the Junos feature guides.</p> <p><b>syslog &lt;<i>syslog-tag</i>&gt;</b>—(Optional) Display information about system log messages.</p> <p><b>tip cli <i>number</i></b>—(Optional) Display a tip about using the CLI. Specify the number of the tip you want to view.</p> <p><b>topic &lt;<i>word</i>&gt;</b>—(Optional) Display usage guidelines for a topic or configuration statement. This information is based on subjects that appear in the Junos feature guides.</p>
<b>Required Privilege Level</b>	None
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Getting Online Help from the Junos OS Command-Line Interface on page 9</a></li> </ul>

## request

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	request <chassis   ipsec switch   message   mpls   routing-engine   security   services   system   flow-collector   support information>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Stop or reboot router components, switch between primary and backup components, display messages, and display system information.



**CAUTION:** Halt the backup Routing Engine before you remove it or shut off the power to the router; otherwise, you might need to reinstall the Junos OS.



**NOTE:** If your router contains two Routing Engines and you want to shut the power off to the router or remove a Routing Engine, you must first halt the backup Routing Engine (if it has been upgraded) and then the master Routing Engine. To halt a Routing Engine, enter the `request system halt` command. You can also halt both Routing Engines at the same time by issuing the `request system halt both-routing-engines` command.

If you want to reboot a router that has two Routing Engines, reboot the backup Routing Engine (if you have upgraded it) and then the master Routing Engine.



**NOTE:** If you reboot the TX Matrix router, all the T640 master Routing Engines connected to the TX Matrix router reboot. If you halt both Routing Engines on a TX Matrix router, all the T640 Routing Engines connected to the TX Matrix router are also halted. Likewise, if you reboot the TX Matrix Plus router, all the T1600 master Routing Engines connected to the TX Matrix Plus router reboot. If you halt both Routing Engines on a TX Matrix Plus router, all the T1600 Routing Engines connected to the TX Matrix Plus router are also halted.



**NOTE:** If you insert a Flexible PIC Concentrator (FPC) into your router, you may need to issue the `request chassis fpc` command (or press the online button) to bring the FPC online. This applies to FPCs in M20, M40, M40e, M160, M320, and T Series routers. For command usage, see the `request chassis fpc` command description in [CLI Explorer](#).



**Additional Information** Most **request** commands are described in [CLI Explorer](#).

**Required Privilege Level** maintenance

**Related Documentation** • [Overview of Junos OS CLI Operational Mode Commands on page 15](#)

## restart

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, QFX Series, T Series

**List of Syntax** [Syntax on page 270](#)  
[Syntax \(EX Series Switches\) on page 270](#)  
[Syntax \(TX Matrix Routers\) on page 270](#)  
[Syntax \(TX Matrix Plus Routers\) on page 271](#)  
[Syntax \(MX Series Routers\) on page 271](#)  
[Syntax \(J Series Routers\) on page 271](#)  
[Syntax \(QFX Series\) on page 271](#)

**Syntax** restart  
 <adaptive-services | ancpd-service | application-identification | audit-process |  
 auto-configuration | captive-portal-content-delivery | ce-l2tp-service | chassis-control |  
 class-of-service | clksyncd-service | database-replication | datapath-trace-service |  
 dhcp-service | diameter-service | disk-monitoring | dynamic-flow-capture |  
 ecc-error-logging | ethernet-connectivity-fault-management |  
 ethernet-link-fault-management | event-processing | firewall |  
 general-authentication-service | gracefully | iccp-service | idp-policy | immediately |  
 interface-control | ipsec-key-management | kernel-replication | l2-learning | l2cpd-service |  
 l2tp-service | l2tp-universal-edge | lacp | license-service | link-management |  
 local-policy-decision-function | mac-validation | mib-process | mobile-ip | mounstd-service |  
 mpls-traceroute | mspd | multicast-snooping | named-service | nfsd-service |  
 packet-triggered-subscribers | peer-selection-service | pgcp-service | pgm |  
 pic-services-logging | pki-service | ppp | ppp-service | pppoe |  
 protected-system-domain-service | redundancy-interface-process | remote-operations |  
 root-system-domain-service | routing <logical-system *logical-system-name*> | sampling |  
 sbc-configuration-process | sdk-service | service-deployment | services | services pgcp  
 gateway *gateway-name* | snmp | soft | static-subscribers | statistics-service |  
 subscriber-management | subscriber-management-helper | tunnel-oamd | usb-control |  
 vrrp | web-management>  
 <gracefully | immediately | soft>

**Syntax (EX Series Switches)** restart  
 <autoinstallation | chassis-control | class-of-service | database-replication | dhcp |  
 dhcp-service | diameter-service | dot1x-protocol | ethernet-link-fault-management |  
 ethernet-switching | event-processing | firewall | general-authentication-service |  
 interface-control | kernel-replication | l2-learning | lacp | license-service | link-management |  
 lldpd-service | mib-process | mounstd-service | multicast-snooping | pgm |  
 redundancy-interface-process | remote-operations | routing | secure-neighbor-discovery |  
 service-deployment | sflow-service | snmp | vrrp | web-management>  
 <gracefully | immediately | soft>

**Syntax (TX Matrix Routers)** restart  
 <adaptive-services | audit-process | chassis-control | class-of-service | dhcp-service |  
 diameter-service | disk-monitoring | dynamic-flow-capture | ecc-error-logging |  
 event-processing | firewall | interface-control | ipsec-key-management | kernel-replication |  
 l2-learning | l2tp-service | lacp | link-management | mib-process | pgm | pic-services-logging |  
 ppp | pppoe | redundancy-interface-process | remote-operations | routing <logical-system  
*logical-system-name*> | sampling | service-deployment | snmp | statistics-service>  
 <all-chassis | all-lcc | lcc *number* | scc>  
 <gracefully | immediately | soft>

Syntax (TX Matrix Plus Routers)	<pre>restart &lt;adaptive-services   audit-process   chassis-control   class-of-service   dhcp-service   diameter-service   disk-monitoring   dynamic-flow-capture   ecc-error-logging   event-processing   firewall   interface-control   ipsec-key-management   kernel-replication   l2-learning   l2tp-service   lacp   link-management   mib-process   pgm   pic-services-logging   ppp   pppoe   redundancy-interface-process   remote-operations   routing &lt;logical-system <i>logical-system-name</i>&gt;   sampling   service-deployment   snmp   statistics-service&gt; &lt;all-chassis   all-lcc   all-sfc   lcc <i>number</i>   sfc <i>number</i>&gt; &lt;gracefully   immediately   soft&gt;</pre>
Syntax (MX Series Routers)	<pre>restart &lt;adaptive-services   ancpd-service   application-identification   audit-process   auto-configuration   captive-portal-content-delivery   ce-l2tp-service   chassis-control   class-of-service   clksyncd-service   database-replication   datapath-trace-service   dhcp-service   diameter-service   disk-monitoring   dynamic-flow-capture   ecc-error-logging   ethernet-connectivity-fault-management   ethernet-link-fault-management   event-processing   firewall   general-authentication-service   gracefully   iccp-service   idp-policy   immediately   interface-control   ipsec-key-management   kernel-replication   l2-learning   l2cpd-service   l2tp-service   l2tp-universal-edge   lacp   license-service   link-management   local-policy-decision-function   mac-validation   mib-process   mobile-ip   mounstd-service   mpls-traceroute   mspd   multicast-snooping   named-service   nfsd-service   packet-triggered-subscribers   peer-selection-service   pgcp-service   pgm   pic-services-logging   pki-service   ppp   ppp-service   pppoe   protected-system-domain-service   redundancy-interface-process   remote-operations   root-system-domain-service   routing   routing &lt;logical-system <i>logical-system-name</i>&gt;   sampling   sbc-configuration-process   sdk-service   service-deployment   services   services pgcp gateway <i>gateway-name</i>   snmp   soft   static-subscribers   statistics-service   subscriber-management   subscriber-management-helper   tunnel-oamd   usb-control   vrrp   web-management&gt; &lt;all-members&gt; &lt;gracefully   immediately   soft&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
Syntax (J Series Routers)	<pre>restart &lt;adaptive-services   audit-process   chassis-control   class-of-service   dhcp   dhcp-service   dialer-services   diameter-service   event-processing   firewall   interface-control   ipsec-key-management   isdn-signaling   l2ald   l2-learning   l2tp-service   mib-process   network-access-service   pgm   ppp   pppoe   remote-operations   routing &lt;logical-system <i>logical-system-name</i>&gt;   sampling   service-deployment   snmp   usb-control   web-management&gt; &lt;gracefully   immediately   soft&gt;</pre>
Syntax (QFX Series)	<pre>restart &lt;adaptive-services   audit-process   chassis-control   class-of-service   dialer-services   diameter-service   dlsd   ethernet-connectivity   event-processing   fibre-channel   firewall   general-authentication-service   igmp-host-services   interface-control   ipsec-key-management   isdn-signaling   l2ald   l2-learning   l2tp-service   mib-process   named-service   network-access-service   nstrace-process   pgm   ppp   pppoe   redundancy-interface-process   remote-operations   <i>logical-system-name</i>&gt;   routing   sampling   secure-neighbor-discovery   service-deployment   snmp   usb-control   web-management&gt; &lt;gracefully   immediately   soft&gt;</pre>

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
Options added:

- **dynamic-flow-capture** in Junos OS Release 7.4.
- **event-processing** in Junos OS Release 7.5.
- **ppp** in Junos OS Release 7.5.
- **l2ald** in Junos OS Release 8.0.
- **link-management** in Release 8.0.
- **pgcp-service** in Junos OS Release 8.4.
- **sbcc-configuration-process** in Junos OS Release 9.5.
- **services pgcp gateway** in Junos OS Release 9.6.
- **sfc** and **all-sfc** for the TX Matrix Router in Junos OS Release 9.6.

**Description** Restart a Junos OS process.



**CAUTION:** Never restart a software process unless instructed to do so by a customer support engineer. A restart might cause the router or switch to drop calls and interrupt transmission, resulting in possible loss of data.

**Options** **none**—Same as **gracefully**.

**adaptive-services**—(Optional) Restart the configuration management process that manages the configuration for stateful firewall, Network Address Translation (NAT), intrusion detection services (IDS), and IP Security (IPsec) services on the Adaptive Services PIC.

**all-chassis**—(TX Matrix and TX Matrix Plus routers only) (Optional) Restart the software process on all chassis.

**all-lcc**—(TX Matrix and TX Matrix Plus routers only) (Optional) For a TX Matrix router, restart the software process on all T640 routers connected to the TX Matrix router. For a TX Matrix Plus router, restart the software process on all T1600 routers connected to the TX Matrix Plus router.

**all-members**—(MX Series routers only) (Optional) Restart the software process for all members of the Virtual Chassis configuration.

**all-sfc**—(TX Matrix Plus routers only) (Optional) For a TX Matrix Plus router, restart the software processes for the TX Matrix Plus router (or switch-fabric chassis).

**ancpd-service**—(Optional) Restart the Access Node Control Protocol (ANCP) process, which works with a special Internet Group Management Protocol (IGMP) session to collect outgoing interface mapping events in a scalable manner.

**application-identification**—(Optional) Restart the process that identifies an application using intrusion detection and prevention (IDP) to allow or deny traffic based on applications running on standard or nonstandard ports.

**audit-process**—(Optional) Restart the RADIUS accounting process that gathers statistical data that can be used for general network monitoring, analyzing and tracking usage patterns, for billing a user based upon the amount of time or type of services accessed.

**auto-configuration**—(Optional) Restart the Interface Auto-Configuration process.

**autoinstallation**—(EX Series switches only) (Optional) Restart the autoinstallation process.

**captive-portal-content-delivery**—(Optional) Restart the HTTP redirect service by specifying the location to which a subscriber's initial Web browser session is redirected, enabling initial provisioning and service selection for the subscriber.

**ce-l2tp-service**—(M10, M10i, M7i, and MX Series routers only) (Optional) Restart the Universal Edge Layer 2 Tunneling Protocol (L2TP) process, which establishes L2TP tunnels and Point-to-Point Protocol (PPP) sessions through L2TP tunnels.

**chassis-control**—(Optional) Restart the chassis management process.

**class-of-service**—(Optional) Restart the class-of-service (CoS) process, which controls the router's or switch's CoS configuration.

**clksyncd-service**—(Optional) Restart the external clock synchronization process, which uses synchronous Ethernet (SyncE).

**database-replication**—(EX Series switches and MX Series routers) (Optional) Restart the database replication process.

**datapath-trace-service**—(Optional) Restart the packet path tracing process.

**dhcp**—(J Series routers and EX Series switches only) (Optional) Restart the software process for a Dynamic Host Configuration Protocol (DHCP) server. A DHCP server allocates network IP addresses and delivers configuration settings to client hosts without user intervention.

**dhcp-service**—(Optional) Restart the Dynamic Host Configuration Protocol process.

**dialer-services**—(J Series routers and EX Series switches only) (Optional) Restart the ISDN dial-out process.

**diameter-service**—(Optional) Restart the diameter process.

**disk-monitoring**—(Optional) Restart disk monitoring, which checks the health of the hard disk drive on the Routing Engine.

- dot1x-protocol**—(EX Series switches only) (Optional) Restart the port-based network access control process.
- dynamic-flow-capture**—(Optional) Restart the dynamic flow capture (DFC) process, which controls DFC configurations on Monitoring Services III PICs.
- ecc-error-logging**—(Optional) Restart the error checking and correction (ECC) process, which logs ECC parity errors in memory on the Routing Engine.
- ethernet-connectivity-fault-management**—(Optional) Restart the process that provides IEEE 802.1ag Operation, Administration, and Management (OAM) connectivity fault management (CFM) database information for CFM maintenance association end points (MEPs) in a CFM session.
- ethernet-link-fault-management**—(EX Series switches and MX Series routers only) (Optional) Restart the process that provides the OAM link fault management (LFM) information for Ethernet interfaces.
- ethernet-switching**—(EX Series switches only) (Optional) Restart the Ethernet switching process.
- event-processing**—(Optional) Restart the event process (eventd).
- fibre-channel**—(QFX Series only) (Optional) Restart the Fibre Channel process.
- firewall**—(Optional) Restart the firewall management process, which manages the firewall configuration and enables accepting or rejecting packets that are transiting an interface on a router or switch.
- general-authentication-service**—(EX Series switches and MX Series routers) (Optional) Restart the general authentication process.
- gracefully**—(Optional) Restart the software process.
- iccp-service**—(Optional) Restart the Inter-Chassis Communication Protocol (ICCP) process.
- idp-policy**—(Optional) Restart the intrusion detection and prevention (IDP) protocol process.
- immediately**—(Optional) Immediately restart the software process.
- interface-control**—(Optional) Restart the interface process, which controls the router's or switch's physical interface devices and logical interfaces.
- ipsec-key-management**—(Optional) Restart the IPsec key management process.
- isdn-signaling**—(J Series routers and QFX Series only) (Optional) Restart the ISDN signaling process, which initiates ISDN connections.
- kernel-replication**—(Optional) Restart the kernel replication process, which replicates the state of the backup Routing Engine when graceful Routing Engine switchover (GRES) is configured.

**l2-learning**—(Optional) Restart the Layer 2 address flooding and learning process.

**l2cpd-service**—(Optional) Restart the Layer 2 Control Protocol process, which enables features such as Layer 2 protocol tunneling and nonstop bridging.

**l2tp-service**— (M10, M10i, M7i, and MX Series routers only) (Optional) Restart the Layer 2 Tunneling Protocol (L2TP) process, which sets up client services for establishing Point-to-Point Protocol (PPP) tunnels across a network and negotiating Multilink PPP if it is implemented.

**l2tp-universal-edge**—(MX Series routers) (Optional) Restart the L2TP process, which establishes L2TP tunnels and PPP sessions through L2TP tunnels.

**lACP**—(Optional) Restart the Link Aggregation Control Protocol (LACP) process. LACP provides a standardized means for exchanging information between partner systems on a link to allow their link aggregation control instances to reach agreement on the identity of the LAG to which the link belongs, and then to move the link to that LAG, and to enable the transmission and reception processes for the link to function in an orderly manner.

**lcc number**—(TX Matrix and TX Matrix Plus routers only) (Optional) For a TX Matrix router, restart the software process for a specific T640 router that is connected to the TX Matrix router. For a TX Matrix Plus router, restart the software process for a specific T1600 router that is connected to the TX Matrix Plus router. Replace **number** with a value from 0 through 3.

**license-service**—(EX Series switches) (Optional) Restart the feature license management process.

**link-management**— (TX Matrix and TX Matrix Plus routers and EX Series switches only) (Optional) Restart the Link Management Protocol (LMP) process, which establishes and maintains LMP control channels.

**lldpd-service**—(EX Series switches only) (Optional) Restart the Link Layer Discovery Protocol (LLDP) process.

**local**—(MX Series routers only) (Optional) Restart the software process for the local Virtual Chassis member.

**local-policy-decision-function**— (Optional) Restart the process for the Local Policy Decision Function, which regulates collection of statistics related to applications and application groups and tracking of information about dynamic subscribers and static interfaces.

**mac-validation**— (Optional) Restart the Media Access Control (MAC) validation process, which configures MAC address validation for subscriber interfaces created on demux interfaces in dynamic profiles on MX Series routers.

**member member-id**—(MX Series routers only) (Optional) Restart the software process for a specific member of the Virtual Chassis configuration. Replace **member-id** with a value of 0 or 1.

**mib-process**—(Optional) Restart the Management Information Base (MIB) version II process, which provides the router's MIB II agent.

**mobile-ip**—(Optional) Restart the Mobile IP process, which configures Junos OS Mobile IP features.

**mountd-service**—(EX Series switches and MX Series router) (Optional) Restart the service for NFS mount requests.

**mpls-traceroute**—(Optional) Restart the MPLS Periodic Traceroute process.

**mspd**—(Optional) Restart the Multiservice process.

**multicast-snooping**—(EX Series switches and MX Series routers) (Optional) Restart the multicast snooping process, which makes Layer 2 devices, such as VLAN switches, aware of Layer 3 information, such as the media access control (MAC) addresses of members of a multicast group.

**named-service**—(Optional) Restart the DNS Server process, which is used by a router or a switch to resolve hostnames into addresses.

**network-access-service**—(J Series routers and QFX Series only) (Optional) Restart the network access process, which provides the router's Challenge Handshake Authentication Protocol (CHAP) authentication service.

**nfsd-service**—(Optional) Restart the Remote NFS Server process, which provides remote file access for applications that need NFS-based transport.

**packet-triggered-subscribers**—(Optional) Restart the packet-triggered subscribers and policy control (PTSP) process, which allows the application of policies to dynamic subscribers that are controlled by a subscriber termination device.

**peer-selection-service**—(Optional) Restart the Peer Selection Service process.

**pgcp-service**—(Optional) Restart the pgcpd service process running on the Routing Engine. This option does not restart pgcpd processes running on mobile station PICs. To restart pgcpd processes running on mobile station PICs, use the **services pgcp gateway** option.

**pgm**—(Optional) Restart the process that implements the Pragmatic General Multicast (PGM) protocol for assisting in the reliable delivery of multicast packets.

**pic-services-logging**—(Optional) Restart the logging process for some PICs. With this process, also known as fsad (the file system access daemon), PICs send special logging information to the Routing Engine for archiving on the hard disk.

**pki-service**—(Optional) Restart the PKI Service process.

**ppp**—(Optional) Restart the Point-to-Point Protocol (PPP) process, which is the encapsulation protocol process for transporting IP traffic across point-to-point links.



**ppp-service**—(Optional) Restart the Universal edge PPP process, which is the encapsulation protocol process for transporting IP traffic across universal edge routers.

**pppoe**—(Optional) Restart the Point-to-Point Protocol over Ethernet (PPPoE) process, which combines PPP that typically runs over broadband connections with the Ethernet link-layer protocol that allows users to connect to a network of hosts over a bridge or access concentrator.

**protected-system-domain-service**—(Optional) Restart the Protected System Domain (PSD) process.

**redundancy-interface-process**—(Optional) Restart the ASP redundancy process.

**remote-operations**—(Optional) Restart the remote operations process, which provides the ping and traceroute MIBs.

**root-system-domain-service**—(Optional) Restart the Root System Domain (RSD) service.

**routing**—(QFX Series, EX Series switches, and MX Series routers only) (Optional) Restart the routing protocol process.

**routing <logical-system *logical-system-name*>**—(Optional) Restart the routing protocol process, which controls the routing protocols that run on the router or switch and maintains the routing tables. Optionally, restart the routing protocol process for the specified logical system only.

**sampling**—(Optional) Restart the sampling process, which performs packet sampling based on particular input interfaces and various fields in the packet header.

**sbc-configuration-process**—(Optional) Restart the session border controller (SBC) process of the border signaling gateway (BSG).

**scc**—(TX Matrix routers only) (Optional) Restart the software process on the TX Matrix router (or switch-card chassis).

**sdk-service**—(Optional) Restart the SDK Service process, which runs on the Routing Engine and is responsible for communications between the SDK application and Junos OS. Although the SDK Service process is present on the router, it is turned off by default.

**secure-neighbor-discovery**—(QFX Series, EX Series switches, and MX Series routers only) (Optional) Restart the secure Neighbor Discovery Protocol (NDP) process, which provides support for protecting NDP messages.

**sfc *number***—(TX Matrix Plus routers only) (Optional) Restart the software process on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**service-deployment**—(Optional) Restart the service deployment process, which enables Junos OS to work with the Session and Resource Control (SRC) software.

**services**—(Optional) Restart a service.

**services pgcp gateway gateway-name**—(Optional) Restart the pgcpd process for a specific border gateway function (BGF) running on an MS-PIC. This option does not restart the pgcpd process running on the Routing Engine. To restart the pgcpd process on the Routing Engine, use the **pgcp-service** option.

**sflow-service**—(EX Series switches only) (Optional) Restart the flow sampling (sFlow technology) process.

**snmp**—(Optional) Restart the SNMP process, which enables the monitoring of network devices from a central location and provides the router's or switch's SNMP master agent.

**soft**—(Optional) Reread and reactivate the configuration without completely restarting the software processes. For example, BGP peers stay up and the routing table stays constant. Omitting this option results in a graceful restart of the software process.

**static-subscribers**—(Optional) Restart the Static subscribers process, which associates subscribers with statically configured interfaces and provides dynamic service activation and activation for these subscribers.

**statistics-service**—(Optional) Restart the process that manages the Packet Forwarding Engine statistics.

**subscriber-management**—(Optional) Restart the Subscriber Management process.

**subscriber-management-helper**—(Optional) Restart the Subscriber Management Helper process.

**tunnel-oamd**—(Optional) Restart the Tunnel OAM process, which enables the Operations, Administration, and Maintenance of Layer 2 tunneled networks. Layer 2 protocol tunneling (L2PT) allows service providers to send Layer 2 protocol data units (PDUs) across the provider's cloud and deliver them to Juniper Networks EX Series Ethernet Switches that are not part of the local broadcast domain.

**usb-control**—(J Series routers and MX Series routers) (Optional) Restart the USB control process.

**vrrp**—(EX Series switches and MX Series routers) (Optional) Restart the Virtual Router Redundancy Protocol (VRRP) process, which enables hosts on a LAN to make use of redundant routing platforms on that LAN without requiring more than the static configuration of a single default route on the hosts.

**web-management**—(J Series routers, QFX Series, EX Series switches, and MX Series routers) (Optional) Restart the Web management process.

**Required Privilege Level**    reset

**Related Documentation**    • [Overview of Junos OS CLI Operational Mode Commands on page 15](#)

**List of Sample Output**    [restart interfaces on page 279](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

restart interfaces

```
user@host> restart interfaces
interfaces process terminated
interfaces process restarted
```

## set

---

<b>Supported Platforms</b>	<a href="#">EX Series</a> , <a href="#">J Series</a> , <a href="#">LN Series</a> , <a href="#">M Series</a> , <a href="#">MX Series</a> , <a href="#">PTX Series</a> , <a href="#">T Series</a>
<b>Syntax</b>	set < <i>statement-path</i> > <i>identifier</i>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Create a statement hierarchy and set identifier values. This is similar to <b>edit</b> except that your current level in the hierarchy does not change.
<b>Options</b>	<p><i>identifier</i>—Name of the statement or identifier to set.</p> <p><i>statement-path</i>—(Optional) Path to an existing statement hierarchy level. If that hierarchy level does not exist, it is created.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">edit on page 183</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

---

## show

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	show < <i>statement-path</i> > < <i>identifier</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display the current configuration.
<b>Options</b>	<p>none—Display the entire configuration at the current hierarchy level.</p> <p><i>identifier</i>—(Optional) Display the configuration for the specified identifier.</p> <p><i>statement-path</i>—(Optional) Display the configuration for the specified statement hierarchy path.</p>
<b>Required Privilege Level</b>	configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show   display inheritance on page 285</a></li><li>• <a href="#">show   display omit on page 286</a></li><li>• <a href="#">show   display set on page 287</a></li><li>• <a href="#">show   display set relative on page 288</a></li><li>• <a href="#">show groups junos-defaults on page 289</a></li><li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li></ul>

## show configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [SRX Series](#), [T Series](#)

**Syntax** show configuration  
<*statement-path*>

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Display the configuration that currently is running on the router or switch, which is the last committed configuration.

**Options** none—Display the entire configuration.

***statement-path***—(Optional) Display one of the following hierarchies in a configuration. (Each ***statement-path*** option has additional suboptions not described here. See the appropriate feature guide or EX Series switch documentation for more information.)

- **access**—Network access configuration.
- **access-profile**—Access profile configuration.
- **accounting-options**—Accounting data configuration.
- **applications**—Applications defined by protocol characteristics.
- **apply-groups**—Groups from which configuration data is inherited.
- **chassis**—Chassis configuration.
- **chassis network-services**—Current running mode.
- **class-of-service**—Class-of-service configuration.
- **diameter**—Diameter base protocol layer configuration.
- **ethernet-switching-options**—(EX Series switch only) Ethernet switching configuration.
- **event-options**—Event processing configuration.
- **firewall**—Firewall configuration.
- **forwarding-options**—Options that control packet sampling.
- **groups**—Configuration groups.
- **interfaces**—Interface configuration.
- **jsrc**—JSRC partition configuration.
- **jsrc-partition**—JSRC partition configuration.
- **logical-systems**—Logical system configuration.
- **poe**—(EX Series switch only) Power over Ethernet configuration.
- **policy-options**—Routing policy option configuration.

- **protocols**—Routing protocol configuration.
- **routing-instances**—Routing instance configuration.
- **routing-options**—Protocol-independent routing option configuration.
- **security**—Security configuration.
- **services**—Service PIC applications configuration.
- **snmp**—Simple Network Management Protocol configuration.
- **system**—System parameters configuration.
- **virtual-chassis**—(EX Series switch only) Virtual Chassis configuration.
- **vlan**s—(EX Series switch only) VLAN configuration.

<b>Additional Information</b>	The portions of the configuration that you can view depend on the user class that you belong to and the corresponding permissions. If you do not have permission to view a portion of the configuration, the text <b>ACCESS-DENIED</b> is substituted for that portion of the configuration. If you do not have permission to view authentication keys and passwords in the configuration, because the <b>secret</b> permission bit is not set for your user account, the text <b>SECRET-DATA</b> is substituted for that portion of the configuration. If an identifier in the configuration contains a space, the identifier is displayed in quotation marks.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Displaying the Current Junos OS Configuration on page 63</a></li> <li>• <a href="#">Overview of Junos OS CLI Operational Mode Commands on page 15</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show configuration on page 283</a> <a href="#">show configuration policy-options on page 284</a>
<b>Output Fields</b>	This command displays information about the current running configuration.

## Sample Output

### show configuration

```

user@host> show configuration
## Last commit: 2006-10-31 14:13:00 PST by alant version "8.2I0 [builder]"; ##
last changed: 2006-10-31 14:05:53 PST
system {
    host-name exhost;
    domain-name example.net;
    backup-router 192.1.1.254;
    time-zone America/Los_Angeles;
    default-address-selection;
    name-server {
        192.154.169.254;
        192.154.169.249;
        192.154.169.176;
    }
    services {

```

```
        telnet;
    }
    tacplus-server {
        1.2.3.4 {
            secret /* SECRET-DATA */;
            ...
        }
    }
}
interfaces {
    ...
}
protocols {
    isis {
        export "direct routes";
    }
}
policy-options {
    policy-statement "direct routes" {
        from protocol direct;
        then accept;
    }
}
```

#### show configuration policy-options

```
user@host> show configuration policy-options
policy-options {
    policy-statement "direct routes" {
        from protocol direct;
        then accept;
    }
}
```



## show | display inheritance

**Supported Platforms** EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series

**Syntax** show | display inheritance <brief | defaults | no-comments | terse>

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Show the inherited configuration data and information about the source group from which the configuration has been inherited. Show interface ranges configuration data in expanded format and information about the source interface-range from which the configuration has been expanded

```
user@host# show system ports | display inheritance defaults
## 'console' was inherited from group 'junos-defaults'
## 'vt100' was inherited from group 'junos-defaults'
## console type vt100;
```

```
user@host# show system login class readonly | display inheritance
## 'interface' was inherited from group global'
## 'network' was inherited from group global'
## 'routing' was inherited from group global'
## 'system' was inherited from group global'
## 'trace' was inherited from group global'
## 'view' was inherited from group global'
##
permissions [ interface network routing system trace view ];
```

```
user@host# show system login class readonly | display inheritance no-comments
permissions [ interface network routing system trace view ];
```

- Options**
- **brief**—Display brief output for the command.
  - **defaults**—Display the Junos OS defaults that have been applied to the configuration.
  - **no-comments**—Display configuration information without inline comments marked with ##.
  - **terse**—Display terse output with inheritance details as inline comment.

**Required Privilege Level** view

**Related Documentation**

- [Using Junos OS Defaults Groups on page 160](#)

## show | display omit

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Syntax** show | display omit

**Release Information** Command introduced in Junos OS Release 8.2.

**Description** Display configuration statements (including those marked as hidden by the **apply-flags omit** configuration statement).

```
user@host# show | display omit
system {
  apply-flags omit;
  login {
    message lengthy-login-message;
  }
}
```

**Required Privilege Level** view

**Related Documentation**

- [show on page 281](#)

---

## show | display set

---

<b>Supported Platforms</b>	EX Series, J Series, LN Series, M Series, MX Series, PTX Series, T Series
<b>Syntax</b>	show   display set
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Display the configuration as a series of configuration mode commands required to re-create the configuration from the top level of the hierarchy as <b>set</b> commands</p> <pre>user@host# show   display set   set interfaces fe-0/0/0 unit 0 family inet address 192.168.1.230/24   set interfaces fe-0/0/0 unit 0 family iso   set interfaces fe-0/0/0 unit 0 family mpls   set interfaces fe-0/0/0 unit 1 family inet address 10.0.0.1/8   deactivate interfaces fe-0/0/0 unit 1</pre>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show on page 281</a></li><li>• <a href="#">Displaying set Commands from the Junos OS Configuration on page 65</a></li></ul>

## show | display set relative

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [T Series](#)

**Syntax** show | display set relative

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display the configuration as a series of configuration mode commands required to re-create the configuration from the current hierarchy level.

```
[edit interfaces fe-0/0/0]
user@host# show
unit 0 {
  family inet {
    address 192.107.1.230/24;
  }
  family iso;
  family mpls;
}
inactive: unit 1 {
  family inet {
    address 10.0.0.1/8;
  }
}
user@host# show | display set relative
set unit 0 family inet address 192.107.1.230/24
set unit 0 family iso
set unit 0 family mpls
set unit 1 family inet address 10.0.0.1/8
deactivate unit 1
```

**Required Privilege Level** view

**Related Documentation**

- [Displaying set Commands from the Junos OS Configuration on page 65](#)

## show groups junos-defaults

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [T Series](#)

**Syntax** show groups junos-defaults

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display the full set of available preset statements from the Junos OS defaults group.

```
user@host# show groups junos-defaults
groups {
  junos-defaults {
    applications {
      # File Transfer Protocol
      application junos-ftp {
        application-protocol ftp;
        protocol tcp;
        destination-port 21;
      }
      # Trivial File Transfer Protocol
      application junos-tftp {
        application-protocol tftp;
        protocol udp;
        destination-port 69;
      }
      # RPC port mapper on TCP
      application junos-rpc-portmap-tcp {
        application-protocol rpc-portmap;
        protocol tcp;
        destination-port 111;
      }
      # RPC port mapper on UDP
    }
  }
}
```

**Required Privilege Level** view

**Related Documentation**

- [Using Junos OS Defaults Groups on page 160](#)
- [Junos OS UTM Library for Security Devices](#)

## show system commit

<b>Supported Platforms</b>	EX Series, J Series, M Series, MX Series, PTX Series, QFX Series, T Series
<b>Syntax</b>	show system commit
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Display the pending commit operation (if any) and the commit history.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear system commit</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show system commit on page 291</a> <a href="#">show system commit (At a Particular Time) on page 291</a> <a href="#">show system commit (At the Next Reboot) on page 291</a> <a href="#">show system commit (Rollback Pending) on page 291</a> <a href="#">show system commit (QFX Series) on page 291</a>
<b>Output Fields</b>	Table 18 on page 290 describes the output fields for the <b>show system commit</b> command. Output fields are listed in the approximate order in which they appear.

Table 18: show system commit Output Fields

Field Name	Field Description
<b>Commit history</b>	Displays the last 50 commit operations listed, most recent to first. The identifier <b>rescue</b> designates a configuration created for recovery using the <b>request system configuration rescue save</b> command.
<b>Timestamp</b>	Date and time of the commit operation.
<b>Username</b>	User who executed the commit operation.
<b>Commit method</b>	Method used to execute the commit operation: <ul style="list-style-type: none"> <li><b>cli</b>—CLI interactive user performed the commit operation.</li> <li><b>Junos XML protocol</b>—Junos XML protocol client performed the commit operation.</li> <li><b>synchronize</b>—The <b>commit synchronize</b> command was performed on the other Routing Engine.</li> <li><b>snmp</b>—An SNMP <b>set</b> request caused the commit operation.</li> <li><b>button</b>—A button on the router or switch was pressed to commit a rescue configuration for recovery.</li> <li><b>autoinstall</b>—A configuration obtained through autoinstallation was committed.</li> <li><b>other</b>—A method other than those identified was used to perform the commit operation.</li> </ul>

## Sample Output

### show system commit

```
user@host> show system commit
0   2003-07-28 19:14:04 PDT by root via other
1   2003-07-25 22:01:36 PDT by user via cli
2   2003-07-25 22:01:32 PDT by user via cli
3   2003-07-25 21:30:13 PDT by root via button
4   2003-07-25 13:46:48 PDT by user via cli
5   2003-07-25 05:33:21 PDT by root via autoinstall
...
rescue 2002-05-10 15:32:03 PDT by root via other
```

### show system commit (At a Particular Time)

```
user@host> show system commit
commit requested by root via cli at Tue May  7 15:59:00 2002
```

### show system commit (At the Next Reboot)

```
user@host> show system commit
commit requested by root via cli at reboot
```

### show system commit (Rollback Pending)

```
user@host> show system commit
0 2005-01-05 15:00:37 PST by root via cli commit confirmed, rollback in 3mins
```

### show system commit (QFX Series)

```
user@switch> show system commit
0 2011-11-25 19:17:49 PST by root via cli
```





## PART 4

# Troubleshooting

- [Troubleshooting Procedures on page 295](#)



## CHAPTER 26

# Troubleshooting Procedures

- [Returning to the Most Recently Committed Junos Configuration on page 295](#)
- [Returning to a Previously Committed Junos OS Configuration on page 295](#)
- [Creating and Returning to a Rescue Configuration on page 301](#)
- [Rolling Back Junos OS Configuration Changes on page 302](#)

## Returning to the Most Recently Committed Junos Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

To return to the most recently committed configuration and load it into configuration mode without activating it, use the **rollback** configuration mode command:

```
[edit]
user@host# rollback

load complete
```

To activate the configuration to which you rolled back, use the **commit** command:

```
[edit]
user@host# rollback
load complete
[edit]
user@host# commit
```

- Related Documentation**
- [Rolling Back Junos OS Configuration Changes on page 302](#)
  - [Returning to a Previously Committed Junos OS Configuration on page 295](#)
  - [Understanding How the Junos Configuration Is Stored on page 57](#)

## Returning to a Previously Committed Junos OS Configuration

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

This topic explains how you can return to a configuration prior to the most recently committed one, and contains the following sections:

- [Returning to a Configuration Prior to the One Most Recently Committed on page 296](#)
- [Displaying Previous Configurations on page 296](#)

- [Comparing Configuration Changes with a Prior Version on page 297](#)
- [Creating and Returning to a Rescue Configuration on page 299](#)
- [Saving a Configuration to a File on page 300](#)

## Returning to a Configuration Prior to the One Most Recently Committed

### Supported Platforms

To return to a configuration prior to the most recently committed one, include the configuration number, 0 through 49, in the **rollback** command. The most recently saved configuration is number 0 (which is the default configuration to which the system returns), and the oldest saved configuration is number 49.

```
[edit]
user@host# rollback number
load complete
```

## Displaying Previous Configurations

### Supported Platforms [QFX Series](#)

To display previous configurations, including the rollback number, date, time, the name of the user who committed changes, and the method of commit, use the **rollback ?** command.

```
[edit]
user@host# rollback ?
Possible completions:
<[Enter]> Execute this command
<number> Numeric argument
0      2005-02-27 12:52:10 PST by abc via cli
1      2005-02-26 14:47:42 PST by def via cli
2      2005-02-14 21:55:45 PST by ghi via cli
3      2005-02-10 16:11:30 PST by jkl via cli
4      2005-02-10 16:02:35 PST by mno via cli
5      2005-03-16 15:10:41 PST by pqr via cli
6      2005-03-16 14:54:21 PST by stu via cli
7      2005-03-16 14:51:38 PST by vwx via cli
8      2005-03-16 14:43:29 PST by yzz via cli
9      2005-03-16 14:15:37 PST by abc via cli
10     2005-03-16 14:13:57 PST by def via cli
11     2005-03-16 12:57:19 PST by root via other
12     2005-03-16 10:45:23 PST by root via other
13     2005-03-16 10:08:13 PST by root via other
14     2005-03-16 01:20:56 PST by root via other
15     2005-03-16 00:40:37 PST by ghi via cli
16     2005-03-16 00:39:29 PST by jkl via cli
17     2005-03-16 00:32:36 PST by mno via cli
18     2005-03-16 00:31:17 PST by pqr via cli
19     2005-03-15 19:59:00 PST by stu via cli
20     2005-03-15 19:53:39 PST by vwx via cli
21     2005-03-15 18:07:19 PST by yzz via cli
22     2005-03-15 17:59:03 PST by abc via cli
23     2005-03-15 15:05:14 PST by def via cli
```

```

24      2005-03-15 15:04:51 PST by ghi via cli
25      2005-03-15 15:03:42 PST by jkl via cli
26      2005-03-15 15:01:52 PST by mno via cli
27      2005-03-15 14:58:34 PST by pqr via cli
28      2005-03-15 13:09:37 PST by root via other
29      2005-03-12 11:01:20 PST by stu via cli
30      2005-03-12 10:57:35 PST by vwx via cli
31      2005-03-11 10:25:07 PST by yzz via cli
32      2005-03-10 23:40:58 PST by abc via cli
33      2005-03-10 23:40:38 PST by def via cli
34      2005-03-10 23:14:27 PST by ghi via cli
35      2005-03-10 23:10:16 PST by jkl via cli
36      2005-03-10 23:01:51 PST by mno via cli
37      2005-03-10 22:49:57 PST by pqr via cli
38      2005-03-10 22:24:07 PST by stu via cli
39      2005-03-10 22:20:14 PST by vwx via cli
40      2005-03-10 22:16:56 PST by yzz via cli
41      2005-03-10 22:16:41 PST by abc via cli
42      2005-03-10 20:44:00 PST by def via cli
43      2005-03-10 20:43:29 PST by ghi via cli
44      2005-03-10 20:39:14 PST by jkl via cli
45      2005-03-10 20:31:30 PST by root via other
46      2005-03-10 18:57:01 PST by mno via cli
47      2005-03-10 18:56:18 PST by pqr via cli
48      2005-03-10 18:47:49 PST by stu via cli
49      2005-03-10 18:47:34 PST by vw via cli
|Pipe through a command
[edit]

```

## Comparing Configuration Changes with a Prior Version

**Supported Platforms** EX Series, J Series, M Series, MX Series, PTX Series, QFX Series, T Series

In configuration mode only, when you have made changes to the configuration and want to compare the candidate configuration with a prior version, you can use the **compare** command to display the configuration. The **compare** command compares the candidate configuration with either the current committed configuration or a configuration file and displays the differences between the two configurations. To compare configurations, specify the **compare** command after the pipe:

```

[edit]
user@host# show | compare (filename) rollback n

```

***filename*** is the full path to a configuration file. The file must be in the proper format: a hierarchy of statements.

***n*** is the index into the list of previously committed configurations. The most recently saved configuration is number 0, and the oldest saved configuration is number 49. If you do not specify arguments, the candidate configuration is compared against the active configuration file (**/config/juniper.conf**).

The comparison output uses the following conventions:

- Statements that are only in the candidate configuration are prefixed with a plus sign (+).

- Statements that are only in the comparison file are prefixed with a minus sign (-).
- Statements that are unchanged are prefixed with a single blank space ( ).

The following example shows various changes, then a comparison of the candidate configuration with the active configuration, showing only the changes made at the **[edit protocols bgp]** hierarchy level:

```
[edit]
user@host# edit protocols bgp
[edit protocols bgp]
user@host# show
group my-group {
    type internal;
    hold-time 60;
    advertise-inactive;
    allow 1.1.1.1/32;
}
group fred {
    type external;
    peer-as 33333;
    allow 2.2.2.2/32;
}
group test-peers {
    type external;
    allow 3.3.3.3/32;
}
[edit protocols bgp]
user@host# set group my-group hold-time 90
[edit protocols bgp]
user@host# delete group my-group advertise-inactive
[edit protocols bgp]
user@host# set group fred advertise-inactive
[edit protocols bgp]
user@host# delete group test-peers
[edit protocols bgp]
user@host# show | compare
[edit protocols bgp group my-group]
- hold-time 60;
+ hold-time 90;
- advertise-inactive;
[edit protocols bgp group fred]
+ advertise-inactive;
[edit protocols bgp]
- group test-peers {
-   -type external;
-   -allow 3.3.3.3/32;
- }
[edit protocols bgp]
user@host# show
group my-group {
    type internal;
    hold-time 90;
    allow 1.1.1.1/32;
}
group fred {
```

```

type external;
advertise-inactive;
peer-as 3333;
allow 2.2.2.2/32;
}

```

## Creating and Returning to a Rescue Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [SRX Series](#), [T Series](#)

A *rescue configuration* allows you to define a known working configuration or a configuration with a known state that you can roll back to at any time. This alleviates the necessity of having to remember the rollback number with the **rollback** command. You use the rescue configuration when you need to roll back to a known configuration or as a last resort if your router or switch configuration and the backup configuration files become damaged beyond repair.

To save the most recently committed configuration as the rescue configuration so that you can return to it at any time, issue the **request system configuration rescue save** command:

```
user@host> request system configuration rescue save
```

To return to the rescue configuration, use the **rollback rescue** configuration mode command:

```

[edit]
user@host# rollback rescue
load complete

```



**NOTE:** If the rescue configuration does not exist, or if the rescue configuration is not a complete, viable configuration, the rollback command fails, an error message appears, and the current configuration remains active.

To activate the rescue configuration that you have loaded, use the **commit** command:

```

[edit]
user@host# rollback rescue
load complete
[edit]
user@host# commit

```

To delete an existing rescue configuration, issue the **request system configuration rescue delete** command:

```

user@host> request system configuration rescue delete
user@host>

```

For more information about the **request system configuration rescue delete** and **request system configuration rescue save** commands, see [CLI Explorer](#).

## Saving a Configuration to a File

**Supported Platforms** [EX Series](#), [J Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

Save the Junos OS configuration to a file so that you can edit it with a text editor of your choice. You can save your current configuration to an ASCII file, which saves the configuration in its current form, including any uncommitted changes. If more than one user is modifying the configuration, all changes made by all users are saved.

To save software configuration changes to an ASCII file, use the **save** configuration mode command:

```
[edit]
user@host# save filename
[edit]
user@host#
```

The contents of the current level of the statement hierarchy (and below) are saved, along with the statement hierarchy containing it. This allows a section of the configuration to be saved, while fully specifying the statement hierarchy.

By default, the configuration is saved to a file in your home directory, which is on the flash drive.

When you issue this command from anywhere in the hierarchy (except the top level), a **replace** tag is automatically included at the beginning of the file. You can use the **replace** tag to control how a configuration is loaded from a file.

```
user@host> file show /var/home/user/myconf
replace:
protocols {
  bgp {
    disable;
    group int {
      type internal;
    }
  }
  isis {
    disable;
    interface all {
      level 1 disable;
    }
    interface fxp0.0 {
      disable;
    }
  }
  ospf {
    traffic-engineering;
    reference-bandwidth 4g;
    ...
  }
}
```



- Related Documentation**
- [Returning to the Most Recently Committed Junos Configuration on page 295](#)
  - [Loading a Configuration from a File on page 129](#)
  - [Specifying Filenames and URLs on page 219](#)

## Creating and Returning to a Rescue Configuration

**Supported Platforms** [EX Series](#), [J Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [SRX Series](#), [T Series](#)

A *rescue configuration* allows you to define a known working configuration or a configuration with a known state that you can roll back to at any time. This alleviates the necessity of having to remember the rollback number with the **rollback** command. You use the rescue configuration when you need to roll back to a known configuration or as a last resort if your router or switch configuration and the backup configuration files become damaged beyond repair.

To save the most recently committed configuration as the rescue configuration so that you can return to it at any time, issue the **request system configuration rescue save** command:

```
user@host> request system configuration rescue save
```

To return to the rescue configuration, use the **rollback rescue** configuration mode command:

```
[edit]
user@host# rollback rescue
load complete
```



**NOTE:** If the rescue configuration does not exist, or if the rescue configuration is not a complete, viable configuration, the rollback command fails, an error message appears, and the current configuration remains active.

To activate the rescue configuration that you have loaded, use the **commit** command:

```
[edit]
user@host# rollback rescue
load complete
[edit]
user@host# commit
```

To delete an existing rescue configuration, issue the **request system configuration rescue delete** command:

```
user@host> request system configuration rescue delete
user@host>
```

For more information about the **request system configuration rescue delete** and **request system configuration rescue save** commands, see [CLI Explorer](#).

- Related Documentation**
- [Comparing Configuration Changes with a Prior Version on page 297](#)

- [Saving a Configuration to a File on page 300](#)

---

## Rolling Back Junos OS Configuration Changes

---

**Supported Platforms** [EX Series](#), [J Series](#), [LN Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

This topic shows how to use the **rollback** command to return to the most recently committed Junos OS configuration. The **rollback** command is useful if you make configuration changes and then decide not to keep the changes.

The following procedure shows how to configure an SNMP health monitor on a device running Junos OS and then return to the most recently committed configuration that does not include the health monitor. When configured, the SNMP health monitor provides the network management system (NMS) with predefined monitoring for file system usage, CPU usage, and memory usage on the device.

1. Enter configuration mode:

```
user@host> configure
entering configuration mode
[edit]
user@host#
```

2. Show the current configuration (if any) for SNMP:

```
[edit]
user@host# show snmp
```

No **snmp** statements appear because SNMP has not been configured on the device.

3. Configure the health monitor:

```
[edit]
user@host# set snmp health-monitor
```

4. Show the new configuration:

```
[edit]
user@host# show snmp
health-monitor;
```

The **health-monitor** statement indicates that SNMP health monitoring is configured on the device.

5. Enter the **rollback** configuration mode command to return to the most recently committed configuration:

```
[edit]
user@host# rollback
load complete
```

6. Show the configuration again to make sure your change is no longer present:

```
[edit]
user@host# show snmp
```

No **snmp** configuration statements appear. The health monitor is no longer configured.

7. Enter the **commit** command to activate the configuration to which you rolled back:

```
[edit]  
user@host# commit
```

8. Exit configuration mode:

```
[edit]  
user@host# exit  
Exiting configuration mode
```

You can also use the **rollback** command to return to earlier configurations.

**Related  
Documentation**

- [Returning to the Most Recently Committed Junos Configuration on page 295](#)



## PART 5

# Index

- [Index on page 307](#)



# Index

## Symbols

!	
in interface names.....	49
" ", configuration group wildcards.....	145
#, comments in configuration statements.....	xviii, 96
( ), in syntax descriptions.....	xviii
*	
in interface names.....	49
regular expression operator.....	237
wildcard character.....	145
+	
in statement lists.....	86
regular expression operator.....	237
. (period)	
regular expression operator.....	237
/* */, comment delimiters.....	96
< >, in syntax descriptions.....	xviii
?	
regular expression operator.....	145
wildcard.....	145
[ ], in configuration statements.....	xviii
\	
in interface names.....	49
wildcard characters.....	145
{ }, in configuration statements.....	xviii
specifying statements.....	42
(pipe).....	256
command output.....	256
in syntax descriptions.....	xviii, 256
(pipe), in syntax descriptions.....	xviii, 256

## A

access privilege levels	
entering configuration mode.....	61
activate command.....	258
usage guidelines.....	34
activate statements and identifiers.....	94
active configuration.....	5
addresses	
machine name.....	76

annotate command.....	34, 259
usage guidelines.....	96
apply-groups statement.....	176
usage guidelines.....	139
apply-groups-except statement.....	177
authorization See permissions	

## B

batch commit	
usage guidelines.....	53, 120, 121
braces, in configuration statements.....	xviii
brackets	
angle, in syntax descriptions.....	xviii
square, in configuration statements.....	xviii

## C

candidate configuration.....	5
CLI	
command completion.....	240
command history.....	166
displaying.....	254
comparing configuration versions.....	297
configuration mode	
description.....	33
navigation commands, table.....	7
current working directory	
displaying.....	253
setting.....	241
date	
setting.....	249
editing command line.....	47
idle timeout, setting.....	242
keyboard sequences.....	47
permissions, displaying.....	252
prompt strings.....	230
prompt, setting.....	243
restart, after software upgrade.....	244
screen length, setting.....	245
screen width, setting.....	246
settings, displaying.....	250
terminal type, setting.....	247
timestamp.....	230
timestamp, setting.....	248
type checking.....	44
users, monitoring.....	215
word history.....	166
working directory.....	230
command history	
operational mode.....	166

command output	
configuration details.....	68
configuration, comparing files.....	25
end of, displaying from.....	28
filtering	
comparing configuration versions.....	297
number of lines, counting.....	27
pagination, preventing.....	29
regular expressions	
first match, displaying from.....	28
matching output, displaying.....	29
nonmatching output, ignoring.....	27
retaining.....	28
RPC, displaying.....	27
saving to a file.....	30
sending to users.....	29
XML format, displaying.....	27
command shell.....	3
commands	
completion.....	12, 231
configure.....	231
filenames, specifying.....	219
help about.....	9
history.....	166
options.....	19
URLs, specifying.....	219
comments	
adding to configuration file.....	96
comments, in configuration statements.....	xviii
commit and-quit command	
usage guidelines.....	114
commit at command	
usage guidelines.....	116
commit command.....	260
usage guidelines.....	34, 112
commit comment command	
usage guidelines.....	118
commit confirmed command	
usage guidelines.....	115
commit operations, pending	
displaying.....	290
commit scripts.....	7
commit statement.....	198
commit synchronize command.....	260
commit   display detail command	
usage guidelines.....	117
commit-interval statement.....	177
committing configuration	
and exiting configuration mode.....	114
basic.....	112
confirmation required.....	115
logging message about.....	118
monitoring.....	117
scheduling for later.....	116
synchronizing on Routing Engines.....	135
compare command.....	256
usage guidelines.....	297
compare filter.....	25
completing partial command entry.....	240
configuration	
activating.....	295
adding comments.....	96
candidate.....	5
committing.....	112
and exiting configuration mode.....	114
confirmation required.....	115
logging message about.....	118
monitoring process.....	117
scheduling for later.....	116
synchronizing on Routing Engines.....	135
comparing with previous.....	297
deleting	
statements.....	87
displaying	
current configuration.....	282
details.....	68
edit command, using.....	39
global replacement.....	49
groups configuration groups See configuration groups	
locking.....	71
merging current and new.....	130
modifying.....	39
previous, displaying.....	296
protecting.....	105
replacing.....	129
saving to file.....	300
storage of previous.....	57
unprotecting.....	105
configuration files	
filename, specifying.....	219
saving to files.....	300
URL, specifying.....	219
configuration groups	
applying.....	139
creating.....	137



inheritance model.....	56
inherited values.....	143
interface parameters.....	152, 154
nested groups.....	140
overview.....	55
peer entities.....	155
re0, re1 groups.....	137
regional configurations.....	157
sets of statements.....	151
wildcards.....	145, 159
configuration mode, CLI.....	86, 112
command completion.....	12
commands	
activate.....	34
annotate.....	34
commit.....	34
copy.....	34
deactivate.....	34
delete.....	34
edit.....	34
exit.....	34
extension.....	34
help.....	34
insert.....	34
load.....	34
paste.....	35
quit.....	35
rollback.....	35, 302
run.....	35
save.....	35
set.....	35
show.....	35
status.....	35
top.....	35
up.....	35
update.....	35
configuration hierarchy, description.....	37
description.....	33
entering.....	61
example .....	78
exiting.....	62
global replacement.....	49
identifier, description.....	36
locking.....	71
statement	
container.....	37
description.....	36
leaf.....	37
switching to operational mode.....	74
top level statements, interpreting.....	36
users editing configuration	
displaying.....	67
multiple simultaneous users.....	39, 52
configuration mode, entering.....	263
configuration statements	
adding comments about.....	96
deleting.....	87
help about.....	11
inheriting from groups.....	151
overviews.....	85
structure and components.....	42
configure command.....	263
names and addresses.....	76
usage guidelines.....	16, 61, 232
configure exclusive command	
usage guidelines.....	71
container hierarchy See hierarchy	
conventions	
text and syntax.....	xvii
copy command.....	265
usage guidelines.....	16, 34, 232
count command.....	256
count filter.....	27
curly braces, in configuration statements.....	xviii
current working directory	
displaying.....	253
setting.....	241
cursor, moving.....	47
customer support.....	xix
contacting JTAC.....	xix
<b>D</b>	
data types, CLI.....	44
date	
setting from CLI.....	249
days-to-keep-error-logs statement.....	180
deactivate command.....	181
usage guidelines.....	34
deactivate statements and identifiers	
usage guidelines.....	94
default configuration group.....	160
delete command.....	182
usage guidelines.....	34, 87
directories	
working, displaying.....	253
disable statement	
usage guidelines.....	95

display detail command	
usage guidelines.....	68
display inheritance command	
usage guidelines.....	143
display set command	
usage guidelines.....	65
display xml filter.....	27
documentation	
comments on.....	xix

## E

edit command.....	183
usage guidelines.....	34
editing command line.....	47
Emacs keyboard sequences.....	47
environment settings, CLI	
command completion.....	231
displaying.....	231
example configuration.....	169
idle timeout.....	230
prompt string.....	230
screen dimensions.....	229, 234
software upgrade, restarting after.....	230
terminal type.....	230
timestamp.....	230
working directory.....	230
except command.....	256
except filter.....	27
exit command.....	184
from configuration mode.....	75
usage guidelines.....	34, 62
exit configuration-mode command.....	184
usage guidelines.....	62
extension command	
usage guidelines.....	34

## F

file command.....	266
usage guidelines.....	16, 216, 232
filenames, specifying in commands.....	219
files	
listing.....	217
saving command output to.....	30
saving configurations to files.....	300
viewing.....	216
find command.....	256
find filter.....	28
font conventions.....	xvii
FreeBSD UNIX kernel.....	4

## G

groups statement.....	178
usage guidelines.....	137
when.....	206

## H

help apropos command	
usage guidelines.....	10
help command.....	185, 267
usage guidelines.....	10, 34
help reference command	
usage guidelines.....	10
help tip cli command	
usage guidelines.....	12
history, CLI commands	
displaying.....	254
operational mode.....	166
hold command.....	256
hold filter.....	28

## I

identifiers	
inserting in sequential lists.....	92
renaming.....	91
specifying.....	42
idle timeout	
user, setting.....	242
values, CLI sessions.....	230
ignore filter.....	27
inheritance model, configuration groups.....	56
inherited values, configuration groups.....	143
insert command.....	186
usage guidelines.....	34, 92
interface	
configuration example.....	78
interface names	
conventions.....	211
interfaces	
media parameters.....	152, 154
issuing relative configuration commands.....	91

## J

J-Web graphical user interface (GUI).....	7
juniper-ais configuration group	
usage guidelines.....	138
Junos XML management protocol.....	7
junos-defaults configuration group.....	289
displaying.....	160, 285, 289
Junos-FIPS software environment.....	8

**K**

keyboard sequences  
     editing command line.....47

**L**

last command.....256  
 last filter.....28  
 load command.....187  
     usage guidelines.....34  
 load merge command  
     usage guidelines.....130  
 load override command  
     usage guidelines.....129  
 load set command  
     usage guidelines.....131  
 locking configuration.....71  
 logical interfaces  
     unit numbers.....212

**M**

manuals  
     comments on.....xix  
 match command.....256  
 match filter.....29  
 maximum-aggregate-pool statement.....188  
 maximum-entries statement.....189

**N**

names  
     wildcard .....159  
 naming conventions, interface.....211  
 nested configuration groups.....140  
 no-more command.....256, 257  
 no-more filter.....29

**O**

operational mode, CLI  
     command history.....166  
     switching to configuration mode.....74  
     users, monitoring.....215  
     word history.....166

**P**

parentheses, in syntax descriptions.....xviii  
 partial command entry, completing.....240  
 paste command  
     usage guidelines.....35  
 peer entities.....155  
 permissions, CLI, displaying.....252

pipe ( | )  
     command output, filtering.....25, 256  
 processes  
     managing.....222  
     restarting.....270  
 programs  
     managing.....222  
 prompt  
     setting to display in CLI.....243  
     to restart.....244  
 prompt strings  
     CLI.....230  
 protect command.....190  
     usage guidelines.....105  
 protecting configuration  
     usage guidelines.....105

**Q**

quit command.....16, 191, 232  
     usage guidelines.....35

**R**

re0 configuration group.....137  
 re1 configuration group.....137  
 redrawing screen.....48  
 regional configurations.....157  
 regular expressions  
     first match, displaying from.....28  
     matching output, displaying.....29  
     nonmatching output, ignoring.....27  
 relative option.....130  
 rename command.....192, 193  
     usage guidelines.....91  
 renaming identifiers.....91  
 replace command.....194  
     usage guidelines.....49  
 replace option.....130  
 request command.....268  
     usage guidelines.....16, 232  
 request message filter.....29  
 request system configuration rescue delete  
     command.....299, 301  
 request system configuration rescue save  
     command.....299, 301  
 request system halt command.....226  
 request system logout pid pid\_number  
     command.....71  
 request system reboot command.....226  
 resolve command.....256

restart command.....	270	show cli history command.....	254
usage guidelines.....	16, 232	usage guidelines.....	166
restart routing command.....	225	show command	
restarting		configuration mode.....	281
after software upgrade.....	230, 244	usage guidelines.....	35
software processes.....	270	show configuration command.....	282
rollback command.....	195, 302	show groups junos-defaults command.....	289
usage guidelines.....	35	usage guidelines.....	160
Routing Engines		show system commit command.....	290
synchronizing configuration.....	135	show system processes extensive command.....	222
RPC		output, table.....	224
displaying command output in.....	27	show system statistics command.....	290
run command.....	196	show version command	
usage guidelines.....	35	Junos OS.....	220
<b>S</b>		show   display inheritance command.....	285
save command.....	197, 256	show   display inheritance defaults command	
usage guidelines.....	35, 300	usage guidelines.....	160
screen		show   display omit command.....	286
dimensions.....	229, 234	show   display set command.....	287
redrawing.....	48	usage guidelines.....	65
screen length, setting.....	245	show   display set relative.....	288
screen width, setting.....	246	show   display set relative command.....	288
set cli complete-on-space command.....	240	usage guidelines.....	66
usage guidelines.....	231	software upgrade	
set cli directory command.....	241	restarting after.....	244
usage guidelines.....	230	ssh command	
set cli idle-timeout command.....	242	usage guidelines.....	16, 232
usage guidelines.....	230	status command.....	200
set cli prompt command.....	243	usage guidelines.....	35, 67
usage guidelines.....	230	storing previous configurations.....	57
set cli restart-on-upgrade command.....	244	strings	
usage guidelines.....	230	help about.....	10
set cli screen-length command.....	245	support, technical See technical support	
usage guidelines.....	229, 234	symbol.....	29
set cli screen-width command.....	246	syntax conventions.....	xvii
set cli terminal command.....	247	<b>T</b>	
usage guidelines.....	230	technical support	
set cli timestamp command.....	248	contacting JTAC.....	xix
usage guidelines.....	230	telnet command	
set command.....	39	usage guidelines.....	16, 232
configuration mode.....	199, 280	terminal screen	
usage guidelines.....	35	length, setting.....	245
set date command.....	249	width, setting.....	246
set option.....	131	terminal type.....	230
show cli authorization command.....	252	setting.....	247
show cli command.....	250	timeout, user, setting.....	242
usage guidelines.....	231	timestamp, CLI output, setting.....	248
show cli directory command.....	253		

top command.....	201
usage guidelines.....	35, 91
traceoptions statement.....	202
trim command.....	256
TX Matrix router	
configuration groups.....	137
configuration groups example.....	142
type checking, CLI.....	44

## U

UNIX operating system.....	3, 4
UNIX shell.....	4
unprotect command.....	203
usage guidelines.....	105
unprotecting configuration	
usage guidelines.....	105
up command.....	204
usage guidelines.....	35, 91
update command.....	205
usage guidelines.....	35, 72
updating configure private configuration.....	72
upgrade, restarting after.....	230
upgrading software.....	230
prompt to restart after.....	244
URLs, specifying in commands.....	219
user accounts	
configuration example.....	76
user timeout, setting.....	242
users	
CLI permissions, displaying.....	252
editing configuration	
displaying.....	67
multiple simultaneous users.....	39, 52
of CLI, monitoring.....	215

## W

wildcard characters.....	145
wildcard command.....	207
wildcard delete command	
usage guidelines.....	99
wildcard names.....	159
wildcard range command	
usage guidelines.....	100
word history	
operational mode.....	166
working directory	
current, setting.....	241
displaying.....	253

## X

XML format	
displaying command output in.....	27

