

the Soho™ Kettle

Instruction Book - Suits all LKE530 Models



Breville®



Contents

- 2 IMPORTANT SAFEGUARDS
- 6 Components
- 7 Functions
- 8 Care & Cleaning/ Storage

IMPORTANT SAFEGUARDS

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

BREVILLE RECOMMENDS SAFETY FIRST

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.

- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- This kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always ensure the kettle switch is in the 'off' position, then turn the power off at the power outlet and remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle is switched to 'off' position after the water has boiled before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Do not overfill the kettle past the maximum water level mark. If the kettle is overfilled, boiling water may be ejected.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Connect only to a 230V or 240V power outlet
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- Always turn the appliance to the OFF position, switch off at the power outlet, remove the plug and allow all parts to cool before attempting to move the appliance, when the appliance is not in use, before cleaning and when storing.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the

hazards involved. Cleaning and user maintenance shall not be made by children unless they are 8 years or above and are under supervision. Keep the appliance and its cord out of reach of children aged less than 8 years.

- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
 - Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
 - This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical

appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- For safety reasons it is recommended you plug your Breville appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.
- Do not spill water onto the connector.
- The use of attachments not sold or recommended by Breville may cause fire electric shock or injury.



WARNING

- Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.

- The heating element surface is subjected to residual heat after use.
- The appliance is designed for boiling of drinking quality water only.
- Never use to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked into the closed position before use.
- Do not press the lid release button to open the lid during and after operation. This may result in boiling water splashing from the kettle. Pour out all the hot water from the kettle before opening the lid to refill.
- Never immerse the kettle base, switch area, power base, power cord or power plug in water, or allow moisture to come into contact with these parts.
- To prevent damage to the kettle do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS



Components



- A. Wide hinged lid pops open for easy filling and cleaning. Lid locks into place when pressed closed for additional safety
- B. One touch pop-up lid button
- C. Cool-touch handle is comfortable to use and suitable for all hand sizes.
- D. BPA Free* water level indicator
- E. Illuminated 'ON' Light indicates power on when boiling.
- F. On/Off boil switch with automatic cut off
- G. Cord free kettle easily detaches from power base for ease of use.

Not Shown

Safety Boil Dry Protection ensures kettle automatically switches off if the kettle boils empty.

*Breville makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No.10/2011.



Functions

BEFORE FIRST USE

Remove any promotional material attached to your kettle. It is recommended that before first use, the kettle is filled to the maximum level with cold tap water, boiled and water discarded. Your kettle will only operate when positioned on the power base with the 'On/Off' switch in the 'On' position.

The kettle will automatically switch off once the water has boiled.

OPERATION OF YOUR KETTLE

1. To fill the kettle, remove it from the power base and open lid by pressing the lid release button. Fill with the desired amount of water.



NOTE

Always fill the kettle between the minimum (700ml) and maximum (1700ml) marks on the water window. Too little water will result in the kettle switching 'Off' before the water has boiled. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.

2. Ensure the lid is locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 230/240V power outlet and switch on.
3. Press the 'On/Off' switch to the 'On' position for water to boil.



NOTE

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

The kettle will automatically switch 'off' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.

If further heating of the kettle is not required, switch 'Off' at the power outlet, unplug the power cord and empty the water from the kettle. Replace the kettle onto the power base and close the lid.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs, the kettle will stop heating. Switch 'Off' at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will then automatically reset.



Care & Cleaning/ Storage

Always switch 'off' at the power outlet and unplug the appliance from the power outlet before cleaning.

REMOVABLE FILTER

The kettle features a removable mesh filter to remove scale deposits for cleaner water. To remove the scale deposits from the filter, open the lid and slide the filter up and out of the kettle.

The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.



NOTE

The filter could become damaged with time. Please check regularly and replace if found damaged.

The concealed element in the base of the kettle is made from high quality stainless steel.

Any brown stains appearing are the result of mineral deposits and are not rust.

REMOVAL OF MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior and water gauge to discolour over time. This may be removed by using Breville Kettle Cleaner (BKC250) or a proprietary kettle descaler which is available from most leading supermarkets, department and hardware stores.

BREVILLE KETTLE CLEANER

Directions for use:

1. Add 125ml of Breville Kettle Cleaner to 2 litres of water.
2. Fill kettle with mixture on a protected surface.
3. Bring kettle to boil and let stand for 30 minutes.
4. Clean spout by using a cloth dampened with Breville Kettle Cleaner and rub well then wipe off.
5. Bring the kettle to boil for a second time, then empty solution.
6. Fill kettle with fresh water and bring to the boil, discard boiled water.
Your kettle is now ready to make your next cup of tea/coffee.

TO CLEAN THE EXTERIOR

The outside of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.



NOTE

Do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure the lid is closed and locked securely into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.

the Soho™ Toaster

Instruction Book - Suits all LTA520 Models



Breville®



Contents

2	IMPORTANT SAFEGUARDS
7	Components
8	Functions
10	Care & Cleaning/ Storage

IMPORTANT SAFEGUARDS

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

BREVILLE RECOMMENDS SAFETY FIRST

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating for the first time and save for future reference.
- Remove and safely discard any packaging materials and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

- Always operate the toaster on a stable, heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not allow hot surfaces of the toaster to come in contact with counter tops or tables.
- A fire may occur if the toaster is covered or touching flammable materials, including curtains, draperies, walls and the like, when in operation.
- Curtains and other flammable items can catch fire if they are near or above the toaster.
- While toasting, the bread may burn. Therefore do not use the toaster near or below combustible material, such as curtains.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch any other source of heat.
- This toaster is not intended to be operated by means of an external timer or separate remote-control system.
- When operating the toaster, keep a minimum distance of 10cm of space from the surrounding sides & 20cm above.
- Breville does not recommend placing the toaster in enclosed areas.
- Do not use the toaster on a sink drain board.
- Do not move toaster while in operation.
- Avoid contact with moving parts.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the toasting slots. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Do not place toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not touch hot surfaces. Toaster surfaces are hot during and after operation. To prevent burns or personal injury, always use protective hot pads or insulated oven mitts, or use handles or knobs where available.
- Metal utensils such as a knife, should not be inserted into the toaster to remove jammed toast, bagels or any other items from the toaster. This can damage the heating elements as well as lead to electrocution.
- Do not attempt to dislodge food when the toaster is plugged in.

- Oversized foods, metal foil packages, or utensils must not be inserted into the toaster as they may cause a fire or risk of electric shock.
- Do not use the toaster without the slide out crumb tray in place. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard. To turn the toaster off, remove the power plug from the power outlet.
- Always turn the power off at the power outlet and remove the power plug from the power outlet if the toaster is not in use, before attempting to move, before cleaning, and when storing. Allow to cool before putting on or taking off parts.
- Never cover the toaster whilst it is plugged into the power outlet or while hot.
- Do not use harsh abrasive, caustic cleaners or oven cleaners when cleaning the toaster.
- Do not clean with metal scouring pads. Pieces can break off and touch electrical parts, creating a shock hazard.
- Strictly follow the care and cleaning instructions described in this book.

- Never cover the toaster whilst it is plugged into the power outlet or while hot.
- The use of attachments not sold or recommended by Breville may cause fire, electric shock or injury.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind cord before use.
- Connect only to 230V or 240V power outlet.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces, or become knotted.
- Do not leave the appliance unattended when in use.
- Keep the appliance and its cord out of reach of children less than 8 years.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is recommended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
Misuse may cause injury.
- It is recommended to regularly inspect the appliance. Do not use the appliance if the power cord, power plug, or appliance becomes damaged in anyway. Immediately cease use and call Breville Consumer Service for examination, repair or adjustment.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a hot source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.



WARNING

 
- Never operate the toaster on its side.
- Never add any food substance to the bread, bagel or any other item prior to toasting (such as butter, jelly or marmalade). This may cause a fire as well as lead to electrocution.
- This toaster is for toasting bread, bagels, English muffins and toaster pastries only. Placing other food items in the toaster can cause a fire as well as lead to electrocution.



WARNING

- Do not leave unattended when in use as toast may jam or wedge in the bread carriage.
- Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object as contact with live elements may not only damage the element, but cause electrocution.
- Do not operate the toaster without the removable crumb tray in place. The crumb tray should be regularly cleaned. Do not allow crumbs to build up in crumb tray.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



Components



- A. Self-centring, extra wide and deep toasting slots.
- B. Carriage control lever with high lift, making it easy to remove toasted items.
- C. 7 stage browning control dial.
- D. Cancel, reheat and defrost settings.
- E. Sturdy non-slip feet.

NOT SHOWN

- Cord wrap (under base).
- Removable crumb tray.



Functions

BEFORE FIRST USE

Before first use, remove any packaging material and promotional labels before using your toaster for the first time.

1. Place the toaster on a dry, level heat resistant surface.
2. Fully unwind the power cord and insert power cord into a 230V or 240V power outlet and switch on at the power outlet.
3. Place 1 slice of bread into each toasting slot.
4. Select the desired browning setting using the variable browning control dial. Settings range from '1' being the lightest to '6' being the darkest. It is recommended for first time use, that the control is to be set to setting number '3'. If toasting less than 2 slices of bread, the browning setting may need to be reduced to avoid burning the toast.
5. Press the carriage control lever down, ensuring it is locked in position.
6. Once the browning process is complete and desired toast colour is achieved, the carriage control lever will automatically raise the toast.



NOTE

The toasting process can be stopped at any time by pressing the CANCEL button or switching off at the power outlet.



WARNING

The toaster is electronically controlled and will not lock down in the toasting position until the toaster is plugged into a 230V or 240V power outlet, switched on and the control lever is latched down in the locked position.

USING YOUR BREVILLE TOASTER



NOTE

Depending on personal preference and bread types, a different browning setting may be required. For light-textured breads such as raisin toast and white breads this may require a lighter setting, whilst heavier textured breads such as rye bread may require a darker setting.

CANCEL BUTTON

The CANCEL button can be selected during operation to cancel the toasting process. The CANCEL button illuminates when the carriage control lever is locked down into position and the toasting process is in operation. Pressing the CANCEL button any time during operation will cause the carriage lever to raise the toast and cancel the toasting process.

DEFROST BUTTON

The DEFROST button is used to toast frozen bread. Place the frozen bread into the bread slots, select the desired browning setting and press the carriage control lever down and lock into position, then press the DEFROST button. The DEFROST button illuminates during the toasting process.

REHEAT TOAST

The REHEAT button can be selected at the beginning of the toasting process to reheat the toast, if required. Place the toast into the bread slots and press the carriage control lever down, ensuring it is locked into position. Press the REHEAT button; the REHEAT button illuminates during toasting process.



NOTE

The DEFROST button and REHEAT button cannot be selected at the same time.

HIGH LIFT

The toaster carriage control lever features HIGH LIFT. HIGH LIFT is ideal for removing smaller items such as crumpets or English muffins. Once the browning process is complete, the lever will automatically raise the toast. For easier removal of toasted items, lift carriage control lever upwards approximately 10mm from the lever starting position.



WARNING

Do not leave toaster unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements may not only damage the elements, but cause electrocution.



Care & Cleaning/ Storage

CARE AND CLEANING

1. Remove the power plug from the power outlet and allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray, located on the left side of the toaster, opposite to the lever. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs, turn the toaster upside down over a trash bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened soft cloth then polish with a soft dry cloth to dry completely.



NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Remove the power plug from the power outlet and allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard.

Do not store anything on top of the toaster.



WARNING

Do not use the toaster without the crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard and damage the toaster.



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo, Master Every Moment and Soho are trademarks of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2019.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.