

True Wireless Stereo Clip on Earbuds (CJ07)

User manual



Compatibility:

This product is compatible with all Bluetooth-enabled mobile phones (iOS/Android Phone), iPad, tablets, laptops.

ACTIVATE WARRANTY

We offer one year warranty for all our products if any issues. You will get free replacement for damaged, defective item.

Please activate it within 15days via e-mail: vipserviceforyou@hotmail.com

1.Packing list:

- 2 * Bluetooth Earbuds
- 1 * Charging Case
- 1 * Type-C Charging Cable
- 1 * User Manual

2. Indicator Chart:



3.Powering On:

Take out the earphones from the charger case, they will “power on” and wait for Bluetooth pairing.

4.Bluetooth Connection:

- 1) Take the earbuds out from the charging case
- 2) Open the Bluetooth setting menu on your cellphone
- 3) Search for “CJ07” and select it to pair, the earphone lights be off after they get connected with your cellphone.

Note: If the earphones connected the cellphone once, and when the Bluetooth menu on the cellphone was open ,the earphones will get reconnected with the last device they paired automatically.

5.Powering Off:

The earphones will switch off when they are put into the charger case.

Note: If the earphones were disconnect with the device, they will be powered off automatically after 3mins

6.Play Music:

- 1) Click the button once to Pause/Play.
- 2) Click once the multi-function button and release it(“L” for next song,“R”for previous song)

7.Volume Adjustment:

Long press the multi-function button to adjust the volume(“L”for volume down ,“R” for volume up)

8.Voice Assistant:

Triple click the multi-function button to activate the Siri voice assistant.

9.Phone Call:

- 1) When a call comes in, click once one of the multi-function buttons in order to answer the call or long press it to reject it.
- 2) During a phone call, short press the multi-function button to end the call and the earphone will resume its previous working state.
- 3) During a call, the volume can be controlled via the mobile phone.

10.How to Use Multi-function Button:

Power On/Off	Power on	Press and hold the multi-function button for 2 seconds
	Power off	Press and hold the multi-function button for 5 seconds
Music Control	Music Play/Pause	Click once the multi-function button of the "L" or "R" side
	Skip to next song	Double click the multi-function button of the "L" side
	Go back previous song	Double click the multi-function button of the "R" side
Call Control	Answer/End calls	Click once the multi-function button of the "L" or "R" side
	Reject incoming call	Long press the multi-function button of the "L" or "R" side
Siri Assistant	Activate voice assistant	Triple click the multi-function button of the "L" or "R" side
Volume Control	Volume down	Long press the multi-function button of the "R" side
	Volume up	Long press the multi-function button of the "L" side

11.LED Light & Voice Prompt

	LED light	Voice prompt
Power on	Blue light flashes 3 times and off	"Power on"
Bluetooth Connected	No	"Connected"
Bluetooth Pairing	Red light and blue light quickly flashes alternatively	/
Bluetooth Disconnect	Red light and blue light quickly flashes alternatively	"Disconnected"
Calling	Only blue light flashes slowly	/
No Signal	Red light and blue light quickly flashes alternatively	"Disconnected"
Low Battery	Red light flashing	"Battery low"
The charging case charging	The light stop flashing blue when fully charged	/
The earbuds charging	The light stop flashing red when fully charged	/
Powered off	Red light flashes 3 times and off	"Power off"

12.Specifications:

Model	CJ07
Bluetooth version	5.3
Battery capacity of charging case	180mAh
Earphone Charge time	About 1.5 hour

Music play time	About 6-8h
Bluetooth profiles	HFP/A2DP/AVRCP
Operating frequency	2.40 GHZ-2.48 GHZ
Maximum transmission range	≤13M
Charging Cable	Type-C
Whole Weight	38g
Warranty	1 Year

13.Important Notes:

- 1) Host device is a connection between second device and your mobile phone,it is normal status under high power consumption.
- 2) When not connected to any device,the earphones will power off automatically after 3 minutes.
- 3) On iPhone, the battery level of the earphones will be displayed in real time.
- 4) When the earphones and the charger case are not used for long periods of time, it is recommended to keep them in a dry place and to recharge them at least every 2 months.

14.Trouble shooting:

Fault	Cause	Solutions
Can't power on	Earbuds are low battery/Crash	Charge the earbuds, touch and hold the multi-function button for 2 seconds
No charging indication	The earbuds are not put into charging case properly	Adjust earbuds position
Automatically shut down	Earbuds are low battery	Charge the Earbuds
The Earbuds have echo	The volume is too high or the environment is too noisy	Adjust the volume or change position
The Earbuds are noisy	Outside environment interference or too far away from mobile phone	Change position,or move closer to the mobile phone
low sound	wearing Earbuds incorrectly or turn the volume up	Adjust the Earbuds position or turn up the volume
Signal intermittent	Outside environment interference or too far away from mobile phone	Change to better environment or move closer to the mobile phone
Earbuds have no sound	Pairing unsuccessful between L and R Earbuds	Put the earphones into the charger case first and then take it out and pair it again

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:2A863-JC07