## Parts List

The following images are for reference only. Actual components may differ in appearance. The cables delivered with a Box may be used only with that Box.
If a component is damaged, missing, or wet upon being removed from the box, contact your local supplier.



### 2 Installing the Box

The voltage inside the Box is high. Do not disassemble it without the guidance of a professional engineer.

### /Installation on a Flat Surface


Place the Box on a table or other flat surface and connect the cables.

⚠ Do not stack objects above or under the Box or block the heat dissipation holes on the left or right.

### Installation Inside a Cabinet


The cabinet in which the Box will be placed must be a 19-inch cabinet compliant with IEC 60297, such as the HUAWEI N68E-22 cabinet.

- Reserve at least 1 U (44.45 mm) above and under the Box and 5 cm on its left and right for heat dissipation
- 1 Use a Phillips screwdriver to attach the mounting ears to the sides of the Box.
- Q The Phillips screwdriver does not come with the Box.

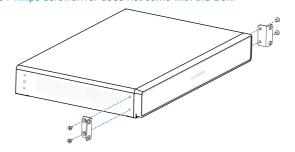

- 2 Slide the Box into the cabinet and insert screws through the mounting ears to hold the Box in place.
- O Do not install guide rails for the cabinet.

  The screws do not come with the Box.

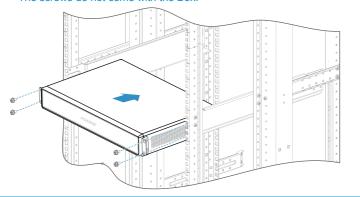


### 3 Connecting Cables

See the detailed description of the Box 900's ports under Product Structure > Front Panel and Rear Panel in the HUAWEI Box 900 V600R019C00 Product Description.

To obtain the document, scan the Product Description QR code on the back cover.

A device connected to the Box through the HD-VI or HD-BaseT port can be powered through this port. If both ports are in use, only one port (default: HD-VI port) can supply power for the connected device.

The default port for power supply can be changed on the Box's web interface.

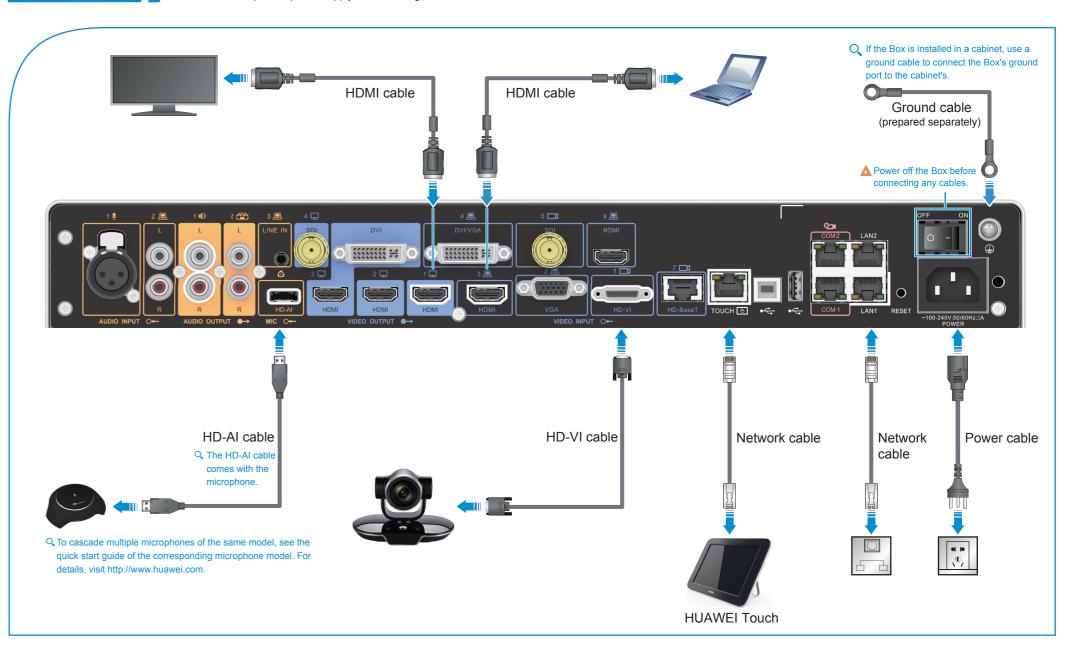



### Scan the QR Codes



**Product Description** 







**Information Center** 

### OPEN SOURCE SOFTWARE NOTICE

For further details, log in to the Box's web interface and find online help at ? > ? .

Huawei Technologies Co., Ltd. Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129, People's Republic of China http://www.huawei.com

Date: 2018-10-22 Part number: 31509881 Issue: 05

# Powering On the Box





The following figure shows where the status indicator of the Box is located.




If the Indicator Is	The Box Is
Off	Powered off.
Blinking green twice per second	Powering on.
Blinking green four times per second	Upgrading.
Steady green	Working properly.
Blinking green (on for 1s, off for 2s)	On standby.
Blinking red once every 5s	Faulty (hardware).
Blinking red four times per second	Faulty (software).
Blinking red once every 2.5s	Overheated.

If the status indicator is abnormal, contact your local supplier.

### **HUAWEI Box 900 Quick Installation Guide**

After the Box installation is complete, connect the Touch to the Box and use the System Configuration Wizard to set up the Box. For more information on how to use the wizard, see the "Setting Parameters on the Touch" section in the HUAWEI Box 500, Box 700, and Box 900 V600R019C00 Configuration Guide. To obtain the document, scan the Configuration Guide QR code on the back cover.

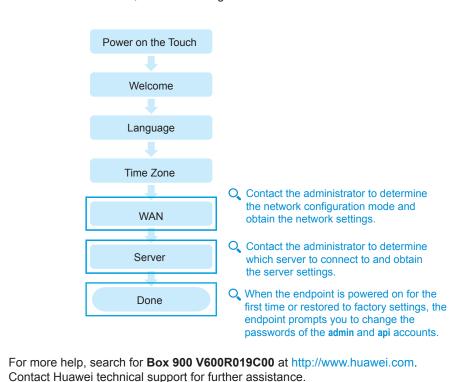



**HUAWEI**