

# Latitude 5591

## Setup and Specifications Guide



## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.


 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

|   |           |
|---|-----------|
| <b>Chapter 1: Set up your computer</b> .....  | <b>5</b>  |
| <b>Chapter 2: Chassis view</b> .....          | <b>7</b>  |
| Front open view.....                          | 7         |
| Back view.....                                | 8         |
| Left view.....                                | 8         |
| Right view.....                               | 9         |
| Palmrest view.....                            | 9         |
| <b>Chapter 3: System specifications</b> ..... | <b>11</b> |
| Dimensions and weight.....                    | 11        |
| Processor.....                                | 11        |
| System information.....                       | 12        |
| Operating system.....                         | 12        |
| Memory.....                                   | 12        |
| Ports and connectors.....                     | 13        |
| Communications.....                           | 14        |
| Audio.....                                    | 14        |
| Video.....                                    | 14        |
| Storage.....                                  | 15        |
| Media card-reader.....                        | 16        |
| Display.....                                  | 16        |
| Keyboard.....                                 | 16        |
| Camera.....                                   | 17        |
| Touchpad.....                                 | 17        |
| Battery.....                                  | 18        |
| Input device .....                            | 19        |
| Power adapter.....                            | 19        |
| Environmental.....                            | 19        |
| <b>Chapter 4: System setup options</b> .....  | <b>21</b> |
| Boot Sequence.....                            | 21        |
| Navigation keys.....                          | 21        |
| System Setup overview.....                    | 22        |
| Accessing System Setup.....                   | 22        |
| General screen options.....                   | 22        |
| System Configuration screen options.....      | 23        |
| Video screen options.....                     | 25        |
| Security screen options.....                  | 25        |
| Secure Boot screen options.....               | 26        |
| Intel Software Guard Extensions.....          | 27        |
| Performance screen options.....               | 27        |
| Power Management screen options.....          | 28        |
| POST Behavior screen options.....             | 29        |


|   |           |
|---|-----------|
| Virtualization support screen options.....                  | 30        |
| Wireless screen options.....                                | 30        |
| Maintenance screen options.....                             | 31        |
| System Log screen options.....                              | 31        |
| Updating the BIOS in Windows .....                          | 31        |
| System and setup password.....                              | 32        |
| Assigning a system setup password.....                      | 32        |
| Deleting or changing an existing system setup password..... | 32        |
| <b>Chapter 5: Software.....</b>                             | <b>34</b> |
| Supported operating systems.....                            | 34        |
| Downloading drivers.....                                    | 34        |
| Downloading the chipset driver.....                         | 34        |
| Intel chipset drivers.....                                  | 35        |
| Intel HD Graphics drivers.....                              | 35        |
| <b>Chapter 6: Getting help.....</b>                         | <b>36</b> |
| Contacting Dell.....  | 36        |

# Set up your computer


1. Connect the power adapter.

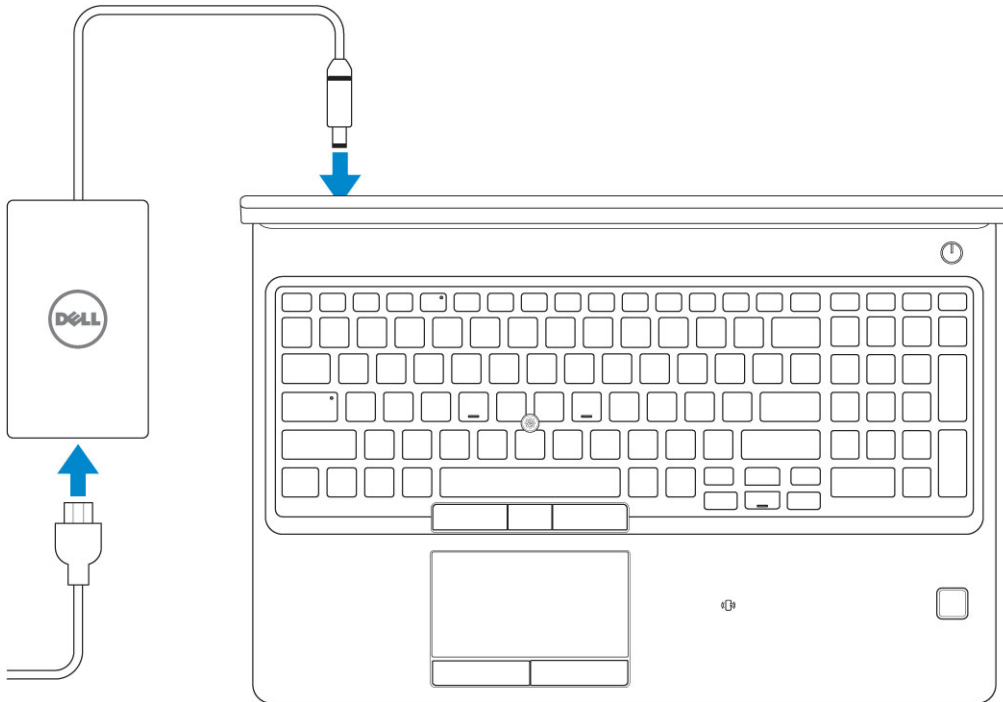


2. Press the power button.

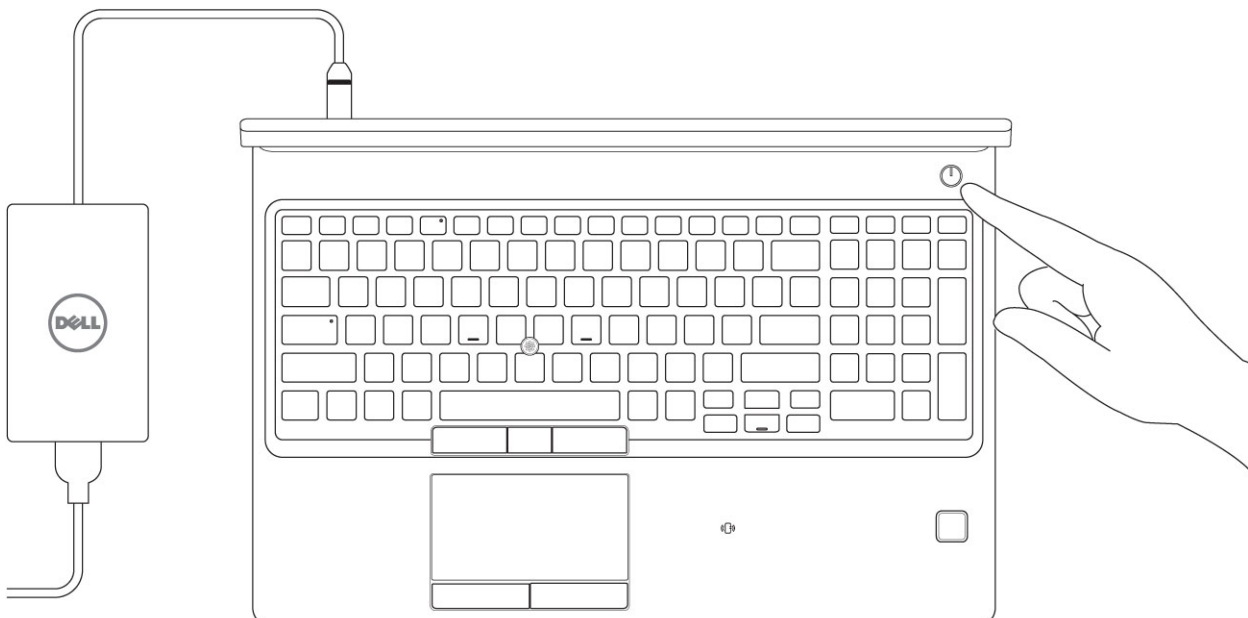

3. Follow the instructions on the screen to finish Windows setup:
  - a. Connect to a network.

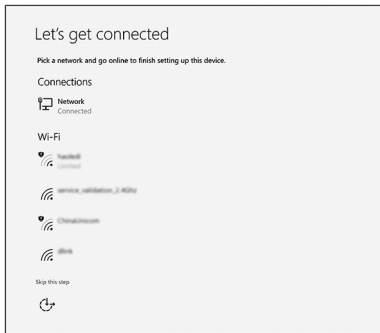

b. Sign-in to your Microsoft account or create a new account.

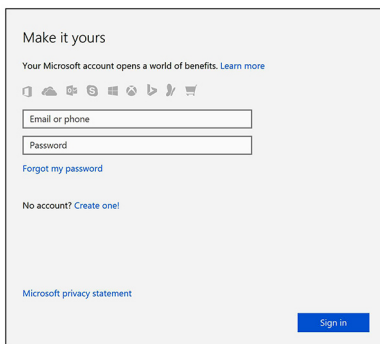

4. Locate Dell apps.

**Table 1. Locate Dell apps**


|  |   |
|--|---|
|  | <p>Register your computer</p>                         |
|  | <p>Dell Help &amp; Support</p>                        |
|  | <p>SupportAssist — Check and update your computer</p> |

## Chassis view

### Topics:

- Front open view
- Back view
- Left view
- Right view
- Palmrest view

### Front open view

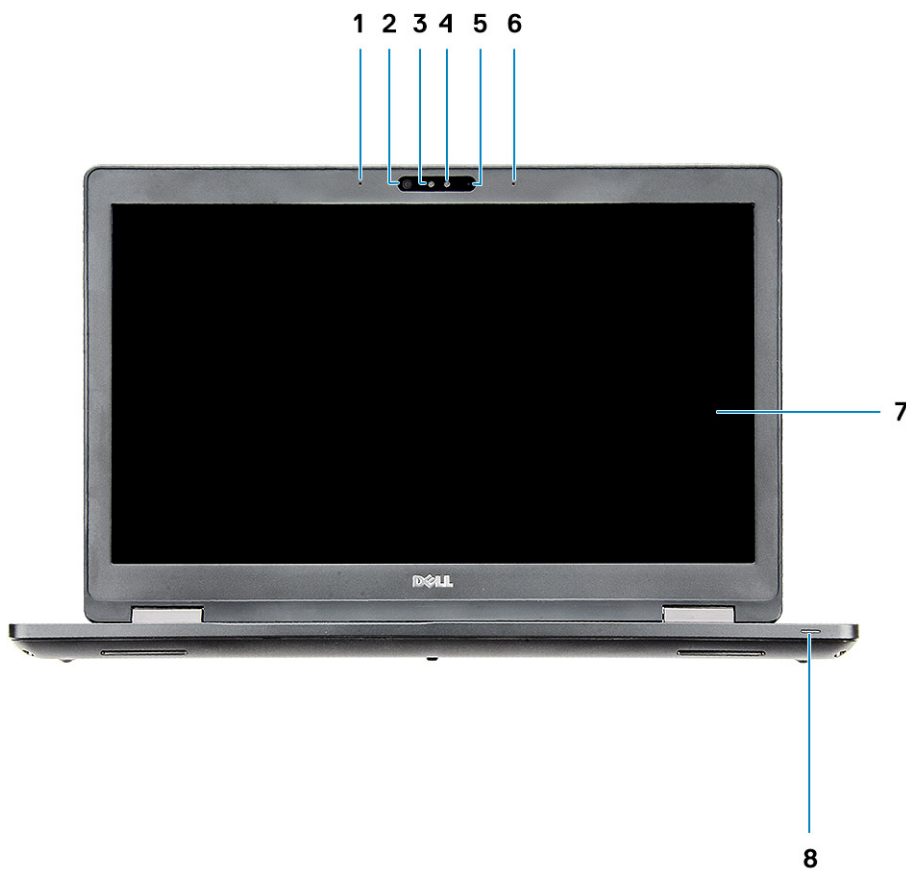

- |                                     |                                    |
|-------------------------------------|------------------------------------|
| 1. Array microphone                 | 2. Infrared (IR) camera (optional) |
| 3. Infrared (IR) emitter (optional) | 4. Camera status light (optional)  |
| 5. Camera (optional)                | 6. Array microphone                |
| 7. LCD panel                        | 8. Battery charge status light     |

**i** **NOTE:** Computer shipped with HD camera module is standard , IR camera is optional.

## Back view



- 1. Network port
- 2. HDMI port
- 3. USB 3.1 Gen 1 port
- 4. Power connector port


## Left view



- 1. Display Port over USB Type-C connector (optional Thunderbolt™ 3)
- 2. USB 3.1 Gen 1 port
- 3. SD Card reader
- 4. Smart Card reader (optional)



## Right view

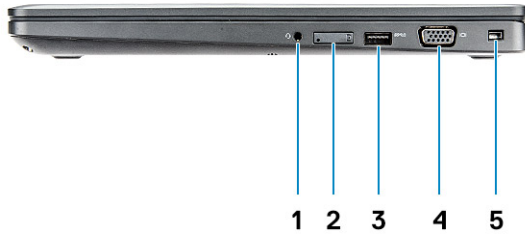

- 1. Headset port
- 2. SIM-card slot (optional)
- 3. USB 3.1 Gen 1 port
- 4. VGA port
- 5. Wedge lock slot

## Palmrest view



1. power button/Power status light
3. palmrest
5. NFC receiver (optional)

2. keyboard
4. fingerprint reader (optional)
6. touchpad

## System specifications

**NOTE:** Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to **Help and Support** in your Windows operating system and select the option to view information about your computer.

### Topics:

- [Dimensions and weight](#)
- [Processor](#)
- [System information](#)
- [Operating system](#)
- [Memory](#)
- [Ports and connectors](#)
- [Communications](#)
- [Audio](#)
- [Video](#)
- [Storage](#)
- [Media card-reader](#)
- [Display](#)
- [Keyboard](#)
- [Camera](#)
- [Touchpad](#)
- [Battery](#)
- [Input device](#)
- [Power adapter](#)
- [Environmental](#)

## Dimensions and weight

**Table 2. Dimensions and weight**

|        |  |
|--------|--|
| Height | Touch System <ul style="list-style-type: none"> <li>• Front height - 0.8 inch (21.65 mm)</li> <li>• Back height - 0.9 inch (24.3 mm)</li> </ul> Non-Touch System <ul style="list-style-type: none"> <li>• Front height - 0.8 inch (20.6 mm)</li> <li>• Back height - 0.9 inch (24.3 mm)</li> </ul> |
| Width  | 14.8 inch (376 mm)   |
| Depth  | 9.9 inch (250.7 mm)  |
| Weight | Starting 4.26 lbs (1.934 kg)   |

## Processor

Global Standard Products (GSP) are a subset of Dell's relationship products that are managed for availability and synchronized transitions on a worldwide basis. They ensure the same platform is available for purchase globally. This allows customers to

reduce the number of configurations managed on a worldwide basis, thereby reducing their costs. They also enable companies to implement global IT standards by locking in specific product configurations worldwide. The following GSP processors identified below will be made available to Dell customers.

**NOTE:** Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

**Table 3. Processor specifications**

| Type   | UMA Graphics           |
|--|------------------------|
| Intel Core i5-8300H Processor (4 Core, 8M Cache, 2.3GHz, 35W cTDP)       | Intel UHD Graphics 630 |
| Intel Core i5-8400H Processor (4 Core, 8M Cache, 2.5GHz, 35W cTDP, vPro) | Intel UHD Graphics 630 |
| Intel Core i7-8850H Processor (6 Core, 9M Cache, 2.6GHz, 35W cTDP, vPro) | Intel UHD Graphics 630 |

## System information

**Table 4. System information**

| Feature                | Specifications      |
|------------------------|---------------------|
| Chipset                | Intel CM246 chipset |
| DRAM bus width         | 64-bit              |
| FLASH EPROM            | {SP1 256 Mbits}     |
| PCIe bus               | 100 Mhz             |
| External bus frequency | {DMI 3.0-8GT/s}     |

## Operating system

**Table 5. Operating system**

| Feature                     | Specifications   |
|-----------------------------|--|
| Operating systems supported | <ul style="list-style-type: none"> <li>Windows 10 Home (64 bit)</li> <li>Windows 10 Professional (64 bit)</li> <li>Ubuntu 16.04 LTS (64bit)</li> </ul> |

## Memory

**Table 6. Memory specifications**

| Features                     | Specifications |
|------------------------------|----------------|
| Minimum memory configuration | 4 GB           |
| Maximum memory configuration | 32 GB          |

**Table 6. Memory specifications (continued)**

| Features                          | Specifications  |
|-----------------------------------|---|
| Number of slots                   | 2 SODIMM  |
| Maximum memory supported per slot | 16 GB   |
| Memory options                    | <ul style="list-style-type: none"> <li>● 4 GB - 1 x 4 GB</li> <li>● 8 GB - 1 x 8 GB</li> <li>● 8 GB - 2 x 4 GB</li> <li>● 16 GB - 2 x 8 GB</li> <li>● 16 GB - 1 x 16 GB</li> <li>● 32 GB - 2 x 16 GB</li> </ul> |
| Type                              | DDR4 SDRAM Non-ECC memory   |
| Speed                             | 2666 MHz  |

## Ports and connectors

**Table 7. Ports and connectors**

| Features           | Specifications  |
|--------------------|---|
| Memory card reader | SD 4.0 memory card reader   |
| Smart card reader  | Yes (Optional)  |
| USB                | Three USB 3.1 Gen 1 (one with PowerShare)   |
| Security           | Noble wedge lock slot   |
| Docking port       | DisplayPort over USB Type C (optional Thunderbolt 3)  |
| Audio              | <ul style="list-style-type: none"> <li>● Universal audio jack</li> <li>● Noise reduction array microphones</li> </ul> |
| Video              | <ul style="list-style-type: none"> <li>● HDMI 1.4 (UMA)</li> <li>● One VGA</li> <li>● HDMI 2.0 (Discrete)</li> </ul>  |
| Network adapter    | One RJ-45 connector   |
| Serial port        | NA  |
| Parallel port      | NA  |
| SIM card reader    | One uSIM card slot (optional)   |

# Communications

**Table 8. Communications**

| Features        | Specifications  |
|-----------------|---|
| Network adapter | Intel i219LM Gigabit (10/100/1000 Mbps) Ethernet Controller (RJ-45 ) with Intel Remote Wake UP, PXE and Manageability capabilities alerting (AMT 11 / DASH 1.1 )  |
| Wireless        | <ul style="list-style-type: none"> <li>• Qualcomm QCA61x4A 802.11ac Dual Band (2x2) Wireless Adapter+ Bluetooth 4.1</li> <li>• Qualcomm QCA61x4A Extended Range 802.11ac MU-MIMO Dual Band (2x2) Wi-Fi + Bluetooth 4.1 LE</li> <li>• Intel Dual-Band Wireless-AC 8265 Wi-Fi + BT 4.2 Wireless Card (2x2) ( Bluetooth Optional)</li> </ul> |

# Audio

**Table 9. Audio specifications**

| Features                   | Specifications  |
|----------------------------|---|
| Controller                 | Realtek ALC3246-CG Controller with Waves MaxxAudio Pro  |
| Type                       | Multi-channel high-definition audio   |
| Stereo conversion          | Digital audio-out through HDMI — up to 7.1 compressed and uncompressed audio  |
| Speakers                   | Two (Bi-Directional speakers)   |
| Internal interface         | High-definition audio codec   |
| Interface                  | <ul style="list-style-type: none"> <li>• Universal audio jack</li> <li>• High quality speakers</li> <li>• Noise reducing array microphones</li> <li>• Stereo headset/mic combo</li> </ul> |
| Internal speaker amplifier | 2 W(RMS) per channel  |
| Volume controls            | Hot keys  |

# Video

**Table 10. Video**

| Controller             | Type | CPU Dependency  | Graphics memory type | Capacity                         | External display support                               | Maximum resolution   |
|------------------------|------|---|----------------------|----------------------------------|--|--|
| Intel UHD Graphics 630 | UMA  | <ul style="list-style-type: none"> <li>• Intel Core i5-8300H</li> <li>• Intel Core i5-8400H</li> <li>• Intel Core i7-8850H</li> </ul> | Integrated           | Shared system memory(Upto 32 GB) | VGA<br>HDMI 1.4(UMA)<br>HDMI 2.0(DSC)<br>eDP(Internal) | HDMI 1.4 (UMA):<br>4096x2160 @ 30 Hz<br><br>HDMI 2.0 (DSC):<br>4096x2160 @ 60 Hz |

**Table 10. Video (continued)**

| Controller            | Type     | CPU Dependency | Graphics memory type | Capacity | External display support              | Maximum resolution   |
|-----------------------|----------|----------------|----------------------|----------|---------------------------------------|--|
|                       |          |                |                      |          | Via Optional Type-C Port: DisplayPort | Analog: (VGA) system 1920x1200 @ 60Hz<br>Max Digital: (DP 1.2 over Type-C Port) 4096x2304 @ 60Hz   |
| NVIDIA GeForce® MX130 | Discrete | NA             | GDDR5                | 2 GB     | DisplayPort<br>HDMI 2.0               | HDMI 1.4 (UMA): 4096x2160 @ 30 Hz<br>HDMI 2.0 (DSC): 4096x2160 @ 60 Hz<br>Analog: (VGA) system 1920x1200 @ 60Hz<br>Max Digital: (DP 1.2 over Type-C Port) 4096x2304 @ 60Hz |

## Storage

**Table 11. Storage specifications**

| Primary/Boot drive  | Primary interface             | Secondary drive  | Secondary interface           | Security option |
|---|-------------------------------|--|-------------------------------|-----------------|
| SSD M.2 2280 SATA: up to 512 GB, OPAL SED options         | SATA AHCI, Up to 6 Gbps       | M.2 2230 (WWAN slot)   | PCIe 3 x2 NVME, Up to 16 Gbps | YES             |
| SSD M.2 2280 PCIe/NVMe: up to 1TB, OPAL SED options       | PCIe 3 x4 NVME, Up to 32 Gbps | <b>i</b> <b>NOTE:</b> The second SSD (dual SSD) is only supported when it is purchased as part of the original purchase at time of sale. | PCIe 3 x2 NVME, Up to 16 Gbps | YES             |
| One 2.5 " hard drive: up to 1TB, Hybrid OPAL SED options  | SATA AHCI, Up to 6 Gbps       | <b>i</b> <b>NOTE:</b> Adding second SSD (dual SSD) is not available after initial purchase.  | PCIe 3 x2 NVME, Up to 16 Gbps | YES             |
|   |                               | <b>i</b> <b>NOTE:</b> 2230 to 2242 adapter board is required to install 2230 WWAN port to SSD.   |                               |                 |
| SSD M.2 2230 PCIe/NVMe : up to 256 GB (in WWAN slot only) | PCIe 3 x2 NVME, Up to 16 Gbps | M.2 2280 SATA  | SATA AHCI, Up to 6 Gbps       | NO              |
| SSD M.2 2230 PCIe/NVMe : up to 256 GB (in WWAN slot only) | PCIe 3 x2 NVME, Up to 16 Gbps | 2.5" hard drive  | SATA AHCI, Up to 6 Gbps       | NO              |

## Media card-reader

**Table 12. Media-card reader specifications**

| Features        | Specifications   |
|-----------------|--|
| Type            | One SD 4.0 card slot   |
| Supported cards | <ul style="list-style-type: none"> <li>• SD 4.0</li> <li>• Memory Stick, Pro, HG, Duo and XC</li> <li>• SDHC</li> <li>• Secure Digitale Xtended Capacity(SDXC) and Multi-Media Card</li> <li>• SD UHS-I (Ultra High Speed-I) and SD UHS-II (Ultra High Speed-II) FD/HD mode</li> </ul> |

## Display

**Table 13. Display specifications**

| Features                       | Specifications  |
|--------------------------------|---|
| Type                           | <ul style="list-style-type: none"> <li>• 15.6 inch HD (1366 x 768) Anti-glare (16:9) WLED, 220 nits, non-touch</li> <li>• 15.6 inch FHD WVA (1920 x 1080) Anti-glare (16:9) WLED, 220 nits, non-touch</li> <li>• 15.6 inch FHD WVA (1920 x 1080) Embedded Touch Display with Truelife, 220 nits,</li> </ul> |
| Height (Active area)           | 7.62 inch (193.5 mm)  |
| Width (Active area)            | 13.55 inch (344.2 mm)   |
| Diagonal                       | 15.6 inch(396.25 mm)  |
| Touch panel specification      | 10 finger touch support is supported on the embedded 15.6" touch panel.   |
| Luminance/Brightness (typical) | 220/300 nits  |
| Refresh rate                   | 60 Hz   |
| Horizontal viewing angle (min) | +/- 40 degrees(HD)<br>+85/-85 degrees(FHD)  |
| Vertical viewing angle (min)   | +10/- 30 degrees(HD)<br>+85/-85 degrees(FHD)  |

## Keyboard

**Table 14. Keyboard specifications**

| Features       | Specifications  |
|----------------|---|
| Number of keys | <ul style="list-style-type: none"> <li>• 103 (U.S. and Canada)</li> </ul> |



**Table 14. Keyboard specifications (continued)**

| Features         | Specifications  |
|------------------|---|
|                  | <ul style="list-style-type: none"> <li>• 104 (Europe)</li> <li>• 106 (Brazil)</li> <li>• 107 (Japan)</li> </ul>       |
| Size             | Full sized <ul style="list-style-type: none"> <li>• X= 19.05 mm key pitch</li> <li>• Y= 19.05 mm key pitch</li> </ul> |
| Backlit keyboard | Yes(Optional)   |
| Layout           | QWERTY/AZERTY/Kanji   |

## Camera

**Table 15. Camera specifications**

| Features               | Specifications  |
|------------------------|---|
| Resolution             | Camera: <ul style="list-style-type: none"> <li>• Still image: 0.92 megapixels</li> <li>• Video: 1280x720 at 30 fps</li> </ul> Infrared camera (optional): <ul style="list-style-type: none"> <li>• Still image: 0.92 megapixels</li> <li>• Video: 1280x720 at 30 fps</li> </ul> |
| Diagonal viewing angle | <ul style="list-style-type: none"> <li>• Camera : 74 degrees</li> <li>• Infrared camera : 74 degrees</li> </ul>   |

## Touchpad

**Table 16. Touchpad specifications**

| Features    | Specifications  |
|-------------|---|
| Resolution  | <ul style="list-style-type: none"> <li>• Horizontal: 1221</li> <li>• Vertical: 661</li> </ul>                         |
| Dimensions  | <ul style="list-style-type: none"> <li>• Width: 4.0 inch (101.7 mm )</li> <li>• Height: 2.17 inch (55.2mm)</li> </ul> |
| Multi-touch | Supports up to 5 fingers. Gesture support is dependent on operating system.   |

# Battery

**Table 17. Battery Specifications**

| Features   | Specifications   |
|--|--|
| Type   | <ul style="list-style-type: none"> <li>● 51 WHr,3 Cell, Li-ion/Polymer, ExpressCharge Capable Battery</li> <li>● 68 WHr,4 Cell, Li-ion/Polymer, ExpressCharge Capable Battery</li> <li>● 68 WHr,4 Cell, Li-polymer, Long Cycle Life Battery</li> <li>● 92 WHr,6 Cell, Li-polymer, ExpressCharge Capable,Battery</li> </ul>   |
| Dimension  | <ol style="list-style-type: none"> <li>1. 51 WHr,3 Cell,Li-ion/Polymer Battery               <ul style="list-style-type: none"> <li>● Length: 181mm (7.126 inch)</li> <li>● Width: 95.9mm ( 3.78 inch)</li> <li>● Height: 7.05mm (0.28 inch)</li> <li>● Weight: 250.00 g</li> </ul> </li> <li>2. 68 WHr,4 Cell,Li-ion/Polymer               <ul style="list-style-type: none"> <li>● Length: 233mm (9.17 inch)</li> <li>● Width: 95.9mm ( 3.78 inch)</li> <li>● Height: 7.05mm (0.28 inch)</li> <li>● Weight: 340.00 g</li> </ul> </li> <li>3. 68 WHr,4 cell, Li-polymer Battery               <ul style="list-style-type: none"> <li>● Length: 233mm (9.17 inch)</li> <li>● Width: 95.9mm ( 3.78 inch)</li> <li>● Height: 7.05mm (0.28 inch)</li> <li>● Weight: 340.00 g</li> </ul> </li> <li>4. 92 WHr,6 cell,Li-polymer               <ul style="list-style-type: none"> <li>● Length: 332mm (13.07 inch)</li> <li>● Width: 96mm (3.78 inch)</li> <li>● Height: 7.7mm (0.303 inch)</li> <li>● Weight: 450.00 g</li> </ul> </li> </ol> |
| Weight (maximum)                                     | 0.045 kg (0.99 lb )  |
| Voltage  | <ul style="list-style-type: none"> <li>● 51 WHr - 11.4 VDC</li> <li>● 68 WHr - 7.6 VDC</li> <li>● 68 WHr - 7.6 VDC</li> <li>● 92 WHr - 11.4 VDC</li> </ul>   |
| Life span  | 300 discharge/recharge cycles(Standard) and 1000discharge/recharge cycles(Long cycle)  |
| Charging time when the computer is off (approximate) | 2-4 hours  |
| Operating time                                       | Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions   |
| Temperature range: Operating                         | <ul style="list-style-type: none"> <li>● Charge: 0 °C to 50 °C (32 °F to 122 °F)</li> <li>● Discharge: 0 °C to 70 °C (32 °F to 158 °F)</li> </ul>  |
| Temperature range: Storage                           | -20 °C to 65 °C (-4 °F to 149 °F)  |
| Coin-cell battery                                    | CR2032   |

## Input device


- Single Point non-backlit Keyboard
- Dual Pointing backlit Keyboard
- Dell Touchpad

## Power adapter

**Table 18. Power adapter specifications**

| Features                          | Specifications  |
|-----------------------------------|---|
| Type                              | <ul style="list-style-type: none"> <li>• 90 W adapter</li> <li>• 130 W adapter</li> </ul>                             |
| Input Voltage                     | 100 VAC–240 VAC   |
| Input current (maximum)           | <ul style="list-style-type: none"> <li>• 90 W - 1.5 A</li> <li>• 130 W - 1.8 A</li> </ul>                             |
| Adapter size                      | 7.4 mm Barrel Type  |
| Input frequency                   | 50 Hz–60 Hz   |
| Output current                    | <ul style="list-style-type: none"> <li>• 90 W - 4.62 A (continuous)</li> <li>• 130 W - 6.67 A (continuous)</li> </ul> |
| Rated output voltage              | 19.5 VDC  |
| Temperature range (Operating)     | -40° to 70° C (-40° to 158° F)  |
| Temperature range (Non-operating) | -40° to 70° C (-40° to 158° F)  |

## Environmental

 **NOTE:** For more details on Dell environmental features, please go to the environmental attributes section. See your specific region for availability.

**Table 19. Environmental**

| Features                       | Specifications   |
|--------------------------------|--|
| Energy efficient power supply  | Internal   |
| 80 plus bronze certification   | 155W EPA bronze  |
| 80 plus platinum certification | 240W EPA platinum  |
| Customer replaceable unit      | No   |
| Recyclable packaging           | Optional, US only  |
| MultiPack packaging            | No   |
| Temperature Range              | Operating: 0° C to 35° C (32° F to 95° F)<br>Storage: -40° C to 65° C (-40° F to 149° F) |

**Table 19. Environmental (continued)**

| <b>Features</b>    | <b>Specifications</b>  |
|--------------------|--|
| Relative humidity  | Operating: 10% to 90% (non-condensing)<br>Storage: 0% to 95% (non-condensing)  |
| Altitude (maximum) | Operating: 3048m (10.000 ft)<br>Storage: 10668m (35.000 ft)  |
| Shock              | Operating: 160 G with pulse duration of 2 ms (equivalent to 80 in/sec)<br>Storage: 160 G with pulse duration of 2 ms (equivalent to 80 in/sec) |
| Vibration          | Operating: 0.66 Grms<br>Storage: 1.33 Grms   |

# System setup options

**NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not appear.

## Topics:

- [Boot Sequence](#)
- [Navigation keys](#)
- [System Setup overview](#)
- [Accessing System Setup](#)
- [General screen options](#)
- [System Configuration screen options](#)
- [Video screen options](#)
- [Security screen options](#)
- [Secure Boot screen options](#)
- [Intel Software Guard Extensions](#)
- [Performance screen options](#)
- [Power Management screen options](#)
- [POST Behavior screen options](#)
- [Virtualization support screen options](#)
- [Wireless screen options](#)
- [Maintenance screen options](#)
- [System Log screen options](#)
- [Updating the BIOS in Windows](#)
- [System and setup password](#)

## Boot Sequence

Boot sequence enables you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self-Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive
  - NOTE:** XXXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics
  - NOTE:** Choosing **Diagnostics**, displays the **SupportAssist** screen.

The boot sequence screen also displays the option to access the System Setup screen.

## Navigation keys

**NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.


| Keys              | Navigation  |
|-------------------|---|
| <b>Up arrow</b>   | Moves to the previous field.  |
| <b>Down arrow</b> | Moves to the next field.  |
| <b>Enter</b>      | Selects a value in the selected field (if applicable) or follow the link in the field.  |
| <b>Spacebar</b>   | Expands or collapses a drop-down list, if applicable.   |
| <b>Tab</b>        | Moves to the next focus area.   |
| <b>Esc</b>        | Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system. |

## System Setup overview

System Setup allows you to:

- Change the system configuration information after you add, change, or remove any hardware in your computer.
- Set or change a user-selectable option such as the user password.
- Read the current amount of memory or set the type of hard drive installed.

Before you use System Setup, it is recommended that you write down the System Setup screen information for future reference.


 **CAUTION:** Unless you are an expert computer user, do not change the settings for this program. Certain changes can cause your computer to work incorrectly.

## Accessing System Setup

1. Turn on (or restart) your computer.
2. After the white Dell logo appears, press F2 immediately.

The System Setup page is displayed.

 **NOTE:** If you wait too long and the operating system logo appears, wait until you see the desktop. Then, shut down or restart your computer and try again.

 **NOTE:** After the Dell logo appears, you can also press F12 and then select **BIOS setup**.

## General screen options


This section lists the primary hardware features of your computer.

| Option                     | Description   |
|----------------------------|---|
| <b>System Information</b>  | <p>This section lists the primary hardware features of your computer.</p> <ul style="list-style-type: none"> <li>• System Information: Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and the Express Service Code.</li> <li>• Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channels Mode, Memory Technology, DIMM A Size, DIMM B Size,</li> <li>• Processor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology.</li> <li>• Device Information: Displays Primary Hard Drive, M.2 SATA2, M.2 SATA, M.2 PCIe SSD-0, LOM MAC Address, Video Controller, Video BIOS Version, Video Memory, Panel Type, Native Resolution, Audio Controller, Wi-Fi Device, WiGig Device, Cellular Device, Bluetooth Device.</li> </ul> |
| <b>Battery Information</b> | Displays the battery status and the type of AC adapter connected to the computer.   |
| <b>Boot Sequence</b>       | Allows you to change the order in which the computer attempts to find an operating system.  |

| Option                          | Description  |
|---------------------------------|--|
|                                 | <ul style="list-style-type: none"> <li>• Diskette Drive</li> <li>• Internal HDD</li> <li>• USB Storage Device</li> <li>• CD/DVD/CD-RW Drive</li> <li>• Onboard NIC</li> </ul>  |
| <b>Advanced Boot Options</b>    | This option allows you the legacy option ROMs to load. By default, the <b>Enable Legacy Option ROMs</b> is disabled.   |
| <b>UEFI Booth Path Security</b> | This options controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu. <ul style="list-style-type: none"> <li>• Always, Except Internal HDD</li> <li>• Always</li> <li>• Never (by default enabled)</li> </ul> |
| <b>Date/Time</b>                | Allows you to change the date and time.  |

## System Configuration screen options

| Option                   | Description  |
|--------------------------|--|
| <b>Integrated NIC</b>    | Allows you to configure the integrated network controller. The options are: <ul style="list-style-type: none"> <li>• Disabled</li> <li>• Enabled</li> <li>• Enabled w/PXE: This option is enabled by default.</li> </ul>   |
| <b>Parallel Port</b>     | Allows you to configure the parallel port on the docking station. The options are: <ul style="list-style-type: none"> <li>• Disabled</li> <li>• AT: This option is enabled by default.</li> <li>• PS2</li> <li>• ECP</li> </ul>  |
| <b>Serial Port</b>       | Allows you to configure the integrated serial port. The options are: <ul style="list-style-type: none"> <li>• Disabled</li> <li>• COM1: This option is enabled by default.</li> <li>• COM2</li> <li>• COM3</li> <li>• COM4</li> </ul>  |
| <b>SATA Operation</b>    | Allows you to configure the internal SATA hard-drive controller. The options are: <ul style="list-style-type: none"> <li>• Disabled</li> <li>• AHCI</li> <li>• RAID On: This option is enabled by default.</li> </ul>  |
| <b>Drives</b>            | Allows you to configure the SATA drives on board. All drives are enabled by default. The options are: <ul style="list-style-type: none"> <li>• SATA-0</li> <li>• SATA-2</li> <li>• SATA-4</li> <li>• M.2 PCI-e SSD-0</li> </ul>  |
| <b>SMART Reporting</b>   | This field controls whether hard drive errors for integrated drives are reported during system startup. This technology is part of the SMART (Self Monitoring Analysis and Reporting Technology) specification. This option is disabled by default. <ul style="list-style-type: none"> <li>• Enable SMART Reporting</li> </ul> |
| <b>USB Configuration</b> | This is an optional feature.<br>This field configures the integrated USB controller. If Boot Support is enabled, the system is allowed to boot any type of USB Mass Storage Devices (HDD, memory key, floppy).<br>If USB port is enabled, device attached to this port is enabled and available for OS.                        |


| Option                                       | Description   |
|--|---|
|  | <p>If USB port is disabled, the OS cannot see any device attached to this port.</p> <p>The options are:</p> <ul style="list-style-type: none"> <li>● Enable USB Boot Support (by default enable)</li> <li>● Enable External USB Port (by default enable)</li> <li>● Enable Thunderbolt Ports (by default enable)</li> <li>● Enable Thunderbolt Boot Support</li> <li>● Always Allow Dell Docks (by default enable)</li> <li>● Enable Thunderbolt (ans PCIe behind TBT) Pre-boot</li> <li>● Security level — No Securty</li> <li>● Security level — User Configuration(by default enable)</li> <li>● Security level — Secure connect</li> <li>● Security level — Display Port Only</li> </ul> <p> <b>NOTE:</b> USB keyboard and mouse always work in the BIOS setup irrespective of these settings.</p> |
| <b>USB PowerShare</b>                        | <p>This field configures the USB PowerShare feature behavior. This option allows you to charge external devices using the stored system battery power through the USB PowerShare port.</p>  |
| <b>Audio</b>                                 | <p>This field enables or disables the integrated audio controller. By default, the <b>Enable Audio</b> option is selected. The options are:</p> <ul style="list-style-type: none"> <li>● Enable Microphone (by default enable)</li> <li>● Enable Internal Speaker (by default enable)</li> </ul>  |
| <b>Keyboard Illumination</b>                 | <p>This field lets you choose the operating mode of the keyboard illumination feature. The keyboard brightness level can be set from 0% to 100%. The options are:</p> <ul style="list-style-type: none"> <li>● Disabled</li> <li>● Dim</li> <li>● Bright (enabled by default)</li> </ul>  |
| <b>Keyboard Backlight Timeout on AC</b>      | <p>The Keyboard Backlight Timeout dims out with AC option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled.</p> <ul style="list-style-type: none"> <li>● 5 seconds</li> <li>● 10 seconds (enabled by default)</li> <li>● 15 seconds</li> <li>● 30 seconds</li> <li>● 1 minute</li> <li>● 5 minutes</li> <li>● 15 minutes</li> <li>● Never</li> </ul>   |
| <b>Keyboard Backlight Timeout on Battery</b> | <p>The Keyboard Backlight Timeout dims out with Battery option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled.</p> <ul style="list-style-type: none"> <li>● 5 seconds</li> <li>● 10 seconds (enabled by default)</li> <li>● 15 seconds</li> <li>● 30 seconds</li> <li>● 1 minute</li> <li>● 5 minutes</li> <li>● 15 minutes</li> <li>● Never</li> </ul>  |
| <b>Keyboard Backlight with AC</b>            | <p>The Keyboard Backlight with AC option does not affect the main keyboard illumination feature. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled.</p>  |
| <b>Touchscreen</b>                           | <p>This fields controls whether the touchscreen is enabled or disabled.</p> <ul style="list-style-type: none"> <li>● Touchscreen (enabled by default)</li> </ul>  |








| Option                       | Description   |
|------------------------------|---|
| <b>Unobtrusive Mode</b>      | This option, when enabled, pressing Fn+F7 turns off all light and sound emissions in the system. To resume normal operation, press Fn+F7 again. This option is disabled by default.   |
| <b>Miscellaneous Devices</b> | Allows you to enable or disable the following devices: <ul style="list-style-type: none"> <li>• Enable Camera —enabled by default</li> <li>• Enable Hard Drive Free Fall Protection (enabled by default)</li> <li>• Enable Secure Digital (SD) Card (enabled by default)</li> <li>• Secure Digital (SD) Card Boot</li> <li>• Secure Digital (SD) Card Read — only Mode</li> </ul> |



## Video screen options

| Option                | Description   |
|-----------------------|---|
| <b>LCD Brightness</b> | Allows you to set the display brightness depending up on the power source (On Battery and On AC). |

 **NOTE:** The video setting will be visible only when a video card is installed into the system.


## Security screen options

| Option                        | Description  |
|-------------------------------|--|
| <b>Admin Password</b>         | Allows you to set, change, or delete the administrator (admin) password. <p> <b>NOTE:</b> You must set the admin password before you set the system or hard drive password. Deleting the admin password automatically deletes the system password and the hard drive password.</p> <p> <b>NOTE:</b> Successful password changes take effect immediately.</p> <p>Default setting: Not set</p> |
| <b>System Password</b>        | Allows you to set, change or delete the system password. <p> <b>NOTE:</b> Successful password changes take effect immediately.</p> <p>Default setting: Not set</p>  |
| <b>M.2 SATA SSD Password</b>  | Allows you to set, change, or delete the M.2 SATA SSD password. <p> <b>NOTE:</b> Successful password changes take effect immediately.</p> <p>Default setting: Not set</p>   |
| <b>Strong Password</b>        | Allows you to enforce the option to always set strong passwords. <p>Default Setting: Enable Strong Password is not selected.</p> <p> <b>NOTE:</b> If Strong Password is enabled, Admin and System passwords must contain at least one uppercase character, one lowercase character and be at least 8 characters long.</p>   |
| <b>Password Configuration</b> | Allows you to determine the minimum and maximum length of Administrator and System passwords.  |
| <b>Password Bypass</b>        | Allows you to enable or disable the permission to bypass the System and the Internal HDD password, when they are set. The options are: <ul style="list-style-type: none"> <li>• Disabled</li> <li>• Reboot bypass</li> </ul> <p>Default setting: Disabled</p>  |
| <b>Password Change</b>        | Allows you to enable the disable permission to the System and Hard Drive passwords when the admin password is set.   |

| <b>Option</b>                        | <b>Description</b>  |
|--------------------------------------|---|
|                                      | Default setting: <b>Allow Non-Admin Password Changes</b> is selected.   |
| <b>Non-Admin Setup Changes</b>       | Allows you to determine whether changes to the setup options are allowed when an Administrator Password is set. If disabled the setup options are locked by the admin password.   |
| <b>UEFI Capsule Firmware Updates</b> | Allows you to control whether this system allows BIOS updates via UEFI capsule update packages. <ul style="list-style-type: none"> <li>● Enable UEFI Capsule Firmware Updates (enabled by default)</li> </ul>   |
| <b>TPM 2.0 Security</b>              | Allows you to enable the Trusted Platform Module (TPM) during POST. The options are: <ul style="list-style-type: none"> <li>● TPM On (enabled by default)</li> <li>● Clear</li> <li>● PPI Bypass for Enabled Commands(enabled by default)</li> <li>● Attestation Enable (enabled by default)</li> <li>● Key Storage Enable (enabled by default)</li> <li>● PPI Bypass for Disabled Commands</li> <li>● SHA-256 (enabled by default)</li> <li>● Disabled</li> <li>● Enabled</li> </ul> <p> <b>NOTE:</b> To upgrade or downgrade TPM1.2/2.0, download the TPM wrapper tool (software).</p> |
| <b>Computrace</b>                    | Allows you to activate or disable the optional Computrace software The options are: <ul style="list-style-type: none"> <li>● Deactivate</li> <li>● Disable</li> <li>● Activate</li> </ul> <p> <b>NOTE:</b> The Activate and Disable options will permanently activate or disable the feature and no further changes will be allowed</p> <p>Default setting: Deactivate</p>  |
| <b>CPU XD Support</b>                | Allows you to enable the Execute Disable mode of the processor.<br>Enable CPU XD Support (default)  |
| <b>OROM Keyboard Access</b>          | Allows you to set an option to enter the Option ROM Configuration screens using hotkeys during boot. The options are: <ul style="list-style-type: none"> <li>● Enable</li> <li>● One Time Enable</li> <li>● Disable</li> </ul> <p>Default setting: Enable</p>   |
| <b>Admin Setup Lockout</b>           | Allows you to prevent users from entering Setup when an Administrator password is set.<br>Default Setting: <b>Disabled</b>  |
| <b>Master Password Lockout</b>       | Allows you to disable master password support. Hard disk password need to be cleared before the setting can be changed <ul style="list-style-type: none"> <li>● Enable Master Password Lockout (Disabled)</li> </ul>  |

## Secure Boot screen options

| <b>Option</b>             | <b>Description</b>   |
|---------------------------|--|
| <b>Secure Boot Enable</b> | This option enables or disables the <b>Secure Boot</b> feature. <ul style="list-style-type: none"> <li>● Disabled</li> <li>● Enabled</li> </ul> <p>Default setting: Enabled.</p> |

| Option                       | Description  |
|------------------------------|--|
| <b>Secure Boot Mode</b>      | <p>Allows you to change to Secure Boot operation mode, modifies the behavior of the Secure Boot to allow evaluation or enforcement of UEFI driver signatures. The options are:</p> <ul style="list-style-type: none"> <li>● <b>Deployed Mode</b>—Before allowing execution, checks the integrity of UEFI drivers and bootloaders.</li> <li>● <b>Audit Mode</b>—Performs a signature check but does not block execution of all UEFI drivers and bootloaders.</li> </ul> <p>Default setting: Deployed Mode</p>   |
| <b>Expert Key Management</b> | <p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The <b>Enable Custom Mode</b> option is disabled by default. The options are:</p> <ul style="list-style-type: none"> <li>● PK</li> <li>● KEK</li> <li>● db</li> <li>● dbx</li> </ul> <p>If you enable the <b>Custom Mode</b>, the relevant options for <b>PK, KEK, db, and dbx</b> appear. The options are:</p> <ul style="list-style-type: none"> <li>● <b>Save to File</b>—Saves the key to a user-selected file</li> <li>● <b>Replace from File</b>—Replaces the current key with a key from a user-selected file</li> <li>● <b>Append from File</b>—Adds a key to the current database from a user-selected file</li> <li>● <b>Delete</b>—Deletes the selected key</li> <li>● <b>Reset All Keys</b>—Resets to default setting</li> <li>● <b>Delete All Keys</b>—Deletes all the keys</li> </ul> <p> <b>NOTE:</b> If you disable the <b>Custom Mode</b>, all the changes that are made are erased and the keys restore to default settings.</p> |

## Intel Software Guard Extensions


| Option                     | Description  |
|----------------------------|--|
| <b>Intel SGX Enable</b>    | <p>This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS. The options are:</p> <ul style="list-style-type: none"> <li>● Disabled</li> <li>● Enabled</li> <li>● Software Controlled: This option is enabled by default.</li> </ul> |
| <b>Enclave Memory Size</b> | <p>This option sets SGX Enclave Reserve Memory Size. The options are:</p> <ul style="list-style-type: none"> <li>● 32 MB</li> <li>● 64 MB</li> <li>● 128 MB</li> </ul>   |


## Performance screen options

| Option                    | Description  |
|---------------------------|--|
| <b>Multi Core Support</b> | <p>This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores.</p> <ul style="list-style-type: none"> <li>● All (By default enabled)</li> <li>● 1</li> <li>● 2</li> <li>● 3</li> </ul> |
| <b>Intel SpeedStep</b>    | <p>Allows you to enable or disable the Intel SpeedStep feature.</p> <ul style="list-style-type: none"> <li>● Enable Intel SpeedStep</li> </ul> <p>Default setting: The option is enabled.</p>  |
| <b>C-States Control</b>   | <p>Allows you to enable or disable the additional processor sleep states.</p>  |


| Option                  | Description   |
|-------------------------|---|
|                         | <ul style="list-style-type: none"> <li>• C states</li> </ul> <p>Default setting: The option is enabled.</p>   |
| <b>Intel TurboBoost</b> | <p>Allows you to enable or disable the Intel TurboBoost mode of the processor.</p> <ul style="list-style-type: none"> <li>• Enable Intel TurboBoost</li> </ul> <p>Default setting: The option is enabled.</p> |


## Power Management screen options

| Option                                       | Description   |
|--|---|
| <b>AC Behavior</b>                           | <p>Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected.</p> <p>Default setting: Wake on AC is not selected.</p>  |
| <b>Auto On Time</b>                          | <p>Allows you to set the time at which the computer must turn on automatically. The options are:</p> <ul style="list-style-type: none"> <li>• Disabled</li> <li>• Every Day</li> <li>• Weekdays</li> <li>• Select Days</li> </ul> <p>Default setting: Disabled</p>  |
| <b>USB Wake Support</b>                      | <p>Allows you to enable USB devices to wake the system from Standby.</p> <p> <b>NOTE:</b> This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power.</p> <ul style="list-style-type: none"> <li>• Enable USB Wake Support</li> <li>• Wake on Dell USB-C Dock (By default enable)</li> </ul> |
| <b>Wireless Radio Control</b>                | <p>Allows you to enable or disable the feature that automatically switches from wired or wireless networks without depending on the physical connection.</p> <ul style="list-style-type: none"> <li>• Control WLAN Radio</li> <li>• Control WWAN Radio</li> </ul> <p>Default setting: The option is disabled.</p>   |
| <b>Wake on LAN/WLAN</b>                      | <p>Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal.</p> <ul style="list-style-type: none"> <li>• Disabled</li> <li>• LAN Only</li> <li>• WLAN Only</li> <li>• LAN or WLAN</li> </ul> <p>Default setting: Disabled</p>   |
| <b>Block Sleep</b>                           | <p>This option lets you block entering to sleep (S3 state) in operating system environment.</p> <p>Block Sleep (S3 state)</p> <p>Default setting: This option is disabled</p>   |
| <b>Peak Shift</b>                            | <p>This option enables you to minimize the AC power consumption during the peak power times of day. After you enable this option, your system runs only in battery even if the AC is attached.</p>  |
| <b>Advanced Battery Charge Configuration</b> | <p>This option enables you to maximize the battery health. By enabling this option, your system uses the standard charging algorithm and other techniques, during the non-work hours to improve the battery health.</p> <p>Disabled</p>   |

| Option                                      | Description  |
|---|--|
|   | Default setting: Disabled  |
| <b>Primary Battery Charge Configuration</b> | <p>Allows you to select the charging mode for the battery. The options are:</p> <ul style="list-style-type: none"> <li>• Adaptive</li> <li>• Standard — Fully charges your battery at a standard rate.</li> <li>• ExpressCharge — The battery charges over a shorter period of time using Dell's fast charging technology. This option is enabled by default.</li> <li>• Primarily AC use</li> <li>• Custom</li> </ul> <p>If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.</p> <p> <b>NOTE:</b> All charging mode may not be available for all the batteries. To enable this option, disable the <b>Advanced Battery Charge Configuration</b> option.</p> |
| <b>Sleep Mode</b>                           | <p>This option is used to select which sleep mode will be used by operating system.</p> <ul style="list-style-type: none"> <li>• OS Automatic Selection</li> <li>• Force S3 (By default enable)</li> </ul>   |
| <b>Type-C Connector Power</b>               | <p>This option lets you set the maximum power that can be drawn from the USB Type-C connector.</p> <ul style="list-style-type: none"> <li>• 7.5 Watts (By default enable)</li> <li>• 15 Watts</li> </ul>   |

## POST Behavior screen options


| Option                   | Description   |
|--------------------------|---|
| <b>Adapter Warnings</b>  | <p>Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters.</p> <p>Default setting: Enable Adapter Warnings</p>  |
| <b>Keypad (Embedded)</b> | <p>Allows you to choose one of two methods to enable the keypad that is embedded in the internal keyboard.</p> <ul style="list-style-type: none"> <li>• Fn Key Only: This option is enabled by default.</li> <li>• By Numlock</li> </ul> <p> <b>NOTE:</b> When setup is running, this option has no effect. Setup works in Fn Key Only mode.</p>                 |
| <b>Mouse/Touchpad</b>    | <p>Allows you to define how the system handles mouse and touch pad input. The options are:</p> <ul style="list-style-type: none"> <li>• Serial Mouse</li> <li>• PS2 Mouse</li> <li>• Touchpad/PS-2 Mouse: This option is enabled by default.</li> </ul>   |
| <b>Numlock Enable</b>    | <p>Allows you to enable the Numlock option when the computer boots.</p> <p>Enable Network. This option is enabled by default.</p>   |
| <b>Fn Key Emulation</b>  | <p>Allows you to set the option where the Scroll Lock key is used to simulate the Fn key feature.</p> <p>Enable Fn Key Emulation (default)</p>  |
| <b>Fn Lock Options</b>   | <p>Allows you to let hot key combinations Fn + Esc toggle the primary behavior of F1–F12, between their standard and secondary functions. If you disable this option, you cannot toggle dynamically the primary behavior of these keys. The available options are:</p> <ul style="list-style-type: none"> <li>• Fn Lock. This option is selected by default.</li> <li>• Lock Mode Disable/Standard</li> <li>• Lock Mode Enable/Secondary</li> </ul> |
| <b>Fastboot</b>          | <p>Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are:</p> <ul style="list-style-type: none"> <li>• Minimal</li> <li>• Thorough (default)</li> <li>• Auto</li> </ul>   |

| Option                         | Description  |
|--------------------------------|--|
| <b>Extended BIOS POST Time</b> | Allows you to create an additional preboot delay. The options are: <ul style="list-style-type: none"> <li>• 0 seconds. This option is enabled by default.</li> <li>• 5 seconds</li> <li>• 10 seconds</li> </ul>  |
| <b>Full Screen Logo</b>        | This option will display full screen logo if your image match screen resolution <ul style="list-style-type: none"> <li>• Enable Full Screen Logo</li> </ul>  |
| <b>Warnings and Error</b>      | This option will cause the boot process to only pause when warnings or errors are detected. <ul style="list-style-type: none"> <li>• Prompt on Warnings and Errors This option is enabled by default.</li> <li>• Continue on Warnings</li> <li>• Continue on Warnings and Errors</li> </ul> <p> <b>NOTE:</b> Error deemed critical to the operation of the system hardware will always halt the system.</p> |

## Virtualization support screen options

| Option                   | Description  |
|--------------------------|--|
| <b>Virtualization</b>    | Allows you to enable or disable the Intel Virtualization Technology.<br>Enable Intel Virtualization Technology: This option is enabled by default.   |
| <b>VT for Direct I/O</b> | Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O.<br>Enable VT for Direct I/O: This option is enabled by default.   |
| <b>Trusted Execution</b> | This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology, and Virtualization technology for direct I/O must be enabled to use this feature.<br>Trusted Execution: This option is enabled by default. |

## Wireless screen options

| Option                        | Description   |
|-------------------------------|---|
| <b>Wireless Switch</b>        | Allows to set the wireless devices that can be controlled by the wireless switch. The options are: <ul style="list-style-type: none"> <li>• WWAN</li> <li>• GPS (on WWAN Module)</li> <li>• WLAN/WiGig</li> <li>• Bluetooth</li> </ul> <p>All the options are enabled by default.</p> <p> <b>NOTE:</b> For WLAN and WiGig enable or disable controls are tied together and they cannot be enabled or disabled independently.</p> |
| <b>Wireless Device Enable</b> | Allows you to enable or disable the internal wireless devices. <ul style="list-style-type: none"> <li>• WWAN/GPS</li> <li>• WLAN/WiGig</li> <li>• Bluetooth</li> </ul> <p>All the options are enabled by default.</p>   |

## Maintenance screen options


| Option                | Description   |
|-----------------------|---|
| <b>Service Tag</b>    | Displays the Service Tag of your computer.  |
| <b>Asset Tag</b>      | Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.  |
| <b>BIOS Downgrade</b> | This controls flashing of the system firmware to previous revisions. <ul style="list-style-type: none"><li>• Allows BIOS Downgrade (enabled by default)</li></ul>   |
| <b>Data Wipe</b>      | This field allows users to erase the data securely from all internal storage devices. The following is list of devices affected: <ul style="list-style-type: none"><li>• Internal SATA HDD/SSD</li><li>• Internal M.2 SATA SDD</li><li>• Internal M.2 PCIe SSD</li><li>• Internal eMMC</li></ul>                              |
| <b>BIOS Recovery</b>  | This field allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive or an external USB key. <ul style="list-style-type: none"><li>• BIOS Recovery from Hard Drive (enabled by default)</li><li>• BIOS Auto-Recovery</li><li>• Always perform Integrity Check</li></ul> |

## System Log screen options


| Option                | Description   |
|-----------------------|---|
| <b>BIOS Events</b>    | Allows you to view and clear the System Setup (BIOS) POST events. |
| <b>Thermal Events</b> | Allows you to view and clear the System Setup (Thermal) events.   |
| <b>Power Events</b>   | Allows you to view and clear the System Setup (Power) events.     |

## Updating the BIOS in Windows

It is recommended to update your BIOS (System Setup) when you replace the system board or if an update is available. For laptops, ensure that your computer battery is fully charged and connected to a power before initiating a BIOS update.

 **NOTE:** If BitLocker is enabled, it must be suspended prior to updating the system BIOS, and then re enabled after the BIOS update is completed.

1. Restart the computer.
2. Go to **Dell.com/support**.
  - Enter the **Service Tag** or **Express Service Code** and click **Submit**.
  - Click **Detect Product** and follow the instructions on screen.
3. If you are unable to detect or find the Service Tag, click **Choose from all products**.
4. Choose the **Products** category from the list.

 **NOTE:** Choose the appropriate category to reach the product page.

5. Select your computer model and the **Product Support** page of your computer appears.
6. Click **Get drivers** and click **Drivers and Downloads**.  
The Drivers and Downloads section opens.
7. Click **Find it myself**.
8. Click **BIOS** to view the BIOS versions.
9. Identify the latest BIOS file and click **Download**.
10. Select your preferred download method in the **Please select your download method below** window, click **Download File**.  
The **File Download** window appears.

11. Click **Save** to save the file on your computer.
12. Click **Run** to install the updated BIOS settings on your computer.  
Follow the instructions on the screen.


## System and setup password


Table 20. System and setup password

| Password type   | Description  |
|-----------------|--|
| System password | Password that you must enter to log on to your system.   |
| Setup password  | Password that you must enter to access and make changes to the BIOS settings of your computer. |

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

## Assigning a system setup password

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

To enter the system setup, press F2 immediately after a power-on or reboot.


1. In the **System BIOS** or **System Setup** screen, select **Security** and press **Enter**.  
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to assign the system password:
  - A password can have up to 32 characters.
  - The password can contain the numbers 0 through 9.
  - Only lower case letters are valid, upper case letters are not allowed.
  - Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (:), ([), (\), (]), (`).
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press **Esc** and a message prompts you to save the changes.
5. Press **Y** to save the changes.  
The computer reboots.

## Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press **F2** immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press **Enter**.  
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, alter or delete the existing system password and press **Enter** or **Tab**.
4. Select **Setup Password**, alter or delete the existing setup password and press **Enter** or **Tab**.

 **NOTE:** If you change the System and/or Setup password, re enter the new password when prompted. If you delete the System and Setup password, confirm the deletion when prompted.



5. Press **Esc** and a message prompts you to save the changes.
6. Press **Y** to save the changes and exit from System Setup.  
The computer restarts.

# Software

## Topics:

- Supported operating systems
- Downloading drivers
- Downloading the chipset driver
- Intel chipset drivers
- Intel HD Graphics drivers

## Supported operating systems


The following list shows supported operating systems

**Table 21. Supported operating systems**

| Supported operating systems | Operating System Description   |
|-----------------------------|--|
| <b>Microsoft Windows</b>    | <ul style="list-style-type: none"> <li>• Microsoft Windows 10 Pro (64-bit)</li> <li>• Microsoft Windows 10 Home (64-bit)</li> </ul>            |
| <b>Other</b>                | <ul style="list-style-type: none"> <li>• Ubuntu</li> </ul>   |
| <b>OS Media Support</b>     | <ul style="list-style-type: none"> <li>• Dell.com/support to download eligible Windows OS</li> <li>• USB media available for upsell</li> </ul> |


## Downloading drivers

1. Turn on the laptop.
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your laptop, and then click **Submit**.
 

 **NOTE:** If you do not have the Service Tag, use the auto detect feature or manually browse for your laptop model.
4. Click **Drivers and Downloads**.
5. Select the operating system installed on your laptop.
6. Scroll down the page and select the driver to install.
7. Click **Download File** to download the driver for your laptop.
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the driver file icon and follow the instructions on the screen.

## Downloading the chipset driver

1. Turn on the laptop.
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your laptop, and then click **Submit**.
 

 **NOTE:** If you do not have the Service Tag, use the autodetect feature or manually browse for your laptop model.
4. Click **Drivers and Downloads**.

5. Select the operating system installed on your laptop.
6. Scroll down the page, expand **Chipset**, and select your chipset driver.
7. Click **Download File** to download the latest version of the chipset driver for your laptop.
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the chipset driver file icon and follow the instructions on the screen.

## Intel chipset drivers

Verify if the Intel chipset drivers are already installed in the laptop.

**Table 22. Intel chipset drivers**

| Before installation | After installation |
|---------------------|--------------------|
|                     |                    |

## Intel HD Graphics drivers

Verify if the Intel HD Graphics drivers are already installed in the laptop.

**Table 23. Intel HD Graphics drivers**


| Before installation | After installation |
|---------------------|--------------------|
|                     |                    |

# Getting help

## Topics:

- [Contacting Dell](#)

## Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.