

# **D-Link *Air* DWL-700AP**

## **2.4 GHz Wireless Access Point**

### **Manual**

**D-Link®**  
Building Networks for People

## **Contents**

1. Package Contents .....	2
2. Introduction.....	3
3. Wireless Basics .....	6
4. Getting Started .....	9
5. Using the Configuration Menu.....	11
6. Using the Air AP Manager .....	24
7. Troubleshooting.....	28
8. Networking Basics.....	33
9. Technical Specifications .....	62
10. Contacting Technical Support.....	64
11. Warranty and Registration .....	65

## 1. Package Contents



### Contents of Package:

- **D-Link Air DWL-700AP** Enhanced 2.4GHz Wireless Access Point
- Power Supply – 5V DC, 2.0A
- Manual on CD
- Quick Installation Guide
- Ethernet Cable

*Note: Using a power supply with a different voltage rating than the one included with the DWL-700AP will cause damage and void the warranty for this product.*

If any of the above items are missing, please contact your reseller.

### System Requirements:

- Computer with Windows, Macintosh, or Linux-based operating system with an installed Ethernet adapter
- Internet Explorer or Netscape Navigator version 4.0 or above, with JavaScript enabled

## 2. Introduction

The D-Link *Air* DWL-700 AP Wireless Access Point is a standard 802.11b high-performance wireless access point. It is an ideal way to extend the reach and number of computers connected to your wireless network.


Like most 802.11b access points, the DWL-700AP is capable of data transfer speeds of up to 11 Mbps when used with other D-Link *Air* products such as the DWL-610 Wireless CardBus Adapter.

After completing the steps outlined in the *Quick Installation Guide* (included in your package) you will have the ability to share information and resources, such as files and printers, and enjoy the freedom that wireless networking delivers.

The DWL-700AP is compatible with most popular operating systems, including Macintosh, Linux and Windows, and can be integrated into a large network. This Manual is designed to help you connect the Access Point and the D-Link *Air* 2.4GHz Wireless Adapters into a network in Infrastructure mode. *Please take a look at the **Getting Started** section in this manual to see an example of an Infrastructure network using the DWL-700AP.*

This manual provides a quick introduction to wireless technology and its application as it relates to networking. Please take a moment to read through this manual and get acquainted with wireless technology.

### Connections

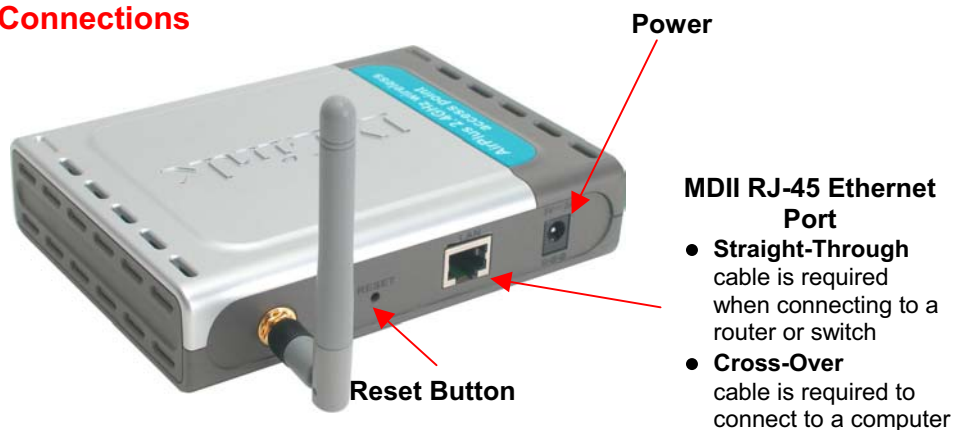

## **Features & Benefits**

- High-speed wireless data transfer rates up to 11Mbps.  
With the data rate and capacity, the DWL-700AP delivers media rich content such as digital images, videos, and MP3 files as the standard 802.11b networks
- Fully 802.11b Compatible – Fully compatible with the IEEE 802.11b standard and interoperable with all existing 802.11b compliant devices
- Improved Performance – Up to 20% faster data transfer rates on standard 802.11b networks
- Supports 64/128-bit WEP encryption for security for your data and wireless communication.
- Web-based interface for Managing and Configuring – Easy-to-use interface independent of the operating system
- 3 Different Operation Modes – Capable of operating in one of four different operation modes to meet your wireless networking requirements: Access Point, Wireless Client, and Wireless Repeater.

## LEDs

**LED** stands for **L**ight-**E**mitting **D**iode. The **DWL-700AP Wireless Access Point** has 3 LEDs as shown below:



**Power:** solid green light indicates connection

**LAN:** blinking green light indicates activity; solid green light indicates connection

**WLAN:** blinking green light indicates wireless activity; solid green light indicates connection

### 3. Wireless Basics

D-Link *Air* wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link *Air* wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Access Point (AP) is a device used to provide this link.

People use wireless LAN technology for many different purposes:

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** – WLANs (Wireless Local Area Networks) are easy to set up, manage, change and relocate. Networks that frequently change, both physically and logically, can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation Speed and Simplicity** - Installing a wireless LAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings.

## Wireless Basics

**Network Expansion** - Wireless technology allows the network to go where wires cannot go.

**Reduced Cost-of-Ownership** - While the initial investment required for wireless LAN hardware might be higher than the cost of wired LAN hardware, overall installation expenses and life-cycle costs will be significantly lower. Long-term cost benefits are greatest in dynamic environments requiring frequent moves, adds, and changes.

**Scalability** – Wireless Local Area Networks (WLANs) can be configured in a installations. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to full infrastructure networks of thousands of users that allow roaming over a broad area.

***D-Link Air** Wireless Family of LAN products include:*

- 2.4GHz Wireless Cardbus Adapters used with laptop computers (DWL-610)
- 2.4GHz Wireless PCI cards used with desktop computers (DWL-510)
- 2.4GHz Wireless Access Points (DWL-700AP)
- 2.4GHz Wireless Broadband Router (DI-514)

### **Standards - Based Technology**

The IEEE standard-based technology assures that the D-Link *Air* Products are interoperable with existing compatible 2.4GHz wireless technology. This means you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. The technology works by using multiple frequencies in the 2.4GHz range at speeds up to 11 Mbps.



### **Installation Considerations**

Designed to go up to 984 feet (300 meters) outdoors and up to 328 feet (100 meters) indoors, D-Link's *Air* DWL-700AP lets you access your network using a wireless connection from virtually anywhere. Keep in mind, however, that the number, thickness and location of walls, ceilings or other objects that the wireless signals must pass through may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the wireless Access Point and your receiving device (e.g., the DWL-610) to a minimum - Each wall or ceiling can reduce your D-Link *Air* Wireless product's range from 3-90 feet (1-30 meters.) Position your Access Points, Residential Gateways, and computers so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between Access Points, Residential Gateways (routers) and computers. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Try to make sure that the Access Points and adapters are positioned so that the signal will travel straight through a wall or ceiling for better reception.
3. Building Materials make a difference - A solid metal door or aluminum studs may have a negative effect on range. Try to position Access Points, and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
4. Make sure that the device's antenna is positioned for best reception by using the software signal strength tools included with your product.
5. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that may generate extreme RF noise.

For the average home, signal range should not be an issue. If you experience low or no signal strength in areas of your home that you wish to access, consider positioning the Access Point in a location directly between the computers with wireless adapters. Additional Access Points can be connected to provide better coverage in rooms where the signal does not appear as strong as desired.

## 4. Getting Started

**Right out of the box, with its default settings, the DWL-700AP will automatically connect with other D-Link *Air* or *AirPlus* products.**

For the price of a single IP Address from your Broadband Internet Service provider you can share the Internet with all the computers on your local network, without sacrificing speed or security, using D-Link *Air* networking products.

### IP ADDRESS

*Please note: If you have a DHCP-capable router, such as the D-Link DI-604 or DI-614+, there is no need to assign an IP Address.*

If you need to assign IP Addresses to the computers on the network, please remember that the **IP Address for each computer must be in the same IP Address range as all the computers in the network**, and the Subnet mask must be exactly the same for all the computers in the network.

For example: If the first computer is assigned an IP Address of 192.168.0.2 with a Subnet Mask of 255.255.255.0, then the second computer can be assigned an IP Address of 192.168.0.3 with a Subnet Mask of 255.255.255.0, etc.

**IMPORTANT: If computers or other devices are assigned the same IP Address, one or more of the devices may not be visible on the network.**

An **Infrastructure** network contains an Access Point. The **Infrastructure Network** example shown on the next page contains the following D-Link network devices:

A wireless Access Point - **D-Link *Air* DWL-700AP**

An Ethernet Broadband Router - **D-Link DI-604**

A laptop computer with a wireless adapter - **D-Link *Air* DWL-610**

A desktop computer with a wireless adapter - **D-Link *Air* DWL-510**

A Cable modem - **D-Link DCM-200**

***DHCP*** stands for *Dynamic Host Configuration Protocol*.  
*It is a protocol for assigning dynamic IP addresses "automatically."*  
*With a DHCP-capable gateway/router, there is no need to manually assign an IP address.*

## Getting Started

### Setting Up an Infrastructure Network

Please refer to the following sections of this manual for additional information about setting up a network:

**Networking Basics-** learn how to check your IP Address; share printers and files.

**Using the Configuration Utility-** learn the settings you must use on each computer in your network for successful communication.

**Troubleshooting-** learn how to check for the proper installation of the network adapters' drivers and other tips for troubleshooting the network.



Please remember that **D-Link Air** wireless devices are pre-configured to connect together, right out of the box, with the default settings.

- 1** You will need a broadband Internet access (Cable/DSL) subscription.
- 2** Consult with your Cable/DSL provider for proper installation of the modem.
- 3** Connect the modem to an Ethernet Broadband Router (such as the **D-Link DI-604**) See the **Quick Installation Guide** included with the DI-604.
- 4** Connect the router to the **D-Link Air DWL-700AP**. Refer to the **Quick Installation Guide** for setting up the DWL-700AP.
- 5** If you are connecting a desktop computer in your network, you can install the **D-Link Air DWL-510** wireless PCI adapter into an available PCI slot. See the **Quick Installation Guide** included with the DWL-510.
- 6** Install the drivers for the wireless cardbus adapter (**D-Link Air DWL-610**) into the laptop computer. See the **Quick Installation Guide** included with the DWL-610 for installation instructions.

## 5. Using the Configuration Menu

The **Configuration Menu** for the DWL-700AP is web-based. When using the configuration program, please consider the following:

*You will need a JavaScript-enabled web-browser such as Internet Explorer 4.0 or higher, or Netscape Navigator 4.0 or higher.*

***The computer that you are using for initial configuration must have an IP Address within the same range as the IP Address of the DWL-700AP. The DWL-700AP has a default IP Address of 192.168.0.50 with subnet mask of 255.255.255.0***

*If you **are** using a D-Link router in your network, such as the DI-604, with the factory default settings, you **will not** need to assign a static IP Address to the computer that you are using to configure the Access Point. (Skip to Fig. 5.1: entering the IP address)*

*If you **are not** using a D-Link router in your network, you **will** need to assign a Static IP Address to the computer that you are using to configure the DWL-700AP, with in the IP Address Range of the DWL-900AP+. Assign a static IP address of **192.168.0.2** with subnet mask of **255.255.255.0** (Please see Networking Basics in this manual for information on Assigning a Static IP Address.) **Note:** Please write down the current IP address settings of the computer. You may need to revert back to these settings after configuring the DWL-900AP+.*

*After you have assigned a Static IP Address to the computer you are using for configuration (if necessary), next you will assign the **DWL-700AP** an IP Address within the range of your existing network.*

*After changing the IP Address of the DWL-700AP you will need to enter the IP into the address bar of your web browser to access the configuration page of the DWL-700AP*

- If the computer had a static IP address, re-input that same address.*
- If the computer had a dynamic IP Address (i.e., a DHCP capable router automatically assigns the IP Address) then change the setting of your network adapter to receive a Dynamic IP Address.*


### Factory Default Settings for the DWL-700AP

SSID	default
Channel	6
Encryption	disabled
User Name	admin
Password	(no password, leave field blank)
IP Address	192.168.0.50

## Using the Configuration Menu (continued)

Whenever you want to configure your network or the DWL-700AP, you can access the Configuration Utility by opening the web-browser and typing in the IP Address of the DWL-700AP. The DWL-700AP's default IP Address is shown below:

- Open the web browser
- Type in the **IP Address** of the Access Point

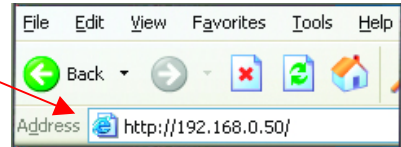

*(The IP Address shown in the example above is the default setting. Use this IP address when connecting to a network consisting of other D-Link devices set to their default settings. If you have changed the IP Address of the DWL-700AP to conform to a network other than one with D-Link devices, then input that IP Address in the web browser, instead of the default IP Address shown.)*


- Type **admin** in the **User Name** field
- Leave the **Password** blank
- Click **OK**



The Configuration window will appear. You can select from several options in this window. Here the **Home > Wireless** tab is displayed. If you wish to change the default settings, you can make changes to the following items:

- **AP name**
- **SSID**
- **Channel**
- **WEP Encryption**
- **Key Type**

## Home > Wireless

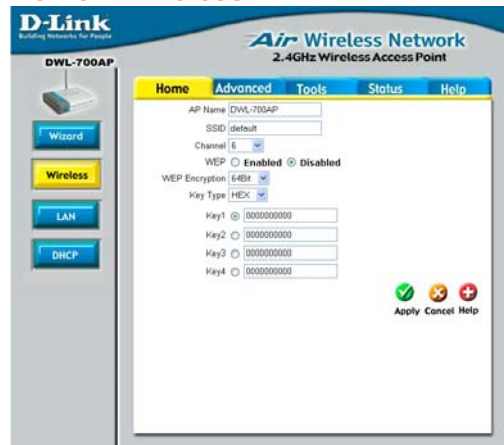

## Using the Configuration Menu (continued)

**AP Name:** You may choose to rename your Access Point, especially if you have more than one Access Point on your network.

**SSID: (Service Set Identifier) “default” is the default setting.** The SSID is a unique name that identifies a network. All devices on a network must share the same SSID name in order to communicate on the network. If you choose to change the SSID from the default setting, input your new SSID name in this field. The SSID can be up to 32 characters in length.

**Channel: Channel 6 is the default channel.** Input a new number if you want to change the default setting. All devices on the network must be set to the same channel to communicate on the network.

**WEP Encryption:** Select **Enable Encryption** to use **WEP (Wired Equivalent Privacy)** on the network. All devices on the network, and the Access Point, must share the same WEP selection – either **Enable** or **Disable**, and they must share the same WEP key. The WEP key is generated from **ASCII** or **Hexadecimal** entries that are either 64, 128 bit in length. When enabling encryption, select the **Key Type** (ASCII or Hexadecimal) and then input the appropriate digits or letters. You can create up to 4 keys. Select the key you wish to use.

**Hexadecimal** digits consist of the numbers 0-9 and the letters A-F  
**ASCII** (American Standard Code for Information Interchange) is a code for representing English letters as numbers from 0-127

Click **Help** at any time for more information.  
Click **Apply** if you have made any changes or additions.

This window displays the default settings of the DWL-700AP.  
The default IP Address is 192.168.0.50. If you select **Dynamic IP Address**, you



The screenshot shows the D-Link configuration interface for the DWL-700AP. The 'Advanced' tab is selected, and the 'LAN Settings' section is visible. The 'LAN IP' is set to 'Static IP Address' with a value of 192.168.0.50. The 'Subnet Mask' is 255.255.255.0 and the 'Gateway' is 0.0.0.0. On the left side, there are buttons for 'Wizard', 'Wireless', 'LAN', and 'DHCP'. At the bottom right, there are 'Apply', 'Cancel', and 'Help' buttons.

will obtain a dynamic IP Address from a DHCP server on your network. (This is not advisable since it will be difficult to determine the dynamic IP address assigned to the DWL-700AP.) The **Subnet Mask** is 255.255.255.0. Input the IP Address of the **Gateway** (the router on your network.)

Click **Apply** if you have made any changes.

## Using the Configuration Menu (continued)

### Home > DHCP

The screenshot shows the D-Link configuration interface for a DWL-700AP. The left sidebar contains navigation buttons: Wizard, Wireless, LAN, and DHCP (which is highlighted in yellow). The main content area is titled 'Air Wireless Network 2.4GHz Wireless Access Point' and has tabs for Home, Advanced, Tools, Status, and Help. The 'Home' tab is selected, showing the 'DHCP Server' configuration page. The page includes a description, radio buttons for 'Enabled' (selected) and 'Disabled', input fields for 'Starting IP Address' (192.168.0.100) and 'Ending IP Address' (192.168.0.199), and a 'Lease Time' dropdown menu set to '1 Hour'. Below these settings is a 'DHCP Client Table' with columns for Host Name, IP Address, MAC Address, and Expired Time. A single entry is listed for 'dell-c840' with IP '192.168.0.103' and MAC '00-0B-DB-17-F7-ED'. At the bottom right of the table are buttons for 'Apply', 'Cancel', and 'Help'.

**D-Link**  
Building Networks for People

**DWL-700AP**

**Air Wireless Network**  
2.4GHz Wireless Access Point

Home Advanced Tools Status Help

**DHCP Server**

The DWL-700AP can be setup as a DHCP server to distribute IP addresses to the LAN network.

DHCP Server ☒ Enabled ☐ Disabled

Starting IP Address 192.168.0.100

Ending IP Address 192.168.0.199

Lease Time 1 Hour

**DHCP Client Table**

Host Name	IP Address	MAC Address	Expired Time
dell-c840	192.168.0.103	00-0B-DB-17-F7-ED	Jun/24/2003 14:06:21

Apply Cancel Help

**DHCP Server:** Select Enabled or Disabled. Disabled is the default setting. If you want to use the Access Point as a DHCP server to automatically assign Dynamic IP Address on the network, you will select enabled.

**Starting IP Address:** If you have enabled the DHCP server function, enter the starting point of the IP Address range for your network.

**Ending IP Address:** Enter the ending IP Address of your IP Address range, if you have enabled the DHCP function of the Access Point.

**Lease Time:** Choose the length of time at which the DHCP function of the DWL-700AP automatically regenerates the IP Addresses to the devices in your network.

**DHCP Client Table:** Lists the devices on your network that are receiving dynamic IP Addresses from the Access Point.




## Using the Configuration Menu (continued)

### MAC Address

(Media Access Control Address)  
A unique hardware address that identifies a device on a network. It is assigned at the factory and cannot be changed. Usually you will find this address on a sticker on the device or on the packaging.

### Advanced > Mode

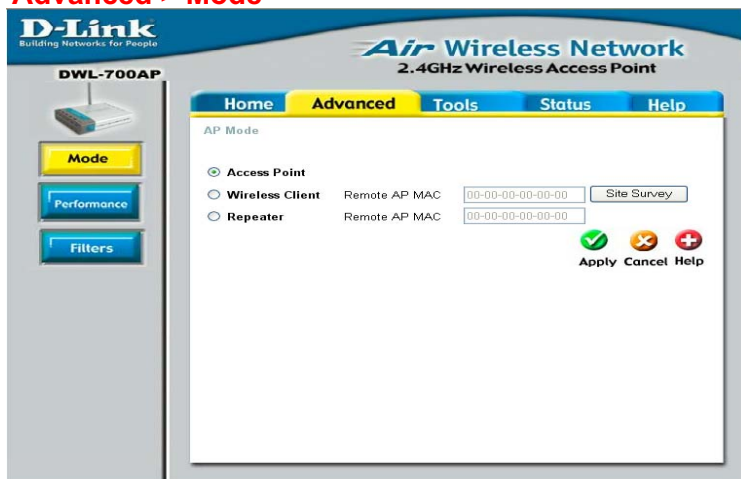


The DWL-700AP can be configured to perform in any one of three modes, as a wireless access point, as a wireless client, or as a wireless repeater.

**Access Point:** This mode is used to create a wireless LAN. Access Point is the default setting.

**Wireless Client:** Will transform any IEEE 802.3 Ethernet device into an 802.11b wireless client as long you are connecting to a DWL-700AP acting as an Access Point. The Site Survey function will allow you to scan for available wireless networks.

### Advanced > Mode > Site Survey

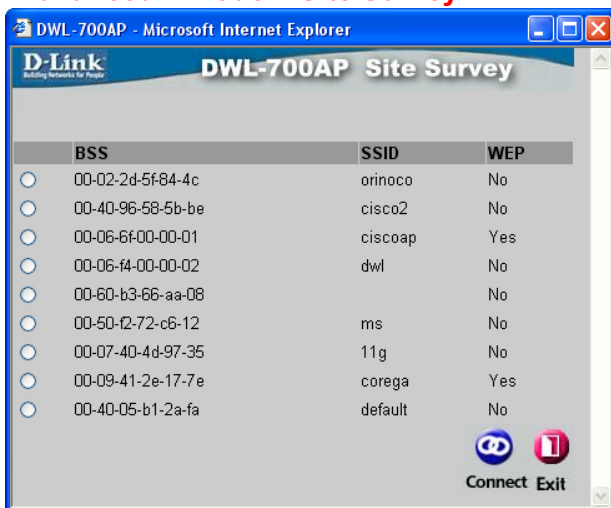




## Using the Configuration Menu (continued)

**Repeater:** This mode will allow you to extend the range of your wireless network. The repeater mode will work with another D-Link Air DWL-700AP.

**Note!** If you use the DWL-700AP in Wireless Client or Repeater Mode, make sure that you enter the Ethernet Mac Address (LAN MAC Address) of the unit that you want to extend the wireless coverage.

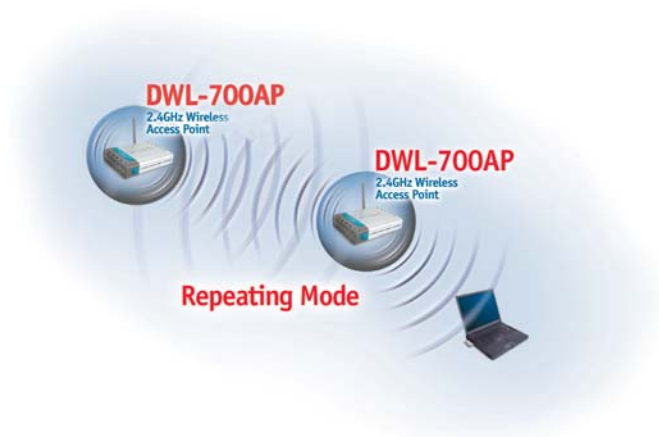

## Using the Configuration Menu (continued)

### Advanced > Performance

The default Performance settings are shown here.

#### Beacon Interval:

Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a Beacon interval value. Default (100) is recommended.

**RTS Threshold:** This value should remain at its default setting of 2,432. If you encounter inconsistent data flow, only minor modifications to the value range between 256 and 2,432 are recommended.

**Fragmentation:** This value should remain at its default setting of 2,346. If you experience a high packet error rate, you may slightly increase your Fragmentation Threshold within the value range of 256 to 2,346. Setting the Fragmentation Threshold too low may result in poor performance.

**DTIM Interval (Beacon Rate):** (Delivery Traffic Indication Message) Enter a value between 1 and 16384 for the Delivery Traffic Indication Message (DTIM.) A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

**Basic Rates:** Select the basic rate for the network

**TX Rates:** Select the transmission rate for the network

**Preamble Type: Long Preamble** is the default setting. (High traffic networks should use the shorter preamble type.) The preamble defines the length of the CRC block (Cyclic Redundancy Check is a common technique for detecting data transmission errors) used in communication between the Access Point and the roaming wireless Network adapters.

#### Authentication:

**Open System** – communicates the key across the network

**Shared Key** – devices must have identical WEP settings to communicate

**Auto** – automatically adjusts to the Authentication mode of the wireless client

**SSID Broadcast: (Service Set Identifier) Enable or Disable** (default) the broadcast of the SSID name across the network. SSID is a name that identifies a wireless network. All devices on a network must use the same SSID to establish communication.

The screenshot shows the D-Link configuration interface for the DWL-700AP. The 'Advanced' tab is selected, and the 'Performance' sub-tab is active. The settings are as follows:

- Beacon interval: 100 (msec, range: 20~1000, default: 100)
- RTS Threshold: 2347 (range: 0~2347, default: 2347)
- Fragmentation: 2347 (range: 0~2347, default: 2347)
- DTIM interval: 3 (range: 1~255, default: 3)
- Basic Rate: 2Mbps (selected)
- TX Rates: 2Mbps (selected)
- Preamble Type: Long Preamble (selected)
- Authentication: Auto (selected)
- SSID Broadcast: Enabled (selected)

Buttons for 'Apply', 'Cancel', and 'Help' are visible at the bottom right of the configuration area.

## Using the Configuration Menu (continued)

### Advanced > Filters

Use MAC Filters to allow or deny wireless connection to the DWL-700AP.

Select **Disable MAC Filters** (default) to disable this feature. Select **Only allow the MAC address...** or **Only deny the MAC address...** and enter the MAC Address of the selected computer into the field above. Or you can click on the pull-down arrow

The screenshot shows the D-Link configuration interface for a DWL-700AP. The left sidebar contains a device icon and three buttons: 'Mode', 'Performance', and 'Filters' (which is highlighted in yellow). The main content area has a top navigation bar with 'Home', 'Advanced' (selected), 'Tools', 'Status', and 'Help'. Below this, the 'MAC Filters' section is active. It contains three radio buttons: 'Disabled MAC Filters' (selected), 'Only allow MAC address(es) listed below to connect to DWL-700AP', and 'Only deny MAC address(es) listed below to connect to DWL-700AP'. There is a 'MAC Address' input field with a 'Clear' button and a 'Connected PCs' dropdown menu with a 'Clone' button. At the bottom, there is a 'MAC Filter List' table with a header 'MAC Address' and an empty body. Action buttons 'Apply', 'Cancel', and 'Help' are at the bottom right.

## Using the Configuration Menu (continued)

### Tools > Admin

Change your password in this window. It can be up to 14 characters in length. Please keep a copy of your password in a safe place.

Click **Apply**, if you have made any changes.

The screenshot shows the D-Link configuration interface for a DWL-700AP. The left sidebar contains buttons for Admin, System, and Firmware. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the Tools tab, the 'Admin' sub-tab is selected, showing 'Administrator Settings'. It includes input fields for 'New Password' and 'Confirm Password', both masked with asterisks. At the bottom right of the form are three buttons: a green checkmark (Apply), a red X (Cancel), and a red plus sign (Help).

### Tools > System


The current system settings can be saved as a file onto the local hard drive by clicking **Save**. The saved file can be loaded back on the DWL-700AP by clicking **Browse**. When you have selected the settings file, click **Load**. Click **Restore** to return to **Factory Default Settings**.

The screenshot shows the D-Link configuration interface for a DWL-700AP, specifically the 'System' sub-tab under the 'Tools' menu. The left sidebar has buttons for Admin, System, and Firmware. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the Tools tab, the 'System' sub-tab is selected, showing 'System Settings'. It includes a 'Save Settings to Local Hard Drive' section with a 'Save' button. Below that is a 'Load Settings From Local Hard Drive' section with a text input field, a 'Browse...' button, and a 'Load' button. Further down is a 'Reset' button with the instruction 'To perform the reset, click on the "Reset" button below.' At the bottom is a 'Restore to Factory Default Settings' section with a 'Restore' button. A red plus sign icon with the word 'Help' is located in the bottom right corner.

## Using the Configuration Menu (continued)

### Tools > Firmware

Upgrade the firmware for the Access Point. Click on the link to find upgrades to the firmware on the D-Link website at <http://support.dlink.com>. After you have downloaded a firmware upgrade to your local drive, click **Browse**. Select the firmware and click **Apply** to complete the upgrade.

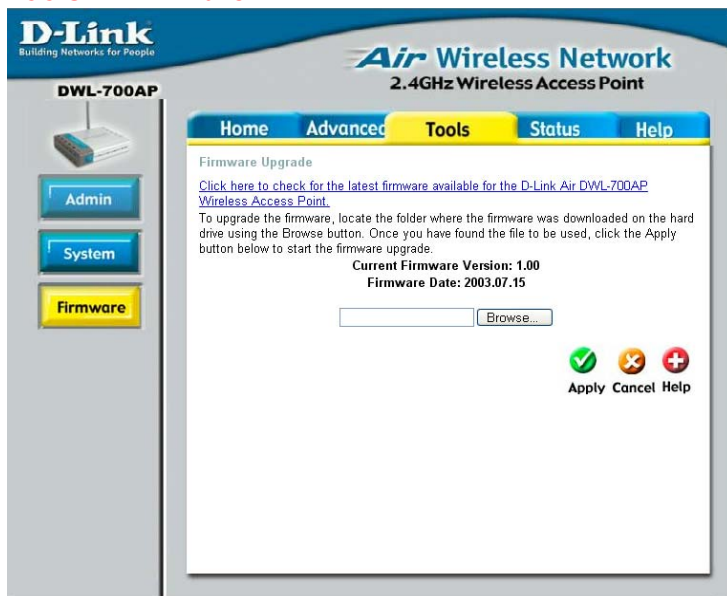

## Using the Configuration Menu (continued)

This page displays the current information for the DWL-700AP. It will display the **Ethernet** and **Wireless** information.

### Ethernet:

- MAC Address
- IP Address
- Subnet Mask
- Gateway
- DHCP Server

### Wireless:

- MAC Address
- SSID
- Encryption
- Channel
- AP mode

## Status > Device Info



The DWL-700AP keeps a running log of events and activities occurring on the Access Point. If the device is rebooted, the logs are automatically cleared. You may save the log files under **Log Settings**.

To enable or disable logging for the Access Point, click on **Log Settings**. To monitor the wireless stations, select **Enable** and the log file will be sent to the associated computer.

## Status > Log



**First Page** - displays the first page of the Log

**Last Page** - displays the last page of the Log

**Previous** - moves back one log page

**Next** - moves forward one log page

**Clear** - clears the log completely

**Log Settings** – Brings up the page to configure the logs


## Using the Configuration Menu (continued)



**Syslog Server:** Using third party syslog software, the Syslog Server function will download the DWL-700AP's log automatically to an IP address specified sever.

### Status > Stats

Displays the network traffic statistics for both received and transmitted communications through the Ethernet port and wireless connections associated with the Access Point.

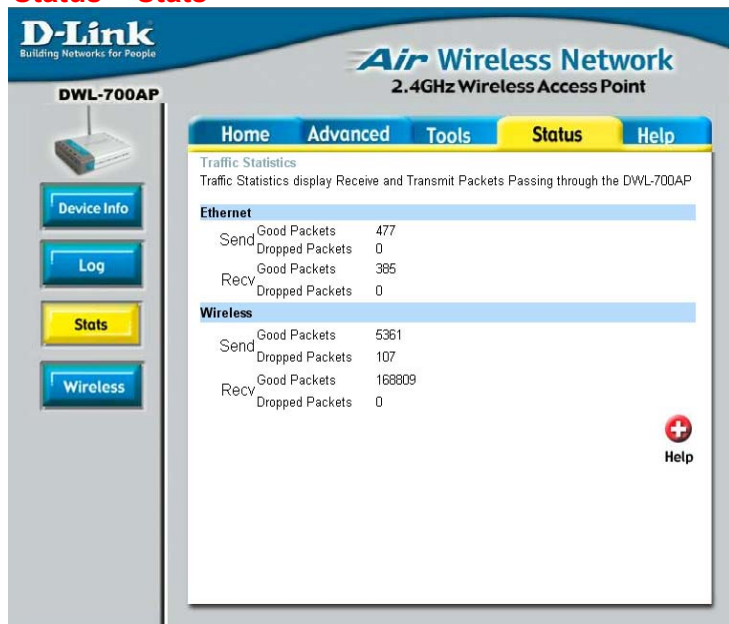

## Using the Configuration Menu (continued)

### Status > Wireless

Displays the list of computers that are connected to the DWL-700AP wirelessly.

The screenshot shows the D-Link DWL-700AP configuration interface. The left sidebar contains a device icon and buttons for 'Device Info', 'Log', 'Stats', and 'Wireless'. The main content area has a top navigation bar with 'Home', 'Advanced', 'Tools', 'Status' (selected), and 'Help'. Below the navigation bar is the title 'Air Wireless Network 2.4GHz Wireless Access Point'. The main section is titled 'Connected Wireless PCs List' and contains a table with two columns: 'Connected Time' and 'MAC Address'. The table lists two connected devices.

Connected Time	MAC Address
Jul/16/2003 10:31:12	00-02-2d-7b-1c-bb
Jul/16/2003 10:37:59	00-06-f4-03-a8-a5




## 6. Using the *Air* AP Manager

The *Air* Access Point Manager is a Windows based program to help you manage multiple Access Points in one easy view. Please note that the AP Manager software is optional.


- Begin the installation by inserting the DWL-700AP CD into your CD-ROM. The AP Manager is also available for download at support.dlink.com.
- Click **Install AP Manager Utility**




- The following screen will appear.
- Click **Next**

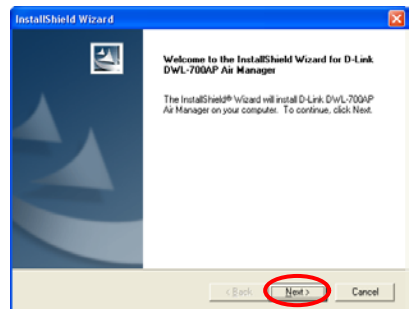

- Click **Next**

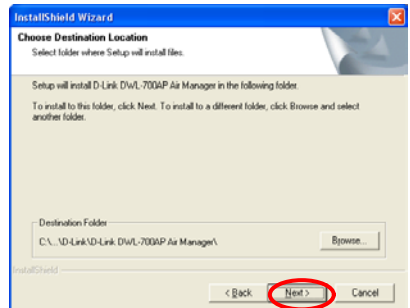

- Click **Finish** to complete installation.

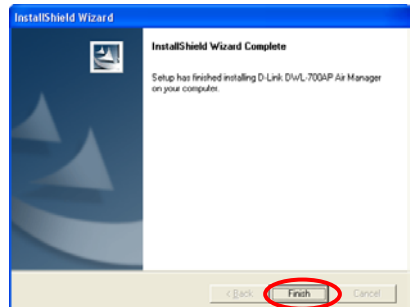

## Using the Air AP Manager (continued)

### Link Information

The Link Information screen displays the current settings of the selected Access Point

**D-Link Air Access Point Manager**

**Link Information**

AP Setting  
IP Setting  
WEP Setting  
MAC Filter Setting  
Firmware Upgrade

**Status**

AP Name: DWL-700AP  
SSID: default  
IP Address: 192.168.0.50  
MAC Address: 0031E9010001  
Channel: 6  
WEP Security: No  
Firmware Version: 1.00

**AP Available**

AP Name	MAC Address	SSID	WEP
DWL-700AP	0031E9010001	default	No

Copyright 2003  
Wireless Access Point Configuration Utility  
version 1.00

Apply Refresh Close

### AP Settings

The AP Settings screen will allow you to change the Access Point settings for the selected Access Point.

#### Note:

Everytime hit "Apply" button, the password menu will pop up. Please leave the password blank and click "OK".

**D-Link Air Access Point Manager**

**Link Information**

AP Setting  
IP Setting  
WEP Setting  
MAC Filter Setting  
Firmware Upgrade

**Basic Setting**

SSID: default  
Channel: 6  
AP Name: DWL-700AP

**Mode Setting**

☒ Access Point  
☐ Wireless Client  
☐ Repeater

Remote AP MAC Address: 000000000000

Advanced Setting

**AP Available**

AP Name	MAC Address	SSID	WEP
DWL-700AP	0031E9010001	default	No

Copyright 2003  
Wireless Access Point Configuration Utility  
version 1.00

Apply Refresh Close

### AP Settings > Advanced Settings

The Advanced Settings will allow you to adjust advanced settings for the selected Access Point.

**Advanced Setting**

**Advanced Setting**


Transmission Rates: 11 (Mbps)  
Preamble Type: Long Preamble  
SSID Broadcast: Disable  
Beacon Interval: 100  
RTS Threshold: 2347  
Fragmentation Threshold: 2347  
DTIM Interval: 3

OK Cancel

## Using the Air AP Manager (continued)

### IP Settings

The IP Settings screen will allow you to change the IP Address settings for the selected Access Point.

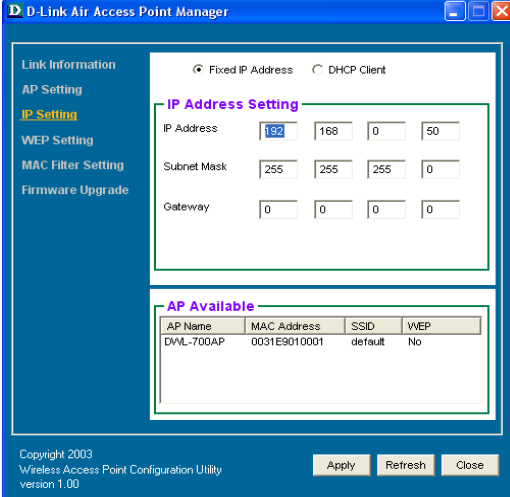


The screenshot shows the 'D-Link Air Access Point Manager' window with the 'IP Setting' tab selected. The 'Link Information' section on the left lists 'Link Information', 'AP Setting', 'IP Setting' (highlighted), 'WEP Setting', 'MAC Filter Setting', and 'Firmware Upgrade'. The main area is titled 'IP Address Setting' and has two radio buttons: 'Fixed IP Address' (selected) and 'DHCP Client'. Below are input fields for IP Address (192, 168, 0, 50), Subnet Mask (255, 255, 255, 0), and Gateway (0, 0, 0, 0). A section titled 'AP Available' contains a table with columns: AP Name, MAC Address, SSID, and WEP. The table has one row: DML-700AP, 0031E9010001, default, No. At the bottom, it says 'Copyright 2003 Wireless Access Point Configuration Utility version 1.00' and has 'Apply', 'Refresh', and 'Close' buttons.

AP Name	MAC Address	SSID	WEP
DML-700AP	0031E9010001	default	No

### WEP Settings

The WEP Settings Screen will allow you to apply WEP Encryption to the selected Access Point.

WEP is short for *Wired Equivalent Privacy*. It is a security protocol for wireless local area networks. All devices on the wireless network must share the same WEP encryption settings in order to communicate.

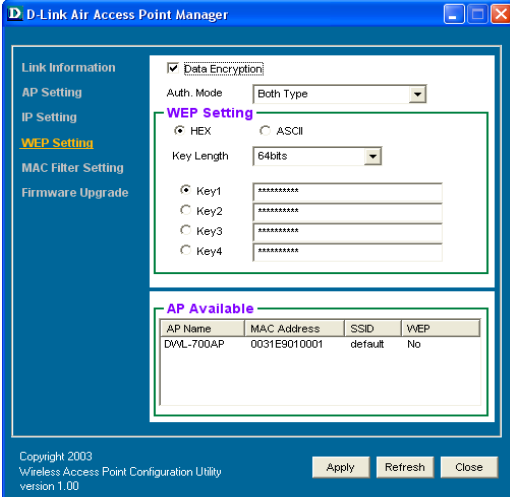

The screenshot shows the 'D-Link Air Access Point Manager' window with the 'WEP Setting' tab selected. The 'Link Information' section on the left lists 'Link Information', 'AP Setting', 'IP Setting', 'WEP Setting' (highlighted), 'MAC Filter Setting', and 'Firmware Upgrade'. The main area is titled 'WEP Setting' and has a checked 'Data Encryption' checkbox. Below are 'Auth. Mode' (Both Type) and 'Key Length' (64bits) dropdowns. There are four radio buttons for Key1, Key2, Key3, and Key4, each with a text input field. A section titled 'AP Available' contains a table with columns: AP Name, MAC Address, SSID, and WEP. The table has one row: DML-700AP, 0031E9010001, default, No. At the bottom, it says 'Copyright 2003 Wireless Access Point Configuration Utility version 1.00' and has 'Apply', 'Refresh', and 'Close' buttons.


AP Name	MAC Address	SSID	WEP
DML-700AP	0031E9010001	default	No

## Using the Air AP Manager (continued)

### MAC Filter Setting

The Firmware Upgrade screen will allow you to apply new version of the firmware to selected Access Point.

The Firmware Upgrade screen will allow you to apply new version of the firmware to selected Access Point.

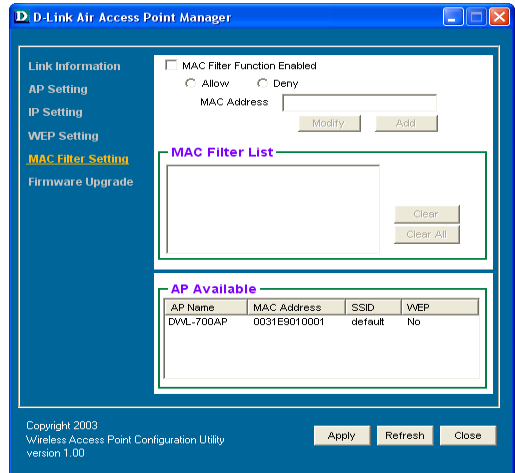


The screenshot shows the 'D-Link Air Access Point Manager' window with the 'MAC Filter Setting' tab selected. The left sidebar lists navigation options: Link Information, AP Setting, IP Setting, WEP Setting, MAC Filter Setting (highlighted), and Firmware Upgrade. The main content area has a checkbox for 'MAC Filter Function Enabled' with 'Allow' and 'Deny' radio buttons. Below is a 'MAC Address' input field with 'Modify' and 'Add' buttons. The 'MAC Filter List' section is empty with 'Clear' and 'Clear All' buttons. The 'AP Available' section shows a table with one entry: DWL-700AP, MAC Address 0031E9010001, SSID default, and WEP No. The footer includes copyright information and 'Apply', 'Refresh', and 'Close' buttons.

AP Name	MAC Address	SSID	WEP
DWL-700AP	0031E9010001	default	No

### Firmware Upgrade

The Firmware Upgrade screen will allow you to apply new version of the firmware to selected Access Point.

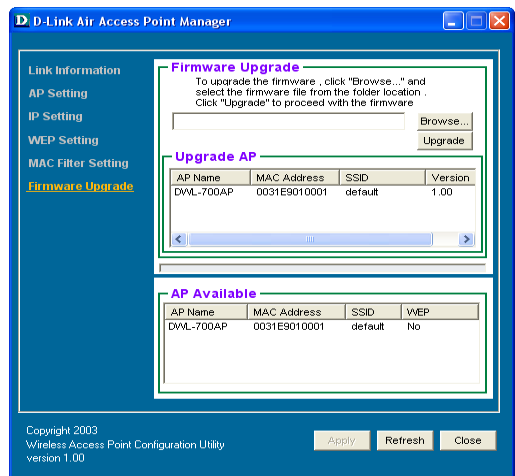

The screenshot shows the 'D-Link Air Access Point Manager' window with the 'Firmware Upgrade' tab selected. The left sidebar is the same as the previous screen. The main content area has instructions for upgrading the firmware, a 'Browse...' button, and an 'Upgrade' button. The 'Upgrade AP' section shows a table with one entry: DWL-700AP, MAC Address 0031E9010001, SSID default, and Version 1.00. The 'AP Available' section is identical to the previous screen. The footer includes copyright information and 'Apply', 'Refresh', and 'Close' buttons.

AP Name	MAC Address	SSID	Version
DWL-700AP	0031E9010001	default	1.00

## 7. Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWL-700AP Wireless Access Point. We cover various aspects of the network setup, including the network adapters. Please read the following if you are having problems.


**Note:** It is recommended that you use an Ethernet connection to configure the DWL-700AP Access Point.

### 1. The computer used to configure the DWL-700AP cannot access the Configuration menu.

- Check that the **Ethernet LED** on the DWL-700AP is **ON**. If the **LED** is not **ON**, check that the cable for the Ethernet connection is securely inserted.
- Check that the Ethernet Adapter is working properly. Please see item 3 (**Check that the drivers for the network adapters are installed properly**) in this **Troubleshooting** section to check that the drivers are loaded properly.
- Check that the **IP Address** is in the same range and subnet as the DWL-700AP. Please see **Checking the IP Address in Windows XP** in the **Networking Basics** section of this manual.

**Note:** The IP Address of the DWL-700AP is 192.168.0.50. All the computers on the network must have a unique IP Address in the same range, e.g., 192.168.0.x. Any computers that have identical IP Addresses will not be visible on the network. They must all have the same subnet mask, e.g., 255.255.255.0

- Do a **Ping test** to make sure that the DWL-700AP is responding. Go to **Start>Run>Type Command>Type ping 192.168.0.50**. A successful ping will show four replies.

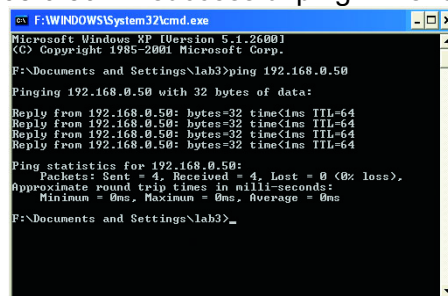

```
F:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab3>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:
Reply from 192.168.0.50: bytes=32 time=1ms TTL=64
Reply from 192.168.0.50: bytes=32 time=1ms TTL=64
Reply from 192.168.0.50: bytes=32 time=1ms TTL=64
Reply from 192.168.0.50: bytes=32 time=1ms TTL=64

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms


F:\Documents and Settings\lab3>
```

## Troubleshooting

### 2. The wireless client cannot access the Internet in the Infrastructure mode.

- Make sure the wireless client is associated and joined with the correct Access Point. To check this connection: **Right-click** on the **Local Area Connection** icon in the taskbar> select **View Available Wireless Networks**. The **Connect to Wireless Network** screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

Note: Screen shot were taken using Windows XP. Your screens may look similar.

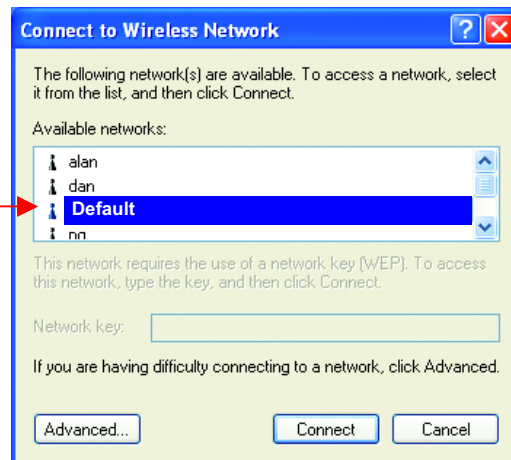


- Check that the **IP Address** assigned to the wireless adapter is within the same **IP Address range** as the access point and gateway. *Since the DWL-700AP has an IP Address of 192.168.0.50, wireless adapters must have an IP Address in the same range, e.g., 192.168.0.x. Each device must have a unique IP Address; no two devices may have the same IP Address. The subnet mask must be the same for all the computers on the network.)* To check the **IP Address** assigned to the wireless adapter, **double-click** on the **Local Area Connection** icon in the taskbar > select the **Support** tab and the **IP Address** will be displayed. (Please refer to **Checking the IP Address** in the **Networking Basics** section of this manual.)
- If it is necessary to assign a **Static IP Address** to the wireless adapter, please refer to the appropriate section in **Networking Basics**. If you are entering a **DNS Server address** you must also enter the **Default Gateway Address**. (Remember that if you have a DHCP-capable router, you will not need to assign a Static IP Address. See **Networking Basics: Assigning a Static IP Address**.)

## Troubleshooting


### 3. Check that the drivers for the network adapters are installed properly.

*You may be using different network adapters than those illustrated here, but this procedure will remain the same, regardless of the type of network adapters you are using.*

- Go to **Start**
- **Right-click** on **My Computer**
- Click **Properties**

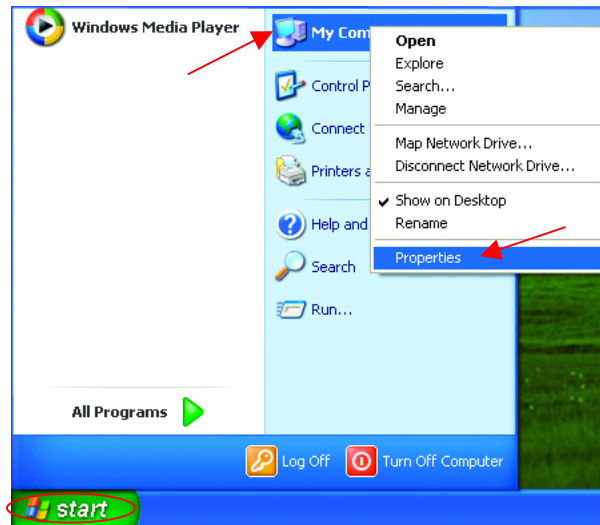


- **Select the Hardware Tab**
- Click **Device Manager**

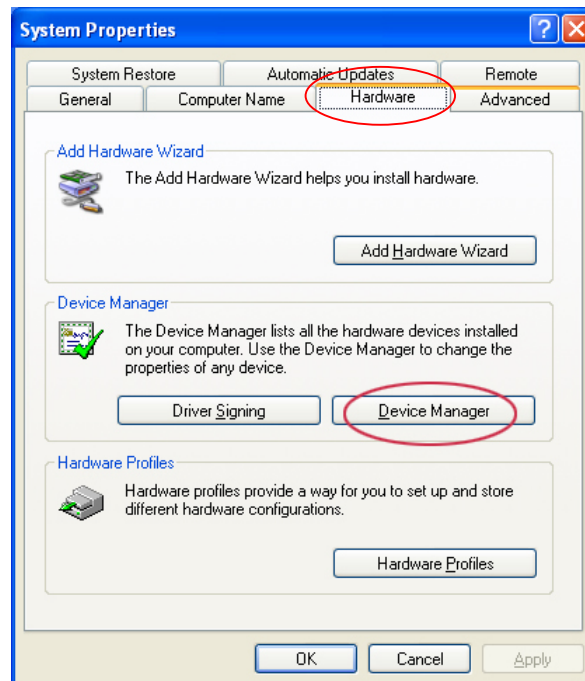


## Troubleshooting

- Double-click on **Network Adapters**
- Right-click on **D-Link AirPlus DWL-650+ Wireless Cardbus Adapter**
- Select **Properties** to check that the drivers are installed properly

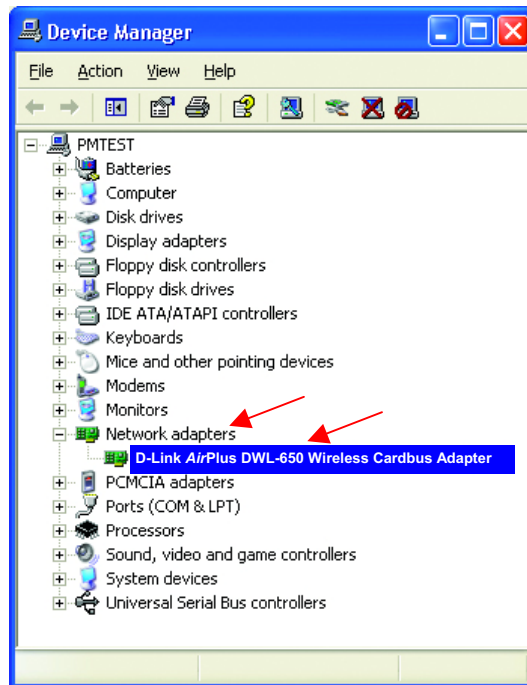

- Look under **Device Status** to check that the device is working properly.

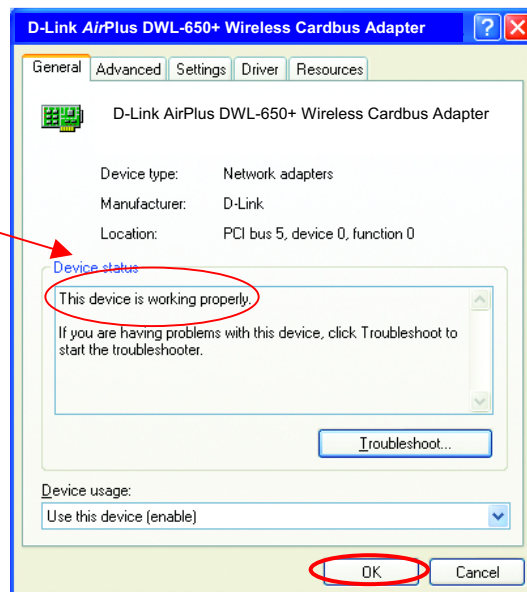

- Click **OK**



## Troubleshooting

### 4. Resetting the DWL-700AP to Factory Default Settings

After you have tried other methods for troubleshooting your network, you may choose to **Reset** the DWL-700AP to the factory default settings. Remember that D-Link *Air* products network together, out of the box, at the factory default settings.



To hard-reset the D-Link *Air* DWL-700AP to Factory Default Settings, please do the following:

- Locate the **Reset** button on the back of the DWL-700AP
- Use a paper clip to press the **Reset** button.
- Hold for about 5 seconds and then release
- After the DWL-700AP reboots (this may take a few minutes) it will be reset to the factory **Default** settings.


## 8. Networking Basics

### *Using the Network Setup Wizard in Windows XP*

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

*Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000, ME or 98.*


Go to **Start>Control Panel>Network Connections**  
Select **Set up a home or small office network**

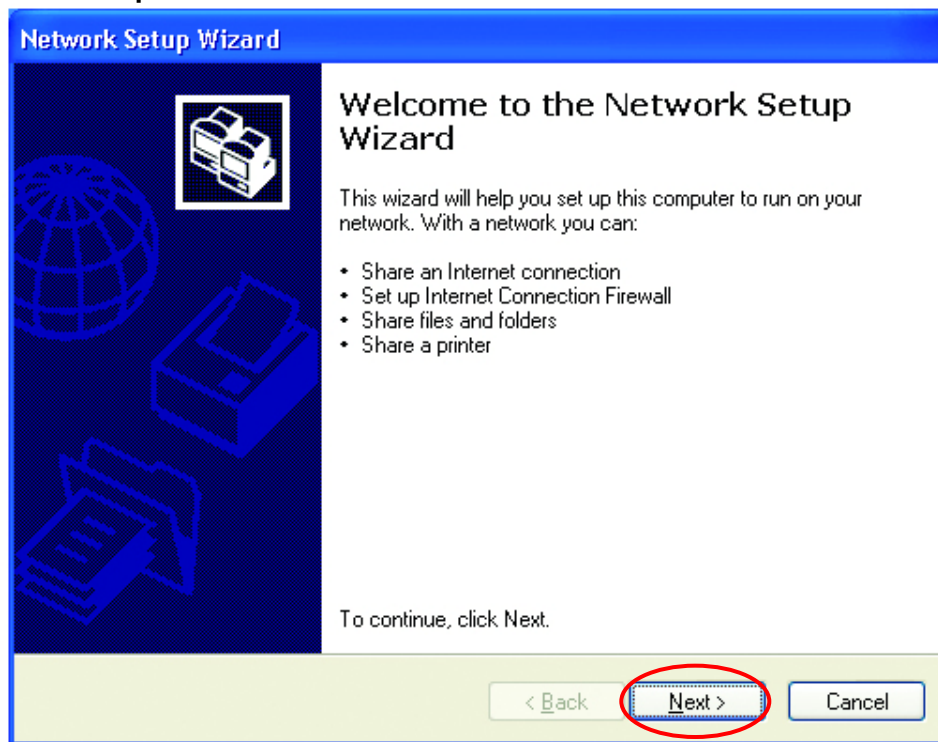

When this screen appears, **Click Next**.


## Networking Basics (continued)

Please follow all the instructions in this window:

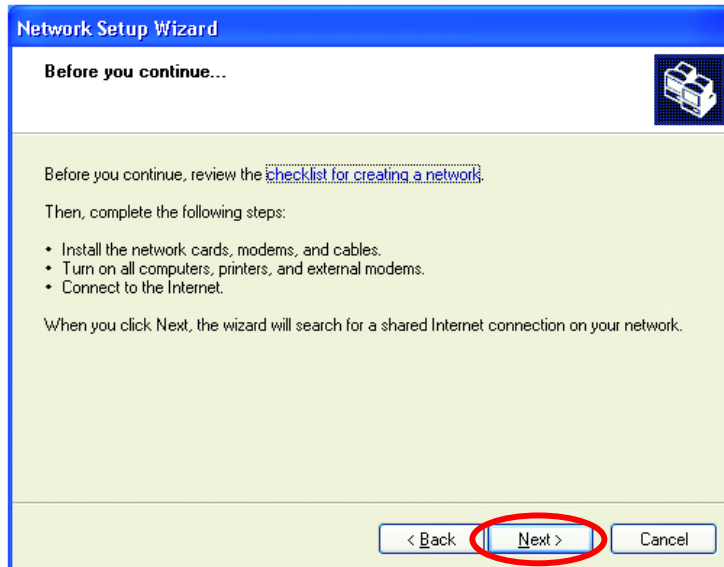

Click **Next**


In the following window, select the best description of your computer. If your computer connects to the Internet through a gateway/router, select the second option as shown.

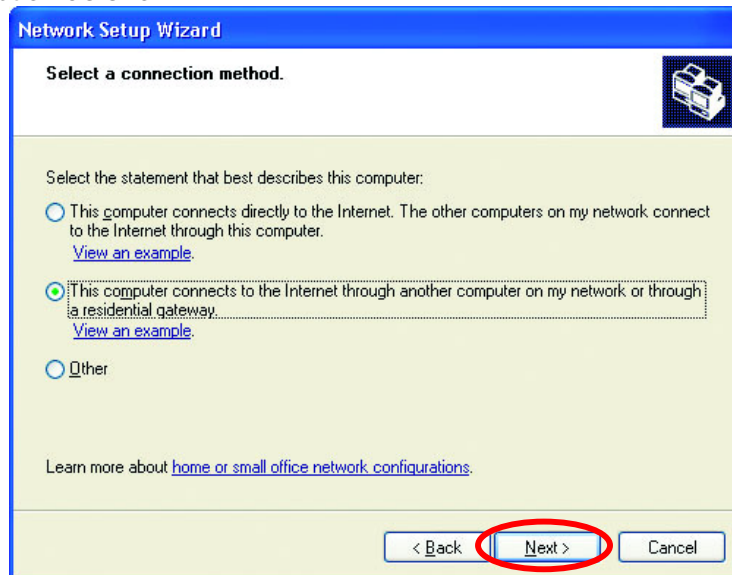

Click **Next**

## Networking Basics (continued)

Enter a **Computer description** and a **Computer name** (optional.)

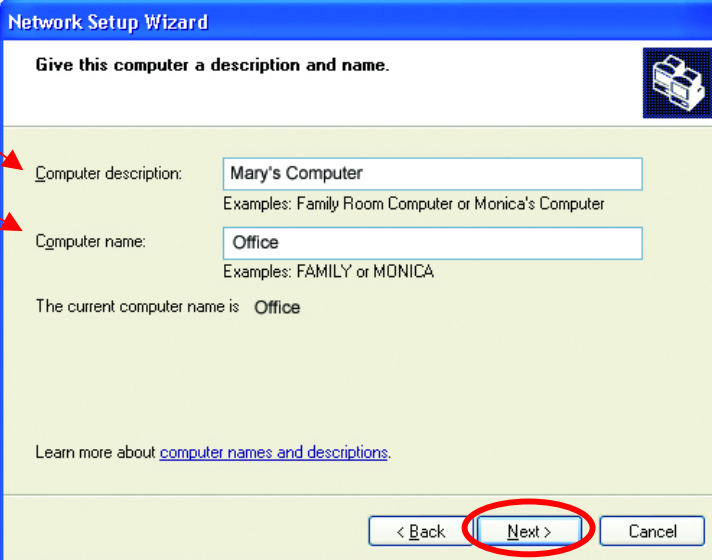

The screenshot shows the 'Network Setup Wizard' window with the title 'Give this computer a description and name.' It contains two text input fields: 'Computer description' with the value 'Mary's Computer' and 'Computer name' with the value 'Office'. Below the 'Computer name' field, it says 'The current computer name is Office'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is circled in red. Two red arrows point to the 'Computer description' and 'Computer name' labels.

Network Setup Wizard

Give this computer a description and name.

Computer description: Mary's Computer  
Examples: Family Room Computer or Monica's Computer

Computer name: Office  
Examples: FAMILY or MONICA


The current computer name is Office

Learn more about [computer names and descriptions](#).

< Back Next > Cancel

Click **Next**

Enter a **Workgroup** name. All computers on your network should have the same **Workgroup** name.

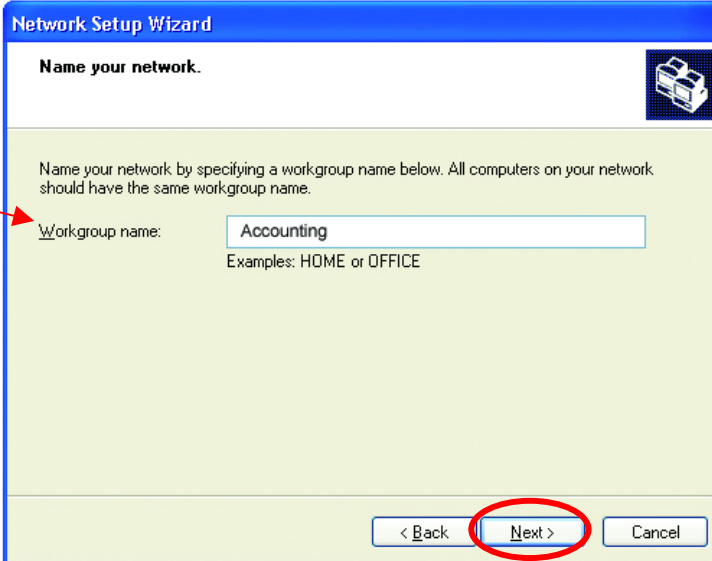

The screenshot shows the 'Network Setup Wizard' window with the title 'Name your network.' It contains a text input field for 'Workgroup name' with the value 'Accounting'. Below the field, it says 'Examples: HOME or OFFICE'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is circled in red. A red arrow points to the 'Workgroup name' label.

Network Setup Wizard

Name your network.

Name your network by specifying a workgroup name below. All computers on your network should have the same workgroup name.


Workgroup name: Accounting  
Examples: HOME or OFFICE

< Back Next > Cancel

Click **Next**


## Networking Basics (continued)

Please wait while the **Network Setup Wizard** applies the changes.

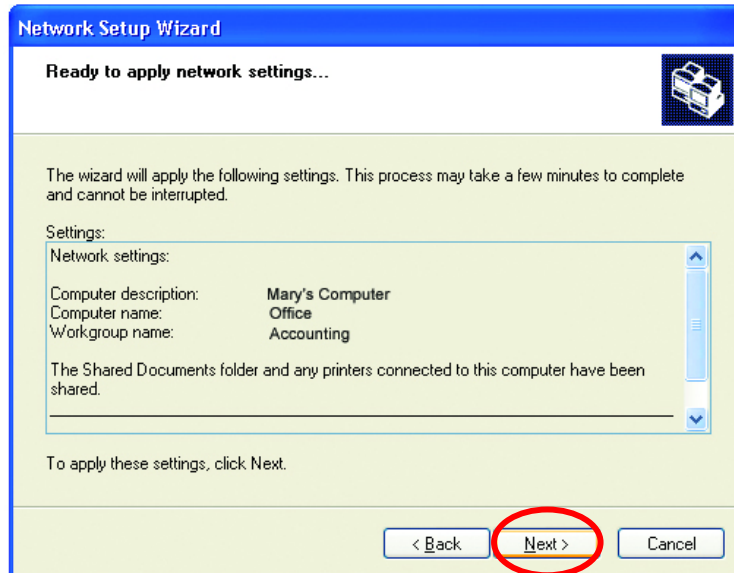


When the changes are complete, click **Next**.

Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.

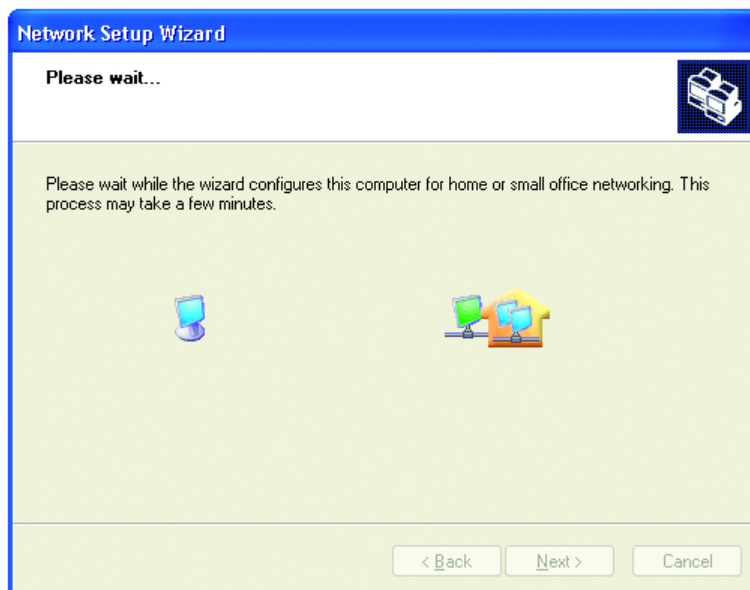


## Networking Basics (continued)

In the window below, select the option that fits your needs. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network. Click **Next**.

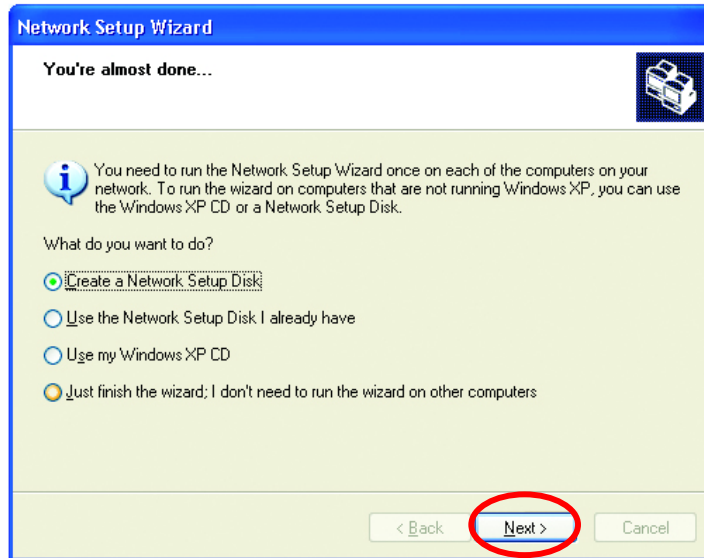


Insert a disk into the Floppy Disk Drive, in this case drive **A**.

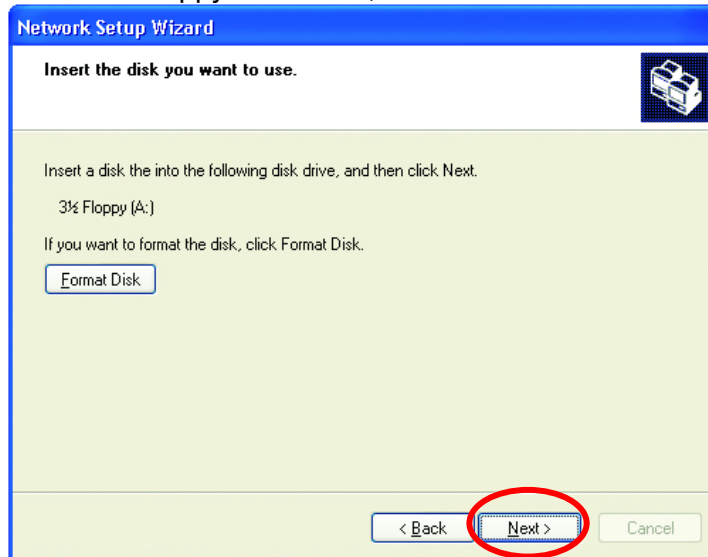


Format the disk if you wish, and click **Next**.

## Networking Basics (continued)

Please wait while the **Network Setup Wizard** copies the files.

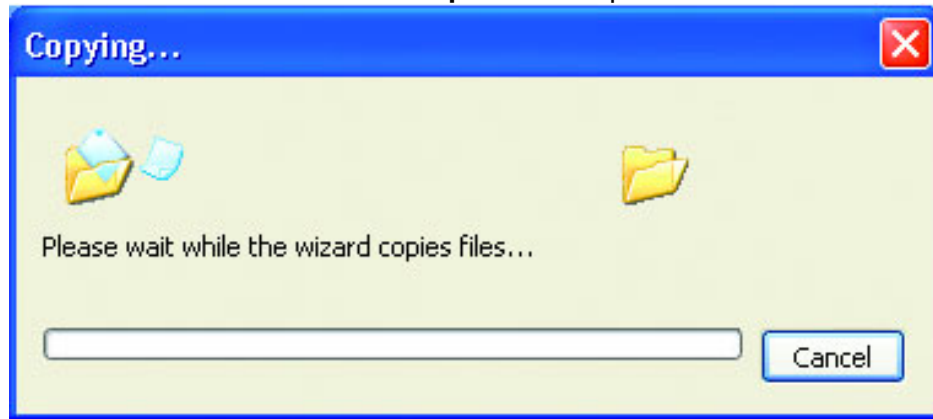


Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. To continue click **Next**.

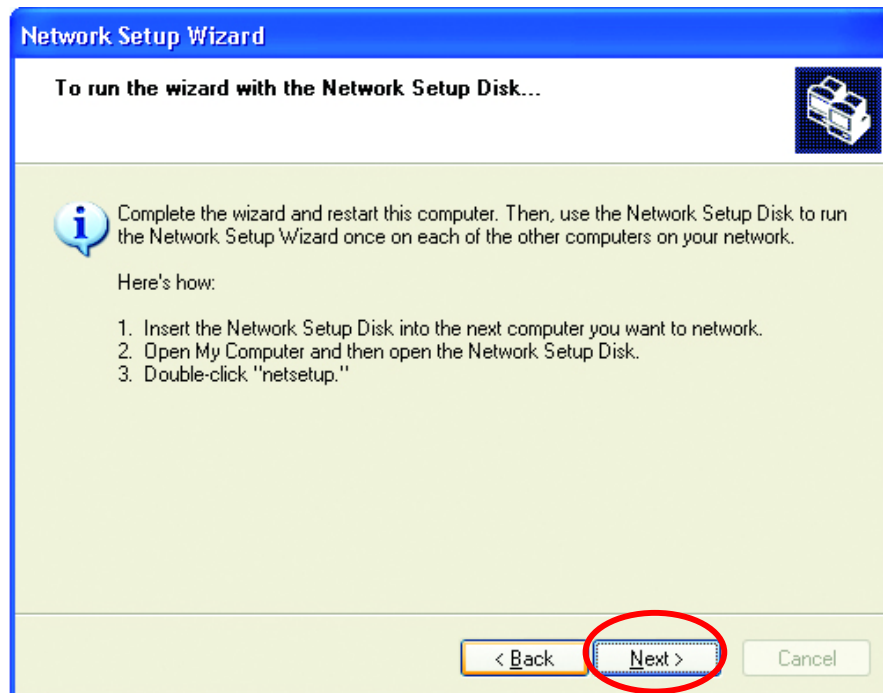


## Networking Basics (continued)

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.

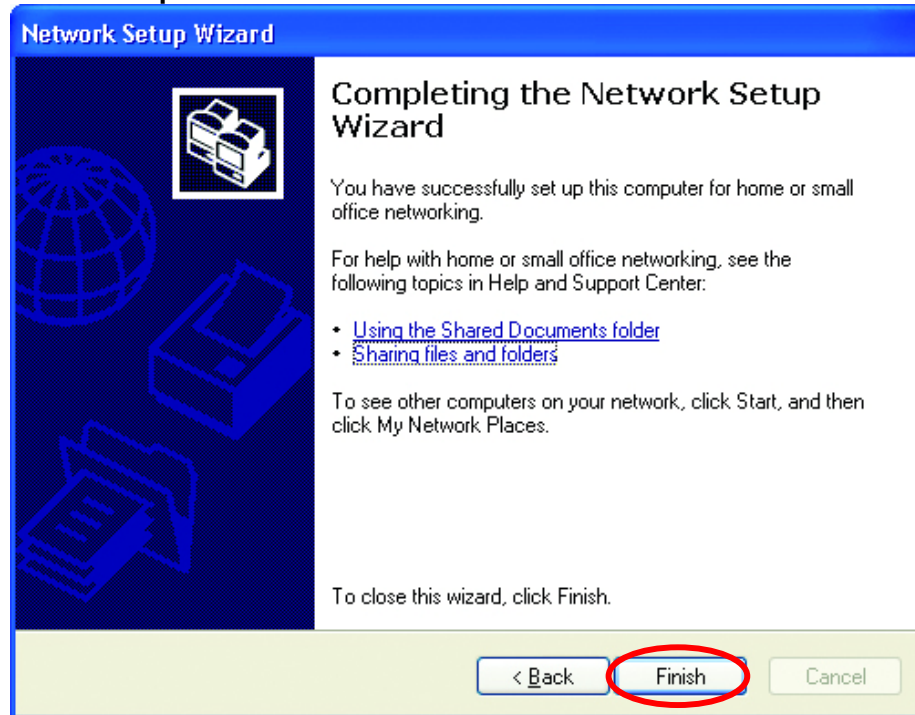

The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.

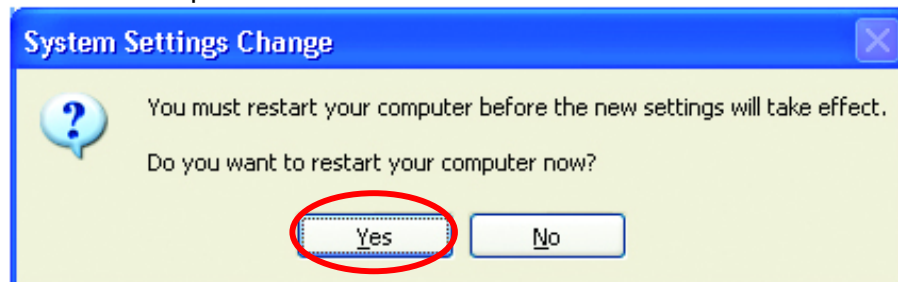

You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.



## Networking Basics (continued)

### Naming your Computer

To name your computer, please follow these directions:

In **Windows XP**:

- Click **Start** (in the lower left corner of the screen)
- **Right-click** on **My Computer**
- Select **Properties** and click




- Select the **Computer Name Tab** in the **System Properties** window.

*You may enter a **Computer description** if you wish, this field is optional.*

To rename the computer and join a domain,


- Click **Change**

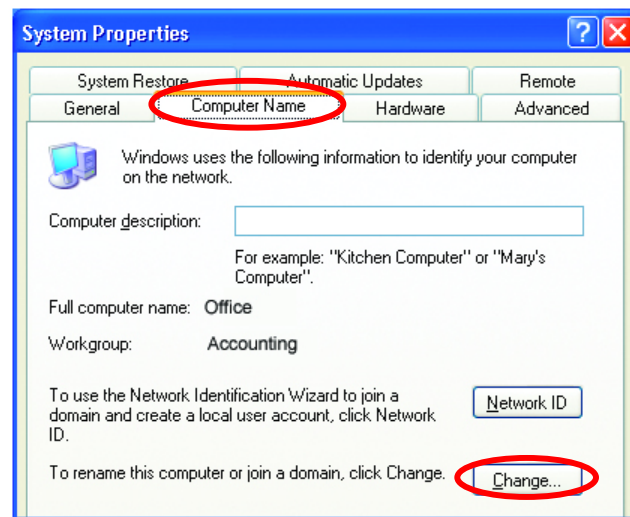

## Networking Basics (continued)

### Naming your Computer

- In this window, enter the **Computer name**.
- Select **Workgroup** and enter the name of the **Workgroup**.
- All computers on your network must have the same **Workgroup** name.
- Click **OK**

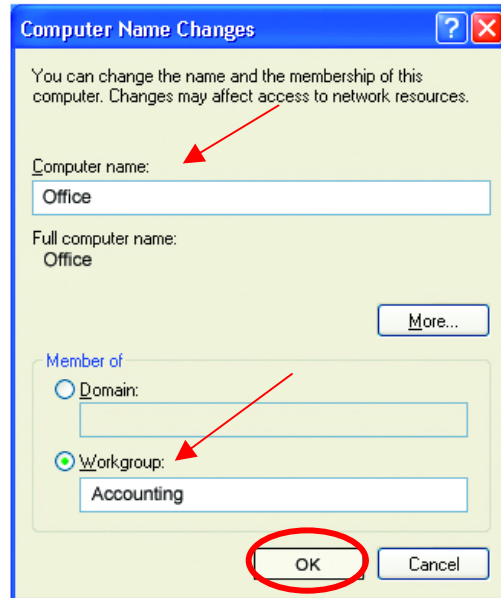

### Checking the IP Address in Windows XP/2000


Go to **Start > All Programs > Accessories > Command Prompt**



## Networking Basics (continued)

### Checking the IP Address in Windows XP/2000


Type **Command**

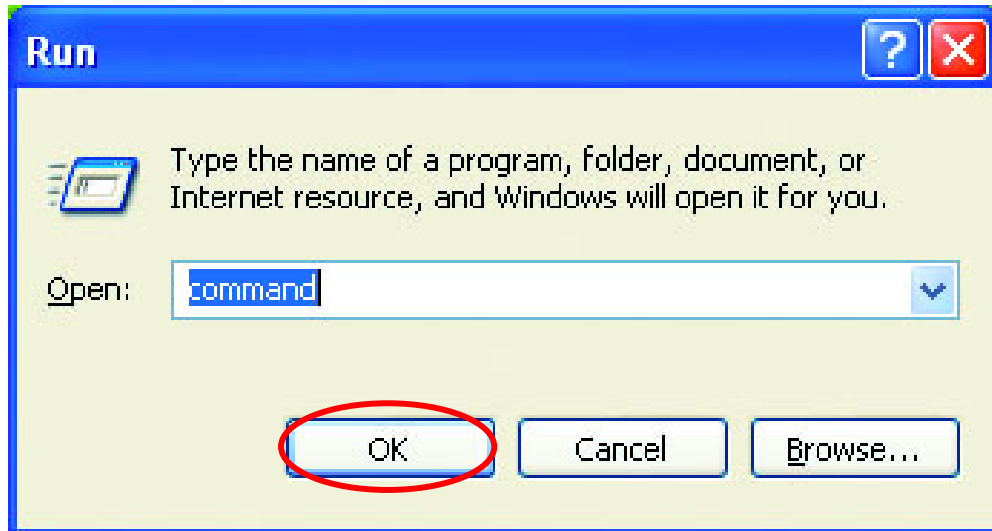

Click **OK**

### Checking the IP Address in Windows XP/2000


Type **ipconfig /all** at the prompt. Press **Enter**. All the configuration settings are displayed as shown below.

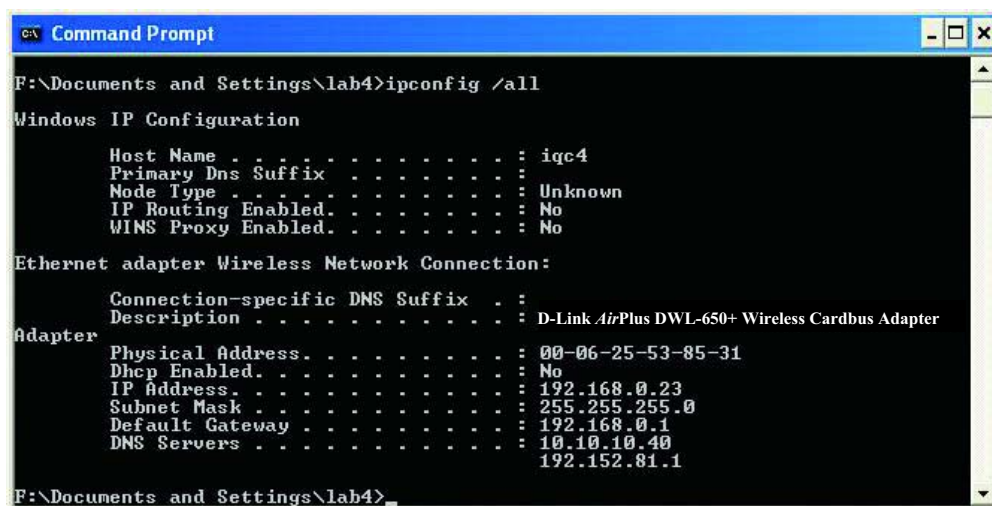

## Networking Basics (continued)

### Checking the IP Address in Windows XP/2000

Type **ipconfig /renew** at the prompt to get a new IP Address. Press **Enter**. The new IP Address is shown below.

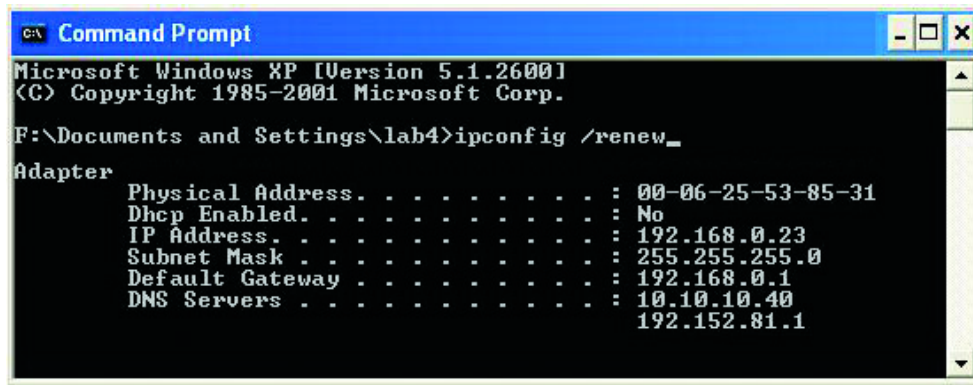

```
C:\ Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab4>ipconfig /renew_

Adapter
Physical Address. . . . . : 00-06-25-53-85-31
Dhcp Enabled. . . . . : No
IP Address. . . . . : 192.168.0.23
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.0.1
DNS Servers . . . . . : 10.10.10.40
                        192.152.81.1
```


(Windows 98/ME users: go to **Start > Run**. Type **winipcfg** at the prompt. The Windows IP Configuration menu will come up. Click **Release**, then **Renew** to obtain a new IP Address.)

### Assigning a Static IP Address

**Note:** Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Router you will not need to assign Static IP Addresses.

If you are not using a DHCP capable Gateway/Router, or you need to assign a Static IP Address, please follow these instructions:


- Go to **Start**
- Double-click on **Control Panel**

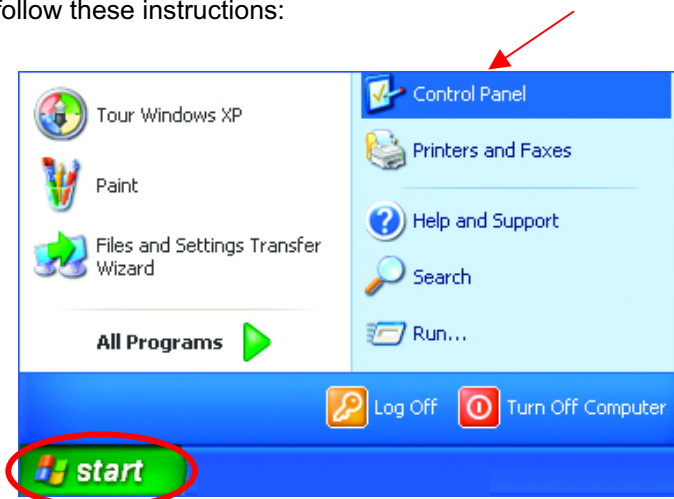


## Networking Basics (continued)

### Assigning a Static IP Address

- **Double-click on Network Connections**

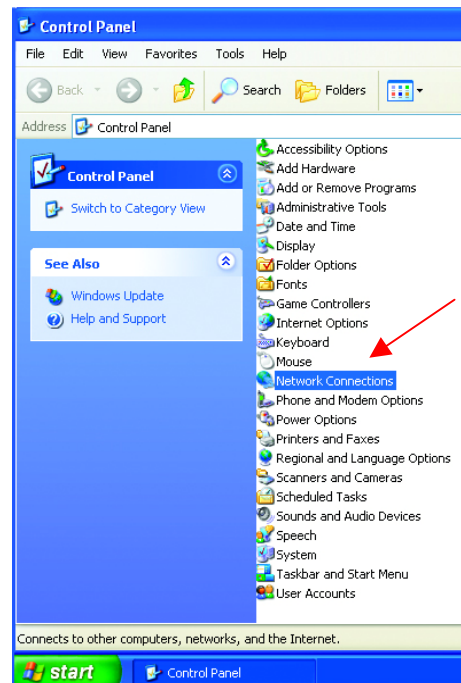

- **Right-click on Local Area Connections.**
- **Double-click Properties**


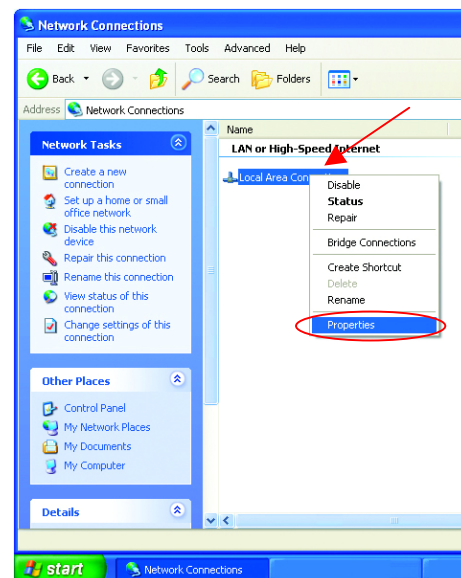


## Networking Basics (continued)

### Assigning a Static IP Address

- Click on **Internet Protocol (TCP/IP)**
- Click **Properties**
- **Select Use the following IP address** in the **Internet Protocol (TCP/IP) Properties** window,
- Input your **IP address and subnet mask**. (The IP Addresses on your network must be within the same range. For example, if one computer has an IP Address of 192.168.0.2, the other computers should have IP Addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)
- Input your **DNS server addresses**. (Note: If you are entering a DNS server, you must enter the IP Address of the Default Gateway.)

*The DNS server information will be provided by your ISP (Internet Service Provider.)*

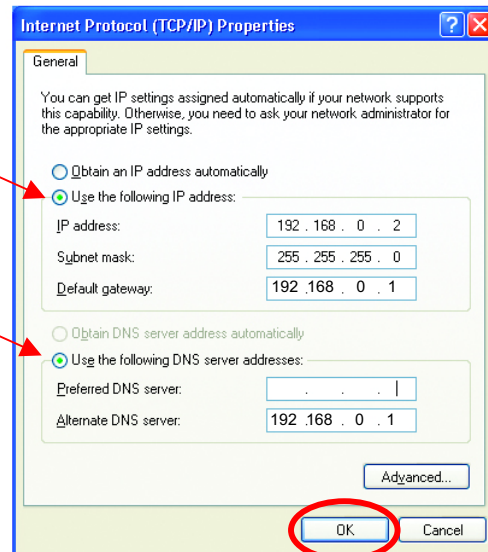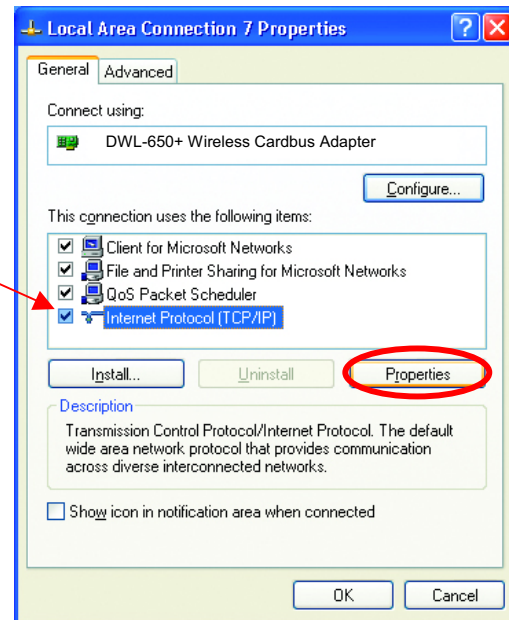

- Click **OK**  
You have completed the assignment of a Static IP Address. (You do not need to assign a Static IP Address if you have a DHCP-capable Gateway/Router.)



## Networking Basics (continued)

### Assigning a Static IP Address with *Macintosh OS X*


Go to the **Apple Menu** and select **System Preferences**.

Click on **Network**




Select **Built-in Ethernet** in the **Show** pull-down menu.

Select **Manually** in the **Configure** pull-down menu.

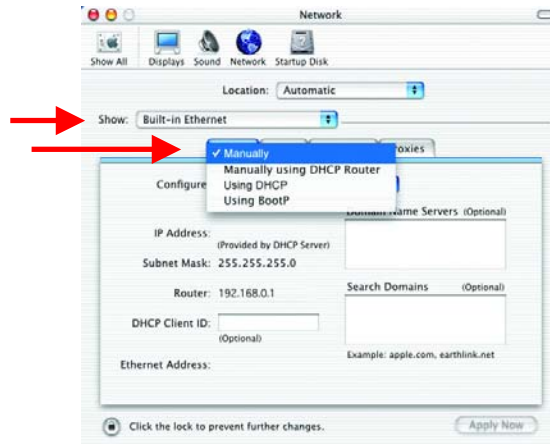

Input the **Static IP Address**, the **Subnet Mask** and the **Router IP Address** in the appropriate fields.

Click **Apply Now**

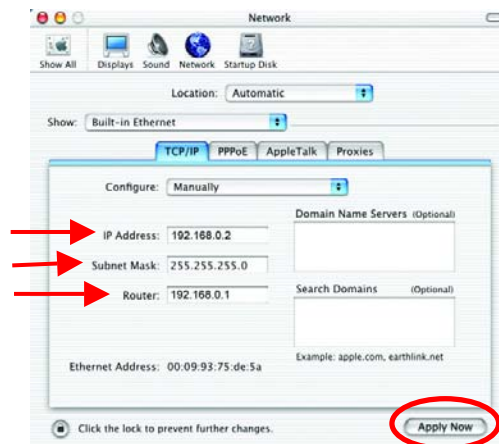

## Networking Basics (continued)

### Selecting a Dynamic IP Address with *Macintosh OS X*


Go to the **Apple Menu** and select **System Preferences**.

Click on **Network**




Select **Built-in Ethernet** in the **Show** pull-down menu.

Select **Using DHCP** in the **Configure** pull-down menu.

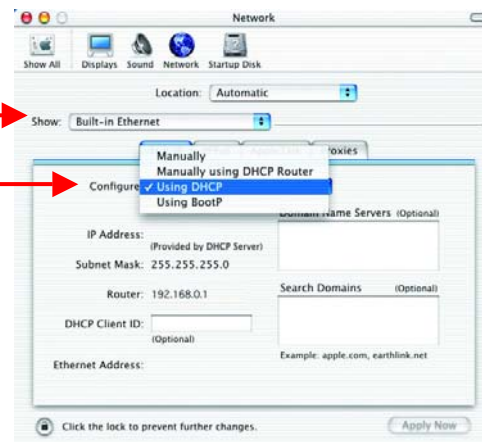

Click **Apply Now**

The **IP Address**, **Subnet mask**, and the **Router's IP Address** will appear in a few seconds.

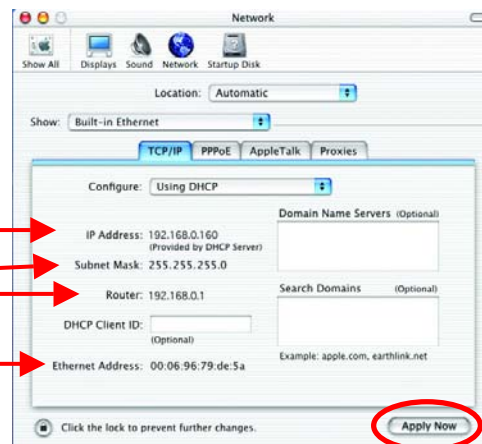




## Networking Basics (continued)

### Checking the Wireless Connection by Pinging For Windows XP and 2000:

Go to **Start > Run > type cmd**. A window similar to *Fig. 9.25* will appear. Type **ping xxx.xxx.xxx.xxx**, where **xxx** is the IP address of the Wireless Router or Access Point.

A good wireless connection will show four replies from the wireless router or access point, as shown.

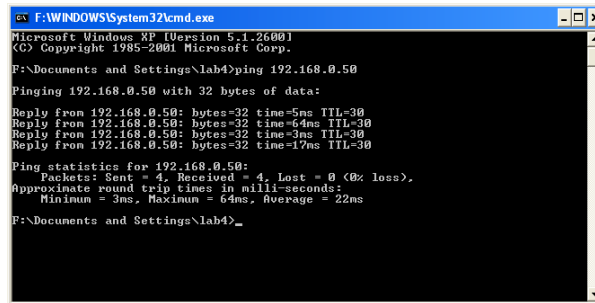

```
F:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab4>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:

Reply from 192.168.0.50: bytes=32 time=5ms TTL=30
Reply from 192.168.0.50: bytes=32 time=64ms TTL=30
Reply from 192.168.0.50: bytes=32 time=3ms TTL=30
Reply from 192.168.0.50: bytes=32 time=17ms TTL=30


Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 3ms, Maximum = 64ms, Average = 22ms

F:\Documents and Settings\lab4>
```

Fig. 8.35

### For Windows Me and 98:

Go to **Start > Run > type command**. A window similar to *Fig. 9.26* will appear. Type **ping xxx.xxx.xxx.xxx**, where **xxx** is the IP address of the Wireless Router or Access Point. A good wireless connection will show four replies from the wireless router or access point, as shown.

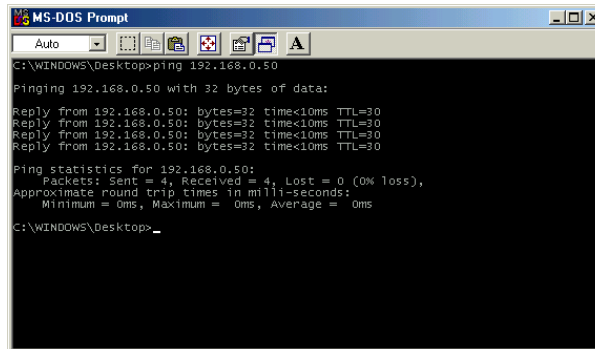

```
MS-DOS Prompt
C:\WINDOWS\Desktop>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:

Reply from 192.168.0.50: bytes=32 time<10ms TTL=30
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\WINDOWS\Desktop>
```

Fig. 8.36

## Adding and Sharing Printers in Windows XP

After you have run the **Network Setup Wizard** on all the computers in your network (please see the **Network Setup Wizard** section at the beginning of **Networking Basics**), you can use the **Add Printer Wizard** to add or share a printer on your network.

Whether you want to add a **local printer** (a printer connected directly to one computer,) share an **LPR printer** (a printer connected to a print server) or share a **network printer** (a printer connected to your network through a Gateway/Router,) use the **Add Printer Wizard**. Please follow the directions below:


## Networking Basics (continued)

### Adding a local printer


(A printer connected directly to a computer)

A printer that is not shared on the network and is connected directly to one computer is called a **local printer**. If you do not need to share your printer on a network, follow these directions to add the printer to one computer.

- Go to **Start> Printers and Faxes**

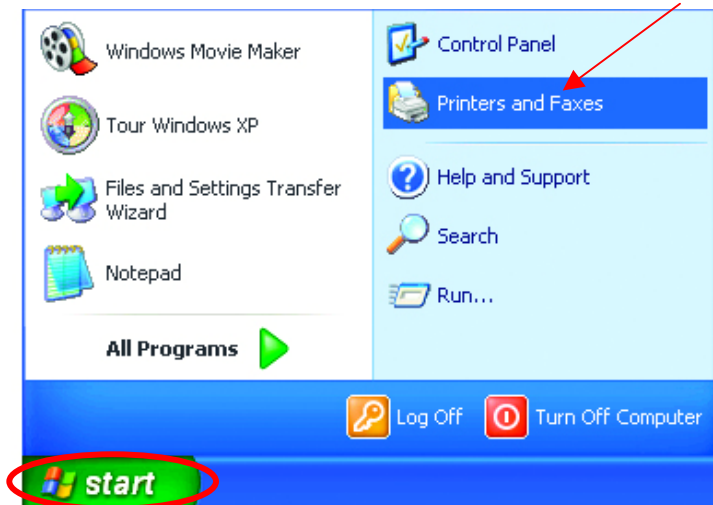


- Click on **Add a printer**

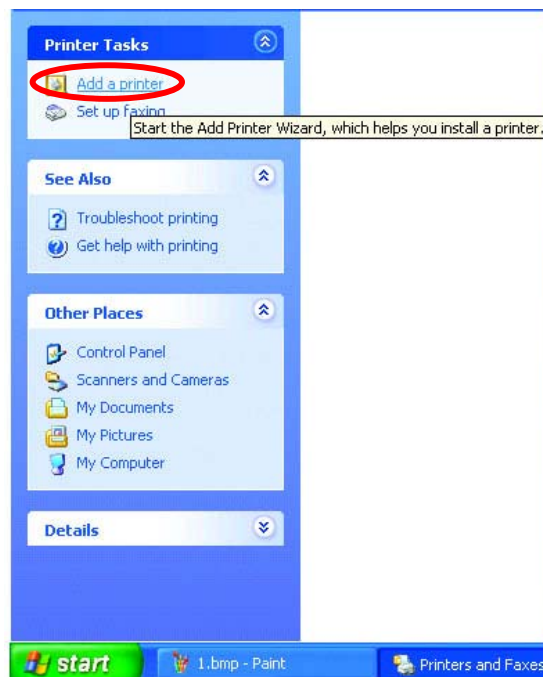


## Networking Basics (continued)

### Adding a local printer

- Click **Next**

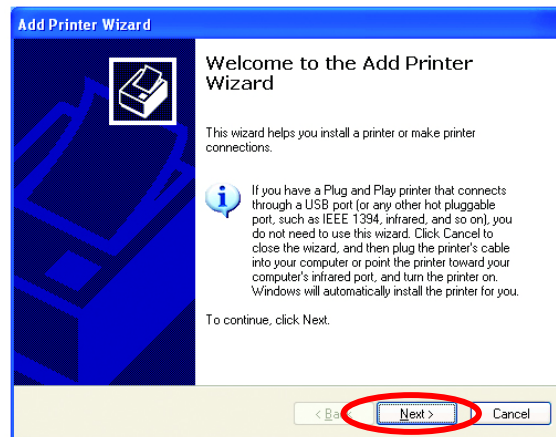

- Select **Local printer attached to this computer**
- *(Deselect **Automatically detect and install my Plug and Play printer** if it has been selected.)*

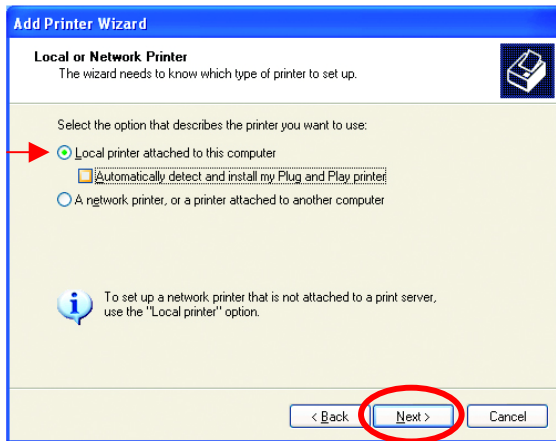


- Click **Next**

- Select **Use the following port:**
- From the pull-down menu **select the correct port** for your printer

*(Most computers use the **LPT1:** port, as shown in the illustration.)*

- Click **Next**

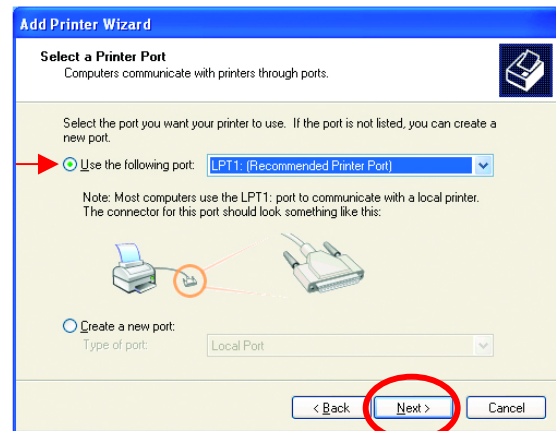


## Networking Basics (continued)

### Adding a local printer


- Select and highlight the **correct driver** for your printer.

- Click **Next**

*(If the correct driver is not displayed, insert the CD or floppy disk that came with your printer and click **Have Disk**.)*

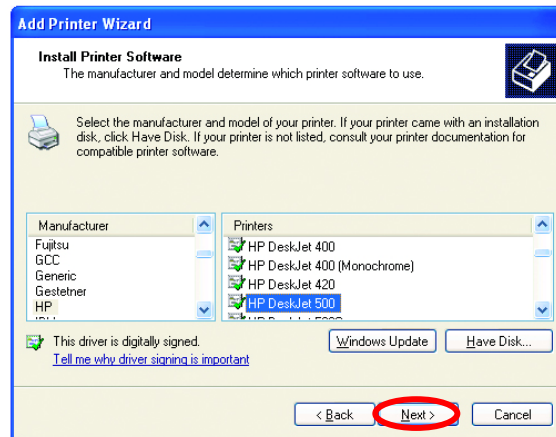


- At this screen, you can change the name of the printer (optional.)

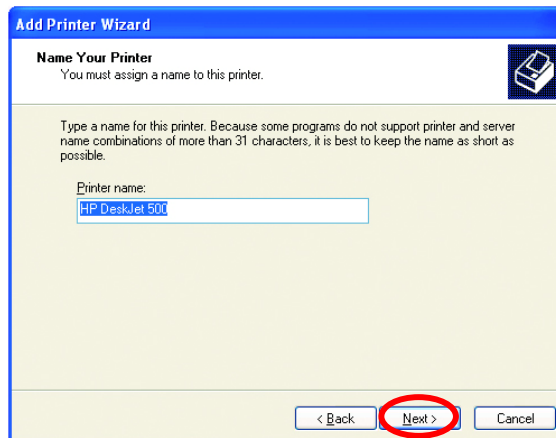

- Click **Next**

- Select **Yes**, to print a test page. A successful printing will confirm that you have chosen the correct driver.

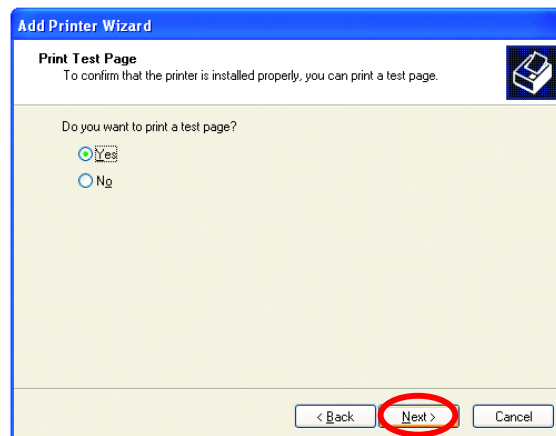


- Click **Next**

## Networking Basics (continued)


### *Adding a local printer*

This screen gives you information about your printer.

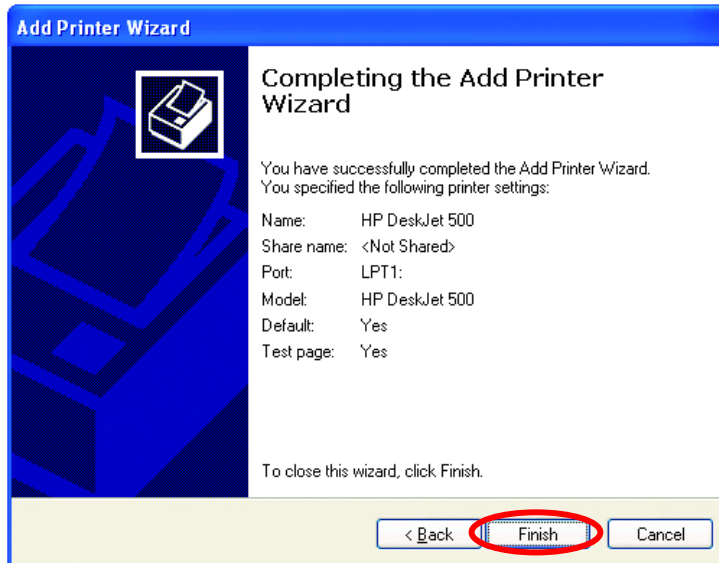

Click **Finish**

When the test page has printed,

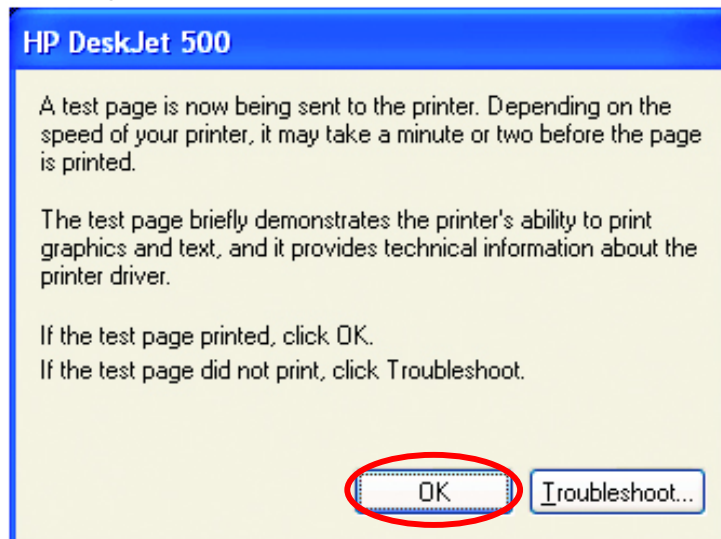

Click **OK**


## Networking Basics (continued)

### Adding a local printer

- Go to **Start> Printers and Faxes**

*A successful installation will display the printer icon as shown at right.*


You have successfully added a local printer.

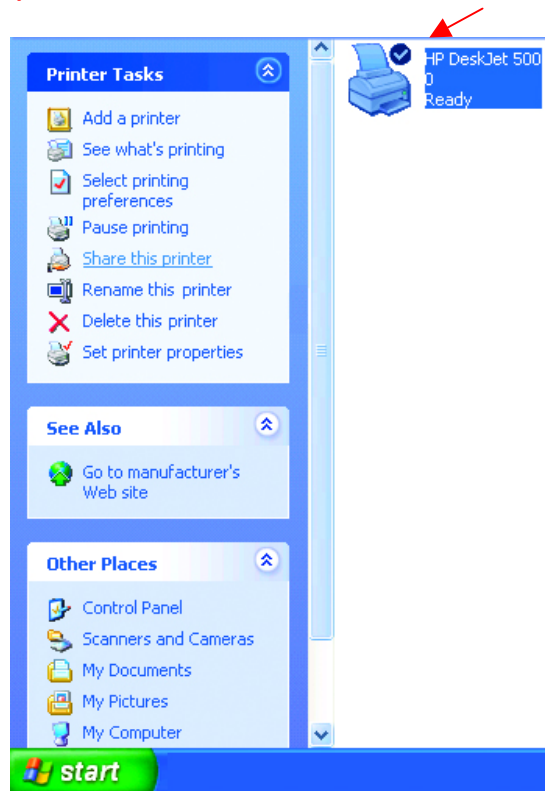

### Sharing a network printer

After you have run the **Network Setup Wizard** on all the computers on your network, you can run the **Add Printer Wizard** on all the computers on your network. Please follow these directions to use the **Add Printer Wizard** to share a printer on your network:


- Go to **Start> Printers and Faxes**

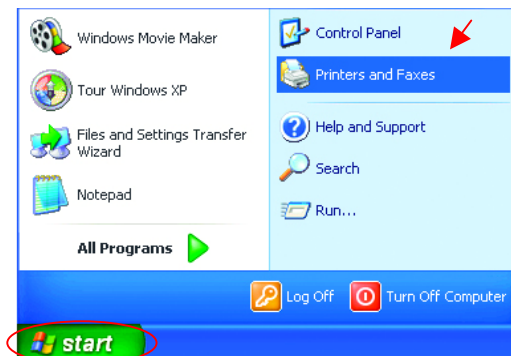


## Networking Basics (continued)

### Sharing a network printer


- Click on **Add a Printer**

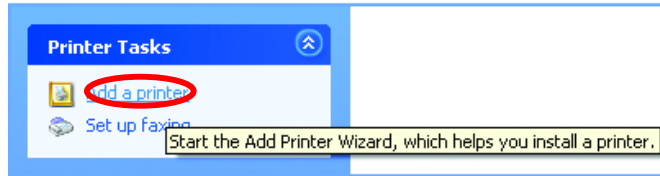

- Click **Next**

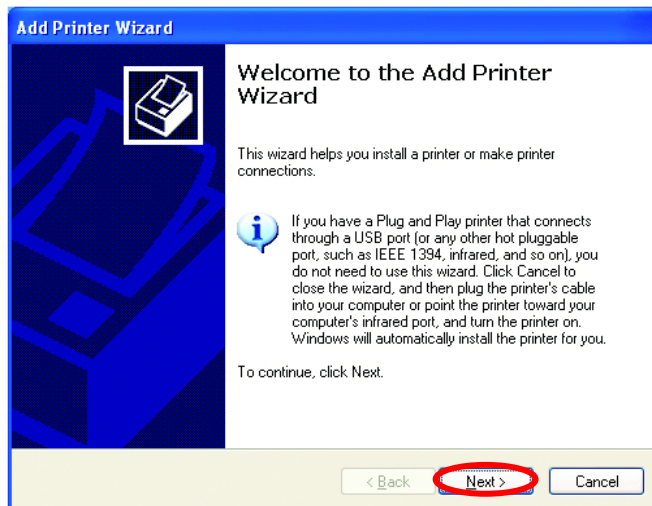

- Select **Network Printer**
- Click **Next**

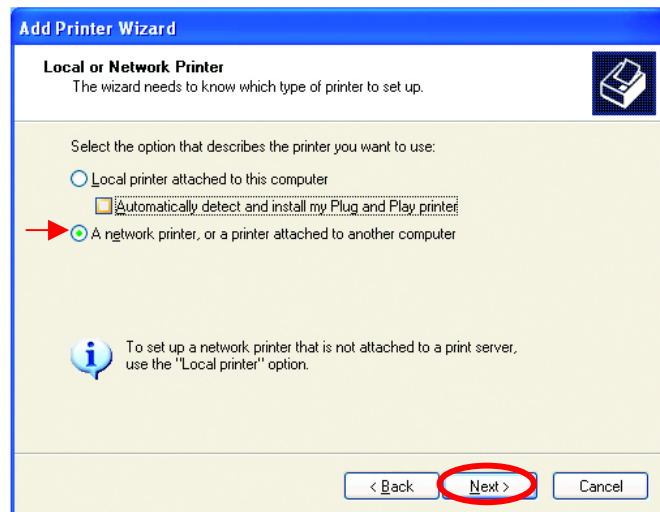




## Networking Basics (continued)


### Sharing a network printer

- Select **Browse for a printer**

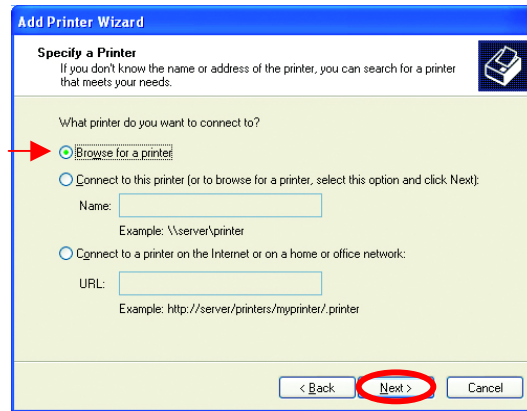

- Click **Next**

- Select the **printer** you would like to share.

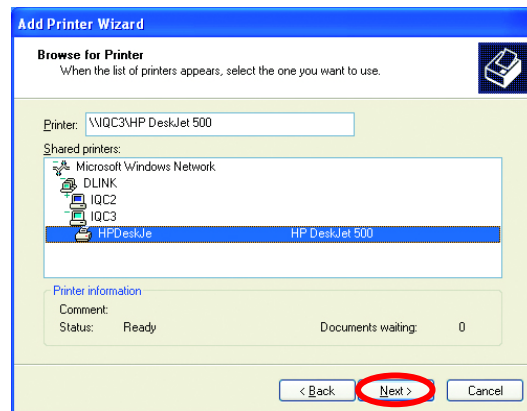

- Click **Next**

- Click **Finish**






## Networking Basics (continued)

### Sharing a network printer

To check for proper installation:

- Go to **Start> Printers and Faxes**

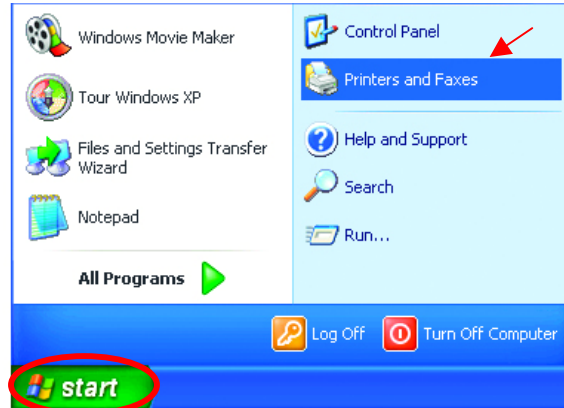


*The printer icon will appear at right, indicating proper installation.*

**You have completed adding the printer.**

*To share this printer on your network:*

- Remember the **printer name**
- Run the **Add Printer Wizard** on all the computers on your network.
- Make sure you have already run the **Network Setup Wizard** on all the network computers.

After you run the **Add Printer Wizard** on all the computers in the network, you can share the printer.

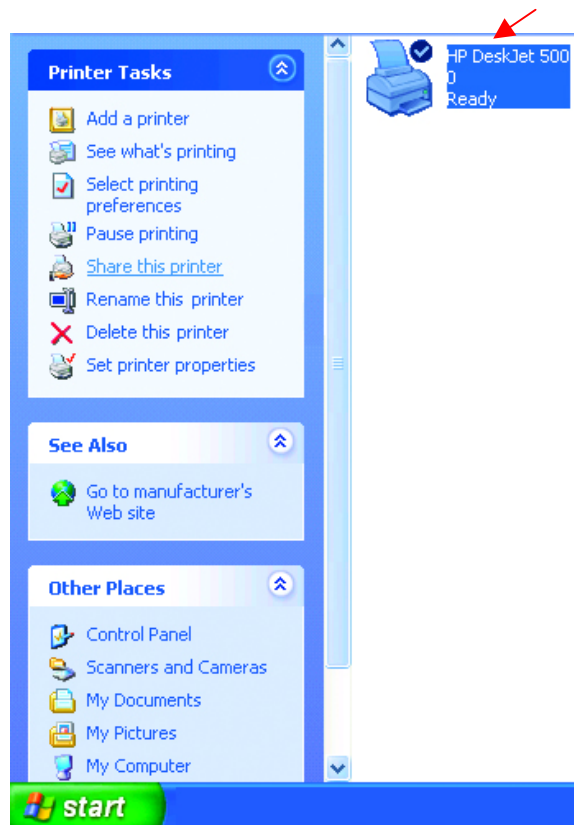

## Networking Basics (continued)


### Sharing an LPR printer

To share an **LPR printer** (using a print server,) you will need a Print Server such as the **DP-101P+**. Please make sure that you have run the **Network Setup Wizard** on all the computers on your network. To share an **LPR printer**, please follow these directions:


- Go to **Start> Printers and Faxes**
- Click on **Add a Printer**

The screen to the right will display.

- Click **Next**

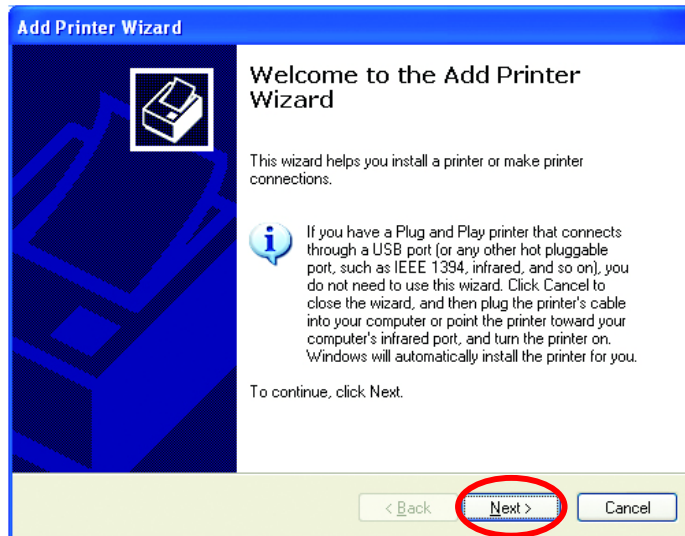

- Select **Local printer...**



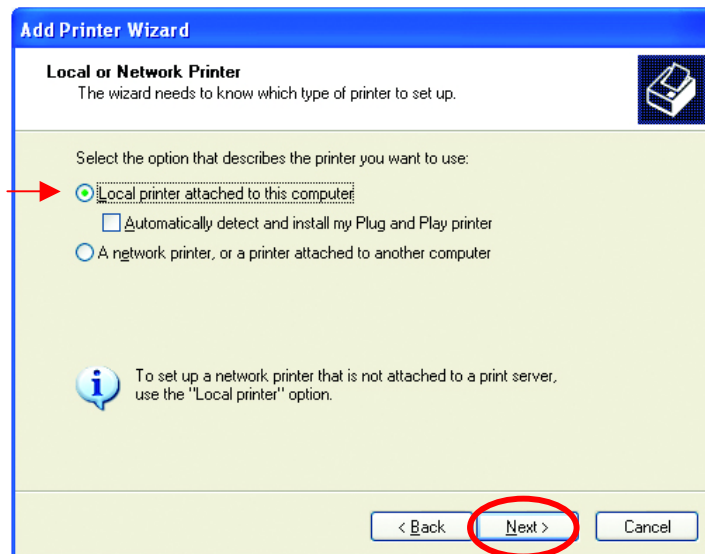


- Click **Next**

## Networking Basics (continued)

### Sharing an LPR printer

- Select **Create a new port**
- From the pull-down menu, select **Standard TCP/IP Port**, as shown.
- Click **Next**
- Please read the instructions on this screen.
- Click **Next**
- Enter the **Printer IP Address** and the **Port Name**, as shown.
- Click **Next**

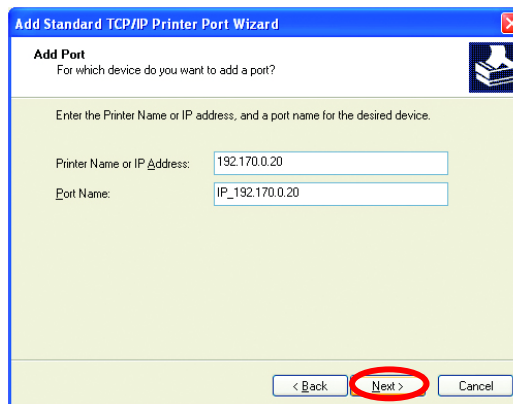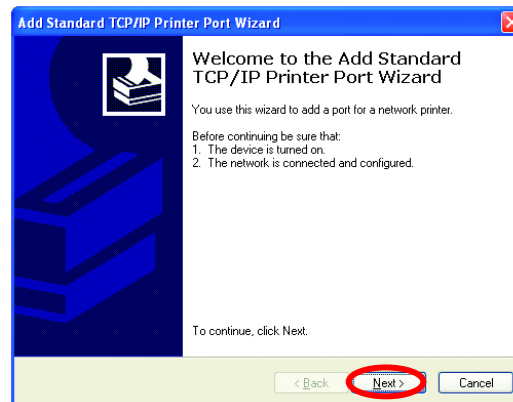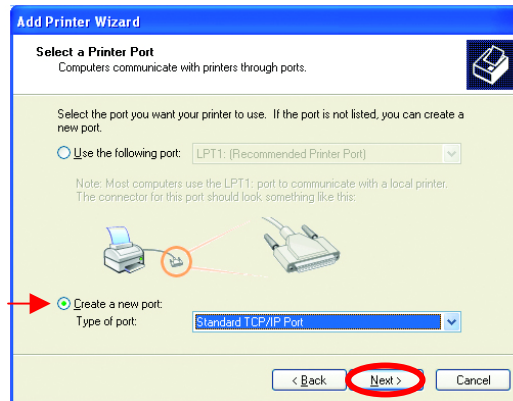


## Networking Basics (continued)

### Sharing an LPR printer

- In this screen, select **Custom**.

- Click **Settings**

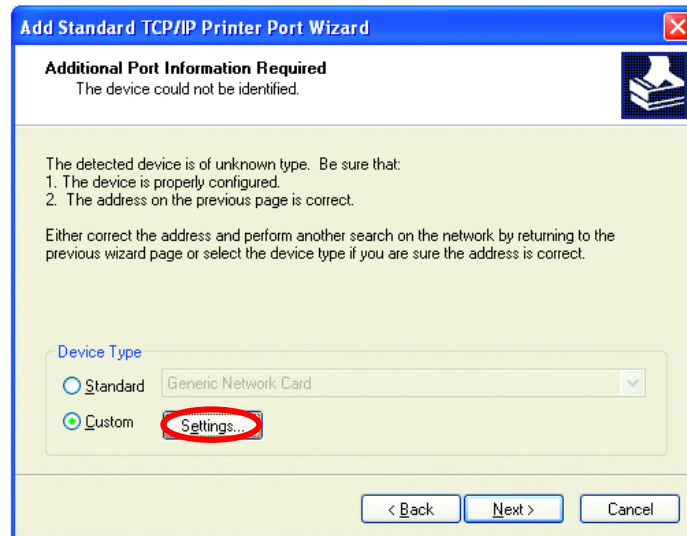


The dialog box is titled "Add Standard TCP/IP Printer Port Wizard". It has a blue title bar with a close button. The main area has a light yellow background. At the top, it says "Additional Port Information Required" and "The device could not be identified." Below this, it states: "The detected device is of unknown type. Be sure that: 1. The device is properly configured. 2. The address on the previous page is correct. Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct." There is a "Device Type" section with two radio buttons: "Standard" (selected) and "Custom" (unselected). Next to "Custom" is a button labeled "Settings...". At the bottom, there are three buttons: "< Back", "Next >", and "Cancel".

- Enter the **Port Name** and the **Printer Name or IP Address**.

- Select **LPR**

- Enter a **Queue Name** (if your Print-Server/ Gateway has more than one port, you will need a **Queue name**.)

- Click **OK**


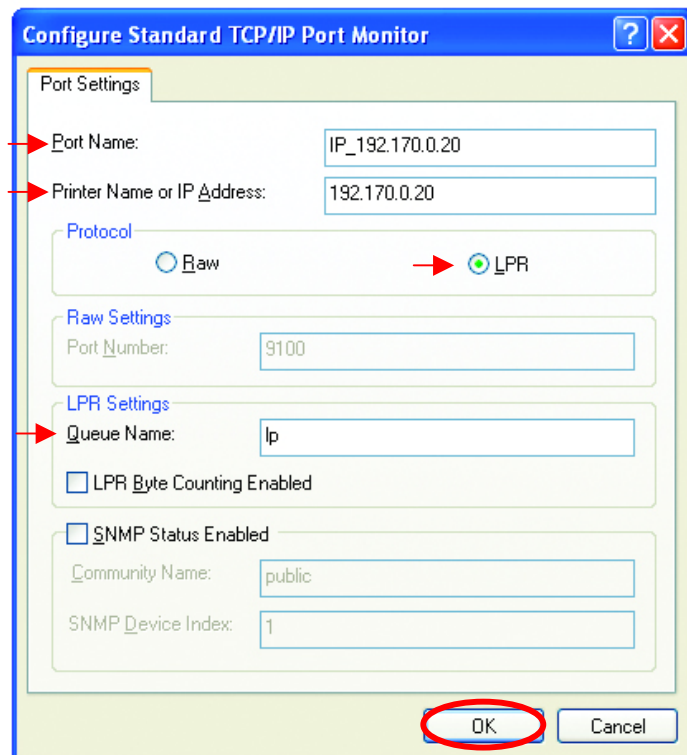


The dialog box is titled "Configure Standard TCP/IP Port Monitor". It has a blue title bar with a help button and a close button. The main area has a light yellow background. It has a tabbed interface with "Port Settings" selected. The "Port Settings" tab contains several fields: "Port Name:" with the value "IP\_192.170.0.20", "Printer Name or IP Address:" with the value "192.170.0.20", "Protocol:" with radio buttons for "Raw" (selected) and "LPR" (unselected), "Raw Settings:" with a "Port Number:" field containing "9100", "LPR Settings:" with a "Queue Name:" field containing "lp", and checkboxes for "LPR Byte Counting Enabled" and "SNMP Status Enabled". Below these are fields for "Community Name:" (containing "public") and "SNMP Device Index:" (containing "1"). At the bottom, there are two buttons: "OK" and "Cancel".

## Networking Basics (continued)


### Sharing an LPR printer

- This screen will show you information about your printer.
- Click **Finish**
- Select the **printer** you are adding from the list of **Printers**.
- Insert the printer driver disk that came with your printer.
- Click **Have Disk**

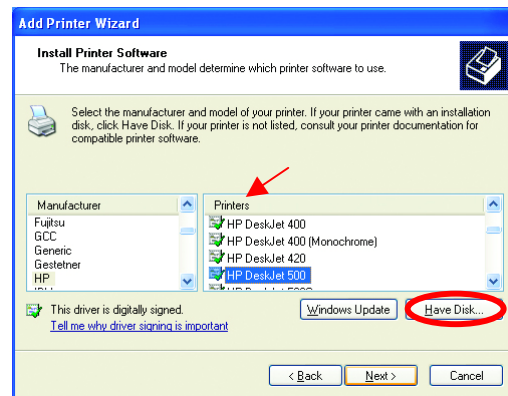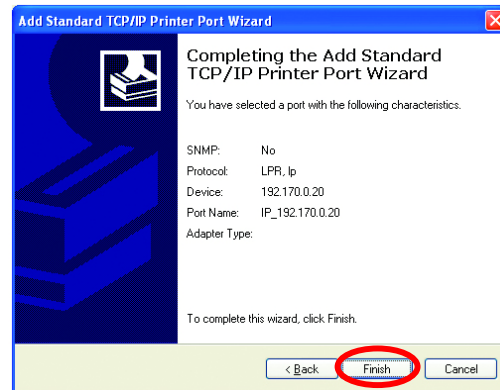

If the printer driver is already installed,

- Select **Keep existing driver**
- Click **Next**

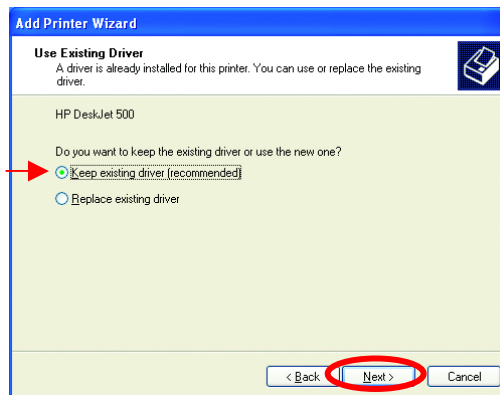

## Networking Basics (continued)

### Sharing an LPR printer

- You can rename your printer if you choose. It is optional.




*Please remember the name of your printer. You will need this information when you use the **Add Printer Wizard** on the other computers on your network.*

- Click **Next**
- Select **Yes**, to print a test page.

- Click **Next**

*This screen will display information about your printer.*

- Click **Finish** to complete the addition of the printer.
- Please run the **Add Printer Wizard** on all the computers on your network in order to share the printer.

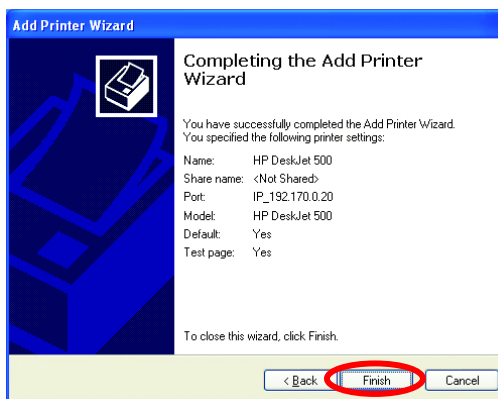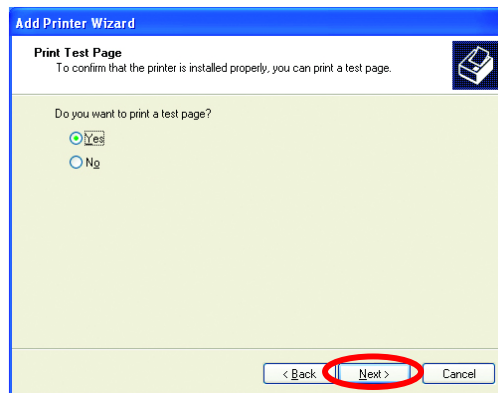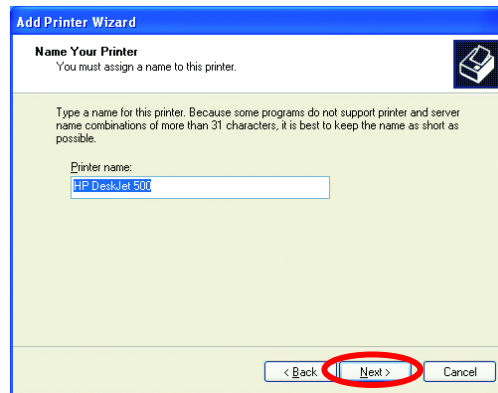

**Note:** You must run the **Network Setup Wizard** on all the computers on your network before you run the **Add Printer Wizard**.

## **Networking Basics (continued)**

### ***Other Tasks***

For help with other tasks in home or small office networking, see **Using the Shared Documents** folder and **Sharing files and folders** in the **Help and Support Center** in Microsoft Windows XP.

## **9. Technical Specifications**

### **Standards**

- IEEE 802.11b
- IEEE 802.3
- IEEE 802.3u

### **Ports**

- 10/100Base-T Ethernet, RJ-45 (UTP)
- Power – 5V DC, 2.0A

### **Network Management**

- Web-Based browser with JavaScript

### **Frequency Range**

- 2.4 – 2.4835 GHz, Direct Sequence Spread Spectrum (DSSS)

### **Data Rates (Mbps : Channel)**

- 11 : CCK
- 5.5: CCK
- 2: Barker
- 1: Barker

### **Data Security**

- 64, 128-bit WEP (Wired Equivalent Privacy) Encryption
- Access Control List

### **Diagnostic LED**

- Power
- Link
- WLAN

**Antenna Type**

- Detachable Reverse SMA

**Range**

- Indoors – up to 328 feet (100 meters)
- Outdoors – up to 1,312 feet (400 meters)

**Temperature**

- Operating: -10°C to 55°C (14°F to 131°F)
- Storing: -20°C to 65°C (-4°F to 149°F)

**Humidity:**

- 5%-95%, non-condensing

**Emissions:**

- FCC part 15b
- CE



## 10. Contacting Technical Support

### Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link Technical Support through our website, or by phone.

#### Tech Support for customers within the United States:

***D-Link Technical Support over the Telephone:***

(877) 453-5465

24 hours a day, seven days a week.

***D-Link Technical Support over the Internet:***

<http://support.dlink.com>

email: [support@dlink.com](mailto:support@dlink.com)

#### Tech Support for customers within Canada:

***D-Link Technical Support over the Telephone:***

(800) 361-5265

Monday to Friday 8:30am to 9:00pm EST

***D-Link Technical Support over the Internet:***

<http://support.dlink.ca>

email: [support@dlink.ca](mailto:support@dlink.ca)

## 11. Warranty and Registration (USA only)

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

**Limited Warranty:** D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

3-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) Three (3) Years
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

**Limited Software Warranty:** D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

**Non-Applicability of Warranty:** The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

**Submitting A Claim:** The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the

product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.
- Return Merchandise Ship-To Address  
**USA:** 53 Discovery Drive, Irvine, CA 92618  
**Canada:** 2180 Winston Park Drive, Oakville, ON, L6H 5W1 (Visit <http://www.dlink.ca> for detailed warranty information within Canada)

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

**What Is Not Covered:** This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

**Disclaimer of Other Warranties:** EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

**Limitation of Liability:** TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY

**Governing Law:** This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

**Trademarks:** D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

**Copyright Statement:** *No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright© 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.*

**CE Mark Warning:** This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

(1) The devices are restricted to indoor operations within the 5.15 to 5.25GHz range. (2) For this device to operate in the 5.15 to 5.25GHz range, the devices must use integral antennas.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least eight inches (20 cm) from all persons.

This equipment must not be operated in conjunction with any other antenna.

**For detailed warranty outside the United States, please contact corresponding local D-Link office.**

Register your D-Link product online at <http://support.dlink.com/register/>