

Multi Channel AV Receiver

Operating Instructions..... 

Mode d'emploi..... 

STR-DA4400ES

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.


To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

For customers in the United States

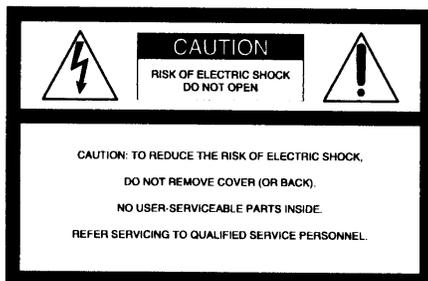

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner’s Record

The model and serial numbers are located on the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note to CATV system installer:

This reminder is provided to call CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

About This Manual

- The instructions in this manual are for model STR-DA4400ES. Check your model number by looking at the lower right corner of the front panel.
- The instructions in this manual describe the controls on the supplied remote. You can also use the controls on the receiver if they have the same or similar names as those on the remote.

On Copyrights

- “Neural-THX” and “neural THX” introduced in the Operating Instructions and displayed in the display window and on the GUI menu screen mean Neural-THX Surround.

This receiver incorporates Dolby* Digital and Pro Logic Surround and the DTS** Digital Surround System.

- * Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic, Surround EX, and the double-D symbol are trademarks of Dolby Laboratories.
- ** Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

This receiver incorporates High-Definition Multimedia Interface (HDMI™) technology.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

XM Ready® is a registered trademark of XM Satellite Radio Inc. All rights reserved.

©2008 SIRIUS Satellite Radio Inc. “SIRIUS” and the SIRIUS dog logo are registered trademarks of SIRIUS Satellite Radio Inc.

This product using Neural-THX® Surround is manufactured under license from Neural Audio Corporation and THX Ltd. Sony Corporation hereby grants the user a non-exclusive, non-transferable, limited right of use to this product under USA and foreign patent, patent pending and other technology or trademarks owned by Neural Audio Corporation and THX Ltd. “Neural Surround”, “Neural Audio”, “Neural” and “NRL” are trademarks and logos owned by Neural Audio Corporation, THX is a trademark of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

The font type (Shin Go R) installed in this receiver is provided by MORISAWA & COMPANY LTD. These names are the trademarks of MORISAWA & COMPANY LTD., and the copyright of the font also belongs to MORISAWA & COMPANY LTD.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. All other trademarks and registered trademarks are of their respective holders. In this manual, ™ and ® marks are not specified.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

“M-crew Server” is a trademark of Sony Corporation.

“BRAVIA” is a trademark of Sony Corporation.

GB

Table of Contents

Getting Started

1: Installing speakers	19
2: Connecting speakers	21
3: Connecting the monitor	23
4a: Connecting the audio components	25
4b: Connecting the video components	30
5: Connecting the antennas (aerials)	39
6: Preparing the receiver and the remote	40
7: Displaying the GUI menu on the TV screen	41
8: Setting the speakers	42
9: Calibrating the appropriate speaker settings automatically (Auto Calibration)	44
Guide to on-screen display operation	51

Playback

Enjoying sound/images from the component connected to the receiver	53
Enjoying sound/images from the components connected to the DIGITAL MEDIA PORT	55
Operating the TDM-iP1/iP50/TDM-NC1 using the GUI menu of the receiver	56

Tuning

Listening to FM/AM radio	60
Presetting FM/AM radio stations	62
Listening to satellite radio	63
Connecting a satellite radio tuner	65
Preparing to listen to a satellite radio	65
Selecting a channel of the satellite radio	67
Presetting satellite radio channels	68
Restricting access to specific channels (Parental Lock) (SIRIUS only)	69

Enjoying Surround Sound

Playing back with 2-channel sound	73
Playing back with multi-channel surround	74
Enjoying a surround effect for music	77
Enjoying a surround effect for movies	79

Using Multi-zone Features

What you can do with the Multi-zone function	83
Making a multi-zone connection	84
Setting the speakers in zone 2	86
Switching the zone setting of the remote ...	87
Operating the receiver from another zone (ZONE 2/ZONE 3 operations)	87

Using Other Features

Using “BRAVIA” Sync features	89
Switching between digital and analog audio	92
Enjoying the sound/images from other inputs (Input Assign)	93
Using the sleep timer	96
Enjoying the surround effect at low volume levels	96
Recording using the receiver	97
Switching the command mode of the receiver and the remote	99
Using a bi-amplifier connection	100

Adjusting Settings

Using the setting menu	102
Auto Calibration	103
Speaker settings	105
Surround settings	109
EQ settings	110
Multi Zone settings	111
Audio settings	112
Video settings	113
HDMI settings	115
System settings	116
Operating without connecting to a TV	116

Using the Remote


Operating each component using the remote	122
Programming the remote	124
Performing several commands in sequence automatically (Macro Play)	127
Setting remote commander codes that are not stored in the remote	129
Clearing all the contents of the remote's memory	131

Additional Information

Glossary	132
Precautions	135
Troubleshooting	136
Specifications	141
Index	143

Description and location of parts

Front panel

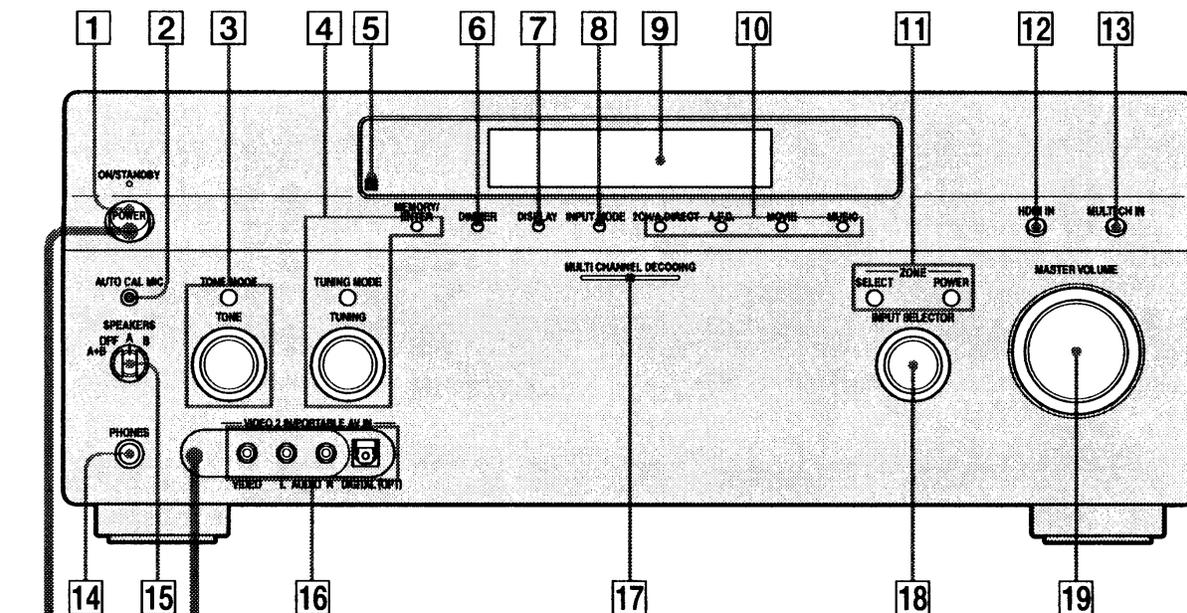

To remove the cover

Press PUSH.

When you remove the cover, keep it out of reach from children.

Status of the POWER button

Off

The receiver is turned off (initial setting).

Press POWER to turn the receiver on.

You cannot turn the receiver on using the remote.



On/Standby

Press I/⏻ on the remote to turn the receiver on or set it to the standby mode.

When you press POWER on the receiver, the receiver will be turned off.


Name	Function
1 POWER	Press to turn the receiver on or off.
2 AUTO CAL MIC jack	Connects to the supplied optimizer microphone for the Digital Cinema Auto Calibration function (page 45).
3 TONE MODE TONE	Adjusts FRONT/CENTER/SURROUND/SURROUND BACK BASS and TREBLE. Press TONE MODE repeatedly to select BASS or TREBLE, then turn TONE to adjust the level.
4 MEMORY/ ENTER TUNING MODE TUNING	Press to operate a tuner (FM/AM) and satellite radio (XM/SIRIUS).
5 Remote sensor	Receives signals from remote commander.
6 DIMMER	Press repeatedly to adjust brightness of the display.
7 DISPLAY	Press repeatedly to select information displayed on the display.
8 INPUT MODE	Press to select the input mode when the same components are connected to both digital and analog jacks (page 92).
9 Display window	The current status of the selected component or a list of selectable items appears here (page 9).

Name	Function
10 2CH/A.DIRECT A.F.D. MOVIE MUSIC	Press to select sound field (page 73, 74, 77, 79).
11 ZONE/ POWER, SELECT	Press SELECT repeatedly to select zone 2, zone 3 or main zone. Each time you press POWER, the output signals for the selected zone will be turned on or off (page 83).
12 HDMI IN	Press to select the input signal from the component connected to the HDMI IN jacks (page 31).
13 MULTI IN	Press to select the component connected to the MULTI CHANNEL INPUT jack (page 28).
14 PHONES jack	Connects to headphones.
15 SPEAKERS (OFF/A/B/A+B)	Switch to OFF, A, B, A+B of the front speakers (page 44).
16 VIDEO 2 IN/ PORTABLE AV IN jacks	Connect to a portable audio/video component such as a camcorder or video game.
17 MULTI CHANNEL DECODING lamp	Lights up when multi-channel audio signals are decoded.


continued 

Name	Function
18 INPUT SELECTOR	Turn to select the input source to play back. To select the input source for zone 2 or zone 3, press ZONE/SELECT (11) to select zone 2 or zone 3 first (“ZONE 2 INPUT” or “ZONE 3 INPUT” appears on the display), then turn INPUT SELECTOR to select the input source.
19 MASTER VOLUME	Turn to adjust the volume level of all speakers at the same time.

Indicators on the display

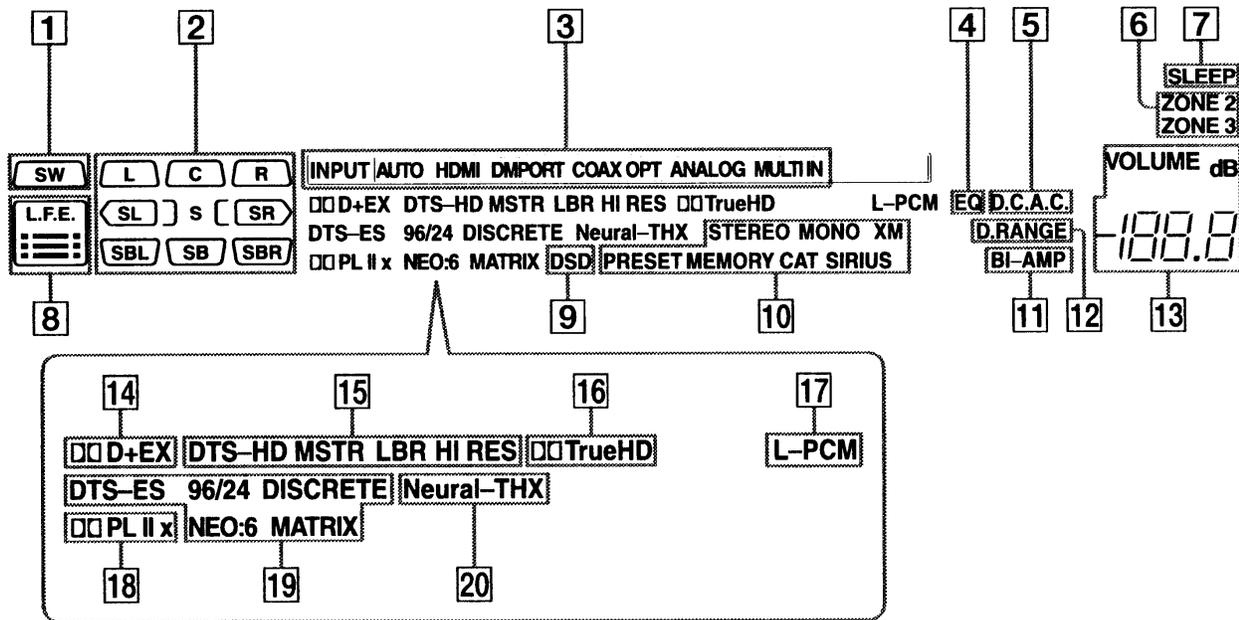

Name	Function
1 SW	Lights up when subwoofer is connected and the audio signal is output from the SUBWOOFER jack. While this indicator lights up, the receiver creates a subwoofer signal based on the L.F.E. signal in the disc being played back or the low frequency components of the front channels.

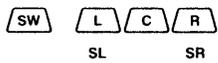Name	Function
2 Playback channel indicators	The letters (L, C, R, etc.) indicate the channels being played back. The boxes around the letters vary to show how the receiver downmixes the source sound (based on the speaker settings).
L	Front Left
R	Front Right
C	Center (monaural)
SL	Surround Left
SR	Surround Right
S	Surround (monaural or the surround components obtained by Pro Logic processing)
SBL	Surround Back Left
SBR	Surround Back Right
SB	Surround Back (the surround back components obtained by 6.1 channel decoding)
	Example: Recording format (Front/Surround): 3/2.1 Output channel: Surround speakers are set to "NO." Sound Field: A.F.D. AUTO
	


Name	Function
3 Input indicators	Light up to indicate the current input.
INPUT	Lights up constantly with either following the corresponding indicators that indicate the current input status.
HDMI	The receiver recognizes a component connected via an HDMI IN jacks.
DMPORT	The DIGITAL MEDIA PORT adapter is connected and "DMPORT" is selected.
MULTI IN	The multi-channel input is selected.
AUTO	Lights up with the corresponding indicators that indicate the current input when INPUT MODE is set to "Auto."
COAX	Digital signal is input through the COAXIAL jack.
OPT	Digital signal is input through the OPTICAL jack.
ANALOG	No digital signal is being input. When INPUT MODE is set to "Analog," or when the "2ch Analog Direct" is being selected, it also lights up.
4 EQ	Lights up when the equalizer is activated.
5 D.C.A.C.	Lights up when auto calibration is activated.
6 ZONE 2/ ZONE 3	Lights up while operation in zone 2/zone 3 is being enabled.
7 SLEEP	Lights up when the sleep timer is activated.

Name	Function
8 L.F.E.	Lights up when the disc being played back contains an L.F.E. (Low Frequency Effects) channel and the L.F.E. channel signal is actually being reproduced, the bars underneath the letters light up to indicate the level. Since the L.F.E. signal is not recorded in all parts of the input signal the bar indication will fluctuate (and may turn off) during playback.
9 DSD	Lights up when the receiver is receiving DSD (Direct Stream Digital) signals (page 31).
10 Tuning indicators	Lights up when the receiver tunes in radio stations, or satellite radio stations.
STEREO	Stereo broadcast
MONO	Monaural broadcast
XM	The XM Mini Tuner and Home Dock are connected and "XM" is selected.
SIRIUS	The SiriusConnect Home tuner is connected and "SIRIUS" is selected.
CAT	The category mode is selected during the satellite radio operation.
PRESET	The tuning mode is set to the preset mode.
MEMORY	A memory function, such as Name Input, etc., is activated.
11 BI-AMP	Lights up when surround back speakers selection is set to "BI-AMP."

Name	Function
12 D.RANGE	Lights up when dynamic range compression is activated.
13 VOLUME	Displays the current volume.
14 Dolby Digital Surround indicators	Lights up one of the respective indicators when the receiver is decoding the corresponding Dolby Digital format signals.
DD	Dolby Digital
DD+	Dolby Digital Plus
DD EX	Dolby Digital Surround EX
	Note When playing a Dolby Digital format disc, be sure that you have made digital connections and that INPUT MODE is not set to "Analog."
15 DTS-HD indicators	Light up when the receiver is decoding DTS-HD.
DTS-HD	Lights up constantly with the one of the following indicators.
MSTR	DTS-HD Master Audio
LBR	DTS-HD Low Bit Rate Audio
HI RES	DTS-HD High Resolution Audio
16 DD TrueHD	Lights up when the receiver is decoding Dolby TrueHD.
17 L-PCM	Lights up when Linear PCM (Pulse Code Modulation) signals are input.

Name	Function
18 Dolby Pro Logic indicators	Lights up one of the respective indicators when the receiver applies Dolby Pro Logic processing to 2 channel signals in order to output the center and surround channel signals.
□□PL	Dolby Pro Logic
□□PLII	Dolby Pro Logic II
□□PLIIx	Dolby Pro Logic IIx Note This indicator does not light when either the center speaker and surround speaker is not connected.
19 DTS(-ES) indicators	Light up when DTS or DTS-ES signals are input.
DTS	Lights up when the receiver is decoding DTS signals. Either 96/24 or NEO:6 also lights up depending on the input signal format or decoding format.
96/24	DTS 96/24 (96 kHz/24 bit) decoding
NEO:6	DTS Neo:6 Cinema/Music
DTS-ES	Lights up with the either following indicator depending on the input signal decoding format.
DISCRETE	DTS-ES Discrete 6.1
MATRIX	DTS-ES Matrix 6.1 Note When playing a DTS format disc, be sure that you have made digital connections and that INPUT MODE is not set to "Analog."
20 Neural-THX	Lights up when the receiver applies Neural-THX processing to input signals.

Rear panel

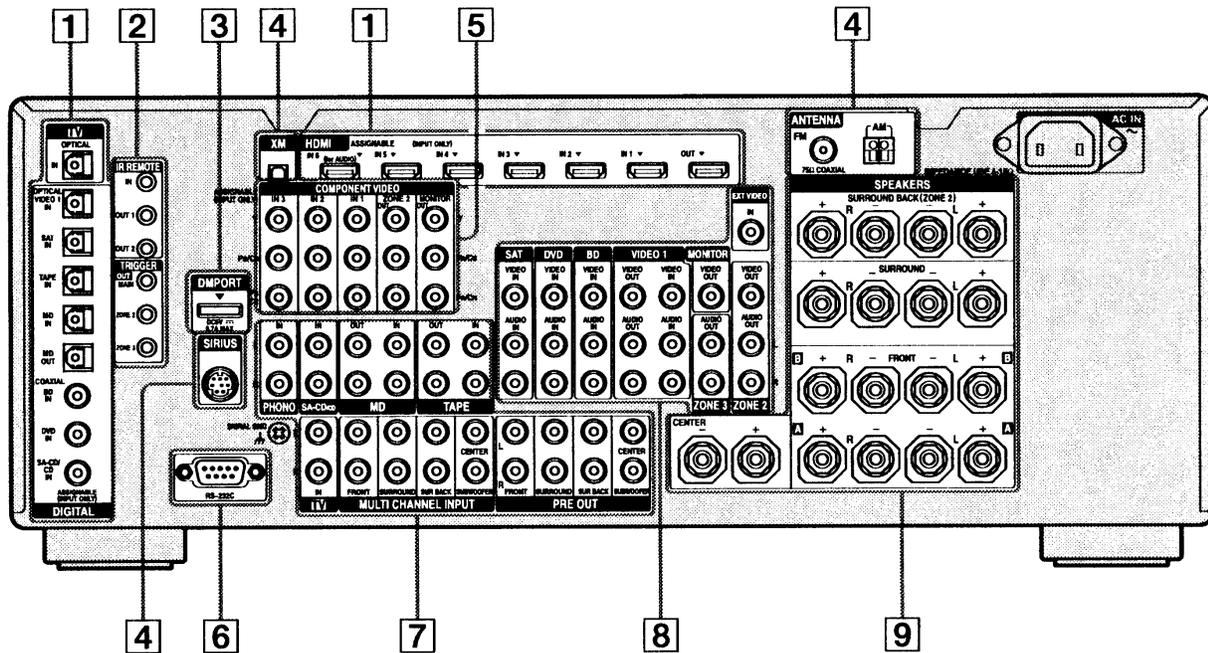


1 DIGITAL INPUT/OUTPUT section



OPTICAL IN/OUT jacks Connect to a DVD player, Super Audio CD player, etc. The



COAXIAL IN jacks provides a better quality sound (page 23, 26, 31, 34, 35).

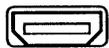

HDMI IN/OUT* jacks Connect to a DVD player, Blu-ray Disc Player, or a satellite tuner. An image and the sound are output to TV or a projector (page 23, 31).

2 Control jacks for Sony equipment and other external components




IR REMOTE IN/OUT jacks Connect an IR repeater (page 83).



TRIGGER OUT jacks Connect to interlock on/off of the power supply of other 12V TRIGGER compliant components, or the amplifier/receiver of zone 2 or zone 3 (page 111).

3 DMPORT

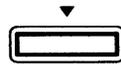

Connect to a Sony DIGITAL MEDIA PORT adapter (page 26).

4 ANTENNA section



FM ANTENNA jack Connects to the FM wire antenna (aerial) supplied with this receiver (page 39).



AM ANTENNA jack Connects to the AM loop antenna (aerial) supplied with this receiver (page 39).



XM jack Connects to the XM Mini Tuner and Home Dock (not supplied) (page 65).




SIRIUS jack Connects to a SiriusConnect Home tuner (not supplied) (page 65).

5 COMPONENT VIDEO INPUT/OUTPUT section

 Y	Y, P _B /C _B , P _R /C _R IN/OUT* jacks	Connect to a DVD player, TV, or a satellite tuner (page 23, 34, 35).
		
		

6 RS-232C port

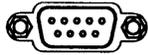

Used for maintenance and service.

7 AUDIO INPUT/OUTPUT section

L 	AUDIO IN/OUT jacks	Connect to a tape deck or MD deck, etc (page 26, 29).
R 		



MULTI CHANNEL INPUT jacks
Connect to a Super Audio CD player or DVD player with an analog audio jack for 7.1 channel or 5.1 channel sound (page 28).



PRE OUT jacks Connect to an external power amplifier.

8 VIDEO/AUDIO INPUT/OUTPUT section

L 	AUDIO IN/OUT jacks	Connect to a VCR or a DVD player etc. (page 23, 34, 35, 36).
R 		

 VIDEO IN/OUT* jacks



AUDIO OUT jacks
VIDEO OUT jack
Connect to the component in zone 2 or zone 3 (page 83).



EXT VIDEO IN jack Connects to the component when you want to watch in PIP (Picture in Picture) window.

9 SPEAKERS section



Connects to speakers (page 21).


* You can watch the selected input image when you connect the HDMI OUT jack or MONITOR OUT jacks to a TV (page 23). You can operate this receiver using a GUI (Graphical User Interface) (page 41).

Remote commander

You can use the supplied remote to operate the receiver and to control the Sony audio/video components that the remote is assigned to operate.

Main remote commander (RM-AAL016)


The RM-AAL016 remote is used for illustration purpose.

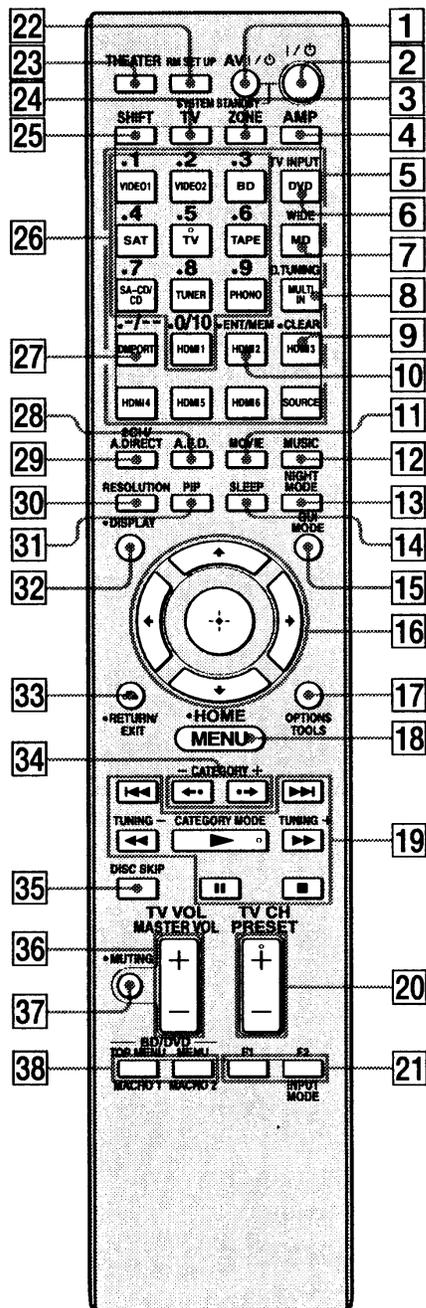

Name	Function
1 AV I/O (on/standby)	Press to turn on or off the audio/video components that the remote is assigned to operate (page 124). If you press I/O (2) button at the same time, it will turn off the receiver and other Sony components (SYSTEM STANDBY). Note The function of the AV I/O switch changes automatically each time you press the input button (5).
2 I/O (on/standby)	Press to turn the receiver on or off. If zone 2 or zone 3 is selected, only the main receiver is turned on or off with this button. To turn off all components including an amplifier in zone 2 or zone 3, press I/O and AV I/O (1) at the same time (SYSTEM STANDBY). Saving the power in standby mode. When "Control for HDMI" (page 115) and "RS-232C Control" (page 116) are set to "OFF."
3 ZONE	Press to switch the zone 2 or zone 3 operation (page 83).
4 AMP	Press to enable the receiver operation (page 41).
5 Input buttons	Press one of the buttons to select the component you want to use. When you press any of the input buttons, the receiver turns on. The buttons are factory assigned to control Sony components (page 53, 87). You can program the remote to control non-Sony components following the steps in "Programming the remote" (page 124).
6 TV INPUT	Press TV (24), then press TV INPUT to select the input signal of a TV.
7 WIDE	Press TV (24), then press WIDE repeatedly to select the wide picture mode.

continued

Name	Function
8 D.TUNING	Press SHIFT (25), then press to enter direct tuning mode (page 61, 67).
9 CLEAR	Press SHIFT (25), then press to – clear a mistake when you press the incorrect numeric button. – return to continuous playback, etc. of the satellite tuner or DVD player.
10 ENT/MEM	Press SHIFT (25), then press ENT/MEM to enter the value after selecting a channel, disc, or track using the numeric buttons, or to store a station during tuner operation.
11 MOVIE	Press to select sound field for movies (page 79).
12 MUSIC	Press to select sound field for music (page 77).
13 NIGHT MODE	Press AMP (4), then press NIGHT MODE to activate the NIGHT MODE function (page 96).
14 SLEEP	Press to activate the sleep timer function and the duration which the receiver turns off automatically (page 96).
15 GUI MODE	Press to switch the display mode of the menu between GUI MODE (to display the menu on the TV screen) and DISPLAY MODE (to display the menu in the display window).
16  ↑/↓/←/→	Press ↑/↓/←/→ to select the menu items. Then press ⊕ to enter the selection.
17 OPTIONS TOOLS	Press to display and select items from option menus for receiver, DVD player, TV, or Blu-ray Disc Player, etc.
18 MENU HOME	Press to display the menu used to operate audio/video components or a TV.

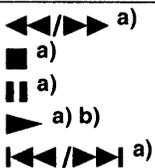Name	Function
19  a) a) a) a) b) a)	Press to operate the DVD player, Blu-ray Disc Player, CD player, MD deck, tape deck, or component connected to the DIGITAL MEDIA PORT adapter etc.
CATEGORY MODE	Press to select the category mode for satellite tuner.
TUNING +/-	Press to select station.
20 PRESET + b)/-	Press to register FM/AM/satellite tuner stations or to select preset stations.
TV CH + b)/-	Press TV (24), then press TV CH + /- to operate the TV, satellite tuner, VCR, etc.
21 F1/F2	Press BD or DVD (5), then press F1 or F2 to select a component to operate. • HDD recorder F1: HDD F2: DVD player, Blu-ray Disc Player • DVD/VHS combo player F1: DVD player, Blu-ray Disc Player F2: VHS
INPUT MODE	Press AMP (4), then press INPUT MODE to select the input mode when the same components are connected to both digital and analog jacks (page 92).
22 RM SET UP	Press to set up the remote (page 99).
23 THEATER	Press to turn the Theater mode on and off when connecting the receiver to products featuring “BRAVIA” Sync.
24 TV	Press to enable the TV operation.
25 SHIFT	Press to light up the button. It changes the remote button function to activate the buttons with pink printing.

Name	Function
26 Numeric buttons	Press SHIFT (25), then press to <ul style="list-style-type: none"> – preset/tune to preset stations. – select track numbers of the CD player, DVD player, Blu-ray Disc Player or MD deck. Press -/-- (27) to select track number 10. – select channel numbers of the VCR or satellite tuner. – After pressing TV (24), press the numeric buttons to select the TV channels.
27 -/--	Press to select <ul style="list-style-type: none"> – track numbers over 10 of the VCR, satellite tuner, CD player or MD deck. – channel numbers of the Digital CATV terminal.
28 A.F.D.	Press to select sound field (page 74).
29 2CH/ A.DIRECT	Press to select sound field or to switch the audio of the selected input to analog signal without any adjustment (page 73).
30 RESOLUTION	Press RESOLUTION repeatedly to change the resolution of signals output from the HDMI OUT or COMPONENT VIDEO MONITOR OUT jack.
31 PIP	Press PIP to switch the image of the PIP (Picture in Picture) window. The image of the PIP window is the one from the EXT VIDEO IN jack. You can swap the position of the main screen and the PIP window by pressing (+) (16). Note When “HDMI Video Direct” in the HDMI settings menu is set to “ON,” the PIP window is not displayed.
32 DISPLAY	Press to select information displayed in the display window, TV screen of the VCR, satellite tuner, CD player, DVD player, Blu-ray Disc Player, or MD deck. Note In the GUI MODE, press the button to display the menu on the TV screen.

Name	Function
33 RETURN/ EXIT 	Press to return to the previous menu or exit the menu while the menu or on-screen guide of the VCR, DVD player, or satellite tuner is displayed on the TV screen.
34 CATEGORY +/-	Press to select the category for satellite tuner.
←/→	Press to select an album.
35 DISC SKIP	Press to skip a disc when using a multi-disc changer.
36 MASTER VOL +/-	Press to adjust the volume level of all speakers at the same time.
TV VOL +/-	Press TV (24), then press TV VOL +/- to adjust the volume level of the TV.
37 MUTING	Press to turn off the sound temporarily. Press the button again to restore the sound.
38 BD/DVD/ TOP MENU, MENU	Press to display the menus of the DVD player on the TV screen. Then use ↑/↓/←/→ and (+) to perform a menu operations.
MACRO1, MACRO2	Press AMP (4), then press MACRO 1 or MACRO 2 to set up the macro function (page 127).

a) See the table on page 123 for information on the buttons that you can use to control each component.


b) The tactile dot is attached to these buttons (TV/5, , PRESET +/-/TV CH +). Use as a mark of operation.

Notes

- Some functions explained in this section may not work depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the component, the above operation may not be possible or may operate differently than described.

Sub remote commander (RM-AAU038)

This remote can only be used to operate the receiver. You can control the main functions of the receiver with simple operations using this remote.

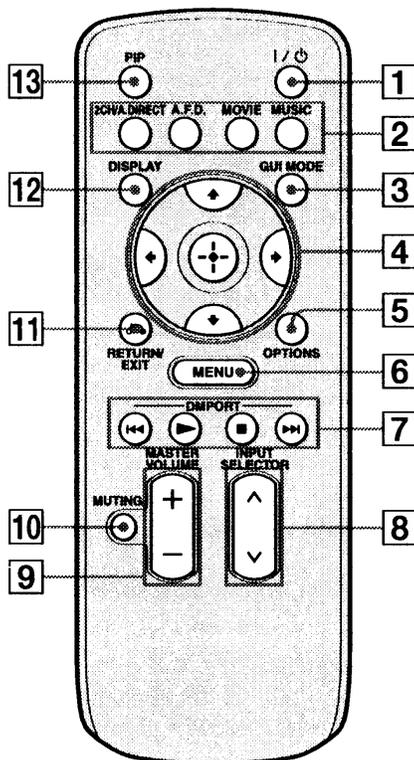

Name	Function
1 I/⏻ (on/standby)	Press to turn a receiver on or off.
2 2CH/ A.DIRECT A.F.D. MOVIE MUSIC	Press to select sound field (page 73, 74, 77, 79).
3 GUI MODE	Press to switch the display mode of the menu between GUI MODE (to display the menu on the TV screen) and DISPLAY MODE (to display the menu in the display window).
4  ↑/↓/←/→	After pressing GUI MODE (3), press ↑/↓/←/→ to select the menu item. Then press ⊕ to enter the selection.

Name	Function
5 OPTIONS	Press to display and select items from option menus.
6 MENU	Press to display the menu to operate the receiver.
7 DMPORT	Press to operate the component connected to the DIGITAL MEDIA PORT adapter (page 55).
	Starts play.
	Stops play.
	Skips tracks.
8 INPUT SELECTOR	Press to select the input source to play back.
9 MASTER VOLUME +/-	Press to adjust the volume level.
10 MUTING	Press to turn off the sound temporarily. Press the button again to restore the sound.
11 RETURN/EXIT	Press to return to the previous menu or exit the menu.
12 DISPLAY	Press to select information displayed in the display window. Note In the GUI MODE, press the button to display the menu on the TV screen.
13 PIP	Press PIP to switch the image of the PIP (Picture in Picture) window. The image will be changed as follows. EXT VIDEO → ZONE 2 VIDEO → OFF. You can swap the position of the main screen and the PIP window (swap) by pressing the ⊕ (4). You can expand or shrink the window using ↑/↓ (4). You can also change the window's position using ←/→ (4). Note The HDMI video signals are not output while the PIP window is displayed.

Getting Started


1: Installing speakers

This receiver allows you to use a 7.1 channel system (7 speakers and one subwoofer).

Enjoying a 5.1/7.1 channel system

To fully enjoy theater-like multi-channel surround sound requires five speakers (two front speakers, a center speaker, and two surround speakers) and a subwoofer (5.1 channel system).


Example of a 5.1 channel speaker system configuration

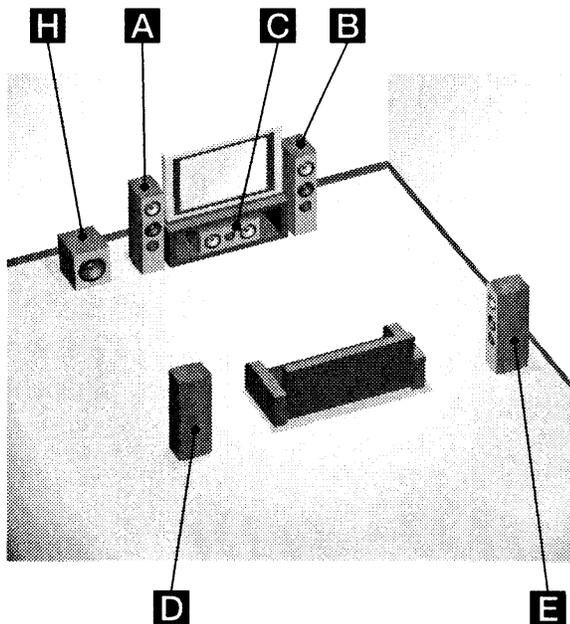

- A** Front left speaker
- B** Front right speaker
- C** Center speaker
- D** Surround left speaker
- E** Surround right speaker
- H** Subwoofer

You can enjoy high fidelity reproduction of DVD or Blu-ray Disc software recorded sound in the Surround EX format if you connect one additional surround back speaker (6.1 channel system) or two surround back speakers (7.1 channel system.)


Example of a 7.1 channel speaker system configuration

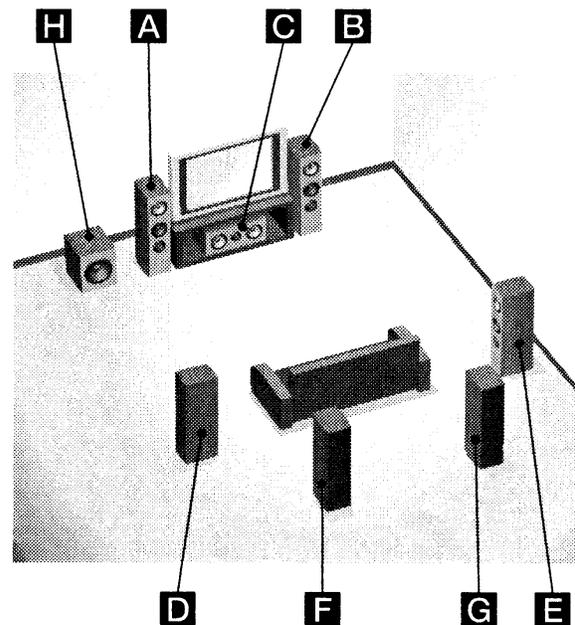

- A** Front left speaker
- B** Front right speaker
- C** Center speaker
- D** Surround left speaker
- E** Surround right speaker
- F** Surround back left speaker
- G** Surround back right speaker
- H** Subwoofer

2: Connecting speakers

Before connecting cords, make sure to disconnect the AC power cord (mains lead).

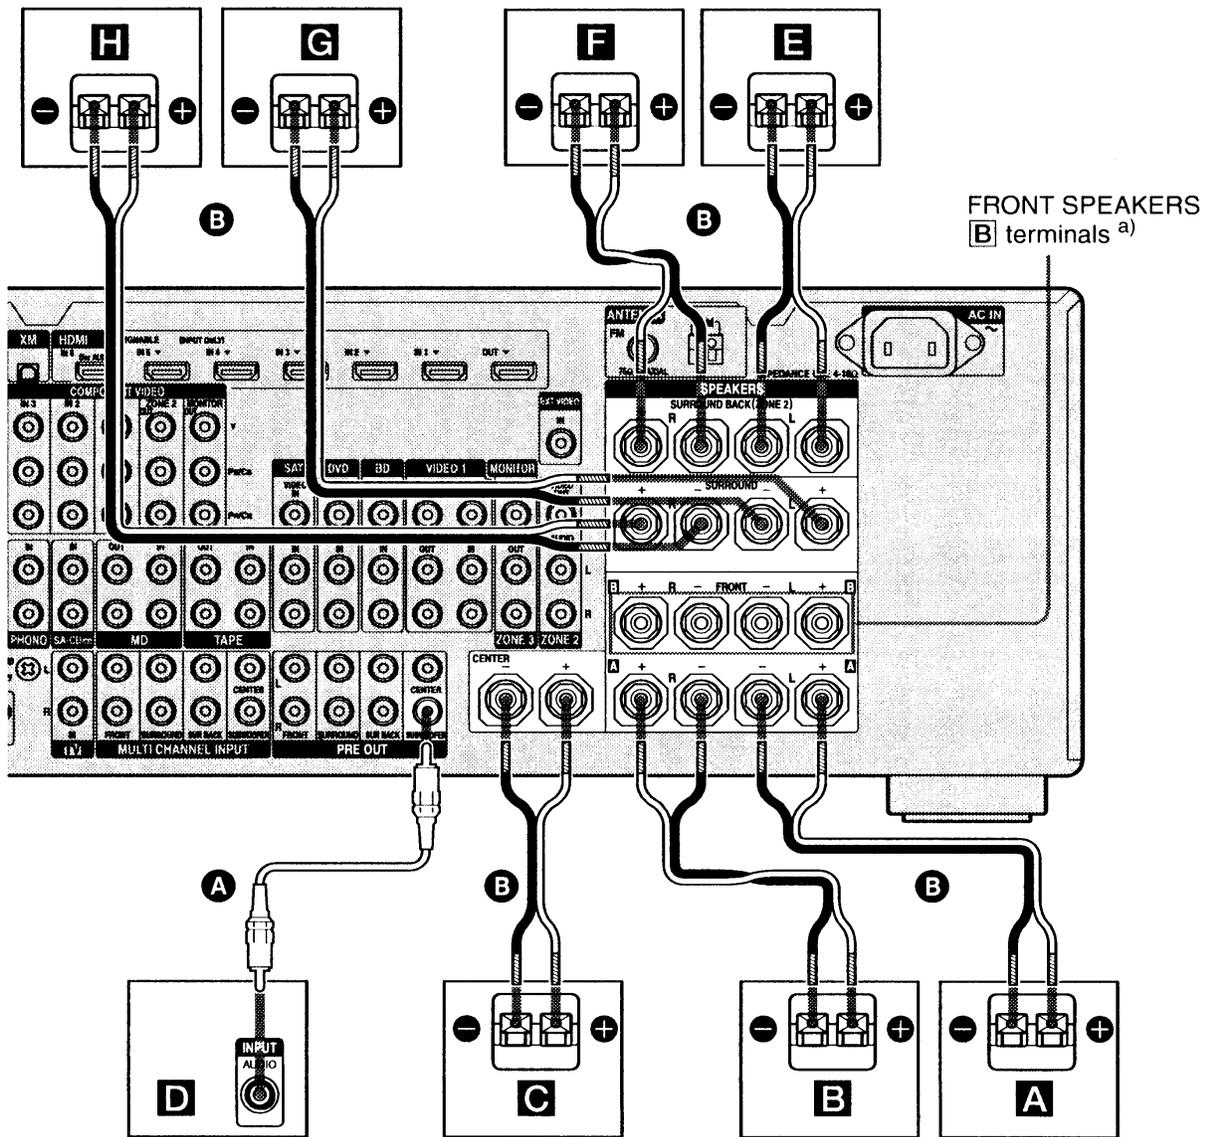

- A** Monaural audio cord (not supplied)
- B** Speaker cords (not supplied)

- A** Front speaker **A** (L)
- B** Front speaker **A** (R)
- C** Center speaker
- D** Subwoofer^{h)}
- E** Surround back speaker (L)^{c)}
- F** Surround back speaker (R)^{c)}
- G** Surround speaker (L)
- H** Surround speaker (R)

a) If you have an additional front speaker system, connect them to the FRONT SPEAKERS **B** terminals. You can select the front speaker system you want to use with the SPEAKERS switch (OFF/A/B/A+B) on the front panel (page 44).

- b) When you connect a subwoofer with an auto standby function, turn off the function when watching movies. If the auto standby function is set to on, it turns to standby mode automatically based on the level of the input signal to a subwoofer, then sound may not be output.
- c) If you connect only one surround back speaker, connect it to the SURROUND BACK SPEAKERS L terminals.

Notes

- When you connect all the speakers with a nominal impedance of 8 ohms or higher, set “Impedance” in the Speaker settings menu to “8 Ω.” In other connections, set it to “4 Ω.” For details, see “8: Setting the speakers” (page 42).
- Before connecting the AC power cord (mains lead), make sure that metallic wires of the speaker cords are not touching each other between the SPEAKERS terminals.

Tip


To connect certain speakers to another power amplifier, use the PRE OUT jacks. The same signal is output from both the SPEAKERS terminals and the PRE OUT jacks. For example, if you want to connect just the front speakers to another amplifier, connect that amplifier to the PRE OUT FRONT L and R jacks.

ZONE 2 connection

You can assign the SURROUND BACK SPEAKERS terminals **E** and **F** to the speakers of the zone 2. Set “Sur Back Assign” to “ZONE2” in the Speaker settings menu. See “Using Multi-zone Features” (page 83) for details on connection and operation in zone 2.

3: Connecting the monitor

You can watch the selected input image when you connect the HDMI OUT jack or MONITOR OUT jacks to a TV. You can operate this receiver using a GUI (Graphical User Interface). It is not necessary to connect all the cables. Connect audio and video cords according to the jacks of your components.

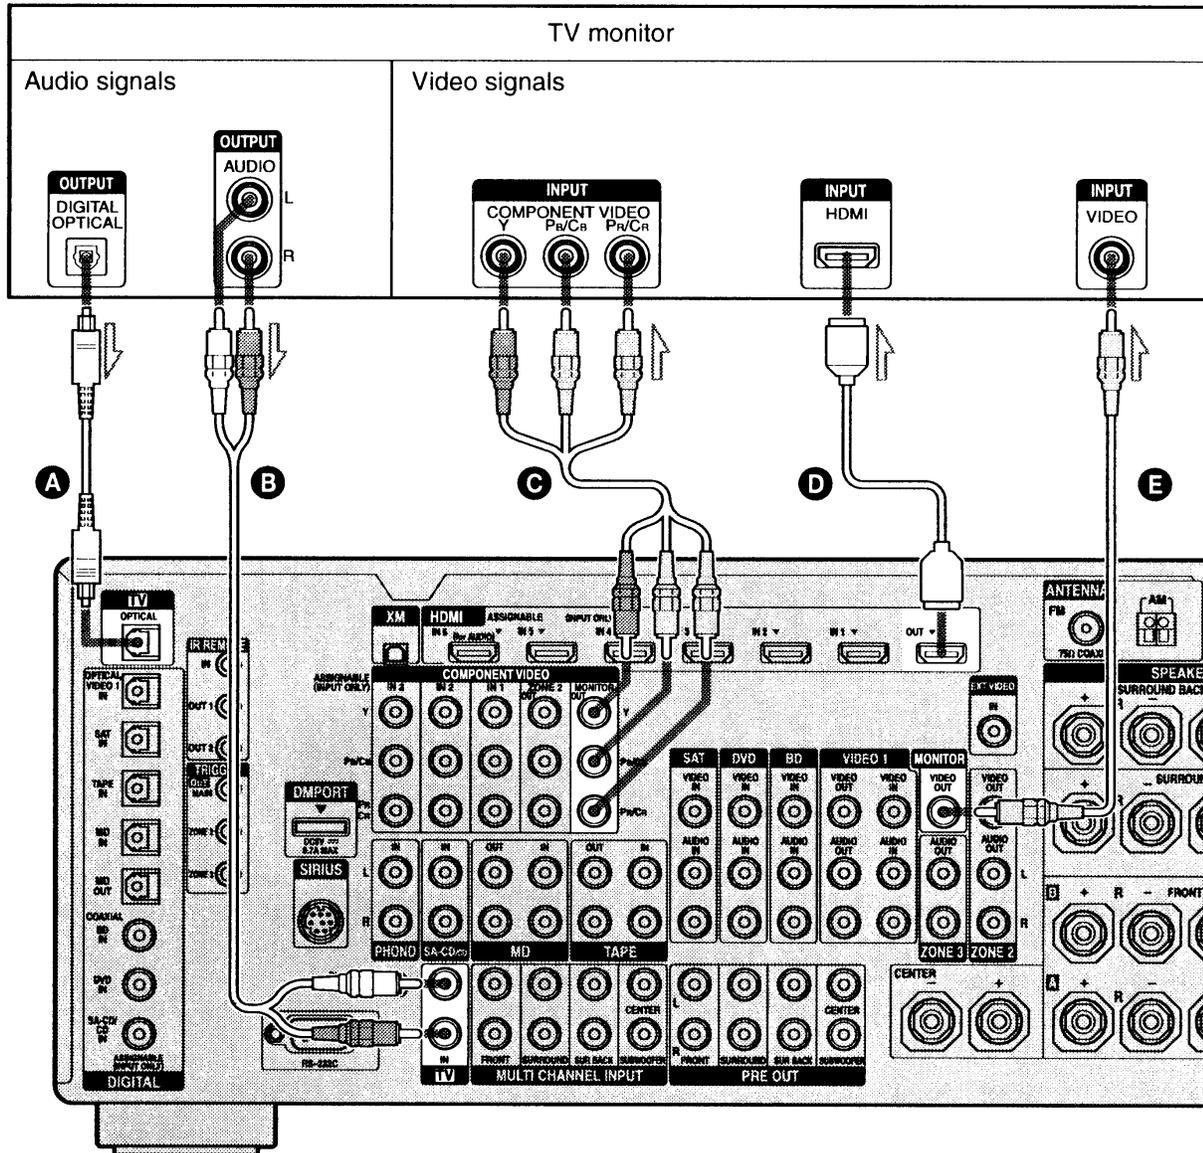

- A** Optical digital cord (not supplied)
- B** Audio cord (not supplied)
- C** Component video cord (not supplied)
- D** HDMI cable (not supplied)
- E** Video cord (not supplied)

Notes

- Before connecting cords, make sure to disconnect the AC power cord (mains lead).
- Connect image display components such as a TV monitor or a projector to the MONITOR VIDEO OUT jack on the receiver. You may not be able to record, even if you connect recording components.
- Turn on the receiver when the video and audio of a playback component are being output to a TV via the receiver. If the power supply of the receiver is not turned on, neither video nor audio is transmitted.
- Depending on the status of the connection between the TV and the antenna (aerial), the image on the TV screen may be distorted. In this case, place the antenna (aerial) farther away from the receiver.

Tips

- The receiver has a video conversion function. For details, see “Notes on converting video signals” (page 38).
- The sound of the TV is output from the speakers connected to the receiver if you connect the audio output jack of the TV and the TV IN jacks of the receiver. In this configuration, set the sound output jack of the TV to “Fixed” if it can be switched between either “Fixed” or “Variable.”
- The screen saver is activated when the GUI menu is displayed on the TV screen and there has been no operation attempted for 15 minutes.

4a: Connecting the audio components

How to hook up your components


This section describes how to hook up your components to this receiver. Before you begin, refer to “Component to be connected” below for the pages which describe how to connect each component.

After hooking up all your components, proceed to “5: Connecting the antennas (aerials)” (page 39).

Component to be connected		Page
Super Audio CD player/ CD player	With digital audio output	26
	With multi-channel audio output	28
	With analog audio output only	29
MD player	With digital audio output	26
	With analog audio output only	29
Tape deck, Analog disc turntable		29

Connecting components with digital audio input/output jacks

The following illustration shows how to connect a Super Audio CD player, CD player, an MD deck and DIGITAL MEDIA PORT adapter.

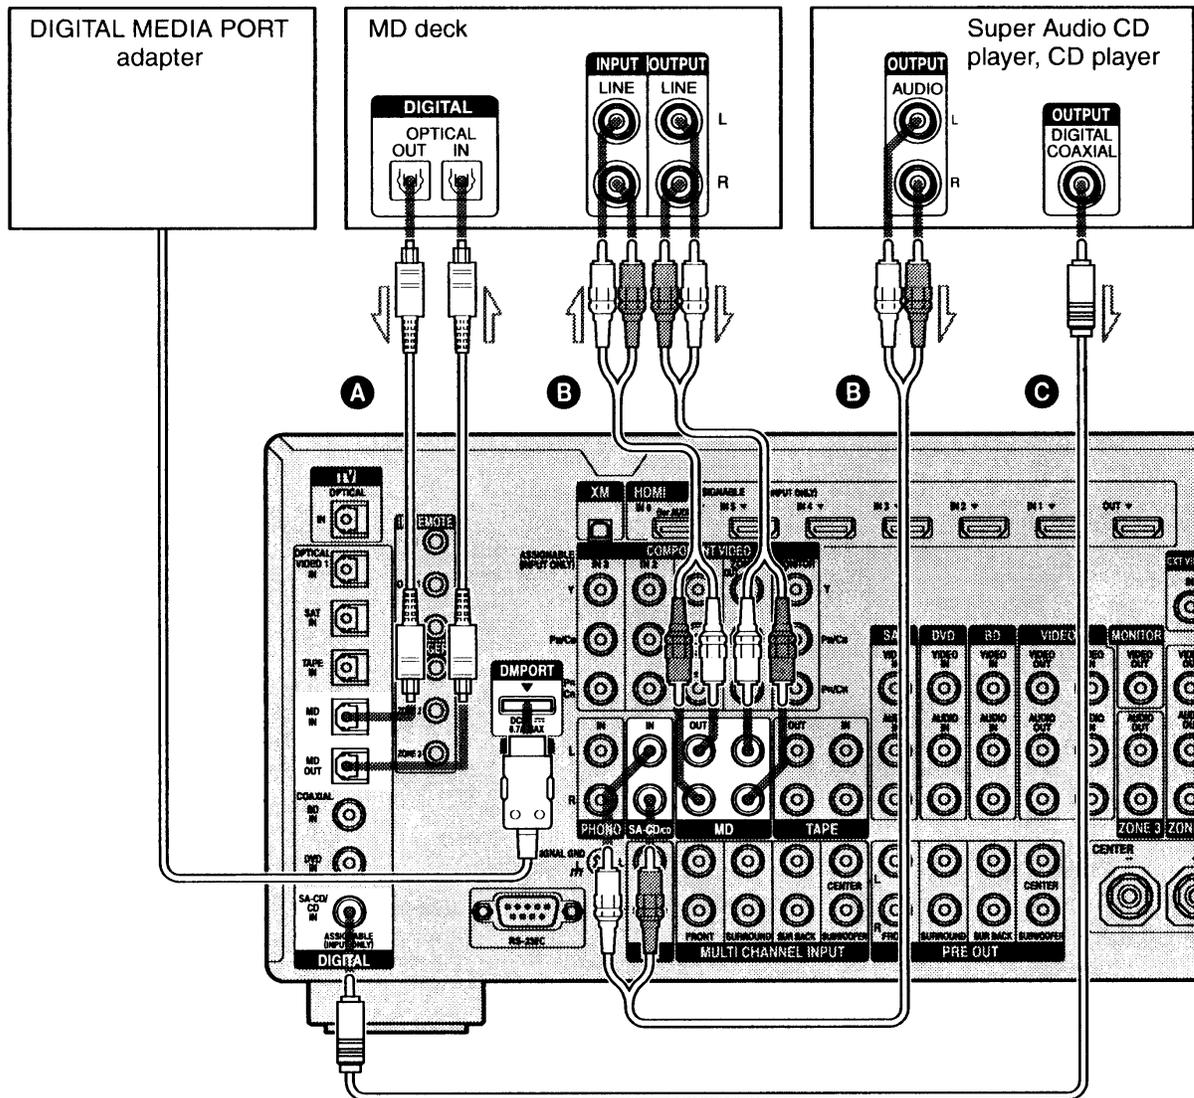

- A** Optical digital cord (not supplied)
- B** Audio cord (not supplied)
- C** Coaxial digital cord (not supplied)

Notes

- When connecting optical digital cords, insert the plugs straight in until they click into place.
- Do not bend or tie optical digital cords.
- Before connecting cords, make sure to disconnect the AC power cord (mains lead).
- To disconnect the DIGITAL MEDIA PORT adapter, observe the following precautions.
 - Remove the DIGITAL MEDIA PORT adapter after removing the cord when cords are connected to the COMPONENT VIDEO jack.

- Remove the DIGITAL MEDIA PORT adapter by squeezing the sides of the connector, since the connector is locked in place.

Tip

All the digital audio jacks are compatible with 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz and 96 kHz sampling frequencies.

Notes on playing a Super Audio CD on a Super Audio CD player


- No sound is output when playing a Super Audio CD on a Super Audio CD player connected to only the COAXIAL SA-CD/CD IN jack on this receiver. When you play a Super Audio CD, connect the player to the MULTI CHANNEL INPUT or SA-CD/CD IN jacks. Refer to the operating instructions supplied with the Super Audio CD player.
- Connect a player which can output DSD signals from the HDMI jack to the receiver using an HDMI cable.
- You cannot make digital recordings of a Super Audio CD.
- When connecting optical digital cords, insert the plugs straight in until they click into place.
- Do not bend or tie optical digital cords.

If you want to connect several digital components, but cannot find an unused input

See “Enjoying the sound/images from other inputs (Input Assign)” (page 93).

Connecting components with multi-channel output jacks

If your DVD player, Blu-ray Disc Player or Super Audio CD player is equipped with multi-channel output jacks, you can connect them to the MULTI CHANNEL INPUT jacks of this receiver to enjoy multi-channel sound. Alternatively, the multi-channel input jacks can be used to connect an external multi-channel decoder.

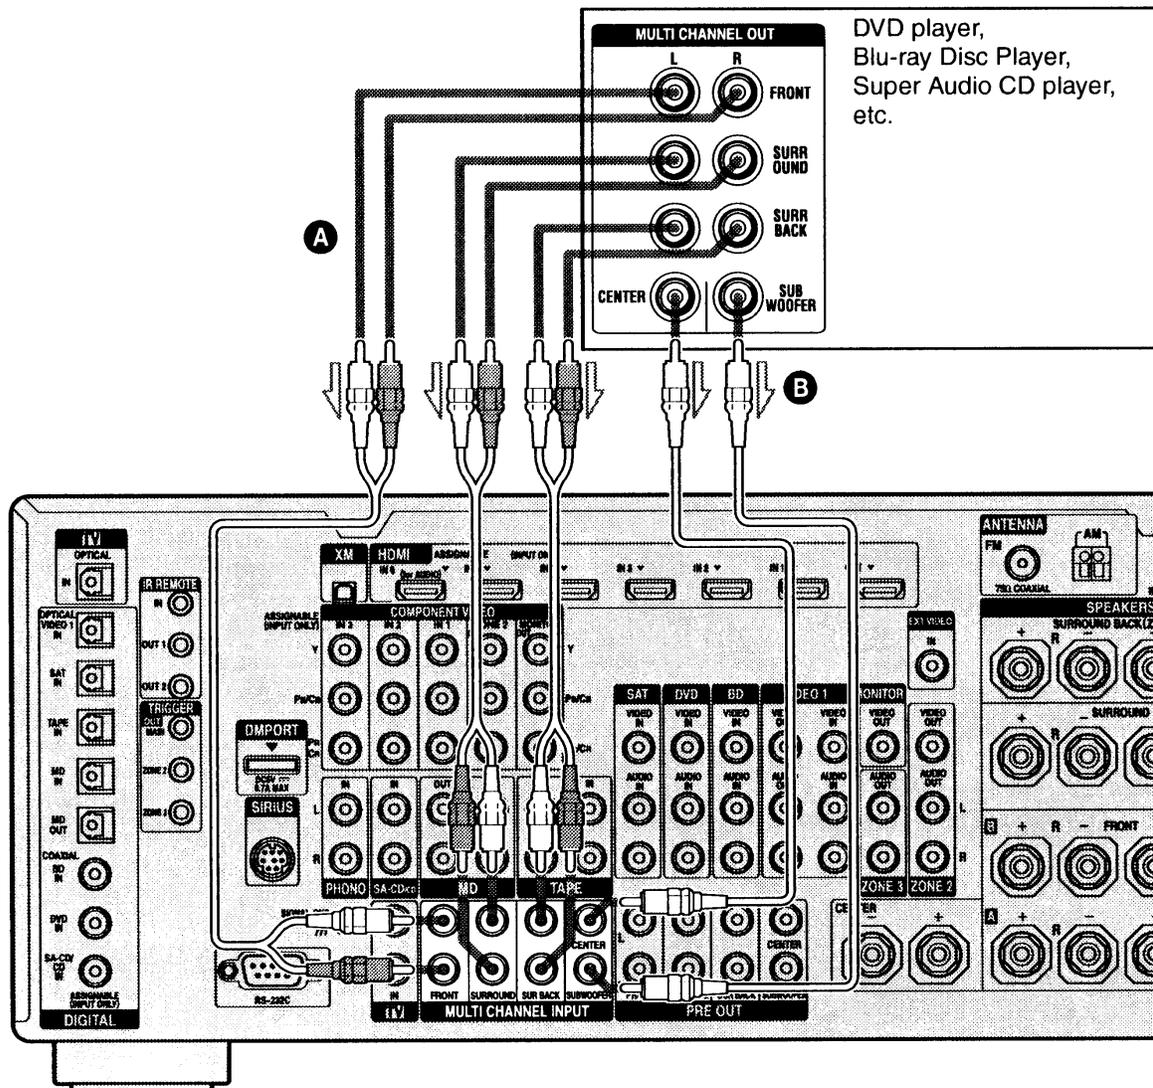

- A** Audio cord (not supplied)
- B** Monaural audio cord (not supplied)


Notes

- Before connecting cords, make sure to disconnect the AC power cord (mains lead).
- DVD player, Blu-ray Disc Player and Super Audio CD players may not have the SURROUND BACK jacks.
- When “Sur Back Assign” is set to “BI-AMP” or “ZONE2” in the Speaker settings menu, the input to the SUR BACK jacks is invalid.

- Audio input signals from MULTI CHANNEL INPUT jacks are not output to any audio output jacks. The signals cannot be recorded.

Connecting components with analog audio jacks

The following illustration shows how to connect a component with analog jacks, such as tape deck, turntable, etc.

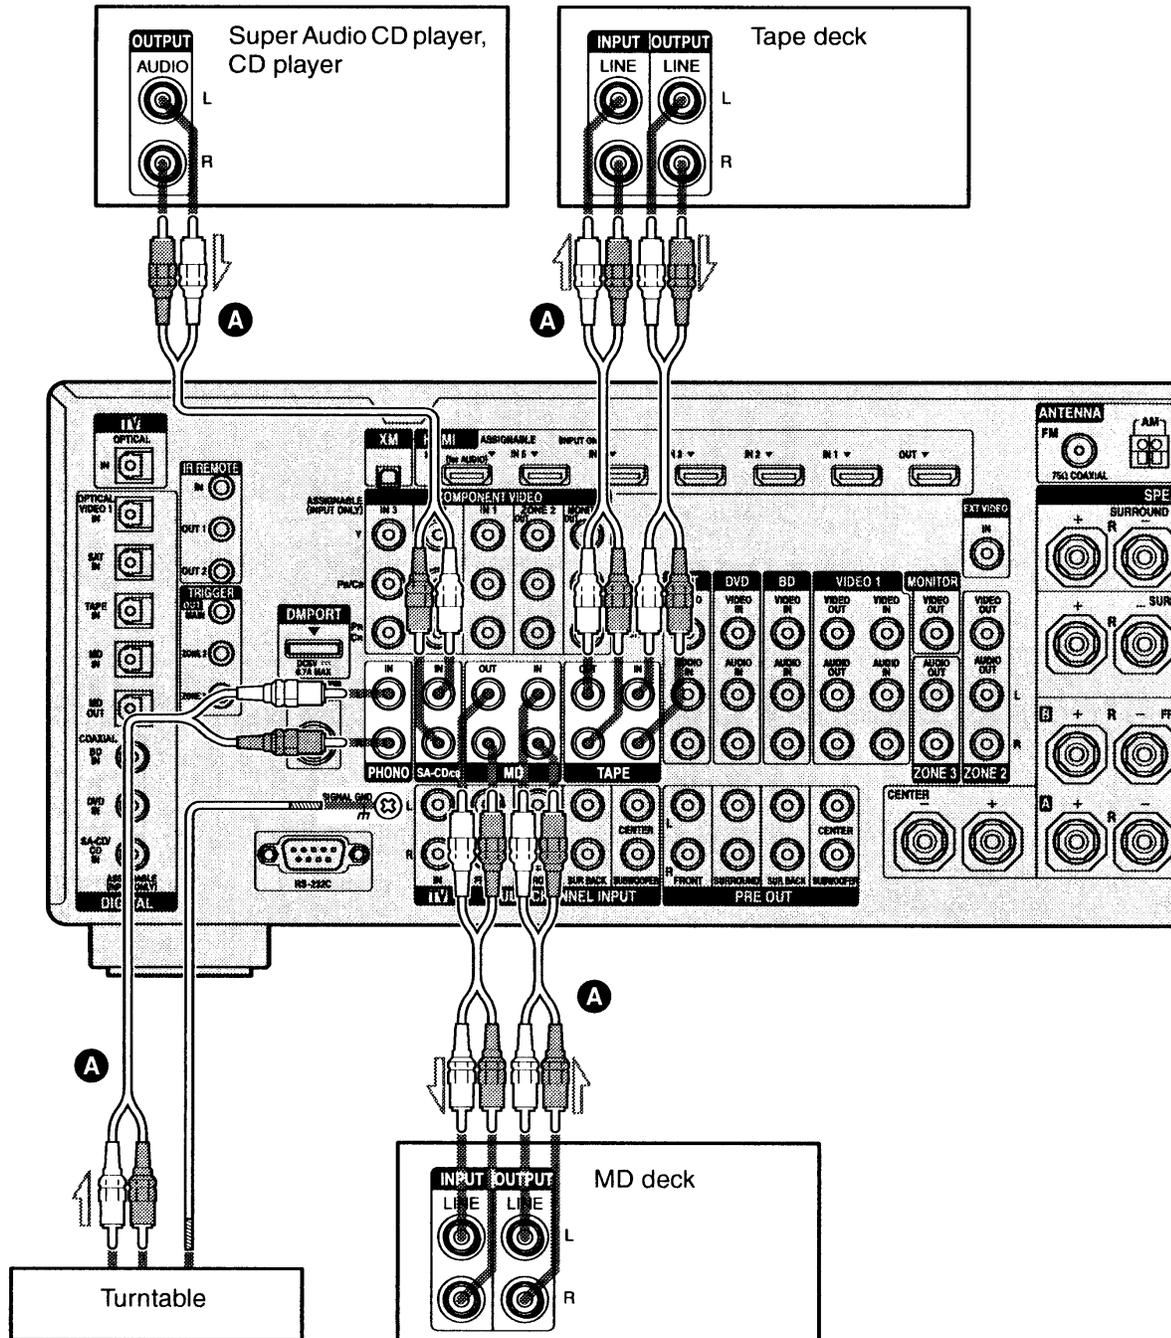

A Audio cord (not supplied)

Notes

- If your turntable has a ground (earth) wire, connect it to the (⏏) SIGNAL GND terminal.
- Before connecting cords, make sure to disconnect the AC power cord (mains lead).

4b: Connecting the video components

How to hook up your components


This section describes how to hook up your components to this receiver. Before you begin, refer to “Component to be connected” below for the pages which describe how to connect each component.

After hooking up all your components, proceed to “5: Connecting the antennas (aerials)” (page 39).

Component to be connected	Page
TV monitor	23
With HDMI jack	31
DVD player, Blu-ray Disc Player	34
Satellite tuner, Set-top box	35
DVD recorder, VCR	36
Camcorder, video game, etc.	36

Video input/output jacks to be connected

The image quality depends on the connecting jack. Refer to the illustration that follows. Select the connection according to the jacks on your components.

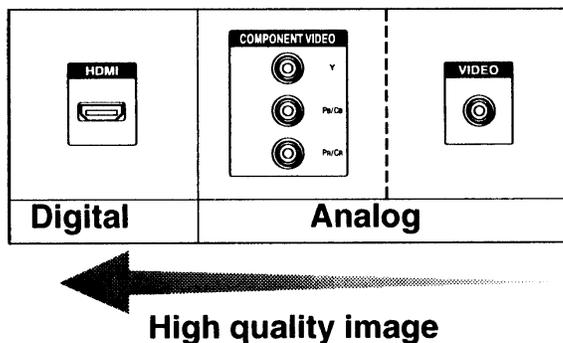


Connecting components with HDMI jacks

HDMI is the abbreviated name for High-Definition Multimedia Interface. It is an interface which transmits video and audio signals in digital format.

HDMI features

- A digital audio signals transmitted by HDMI can be output from the speakers and the PRE OUT jacks on this receiver. This signal supports Dolby Digital, DTS, DSD, and linear PCM.
- Linear PCM (sampling frequency less than 192 kHz) with digital audio signals of up to 8 channels can be received with this receiver using the HDMI IN jack.
- Analog video signals input to the VIDEO jack, or COMPONENT VIDEO jacks can be output as HDMI signals. Audio signals are not output from an HDMI OUT jack when the image is converted.
- This receiver supports DSD transmission (Super Audio CD), extended by HDMI ver1.2.
- This receiver supports High Bitrate Audio (DTS-HD Master Audio, Dolby TrueHD), Deep Color and xvYCC transmission, extended by HDMI ver1.3.
- The HDMI jacks of this receiver support the Control for HDMI function. The HDMI OUT B jack, however, does not support the Control for HDMI function.
- HDMI IN 6 is input which is considered sound quality. Input IN 6 when you need higher quality sound. You can also use IN 6 jack in the same manner as the HDMI IN 1 to IN 5 jacks.

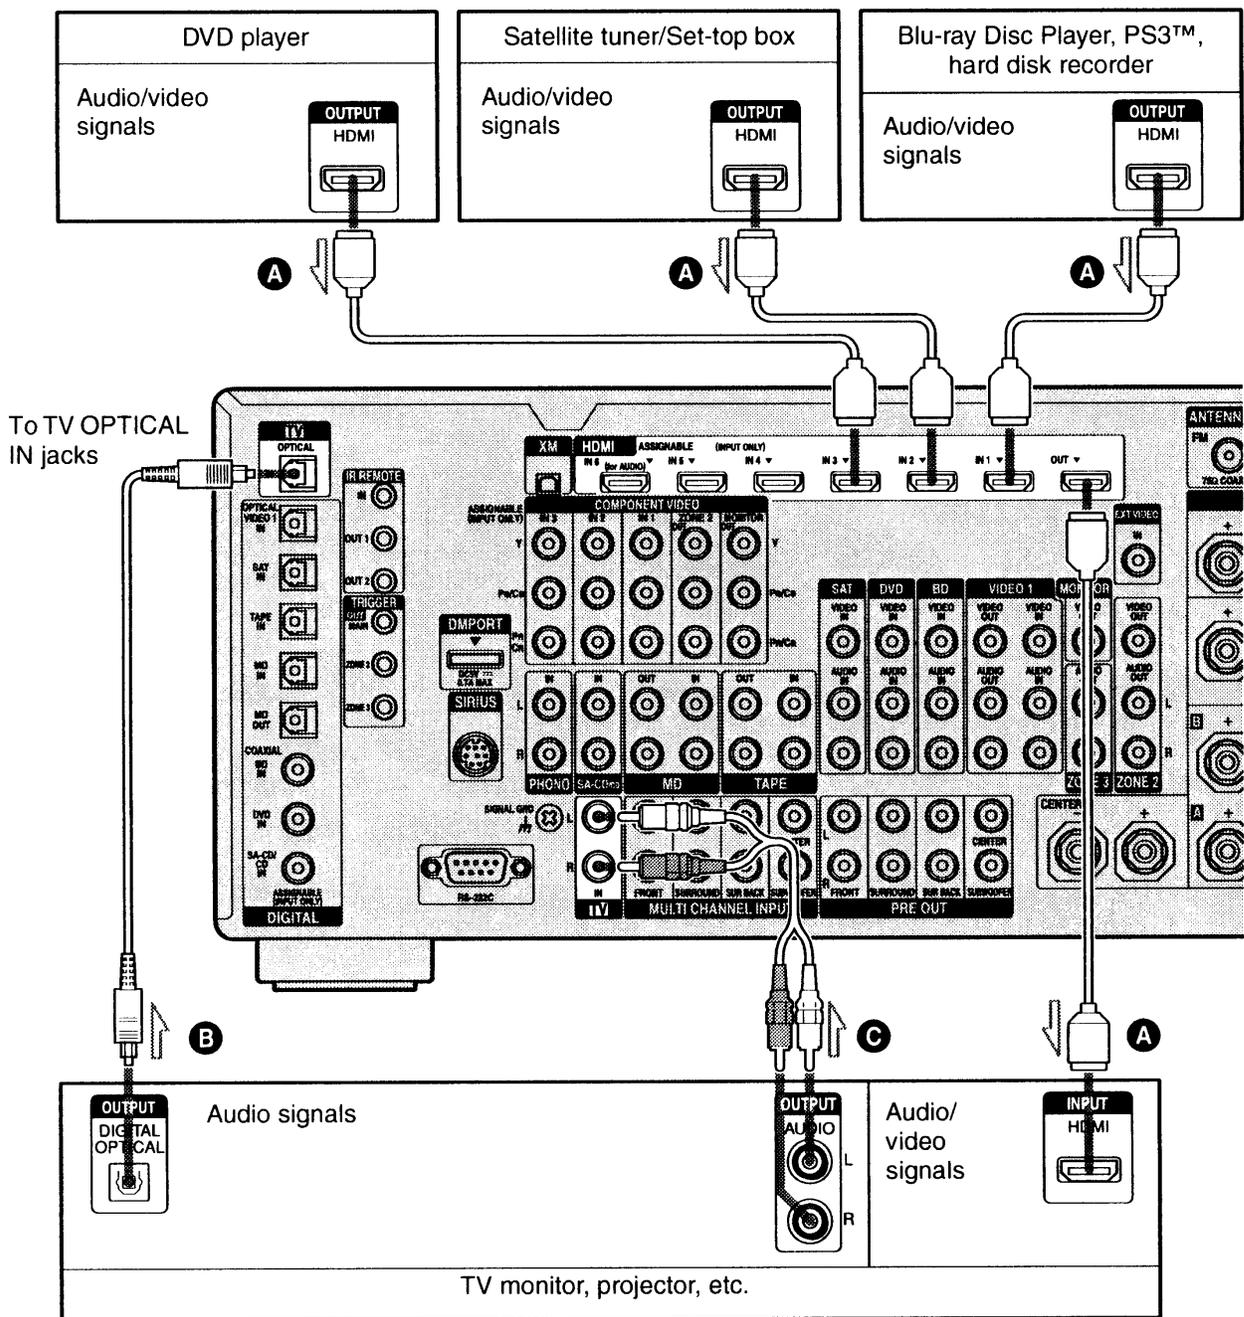

- A** HDMI cable (not supplied)
We recommend that you use a Sony HDMI cable.
- B** Optical digital cord (not supplied)
- C** Audio cord (not supplied)

To enjoy TV multi channel surround sound broadcasting

You can listen to TV multi channel surround sound broadcasting from the speakers connected to the receiver.

Connect the OPTICAL output jack of the TV to the OPTICAL IN jack of the receiver.

Tip

Connect to at least one of the audio cords (**B** or **C**).

Notes on connecting cables

- We recommend that you use an HDMI cable with the HDMI logo (made by Sony) for the HDMI jack corresponding to high speed (an HDMI version 1.3a, category 2 cable) when you view images or listen to sound during a Deep Color transmission or when you watch a video image of 1080p or higher.
- We do not recommend using an HDMI-DVI conversion cable. When you connect an HDMI-DVI conversion cable to a DVI-D component, the sound and/or the image may not be output. Connect other audio cords or digital connecting cords, then set “Input Assign” in the Input Option menu when the sound is not output correctly.
- Before connecting cables, make sure to disconnect the AC power cord (mains lead).


Notes on HDMI connections

- Check the setup of the connected component if an image is poor or the sound does not come out of a component connected via the HDMI cable.
- An audio signal input to the HDMI IN jack is output from the speaker output jacks, HDMI OUT jack and PRE OUT jacks. It is not output from any other audio jacks.
- A video signal input to the HDMI IN jack can only be output from the HDMI OUT jack. The video input cannot be output from the VIDEO OUT jacks or MONITOR VIDEO OUT jacks.
- The audio and video signals of HDMI input are not output from the HDMI OUT jack while the receiver menu is displayed.
- When you want to listen to the sound from the TV speaker, set “Audio Out” to “TV+AMP” in the HDMI settings menu. If set to “AMP,” the sound is not output from the TV speaker.
- Be sure to turn on the receiver when video and audio signals of a playback component are being output to a TV through this receiver. Unless the power is on, neither video nor audio signals will be transmitted.

- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be suppressed by the connected component. Check the setup of the connected component if an image is poor or the sound does not come out of a component connected via the HDMI cable.
- Sound may be interrupted when the sampling frequency, the number of channels or audio format of audio output signals from the playback component is switched.
- When the connected component is not compatible with copyright protection technology (HDCP), the image and/or the sound from the HDMI OUT jack may be distorted or may not be output. In this case, check the specification of the connected component.
- Refer to the operating instructions of each component connected for details.
- You can enjoy High Bitrate Audio (DTS-HD Master Audio, Dolby TrueHD), DSD, multi-channel Linear PCM only with an HDMI connection.
- Set the image resolution of the player to more than 720p/1080i to enjoy High Bitrate Audio (DTS-HD Master Audio, Dolby TrueHD).
- The image resolution of player may need certain settings be made before you can enjoy DSD and multi-channel Linear PCM. Refer to the operating instructions of the player.
- Not every HDMI component supports all functions that are defined by the specified HDMI version. For example, components that support HDMI, ver. 1.3a, may not support Deep Color.

Connecting a DVD player, Blu-ray Disc Player

The following illustration shows how to connect a DVD player, Blu-ray Disc Player. It is not necessary to connect all the cables. Connect audio and video cords according to the jacks of your components.

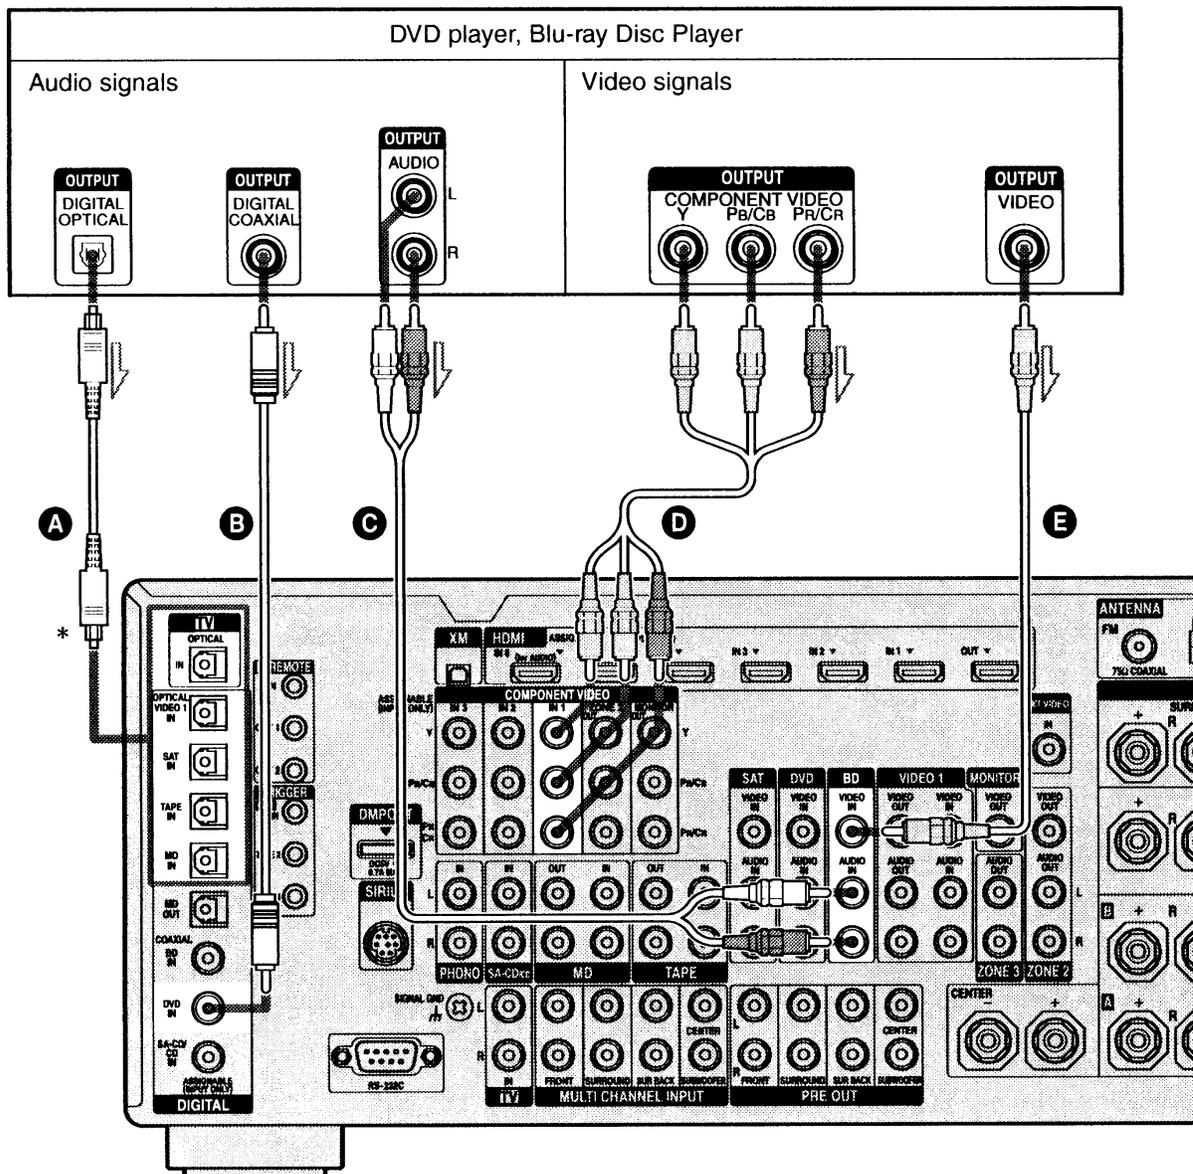

- A** Optical digital cord (not supplied)
- B** Coaxial digital cord (not supplied)
- C** Audio cord (not supplied)

- D** Component video cord (not supplied)
- E** Video cord (not supplied)

* When you connect a component equipped with an OPTICAL jack, set "Input Assign" in the Input menu.


Notes

- To output multi-channel digital audio, set the digital audio output setting on the DVD player, Blu-ray Disc Player. Refer to the operating instructions supplied with the DVD player, Blu-ray Disc Player.
- Before connecting cords, make sure to disconnect the AC power cord (mains lead).

Connecting a satellite tuner, Set-top box

The following illustration shows how to connect a satellite tuner, Set-top box.

It is not necessary to connect all the cables. Connect audio and video cords according to the jacks of your components.

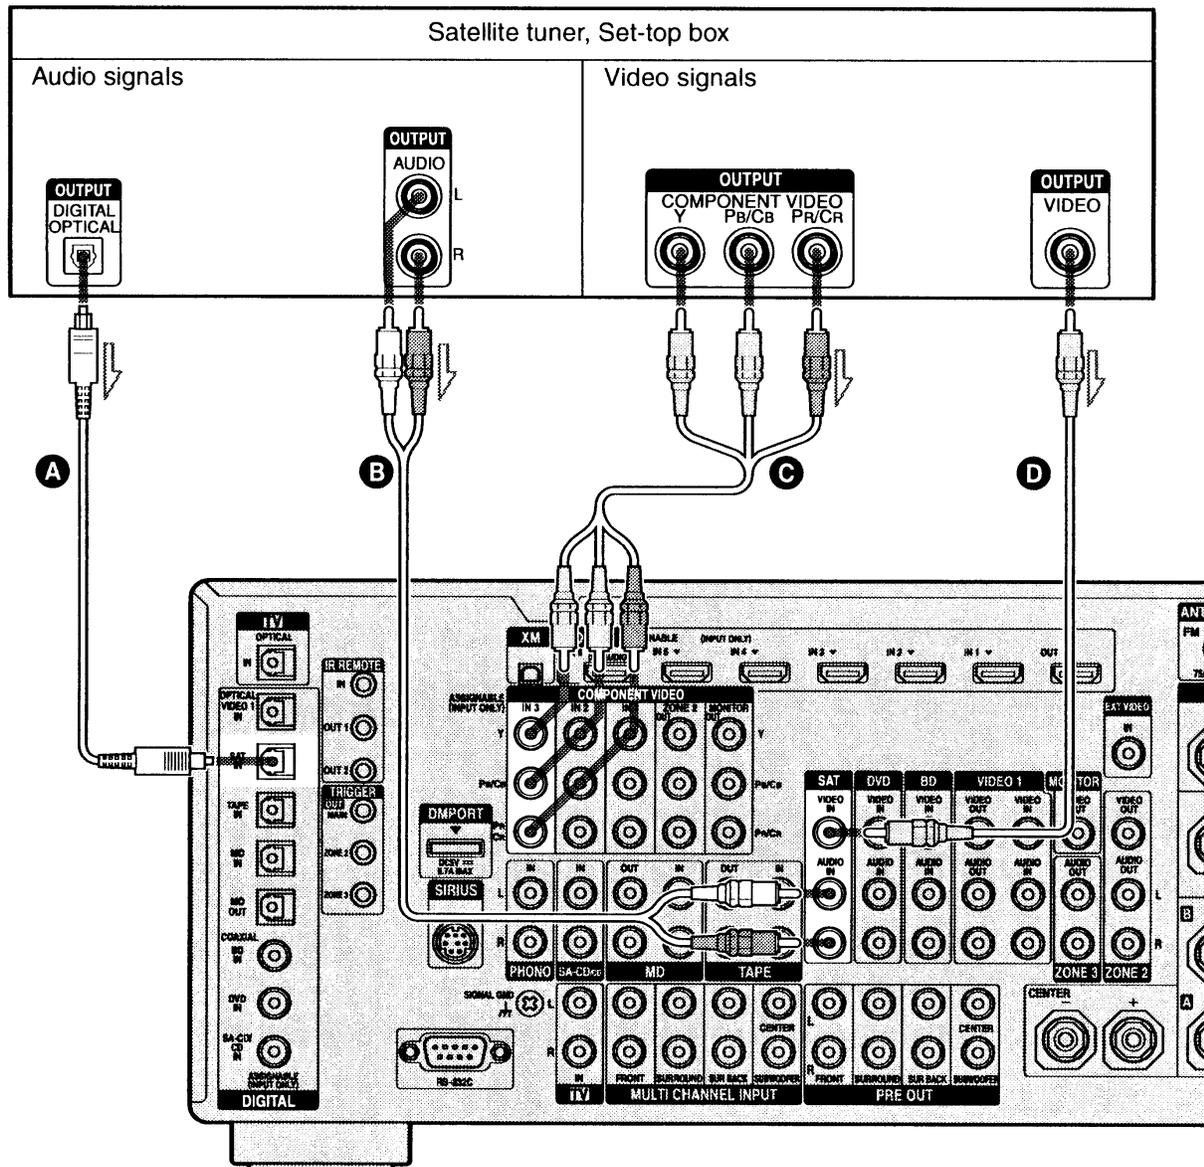

- A** Optical digital cord (not supplied)
- B** Audio cord (not supplied)
- C** Component video cord (not supplied)
- D** Video cord (not supplied)


Note

Before connecting cords, make sure to disconnect the AC power cord (mains lead).



Connecting components with analog video and audio jack

The following illustration shows how to connect a component which has analog jacks such as a DVD recorder or VCR, etc.

It is not necessary to connect all the cables. Connect audio and video cords according to the jacks of your components.

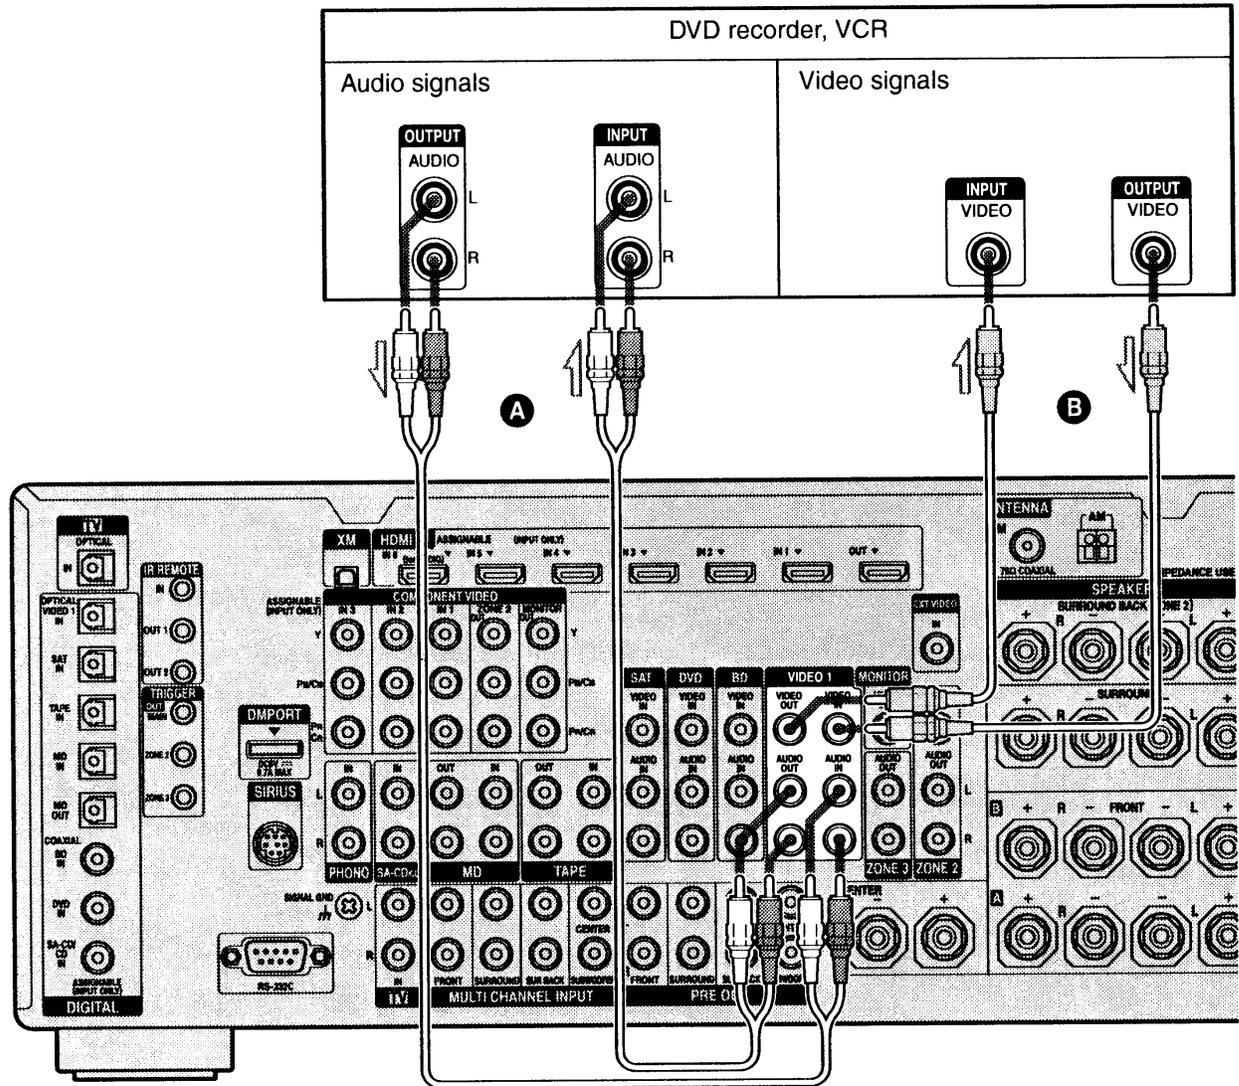

- A** Audio cord (not supplied)
- B** Video cord (not supplied)

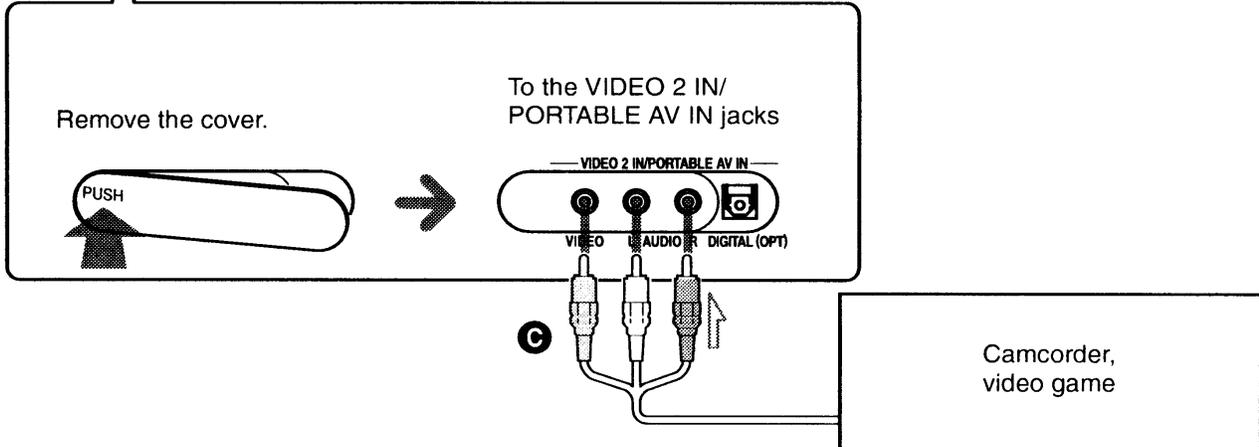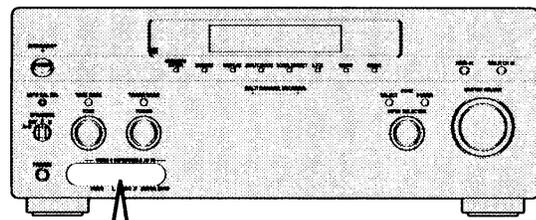

ⓐ Audio/video cord (not supplied)

Note

Before connecting cords, make sure to disconnect the AC power cord (mains lead).

Function for conversion of video signals

This receiver is equipped with a function for converting video signals.

- Composite video signals can be output as HDMI video and component video signals.
- Component video signals can be output as HDMI video and video signals.

As the initial setting, video signals input from the connected component are output to the HDMI OUT jack or MONITOR OUT jacks as shown in the table below.

We recommend you set the video conversion function to match the resolution of the monitor you are using.

For details on the video converting function, see “ Video settings” (page 113).

INPUT jack \ OUTPUT jack	HDMI OUT	COMPONENT VIDEO MONITOR OUT	MONITOR VIDEO OUT
HDMI IN 1/2/3/4/5/6	○	—	—
VIDEO IN	○	○	○
COMPONENT VIDEO IN	○	○	○

○ : Video signals are output.

— : Video signals are not output.

Notes on converting video signals

- When video signals from a VCR, etc., are converted on this receiver and then output to your TV, depending on the status of the video signal output, the image on the TV screen may appear distorted horizontally or no image may be output.
- HDMI video signals cannot be converted to component video signals and video signals.
- The converted video signals are output only from the MONITOR OUT jacks. They are not output from VIDEO OUT jack or the ZONE 2 VIDEO OUT jack.
- When you play a VCR with an image improvement circuit, such as TBC, the images may be distorted or may not be output. In this case, set the image improvement circuit function to off.
- The resolution of the signals output to the COMPONENT VIDEO MONITOR OUT jacks is converted up to 1080i. The resolution of the signals output to the HDMI OUT jack is converted up to 1080p.
- COMPONENT VIDEO MONITOR OUT jacks have restrictions on resolution when the resolution of video signals protected by copyright technology is converted. Resolution of up to 480p can be output to the COMPONENT VIDEO MONITOR OUT jacks. The HDMI OUT jack has no restriction on resolution.
- Video signals for which the resolution has been converted cannot be output from either the COMPONENT VIDEO MONITOR OUT jacks or the HDMI OUT jack. The video signals are output from the HDMI OUT jack when both are connected.
- Set “Resolution” to “AUTO” or “480i/576i” in the Video settings menu to output the video signals from the MONITOR VIDEO OUT, COMPONENT VIDEO MONITOR OUT jacks when both are connected.

To display Closed Caption

Set “Resolution” to “DIRECT” in the Video settings menu when receiving a signal that supports Closed Captions.

Use the same kind of cords for the input/output signals.

To connect a recording component


When recording, connect the recording component to the VIDEO OUT jack of the receiver. Connect cords for input and output signals to the same type of jack, as VIDEO OUT jack do not have an up-conversion function.

Note

Signals output from the MONITOR OUT jacks may not be recorded properly.

5: Connecting the antennas (aerials)

Connect the supplied AM loop antenna (aerial) and FM wire antenna (aerial).

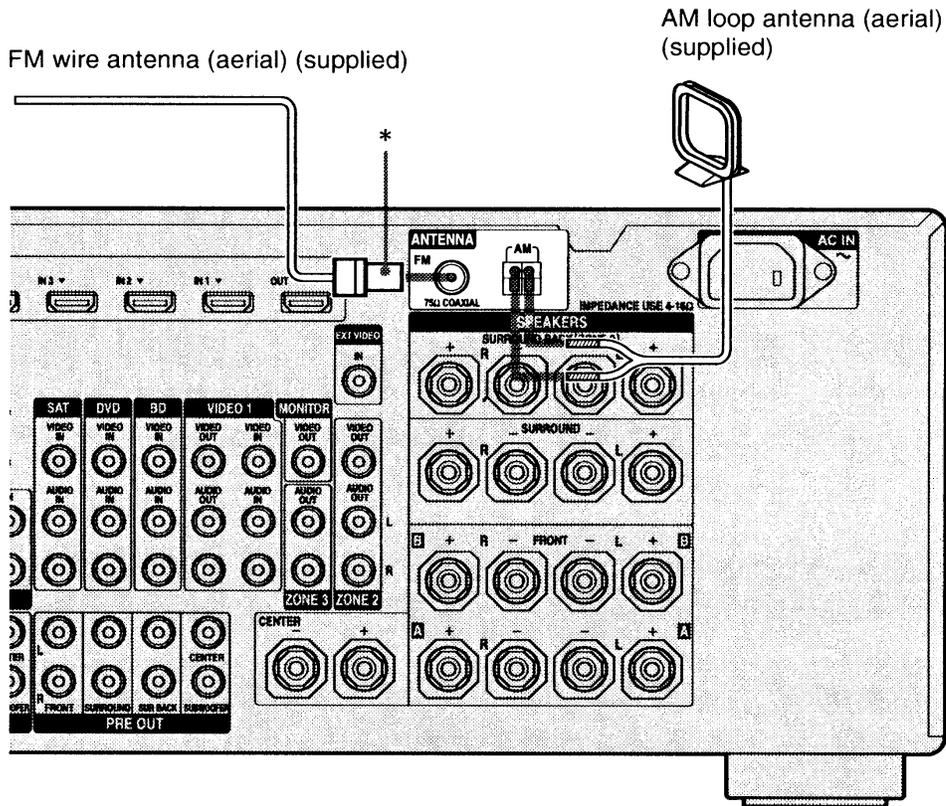

* The shape of the connector varies depending on the area.

Notes

- To prevent noise pickup, keep the AM loop antenna (aerial) away from the receiver and other components.
- Be sure to fully extend the FM wire antenna (aerial).
- After connecting the FM wire antenna (aerial), keep it as horizontal as possible.
- Before connecting cords, make sure to disconnect the AC power cord (mains lead).



6: Preparing the receiver and the remote

Connecting the AC power cord (mains lead)

Connect the supplied AC power cord (mains lead) to the AC IN terminal on the receiver, then connect the AC power cord (mains lead) to a wall outlet.

Notes


- Before connecting the AC power cord (mains lead), make sure that metallic wires of the speaker cords are not touching each other between the SPEAKERS terminals.
- Connect the AC power cord (mains lead) firmly.

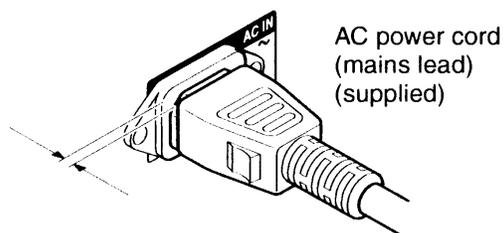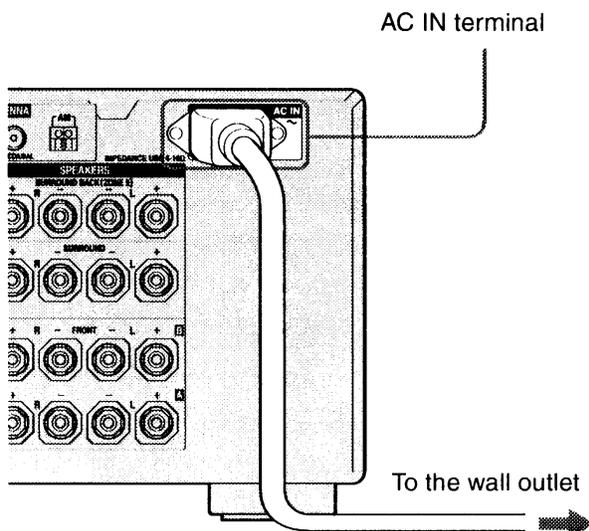

A several space is left between the plug and the rear panel even when the power cord (mains lead) is inserted firmly. The cord is supposed be connected this way. This is not malfunction.

Performing initial setup operations

Before using the receiver for the first time, initialize the receiver by performing the following procedure. This procedure can also be used to return settings you have made to their factory defaults.

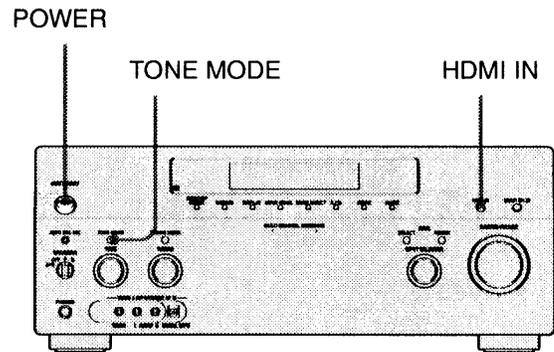

- 1 Press POWER to turn off the receiver.**
- 2 Hold down POWER while pressing TONE MODE and HDMI IN to turn on the receiver.**
- 3 Release the TONE MODE and HDMI IN after a few seconds.**


After “MEMORY CLEARING...” appears on the display for a while, “MEMORY CLEARED.” appears. All the settings you have changed or adjusted are reset to the initial settings.

Inserting batteries into the remote

Insert two R6 (size-AA) batteries in the RM-AAL016 remote commander.

Insert two R6 (size-AA) batteries in the RM-AAU038 remote control.

Observe the correct polarity when installing batteries.

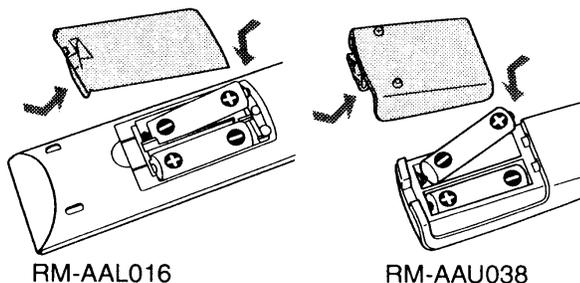

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with old ones.
- Do not mix manganese batteries and other kinds of batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you do not intend to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.
- When you replace the batteries, the programmed remote codes may be cleared. If this happens, program the remote codes again (page 124).

Tip


When the remote no longer operates the receiver, replace all the batteries with new ones.

7: Displaying the GUI menu on the TV screen

You can select the functions or change the settings of the receiver by using the GUI menu on the TV screen. Follow the procedure below to make the settings so that the GUI menu appears on the TV screen.

Tip

Refer to “Operating without connecting to a TV” (page 116) if you want to operate the receiver without connecting to a TV.

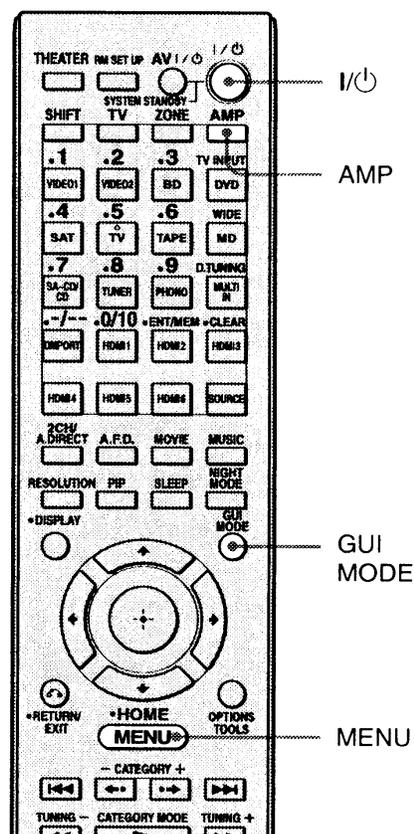

1 Connect a TV monitor to this receiver.

Refer to “3: Connecting the monitor” (page 23).



2 Turn on the receiver and the TV.

3 Press AMP.


The receiver can be operated using the remote.

4 Press GUI MODE.

After “GUI MODE ON” has appeared in the display window of the receiver, “GUI MODE” appears.

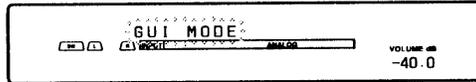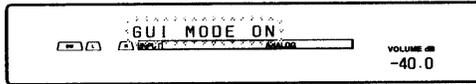

The receiver menu is displayed on the TV screen.

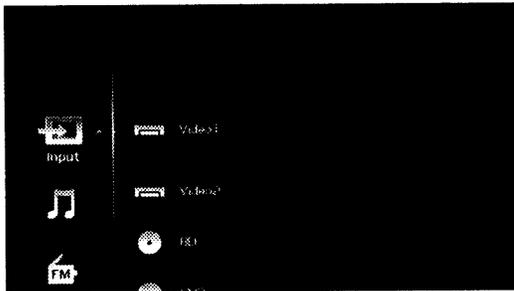

Tip

You can select the language to be used for messages on the GUI menu on the TV screen from English, Spanish, French and German. For details, see “ System settings” (page 116).


To exit the menu

Press MENU.

8: Setting the speakers

Setting the speaker impedances

Set the appropriate speaker impedance for the speakers you are using.

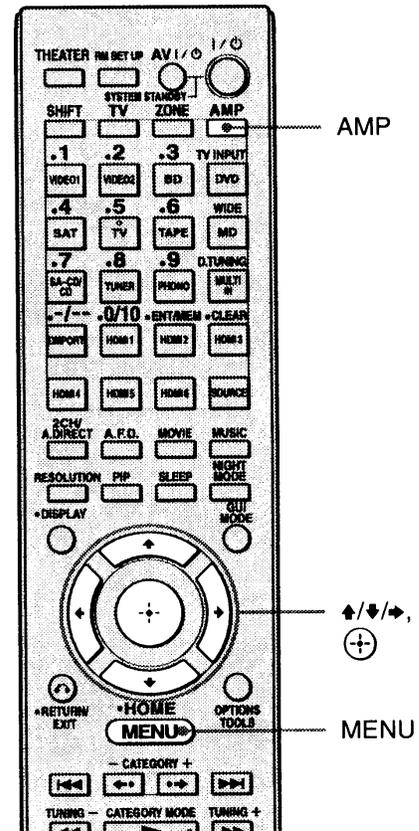


1 Press AMP.

The receiver can be operated using the remote.


2 Press MENU.

The menu is displayed on the TV screen.

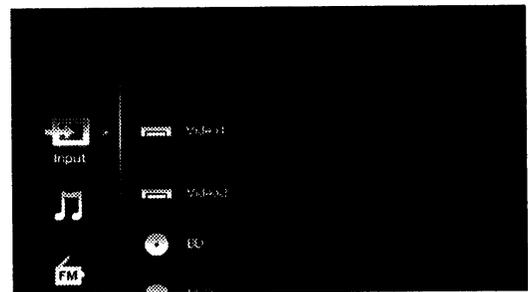


- 3** Press \uparrow/\downarrow repeatedly to select “Settings,” then press \oplus or \rightarrow .


The Settings menu list appears on the TV screen.

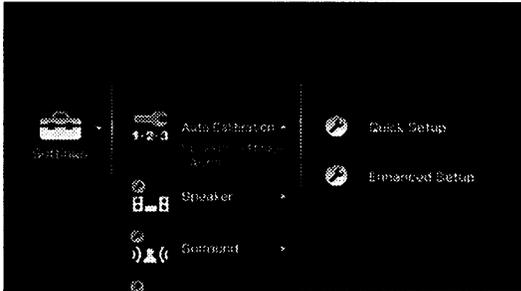

- 4** Press \uparrow/\downarrow repeatedly to select “Speaker,” then press \oplus or \rightarrow .

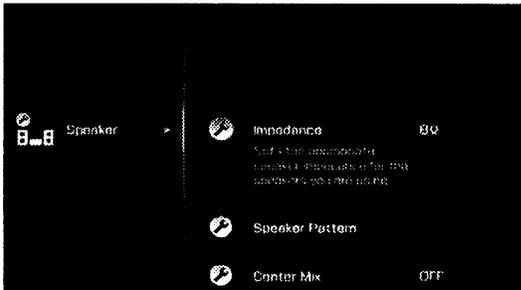


- 5** Press \uparrow/\downarrow repeatedly to select “Impedance,” then press \oplus .

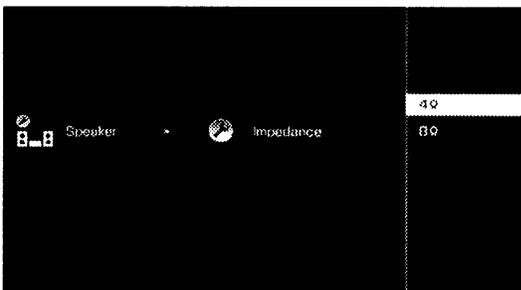

- 6** Press \uparrow/\downarrow repeatedly to select “4 Ω ” or “8 Ω ” depending on the speakers you are using, then press \oplus .

The parameter you have selected is entered.

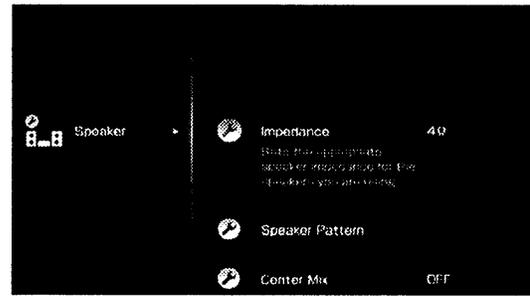

To exit the menu

Press MENU.


Notes

- If you are not sure of the impedances of the speakers, refer to the operating instructions supplied with your speakers. (This information is often on the back of the speaker.)
- When you connect all speakers with a normal impedance of 8 ohms or higher, set “Impedance” to “8 Ω .” When connecting other types of speakers, set it to “4 Ω .”
- When you connect front speakers to both the SPEAKERS A and B terminals, connect the speakers with a normal impedance of 8 ohms or higher.
 - When you connect speakers with impedance of 16 ohms or higher in both “A” and “B” configuration:
Set “Impedance” to “8 Ω ” in the Speaker settings menu.
 - For other types of speakers in other configurations:
Set “Impedance” to “4 Ω ” in the Speaker settings menu.

Selecting the front speakers

You can select the front speakers you want to drive.

SPEAKERS switch

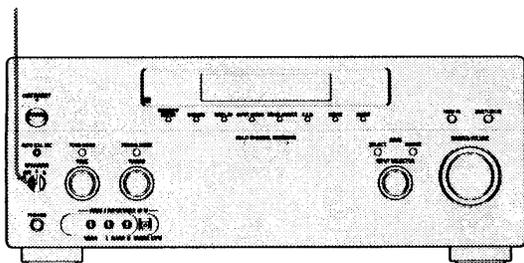

Set the SPEAKERS switch to select the front speaker system you want to drive.

Note

This setting is not available when headphones are connected.

Set to	To select
A	The speakers connected to the FRONT SPEAKERS A terminals.
B	The speakers connected to the FRONT SPEAKERS B terminals.
A+B	The speakers connected to both the FRONT SPEAKERS A and B terminals (parallel connection).
OFF	No audio signals are output from any speaker terminals, or the PRE OUT jacks.

9: Calibrating the appropriate speaker settings automatically (Auto Calibration)

The DCAC (Digital Cinema Auto Calibration) function allows you to perform automatic calibration, such as checking the connection between each speaker and the receiver, adjusting the speaker level, and measuring the distance of each speaker from your seating position automatically.


Before you perform the auto calibration

Before you perform the auto calibration, set up and connect the speakers (page 19-22).

- The AUTO CAL MIC jack is used for the supplied optimizer microphone only. Do not connect other microphones. Doing so may damage the receiver and the microphone.
- During the measurement, the sound that comes out of the speakers is very loud. The volume of the sound cannot be adjusted. Pay attention to the presence of children or to the effect on your neighborhood.
- Perform the measurement in a quiet environment to avoid the effect of noise and get a more accurate measurement.
- If there are any obstacles in the path between the optimizer microphone and the speakers, the calibration cannot be performed correctly. Remove any obstacle from the measurement area to avoid measurement error.
- When you use a bi-amplifier connection, set “Sur Back Assign” to “BI-AMP” in the Speaker settings menu before you perform auto calibration.

Notes

- The auto calibration function does not work if headphones are connected.
- Cancel MUTING if it is set to on.

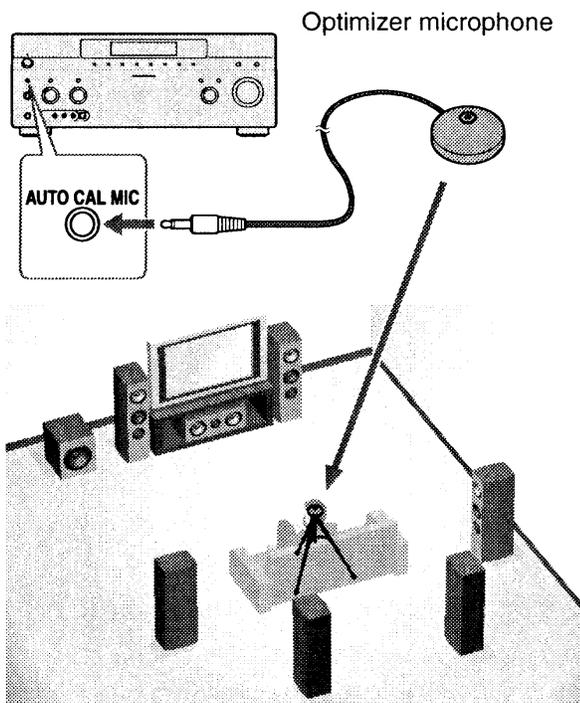


- 1 Connect the supplied optimizer microphone to the AUTO CAL MIC jack.**
- 2 Set up the optimizer microphone.**

Place the optimizer microphone at your seating position. Use a stool or tripod so that the optimizer microphone remains at the same height as your ears.

On setting up the active subwoofer

- When a subwoofer is connected, turn on the subwoofer and turn up the volume beforehand. Turn the MASTER VOLUME knob to just before the mid-point.
- If you connect a subwoofer with the crossover frequency function, set the value to maximum.

- If you connect a subwoofer with an auto standby function, set it to off (deactivated).

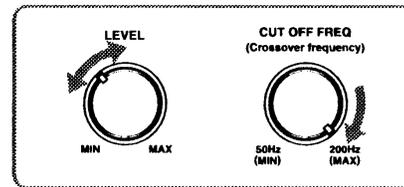

Note

Depending on the characteristics of the subwoofer you are using, the setup distance value may be further away from the actual position.

To use the receiver as a pre-amplifier

You can use the auto calibration function when you use the receiver as a pre-amplifier.

In this case, the distance value shown on the display may differ from the actual distance value. However, there will be no problems even if you continue to use the receiver with that value.


Performing auto calibration

The auto calibration function allows you to measure the following:

- Speaker connections^{a)}
- Polarity of speakers
- Speaker distance^{b)}
- Speaker size^{b)}
- Speaker level
- Frequency characteristics^{c)}

- a) This receiver corrects signals by analog downmix processing only for the center speaker and subwoofer when the multi-channel input is selected. The correction is invalid for other speakers.
- b) The measurement result is not utilized when the multi-channel input is selected.
- c) • Signals with a sampling frequency of higher than 96 kHz are always played back at either 44.1 kHz or 48 kHz.

- The measurement result is not utilized in the following cases.
 - The multi-channel input is selected.
 - “2ch Analog Direct” is being used.
- The measurement result is not utilized when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.

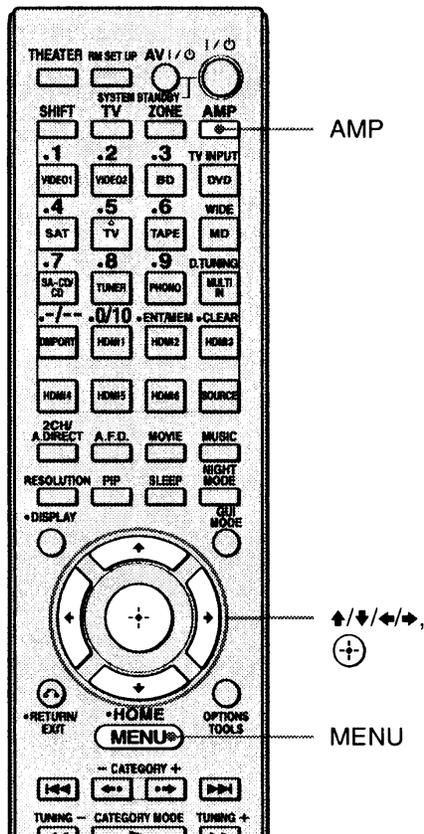


1 Press AMP.

The receiver can be operated using the remote.

2 Press MENU.

The menu is displayed on the TV screen.

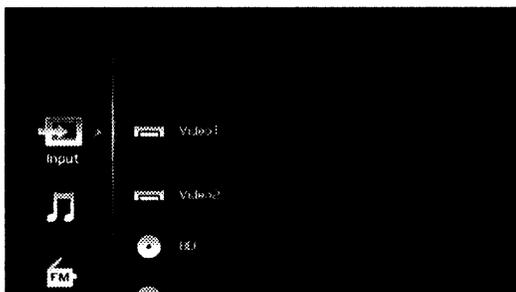


3 Press ↑/↓ repeatedly to select “Settings,” then press ⊕ or ➔.

The Settings menu list appears on the TV screen.




4 Press ↑/↓ repeatedly to select “Auto Calibration,” then press ⊕ or ➔.

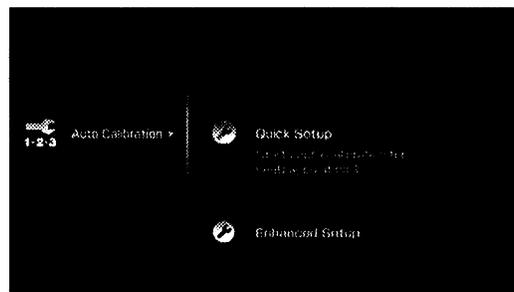


5 Press ↑/↓ repeatedly to select “Quick Setup,” then press ⊕.

The screen on which you can select the item to be measured appears.

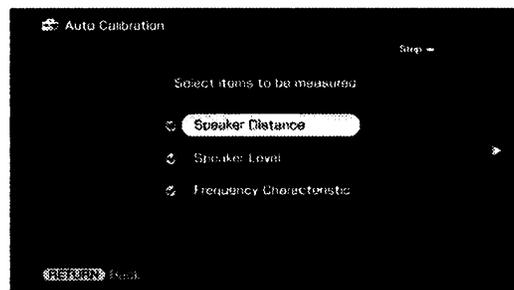


6 Press \uparrow/\downarrow repeatedly and \oplus to un-check the items you do not want to measure, then press \rightarrow .

The confirmation screen, asking whether you are ready to start measurement, appears.

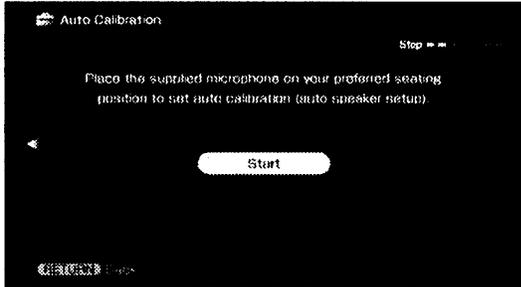

7 Press \oplus to select "Start."


The measurement starts in five seconds. When the measurement ends, a beep sounds and the measurement result appears on the TV screen.

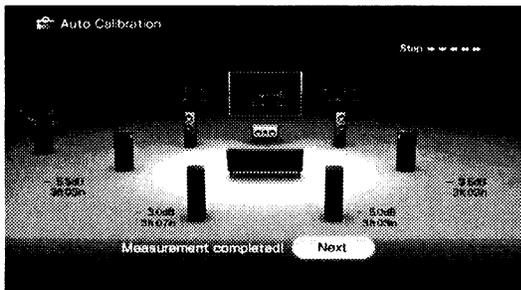

8 Press \oplus to select "Next."

"Save auto calibration (auto speaker setup)?" appears. To save the measurement results, follow the steps in "Saving the measurement results" (page 48).

If a warning message or error code appears on the screen, see "Message list after auto calibration measurement" (page 49).

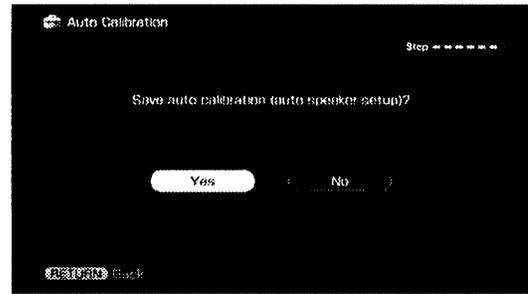

Note

When the speaker(s) is (are) out of the phase, "Out Phase" is displayed on the TV screen. The "+" and "-" terminals of the speaker may be connected the other way around. However, depending on the speakers, "Out Phase" appears on the TV screen even though the speakers are connected properly. This is because of the speakers' specifications. In this case, you can continue to use the receiver.

Tips

- Operations other than turning the receiver on or off are deactivated during the measurement.
- In the following situations, the measurements have not been performed correctly or auto calibration cannot be performed.
 - when connecting special speakers, such as dipole speakers.
 - when using the zone 2/zone 3 function in zone 2/zone 3.
- You can change the unit of distance use in "Distance Unit" in the Speaker settings menu.

To cancel the measurement


The measurement is cancelled when you change the volume, switch functions, change the setting of the SPEAKERS switch, or connect headphones.

Saving the measurement results

To save the measurement results obtained in “Performing auto calibration” (page 45), proceed with the following steps.

- 1 Press \leftarrow/\rightarrow to select “Yes” in step 8 in “Performing auto calibration,” then press \oplus .**

The selecting screen of the calibration type appears.

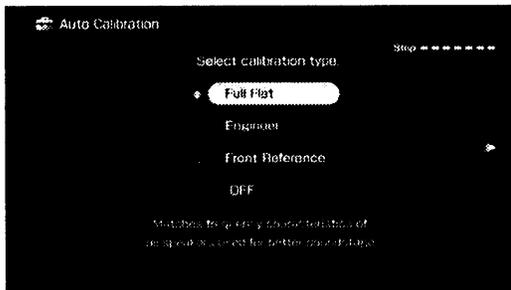


- 2 Press \uparrow/\downarrow repeatedly to select the auto calibration type, then press \oplus .**

Parameter	Explanation
Full Flat	Makes the measurement of frequency from each speaker flat.
Engineer	Sets the frequency to one that matches that of the Sony listening room standard.
Front Reference	Adjusts the characteristics of all the speakers to match the characteristics of the front speaker.
OFF	Sets the auto calibration EQ to off.

The measurement results are saved.

- 3 Press \rightarrow .**

The exit screen appears.

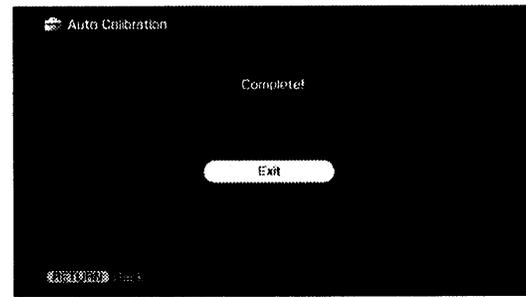

- 4 Press \oplus .**

Notes

- After reflecting the results of a compensation for a frequency characteristic, signals with a sampling frequency of higher than 96 kHz are always played back at either 44.1 kHz or 48 kHz.
- The frequency response measurement result is not utilized in the following cases.
 - The multi-channel input is selected.
 - “2ch Analog Direct” is being used.
- The measurement result is not utilized when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.

Tip

The size of a speaker (LARGE/SMALL) is determined by the low characteristics. The measurement results may vary, depending on the position of the optimizer microphone and speakers, and the shape of the room. It is recommended that you follow the measurement results. However, you can change those settings in the Speaker settings menu. Save the measurement results first, then try to change the settings if you want.

Checking the auto calibration results

If a warning message or error code appears in step 8 of “Performing auto calibration” (page 45), check the problem of the error and perform auto calibration again.

- 1 Press **←/→** to select “Yes,” then press **⊕** when “Error occurred during calibration, press to investigate.” appears on the screen.

Confirm the details of the measurement results, then proceed with the appropriate remedy.

- 2 Press **←/→** to select “Retry,” then press **⊕**.

- 3 Repeat steps 6 to 8 in “Performing auto calibration” (page 45).

To save measurement results that caused an error without taking a remedy

- 1 Press **←/→** to select “No”, then press **⊕** when “Error occurred during calibration, press to investigate.” appears on the screen.
- 2 Follow the steps in “Saving the measurement results” (page 48) to save the measurement results.

Message list after auto calibration measurement

Display	Explanation
Code 30	Headphones are connected. Remove the headphones and perform the auto calibration again.
Code 31	SPEAKERS (OFF/A/B/A+B) is set to OFF. Set it to others and re-perform the measurement.
Code 32	None of the speakers were detected. Make sure that the optimizer microphone is connected properly and reperform the measurement. If the optimizer microphone is connected properly but the error code appears, the optimizer microphone cable may be damaged or improperly connected.
Code 33	<ul style="list-style-type: none"> • None of the front speakers are connected or only one front speaker is connected. • The optimizer microphone is not connected. • Either the left or right surround speakers is not connected. • Surround back speakers are connected even though surround speakers are not connected. Connect the surround speaker(s) to the SURROUND terminals. • The surround back speaker is connected only to the SURROUND BACK SPEAKERS R terminals. When you connect only one surround back speaker, connect it to the SURROUND BACK SPEAKERS L terminals.
Warning 40	The measurement has completed. However, the noise level is high. You may be able to perform the measurement properly if you try it again, even though the measurement cannot be performed in all environments. Try to perform the measurement in a quiet environment.
Warning 41	The input from the microphone is too big.
Warning 42	<ul style="list-style-type: none"> • It may be too close the distance between the speaker and the microphone. Retry the measurement after setting apart from each other. • It may be that the volume is too big when you use the receiver as a preamp.
Warning 43	The distance and position of a subwoofer cannot be detected. Or the angle of the speaker position cannot be detected. This may be caused by noise. Try to perform the measurement in a quiet environment.

Display	Explanation
NO WARNING	There is no warning information.
-----	No speakers are connected.

Tip



Depending on the position of the subwoofer, the measurement results for polarity may vary.

However, there will be no problems even if you continue to use the receiver with that value.

Guide to on-screen display operation

You can display the menu of the receiver on the TV screen and select the function you want to use on the TV screen by pressing $\uparrow/\downarrow/\leftarrow/\rightarrow$ and \oplus on the remote.


To display the menu of the receiver on the TV screen, make sure that the receiver is in "GUI MODE" following the steps in "7: Displaying the GUI menu on the TV screen" (page 41).

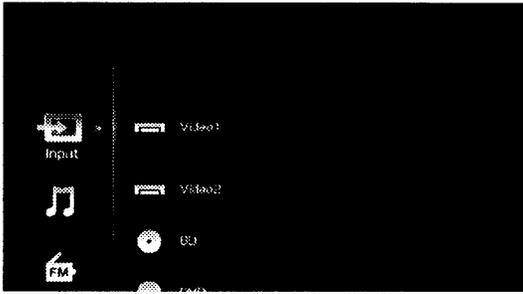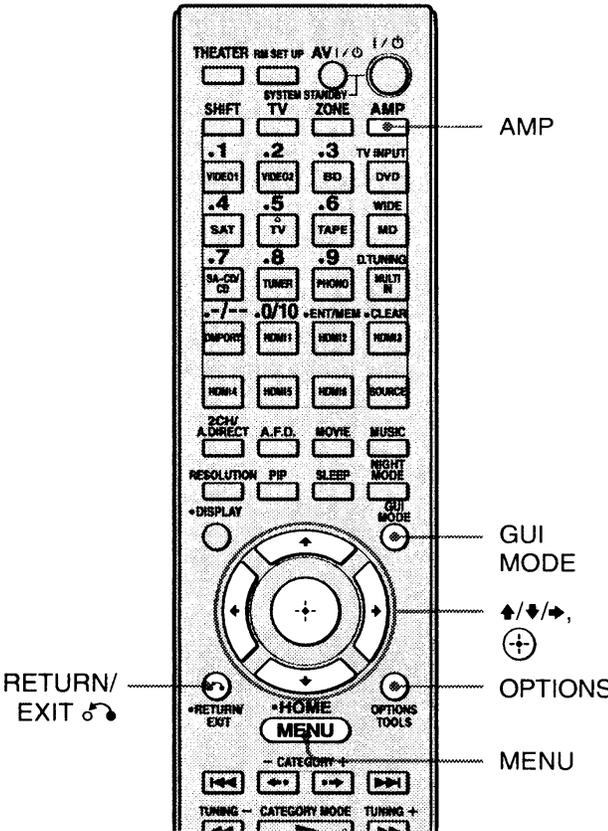

3 Press \uparrow/\downarrow repeatedly to select the menu you want, then press \oplus or \rightarrow to enter the menu mode.

The menu item list appears on the TV screen.

Example: When you select "Input"

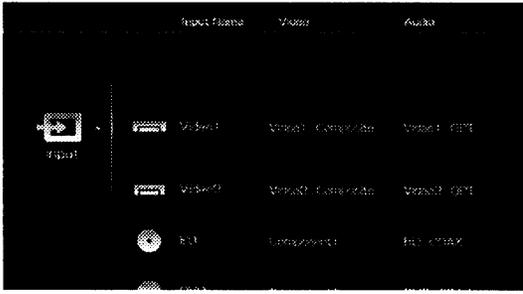

4 Press \uparrow/\downarrow repeatedly to select the menu item you want to adjust, then press \oplus to enter the menu item.

5 Repeat steps 3 and 4 to select the parameter you want.

To return to the previous screen
Press RETURN/EXIT \hookrightarrow .

To exit the menu
Press MENU.

Using the menu

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.

To exit “GUI MODE”

Press GUI MODE. “GUI MODE OFF” appears and you can operate the receiver using the menu in the display window of the receiver.

Overview of the main menus

Menu icon	Description
 Input	Selects the input source component connected to the receiver (page 53).
 Music	Selects the music from the audio component connected to the DIGITAL MEDIA PORT adapter (page 55).
 FM/AM/XM/SIRIUS	Selects the built-in FM/AM radio or satellite tuner connected (page 60, 63).
 Settings	You can adjust the settings of the speakers, the surround effect, equalizer, audio, video and other inputs connected to the HDMI jacks (page 102).

Using the option menus


When you press OPTIONS, the option menus for the selected main menu are displayed. You can select a related function without reselecting the menu.

1 Press AMP.

The receiver can be operated using the remote.

2 Press MENU.


The menu is displayed on the TV screen.

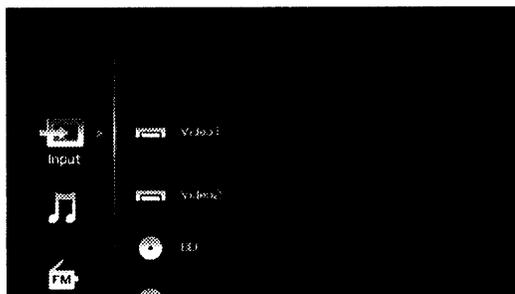

3 Press \uparrow/\downarrow repeatedly to select a menu you want, then press \oplus or \rightarrow to enter the menu mode.


The menu item list appears on the TV screen.

Example: When you select “ Input”

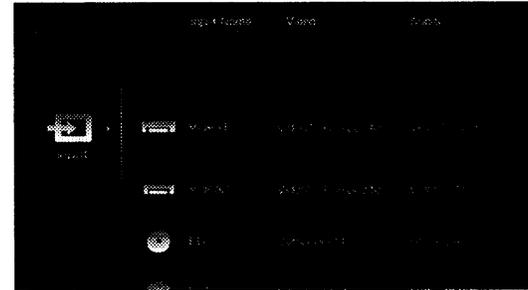

4 Press OPTIONS while the menu item list is displayed.

The option menu appears.

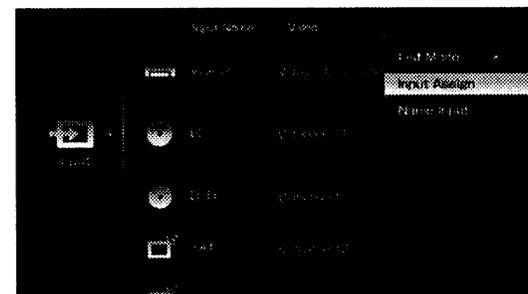

5 Press \uparrow/\downarrow repeatedly to select the option menu item you want, then press \oplus .


6 Press \uparrow/\downarrow repeatedly to select the parameter you want, then press \oplus .

To exit the menu

Press MENU.

Playback

Enjoying sound/images from the component connected to the receiver

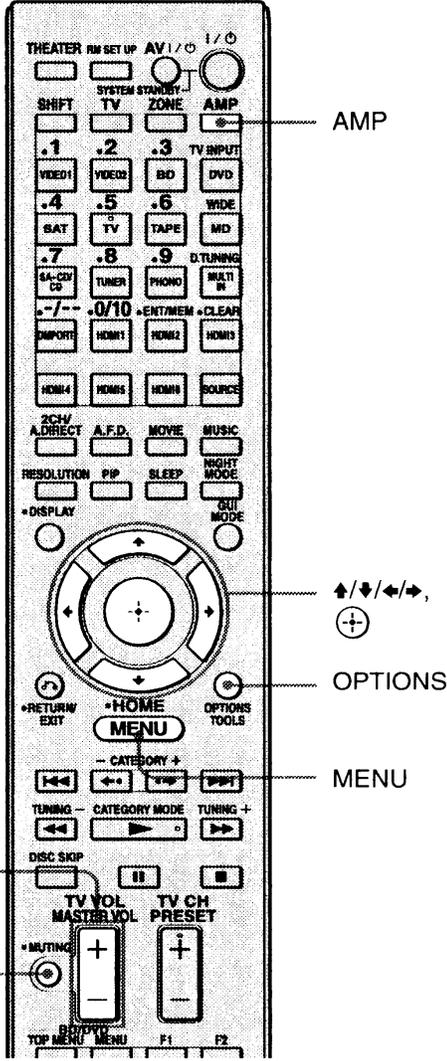

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.

- 3 Press \uparrow/\downarrow repeatedly to select “Input,” then press \oplus or \rightarrow .**
The menu item list appears on the TV screen.

- 4 Press \uparrow/\downarrow repeatedly to select the component you want, then press \oplus .**
The menu screen disappears and the playback screen of the external input appears.

Selected input	Components that can be used
Video1, Video2	VIDEO 1, 2 VCR, etc., connected to the VIDEO 1 or VIDEO 2 jack.
BD	Blu-ray Disc Player, etc., connected to the BD jack.
DVD	DVD player, etc., connected to the DVD jack.
SAT	Satellite tuner, etc., connected to the SAT jack.
TV	TV connected to the TV jack.
TAPE	Tape deck, etc., connected to the TAPE jack.
MD	MD deck, etc., connected to the MD jack.
SA-CD/CD	Super Audio CD or CD player, etc., connected to the SA-CD/CD jack.
Phono	Turntable, etc., connected to the PHONO jack.
MULTI IN	Component connected to the MULTI CHANNEL INPUT jack.
HDMI1, 2, 3, 4, 5, 6	HDMI components connected to the HDMI1, HDMI2, HDMI3, HDMI4, HDMI5, or HDMI6 jack.

continued

5 Turn on the component and start playback.

6 Press MASTER VOL +/- to adjust the volume.

Tips

- You can adjust the volume differently depending on the speed with which you turn the MASTER VOLUME knob.
To turn the volume up or down quickly: turn the knob quickly.
To make fine adjustment: turn the knob slowly.
- You can adjust the volume differently depending on the length of time you press and hold the MASTER VOL +/- button on the remote.
To turn the volume up or down quickly: press and hold the button.
To make a fine adjustment: press the button and release it immediately.

To activate the muting function

Press MUTING on the remote. To cancel, press MUTING on the remote again or press MASTER VOL + to raise the volume.

To avoid damaging your speakers

Before you turn off the receiver, be sure to turn down the volume level.

Naming the input (Name Input)

You can enter a name of up to 8 characters for inputs and display it.

This is convenient for labeling the jacks with the names of the connected components.

1 Press **▲/▼** repeatedly on the “**Input**” screen to select the input you want to name.

2 Press **OPTIONS**.

The option menu appears.

3 Press **▲/▼** repeatedly to select “**Name Input**,” then press **⊕**.

The soft keyboard appears on the screen.

4 Press **▲/▼/◀/▶** to select a character one by one, then press **⊕**.

5 Press **▲/▼/◀/▶** to select “**Finish**,” then press **⊕**.

The name you entered is registered.

To cancel naming input

Press **▲/▼/◀/▶** to select “**Cancel**,” then press **⊕**.

Changing the display items (List Mode)

When you select “**Input**,” you can change the items to be displayed.

1 Press **▲/▼** repeatedly on the “**Input**” screen to select the input you want.

2 Press **OPTIONS**.

The option menu appears.

3 Press **▲/▼** repeatedly to select “**List Mode**,” then press **⊕**.

4 Press **▲/▼** repeatedly to select the item you want to display, then press **⊕**.

- Input Assign
Input name and audio/video input jack assigned to the input are displayed in a list.
- Sound Field
Input name and the sound field selected for the input are displayed in a list.
- A/V Sync
Input name and the delay set on the “**A/V Sync**” menu for the input are displayed in a list.

Enjoying sound/images from the components connected to the DIGITAL MEDIA PORT

The DIGITAL MEDIA PORT is for enjoying sound/images from a portable audio source or computer by connecting a DIGITAL MEDIA PORT adapter.

Available DIGITAL MEDIA PORT adapters vary in each area.

For details on connecting the DIGITAL MEDIA PORT adapter, see “Connecting components with digital audio input/output jacks” (page 26).


Sony offers the following DIGITAL MEDIA PORT adapters:

- TDM-BT1 Bluetooth™ Wireless Audio Adapter
- TDM-NW1/NW10 DIGITAL MEDIA PORT Adapter
- TDM-NC1 Wireless Network Audio Client
- TDM-iP1/iP10/iP50 DIGITAL MEDIA PORT Adapter
- TPM-MP10 DIGITAL MEDIA PORT Adapter

The DIGITAL MEDIA PORT adapter is an optional product.

Notes

- Do not connect an adapter other than the DIGITAL MEDIA PORT adapter.
- Before disconnecting the DIGITAL MEDIA PORT adapter, make sure to turn the receiver off using the remote.
- Do not connect or disconnect the DIGITAL MEDIA PORT adapter to/from the receiver while the system is turned on.
- Depending on the type of DIGITAL MEDIA PORT adapter, the images are also output.

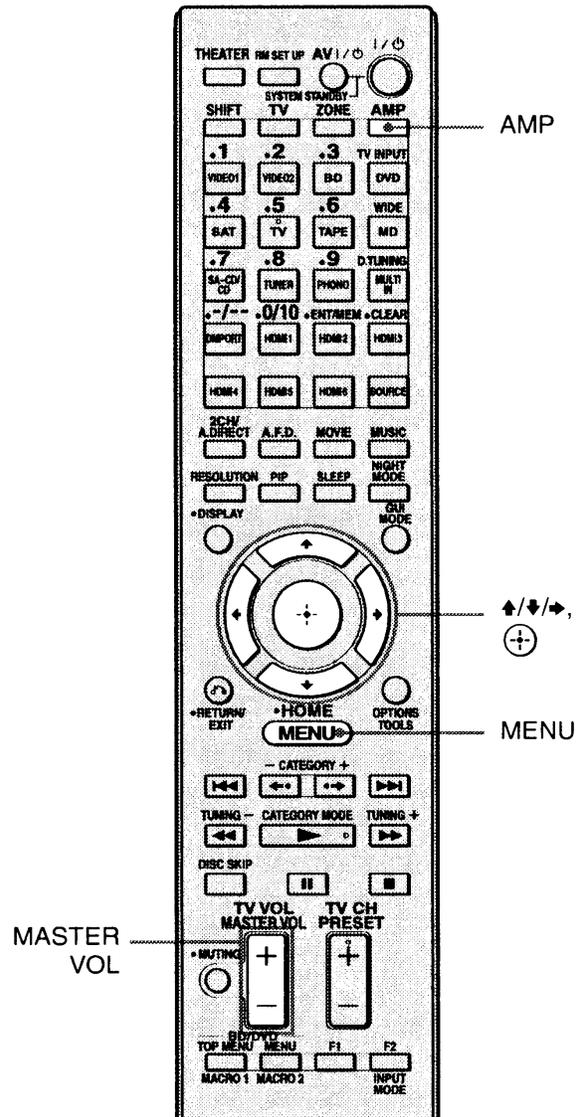

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press \uparrow/\downarrow repeatedly to select “ ♪ Music,” then press \oplus or \rightarrow .**
- 4 Press \uparrow/\downarrow repeatedly to select “DMPort,” or a component connected to the DIGITAL MEDIA PORT adapter, then press \oplus .**

continued

The component connected to the DIGITAL MEDIA PORT adapter is recognized and “DMPORT” on the screen will change to the respective component’s name with an icon. If the adapter connected cannot be recognized, “DMPORT” is displayed on the TV screen.


Icon	Component that is connected
	DMPORT A component other than one of the following is connected.
	iPod The iPod model recognized is connected.
	Network Client The Network Client recognized is connected.
	Bluetooth The Bluetooth drive recognized is connected.
	Mobile Phone The Mobile Phone recognized is connected.

5 Select a track you want to play using the component connected to the DIGITAL MEDIA PORT adapter.

6 Press MASTER VOL +/- to adjust the volume.

Operating the TDM-iP1/iP50/TDM-NC1 using the GUI menu of the receiver

Make sure that “System GUI” is selected in step 4 in “Changing the operation screen using the DIGITAL MEDIA PORT” (page 58).

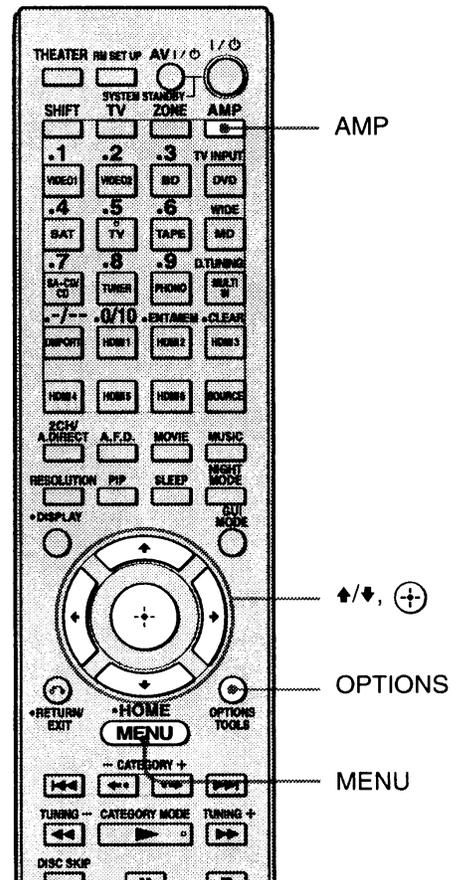

1 Press AMP.

The receiver can be operated using the remote.

2 Press MENU.

The menu is displayed on the TV screen.

3 Press **↑/↓** repeatedly to select “**Music**,” then press **+**.

4 Press **▲/▼** repeatedly to select the component connected to the **DIGITAL MEDIA PORT** adapter you want to play, then press **⊕**.

The contents list appears.

5 Press **▲/▼/◀/▶** and **⊕** to select track from the track list.

In case of iPod



In case of Network Client



^{a)} Displayed only when M-crew Server is connected.

^{b)} Displayed only when a DLNA server other than M-crew Server is connected.

^{c)} Displayed as “Genre,” “Artist” or “Album,” depending on setting of “List Mode.”

6 Press **MASTER VOL +/-** to adjust the volume.

Selecting the playback mode

1 Play back the track you want to listen to following the steps outlined in “Operating the TDM-iP1/iP50/TDM-NC1 using the GUI menu of the receiver” (page 56).

2 Press **OPTIONS**.

The option menu appears.

3 Press **▲/▼** repeatedly to select the playback mode you want from the following.

■ **Shuffle (TDM-iP1/iP50 only)**

Plays all the tracks in random order.

- Off
Deactivates the shuffle play mode.
- Albums
Plays all the tracks on an album in random order.
- Songs
Plays all the tracks in “Songs” in random order.

■ **Repeat (TDM-iP1/iP50 only)**

Plays one or all the tracks repeatedly.

- Off
Deactivates the repeat play mode.
- One
Plays one track repeatedly.
- All
Plays all the tracks repeatedly.

■ **List Mode (TDM-NC1 only)**

Selects a range of tracks to be played back.

- Genre
Plays back tracks in the selected genre.
- Artist
Plays back tracks of the selected artist.
- Album
Plays back tracks in the selected album.

DIGITAL MEDIA PORT message list

Message appears	Explanation
No Adapter	The adapter is not connected.
No Device	There is no device connected to the adapter.
No Audio	No audio file was found.
Loading	The data is being read.
No Server*	There is no server connected.
No Track*	No track was found.
No Item*	No item was found.
Connecting*	Connecting to the server.
Configuring*	The network is setting up.
Warning*	Check the display of the DIGITAL MEDIA PORT adapter.
Party Mode*	The unit is currently in party mode "Guest."
Searching*	Searching the server.

* TDM-NC1 only.

Changing the operation screen using the DIGITAL MEDIA PORT

You can change the operation screen using the GUI menu. The DMPORT Control mode is supported by the DIGITAL MEDIA PORT adapters like TDM-iP1/iP50, TDM-NC1. This mode is not supported by other adapters.

1 Press \uparrow/\downarrow repeatedly on the "Music" screen to select the DIGITAL MEDIA PORT adapter you want, then press \oplus or \rightarrow .

2 Press OPTIONS.

The option menu appears.

3 Press \uparrow/\downarrow to select "DMPORT Control," then press \oplus .

If "DMPORT Control" is not displayed, see the operating instructions supplied with component for details on operating that component.

4 Press \uparrow/\downarrow repeatedly to select the mode you want, then press \oplus .

You can select the following modes in this menu;

- System GUI

This mode is for the TDM-iP1/iP50 and TDM-NC1. The list of tracks will be displayed on the GUI screen of the receiver. You can select a track you want and play back it on each GUI screen.

- Adapter GUI

This mode is for the TDM-iP1/iP50 and TDM-NC1. The menu of the adapter will be displayed on the TV screen.

- iPod

This mode can be selected only when the TDM-iP1/iP50 is connected.

To operate the TDM-iP1/iP50 or TDM-NC1 using the adapter menu

Make sure that “Adapter GUI” is selected in step 4 in “Changing the operation screen using the DIGITAL MEDIA PORT” (page 58).

For details on operating the adapter using the adapter GUI menu, refer to the operating instructions supplied with the adapter you are using.

To operate the TDM-iP1/iP50 using the iPod menu

Make sure that “iPod” is selected in step 4 in “Changing the operation screen using the DIGITAL MEDIA PORT” (page 58).

For details on operating the iPod, refer to the operating instruction supplied with the iPod.

Tuning

Listening to FM/AM radio


You can listen to FM and AM broadcasts through the built-in tuner. Before operation, make sure you have connected the FM and AM antennas (aerials) to the receiver (page 39).

Tip

The tuning scale for direct tuning is shown below.

- FM band 100 kHz
- AM band 10 kHz

The AM tuning scale can be changed (page 61).

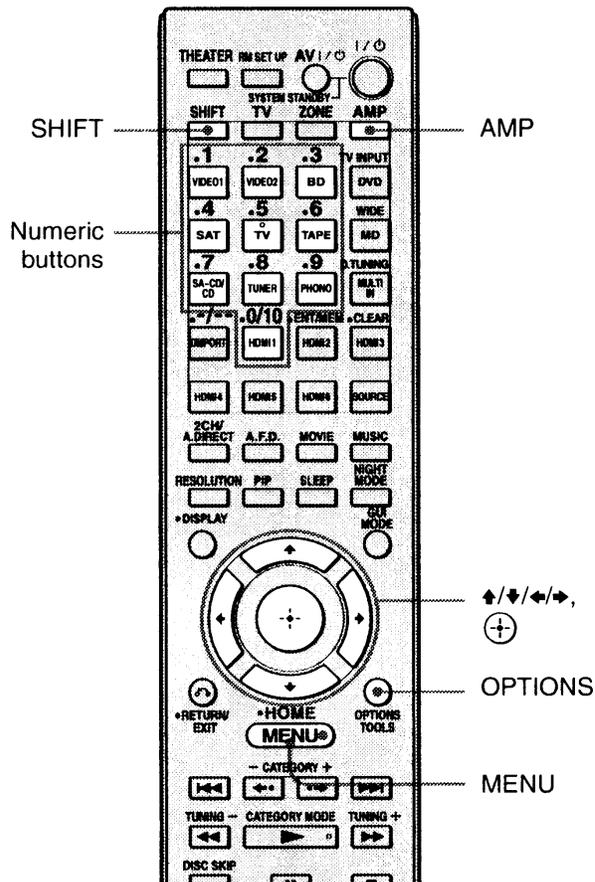

Tuning into a station automatically (Auto Tuning)

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press \uparrow/\downarrow repeatedly to select “**FM** FM” or “**AM** AM,” then press \oplus or \rightarrow .**
The FM or AM menu list appears on the TV screen.
- 4 Press \uparrow/\downarrow to select “Auto Tuning,” then press \oplus .**
- 5 Press \uparrow/\downarrow .**
Press \uparrow to scan from low to high, press \downarrow to scan from high to low.
The receiver stops scanning whenever a station is received.

In case of poor FM stereo reception

- 1 Tune in the station you want to listen to using Auto Tuning, Direct Tuning (page 61), or select the preset station you want (page 62).**
- 2 Press OPTIONS.**
The option menu appears.
- 3 Press \uparrow/\downarrow to select “FM Mode,” then press \oplus .**
- 4 Press \uparrow/\downarrow to select “MONO,” then press \oplus .**

Tuning into a station directly (Direct Tuning)

Enter the frequency of a station directly by using the numeric buttons.

1 Press AMP.

The receiver can be operated using the remote.

2 Press MENU.

The menu is displayed on the TV screen.

3 Press \uparrow/\downarrow repeatedly to select “FM FM” or “AM AM,” then press \oplus or \rightarrow .

4 Press \uparrow/\downarrow to select “Direct Tuning,” then press \oplus .

5 Press SHIFT, then press the numeric buttons to enter the frequency, then press \oplus .

Example 1: FM 102.50 MHz

Select 1 \rightarrow 0 \rightarrow 2 \rightarrow 5

Example 2: AM 1,350 kHz

Select 1 \rightarrow 3 \rightarrow 5 \rightarrow 0

Tip

If you have tuned in an AM station, adjust the direction of the AM loop antenna (aerial) for optimum reception.


If you cannot tune in a station

“---.--- MHz” appears and then the display returns to the current frequency.

Make sure you have entered the right frequency. If not, repeat step 5. If you still cannot tune in a station, the frequency is not used in your area.

Changing the AM tuning scale

You can change the AM tuning scale to either 9 kHz or 10 kHz on the receiver.

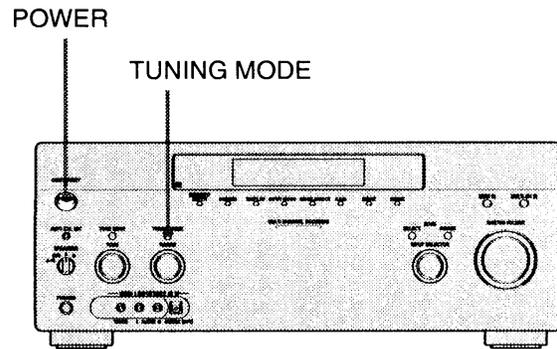

1 Press POWER to turn off the receiver.

2 While holding down TUNING MODE, press POWER on the receiver.

3 Change the current AM tuning scale to 9 kHz (or 10 kHz).


To reset the scale to 10 kHz (or 9 kHz), repeat the procedure above.

Note

All preset stations will be erased when you change the tuning scale.

Presetting FM/AM radio stations

You can preset up to 30 FM and 30 AM stations. Then you can easily tune in the stations you often listen to.

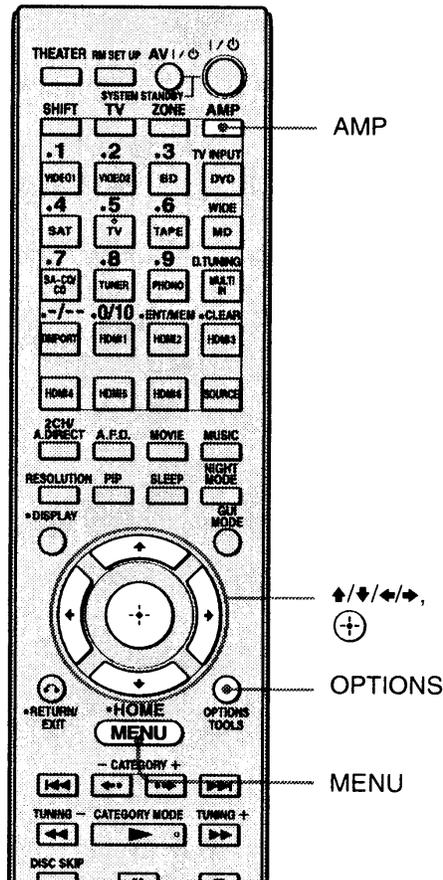

- 1** Tune in the station that you want to preset using Auto Tuning (page 60) or Direct Tuning (page 61).
In case of poor FM stereo reception, switch the FM reception mode (page 60).
- 2** Press **OPTIONS**.
The option menu appears.
- 3** Press **↑/↓** to select “Memory,” then press **⊕**.

- 4** Press **↑/↓** to select a preset number, then press **⊕**.
The station is stored as the selected preset number.

- 5** Repeat steps 1 to 4 to preset another station.

You can store stations as follows:

- AM band: AM1 to AM30
- FM band: FM1 to FM30

Tuning to preset stations

- 1** Press **AMP**.
The receiver can be operated using the remote.
- 2** Press **MENU**.
The menu is displayed on the TV screen.
- 3** Press **↑/↓** repeatedly to select “**FM** FM” or “**AM** AM,” then press **⊕** or **→**.
- 4** Press **↑/↓** to select the preset number station you want.
Preset numbers from 1 to 30 are available.

Naming preset stations (Name Input)

- 1** On “**FM** FM” or “**AM** AM” screen, press **↑/↓** to select the preset number on which you have stored the station and which you want to name.
- 2** Press **OPTIONS**.
The option menu appears.
- 3** Press **↑/↓** repeatedly to select “Name Input,” then press **⊕**.
The soft keyboard appears on the screen.

4 Press **↑/↓/←/→** to select a character one by one, then press **⊕**.

5 Press **↑/↓/←/→** to select “Finish,” then press **⊕**.

The name you entered is registered.

To cancel naming input

Press **↑/↓/←/→** to select “Cancel,” then press **⊕**.

Listening to satellite radio

You can listen to XM Radio and SIRIUS Satellite Radio by connecting a satellite tuner, not supplied, to the receiver.

XM Radio service

About XM Radio

XM is North America’s number one satellite radio company, offering an extraordinary variety of commercial-free music, plus the best in premier sports, news, talk radio, comedy, children’s and entertainment programming, broadcast in superior digital audio quality coast to coast. For more information, or to subscribe, U.S. customers visit xmradio.com or call XM Listener Care at 1-800-XMRADIO (1-800-967-2346); Canadian customers visit xmradio.ca or call XM Listener Care at 1-877-GETXMSR (1-877-438-9677).

XM Ready® Legal

XM monthly service subscription sold separately. XM Mini-Tuner and Home Dock required (each sold separately) to receive XM service. It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate or otherwise make available any technology or software incorporated in receivers compatible with the XM satellite Radio System. Installation costs and other fees and taxes, including a one-time activation fee may apply. All fees and programming subject to change. Channels with frequent explicit language are indicated with an XL. Channel blocking is available for XM radio receivers by calling 1-800-XMRADIO (U.S. residents) and 1-877-GETXMSR (Canadian residents). Only available in the 48 contiguous United States and Canada. ©2008 XM Satellite Radio Inc. All rights reserved.

XM Ready® Subscription

Once you have installed the XM Mini-Tuner Home Dock, inserted the XM Mini-Tuner, connected the XM Mini-Tuner Home Dock to your XM Ready® audio system, and installed the antenna, you are ready to subscribe and begin receiving XM programming. There are three places to find your eight character XM Radio ID: On the XM Mini-Tuner, on the XM Mini-Tuner package, and on XM Channel 0. Record the Radio ID below for reference.

Note

The XM Radio ID does not use the letters “I”, “O”, “S” or “F”.

Activate your XM Satellite Radio service in the U.S. online at <http://activate.xmradio.com> or call 1-800-XMRADIO (1-800-967-2346). Activate your XM Satellite Radio service in Canada online at <https://activate.xmradio.ca> or call 1-877-GETXMSR (1-877-438-9677). You will need a major credit card. XM will send a signal from the satellites to activate the full channel lineup. Activation normally takes 10-15 minutes, but during peak busy periods you may need to keep your XM Ready audio system on for up to an hour. When you can access the full lineup on your XM Ready audio system you are done.

SIRIUS Satellite Radio service

SIRIUS Satellite Radio: The Best Radio On Radio

SIRIUS brings all your favorite entertainment including 100% commercial-free music, plus superior sports coverage, uncensored talk and comedy, world-class entertainment, news, weather and more for your car, home or office. Sirius is available in the US for subscribers with addresses in the continental US and is available in Canada for subscribers with a Canadian address. Required subscription plus compatible SiriusConnect Home Tuner with antenna are required and sold separately. SIRIUS


Programming is subject to change. Visit sirius.com or siriuscanada.ca for the most complete and up-to-date channel lineup and product information. “SR SIRIUS” and the SIRIUS dog logo and related marks are trademarks of SIRIUS Satellite Radio Inc. All rights reserved.

To Subscribe to SIRIUS Satellite Radio

Purchase and connect a SiriusConnect Home Tuner to your Sirius Ready home audio system.

You are then ready to activate and subscribe to Sirius by either calling 1.888.539.SIRIUS (7474) or log on to sirius.com (US), siriuscanada.ca (Canada). It is that easy.

Connecting a satellite radio tuner

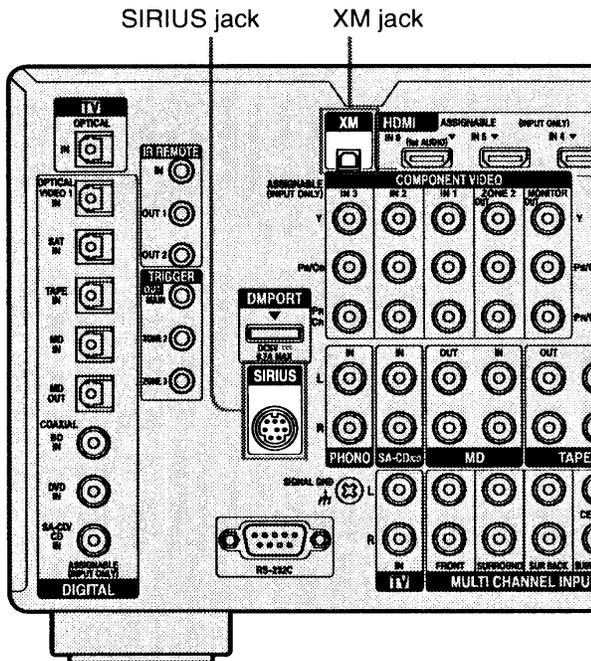

To connect to the XM jack

Before operating the system, connect the XM Mini-Tuner and Home Dock to the XM jack.


Note

To ensure optimal reception of XM's satellite signal, move your antenna to various window locations around your home to see where the best reception will be received. Most XM customers place the antenna in a south-facing window with a clear view to the sky.

To connect to the SIRIUS jack

Connect the SiriusConnect Home tuner. When you use the SiriusConnect Home tuner with this receiver, be sure to connect the AC power adaptor supplied with the tuner to a wall outlet. Keep the SiriusConnect Home tuner, antenna, and AC power adaptor away from the speaker cords and the power cord to avoid picking up noise.

Preparing to listen to a satellite radio

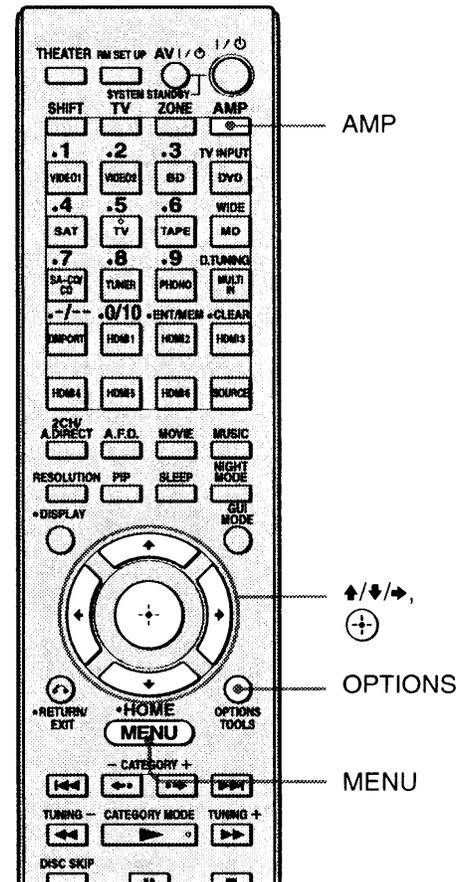

Checking the ID number

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press \uparrow/\downarrow repeatedly to select " \leftarrow XM" or " \leftarrow SIRIUS," then press \oplus or \rightarrow .**

- 4** Press **▲/▼** to select “ALL,” then press **⊕** or **➡**.

When the Preset Mode screen is displayed, change the tuning mode to “Category Mode,” then select “ALL.” Press **OPTIONS**, then press **▲/▼** repeatedly to select “Category Mode.”

- 5** Press **▲/▼** to select the channel **0**, then press **⊕**.

- 6** Check the XM Radio ID or Sirius ID on the TV screen and write it in the space provided here.

XM Radio ID: _____

Sirius ID: _____

You can also check the XM Radio ID and Sirius ID using the display on the receiver.

- 6** While checking the quality of the reception, adjust the direction of the antenna to obtain the best reception.

To exit the menu

Press **MENU**.

Checking receiving conditions (Antenna Aiming)

- 1** Press **AMP**.

The receiver can be operated using the remote.

- 2** Press **MENU**.

The menu is displayed on the TV screen.

- 3** Press **▲/▼** repeatedly to select “**XM** XM” or “**SR** SIRIUS,” then press **⊕** or **➡**.


- 4** Press **OPTIONS**.

The option menu appears.

- 5** Press **▲/▼** repeatedly to select “Antenna Aiming,” then press **⊕**.

The Antenna Aiming screen appears.

Selecting a channel of the satellite radio

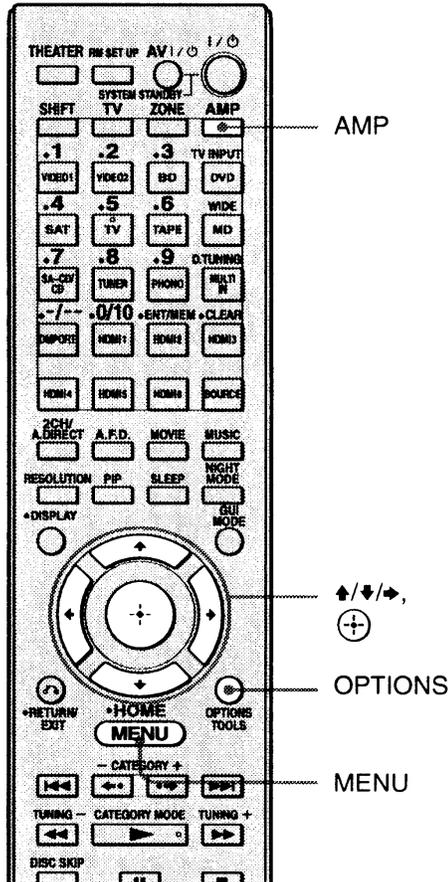

Selecting a channel by category (Category Mode)

You can select a channel from one category or all the categories.

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press \uparrow/\downarrow repeatedly to select “**XM** XM” or “**SR** SIRIUS,” then press \oplus or \rightarrow .**
- 4 Press OPTIONS.**
The option menu appears.

- 5 Press \uparrow/\downarrow repeatedly to select the category, then press \oplus .**
 - ALL: You can select a channel from all the categories.
 - (category name): You can select a channel from one category.
- When the “Preset Mode” screen is displayed, press OPTIONS, then press \uparrow/\downarrow repeatedly to select “Category Mode.”

- 6 Press \uparrow/\downarrow to select the channel, then press \oplus .**
The selected channel is being received. The channel information is displayed on the TV screen.

Note
When you select a channel in the “Category Mode,” the channel you selected may not be the one in the category you want. This is because one channel may belong to more than one category.

Selecting a channel by inputting the channel number directly (Direct Tuning)

- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press \uparrow/\downarrow repeatedly to select “**XM** XM” or “**SR** SIRIUS,” then press \oplus or \rightarrow .**
- 4 Press OPTIONS.**
The option menu appears.
- 5 Press \uparrow/\downarrow to select “Direct Tuning,” then press \oplus .**
- 6 Press the numeric buttons to enter the channel number.**


Tuning

7 Press .

The selected channel is tune in.

Presetting satellite radio channels

You can select the channels you want directly by presetting them using the preset numbers. You can preset up to 30 XM Radio channels and 30 SIRIUS Satellite Radio channels.

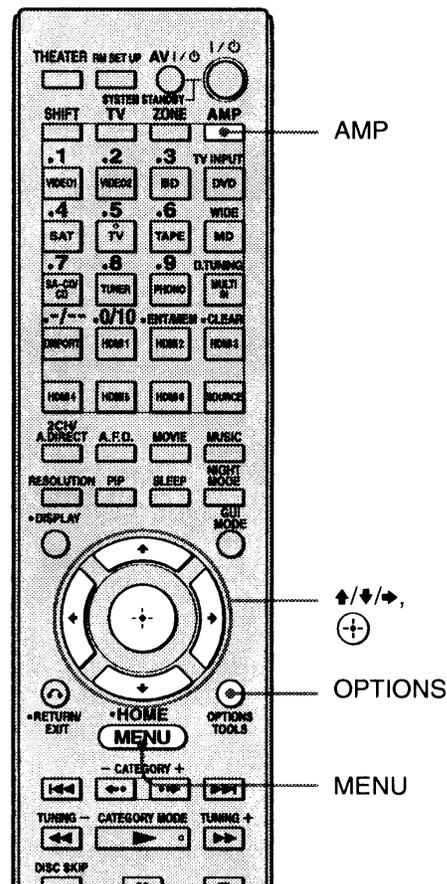

1 Select a channel you want to preset using Category Mode (page 67) or Direct Tuning (page 67).

2 Press **OPTIONS**.

The option menu appears.

3 Press **↑/↓** to select “Memory,” then press .

The preset number selection screen appears.

4 Press **▲/▼** repeatedly to select the preset number you want to use as the preset channel, then press **⊕**.

Preset channels from 1 to 30 are available, and a default channel is preset for all the preset channels when you purchase the receiver.

The selected channel is registered as the preset channel you selected in step 1.

5 Repeat steps 1 to 4 to preset another channel.

You can store channels from 1 to 30.

Selecting preset channels

1 Press **AMP**.

The receiver can be operated using the remote.

2 Press **MENU**.

The menu is displayed on the TV screen.

3 Press **▲/▼** repeatedly to select “**XM XM**” or “**SR SIRIUS**,” then press **⊕** or **▶**.

4 Press **▲/▼** to select the preset number from the preset list, then press **⊕**.

You can select stored preset channels from 1 to 30.


Notes

- The channel information you have preset may be changed if XM Satellite Radio Inc. or SIRIUS Satellite Radio Inc. change their channel programming.
- When the “Category Mode” screen is displayed, press **OPTIONS**, then press **▲/▼** to select “Preset Mode.”

Restricting access to specific channels (Parental Lock) (SIRIUS only)

You can restrict access to certain channels using your own lock code. The lock code is set to “0000” as the default.

Change the lock code before you use this function for the first time. See “To change the lock code (Lock Code)” (page 70).

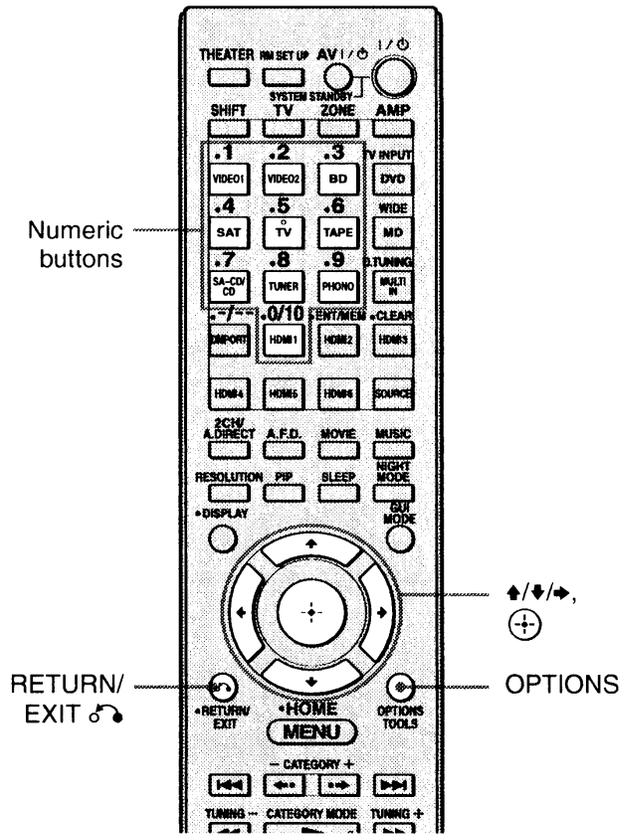

1 Select a channel you want to lock using **Category Mode** (page 67) or **Direct Tuning** (page 67).

2 Press **OPTIONS**.
The option menu appears.

3 Press **▲/▼** to select “**Parental Lock**,” then press **⊕** or **▶**.

- 4** Press **▲/▼** repeatedly to select **“ON,”** then press **⊕**.

“Enter your 4-digit lock code.” appears.

- 5** Enter your 4-digit lock code using the numeric buttons.

“The channel has been locked.” appears and the Parental Lock is set.

To delete the numbers you have entered, go back to step 2 by pressing RETURN/EXIT **↵**, and then repeat the procedure above from step 2.

To change the lock code (Lock Code)

- 1** Select a channel you want to change the lock code using Category Mode (page 67) or Direct Tuning (page 67).
- 2** Press **OPTIONS**.
The option menu appears.
- 3** Press **▲/▼** to select **“Lock Code,”** then press **⊕**.
“Enter your 4-digit lock code.” appears.
- 4** Enter your 4-digit lock code using the numeric buttons.
“Enter a new lock code.” appears.
- 5** Enter a new 4-digit lock code using the numeric buttons.
“To confirm, enter your new lock code again.” appears.
- 6** Reenter the new lock code with the numeric buttons.
“The lock code has been changed.” appears.

To listen to the locked channels

- 1** Select a locked channel you want to listen to using Category Mode (page 67) or Direct Tuning (page 67).
“The channel is locked. Enter your 4-digit lock code.” appears.

- 2** Enter your 4-digit lock code using the numeric buttons.

The channel is tuned in.

To cancel the Parental Lock

- 1** Select a channel you want to unlock using Category Mode (page 67) or Direct Tuning (page 67).
- 2** Press **OPTIONS**.
The option menu appears.
- 3** Press **▲/▼** to select **“Parental Lock,”** then press **⊕** or **▶**.
- 4** Press **▲/▼** repeatedly to select **“OFF,”** then press **⊕**.
“Enter your 4-digit lock code.” appears.
- 5** Enter your 4-digit lock code using the numeric buttons.
“The channel has been unlocked.” appears and the channel is unlocked.

Notes

- When you select a channel using Category Mode, locked channels are skipped.
- When the receiver is reset to the factory settings, the lock code returns to the default (0000), but the Parental Lock settings are not removed.
- You cannot preset locked channels. If you set the Parental Lock for a preset channel, the preset information for that channel returns to the default.
- You cannot set the Parental Lock for channel 0 or channel 184.

Message list

SIRIUS Satellite Radio message list

Message appears	Explanation	Remedies
Antenna Error	The antenna is not connected properly.	Check the connection between the SiriusConnect Home tuner and the antenna.
Acquiring Signal	The receiving condition is not good.	Try moving the antenna to another location. For details about the antenna location, see the instructions supplied with the SiriusConnect Home tuner.
Call 888-539-SIRI	You have not subscribed for the selected channel.	—
Check Sirius Tuner	The SiriusConnect Home tuner is not connected properly.	Check all the connections, and then turn the system on again. Also make sure if the AC adaptor supplied with the SiriusConnect Home tuner is connected to a wall socket.
Invalid Channel	You have entered an invalid channel number.	The channel to be tuned-in is void due to the change by the broadcast service, or the receiving condition is not good.
Locked Channel	The selected channel is locked.	—
Subscription Updated	The subscription information has been updated.	—
Updating Channels ■■% Completed (■■ are for integers)	Channel information is being updated.	—
Firmware Updating	The SiriusConnect Home tuner firmware is being updated.	—
-----	There is no text information in the channel.	This is not an error. The text information may not be displayed depending on the system condition, for example, right after the system has received a channel.

Tuning

XM Radio message list


Message appears	Explanation	Remedies
Check Antenna	The XM antenna is not connected to the XM Mini-Tuner Dock or the XM antenna cable is damaged.	Check that the XM antenna is securely connected to the XM Mini-Tuner Dock and check the antenna cable for damage. Replace the XM antenna if the cable is damaged.

continued

Message appears	Explanation	Remedies
CH Unauthorized	You selected an XM channel that is blocked or cannot be received with your XM subscription package.	Consult the latest channel guide at www.xmradio.com for the current list of channels. For information on receiving this channel, visit www.xmradio.com or contact XM Satellite Radio at 1-800-967-2346.
No Signal	The XM Mini-Tuner is not receiving the XM satellite signal. Something may be blocking the XM antenna's view of the satellites or the antenna is not properly aimed.	Check for antenna obstructions and reposition the XM antenna to get better signal reception. Use the Antenna Aiming option to optimize the antenna position (page 66). See instructions supplied with the XM Mini-Tuner and Home Dock for antenna installation information.
Loading	The XM Mini-Tuner is acquiring audio or program information from the XM satellite signal. This message can also occur in weak XM signal conditions. Note that the receiver may not respond to some buttons while this message is displayed.	This message should disappear in a few seconds in good signal conditions. If you see this message often, reposition the XM antenna for better signal reception. Use the Antenna Aiming option to optimize the antenna position (page 66).
Off Air	You selected an XM channel is not currently broadcasting.	Check back later; in the mean time, select another channel.
(space)-----	No artist name or song title is available for this selection.	No action required
CH Unavailable	The selected channel is not available. The channel may have been reassigned to a different channel number. This message may occur initially with a new radio or a radio that has not received XM's signal for an extended period.	Consult the latest channel guide at www.xmradio.com for the current list of channels. For cases of a new radio or a radio that has not received XM's signal for an extended period, allow the radio to receive the XM satellite signal for at least 5 minutes and then try to select the channel again.
Check XM Tuner	The XM Mini-Tuner is not installed or not fully seated in the XM Mini-Tuner Dock or the XM Mini-Tuner dock is not connected to the receiver.	Confirm the XM Mini-Tuner is fully seated in the dock and check the XM Mini-Tuner dock cable is connected to the receiver.

Playing back with 2-channel sound

You can switch the output sound to 2-channel sound regardless of the recording formats of the software you are using, the playback component connected, or the sound field settings of the receiver.

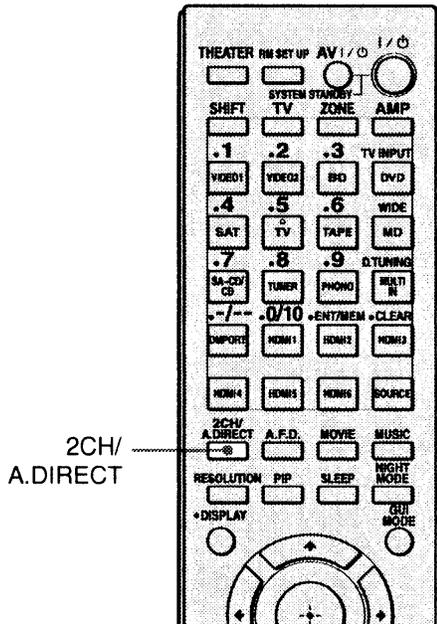

Press 2CH/A.DIRECT repeatedly to select the 2-channel sound mode of the sound output you want.

2CH mode	Effect
2ch Stereo	The receiver outputs the sound from the front left/right speakers only. There is no sound from the subwoofer. Standard 2 channel stereo sources completely bypass the sound field processing and multi-channel surround formats are downmixed to 2 channel.
2ch Analog Direct	You can switch the audio of the selected input to 2 channel analog input. This function enables you to enjoy high quality analog sources. When using this function, only the volume and front speaker balance can be adjusted.


Note

No sound is output from the subwoofer in the 2ch Stereo mode. To listen to 2 channel stereo sources using the front left/right speakers and a subwoofer, select “A.F.D. Auto.”

When you select “A.F.D. Auto,” the receiver will generate a low frequency signal for output to the subwoofer from a 2 channel signal, even if there is no L.F.E. signal.

Playing back with multi-channel surround

The Auto Format Direct (A.F.D.) mode allows you to listen to higher fidelity sound and select the decoding mode for listening to a 2 channel stereo sound as multi-channel sound.

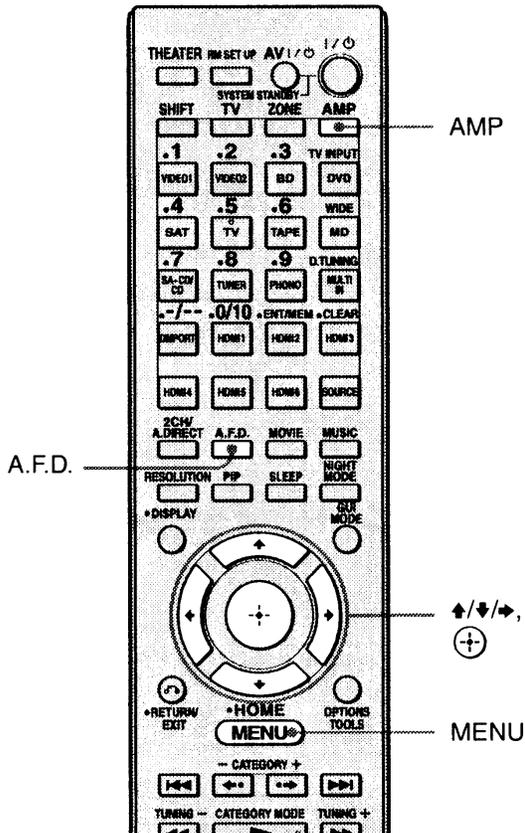

Press A.F.D. repeatedly to select the A.F.D. mode you want.

A.F.D. mode	Multi-channel audio after decoding	Effect
A.F.D. Auto	(Detecting automatically)	Presets the sound as it was recorded/encoded without adding any surround effects.
Multi Stereo	(Multi Stereo)	Outputs 2 channel left/right signals from all speakers.
Enhanced Surround	–	You can select the surround sound effect you want. For details on available surround sound effects and how to set one, see “Setting a multi-channel surround sound effect” (page 75).

Setting a multi-channel surround sound effect

- 1 Start playing a sound source you want to listen to (CD, DVD, etc.).**
- 2 Press AMP.**
The receiver can be operated using the remote.
- 3 Press MENU.**
The menu is displayed on the TV screen.

- 4 Press \uparrow/\downarrow repeatedly to select “Settings,” then press \odot or \rightarrow .**

The Settings menu list appears on the TV screen.

- 5 Press \uparrow/\downarrow repeatedly to select “Surround,” then press \odot or \rightarrow .**

- 6 Press \uparrow/\downarrow repeatedly to select “Enhanced Sur Mode,” then press \odot .**

The menu for surround sound effect appears.

- 7 Press \uparrow/\downarrow repeatedly to select the A.F.D. mode you want, then press \odot or \rightarrow .**

A.F.D. mode	Multi-channel audio after decoding	Effect
PLII*	5-channel signals	Performs Dolby Pro Logic II mode decoding. This setting is ideal for movies encoded in Dolby Surround. In Addition, this mode can reproduce sound in 5.1 channel system for watching videos of overdubbed or old movies.
PLIIx*	7-channel signals	Performs Dolby Pro Logic IIx mode decoding. This setting is ideal for movies encoded in Dolby Surround. In addition, this mode can reproduce sound in 7.1 channel system for watching videos of overdubbed or old movies.
Neo:6 Cinema	7-channel signals	Performs DTS Neo:6 Cinema mode decoding.
Neo:6 Music	7-channel signals	Performs DTS Neo:6 Music mode decoding. This setting is ideal for normal stereo sources such as CDs.
Neural-THX	7-channel signals	Next generation of Neural-THX [®] Surround. In addition to stereo enhancement processing and pure discrete 5.1 surround sound, now capable of full 360° 7.1 surround sound playback from Neural-THX [®] Surround encoded content.

* You can select “PLII” when there is no surround back speaker on the Speaker Pattern menu, or you can select “PLIIx” when there is a surround back speaker. You cannot select both settings at the same time.

Notes


- This function does not work when the multi-channel input is selected.
- This function does not work when DTS-HD signals with a sampling frequency of higher than 48 kHz are being received.
- This function does not work when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.
- If you set up the sound field effect while the receiver is receiving signals with a sampling frequency of higher than 48 kHz, the signals will always be played back at either 44.1 kHz or 48 kHz.
- If you set up the sound field during DTS 96/24 signal reception, the signal will be played back only at 48 kHz.
- The beginning of the sound stream may be dropped out when Neural-THX processing is turned on or off.

Tips

- We usually recommend “A.F.D. Auto.”
- You can identify the encoding format of DVD software, etc., by looking at the logo on the package.
- Dolby Pro Logic IIx decoding is effective, when 2 channel or 5.1 channel signals are input.
- Neural-THX is effective when 2 channel or 5.1 channel signals are input.

Enjoying a surround effect for music

You can take advantage of surround sound simply by selecting one of the receiver's pre-programmed sound fields. They bring the exciting and powerful sound of concert halls into your home.

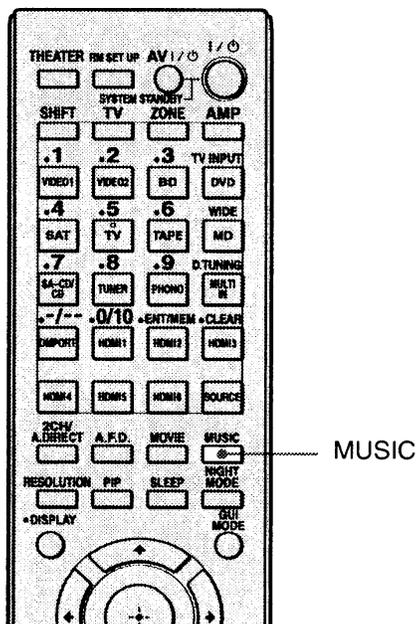

Press MUSIC repeatedly to select the surround effect you want for music.

Sound field	Effect
D.Concert Hall A	Uses 3D sound imaging to reproduce the sound characteristics of a concert hall, which simulates a large sound stage produced by reflectivity.
D.Concert Hall B	Uses 3D sound imaging to reproduce the sound characteristics of a concert hall, which simulates resonant and unique reverberative sound.
Jazz Club	Reproduces the acoustics of a jazz club.
Live Concert	Reproduces the acoustics of a 300-seat live house.
Stadium	Reproduces the feeling of a large open-air stadium.
Sports	Reproduces the feeling of sports broadcasting.
Portable Audio	Reproduces a clear enhanced sound image from your portable audio device. This mode is ideal for MP3 and other compressed music.

To listen to music through headphones connected to the receiver

Sound field	Effect
Headphone (2ch)	This mode is selected automatically if you use headphones when “2ch Stereo” mode or A.F.D. mode is selected. Standard 2 channel stereo sources completely bypass the sound field processing and multi-channel surround formats are downmixed to 2 channels.
Headphone Theater DCS	This mode is selected automatically when you use headphones when sound field is selected for movie/music. It allows you to experience a theater-like environment while listening through a pair of headphones.
Headphone (Direct)	Outputs the analog signals without processing by the tone, sound field, etc.
Headphone (Multi)	This mode is selected automatically if you use headphones when the multi-channel input is selected. Outputs the front analog signals from the MULTI CHANNEL INPUT jacks.

To turn off the surround effect for MUSIC


Press 2CH/A.DIRECT or A.F.D.

Notes

- The sound fields for music do not work when the multi-channel input is selected.
- The sound fields for music do not work when DTS-HD signals with a sampling frequency of higher than 48 kHz are being received.
- The sound fields for music do not work when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.
- If you set up the sound field during DTS 96/24 signal reception, the signal will be played back only at 48 kHz.
- If you set up the sound field effect while the receiver is receiving signals with a sampling frequency of higher than 48 kHz, the signals will always be played back at either 44.1 kHz or 48 kHz.
- When one of the sound fields for music is selected, no sound is output from the subwoofer if all the speakers are set to “LARGE” in the Speaker settings menu. However, the sound will be output from the subwoofer if the digital input signal contains L.F.E. signals, or if the front or surround speakers are set to “SMALL,” the sound field for movie is selected, or “Portable Audio” is selected.

Enjoying a surround effect for movies

You can take advantage of surround sound simply by selecting one of the receiver's pre-programmed sound fields. They bring the exciting and powerful sound of movie theaters into your home.

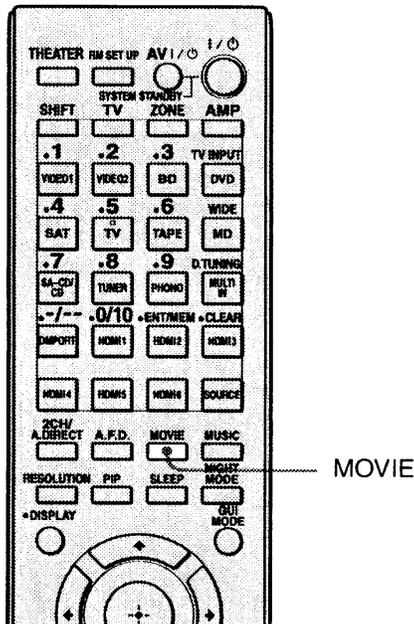

Enjoying Surround Sound

Press MOVIE repeatedly to select the surround effect you want for movies.

Sound field	Effect
Cinema Studio EX A DCS	Reproduces the sound characteristics of the Sony Pictures Entertainment "Cary Grant Theater" cinema production studio. This is a standard mode, great for watching almost any type of movie.
Cinema Studio EX B DCS	Reproduces the sound characteristics of the Sony Pictures Entertainment "Kim Novak Theater" cinema production studio. This mode is ideal for watching science-fiction or action movies with lots of sound effects.
Cinema Studio EX C DCS	Reproduces the sound characteristics of the Sony Pictures Entertainment scoring stage. This mode is ideal for watching musicals or films where orchestra music is featured in the soundtrack.
V.Multi Dimension DCS	Creates many virtual speakers from a single pair of actual surround speakers.

To turn off the surround effect for MOVIE

Press 2CH/A.DIRECT or A.F.D.

Notes

- The sound fields for movies do not work when the multi-channel input is selected.
- The sound fields for movies do not work when DTS-HD signals with a sampling frequency of higher than 48 kHz are being received.
- The sound fields for movies do not work when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.
- If you set up the sound field during DTS 96/24 signal reception, the signal will be played back only at 48 kHz.
- If you set up the sound field effect while the receiver is receiving signals with a sampling frequency of higher than 48 kHz, the signals will always be played back at either 44.1 kHz or 48 kHz.
- The effects provided by the virtual speakers may cause increased noise in the playback signal.
- When listening with sound fields that employ the virtual speakers, you will not be able to hear any sound coming directly from the surround speakers.

Tips

- Sound fields with **DCS** marks use DCS technology. See “Glossary” (page 132).
- When the sound field’s **DCS** mark is selected, the Digital Cinema Sound lamp lights up on the display.

Digital audio formats supported by the receiver

Digital audio formats that this receiver can decode depend on digital audio input jacks for the components connected.

This receiver supports the following audio formats.

Audio format	Maximum number of channels	Connection of the playback component and the receiver	
		COAXIAL/OPTICAL	HDMI
Dolby Digital 	5.1ch	○	○
Dolby Digital EX 	6.1ch	○	○
Dolby Digital Plus ^{a)} 	7.1ch	×	○
Dolby TrueHD ^{a)} 	7.1ch	×	○
DTS 	5.1ch	○	○
DTS-ES 	6.1ch	○	○
DTS 96/24 	5.1ch	○	○
DTS-HD High Resolution Audio ^{a)} 	7.1ch	×	○
DTS-HD Master Audio ^{a) b)} 	7.1ch	×	○

Audio format	Maximum number of channels	Connection of the playback component and the receiver	
		COAXIAL/OPTICAL	HDMI
DSD ^{a)} DSD Direct Stream Digital	5.1ch	×	○
Multi channel Linear PCM ^{a)}	7.1ch	×	○

a) Audio signals are output in another format if the playback component does not correspond to the format. For details, refer to the operating instructions of the playback component.

b) Signals with a sampling frequency of higher than 96 kHz are played back at 96 kHz or 88.2 kHz.

What you can do with the Multi-zone function

You can enjoy images and sounds from a component connected to the receiver in a zone (zone 2 or zone 3) other than the main zone. For example, you can watch the DVD in the main zone and listen to the CD in zone 2 or zone 3.

When using an IR repeater (not supplied), you can operate both a component in the main zone and Sony receiver in zone 2 or zone 3 from zone 2 or zone 3.

To operate the receiver from zone 2 or zone 3


You can operate the receiver without pointing the remote toward the IR repeater of the receiver if you connect an IR repeater (not supplied) to the IR REMOTE jack.

Use an IR repeater when you install the receiver in a place where signals from the remote cannot reach.


Making a multi-zone connection

1:Zone 2 connections

- ① Outputs sound from speakers in zone 2 using the SURROUND BACK SPEAKERS terminals of the receiver.

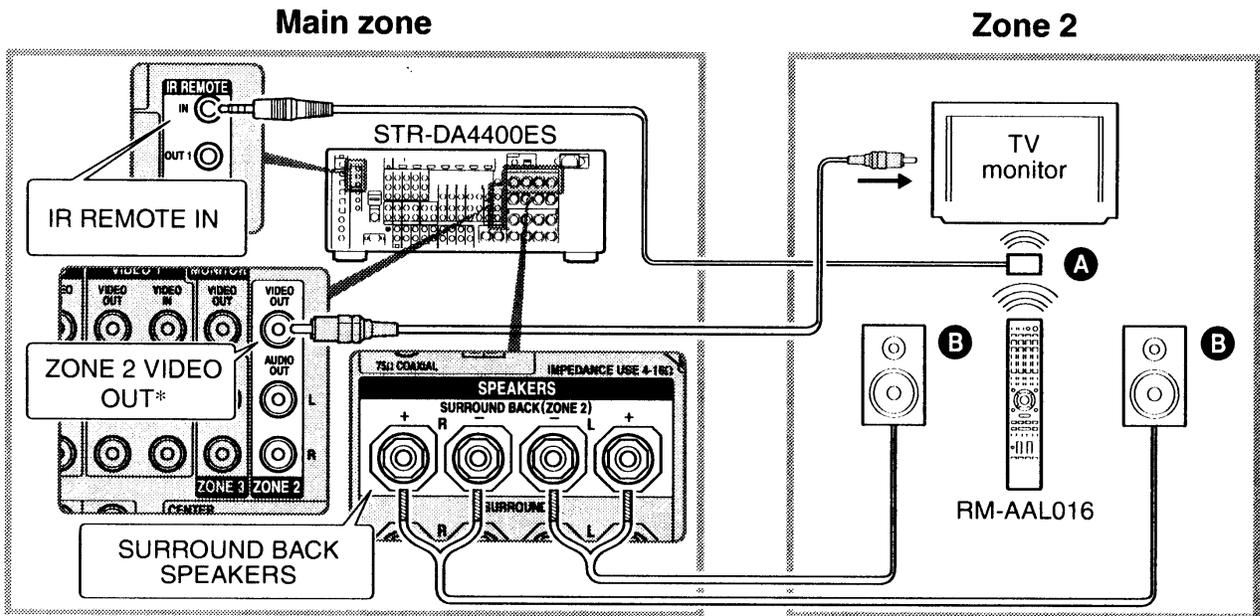


- ② Outputs sound from speakers in zone 2 using the receiver and another amplifier.

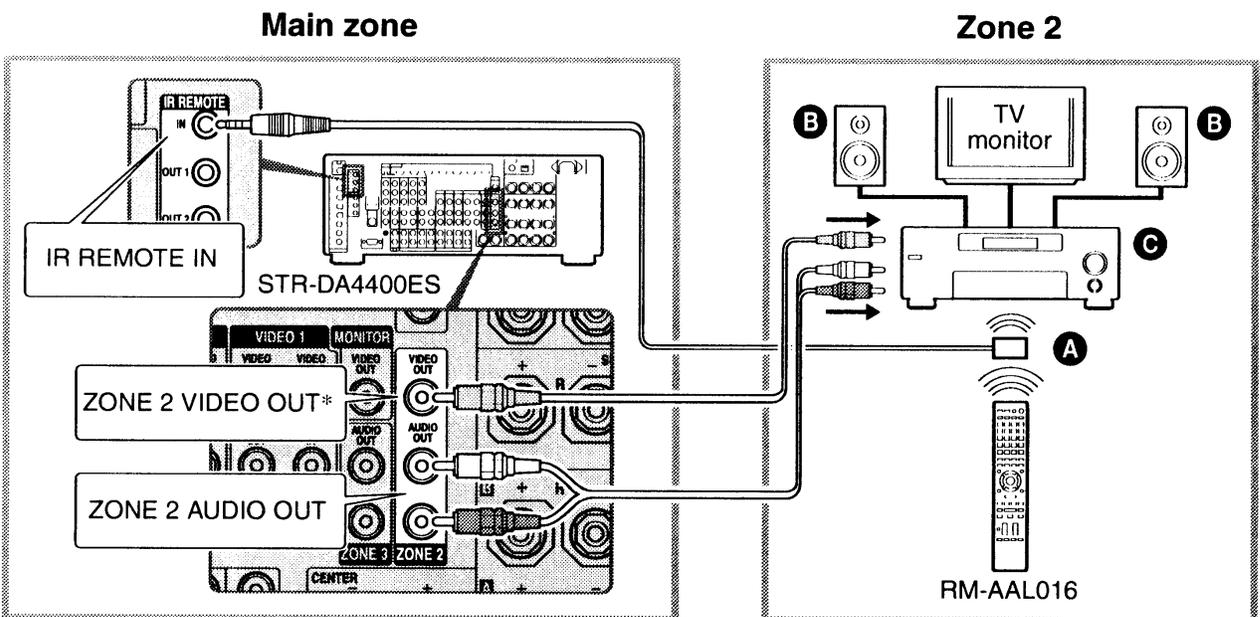

- Ⓐ IR repeater (not supplied)
- Ⓑ Speakers
- Ⓒ Sony Amplifier/Receiver

* You can also connect to the COMPONENT VIDEO ZONE 2 OUT jack.


2:Zone 3 connections

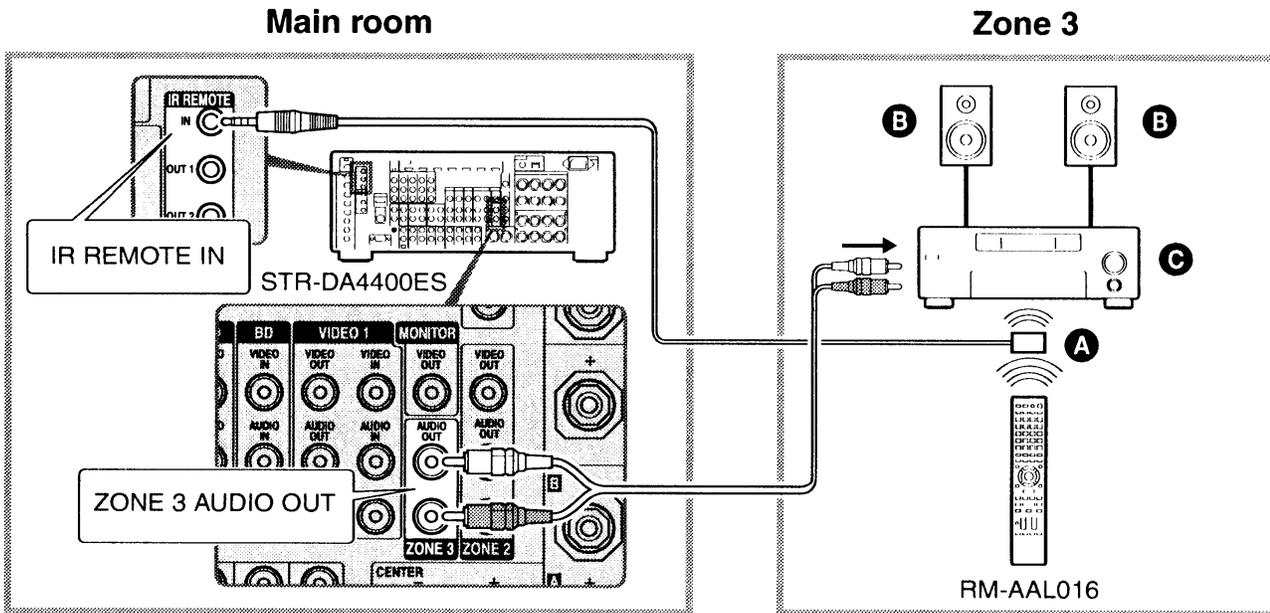

- Ⓐ IR repeater (not supplied)
- Ⓑ Speakers
- Ⓒ Sony Amplifier/Receiver

Setting the speakers in zone 2

When the speakers in zone 2 are connected to the SURROUND BACK SPEAKERS terminals of the receiver (page 84), make the setting so that the sound selected in zone 2 is output from the speakers connected to the SURROUND BACK SPEAKERS terminals.

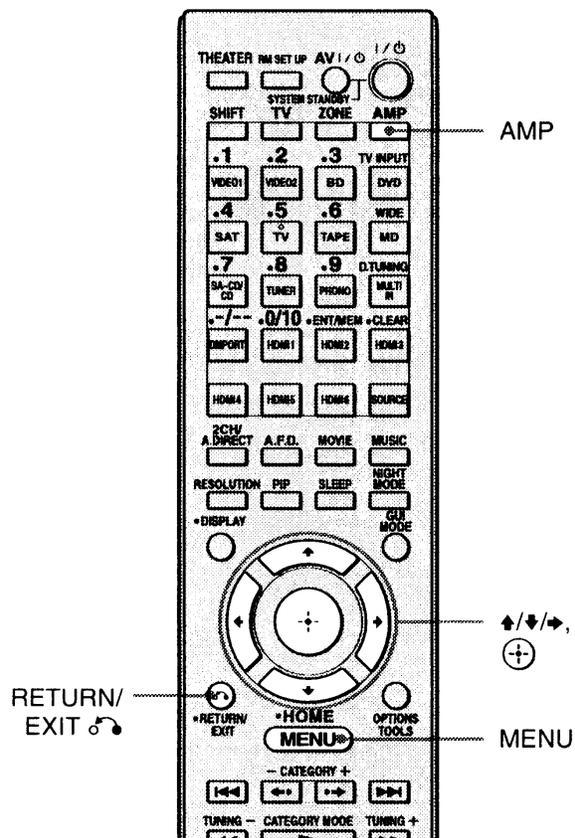


- 1 Press AMP.**
The receiver can be operated using the remote.
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press \uparrow/\downarrow repeatedly to select “Settings,” then press \oplus or \rightarrow .**
- 4 Press \uparrow/\downarrow repeatedly to select “Speaker,” then press \oplus or \rightarrow .**

- 5 Press \uparrow/\downarrow to select “Speaker Pattern,” to select the pattern that has no surround back speakers.**
- 6 Press RETURN/EXIT \hookrightarrow .**
- 7 Press \uparrow/\downarrow repeatedly to select “Sur Back Assign,” then press \oplus .**
- 8 Press \uparrow/\downarrow to select “ZONE2,” then press \oplus .**

To exit the menu
Press MENU.

Switching the zone setting of the remote

The remote commanders are initially set to be used in zone 2. If you want to use them in zone 3, switch the zone setting of the remote.

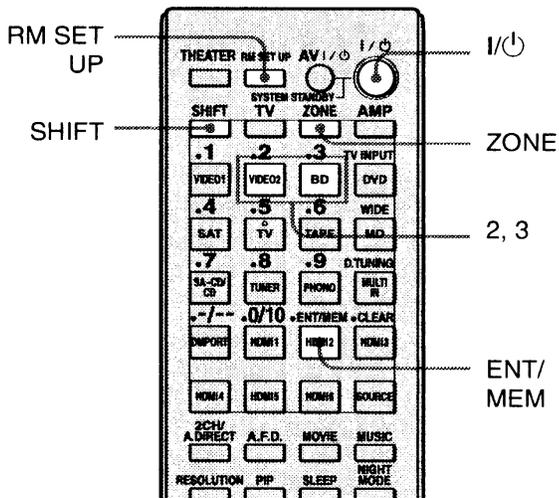

- 1 Press I/⏻ while pressing RM SET UP.

The AMP and ZONE buttons flash.

- 2 Press ZONE.

The AMP button goes off, the ZONE button keeps flashing and the SHIFT button lights up.

- 3 Press the numeric button 2 for the zone 2, or 3 for the zone 3 while the ZONE button is flashing.


The ZONE button lights up.

- 4 Press ENT/MEM.

The ZONE button flashes twice and the remote switches to zone 2 or zone 3 mode.

Operating the receiver from another zone (ZONE 2/ZONE 3 operations)

The following operations are described for connecting an IR repeater and operating the receiver in zone 2 or zone 3. When an IR repeater is not connected, use this receiver in the main zone.

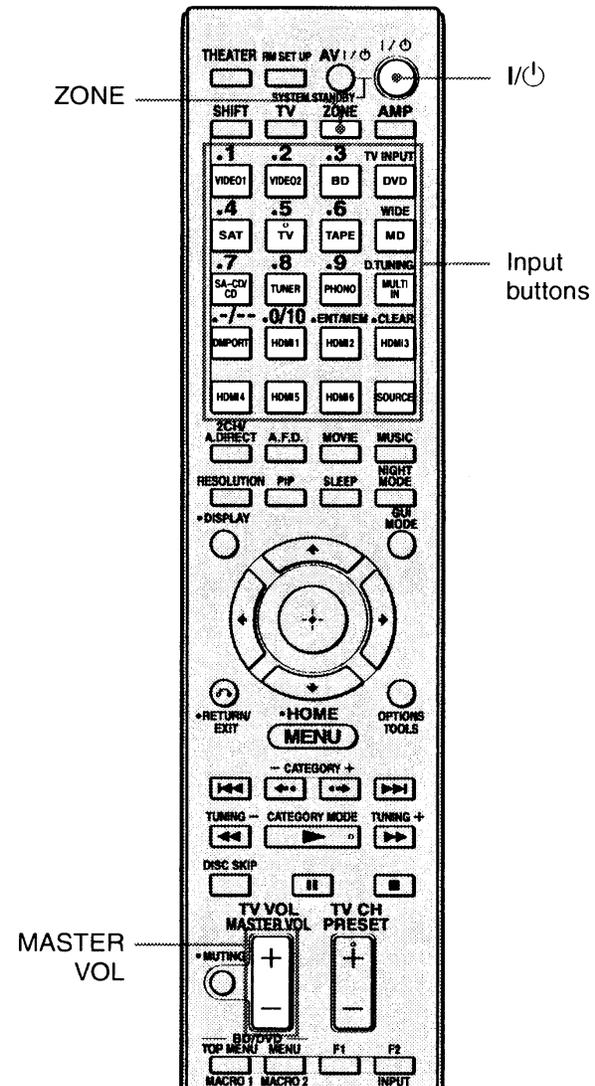

- 1 Turn on the main receiver (this receiver).
- 2 Turn on the amplifier in zone 2 or zone 3.

3 Press ZONE.

The remote switches to zone 2 or zone 3. Change the zone setting of the remote to zone 3 in advance (page 87).

4 Press I/⏻.

The zone function is activated.

5 Press one of the input buttons on the remote to select the source signals you want to output.

For zone 2, analog video and audio signals are output. For the zone 3, only analog audio signals are output. When you select SOURCE, the signals of the current input of the main zone are output.

6 Adjust to a suitable volume.

- In the case of illustration 1-① (page 84), adjust the volume using MASTER VOL +/- on the remote.
- In the case of illustration 1-② (page 84) or 2 (page 85), adjust the volume using the receiver of zone 2 or zone 3.

To finish the zone 2/zone 3 operation

Press I/⏻ after pressing ZONE.

Tips

- Even when this receiver is standby mode (press I/⏻ on the remote to turned off this receiver), the receiver in zone 2 or zone 3 remains turned on. To turn off all receivers, press I/⏻ and AV I/⏻ on the main remote at the same time (SYSTEM STANDBY).
- Only signals from components connected to the analog input jacks are output through the ZONE 2 or ZONE 3 jacks. No signals are output from components connected to only the digital input jacks.
- When SOURCE is selected, the signals input to the MULTI CHANNEL INPUT jacks are not output from the ZONE 2 OUT or ZONE 3 OUT jacks even when the multi-channel input is selected. The analog audio signals of the current function are output.

Using “BRAVIA” Sync features

What is “BRAVIA” Sync?

“BRAVIA” Sync is compatible with a Sony TV, Blu-ray Disc/DVD player, AV amplifier, etc., that is equipped with the Control for HDMI function.

By connecting Sony components that are compatible with the “BRAVIA” Sync with a HDMI cable (not supplied), operation is simplified as below:

- **One-Touch Play:** When you play back a component such as a DVD/Blu-ray Disc Player, the receiver and the TV are turned on automatically and switch to the appropriate HDMI input.
- **System Audio Control:** While watching TV, you can select to output the sound from the TV speaker or the speakers connected to the receiver.
- **System Power Off:** When you turn off the TV, the receiver and connected components are also turned off simultaneously.

Control for HDMI is a mutual control function standard used by HDMI CEC (Consumer Electronics Control) for HDMI (High-Definition Multimedia Interface).

The Control for HDMI function does not work in the following cases:

- When you connect the receiver to a component which is not correspond with Sony’s Control for HDMI function.
- When you connect the receiver and components using other than HDMI connection.

We recommend that you connect the receiver to products featuring “BRAVIA” Sync.

Note

Depending on the connected component, the Control for HDMI function may not work. See the operating instructions of the component.

Preparing for the “BRAVIA” Sync

To use the “BRAVIA” Sync, turn the Control for HDMI function on for both the receiver and the connected component. The receiver is compatible with the “Control for HDMI-Easy Setting” function.

When your TV is compatible with the “Control for HDMI-Easy Setting” function

When you connect a Sony TV with the “Control for HDMI-Easy Setting” function, the Control for HDMI function of the receiver can be turned on simultaneously by turning the Control for HDMI function of the TV on.

- 1** Make sure that the receiver, TV, and playback components are connected using an HDMI cable (not supplied). (The respective components must be compatible with the Control for HDMI function.)
- 2** Turn on the receiver, TV and playback components.
- 3** Turn the Control for HDMI function of the TV on.
The Control for HDMI function of the receiver and all the connected components are simultaneously turned on. During setup, “SCANNING” appears in the display window of the receiver, and once setting is completed, “COMPLETE” will appear. Wait until the setup is complete.


For details on setup of the TV, refer to the operating instructions of your TV.

Notes

- When you pull out the HDMI cable or change the connection, perform the steps given in “When your TV is compatible with the “Control for HDMI-Easy Setting” function” (page 89) or “When your TV is not compatible with the “Control for HDMI-Easy Setting” function.”
- When you assign the component video input to the HDMI input using the Input Assign function, you cannot set “Control for HDMI” to “ON.”
- While “Control for HDMI-Easy Setting” is being set, you cannot use functions such as One-Touch Play or System Audio Control.
- When you set up the receiver using the “Control for HDMI-Easy Setting” from a TV, turn on the TV, the receiver and the playback components beforehand.
- When you set up the receiver using the “Control for HDMI-Easy Setting” from a TV, before you make the “Control for HDMI-Easy Setting” function effective, make the Control for HDMI function of the components that are not compatible with the “Control for HDMI-Easy Setting” function effective.

When your TV is not compatible with the “Control for HDMI-Easy Setting” function

Turn the Control for HDMI function of the receiver and the connected component on individually.

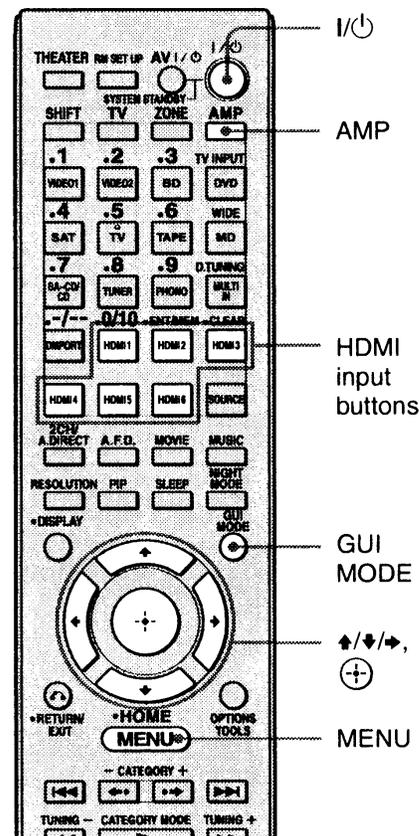

- 1 Perform the steps given in “When your TV is compatible with the “Control for HDMI-Easy Setting” function” (page 89).
- 2 Press AMP.
The receiver can be operated using the remote.
- 3 Press MENU.
The menu is displayed on the TV screen.
- 4 Press \uparrow/\downarrow repeatedly to select “Settings,” then press \oplus or \rightarrow .
- 5 Press \uparrow/\downarrow repeatedly to select “HDMI,” then press \oplus or \rightarrow .
- 6 Press \uparrow/\downarrow repeatedly to select “Control for HDMI,” then press \oplus or \rightarrow .

- 7 Press **▲/▼** repeatedly to select “ON,” then press **⊕**.
The Control for HDMI function of the receiver is activated.
- 8 Press **GUI MODE** to exit the GUI menu.
If the GUI menu is displayed, the Control for HDMI function of the playback components will not work properly.
- 9 Press one of the HDMI input buttons to display the image of the playback components for which you want to set the Control for HDMI function.
- 10 Turn the Control for HDMI function of the connected component on.
For details on setting the connected component, refer to its operating instructions.
- 11 Repeat steps 9 and 10 to set the Control for HDMI function and to display the image of all the playback components you want to use.

Playing back components with one-touch operation (One-Touch Play)

By a simple operation (one-touch), components connected to the receiver with HDMI connections start automatically. You can enjoy the sound/image using connected components.

Play back a connected component.

The receiver and TV are turned on simultaneously, and sound and image are output from the receiver and TV.

Note

Depending on the TV, the start of the content may not be output.

Enjoying the TV sound from the speakers connected to the receiver (System Audio Control)

You can enjoy the TV sound from the speakers connected to the receiver by a simple operation.

Depending on the TV settings, while you are watching the TV, the receiver turns on and switches to the “TV” function automatically. TV sound is output from the speakers connected to the receiver, and the volume of the TV is minimized simultaneously.

You can use the System Audio Control function as follows.

- The sound of the TV is output from the speakers connected to the receiver when you turn the receiver on while the sound is being output from the TV speaker.
- You can adjust the receiver’s volume when you adjust the TV volume.

You can also operate this function using the TV menu. For details, see the operating instructions of the TV.


Notes

- When “Control for HDMI” is set to “ON,” the “Audio Out” settings in the HDMI settings menu will set automatically depending on the System Audio Control settings.
- When you connect a TV that does not have System Audio Control function, the System Audio Control function does not work.
- If the TV is turned on before turning on the receiver, the TV sound will not be output for a moment.

Turning off the receiver with the TV (System Power Off)

When you turn the TV off by using the power button on the TV’s remote, the receiver and the connected components turn off automatically.

You can also use the receiver’s remote to turn off the TV.

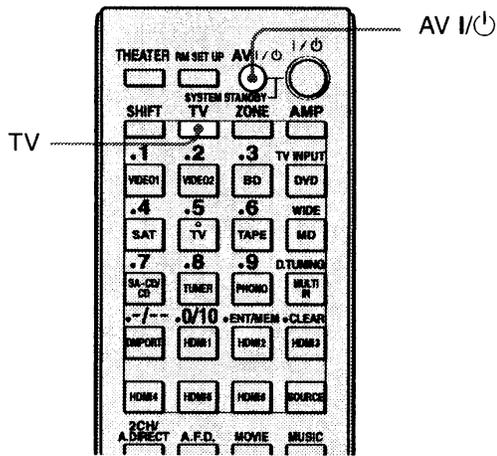

Press TV, then press AV I/O.


The TV, receiver and connected components are turned off.

Notes

- Set the TV power supply interlock function to on before using the System Power Off function. For details, see the operating instructions of the TV.
- Depending on the status, the connected components may not be turned off. For details, see the operating instructions of the connected components.

Switching between digital and analog audio

When you connect components to both digital and analog audio input jacks on the receiver, you can fix the audio input mode to either of them, or switch from one to the other, depending on the type of material you intend to watch.

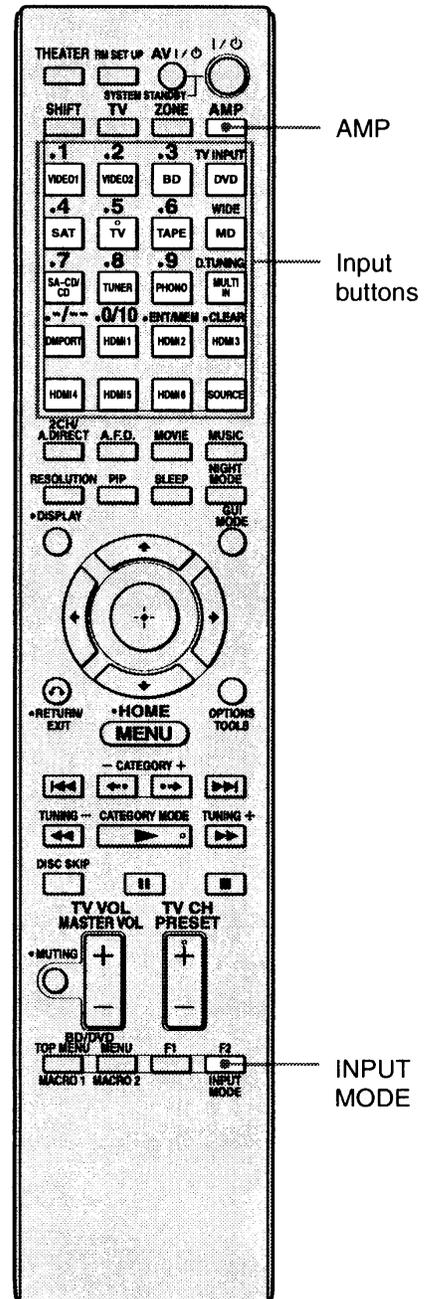

1 Press AMP.

The receiver can be operated using the remote.

2 Press MENU.

The menu is displayed on the TV screen.

3 Press ▲/▼ repeatedly to select “Input,” then press ⊕ or ▶.

4 Press ▲/▼ to select the input name you want to assign.

5 Press OPTIONS.

The option menu appears.

6 Press ▲/▼ to select “Input Assign,” then press ⊕.

7 Press ▲/▼/◀/▶ to select the audio and/or video signals you want to assign to the input selected in step 4, then press ⊕.

Input name	VIDEO1	VIDEO2	BD	DVD	SAT	TAPE	MD	SA-CD/ CD	MULTI IN	HDMI1	HDMI2	HDMI3	HDMI4	HDMI5	HDMI6	
Assignable video input jacks	Video1 Composite	○ ^{a)}	-	-	-	-	-	-	-	-	-	-	-	-	-	
	Video2 Composite	-	○ ^{a)}	-	-	-	-	-	-	-	-	-	-	-	-	
	BD Composite	-	-	○	-	-	-	-	-	-	-	-	-	-	-	
	DVD Composite	-	-	-	○	-	-	-	-	-	-	-	-	-	-	
	SAT Composite	-	-	-	-	○	-	-	-	-	-	-	-	-	-	
	Component1	○	○	○ ^{a)}	○	○	○	○	○	○	○ ^{b)}					
	Component2	○	○	○	○ ^{a)}	○	○	○	○	○	○ ^{b)}					
	Component3	○	○	○	○	○ ^{a)}	○	○	○	○	○ ^{b)}					
	HDMI1	○	○	○	○	○	○	○	○	○	○ ^{a)}	-	-	-	-	-
	HDMI2	○	○	○	○	○	○	○	○	○	-	○ ^{a)}	-	-	-	-
	HDMI3	○	○	○	○	○	○	○	○	○	-	-	○ ^{a)}	-	-	-
	HDMI4	○	○	○	○	○	○	○	○	○	-	-	-	○ ^{a)}	-	-
	HDMI5	○	○	○	○	○	○	○	○	○	-	-	-	-	○ ^{a)}	-
HDMI6	○	○	○	○	○	○	○	○	○	-	-	-	-	-	○ ^{a)}	
Assignable audio input jacks	Video1 OPT	○ ^{a)}	-	○	○	-	-	-	○	-	-	-	-	-	-	
	Video2 OPT	-	○ ^{a)}	○	○	-	-	-	○	-	-	-	-	-	-	
	SAT OPT	-	-	○	○	○ ^{a)}	-	-	○	-	-	-	-	-	-	
	Tape OPT	-	-	○	○	-	○ ^{a)}	-	○	-	-	-	-	-	-	
	MD OPT	-	-	○	○	-	-	○ ^{a)}	○	-	-	-	-	-	-	
	BD COAX	○	○	○ ^{a)}	-	○	○	○	-	-	-	-	-	-	-	
	DVD COAX	○	○	-	○ ^{a)}	○	○	○	-	-	-	-	-	-	-	
SA-CD/CD COAX	○	○	-	-	○	○	○	○ ^{a)}	-	-	-	-	-	-		

^{a)}Initial setting


^{b)}When you assign a component video input to the HDMI input via the Input Assign menu, component video signals are not converted to HDMI video signals and are not output from the HDMI OUT jack. Component video signals are output from the COMPONENT VIDEO MONITOR OUT jack. In this case, the resolution of the GUI output is set to “480p” for both component video input and HDMI video input.

Notes

- You cannot assign optical signals from an input source to the optical input jacks on the receiver, and you cannot assign coaxial signals from the input source to the coaxial input jacks on the receiver.
- When you assign the digital audio input, the INPUT MODE setting may change automatically.
- You cannot reassign more than one HDMI input to the same input.
- You cannot reassign more than one digital audio input to the same input.
- You cannot reassign more than one component video input to the same input.
- When you assign a component video input to the HDMI input, set “Control for HDMI” to “OFF.”

Using the sleep timer

You can set the receiver to turn off automatically at a specified time.

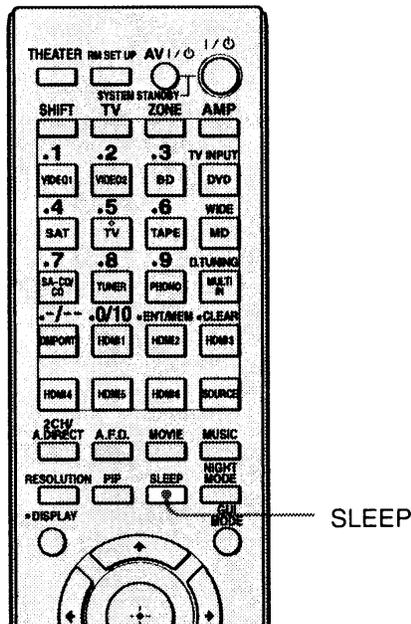

Press SLEEP repeatedly.

Each time you press SLEEP, the display changes cyclically as follows:

→ 0:30:00 → 1:00:00 → 1:30:00 → 2:00:00 → OFF →


When sleep timer is being used, “SLEEP” lights up in the display window of the receiver.

Tip

To check the remaining time before the receiver turns off, press SLEEP. The remaining time appears on the display. If you press SLEEP again, the sleep timer will be changed.

Enjoying the surround effect at low volume levels

This function allows you to retain a theater like environment at low volume levels. This function can be used with other sound fields. When watching a movie late at night, you will be able to hear the dialog clearly even at a low volume level.

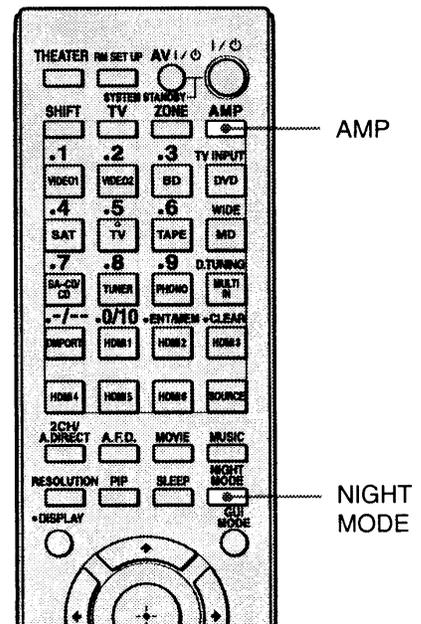

1 Press AMP.

The receiver can be operated using the remote.

2 Press NIGHT MODE.

The NIGHT MODE function is activated. The NIGHT MODE is set to on and off as you press NIGHT MODE.

Notes

- This function does not work when the multi-channel input is selected.
- This function does not work when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.


- If the NIGHT MODE function is turned on while the receiver is receiving signals with a sampling frequency of higher than 96 kHz, the signals will always be played back at either 44.1 kHz or 48 kHz.

Tip

While this function is on, the Bass, Treble, and Effect Levels increase, and “D. Range Comp” is automatically set to “MAX.”

Recording using the receiver

You can record from a video/audio component using the receiver. Refer to the operating instructions supplied with your recording component.

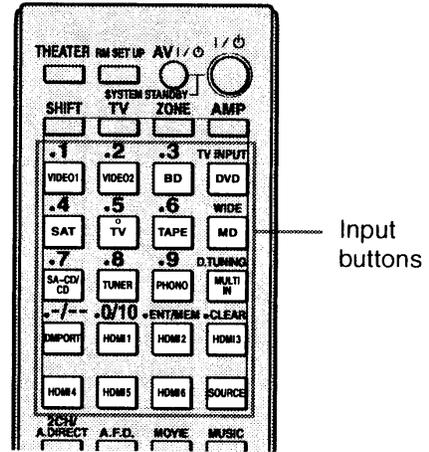

Recording onto a MiniDisc or audio tape

You can record onto a MiniDisc or audio tape using the receiver. See the operating instructions supplied with your MD deck or tape deck.

1 Press the input button of the playback component.

2 Prepare the playback component for playing.

For example, insert a CD into the CD player.

3 Prepare the recording component.

Insert a blank MD or tape into the recording deck and adjust the recording level.

4 Start recording on the recording deck, then start playback on the playback component.

- Only digital input signals are output from the digital output jack (for recording).
- HDMI sound cannot be recorded.

Notes

- Sound adjustments do not affect the signal output from the MD OUT jacks.
- The audio input signals from the MULTI CHANNEL INPUT jacks are not output.

To record digital sound

Connect a component for playback to the digital audio input (OPTICAL IN) jack, and connect the recording component to the OPTICAL MD OUT jack.

Recording onto recording media

1 Press the input button of the playback component.

2 Prepare the component for playing.

For example, insert the video tape you want to copy into the VCR.

3 Prepare the recording component.


Insert a blank video tape, etc., into the recording component (VIDEO 1) for recording.

4 Start recording on the recording component, then start playback on the playback component.

Notes

- Some sources contain copy guards to prevent recording. In this case, you may not be able to record from the sources.
- The audio input signals from the MULTI CHANNEL INPUT jacks are not output.
- Only analog input signals are output from the analog output jack (for recording).

Switching the command mode of the sub remote commander

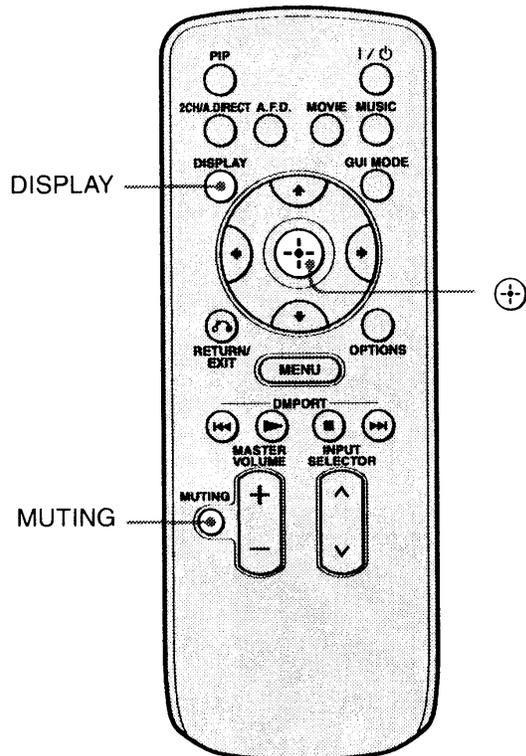


Press **MUTING** and  at the same time while pressing **DISPLAY**.

Using a bi-amplifier connection

If you are not using surround back speakers, you can use the SURROUND BACK SPEAKERS terminals for the front speakers for use with a bi-amplifier connection.

To connect speakers

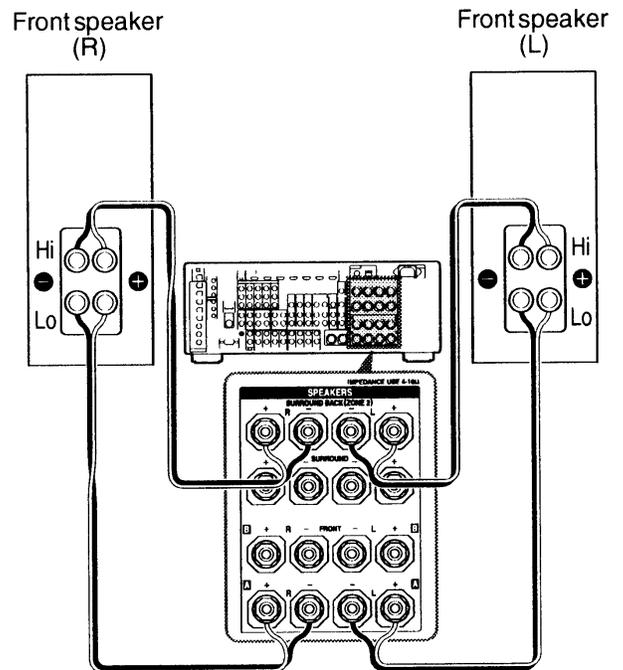

Connect the jacks on the Lo (or Hi) side of the front speakers to the **FRONT SPEAKERS A** terminals, and connect the jacks on the Hi (or Lo) side of the front speakers to the **SURROUND BACK SPEAKERS** terminals. Make sure that metal fittings of Hi/Lo attached to the speakers have been removed from the speakers. Not doing so may cause a malfunction of the receiver.

To set up speakers

- 1 Press **AMP**.
The receiver can be operated using the remote.
- 2 Press **MENU**.
The menu is displayed on the TV screen.

- 3 Press \uparrow/\downarrow to select “ Settings,” then press \oplus or \rightarrow .
- 4 Press \uparrow/\downarrow to select “Speaker,” then press \oplus or \rightarrow .
- 5 Press \uparrow/\downarrow to select “Speaker Pattern,” then press \oplus .
- 6 Press \uparrow/\downarrow to select the appropriate speaker pattern so that there are no surround back speakers.
- 7 Press RETURN/EXIT .
- 8 Press \uparrow/\downarrow to select “Sur Back Assign,” then press \oplus .
- 9 Press \uparrow/\downarrow to select “BI-AMP,” then press \oplus .
The same signals output from the FRONT SPEAKERS A terminals can be output from the SURROUND BACK SPEAKERS terminals.

Notes


- You cannot use the FRONT SPEAKERS B terminals for a bi-amplifier connection.
- When you use the auto calibration function, make the bi-amplifier settings before you perform auto calibration.
- If you make the bi-amplifier settings, the speaker level, balance, and equalizer settings of the surround back speakers become invalid, and those of the front speakers are used.
- Signals output from the PRE OUT jacks are used with the same settings as those of the SPEAKERS terminals.
- If the Speaker Pattern is set to the setting that there are surround back speakers, you cannot make the bi-amplifier settings.

Adjusting Settings

Using the setting menu

You can adjust the various settings for speakers, surround effects, multi zone, etc. using the setting menu.

To display the menu of the receiver on the TV screen, make sure that the receiver is in “GUI MODE” by following the steps in “7: Displaying the GUI menu on the TV screen” (page 41).

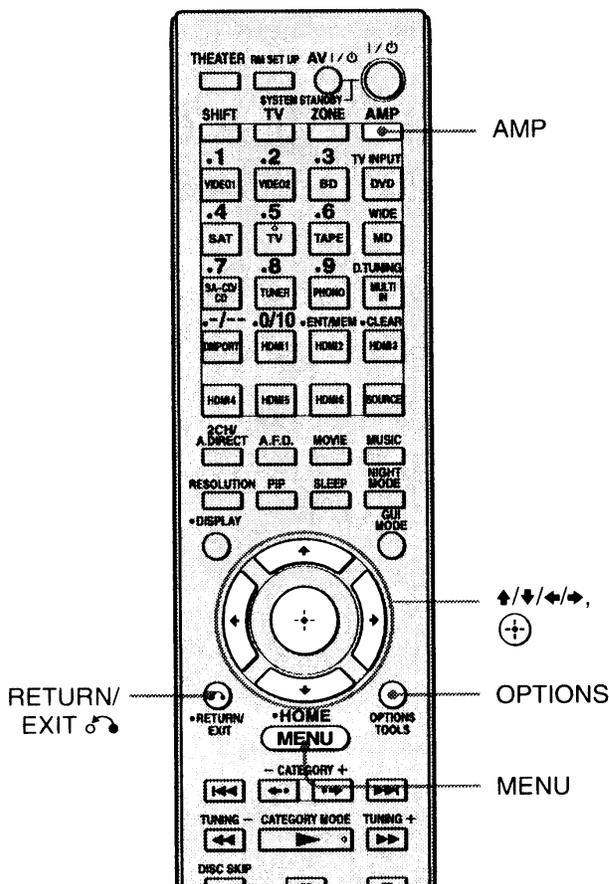


1 Press AMP.

The receiver can be operated using the remote.


2 Press MENU.

The menu is displayed on the TV screen.

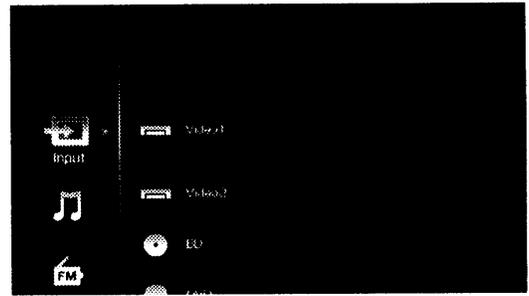


3 Press \uparrow/\downarrow repeatedly to select “Settings,” then press \oplus or \rightarrow to enter the menu mode.

The setting menu list appears on the TV screen.

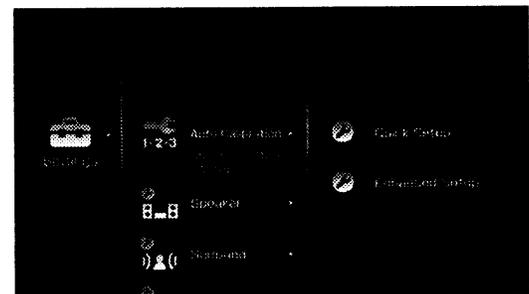

4 Press \uparrow/\downarrow repeatedly to select the menu item you want, then press \oplus to enter.

Example: When you select “Auto Calibration”

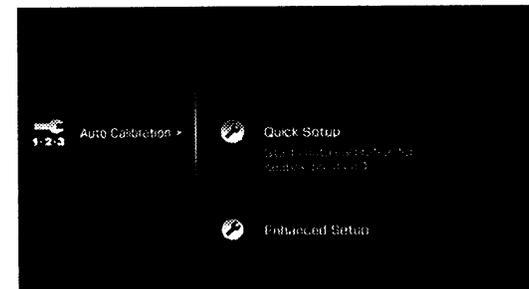

5 Press \uparrow/\downarrow repeatedly to select the parameter you want, then press \oplus to enter.

To return to the previous screen

Press RETURN/EXIT .

To exit the menu

Press MENU.

Setting menu list

Menu icon	Description
 Auto Calibration	Sets the speaker level or distance and makes the measurement automatically.
 Speaker	Sets the speaker position and impedance manually (page 105).
 Surround	Adjusts the sound field (surround effect) you choose (page 109).
 EQ	Adjusts the equalizer (bass/treble sound) (page 110).
 Multi Zone	Makes the settings for Multi Zone (page 111).
 Audio	Sets various sound items (page 112).
 Video	Adjusts the resolution of analog video signals (page 113).
 HDMI	Makes settings for sound/images from components connected to the HDMI jacks (page 115).
 System	Sets the screen saver or language of the menu guide display (page 116).

Auto Calibration

Quick Setup

Performs Auto Calibration. For details, see “9: Calibrating the appropriate speaker settings automatically (Auto Calibration)” (page 44).

Note

The measurement results will be overwritten and saved on Position 1 in the Enhanced Setup menu.

Enhanced Setup

You can register three patterns for “Seating Position” depending on the seating positions, listening environment, and measurement conditions.

You can also select a calibration type to compensate the each speaker.

To register more than one set of settings for the listening environment

You can select the seating position you want and register the measurement results of the auto calibration for that seating position.

1 Press  repeatedly on the Enhanced Setup screen to select the “Seating Position” for which you want to register the measurement results.

- Pos. (Position) 1
- Pos. (Position) 2
- Pos. (Position) 3

2 Press  to perform auto calibration.

To set a compensation type for the speakers

You can select the compensation type to be used for the speakers for each Seating Position.

- 1 Press **▲/▼** repeatedly to select the “Seating Position” for which you want to set the speaker compensation type, then press **⊕**.
- 2 Press **▲/▼** repeatedly to select “Calibration Type” you want, then press **⊕**.
 - Full Flat
Makes the measurement of frequency from each speaker flat.
 - Engineer
Sets the frequency to match that of the Sony listening room standard.
 - Front Reference
Adjusts the characteristics of all the speakers to match the characteristics of the front speakers.
 - OFF
Sets the auto calibration EQ to off.

Note

You cannot set “Calibration Type” for “Seating Position” for which the measurement results have not been registered.

To confirm the equalizer setting for the Seating Position

- 1 Press **▲/▼** repeatedly to select the “Seating Position” for which you want to confirm the equalizer setting.
- 2 Press **OPTIONS**.
The option menu appears.
- 3 Press **▲/▼** repeatedly to select “EQ Curve,” then press **⊕**.
- 4 Press **←/→** repeatedly to select the speaker on the screen for which you want to confirm the equalizer setting.
 - FRONT
 - CENTER
 - SURROUND
 - SURROUND BACK

To name the Seating Position

- 1 Press **▲/▼** repeatedly to select the “Seating Position” for which you want to name.
- 2 Press **OPTIONS**.
The option menu appears.
- 3 Press **▲/▼** repeatedly to select “Name Input,” then press **⊕**.
The soft keyboard appears on the screen.
- 4 Press **▲/▼/←/→/⊕** to select a character one by one, then press **⊕**.

Speaker settings

You can adjust each speaker manually. You can also adjust the speaker levels after the auto calibration is completed.

Note

The Speaker settings are only for the current “Seating Position.”

Impedance

You can set the speaker impedance. For details, see “8: Setting the speakers” (page 42).

■ 4 Ω

■ 8 Ω

Speaker Pattern

Select “Speaker Pattern” according to the speaker system which you are using. You do not need to select the speaker pattern after auto calibration.

To select the speaker pattern

- 1 Press \uparrow/\downarrow repeatedly to select “Speaker Pattern,” then press \oplus .
The Speaker Pattern screen appears.
- 2 Press \uparrow/\downarrow to select the speaker pattern you want, then press \oplus .
- 3 Press RETURN/EXIT \rightarrow .

Center Mix

You can set the analog downmix settings on or off.

■ OFF

If there is a center speaker connected, this setting is set to “OFF” automatically.

■ ON

We recommend you set “Center Mix” to “ON” to enjoy digital audio with high quality sound when you do not have a center speaker connected. Analog downmix works when you set “Center Mix” to “ON.” This setting is also effective to input signals from the MULTI CHANNEL INPUT jacks.

Sur Back Assign

You can make settings for the surround back speaker(s).

■ OFF

If you have not connected surround back speakers, select “OFF.”

■ BI-AMP

If you connect front speakers in a bi-amplifier configuration, select “BI-AMP” (page 100).

■ ZONE2

If you are using the surround back speakers in zone 2, select “ZONE2.” When you select “ZONE2,” the input to the SUR BACK jacks of the MULTI CHANNEL INPUT is invalid (page 86).

Note

Set “Sur Back Assign” to “OFF,” then connect the surround back speakers to this receiver when you want to change the connection from a bi-amplifier connection or a zone 2 connection to a surround back speakers connection. Re-set up the speakers after you connect the surround back speakers. Refer to “Auto Calibration” (page 44) or “Manual Setup” (page 106).

Manual Setup

You can adjust each speaker manually on the Manual Setup screen. You can also adjust the speaker levels after the auto calibration is completed.

To adjust the speaker level

You can adjust each speaker's level (center, surround left/right, surround back left/right, subwoofer).

- 1 Press **▲/▼/◀/▶** repeatedly to select the speaker on the screen for which you want to adjust the level, then press **⊕**.
- 2 Press **◀/▶** repeatedly to select "Level:," then press **⊕**.
- 3 Press **▲/▼** to set the level of the selected speaker, then press **⊕**.
You can adjust the level from -20 dB to +10 dB in 0.5 dB steps.
For the front left/right speakers, you can adjust the balance on either side. You can adjust the front left level from FL-10.0 dB to FL+10.0 dB in 0.5 dB steps. You can also adjust the front right level from FR-10.0 dB to FR+10.0 dB in 0.5 dB steps.

Note

When one of the sound fields for music is selected, no sound is output from the subwoofer if all the speakers are set to "LARGE." However, the sound will be output from the subwoofer if the digital input signal contains L.F.E. signals, or if the front or surround speakers are set to "SMALL," the sound field for movie is selected, or "Portable Audio" is selected.

To adjust the distance from the seating position to each speaker

You can adjust the distance from the seating position to each speaker (front left/right, center, surround left/right, surround back left/right, subwoofer.)

- 1 Press **▲/▼/◀/▶** repeatedly to select the speaker on the screen for which you want to adjust the distance from the seating position, then press **⊕**.
- 2 Press **◀/▶** repeatedly to select a "Distance:," then press **⊕**.
- 3 Press **▲/▼** to set the distance of the selected speaker, then press **⊕**.
You can adjust the distance from 3 feet 3 inches to 32 feet 9 inches (1.0 meter to 10.0 meters) in 1 inch (1 cm) steps.

To adjust the size of each speaker

You can adjust each speaker's (front left/right, center, surround left/right, surround back left/right) size.

- 1 Press **▲/▼/◀/▶** repeatedly to select the speaker on the screen for which you want to adjust the size, then press **⊕**.
- 2 Press **◀/▶** repeatedly to select a "Size:," then press **⊕**.
- 3 Press **▲/▼** to set the size of the selected speaker, then press **⊕**.
 - LARGE
If you connect large speakers that will effectively reproduce bass frequencies, select "LARGE." Normally, select "LARGE."
 - SMALL
If the sound is distorted, or you feel a lack of surround effects when using multi-channel surround sound, select "SMALL" to activate the bass redirection circuitry and output the bass frequencies of each channel from the subwoofer or other "LARGE" speakers.

Tips

- The “LARGE” and “SMALL” settings for each speaker determine whether the internal sound processor will cut the bass signal from that channel.
When the bass is cut from a channel, the bass redirection circuitry sends the corresponding bass frequencies to the subwoofer or other “LARGE” speakers.
However, since bass sound has a certain amount of directionality, it is best not to cut it, if possible.
Therefore, even when using small speakers, you can set them to “LARGE” if you want to output the bass frequencies from that speaker. On the other hand, if you are using a large speaker, but prefer not to have bass frequencies output from that speaker, set it to “SMALL.”
If the overall sound level is lower than you prefer, set all speakers to “LARGE.” If there is not enough bass, you can use the equalizer to boost the bass levels.
- The surround back speakers will be set to the same setting as that of the surround speakers.
- When the front speakers are set to “SMALL,” the center, surround, and surround back speakers are also automatically set to “SMALL.”
- If you do not use the subwoofer, the front speakers are automatically set to “LARGE.”

Crossover Freq (Speaker crossover frequency)

Lets you set the bass crossover frequency of speakers that has been set to “SMALL” in the Speaker menu. Measured speaker crossover frequency is set for each speaker after the auto calibration.

- 1 Press \leftarrow/\rightarrow to select the speaker on the screen you want to adjust.**
- 2 Press \uparrow/\downarrow to adjust the value, then press \rightarrow .**

Test Tone

You can select the test tone type on the Test Tone screen.

Tips

- To adjust the level of all speakers at the same time, press MASTER VOL +/-.
- The adjusted value is shown on the display during adjustment.

To output a test tone from each speaker

You can output a test tone from the speakers in sequence.

- 1 Press \leftarrow/\rightarrow to select “Test Tone,” then press \oplus .**
The Test Tone screen appears.
- 2 Press \uparrow/\downarrow to adjust the parameter, then press \oplus .**
 - OFF
 - AUTO
The test tone is output from each speaker in sequence.
 - L, C, R, SR, SBR, SBL, SL, SW
You can select which speakers will output the test tone.
- 3 Press \uparrow/\downarrow to adjust “Level;,” then press \oplus .**

To output a test tone from adjacent speakers

You can output a test tone from adjacent speakers so that you can adjust the balance between the speakers.

- 1 Press \leftarrow/\rightarrow to select “Phase Noise,” then press \oplus .**
The Phase Noise screen appears.
- 2 Press \uparrow/\downarrow to adjust the parameter, then press \oplus .**
 - OFF
 - L/R, L/C, C/R, R/SL, R/SR, SR/SL, SR/SBR, SBR/SBL, SR/SB, SBL/SL, SB/SL, SL/L, L/SR
Lets you output the test tone sequentially

from adjacent speakers.
Some items may not be displayed,
depending on the setting of the speaker
pattern.

- 3 Press **▲/▼** to adjust “Level:,” then press **⊕**.

To output the source sound from adjacent speakers

You can output the source sound from adjacent speakers so that you can adjust the balance between the speakers.

- 1 Press **←/→** to select “Phase Audio,” then press **⊕**.
The Phase Audio screen appears.
- 2 Press **▲/▼** to adjust the parameter, then press **⊕**.
 - OFF
 - L/R, L/C, C/R, R/SL, R/SR, SR/SL, SR/SBR, SBR/SBL, SR/SB, SBL/SL, SB/SL, SL/L, L/SRLets you output front 2 channel source sound (instead of the test tone) sequentially from adjacent speakers.
Some items may not be displayed,
depending on the setting of the speaker pattern.
- 3 Press **▲/▼** to adjust “Level:,” then press **⊕**.

When a test tone is not output from the speakers

- The speaker cords may not be connected securely. Check to see if they are connected securely and cannot be disconnected by pulling on them slightly.
- The speaker cords may have the short-circuit problem.

When a test tone is output from a different speaker than the speaker displayed on the screen

The speaker pattern to the connected speaker is not set up correctly. Make sure the speaker connection and the speaker pattern match.

D. Range Comp (Dynamic range compressor)

Lets you compress the dynamic range of the soundtrack. This may be useful when you want to watch movies at low volumes late at night. Dynamic range compression is possible with Dolby Digital sources only.

■ OFF

The dynamic range is not compressed.

■ AUTO

The dynamic range is compressed automatically.

■ STD

The dynamic range is compressed as intended by the recording engineer.

■ MAX

The dynamic range is compressed dramatically.

Tips

- Dynamic range compressor lets you compress the dynamic range of the soundtrack based on the dynamic range information included in the Dolby Digital signal.
- “STD” is the standard setting, but it only enacts light compression. Therefore, we recommend using the “MAX” setting. This greatly compresses the dynamic range and lets you view movies late at night at low volumes. Unlike analog limiters, the levels are predetermined and provide a very natural compression.

Distance Unit (Distance unit)

Lets you select the unit of measure for setting distances.

■ meter

The distance is displayed in meters.

■ feet

The distance is displayed in feet.

Surround settings

You can adjust the sound effect on the Sound Filed Setup screen.

Note

The setup items you can adjust on each menu vary depending on the sound field.

Sound Field Setup

You can select the surround sound field and adjust the effect level on the Sound Field Setup screen.

For details on the sound field, see “Enjoying Surround Sound” (page 73).

To select the surround sound field

- 1 Press \uparrow/\downarrow repeatedly to select “Sound Field Select,” then press \oplus .
- 2 Press \uparrow/\downarrow repeatedly to select the surround sound you want, then press.

To adjust the effect level

- 1 Press \uparrow/\downarrow repeatedly to select “Sound Field Select,” then press \oplus .
- 2 Press \uparrow/\downarrow repeatedly to select the surround sound you want, then press \oplus .
- 3 Press \uparrow/\downarrow to select “Effect Level.”
 - 50%
 - 80%
 - 100%
 - 150%

Note

Effect Level adjustment is valid only when “Cinema Studio EX **DCS**” is selected.

Enhanced Sur Mode

You can select the decoding mode for the sound field.

For details on the decoding modes available, see “Setting a multi-channel surround sound effect” (page 75).

■ PLII

Performs Dolby Pro Logic decoding. A source recorded in 2 channel format is decoded into 4.1 channels.

■ PLIIx

Performs Dolby Pro Logic IIx decoding.

■ Neo:6 Cinema

Performs DTS Neo:6 Cinema mode decoding.

■ Neo:6 Music

Performs DTS Neo:6 Music mode decoding. This setting is ideal for normal stereo sources such as CDs.

■ NEURAL-THX


Next generation of Neural-THX[®] Surround. In addition to stereo enhancement processing and pure discrete 5.1 surround sound, now capable of full 360° 7.1 surround sound playback from Neural-THX[®] surround encoded content.

Note

You can select “PLII” when there is no surround back speaker on the Speaker Pattern menu, while you can select “PLIIx” when there is a surround back speaker. You cannot select both settings at the same time.

EQ settings

You can use following parameters to adjust the tonal quality (bass/treble level) of front, center and surround back speakers.

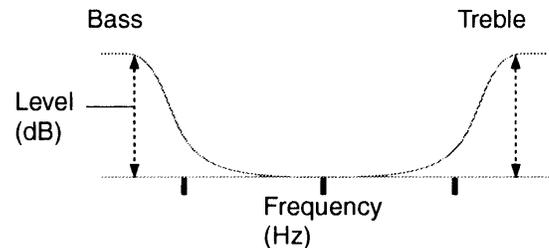

Notes

- This function does not work in the following cases.
 - The multi-channel input is selected.
 - Sound Field is set to “2ch Analog Direct.”
- This function does not work when Dolby TrueHD signals with a sampling frequency of higher than 96 kHz are being received.
- If the equalizer is adjusted while the receiver is receiving signals with a sampling frequency of higher than 96 kHz, the signals will always be played back at either 44.1 kHz or 48 kHz.

To adjust the equalizer on the EQ screen

- 1 Press \leftarrow/\rightarrow to select the speaker on the screen you want to adjust, then press \oplus .
- 2 Press \leftarrow/\rightarrow to select “Bass” or “Treble.”
- 3 Press \uparrow/\downarrow to adjust the gain, then press \oplus .

Multi Zone settings

You can make settings for the main zone, zone 2 or zone 3.

Turning the power on or off for zone 2/zone 3

You can turn zone 2 or zone 3 operation on or off. "Main" (this receiver) is always selected. You cannot turn it off.

- 1 Press **▲/▼** to select the zone you want to turn on or off, then press **⊕**.
- 2 Press **▲/▼** to select "ON" or "OFF," then press **⊕**.

■ ON

■ OFF

Selecting the output source for each zone

You can select the source that is output to the zone. Audio and video signals are output to zone 2, while only audio signals are output to zone 3.

- 1 Press **▲/▼** to select the zone to which you want to output audio/video signals, then press **⊕**.
- 2 Press **←/→** to select "Input," then press **⊕**.
- 3 Press **▲/▼** to select the input, then press **⊕**.

Adjusting the volume for zone 2/zone 3

You can adjust the volume in the main zone. If "Sur Back Assign" is set to "ZONE2" in the Speaker settings menu, you can also adjust the volume of zone 2.

- 1 Press **▲/▼** to select the zone for which you want to adjust the volume, then press **⊕**.
- 2 Press **←/→** to select "Volume," then press **⊕**.
- 3 Press **▲/▼** to adjust the volume, then press **⊕**.

Selecting the criteria for output of signals to control each zone

You can turn the receiver on or off in another zone, or select various options for use of the 12V Trigger function.

- 1 Press **▲/▼** to select the zone you want, then press **⊕**.
- 2 Press **←/→** to select "12V Trigger," then press **⊕**.
- 3 Press **▲/▼** to select the parameter, then press **⊕**.

■ OFF

Lets you turn off output of 12V triggers even when the main receiver is turned on.

■ CTRL

Lets you turn the output of 12V triggers on or off manually using the CIS command of the IR remote.

■ ZONE

Lets you turn the output of 12V triggers on or off based on whether the selected zone is turned on or off.

■ INPUT (for “Main” only)

Lets you turn on the output of 12V triggers when the preset input is selected.

When you select “Input,” the setting display which sets each input trigger to on/off appears. Press $\blacktriangle/\blacktriangledown$ to select the input, then press \oplus to check the box.

■ MAIN (for “Zone2” and “Zone3” only)

Lets you link operation of trigger in zone 2 or zone 3 to the main receiver.

Tips

- Even when this receiver is standby mode (press $I/\text{⏻}$ on the remote to turned off this receiver), the receiver in zone 2 or zone 3 remains turned on.
- Only signals from components connected to the analog input jacks are output through the ZONE 2 OUT/ZONE 3 OUT jacks. No signals are output from components connected to only the digital input jacks.
- When SOURCE is selected, the signals input to the MULTI CHANNEL INPUT jacks are not output from the ZONE 2 OUT or ZONE 3 OUT jacks even when the multi-channel input is selected. The analog audio signals of the current function are output.
- When “Tuner” is selected; the same type of radio station (FM/AM) selected in the main zone is set in zone 2 and zone 3. However, you can select the input other than “Tuner” in zone 2 and zone 3.
- When the receiver in the main zone is turned off, or an input source other than “Tuner” is selected, you can select a radio station from AM or FM in zone 2. When the receiver in the main zone and zone 2 are turned off, you can select a radio station from AM or FM in zone 3.
When two of the receivers in the main zone, zone 2 or zone 3 are turned off, you can select a broadcast from FM/AM/XM/SIRIUS in one zone in which the receiver is turned on.

🎵 Audio settings

You can make settings for the audio to suit your preference.

A/V Sync (Synchronizes audio and video output)

Lets you delay the output of audio to minimize the time gap between audio output and visual display.

■ 0 ms – 300 ms

You can adjust the delay from 0 ms to 300 ms in 10 ms steps.

Notes

- This function is useful when you use a large LCD or plasma monitor or a projector.
- This function does not work in the following cases.
 - The multi-channel input is selected.
 - “2ch Analog Direct” is being used.

Dual Mono (Digital broadcast language selection)

Lets you select the language you want to listen to during a digital broadcast. This feature only functions for Dolby Digital sources.

■ MAIN/SUB

Sound of the main language will be output through the front left speaker, and sound of the sub language will be output through the front right speaker simultaneously.

■ MAIN

Sound of the main language will be output.

■ SUB

Sound of the sub language will be output.

Decode Priority (Digital audio input decoding priority)

Lets you specify the input mode for the digital signal input to the DIGITAL IN jacks or HDMI IN jacks.

■ PCM

When signals from the DIGITAL IN jack are selected, PCM signals are given priority (to prevent interruption when playback starts). However, when other signals are input, there may be no sound, depending on the format. In this case, set this item to "AUTO."

When signals from the HDMI IN jack are selected, only PCM signals are output from the connected player. When signals in any other format are received, set this item to "AUTO."

■ AUTO

Automatically switches the input mode between Dolby Digital, DTS, DSD or PCM.

Note

Even when "Decode Priority" is set to "PCM," the sound may be interrupted at the very beginning of the first track due to signals on the CD being played back.

Video settings

Makes settings for video.

Resolution (Converting video signals)

Lets you convert the resolution of analog video input signals.

For details on video input/output conversion classified according to the Resolution menu settings, see Figure 1 on page 114.

■ AUTO

■ DIRECT

Lets you output analog video input signals without conversion.

■ 480i/576i

■ 480p/576p

■ 720p

■ 1080i

■ 1080p

Figure 1

“Resolution” menu setting	Output from		HDMI OUT jack	MONITOR COMPONENT VIDEO OUT jacks	MONITOR VIDEO OUT jack
	Input signals				
DIRECT	Component video		–	○	–
	Composite video		–	–	○
AUTO (initial setting)	Component video	● ^{a)}	● ^{a)}	● ^{b)}	● ^{b)}
	Composite video			● ^{b)}	● ^{b)}
480i/576i	Component video	● ^{c)}	● ^{c)}	●	●
	Composite video	● ^{c)}	● ^{c)}	●	●
480p/576p	Component video	●	●	●	–
	Composite video	●	●	●	○
720p, 1080i	Component video	●	●	● ^{d)}	–
	Composite video	●	●	● ^{d)}	○
1080p	Component video	●	●	○	–
	Composite video	●	●	–	○

● : Video signals are converted and output through the video converter.

○ : The same type of signal as that of the input signal is output. Video signals are not converted.

– : Video signals are not output.

a)The resolution is set automatically, depending on the connected monitor.

b)When the TV is connected to jacks other than the HDMI jacks, 480i/576i signals are output when “Resolution” is set to “AUTO.”

c)480p/576p signals are output even if 480i/576i is set.

d)Video signals without copyright protection are output based on the settings menu. Video signals with copyright protection are output as 480p.

Notes

- Video signals are not output from the COMPONENT VIDEO MONITOR OUT or MONITOR VIDEO OUT jacks when the monitor, etc., is connected to the HDMI OUT jack.
- If you select a resolution that the connected TV does not support in the “Resolution” menu, the images from the TV cannot be output correctly.
- Converted HDMI image output signals do not support “x.v.Color (x.v.Colour).”
- Converted HDMI image output signals do not support Deep Color.

HDMI settings

Makes the required settings for components connected to the HDMI jacks.

Control for HDMI

Lets you turn the function which controls components connected to the HDMI jack using an HDMI cable on or off.

■ OFF

■ ON

Note

When you set “Control for HDMI” to “ON,” “Audio Out” may be changed automatically.

Audio Out (Setting HDMI audio input)

Lets you set the HDMI audio signals output from the playback component connected to the receiver via an HDMI connection.

■ TV+AMP

The sound is output from TV’s speaker and the speakers connected to the receiver.

Notes

- The sound quality of the playback component depends on the TV’s sound quality, such as the number of channels, and the sampling frequency, etc. When the TV has stereo speakers, the sound output from the receiver is also stereo as that of the TV, even if you play multi-channel source.
- When you connect the receiver to a video component (projector, etc.), sound may not be output from the receiver. In this case, select “AMP.”
- When you select the input that you have assigned the HDMI input, sound does not output from the TV.

■ AMP

The HDMI audio signals from the playback component is only output to speakers connected to the receiver. The multi-channel sound can be played back as it is.

Note

Audio signals are not output from the TV’s speakers when “HDMI Audio” is set to “AMP.”

Subwoofer Level

Lets you set the level of the subwoofer to 0 dB or +10 dB when PCM signals are input via an HDMI connection. You can set the level for each HDMI input independently.

■ 0 dB

■ AUTO

Automatically sets the level to 0 dB or +10 dB depending on the frequency.

■ +10 dB

System settings

Customizes the settings of the receiver.

Screen Saver

Lets you activate the screen saver function for the GUI menu on the TV connected to the receiver.

■ OFF

The screen saver function is disabled.

■ ON

When there has been no operation attempted for 15 minutes, the screen saver function is activated automatically.

RS-232C Control

Lets you use this menu for the zone 2/zone 3 operation.

■ OFF

■ ON

Language

Selects the language for the messages on the screen.

■ English


■ Español

■ Français

■ Deutsch

Operating without connecting to a TV

You can operate the receiver using the display window of the receiver even if the TV is not connected to the receiver.

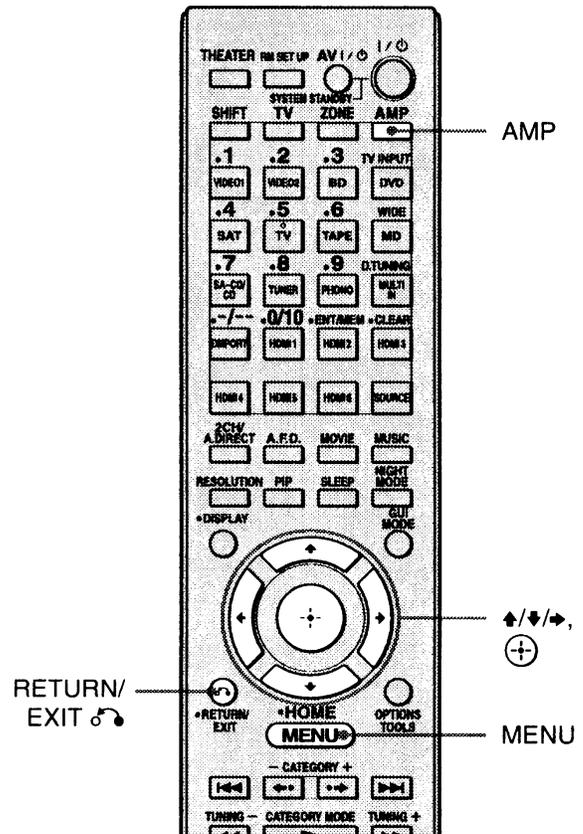

Using the menu in the display window

If “GUI MODE” is displayed in the display window of the receiver, press GUI MODE to switch the display mode of the menu to “DISPLAY MODE.”


- 1 Turn on the receiver.**
- 2 Press AMP.**

The receiver can be operated using the remote.

3 Press MENU.

The menu is displayed in the display window of the receiver.


Example: When you select "Level Settings"

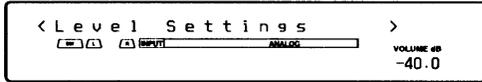

4 Press \uparrow/\downarrow repeatedly to select the menu, then press \odot or \rightarrow .


5 Press \uparrow/\downarrow repeatedly to select the menu item, then press \odot .

The parameter appears in brackets.

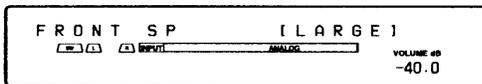

6 Press \uparrow/\downarrow repeatedly to select the parameter you want, then press \odot .

The parameter is entered and the brackets disappear from the display.

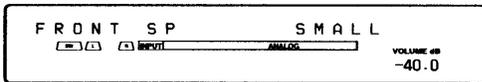

Tip

To return to the previous step, press RETURN/EXIT



Menu list (in the display window)

The following options are available in each menu.

“■■■■...” in the table signifies the parameter for each item.

Menu	Item	Parameter	Initial setting	
Auto Calibration	AUTO CAL START?			
		5 4 3 2 1		
		MEASURING: TONE		
		MEASURING: T.S.P.		
		MEASURING: WOOFER		
		COMPLETE [■■■■■■■■■■■■■■■■■■]	RETRY, SAVE EXIT, WRN CHECK, PHASE INFO, DIST. INFO, LEVEL INFO, EXIT	SAVE EXIT
		WARNING CODE [■■■■:4■]	FL, FR, C, SLA, SRA, SLB, SRB, SBL, SBR : 0, 1, 2, 3	
		NO WARNING		
		ERROR CODE [■■■■:3■]	F, SR, SB : 0, 1, 2, 3	
		RETRY? [■■■■]	YES, EXIT	YES
		CANCEL		
		CAL TYPE [■■■■■■■■■■■■■■■■■■]	ENGINEER, FULL FLAT, FRONT REF, OFF	FULL FLAT
		POSITION [■■■■■■■■■■■■■■■■■■]	POS.1, POS.2, POS.3	POS.1
		NAME IN ? [■■■■■■■■■■■■■■■■■■]		
Level Settings	TEST TONE [■■■■■■■■■■■■■■■■■■]	OFF, L to SW (AUTO), L to SW (FIX)	OFF	
	PHASE NOISE [■■■■■■■■■■■■■■■■■■]	OFF, L/C, C/R, R/SL, R/SR, SR/SL, SR/SBR, SBR/SBL, SBL/SL, SL/L, L/SR	OFF	
	PHASE AUDIO [■■■■■■■■■■■■■■■■■■]	OFF, L/C, C/R, R/SL, R/SR, SR/SL, SR/SBR, SBR/SBL, SBL/SL, SL/L, L/SR	OFF	
	FRONT L [■■■■.■dB]	-10.0dB to +10.0dB (0.5dB step)	0dB	
	FRONT R [■■■■.■dB]	-10.0dB to +10.0dB (0.5dB step)	0dB	
	CENTER [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	SURROUND L [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	SURROUND R [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	SUR BACK [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	SUR BACK L [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	SUR BACK R [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	SUB WOOFER [■■■■.■dB]	-20.0dB to +10.0dB (0.5dB step)	0dB	
	D. RANGE COMP. [■■■■]	OFF, AUTO, STD, MAX	AUTO	

Menu	Item	Parameter	Initial setting
Speaker Settings	SP PATTERN [■ ■ ■ ■ ■ ■]	2/0 to 3/4.1 (16 patterns)	3/4.1
	FRONT SP [■ ■ ■ ■ ■ ■]	SMALL, LARGE	LARGE
	CENTER SP [■ ■ ■ ■ ■ ■]	SMALL, LARGE	LARGE
	SURROUND SP [■ ■ ■ ■ ■ ■]	SMALL, LARGE	LARGE
	BI-AMP [■ ■ ■ ■]	OFF, ON	OFF
	ZONE2 SP [■ ■ ■ ■]	OFF, ON	OFF
	FRONT L [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	FRONT R [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	CENTER [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	SURROUND L [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	SURROUND R [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]	3' 3" to 32' 9" (1 inch step)	9' 10"
	SUR BACK [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]	1.0 to 10.0 (m) (0.1 m step)	3m
	SUR BACK L [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	SUR BACK R [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	SUB WOOFER [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	DISTANCE UNIT [■ ■ ■ ■ ■ ■]	meter, feet	feet
	FR CROSSOVER* [■ ■ ■ ■ ■ ■]	40 to 200 (10 Hz step)	120
	CNT CROSSOVER* [■ ■ ■ ■ ■ ■]	40 to 200 (10 Hz step)	120
	SUR CROSSOVER* [■ ■ ■ ■ ■ ■]	40 to 200 (10 Hz step)	120
	CNT A.DOWN MIX [■ ■ ■ ■]	OFF, ON	OFF
SP IMPEDANCE [■ohm]	4ohm, 8ohm	8ohm	

* You cannot choose this setting when the speaker is set to "LARGE."



Menu	Item	Parameter	Initial setting
HDMI Settings	CTRL FOR HDMI [■ ■ ■ ■]	OFF, ON	OFF
	AUDIO OUT [■ ■ ■ ■ ■ ■ ■ ■]	TV+AMP, AMP	AMP
	SW LEVEL [■ ■ ■ ■ dB]	AUTO, +10dB, 0dB	AUTO
System Settings	NAME IN ? [■ ■ ■ ■ ■ ■ ■ ■ ■ ■]		
	12V TRIG. MAIN [■ ■ ■ ■ ■ ■ ■ ■]	OFF, CTRL, ZONE, INPUT	OFF
	12V TRIG. ZONE2 [■ ■ ■ ■ ■ ■ ■ ■]	OFF, CTRL, ZONE, MAIN	OFF
	12V TRIG. ZONE3 [■ ■ ■ ■ ■ ■ ■ ■]	OFF, CTRL, ZONE, MAIN	OFF
	RS-232C CONTROL [■ ■ ■ ■]	OFF, ON	ON

To change the display

You can check the sound field, etc., by changing the information on the display.

1 Press AMP.

The receiver can be operated using the remote.

2 Select the input for which you want to check the information.

3 Press DISPLAY repeatedly.

Each time you press DISPLAY, the display will change as follows.

Input you selected → Sound field type → Stream Information → Input name ...

When listening to FM and AM radio

Station name → Frequency → Sound field type → Volume...

Index name appears only when you have assigned one to the input or preset station.

Index name does not appear when only blank spaces have been entered.

When tuning in a channel from a satellite tuner

Channel name → Channel number → Category → Artist name → Song title → Composer name (SIRIUS only) → Signal strength → Sound field type

Using the Remote

Operating each component using the remote

You can control Sony or non-Sony components you are using with the remote supplied with the receiver.

The remote is initially set to control Sony components.

When you change the settings of the remote according to the components you are using, you can control non-Sony and other Sony components that the remote is initially unable control (page 124).

Operating the components connected to the receiver

- 1 Press the input button that matches the connected component that you want to operate.**
- 2 Press the appropriated buttons to use the function listed in the table below.**

Note

You may not be able to operate some functions for the components you are using.

Table of buttons used to control each component

Component	TV	VCR	DVD player, DVD/VHS combo	Blu-ray Disc Player	HDD Recorder	PSX	Video CD player, LD player	Digital CATV terminal (UC)	DSS (UC)	Digital satellite/terrestrial receiver (EURO)	Tape deck A/B	DAT deck	CD player, MD deck	DIGITAL MEDIA PORT device
AV I/⏻	●	●	●	●	●	●	●	●	●	●		●	●	
Numeric buttons	●	●	●	●	●	●	●	●	●	●	●	●	●	●
TV INPUT, WIDE	●													
-/--	●	●	●	●	●	●	●	●	●		●		●	
ENT/MEM	●	●	●	●	●	●	● ^{*1}	●	●		●	●	●	
CLEAR			●	●	●	●			●				●	
OPTIONS/TOOLS	●		●	●	●	●		●	●					
DISPLAY	●	●	●	●	●	●	●	●	●				●	
RETURN/EXIT	●		●	●	●	●	●	●	●	●				●
⬆/⬇/⬅/⬄, ⊕, MENU, HOME	●	●	●	●	●	●		●	●	●				●
⏮/⏭	●	●	●	●	●	●	●	●			● ^{*2}	●	●	●
⏪/⏩	●		●	●	●	●		●						●
⏮/TUNING -, ⏭/TUNING +	●	●	●	●	●	●	●	●			●	●	●	●
DISC SKIP			● ^{*3}				● ^{*4}						●	
▶, , ■	●	●	●	●	●	●	●	●			●	●	●	●
MUTING, MASTER VOL +/-, TV VOL +/-	●													
PRESET +/-, TV CH +/-	●	●	●	●	●		● ^{*1}	●	●	●				
BD/DVD TOP MENU, BD/DVD MENU			●	●		●								
F1, F2			●	●										

*1 LD player only.

*2 Deck B only.

*3 DVD only.


*4 Video CD only.



Using the Remote

Programming the remote

You can customize the remote to match the components connected to your receiver. You can even program the remote to control non-Sony components and also Sony components that the remote is normally unable to control. The procedure below uses as an example a case in which a VCR made by a company other than Sony is connected to the VIDEO 2 IN jacks on the receiver.

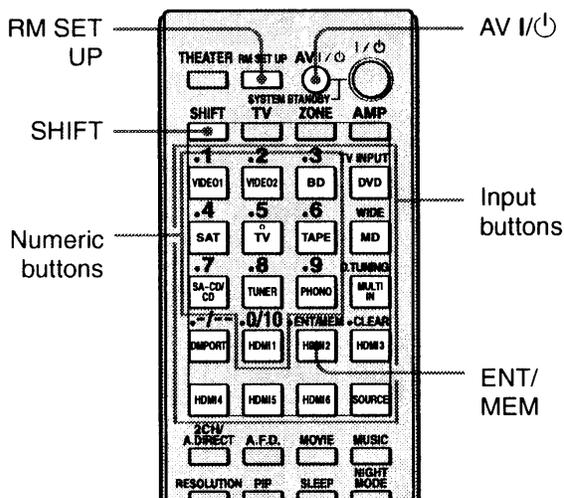

1 Press AV I/O while pressing RM SET UP.

The RM SET UP button flashes.

2 While the RM SET UP button is flashing, press the input button (including TV) for the component you want to control.

For example, if you are going to control a VCR connected to VIDEO 2 IN jack, press VIDEO 2.

RM SET UP and the input button light up. If you press the button for a component of which you cannot program the remote, such as TUNER, PHONO, DMPOR or SOURCE, etc., the RM SET UP button keeps flashing.

3 Press the numeric buttons to enter the numeric code (or one of the codes if more than one code exists) corresponding to the component and the maker of the component you want to control.

The input button lights up.

Note

For a TV remote code value, only numbers in the 500's are valid.

4 Press ENT/MEM or ENTER.

Once the numeric code has been verified, the RM SET UP button flashes twice and the remote automatically exits the programming mode. The input button also turns off.

To cancel programming

Press RM SET UP during any step.

The numeric codes corresponding to the component and the maker of the component

Use the numeric codes in the tables below to control non-Sony components and also Sony components that the remote is normally unable to control. Since the remote signal that a component accepts differs depending on the model and year of the component, more than one numeric code may be assigned to a component. If you fail to program your remote using one of the codes, try using other codes.

Notes

- The numeric codes are based on the latest information available for each brand. There is a chance, however, that your component will not respond to some or all of the codes.
- All of the input buttons on this remote may not be available when used with your particular component.

To control a CD player

Maker	Code(s)
SONY	101, 102, 103
DENON	104, 123
JVC	105, 106, 107
KENWOOD	108, 109, 110
MAGNAVOX	111, 116
MARANTZ	116
ONKYO	112, 113, 114
PANASONIC	115
PHILIPS	116
PIONEER	117
TECHNICS	115, 118, 119
YAMAHA	120, 121, 122

To control a DAT deck

Maker	Code(s)
SONY	203
PIONEER	219

To control a tape deck

Maker	Code(s)
SONY	201, 202
DENON	204, 205
KENWOOD	206, 207, 208, 209
NAKAMICHI	210
PANASONIC	216
PHILIPS	211, 212
PIONEER	213, 214
TECHNICS	215, 216
YAMAHA	217, 218

To control an MD deck

Maker	Code(s)
SONY	301
DENON	302
JVC	303
KENWOOD	304

To control an HDD recorder

Maker	Code(s)
SONY	307, 308, 309

To control a Blu-ray Disc Player

Maker	Code(s)
SONY	310, 311, 312

To control a PSX

Maker	Code(s)
SONY	313, 314, 315

To control a DVD player

Maker	Code(s)
SONY	401, 402, 403
BROKSONIC	424
DENON	405
HITACHI	416
JVC	415, 423
mitsubishi	419
ORITRON	417
PANASONIC	406, 408, 425
PHILIPS	407
PIONEER	409, 410
RCA	414
SAMSUNG	416, 422
TOSHIBA	404, 421
ZENITH	418, 420

To control a DVD/VIDEO COMBO (recorder)

Maker	Code(s)
SONY	411

To control a HDD/DVD COMBO (recorder)

Maker	Code(s)
SONY	401, 402, 403

To control a TV

Maker	Code(s)
SONY	501
AIWA	501, 536, 539
AKAI	503
AOC	503
CENTURION	566
CORONADO	517
CURTIS-MATHES	503, 551, 566, 567
DAYTRON	517, 566
DAEWOO	504, 505, 506, 507, 515, 544
FISHER	508, 545
FUNAI	548
FUJITSU	528

Maker	Code(s)
GOLDSTAR/LG	503, 512, 515, 517, 534, 544, 556, 568, 576
GRUNDIG	511, 533, 534
HITACHI	503, 513, 514, 515, 517, 519, 544, 557, 571
ITT/NOKIA	521, 522
J.C.PENNY	503, 510, 566
JVC	516, 552
KMC	517
MAGNVOX	503, 515, 517, 518, 544, 566
MARANTZ	527
MITSUBISHI/MGA	503, 519, 527, 544, 566, 568
NEC	503, 517, 520, 540, 544, 554, 566
NORDMENDE	530, 558
NOKIA	521, 522, 573, 575
PANASONIC	509, 524, 553, 559, 572
PHILIPS	515, 518, 557, 570, 571
PHILCO	503, 504, 514, 517, 518
PIONEER	509, 525, 526, 540, 551, 555
PORTLAND	503
QUASAR	509, 535
RADIO SHACK	503, 510, 527, 565, 567
RCA/PROSCAN	503, 510, 523, 529, 544
SAMSUNG	503, 515, 517, 531, 532, 534, 544, 556, 557, 562, 563, 566, 569
SAMPO	566
SABA	530, 537, 547, 549, 558
SANYO	508, 545, 546, 560, 567
SCOTT	503, 566
SEARS	503, 508, 510, 517, 518, 551
SHARP	517, 535, 550, 561, 565
SYLVANIA	503, 518, 566
THOMSON	530, 537, 547, 549
TOSHIBA	535, 539, 540, 541, 551
TELEFUNKEN	530, 537, 538, 547, 549, 558
TEKNIKA	517, 518, 567
WARDS	503, 517, 566
YORK	566
ZENITH	542, 543, 567
GE	503, 509, 510, 544
LOEWE	515, 534, 556

To control an LD player

Maker	Code(s)
SONY	601, 602, 603
PIONEER	606

To control a video CD player

Maker	Code(s)
SONY	605

To control a VCR

Maker	Code(s)
SONY	701, 702, 703, 704, 705, 706
AIWA*	710, 750, 757, 758
AKAI	707, 708, 709, 759
BLAUPUNKT	740
EMERSON	711, 712, 713, 714, 715, 716, 750
FISHER	717, 718, 719, 720
GENERAL ELECTRIC (GE)	721, 722, 730
GOLDSTAR/LG	723, 753
GRUNDIG	724
HITACHI	722, 725, 729, 741
ITT/NOKIA	717
JVC	726, 727, 728, 736
MAGNAVOX	730, 731, 738
MITSUBISHI/MGA	732, 733, 734, 735
NEC	736
PANASONIC	729, 730, 737, 738, 739, 740
PHILIPS	729, 730, 731
PIONEER	729
RCA/PROSCAN	722, 729, 730, 731, 741, 747
SAMSUNG	742, 743, 744, 745
SANYO	717, 720, 746
SHARP	748, 749
TELEFUNKEN	751, 752
TOSHIBA	747, 756
ZENITH	754

* If an AIWA VCR does not work even though you enter the code for AIWA, enter the code for Sony instead.

To control a satellite tuner (box)

Maker	Code(s)
SONY	801, 802, 803, 804, 824, 825, 865
AMSTRAD	845, 846
BskyB	862
GENERAL ELECTRIC(GE)	866
GRUNDING	859, 860
HUMAX	846, 847
THOMSON	857, 861, 864, 876
PACE	848, 849, 850, 852, 862, 863, 864
PANASONIC	818, 855
PHILIPS	856, 857, 858, 859, 860, 864, 874
NOKIA	851, 853, 854, 864
RCA/PROSCAN	866, 871
HITACHI/BITA	868
HUGHES	867
JVC/Echostar/Dish Network	873
mitsubishi	872
SAMSUNG	875
TOSHIBA	869, 870

To control a cable box

Maker	Code(s)
SONY	821, 822, 823
HAMLIN/REGAL	836, 837, 838, 839, 840
JERROLD/G.I./MOTOROLA	806, 807, 808, 809, 810, 811, 812, 813, 814, 819
JERROLD	830, 831
OAK	841, 842, 843
PANASONIC	816, 826, 832, 833, 834, 835
PHILIPS	830, 831
PIONEER	828, 829
RCA	805
SCIENTIFIC ATLANTA	815, 816, 817
TOCOM/PHILIPS	830, 831
ZENITH	826, 827

Performing several commands in sequence automatically (Macro Play)


The Macro Play function lets you link several commands in a sequential order as a single command.

The remote provides 2 macro lists (MACRO 1 and MACRO 2). You can specify up to 20 commands for each macro list.

Note

When setting up Macro Play, replace the batteries with new ones.

Program the sequence of the operation

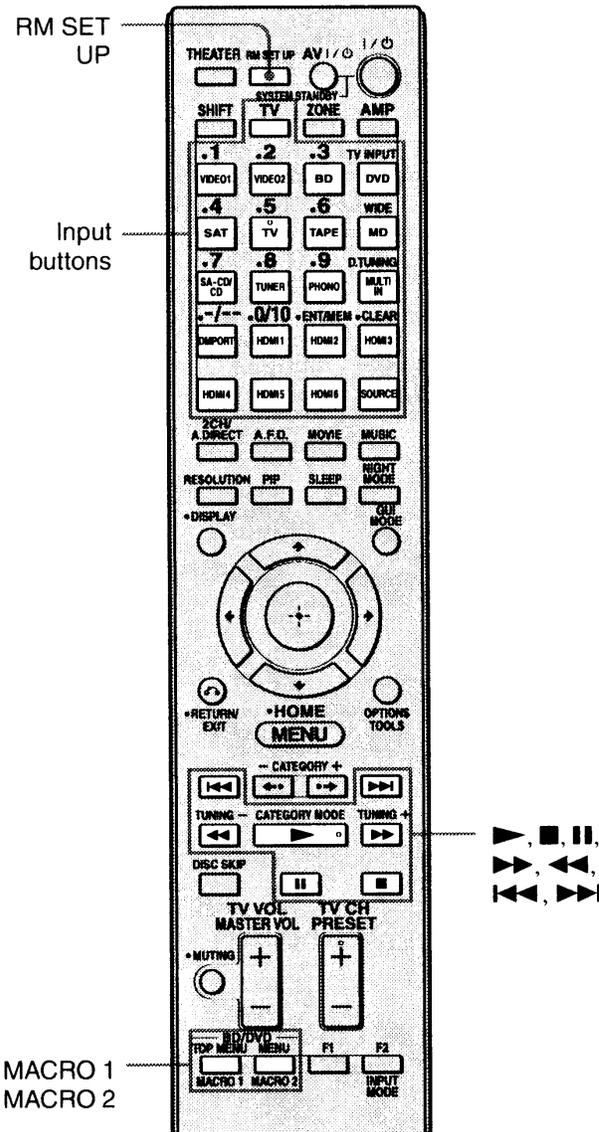

- 1 Press MACRO 1 or MACRO 2 for more than 1 second while pressing RM SET UP.**

The RM SET UP button flashes and one of the input buttons lights up (as the initial setting, the VIDEO1 button lights).

- 2 Press the input button for the component for which you want to program the sequence of operation(s).**

- 3 Press the buttons you want to program in the same sequence as you want the operation(s) to be performed.**

Press	Operations to be programmed
▶, ■, , ▶▶, ◀◀, ◀◀, ▶▶	Performs the operation of the button.
The input button for more than 1 second	Switches inputs.
MACRO 1 or MACRO 2	Make a one second interval. When you want to make a longer interval, press MACRO 1 or MACRO 2 repeatedly.

The input button selected in step 2 flashes twice, then lights up again.

- 4 Repeat steps 2 and 3 when you want to program operations for other components.**

- 5 Press RM SET UP to finish the programming process.**

Tip

If the RM SET UP button flashes five times in step 1, and the macro programming process does not start, replace the batteries with new ones.

To cancel programming

Press RM SET UP. Also, not pressing any button for 60 seconds cancels the settings. The previous command remains valid.

Starting macro play

1 Press AMP.

The AMP button lights up, and then turns off.

2 Press MACRO 1 or MACRO 2 to start the macro.

The macro starts and execute the commands in the order you assigned them. While the commands are being sent, the AMP button flashes and the RM SET UP button lights up. When the commands have been sent, the RM SET UP and AMP buttons turn off.

To erase a programmed macro

1 Press MACRO 1 or MACRO 2 for more than 1 second while pressing RM SET UP to clear the stored macro.

The RM SET UP button flashes.

2 Press RM SET UP.


Settings stored as macro are cleared.

Setting remote commander codes that are not stored in the remote

Even if a remote commander code is not one of the presets stored in the remote, it is possible for the remote to learn the code using the learning function.

Note

When setting up the receiver to learn the remote command modes, replace the batteries with new ones.

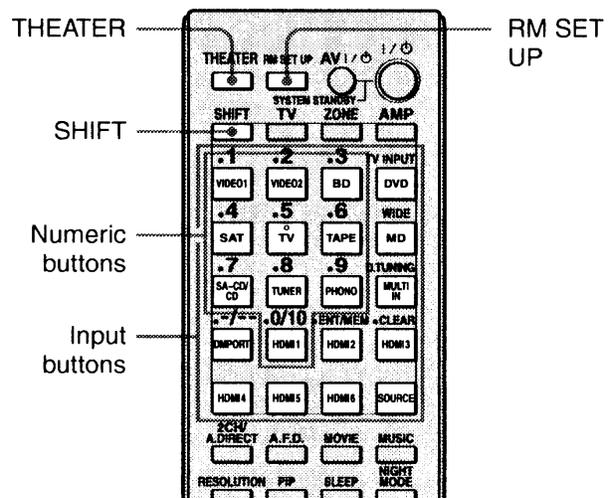

Example for storing a new commander code for the numeric button 1 when the VIDEO2 input is selected.

1 Press THEATER while pressing RM SET UP.

The RM SET UP button lights up.

2 Press the input button (VIDEO2 in the example) for the component you want to operate with the new command.


The input button flashes. (The RM SET UP button remains lit.)

3 Press SHIFT, then press the numeric buttons (button 1 in the example) you want to store the new command.

The input button you selected in step 2 lights up. (The RM SET UP button remains lit.)

4 Point the remote code receiver section of the remote toward the receiver/transmitter on the remote commander to be learned from.

While the second remote is receiving the signal, the input button selected in step 2 turns off.

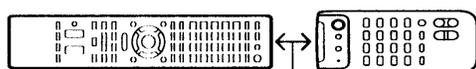

About 5 cm - 10 cm (2" - 4")

The RM SET UP button flashes twice, then the learning process is completed. When the learning process fails, the RM SET UP button flashes five times. Try to perform process again from step 2.

5 Press RM SET UP to finish the Learning function process.

Tips

- When the memory capacity for storing remote commander codes reaches a certain limit, the RM SET UP button flashes 10 times, and then the learning process ends.
- If the RM SET UP button flashes five times in step 1, and the learning process does not start, replace the batteries with new ones.

To cancel learning

Press RM SET UP. Also, not pressing any button for 60 seconds cancels the settings.


Using a command that has been learned

When selecting a learned input, press the button used to learn that function.

To erase the learned code

- 1 Press THEATER while pressing RM SET UP.
- 2 Press the input button (VIDEO2 in the example) for which you want to clear the setting.
The input button flashes. (The RM SET UP button remains lit.)
- 3 Press I/⏻ for more than 1 second.
The input button flashes twice, repeatedly.
- 4 Press SHIFT, then press numeric buttons (button 1 in the example) to clear the stored setting.
The RM SET UP button flashes twice, then the clearing process is completed. When the clearing process fails, the RM SET UP button flashes five times. Try to perform process again from step 2.

Clearing all the contents of the remote's memory

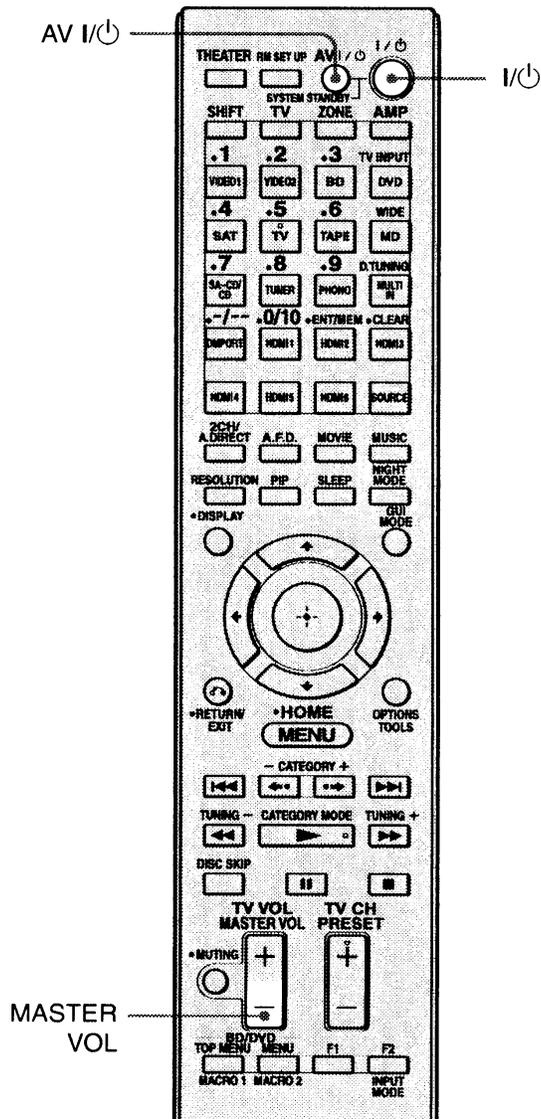

- 1 Press and hold MASTER VOL – first, then press I/⏻, then press AV I/⏻.**

The RM SET UP button flashes three times.

- 2 Release all buttons.**

All the contents of the remote's memory (e.g., all the programmed data) are cleared.

Glossary

■ Cinema Studio EX

A surround sound mode that can be regarded as the compilation of Digital Cinema Sound technology, delivers the sound of a dubbing theater using three technologies: “Virtual Multi Dimensions,” “Screen Depth Matching,” and “Cinema Studio Reverberation.”

“Virtual Multi Dimensions,” the virtual speaker technology, creates a virtual multi-surround environment with actual speakers up to 7.1 channels, and brings the surround sound experience of a theater with the latest facilities into your home.

“Screen Depth Matching” reproduces treble attenuation, fullness, and depth of sound usually created in a theater using sound emission from behind the screen. This is then added to the front and center channels.

“Cinema Studio Reverberation” reproduces the sound characteristics of state-of-the-art dubbing theaters and recording studios, including Sony Pictures Entertainment’s dubbing studios. There are three modes, A/B/C, available according to the studio type.

■ Component video

A format for transmitting video signal information consisting of three separate signals: luminance Y, chrominance Pb, and chrominance Pr. High quality pictures, such as DVD video or HDTV pictures, are transmitted more faithfully. The three jacks are color-coded green, blue, and red.

■ Composite video

A standard format for transmitting video signal information. The luminance signal Y and chrominance signal C are combined and transmitted together.

■ Crossover frequency

The frequency at which two speaker’s frequencies intersect.

■ Deep Color

Video signals for which the color depth of signals passing through an HDMI jack have been raised.

The number of colors that could be expressed by 1 pixel was 24 bits (16,777,216 colors) with the current HDMI jack. However, the number of colors which can be expressed by 1 pixel will be 36, etc., bits when the receiver corresponds to Deep Color.

Since the gradation of the depth of a color can be expressed more finely with more bits, continuous color changes can be more smoothly expressed.

■ Digital Cinema Sound (DCS)

Unique sound reproduction technology for home theater developed by Sony, in cooperation with Sony Pictures Entertainment, for enjoying the exciting and powerful sound of movie theaters at home. With this “Digital Cinema Sound” developed by integrating a DSP (Digital Signal Processor) and measured data, the ideal sound field intended by filmmakers can be experienced at home.

■ Digital Concert Hall

“Digital Concert Hall” delivers richer sound for 2ch stereo sources such as CDs, etc. With the use of 5.1ch or 7.1ch speakers and virtual speaker technology, stereoscopic reverberation and reflected sound are reproduced, and music software can be enjoyed with richer sound and presence. The sound field in a concert hall is recreated by a geometrical analysis of the concert hall and precise modeling of reflected and reverberant sounds based on actual measured data. Tonal qualities such as sound strength and frequency response are taken into account and calculated on the DSP (Digital Signal Processor) to bring reverberation in. Sound is enjoyed with natural and comfortable resonance, as if listening to music in a concert hall.

■ **Dolby Digital**

Digital audio encoding/decoding technology developed by Dolby Laboratories, Inc. It consists of front (left/right), center, surround (left/right) and subwoofer channels. It is a designated audio standard for DVD-video and also known as 5.1 channels surround.

■ **Dolby Digital Plus**

Dolby Digital Plus provides the flexibility and efficiency to deliver more channels of compelling surround sound for high-definition video media. Its superior coding efficiencies enable up to 7.1ch of high-quality multichannel audio without negatively impacting bit budgets allocated for video performance or additional feature sets.

■ **Dolby Digital Surround EX**

Acoustic technology developed by Dolby Laboratories, Inc. Surround back information is matrixed into regular left and right surround channels so that the sound can be reproduced in 6.1 channels. Active scenes, especially, are recreated with a more dynamic and realistic sound field.

■ **Dolby Pro Logic II**

This technology converts 2 channels stereo recorded audio into 5.1 channels for playback. Old movies encoded in the traditional stereo format can be enhanced with 5.1 channels surround sound.

■ **Dolby Pro Logic IIx**

Technology for 7.1 channels (or 6.1 channels) playback. Along with audio encoded in Dolby Digital Surround EX, 5.1 channels Dolby Digital encoded audio can be reproduced in 7.1 channels (or 6.1 channels). Furthermore, existing stereo recorded content can also be reproduced in 7.1 channels (or 6.1 channels).

■ **Dolby Surround (Dolby Pro Logic)**

Audio processing technology developed by Dolby Laboratories, Inc. Center and mono surround information is matrixed into two stereo channels. When reproduced, audio is

decoded and output in 4 channels surround sound. This is the most common audio processing method for DVD-video.

■ **Dolby TrueHD**

Dolby TrueHD is Dolby's lossless audio technology developed for high-definition optical discs. Dolby TrueHD audio is bit-for-bit identical to the original studio masters and provides supreme-quality audio up to 8ch at 96 kHz/24 bit and up to 6ch at 192 kHz/24 bit. Together with high-definition video, it offers an unprecedented home theater experience.

■ **DSD**

Audio format used for a Super Audio CD. DSD converts analog signals to digital and records them directly, without adding any processing, so that no information is omitted. Recording and playback of high fidelity, quality sound is achieved.

■ **DTS 96/24**

A high sound quality digital signal format. It records audio at a sampling frequency and bit rate of 96 kHz/24 bit which is the highest possible for DVD-video. The number of playback channels varies depending on the software.

■ **DTS Digital Surround**

Digital audio encoding/decoding technology for theaters developed by DTS, Inc. It compresses audio less than Dolby Digital, delivering a higher quality sound reproduction.

■ **DTS-ES**

Format for 6.1 channels playback with surround back information. There are two modes, "Discrete 6.1" which records all channels independently, and "Matrix 6.1" which matrixes surround back channel into surround left and surround right channels. It is ideal for playback of motion picture soundtracks.

■ DTS-HD

Audio format which extends the conventional DTS Digital Surround format.

This format consists of a core and an extension, and the core part has DTS Digital Surround compatibility. There are two kinds of DTS-HD, DTS-HD High Resolution Audio and DTS-HD Master Audio. DTS-HD High Resolution Audio has a maximum transmission rate of 6 Mbps, with lossy compression (Lossy), and DTS-HD High Resolution Audio corresponds to a maximum sampling frequency of 96 kHz, and a maximum of 7.1 ch. DTS-HD Master Audio has a the maximum transmission rate of 24.5 Mbps, and uses lossless compression (Lossless), and DTS-HD Master Audio corresponds to a maximum sampling frequency of 192 kHz, and a maximum of 7.1 ch.

■ DTS Neo:6

This technology converts 2 channels stereo recorded audio for 7 channels playback. There are two modes to select according to the playback source or your preference, CINEMA for movies, and MUSIC for stereo sources such as music.

■ HDMI (High-Definition Multimedia Interface)

HDMI (High-Definition Multimedia Interface) is an interface that supports both video and audio on a single digital connection, allowing you to enjoy high quality digital picture and sound. The HDMI specification supports HDCP (High-bandwidth Digital Contents Protection), a copy protection technology that incorporates coding technology for digital video signals.

■ High Bitrate Audio

It refers to the audio formats of the compression method (DTS-HD Master Audio, Dolby TrueHD, etc.) which is a high bitrate format recorded mainly on Blu-ray Disc etc.

■ Interlace

A scanning method which completes a picture by displaying half of the lines on a tube surface of a TV or monitor each 1/60 second. First, all the odd-numbered lines are drawn, leaving spaces between each line, then all the even-numbered lines are drawn to fill the spaces. “i” of “480i” stands for “Interlace.”

■ L.F.E. (Low Frequency Effects)

Sound effects of low frequencies which are output from a subwoofer in Dolby Digital or DTS, etc. By adding a deep bass with a frequency between 20 to 120 Hz, audio becomes more powerful.

■ Neural THX

Neural Surround™, THX® Technologies has been chosen as the official surround sound broadcast format for XM Satellite Radio’s “XM HD Surround” and other leading FM/HD radio stations in the USA and worldwide. Neural Surround, THX Technologies delivers the rich envelopment and discrete image detail of surround sound in a format 100% compatible with stereo.

■ PCM (Pulse Code Modulation)

A method of converting analog audio to digital audio for easy enjoyment of digital sound.

■ Progressive

A scanning method that draws all scanning lines sequentially, as opposed to interlaced scanning where all the odd and then all the even lines are drawn.

“p” of “480p” stands for “Progressive.”

■ x.v.Color (x.v.Colour)

“x.v.Color (x.v.Colour)” enables the more faithful reproduction of various colors such as the brilliant colors of flowers and the turquoise blue of the southern ocean.

Precautions

On safety

Should any solid object or liquid fall into the cabinet, unplug the receiver and have it checked by qualified personnel before operating it any further.

On power sources

- Before operating the receiver, check that the operating voltage is identical with your local power supply.
The operating voltage is indicated on the nameplate on the back of the receiver.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- If you are not going to use the receiver for a long time, be sure to disconnect the receiver from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- AC power cord (mains lead) must be changed only at a qualified service shop.

On heat buildup

Although the receiver heats up during operation, this is not a malfunction. If you continuously use this receiver at a large volume, the cabinet temperature of the top, side and bottom rises considerably. To avoid burning yourself, do not touch the cabinet.

On placement

- Place the receiver in a location with adequate ventilation to prevent heat buildup and prolong the life of the receiver.

- Do not place the receiver near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place anything on top of the cabinet that might block the ventilation holes and cause malfunctions.
- Do not place the receiver near equipment such as a television, VCR, or tape deck. (If the receiver is being used in combination with a television, VCR, or tape deck, and is placed too close to that equipment, noise may result, and picture quality may suffer. This is especially likely when using an indoor antenna (aerial). Therefore, we recommend using an outdoor antenna (aerial).)

On operation

Before connecting other components, be sure to turn off and unplug the receiver.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

If you have any questions or problems concerning your receiver, please consult your nearest Sony dealer.

Troubleshooting

If you experience any of the following difficulties while using the receiver, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

Audio

There is no sound, no matter which component is selected, or only a very low-level sound is heard.

- Check that the speakers and components are connected securely.
- Check that all speaker cords are connected correctly.
- Check that both the receiver and all components are turned on.
- Check that MASTER VOLUME control is not set at $-\infty$ dB. Try to set it at about -40 dB.
- Check that SPEAKERS (OFF/A/B/A+B) is not set to OFF (page 44).
- Press MUTING on the remote to cancel the muting function.
- Check that you have selected the correct component with INPUT SELECTOR.
- Check that headphones are not connected.
- When only a very low-level sound is heard, check to see if NIGHT MODE is activated (page 96).
- The protective device on the receiver has been activated. Turn off the receiver, eliminate the short-circuit problem, and turn on the power again.

There is no sound from a specific component.

- Check that the component is connected correctly to the audio input jacks for that component.
- Check that the cord(s) used for the connection is (are) fully inserted into the jacks on both the receiver and the component.

There is no sound from one of the front speakers.

- Connect a pair of headphones to the PHONES jack to verify that sound is output from the headphones. If only one channel is output from the headphones, the component may not be connected to the receiver correctly. Check that all the cords are fully inserted into the jacks on both the receiver and the component. If both channels are output from the headphones, the front speaker may not be connected to the receiver correctly. Check the connection of the front speaker which is not outputting any sound.
- Make sure you have connected both the L or R jack to an analog component and not just to either the L or R jack. Use a monaural-stereo cable (not supplied). However, there will be no sound from the center speaker when a sound field (Pro Logic, etc.) is selected. When the center speaker is not connected, sound is output only from the front left/right speakers.

There is no sound from analog 2 channel sources.

- Check to make sure the selected audio (digital) input jack is not assigned to other inputs in "Input Assign" in the Input menu (page 93).

There is no sound from digital sources (from COAXIAL or OPTICAL input jack).

- Check that the INPUT MODE is not set to "Analog."
- Check that the "2ch Analog Direct" is not being used.
- Check to make sure the selected audio (digital) input jack is not assigned to other inputs in "Input Assign" in the Input menu (page 93).

The source sound input from the HDMI IN jack is not output from an amplifier or the TV speaker connected to the receiver.

- Check that the component is connected correctly to the HDMI IN jack for that component.
- The sound is not output when you display the receiver's menu on the TV monitor. Press MENU to turn off the display.
- Depending on the playback component, component may need to be set up. Refer to the operating instructions supplied with the each component.
- Be sure to use a connecting cable for the HDMI jack corresponding to high speed (an HDMI version 1.3a, category 2 cable) when you view images or listen to sound during a Deep Color transmission.

The left and right sounds are unbalanced or reversed.

- Check that the speakers and components are connected correctly and securely.
- Adjust the balance parameters using the Auto Calibration settings menu.

There is severe hum or noise.

- Check that the speakers and components are connected securely.
- Check that the connecting cords are away from a transformer or motor, and at least 10 feet (3 meters) away from a TV set or fluorescent light.
- Move your TV away from the audio components.
- Make sure you have grounded the \hbar SIGNAL GND terminal (only when a turntable is connected).
- The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.

There is no sound, or only a very low-level sound is heard from the center/surround/surround back speakers.

- Select a "Cinema Studio EX" mode (page 79).

- Adjust the speaker level (page 106).
- Make sure the center/surround speaker (s) is (are) set to either "SMALL" or "LARGE."

There is no sound from the surround back speakers.

- Some discs have no Dolby Digital Surround EX flag even though the packages have Dolby Digital Surround EX logos.

There is no sound from the subwoofer.

- Check that the subwoofer is connected correctly and securely.
- Make sure you have turned on your speaker.
- When all speakers are set to "LARGE" and "Neo:6 Cinema," or "Neo:6 Music" is selected, there is no sound from the subwoofer.

The surround effect cannot be obtained.

- Make sure the sound field function is on (press MOVIE or MUSIC).
- Sound fields function only for signals with a sampling frequency of up to 48 kHz.

Dolby Digital or DTS multi-channel sound is not reproduced.

- Check that the DVD, etc. you are playing is recorded in Dolby Digital or DTS format.
- When connecting the DVD player, etc., to the digital input jacks of this receiver, make sure the setting for the digital audio output of the connected component is available.

Recording cannot be carried out.

- Check that the components are connected correctly (page 25).
- Select the source component (page 53).

The MULTI CHANNEL DECODING lamp does not light up in blue.

- Check that the playback component is connected on a digital jack and the input is selected properly on this receiver.
- Check whether the input source of the software being played back corresponds to the multi-channel format.
- Check whether the setup on the playback component is set to multi-channel sound.
- Check to make sure the selected audio (digital) input jack is not assigned to other inputs in “Input Assign” in the Input menu (page 93).

There is no sound from the component connected to the DIGITAL MEDIA PORT adapter.

- Adjust the volume of this receiver.
- The DIGITAL MEDIA PORT adapter and/or component is not connected correctly. Turn off the receiver, then reconnect the DIGITAL MEDIA PORT adapter and/or component.
- Check the DIGITAL MEDIA PORT adapter and/or component device to make sure it supports this receiver.

Video

There is no picture or an unclear picture appears on the TV screen or monitor.

- Select the appropriate input on the receiver (page 53).
- Set your TV to the appropriate input mode.
- Move your TV away from the audio components.
- Assign the component video input correctly.
- The input signal should be same as input when you are up-converting an input signal with this receiver (page 37).

The image of the COMPONENT VIDEO OUT is corrupted.

- Video input signals other than 480p component are not received when signals are output from the VIDEO jack. Input 480i component video signals.
- When component input signals other than 480p are output, use the COMPONENT VIDEO OUT jack and set “Resolution” to “DIRECT.”

Images of the source with HDMI connection is not output to the TV.

- Make sure that cables are correctly and securely connected to components.
- Depending on the playback component, component may need to be set up. Refer to the operating instructions supplied with the each component.
- Be sure to use a connecting cable for the HDMI jack corresponding to high speed (an HDMI version 1.3a, category 2 cable) when you view images or listen to sound during a Deep Color transmission.

Recording cannot be carried out.

- Check that the components are connected correctly (page 30).
- Select the source component (page 53).

The GUI does not appear on the TV screen.


- Press GUI MODE to display “GUI MODE” on the display.
- Check the TV is connected correctly.

Tuner

The FM reception is poor.

- Use a 75-ohm coaxial cable (not supplied) to connect the receiver to an outdoor FM antenna (aerial) as shown on page 139. If you connect the receiver to an outdoor antenna (aerial), ground it against lightning. To prevent a gas explosion, do not connect the ground (earth) wire to a gas pipe.

Outdoor FM antenna (aerial)

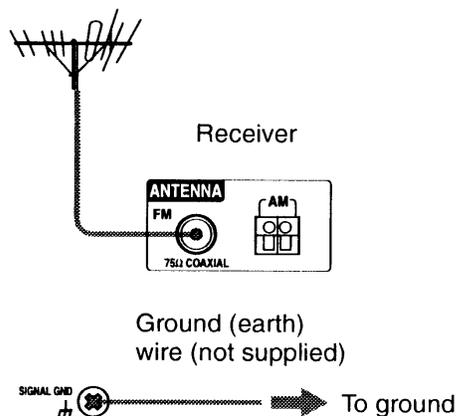

Radio stations cannot be tuned in.

- Check that the antennas (aerials) are connected securely. Adjust the antennas (aerials) and connect an external antenna (aerial), if necessary.
- Keep the satellite radio antenna, away from the speaker cords and the power cord to avoid picking up noise.
- The signal strength of the stations is too weak (when tuning in with automatic tuning). Use direct tuning.
- Make sure you set the tuning interval correctly (when tuning in AM stations with direct tuning).
- No stations have been preset or the preset stations have been cleared (when tuning by scanning preset stations). Preset the stations (page 62).
- Press DISPLAY so that the frequency appears on the display.

The system cannot receive satellite channels at all.

- The receiving condition is not good. Move the antenna to the place where the condition is good.
- Check that you subscribed to the desired satellite radio service (see page 63).

Control for HDMI

The Control for HDMI function does not work.

- Check the HDMI connection (page 31).
- Make sure “Control for HDMI” is set to “ON” in HDMI settings menu.
- Make sure the connected component is compatible with the Control for HDMI function.
- Check the Control for HDMI settings on the connected component. See the operating instructions of the connected component.
- If you change the HDMI connection, connect/disconnect the AC power cord, or there is a power failure, repeat the procedures of “Preparing for the “BRAVIA” Sync” (page 89).

No sound is output from the receiver and TV speaker while using the System Audio Control function.

- Make sure the TV is compatible with the System Audio Control function.
- If the TV does not have System Audio Control function, set the “Audio Out” settings in HDMI settings menu to
 - “TV+AMP” if you want to listen to the sound from the TV speaker and receiver.
 - “AMP” if you want to listen to the sound from the receiver.
- You cannot listen to the sound of a component connected to the receiver while a TV is selected as the input on the receiver.
 - Change the input of the receiver to HDMI when you want to watch a program on a component connected to the receiver.
 - Change the TV channel when you want to watch a TV broadcast.
 - Select the component or input you want to watch when you watch a program on the component connected to the TV. Refer to the operating instructions of the TV on this operation.

continued

- When using the Control for HDMI function, you cannot control the connected component using TV's remote.
 - Depending on the connected component and TV, you may need to set up the component and TV. Refer to the operation instructions supplied with each component and TV.
 - Change the input of the receiver to the HDMI input connected to the component.

Remote commander

The remote does not function.

- Point the remote at the remote sensor on the receiver.
- Remove any obstacles in the path between the remote and the receiver.
- Replace all the batteries in the remote with new ones, if they are weak.
- Make sure that the command modes of the receiver and the remote are the same. If the command mode of the receiver and the remote are different, you cannot operate the receiver with the remote (page 99).
- Make sure you select the correct input on the remote.
- When you operate a programmed non-Sony component, the remote may not function properly depending on the model and the maker of the component.

Error messages

If there is a malfunction, the display shows a code of two numbers and a message. You can check the condition of the system by the message. Refer to the following table to solve the problem. If any problem persists, consult your nearest Sony dealer.

PROTECTOR

Irregular current is output to the speakers, or the upper panel of the receiver is covered with something. The receiver will automatically turn off after a few seconds.

Check the connection of speakers and turn on the power again.

For other messages, refer to “Message list after auto calibration measurement” (page 49), “XM Radio message list” (page 71), “SIRIUS Satellite Radio message list” (page 71) and “DIGITAL MEDIA PORT message list” (page 58).

Reference sections for clearing the memory

To clear	See
All memorized settings	page 40

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8 ohm loads, both channels driven, from 20 – 20,000 Hz; rated 120 watts per channel minimum RMS power, with no more than 0.09% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

POWER OUTPUT

- Rated Power Output at Stereo Mode^{1) 2)}
(8 ohms 20 Hz – 20 kHz,
THD 0.09%):
120 W + 120 W
- Reference Power Output at Stereo Mode
(4 ohms 20 Hz – 20 kHz,
THD 0.15%):
120 W + 120 W
- Reference Power Output
(8 ohms 1 kHz, THD 0.7%)
FRONT²⁾:
130 W + 130 W
CENTER²⁾: 130 W
SURROUND²⁾:
130 W + 130 W
SURROUND BACK²⁾:
130 W + 130 W
- Reference Power Output
(4 ohms 1 kHz, THD 0.7%)
FRONT²⁾:
120 W + 120 W
CENTER²⁾: 120 W
SURROUND²⁾:
120 W + 120 W
SURROUND BACK²⁾:
120 W + 120 W

¹⁾ Depending on the sound field settings and the source, there may be no sound output.

²⁾ Measured under the following conditions:
Power requirements: 120 V AC, 60 Hz

Frequency response

PHONO	RIAA equalization curve ± 0.5 dB
MULTI CHANNEL INPUT, SA-CD/CD, TAPE, MD, TV, VIDEO 1/2, BD, DVD, SAT	10 Hz – 100 kHz ± 3 dB

Inputs (Analog)

PHONO	Sensitivity: 2.5 mV Impedance: 50 kohms S/N: 90 dB (A, 20 kHz LPF)
MULTI CHANNEL INPUT, SA-CD/CD, TAPE, MD, TV, VIDEO 1/2, BD, DVD, SAT	Sensitivity: 150 mV Impedance: 50 kohms S/N: 100 dB (A, 20 kHz LPF)

Inputs (Digital)

BD, DVD, SA-CD/CD (Coaxial)	Impedance: 75 ohms S/N: 96 dB (A, 20 kHz LPF)
VIDEO 1, TV, SAT, TAPE, MD (Optical)	S/N: 96 dB (A, 20 kHz LPF)

Outputs

TAPE (REC OUT), MD (REC OUT), VIDEO 1, ZONE 2, ZONE 3 (AUDIO OUT)	Voltage: 150 mV Impedance: 1 kohm
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R, SUBWOOFER	Voltage: 2 V Impedance: 1 kohm

FM tuner section

Tuning range	87.5 – 108.0 MHz
Antenna (aerial)	FM wire antenna (aerial)
Antenna (aerial) terminals	75 ohms, unbalanced

AM tuner section

Tuning scale	10 kHz step	9 kHz step
Tuning range	530 – 1,710 kHz	531 – 1,710 kHz

Intermediate frequency

450 kHz

Antenna (aerial)

Loop antenna (aerial)

Video section

Inputs/Outputs

Video: 1 Vp-p, 75 ohms

COMPONENT VIDEO:

Y: 1 Vp-p, 75 ohms

P_B/C_B: 0.7 Vp-p, 75 ohms

P_R/C_R: 0.7 Vp-p, 75 ohms

80 MHz HD Pass Through

HDMI Video

Input/Output (HDMI Repeater block)

640 × 480p@60 Hz

720 × 480p@59.94/60 Hz

1280 × 720p@59.94/60 Hz

1920 × 1080i@59.94/60 Hz

1920 × 1080p@59.94/60 Hz

720 × 576p@50 Hz

1280 × 720p@50 Hz

1920 × 1080i@50 Hz

1920 × 1080p@50 Hz

1920 × 1080p@24 Hz

General

Power requirements 120 V AC, 60 Hz

Power output (DIGITAL MEDIA PORT)

DC OUT:5 V, 700 mA

Power consumption 480 W/580 VA (U.S.A./

Canada)

Power consumption (during standby mode)

0.9 W (when “Control for HDMI” and “RS-232C Control” are set to “OFF”)

Dimensions

430 × 175 × 430 mm
(17 × 6 7/8 × 17 inches)
(width/height/depth)
including projecting parts
and controls

Mass (Approx.)

16.0 kg (35 lb 5 oz)

Supplied accessories

Operating Instructions (this manual)

Quick Setup Guide (1)

GUI Menu List (1)

Optimizer microphone ECM-AC2 (1)

FM wire antenna (aerial) (1)

AM loop antenna (aerial) (1)

AC power cord (mains lead) (1)

Main remote commander (1)

Sub remote commander (1)

R6 (size-AA) batteries (4)

Design and specifications are subject to change without notice.



- Standby power consumption 0.9 W.
- Halogenated flame retardants are not used in the printed wiring boards.

Index

Symbols

⌚ SIGNAL GND terminal 29

Numerics

2 channel 73
2ch Analog Direct 73
2ch Stereo Mode 73
4 Ω 43
5.1 channel 19
7.1 channel 19
8 Ω 43

A

A.F.D. (mode) 74
A/V Sync 54, 112, 120
AC power cord 40
AM 60
Antenna Aiming 66
Audio 112
AUDIO OUT 121
Audio Out 115
Auto Calibration 44, 103, 118
Auto Tuning 60

B

Bass 7, 110, 120
BI-AMP 105, 119
Bi-amplifier connection 100
Blu-ray Disc Player 32, 34, 53

C

Calibration Type Select 48, 118
Category Mode 67
CD player 26, 29
Center Mix 105, 119
Changing the display 121
Cinema Studio EX (mode) 79
Clear
 memory 40
 remote 131
Connections
 antennas 39
 audio components 25

monitor 23
speakers 21
video components 30
Control for HDMI 115
Crossover Freq 107, 119

D

D. Range Comp (Dynamic range compressor)
 108, 118
DCAC (Digital Cinema Auto Calibration) 44
DCS 79
Decode Priority 113, 120
DIGITAL MEDIA PORT 13, 18, 26, 55
Direct Tuning 61, 67
Display 9
Distance Unit 109, 119
DMPort Control 58
Dolby Digital EX 81
DTS Neo:6 (Cinema, Music) 75
Dual Mono 112, 120
DVD player 32, 34
DVD recorder 36

E

Effect Level 109, 120
EQ 110

F

FM 60
FM Mode 60, 120

G

GUI (Graphical User Interface) 23, 41

H

HDMI 115
HDMI IN button 7, 40
HDMI jacks 13, 31

I

Input 53
Input Assign 54, 93

INPUT MODE 93

iPod 57, 58

L

L.F.E. (Low Frequency Effect) 11

LARGE 106

Level 110

List Mode 57

Lock Code 70, 120

M

MASTER VOLUME 8

Menu 41, 51, 102

Messages

Auto Calibration 49

DIGITAL MEDIA PORT 58

Error 140

SIRIUS 71

XM 71

Movie 79

Multi Zone 83, 111

Music 55, 77

Muting 54

N

Name Input 54, 62, 104

Network Client 57

Neural-THX 75

NIGHT MODE 96

O

Option menu 52

P

Parental Lock 69, 120

Phase Audio 108, 118

Phase Noise 107, 118

PHONES 7

PIP (Picture in Picture) 17, 18

PLII 75

PLIIX 75

Position (Auto Calibration) 103, 118

Preset channels 68

Preset Mode 69

Preset stations 62

PROTECTOR 140

Q

Quick Setup 46

R

Radio ID 66

Recording 97, 98

Remote 15–18, 41, 122–131

Repeat 57

Resetting 40

Resolution 113, 120

RS-232C Control 116, 121

S

Satellite radio 63

Screen Saver 116

Setting menu 102

Settings 102

Shuffle 57

SIRIUS 63

SIRIUS Satellite Radio 64

Sleep timer 96

SMALL 106

Sound Field 54

Speaker 105

Speaker Impedance 42, 119

Speaker Pattern 105, 119

SPEAKERS (OFF/A/B/A+B) 7, 44

Subwoofer Level 115, 121

Super Audio CD player 26, 28, 29

Sur Settings 120

Surround 75, 109

System 116

T

Test Tone 107, 118

TONE 7

TONE MODE 7, 40

Treble 7, 110, 120

Tuner 60

Tuning 60, 61, 62, 67

U

Up converting 37

V

VCR 36

Video 113
VIDEO 2 IN/PORTABLE AV IN jacks 37

X

XM 63
XM Radio 63

Z

Zone 12V Trigger 111, 121
ZONE 2 105



Additional Information



* 3 8 7 5 8 0 7 1 2 * (1)


STR-DA4400ES

Quick Setup Guide Guide d'installation rapide



© 2008 Sony Corporation Printed in Malaysia

1: Installing speakers/ 1: Installation des enceintes

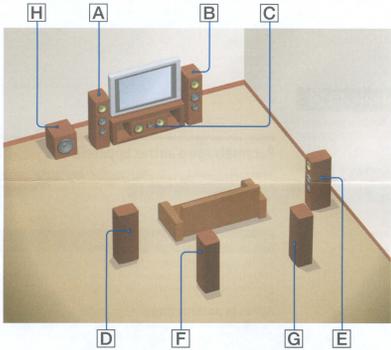

English

This Quick Setup Guide describes how to connect a Super Audio CD/CD player, DVD player, Blu-ray Disc Player, speakers, and a subwoofer so that you can enjoy multi-channel surround sound. Refer to the operating instructions supplied with the receiver for details.

1: Installing speakers

The illustrations above show an example of a 7.1 channel speaker system (seven speakers and one subwoofer) configuration. Refer to the operating instructions supplied with the receiver and the other side of this guide.

The illustrations in the guide designate speakers as [A] through [H].

- [A] Front left speaker [E] Surround right speaker
- [B] Front right speaker [F] Surround back left speaker*
- [C] Center speaker [G] Surround back right speaker*
- [D] Surround left speaker [H] Subwoofer

* The surround back speakers (left/right) are compliant with the zone 2 operation. Refer to the operating instructions supplied with the receiver.







2: Connecting the speakers

Connect the speakers according to the number and kind of your speakers.

About speaker cords

- * Use speaker cords, which are appropriate for the width of the room.
- * By deciding on the color or mark of the speaker cord to be connected to the plus (+) or minus (-) connector, you can always be sure of connecting the cord correctly without mistaking plus or minus.

2: Connecting the speakers/ 2: Raccordement des enceintes

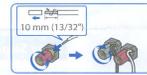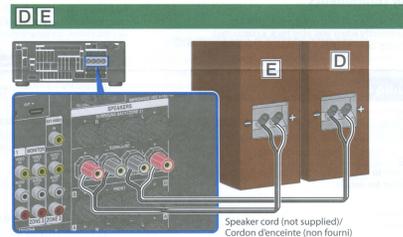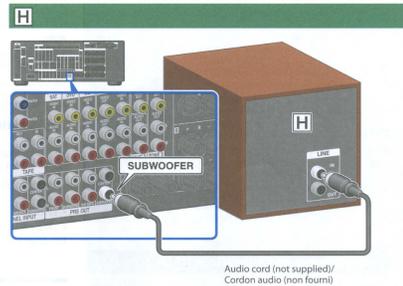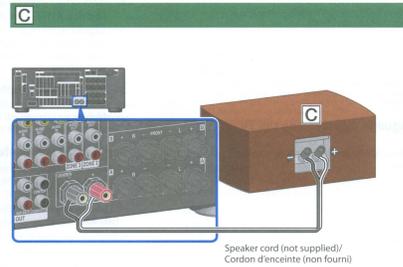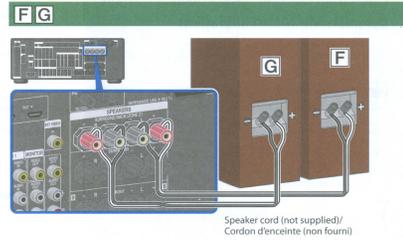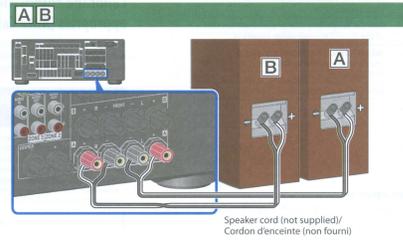

About speaker terminals

- Connect the ⊕ terminals to the ⊕ terminals of the receiver and connect the ⊖ terminals to the ⊖ terminals of the receiver.
- Refer to the illustration or the operating instructions supplied with the receiver for details of connecting speaker cords.
- Turn the locking knob until the speaker cord is connected securely.

About the SPEAKERS (OFF/A/B/A+B) switch

You can select the front speaker system. Refer to "8: Setting the speakers" in the operating instructions supplied with the receiver for details.

3: Connecting other components

This is an example of how to connect this receiver and your components. Refer to step 4 of "Getting Started" of the operating instructions supplied with this receiver for details on other connections and other components. This receiver is equipped with function for converting video signals. Refer to "4b: Connecting the video components" in the operating instructions supplied with the receiver.

4: Connect all power cords last

Connect the supplied AC power cord (mains lead) to the AC IN terminal on the receiver, then connect the AC power cord (mains lead) to a wall outlet.

Français

Ce guide d'installation rapide explique comment raccorder un lecteur Super Audio CD/CD, un lecteur DVD, un lecteur Blu-ray Disc, des enceintes et un subwoofer afin que vous puissiez profiter du son surround multicanal. Consultez le mode d'emploi fourni avec l'ampli-tuner pour plus d'informations.

1: Installation des enceintes

Les illustrations ci-dessus représentent un exemple de configuration de système d'enceintes 7.1 canaux (sept enceintes et un subwoofer). Consultez le mode d'emploi fourni avec l'ampli-tuner et reportez-vous à l'autre face de ce guide.

Les illustrations dans ce guide désignent les enceintes par [A] à [H].

- [A] Enceinte avant gauche [E] Enceinte surround droite
- [B] Enceinte avant droite [F] Enceinte surround arrière gauche*
- [C] Enceinte centrale [G] Enceinte surround arrière droite*
- [D] Enceinte surround gauche [H] Subwoofer

* Les enceintes surround arrière (gauche/droite) sont compatibles avec une opération de zone 2. Consultez le mode d'emploi fourni avec l'ampli-tuner.


2: Raccordement des enceintes

Raccordez les enceintes en fonction du nombre et type de vos enceintes.


Cordons d'enceinte

- * Utilisez des cordons d'enceinte qui sont adéquats pour la largeur de la pièce.
- * En vous basant sur la couleur ou la marque du cordon d'enceinte à raccorder au connecteur plus (+) ou moins (-), vous êtes sûr de toujours brancher correctement le cordon sans inverser le plus et le moins.

3: Connecting other components/ 3: Raccordement d'autres appareils

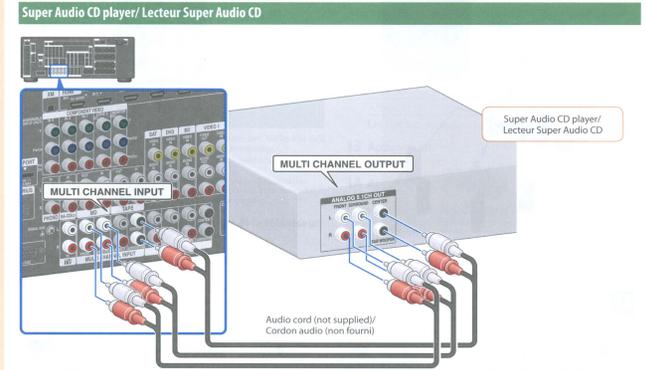

Video components/ Appareils vidéo

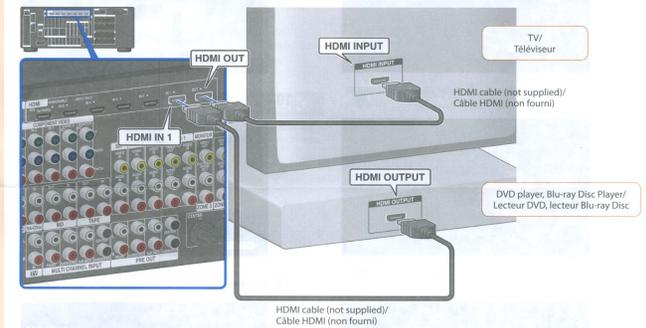

Bornes d'enceintes

- Raccordez les bornes ⊕ aux bornes ⊕ de l'ampli-tuner et les bornes ⊖ aux bornes ⊖ de l'ampli-tuner.
- Pour plus d'informations sur le raccordement des cordons d'enceinte, consultez l'illustration ou le mode d'emploi fourni avec l'ampli-tuner.
- Tournez le bouton de verrouillage jusqu'à ce que le cordon d'enceinte soit solidement connecté.

Commutateur SPEAKERS (OFF/A/B/A+B)

Vous pouvez sélectionner les enceintes avant. Consultez « 8 : Réglage des enceintes » dans le mode d'emploi fourni avec l'ampli-tuner pour plus d'informations.


3: Raccordement d'autres appareils

Ce guide donne un exemple de raccordement de cet ampli-tuner et de vos appareils. Reportez-vous à l'étape 4 de « Mise en service » du mode d'emploi fourni avec cet ampli-tuner pour plus d'informations sur d'autres raccordements et d'autres appareils. Cet ampli-tuner est équipé d'une fonction de conversion des signaux vidéo. Reportez-vous à « 4b: Raccordement des appareils vidéo » dans le mode d'emploi fourni avec l'ampli-tuner.


4: Raccordez tous les cordons d'alimentation en dernier lieu

Branchez le cordon d'alimentation secteur fourni à la borne AC IN de l'ampli-tuner, puis branchez-le à une prise électrique murale.

A

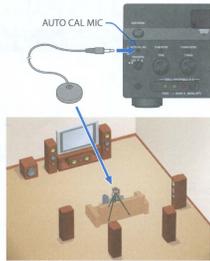

B

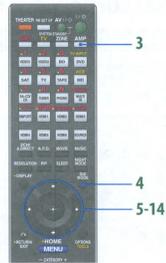

C

4 GUI MODE



5 ↑/↓, (+) / →



6 ↑/↓, (+) / →




7 ↑/↓, (+)



8 ↑/↓, (+) / →




9 (+)

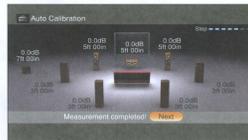

10 (+)



11 ←/→, (+)

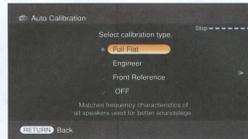

13 →



English

Calibrating the appropriate speaker settings automatically (Auto Calibration)

You can set up the speakers to obtain the desired sound from all connected speakers automatically by using the auto calibration function.

Before you perform the auto calibration A

- During the calibration, the sound that comes out of the speakers is very loud. Pay attention to the presence of children or to the effect on your neighborhood.
- Perform the measurement in a quiet environment to avoid the effect of noise and get a more accurate measurement.
- If there are any obstacles in the path between the optimizer microphone and the speakers, the calibration cannot be performed correctly. Remove any obstacle from the measurement area to avoid measurement error.

1 Install and connect the speakers and TV.

For detail, see front page.

2 Connect the supplied optimizer microphone to the AUTO CAL MIC jack.

The AUTO CAL MIC jack is used for the supplied optimizer microphone only. Do not connect other microphones. Doing so may damage the receiver and the microphone.

3 Set up the optimizer microphone.

Place the optimizer microphone at your seating position. Use a stool or tripod so that the optimizer microphone remains at the same height as your ears.

On setting up the active subwoofer

- When a subwoofer is connected, turn on the subwoofer and turn up the volume beforehand. Turn the MASTER VOLUME knob to just before the mid-point.
- If you connect a subwoofer with the crossover frequency function, set the value to maximum.
- If you connect a subwoofer with an auto standby function, set it to off (deactivated).

Performing auto calibration B C

The auto calibration function allows you to measure the following speaker connections, polarity of speakers, speaker distance, speaker size, speaker level, frequency characteristics.

1 Connect a TV monitor to this receiver.

Refer to "3: Connecting the monitor" in the operating instructions.

2 Turn on the receiver and the TV.

Switch the input of the TV so that an image of the menu is displayed.

3 Press AMP.

The receiver can be operated using the remote.

4 Press GUI MODE.

After "GUI MODE ON" has appeared in the display window of the receiver, "GUI MODE" appears.



The menu is displayed on the TV screen.

5 Press ↑/↓ repeatedly to select "Settings," then press (+) or →.

The Settings menu list appears on the TV screen.

6 Press ↑/↓ repeatedly to select "Auto Calibration," then press (+) or →.

The screen on which you can select the item to be measured appears.

7 Press ↑/↓ repeatedly to select "Quick Setup," then press (+).

The confirmation screen, asking whether you are ready to start measurement, appears.

8 Press (+) to select "Start."

The measurement starts in five seconds. When the measurement ends, a beep sounds and the measurement result appears on the TV screen.

9 Press (+) to select "Next."

The selecting screen of the calibration type appears.

11 Press ←/→ repeatedly to select "Yes," then press (+).

The selecting screen of the calibration type appears.

12 Press ↑/↓ repeatedly to select the auto calibration type, then press (+).

Parameter	Explanation
Full Flat	Makes the measurement of frequency from each speaker flat.
Engineer	Sets the frequency to one that matches that of the Sony listening room standard.
Front Reference	Adjusts the characteristics of all the speakers to match the characteristics of the front speaker.
OFF	Sets the auto calibration EQ to off. The measurement results are saved.

13 Press →.

The exit screen appears.

14 Press (+).

When error codes appear

When "Save auto calibration (auto speaker setup)?" appears on the TV screen in step 10, you can select whether to confirm the warning ("Yes") or not ("No"). Follow the instructions of the TV screen when you select "Yes." For details on warning and error codes, see "Message list after auto calibration measurement" in "9: Calibrating the appropriate speaker settings automatically (Auto Calibration)" in the operating instructions.

Tip

The size of a speaker (LARGE/SMALL) is determined by the low characteristics. The measurement results may vary, depending on the position of the optimizer microphone and speakers, and the shape of the room. It is recommended that you follow the measurement results. However, you can change those settings in the Speaker settings menu. Save the measurement results first, then try to change the settings if you want.

To select the language displayed on the TV screen

You can select the language to be used for messages on the TV screen from 4 languages.

- English
- Español
- Français
- Deutsch

For details, see "2: System settings" in the operation instructions.

Setting up other components

You should set up each component so that take out sound is output from speakers correctly when you play back a connected component. The following case describes Sony components. Refer to the operating instructions supplied with each component.

Sony Super Audio CD player

Select a suitable playback area (multi-channel or 2 channel). Sound may come out from only the front speaker left/right when 2 channel is selected.

After the setting

The receiver is now ready to use. Refer to the operating instruction supplied with the receiver for details.

Français

Calibrage automatique aux réglages appropriés (Auto Calibration)

Vous pouvez régler les enceintes pour obtenir automatiquement le son souhaité depuis toutes les enceintes raccordées à l'aide de la fonction de calibrage automatique.

Avant de commencer le calibrage automatique A

- Pendant le calibrage, le son émis par les enceintes est très fort. Veillez à ce qu'il n'y ait pas d'enfants à proximité et à ne pas perturber le voisinage.
- Effectuez la mesure dans un environnement silencieux pour éviter l'effet de bruit et obtenir une mesure plus précise.
- S'il y a des obstacles dans la trajectoire entre le microphone d'optimisation et les enceintes, le calibrage ne s'effectuera pas correctement. Pour éviter des erreurs de mesure, enlevez tout obstacle de la zone de mesure.

1 Installez et raccordez les enceintes et le téléviseur.

Pour plus d'informations, voir la couverture.

2 Raccordez le microphone d'optimisation fourni à la prise AUTO CAL MIC.

La prise AUTO CAL MIC ne doit être utilisée que pour le microphone d'optimisation fourni. Ne raccordez pas un autre microphone. Ceci pourrait endommager l'ampli-tuner et le microphone.

3 Installez le microphone d'optimisation.

Placez le microphone d'optimisation à votre position d'écoute. Utilisez un tabouret ou un trépied pour que le microphone d'optimisation soit à la même hauteur que vos oreilles.

Réglage du subwoofer amplifié

- Si un subwoofer est raccordé, allumez-le et augmentez le volume au préalable. Tournez le bouton MASTER VOLUME jusqu'à un peu avant le point central.
- Si le subwoofer est doté d'une fonction de sélection de la fréquence de recouvrement, choisissez la valeur maximale.
- Si le subwoofer est doté d'une fonction de mise en veille automatique, désactivez cette fonction.

Exécution du calibrage automatique B C

La fonction de calibrage automatique vous permet de déterminer ce qui suit : la connexion, la polarité, la distance, la taille, le niveau des enceintes, les caractéristiques de la fréquence.

1 Raccordez un écran de téléviseur à cet ampli-tuner.

Consultez « 3 : Raccordement de l'écran » dans le mode d'emploi.

2 Allumez l'ampli-tuner et le téléviseur.

Sélectionnez la source d'entrée du téléviseur de façon que l'image du menu soit affichée.

3 Appuyez sur AMP.

Vous pouvez commander l'ampli-tuner à l'aide de la télécommande.

4 Appuyez sur GUI MODE.

Lorsque « GUI MODE ON » apparaît sur l'afficheur de l'ampli-tuner, « GUI MODE » apparaît.



Le menu s'affiche sur l'écran du téléviseur.

5 Appuyez plusieurs fois sur ↑/↓ pour sélectionner « Settings », puis appuyez sur (+) ou →.

La liste du menu Settings s'affiche sur l'écran du téléviseur.

6 Appuyez plusieurs fois sur ↑/↓ pour sélectionner « Auto Calibration », puis appuyez sur (+) ou →.

The screen on which you can select the item to be measured appears.

7 Appuyez plusieurs fois sur ↑/↓ pour sélectionner « Quick Setup », puis appuyez sur (+).

L'écran sur lequel vous pouvez sélectionner l'option à mesurer apparaît.

8 Appuyez plusieurs fois sur ↑/↓ et sur (+) pour décocher les options que vous ne voulez pas mesurer, puis appuyez sur →.

L'écran de confirmation, vous demandant si vous êtes prêt à commencer la mesure, apparaît.

9 Appuyez sur (+) pour sélectionner « Start ».

La mesure commence dans les cinq secondes. Lorsque la mesure se termine, un bip retentit et le résultat de mesure s'affiche sur l'écran du téléviseur.

10 Appuyez sur (+) pour sélectionner « Next ».

The selecting screen of the calibration type appears.

11 Appuyez plusieurs fois sur ←/→ pour sélectionner « Yes » puis appuyez sur (+).

L'écran de sélection du type de calibrage s'affiche.

12 Appuyez plusieurs fois sur ↑/↓ pour sélectionner le type de calibrage automatique, puis appuyez sur (+).

Paramètre	Explication
Full Flat	Rend la mesure de fréquence de chaque enceinte plane.
Engineer	Sélectionne des caractéristiques de fréquence correspondant aux normes d'un auditoir Sony.
Front Reference	Règle les caractéristiques de toutes les enceintes sur celles des enceintes avant.
OFF	Désactive l'EQ de calibrage automatique. Les résultats de mesure sont sauvegardés.

13 Appuyez sur →.

L'écran de fin s'affiche.

14 Appuyez sur (+).

Lorsque des codes d'erreur s'affichent

Lorsque « Save auto calibration (auto speaker setup) ? » s'affiche sur l'écran du téléviseur à l'étape 10, vous pouvez choisir de confirmer (« Yes ») ou non (« No ») l'avertissement. Suivez les instructions affichées sur l'écran du téléviseur lorsque vous sélectionnez « Yes ». Pour plus de détails sur les codes d'avertissement et d'erreur, voir « Liste des messages après une mesure de calibrage automatique » de « 9 : Calibrage automatique aux réglages appropriés (Auto Calibration) » dans le mode d'emploi.

Conseil

La taille d'une enceinte (LARGE/SMALL) est déterminée par les caractéristiques basses. Les résultats de mesure peuvent différer selon la position du microphone d'optimisation et des enceintes et en fonction de la forme de la pièce. Il est recommandé de suivre les résultats de mesure. Vous pouvez toutefois changer ces paramètres dans le menu de paramétrage des enceintes. Sauvegardez les résultats de mesure avant de changer éventuellement les réglages.

Pour sélectionner la langue affichée sur l'écran du téléviseur

Vous pouvez sélectionner la langue à utiliser pour les messages sur l'écran du téléviseur parmi 4 langues.

- English
- Español
- Français
- Deutsch

Pour plus de détails, voir « 2 : Paramètres System » dans le mode d'emploi.

Paramétrage d'autres appareils

Vous devez paramétrer chaque appareil de sorte que le son soit sorti correctement des enceintes lorsque vous utilisez un appareil raccordé. Le cas suivant décrit des appareils Sony. Reportez-vous au mode d'emploi fourni avec chaque appareil.

Lecteur Super Audio CD Sony

Sélectionnez une plage de lecture adéquate (multicanaux ou 2 canaux). Il est possible que le son ne sorte que de l'enceinte avant gauche/droit lorsque 2 canaux est sélectionné.


Après le paramétrage

L'ampli-tuner est maintenant prêt à l'usage. Reportez-vous au mode d'emploi fourni avec l'ampli-tuner pour plus d'informations.

STR-DA4400ES



GUI Menu List / Liste des menus de la GUI

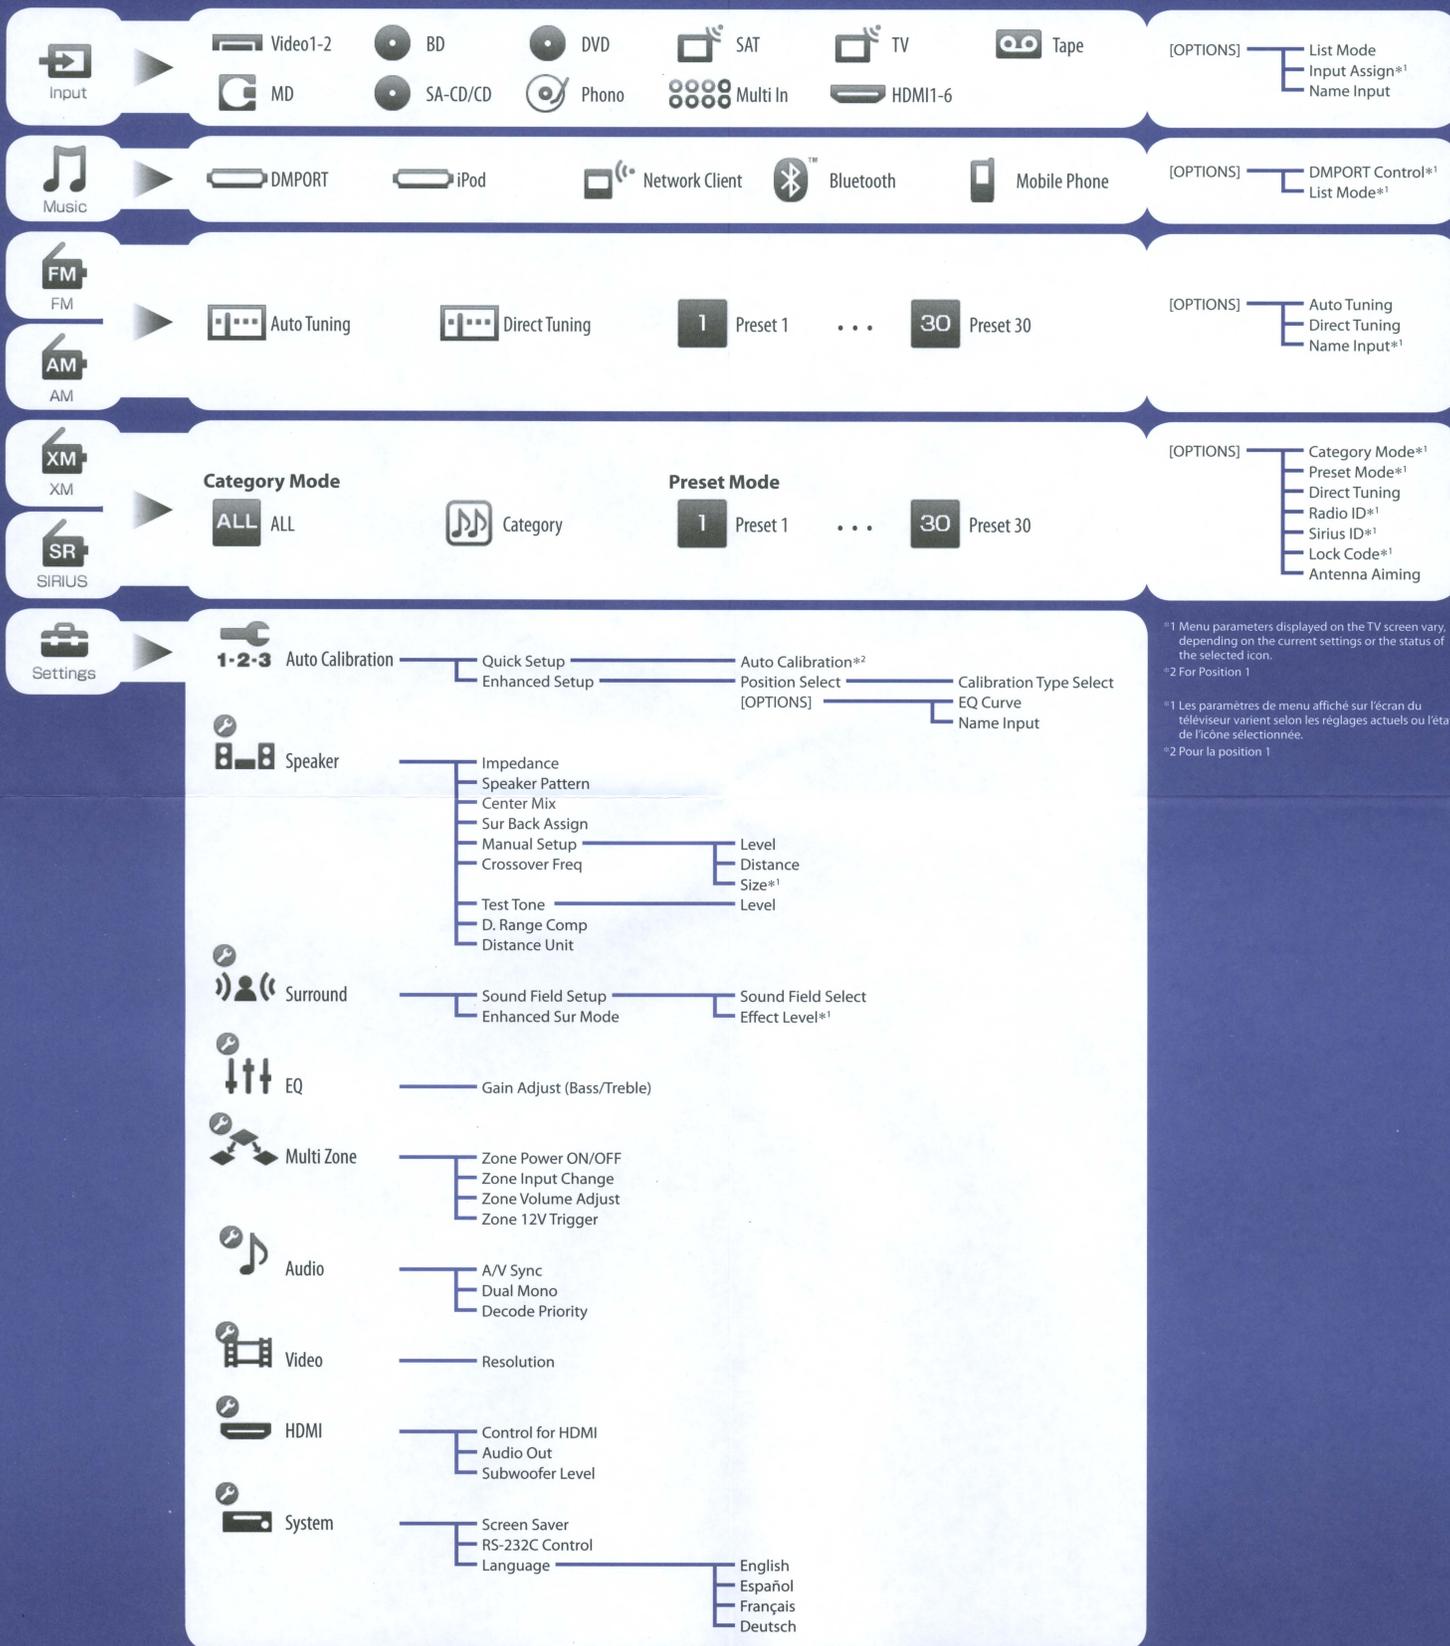


*1 Menu parameters displayed on the TV screen vary, depending on the current settings or the status of the selected icon.

*2 For Position 1

*1 Les paramètres de menu affichés sur l'écran du téléviseur varient selon les réglages actuels ou l'état de l'icône sélectionnée.

*2 Pour la position 1

Correct/Correct/Correcto/Richtig/Juist/Rätt

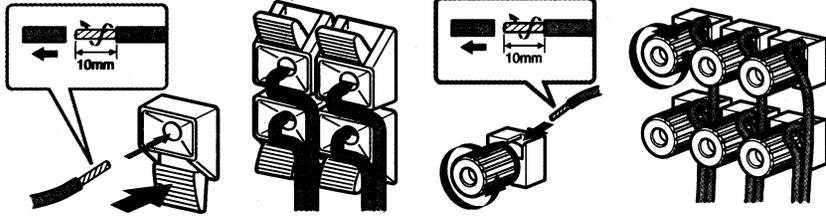


Remove about 10 mm (3/16 in.) of insulation from the end of each cord, and then twist the exposed wires together.

Insert the stripped ends of the cords into the terminals, taking care to prevent mutual contact between the ends.

Make sure the cords are firmly connected to the speaker and receiver (or amplifier) terminals.

Incorrect/Incorrect/Incorrecto/Falsch/Onjuist/Fel

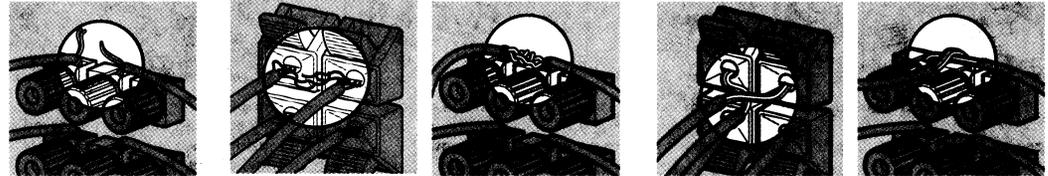

Stripped cords are not fully attached and are touching the rear panel of the receiver (or amplifier).

Stripped speaker cord touching another speaker terminal.

Stripped ends of speaker cords in contact with each other due to excessive removal of insulation.

CAUTION

If the speaker cords are not properly connected, the receiver (or amplifier) may be fatally damaged. To avoid the possibility of damage, follow the instructions below. Also refer to the illustration.

- Do not hook up the speaker cords while the receiver (or amplifier) power is on.**
Be sure to turn off the power first. After turning off the power, it is recommended that you disconnect the power cord for greater safety.
- Do not allow the stripped end of a speaker cord to come into contact with any part of the rear panel or the adjacent speaker terminal.**
Before inserting a stripped speaker cord into a speaker terminal, twist the wires tightly together to prevent contact between any single strand from the cord and the rear panel or the adjacent speaker terminal on the receiver (or amplifier).

ATTENTION

Si les cordons d'enceintes ne sont pas raccordés correctement, l'ampli-tuner (ou l'amplificateur) risque d'être endommagé de façon irréversible.

Suivez les instructions ci-dessous pour éviter d'endommager l'appareil. Reportez-vous également à l'illustration.

- Ne raccordez pas les cordons d'enceintes lorsque l'ampli-tuner (ou l'amplificateur) est sous tension.**
Veuillez à d'abord couper l'alimentation. Après avoir mis l'appareil hors tension, nous vous recommandons de débrancher le cordon d'alimentation pour une meilleure sécurité.
- Ne laissez pas l'extrémité dénudée d'un cordon d'enceinte entrer en contact avec une partie quelconque du panneau arrière ou les bornes d'enceintes voisines.**
Avant d'insérer un cordon d'enceinte dénudé dans une borne de l'enceinte, torsadez bien les fils ensemble afin d'éviter tout contact entre un fil du cordon et le panneau arrière ou les bornes voisines de l'ampli-tuner (ou de l'amplificateur).

PRECAUCIÓN

Si los cables de altavoz no se conectan debidamente, el receptor (o amplificador) puede sufrir daños irreversibles. Para evitar que esto ocurra, siga las instrucciones que se indican a continuación. Asimismo, consulte la ilustración.

- No conecte los cables de altavoz con el receptor (o amplificador) encendido.**
Asegúrese de apagar la unidad primero. Una vez apagada, se recomienda desconectar el cable de alimentación para mayor seguridad.
- No permita que los extremos desprotegidos de los cables de altavoz entren en contacto con ningún componente del panel posterior ni con el terminal de altavoz situado junto a los mismos.**
Antes de insertar el cable de altavoz desprotegido en el terminal de altavoz, junte y retuerza firmemente los hilos desprotegidos para evitar el posible contacto de un hilo con el panel posterior o el terminal de altavoz del receptor (o amplificador).

VORSICHT

Wenn die Lautsprecherkabel nicht richtig angeschlossen sind, kann der Receiver (oder Verstärker) irreparabel beschädigt werden.

Um mögliche Schäden zu vermeiden, befolgen Sie bitte die Anweisungen unten. Beachten Sie bitte auch die Abbildung.

- Schließen Sie die Lautsprecherkabel nicht an, solange der Receiver (oder Verstärker) eingeschaltet ist.**
Schalten Sie das Gerät zunächst unbedingt aus. Aus Sicherheitsgründen empfiehlt es sich, nach dem Ausschalten das Netzkabel aus der Netzsteckdose zu ziehen.
- Das abisolierte Ende eines Lautsprecherkabels darf nicht mit irgendeinem Teil der hinteren Abdeckung oder des benachbarten Lautsprecheranschlusses in Berührung kommen.**
Bevor Sie ein abisoliertes Lautsprecherkabel in einen Lautsprecheranschluss stecken, verdrehen Sie die Adern fest, damit keine einzelne Kabelader absteht und mit der hinteren Abdeckung oder dem benachbarten Lautsprecheranschluss am Receiver (oder Verstärker) in Berührung kommen kann.

LET OP

Als de luidsprekersnoeren niet goed zijn aangesloten, kan de receiver (of versterker) onherstelbaar worden beschadigd. Volg de onderstaande instructies om eventuele beschadiging te voorkomen. Zie ook de afbeelding.

- Sluit de luidsprekersnoeren niet aan als de receiver (of versterker) is ingeschakeld.**
Schakel het apparaat eerst uit. Nadat u het apparaat hebt uitgeschakeld, kunt u voor de veiligheid het beste het netsnoer ook loskoppelen.
- Zorg dat het blootgelegde uiteinde van een luidsprekersnoer niet in contact komt met het achterpaneel of de luidsprekeraansluiting ernaast.**
Voordat u een blootgelegd luidsprekersnoer in een luidsprekeraansluiting plaatst, draait u de draden stevig om elkaar om contact te voorkomen tussen losse draden van het snoer en het achterpaneel of de luidsprekeraansluiting ernaast op de receiver (of versterker).

VARNING

Om högtalarkablarna inte ansluts korrekt finns det risk för att receivern (eller förstärkaren) skadas allvarligt. Nedanstående instruktioner hjälper dig att undvika risken för skador. Se även bilden.

- Anslut inte högtalarkablarna när strömmen till receivern (eller mottagaren) är påslagen.**
Se först till att strömmen är avslagen. Du kan ytterligare öka säkerheten genom att koppla bort nätkabeln när du har slagit av strömmen.
- En högtalarkabels oisolerade ände får inte komma i kontakt med någon del av den bakre panelen eller intilliggande högtalarterminal.**
Innan du för in en oisolerad kabelände i en högtalarterminal tvinnar du ihop de enskilda ledarna ordentligt, så att inte en lös tråd råkar i kontakt med den bakre panelen eller den intilliggande högtalarterminalen på receivern (eller mottagaren).



SONY®



Expand your home audio products in exciting new directions.

Accessories for Sony Home Theater Systems and Receivers with DIGITAL MEDIA PORT interface.



TDM-NW1¹
(Walkman® Cradle)
Enjoy digital music stored in Sony Walkman digital music players⁴. Cradle charges the battery.



TDM-BT1¹
(Bluetooth® Wireless Audio Adapter)
Enjoy digital music stored in cell-phones and digital music players with Bluetooth wireless technology.²



Register your new Sony home theater system or receiver online and save 15% on your purchase of select DIGITAL MEDIA PORT accessories at SonyStyle online store (www.sonystyle.com).⁵
To register your product today, please go to <http://productregistration.sony.com>



TDM-NC1¹
(Wireless Network Audio Adapter)
Enjoy digital music stored on your PC. Stream music through Wi-Fi network³. Remote control supplied.



TDM-iP1¹
(iPod® Cradle)
Enjoy digital music stored in iPod players⁴. Use the on-screen display feature to scroll through songs. Cradle charges the battery.



For additional information on home audio accessories, please visit www.sonystyle.com (US).

1. Walkman digital music player, iPod digital music player, cell-phone and PC not included. 2. Bluetooth v.2.0/A2DP. Requires Bluetooth enabled cell-phones and digital music players. Bluetooth transmitter not included. TDM-BT1 may not be compatible with some Bluetooth enabled devices. 3. Equipped with Ethernet port for wired connection. Wi-Fi router not included. Compatible with ATRAC, AAC and WMA digital music files. Not compatible with all digital music files. Not able to play back DRM protected files except songs purchased through Connect™ music download service. TDM-NC1 is not compatible with Mac® computers. Requires PC with Microsoft® Windows® XP SP2 operating system or newer. 4. TDM-NW1 is compatible only with select Sony Walkman players with WM-PORT connector. TDM-iP1 is compatible with iPod nano (2G/1G), iPod (5G/4G) and iPod mini. Please check for compatibility first. 5. Register online within 30 days of purchase and receive an electronic coupon good for a 15% discount on the purchase of select home audio accessories at SonyStyle online store. Sales tax and shipping apply. Offer valid until June 1, 2008. For more information including a list of eligible accessories and terms and conditions, please visit www.sonystyle.com/ha15. Design and specifications are subject to change without notice. © 2007 Sony Electronics Inc. All rights reserved. Sony, like.no.other, Walkman and Connect are trademarks of Sony. iPod and Mac are trademarks of Apple Inc., registered in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. All other trademarks are trademarks of their respective owners.

Printed in Malaysia
3-198-137-05

IMPORTANT SAFEGUARDS


For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance and in the operating instructions, and adhere to them.




INSTALLATION

Water and Moisture – Do not use powerline operated appliances near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

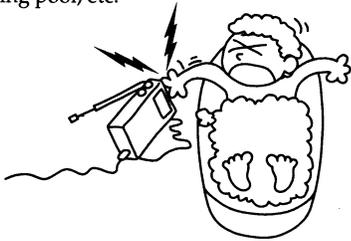


Heat – Do not place the appliance near or over a radiator or heat register, or where it is exposed to direct sunlight.

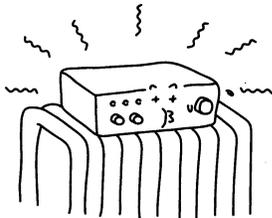


Ventilation – The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.


– Never cover the slots and openings with a cloth or other materials.

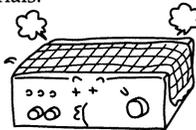


– Never block the slots and openings by placing the appliance on a bed, sofa, rug or other similar surface.

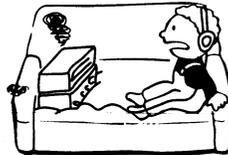

– Never place the appliance in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.

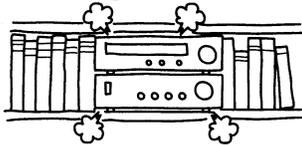

Accessories – Do not place the appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only a cart, stand, tripod, bracket, or table recommended by Sony.

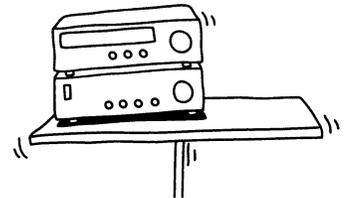


– An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Wall or Ceiling Mounting – If your appliance can be mounted to a wall or ceiling, mount it only as recommended by Sony.

USE

Power Source – This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those appliances designed to operate from battery power, or other sources, refer to the operating instructions.

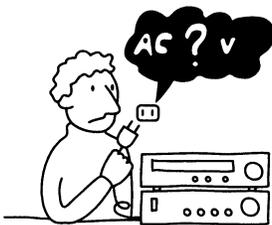

Grounding or Polarization – This appliance is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding). Follow the instructions below:

- For the appliance with a polarized AC power cord plug:

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.




- For the appliance with a three-wire grounding type AC plug:

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose, of the grounding plug.



Overloading – Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

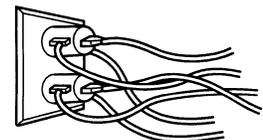


When not in use – Unplug the power cord of the appliance from the outlet when left unused for a long period of time.


To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.



Power-Cord Protection – Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

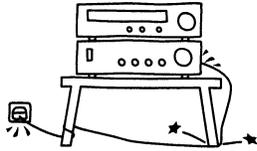


Attachments – Do not use attachments not recommended by Sony, as they may cause hazards.

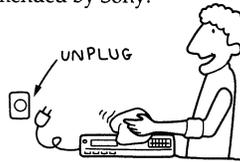

Lightning – For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and powerline surges.

Cleaning – Unplug the appliance from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the appliance. Clean the appliance only as recommended by Sony.

Object and Liquid Entry – Never push objects of any kind into the appliance through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.

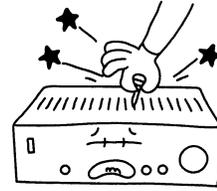

ANTENNAS


Outdoor Antenna Grounding – If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the National Electrical Code

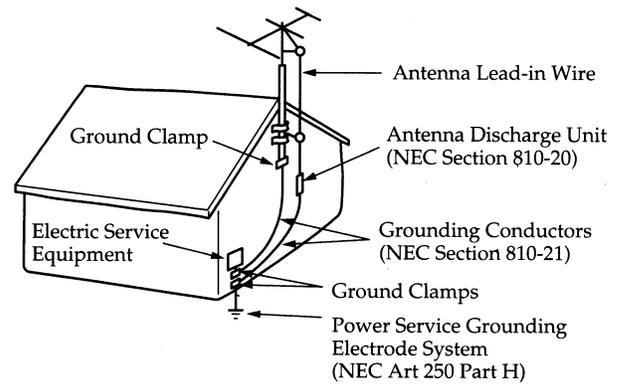

NEC - NATIONAL ELECTRICAL CODE


SERVICE

Damage Requiring Service – Unplug the appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:

– When the power cord or plug is damaged or frayed.



– If liquid has been spilled or objects have fallen into the appliance.

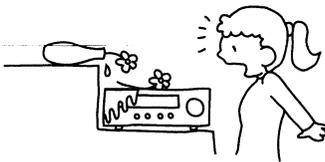

– If the appliance has been exposed to rain or water.




– The appliance does not appear to operate normally or exhibits a marked change in performance. – This indicates a need for service.



– If the appliance does not operate normally when following the operating instructions, adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.



– If the appliance has been subject to excessive shock by being dropped, or the cabinet has been damaged.

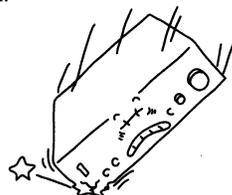

Servicing – Do not attempt to service the appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



Replacement parts – When replacement parts are required, be sure the service technician has used replacement parts specified by Sony that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check – Upon completion of any service or repairs to the appliance, ask the service technician to perform routine safety checks (as specified by Sony) to determine that the appliance is in safe operating condition.



Product Registration

SONY

Thank you for purchasing this Sony product. Proper registration will enable us to send you periodic mailings about new products and other important announcements. Registering your product will also allow us to contact you in the unlikely event that it will need adjustment or modification. Please take the time to register your new product at our website:

<http://www.sony.com/productregistration>

You will find the product serial number on the main unit and the carton box.

If you have any operational questions regarding your new purchase, please contact your retailer. For the location of a Sony dealer in your area, or for any other questions, please call 1-800-222-SONY(7669).

Thank you.

© Sony Electronics Inc.



3-089-014-02

Consumer 3 Year Warranty

SONY®

Sony of Canada Ltd. (hereinafter referred to as "Sony") hereby warrants, subject to the terms and conditions herein set forth, this product against defect in material and workmanship during the specified warranty period. In the event of a defect of material or workmanship during the specified warranty period, Sony will repair the same, effecting all necessary parts replacements with either new or refurbished parts, without charge for either parts or labour.

The warranty period is as follows:

1. Labour: THREE years from the date of original purchase at retail.
2. Parts: THREE years from the date of original purchase at retail.

Conditions

Unauthorized Repair, Abuse, Etc.:

The unit must not have been previously altered, modified, repaired or serviced by anyone other than the service facilities authorized by Sony to render such services. The serial number on the unit must not have been altered or removed. The unit must not have been subject to accident, misuse, abuse or operated contrary to the instructions contained in the Owner's Manual, or used for commercial purposes, or used as a rental unit at any time prior to or after original purchase at retail. Should this unit be used for commercial purposes, or rental, Sony's standard commercial warranty will apply. The opinion of Sony with respect to this matter shall be final.

Proper Delivery:

The unit must be shipped, freight prepaid, or delivered to one of the nearest Sony service facilities in Canada in either its original package or similar package affording an equal degree of protection, and with instructions indicating a location within Canada to which the unit must be returned. The repaired unit will be returned to customer freight prepaid. All accessories that are enclosed with the unit must be listed individually on the packing slip for the shipping documentation. Sony shall have no liability whatsoever for loss or damage to such accessories if they are not listed. Defective accessories should be returned to Sony as a separate repair item.

Proof of Date Purchase:

This limited warranty applies to the product from the original date of purchase at retail. Therefore, the owner must furnish proof of original purchase at retail.

Subject Products:

This limited warranty is applicable to Sony's Espirit products.

This limited warranty may be applicable to other Sony products, where the limited warranty is enclosed in the product's original packaging.

This limited warranty does not extend to broken or damaged cabinets, accessories, batteries, exposed antennas and styluses, or to parts wearing out due to normal wear and tear. This limited warranty does not cover regular product maintenance such as cleaning, lubrication or check-ups.

This warranty is valid only in Canada.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND WHETHER ARISING BY LAW, BY STATUTE, BY COURSE OF DEALING OR USAGE OF TRADE, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, MERCHANTABLE QUALITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. UNDER NO CIRCUMSTANCES SHALL SONY BE LIABLE FOR AN AMOUNT GREATER THAN THE ACTUAL PURCHASE PRICE OF THE UNIT OR FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUSTAINED IN CONNECTION WITH SAID UNIT AND SONY NEITHER ASSUMES NOR AUTHORIZES ANY REPRESENTATIVE OR OTHER PERSON TO ASSUME FOR IT ANY OBLIGATION OR LIABILITY OTHER THAN SUCH AS IS EXPRESSLY SET FORTH HEREIN. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES AND CONDITIONS.

Product Registration:

Thank you for choosing a Sony product. At Sony, we strive to create products of the highest quality to enhance your experience and enjoyment. To provide the best support for your product, we request that you complete a product registration form at www.SonyStyle.ca/registration within ninety (90) days of purchase.

For service assistance, product information, or product registration please call: 1-877-899-7669.

For information about a Sony Care Extended Warranty, please call 1-800-773-9667.

For online product support and updates at any time, please visit: www.sony.ca/sonyca/view/english/support_electronics.shtml, **or call the Sony Customer Information Centre at 1-877-899-7669.**



Garantie de trois ans protégeant les consommateurs

SONY®

Sony du Canada Limitée (ci-après nommé Sony), sous réserve des modalités et conditions énoncées dans les présentes, garantit le présent produit d'être sans défaut de fabrication ou de matériel durant la période de garantie spécifiée ci-dessous. Si un défaut de fabrication ou de matériel survient durant la période de garantie, Sony procédera, sans frais quant aux pièces ou à la main-d'œuvre, à la réparation du produit. Relativement au service de réparation, Sony utilisera des pièces neuves ou remises à neuf seulement.

La durée de validité de la garantie est la suivante :

1. Main-d'œuvre : TROIS ans à compter de la date originale d'achat au détail.
2. Pièces : TROIS ans à compter de la date originale d'achat au détail.

Conditions

Réparations non autorisées, abus, etc. :

Sony n'est aucunement responsable de la réparation du produit au titre de la présente garantie limitée si le produit a été antérieurement transformé, modifié, réparé; si le produit a fait l'objet d'entretien par quiconque sauf un centre de réparation dûment autorisé par Sony pour dispenser de tel entretien; ainsi que si le numéro de série du produit a été modifié ou enlevé. En outre, la présente garantie n'est pas valide si, en tout temps avant ou après son achat original au détail, le produit a été accidenté; a fait l'objet d'un mauvais usage ou d'un abus; a été utilisé en contravention des instructions contenues dans le guide d'utilisation; a servi à des fins commerciales; ou a été l'objet d'un contrat de location. Si le produit sert à des fins commerciales ou locatives, la garantie commerciale courante de Sony s'appliquera. L'opinion de Sony en cette matière est définitive.

Livraison du produit :

Le produit doit être expédié, frais de transport payés à l'avance, ou livré à l'un des centres de réparation autorisés de Sony au Canada, soit dans son emballage d'origine, soit dans un emballage comparable offrant un degré de protection comparable. Le produit doit être accompagné d'instructions indiquant l'endroit au Canada où le produit doit être retourné. Le produit réparé sera retourné au client, frais de transport payés à l'avance. Tous les accessoires qui sont inclus avec le produit doivent être énumérés individuellement sur le bon d'accompagnement rattaché au document d'expédition. Sony n'est aucunement responsable de la perte de ces accessoires ou de dommages qu'ils pourraient subir s'ils ne sont pas énumérés de la sorte. Tout accessoire défectueux devrait être expédié à Sony pour réparation en tant qu'élément distinct.

Preuve de la date d'achat :

La présente garantie limitée s'applique au produit à compter de la date originale d'achat au détail. Par conséquent, le propriétaire doit présenter une preuve de date originale d'achat au détail.

Produits visés par la présente garantie :

La présente garantie limitée s'applique aux produits ESPIRIT de Sony.

La présente garantie limitée peut s'appliquer à d'autres produits Sony lorsque celle-ci est incluse dans l'emballage original du produit.

La présente garantie limitée exclut les cabinets, accessoires ou piles cassés ou endommagés, les antennes et stylets exposés, ou la détérioration de pièces découlant de leur usure normale. La présente garantie limitée exclut l'entretien périodique des produits, tels que le nettoyage, la lubrification ou les vérifications.

La présente garantie n'est valide qu'au Canada.

SAUF DANS LA MESURE OÙ LA LOI APPLICABLE L'INTERDIT, TOUTES LES AUTRES GARANTIES ET CONDITIONS, EXPRESSES OU IMPLICITES, RELEVANT OU NON D'UNE LOI, D'UN ACTE LÉGISLATIF, D'HABITUDES COMMERCIALES ÉTABLIES OU D'USAGES DU COMMERCE, Y COMPRIS, NOTAMMENT, TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE OU DE L'ADAPTABILITÉ À UNE FIN PARTICULIÈRE, SONT DÉSAVOUÉES. SONY NE SAURAIT EN AUCUN CAS ÊTRE RESPONSABLE D'UN MONTANT SUPÉRIEUR AU PRIX RÉEL D'ACHAT DU PRODUIT; ET SONY NE SAURAIT EN AUCUN CAS ÊTRE RESPONSABLE DE DOMMAGES SPÉCIAUX, ACCESSOIRES OU CONSÉCUTIFS SUBIS RELATIVEMENT AU PRODUIT. SONY N'ASSUME NI N'AUTORISE AUCUN REPRÉSENTANT OU QUICONQUE À ASSUMER EN SON NOM UNE OBLIGATION OU RESPONSABILITÉ AUTRE QUE CELLES QUI SONT EXPRESSÉMENT DÉCRITES AUX PRÉSENTES. L'EXCLUSION DE GARANTIES ET CONDITIONS IMPLICITES N'EST PAS AUTORISÉE DANS CERTAINS TERRITOIRES.

Enregistrement du produit:

Merci d'avoir choisi un produit Sony. Chez Sony, nous nous efforçons de créer des produits de la plus haute qualité afin de renforcer votre expérience et votre satisfaction. Afin d'assurer le meilleur soutien qui soit à votre produit, nous vous demandons de remplir une fiche d'enregistrement de produit sur le site www.SonyStyle.ca/registration dans les quatre-vingt-dix (90) jours suivant la date d'achat.

Pour obtenir de l'aide concernant le service ou obtenir des renseignements sur le produit ou concernant l'enregistrement du produit, veuillez appeler le 1-877-899-7669.

Pour obtenir des renseignements concernant la garantie prolongée Sony Care, veuillez appeler le 1-800-773-9667.

Pour le support technique et les mises à jour en ligne en tout temps, vous pouvez visiter le www.fr.sony.ca/sonyca/view/french/support_electronics.shtml, ou appeler le Centre Sony de communication des renseignements aux clients au 1-877-899-7669.

**SONY**[®]General Stereo/Hifi Components/Tape Decks
CD Players/Mini Disc Players/Audio Systems**Hifi Audio**
ES Products

LIMITED WARRANTY (U.S. Only)

Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. **In the event of a defect, these are your exclusive remedies.**

Labor: For a period of five (5) years from the original date of purchase of the product ("Labor Warranty"), Sony will, at its option, repair or replace with new or refurbished product, product determined to be defective. If Sony elects to replace the product after this Labor Warranty has expired but while the Parts Warranty below is still in effect, it will do so for the applicable labor charge.

Parts: For a period of five (5) years from the original date of purchase of product ("Parts Warranty"), Sony will supply new or refurbished replacement parts in exchange for parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the Sony authorized service facility specified. **It is your responsibility to backup any data, software or other materials you may have stored or preserved on your unit. It is likely that such data, software, or other materials will be lost or reformatted during service and Sony will not be responsible for any such damage or loss.** A dated purchase receipt is required. For specific instructions on how to obtain warranty service for your product,

Visit Sony's Web Site:
www.sony.com/service

Or call the **Sony Customer Information Service Center**
1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the Sony product. This Limited Warranty does not cover Sony products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.