



Business Networking Solution

# Installation Guide

Unmanaged/Easy Smart Rackmountable Switches



# About this Installation Guide

This Installation Guide describes the hardware characteristics, installation methods and the points that should be attended to during installation. This Installation Guide is structured as follows:

## Chapter 1 Introduction

This chapter describes the external components of the switch.

## Chapter 2 Installation

This chapter illustrates how to install the switch.

## Chapter 3 Connection

This chapter illustrates how to do the physical connection of the switch.

## Appendix A Troubleshooting

## Appendix B Hardware Specifications

# Audience



This Installation Guide is for:

Network Engineer

Network Administrator

# Conventions

- When using this guide, notice that features available in JetStream series products may vary by model and software version. Availability of JetStream series products may also vary by region or ISP. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience. Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <https://www.tp-link.com>.
- PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.
- This guide uses the specific formats to highlight special messages. The following table lists the notice icons that are used throughout this guide.

	Remind to be careful. A caution indicates a potential which may result in device damage.
	Remind to take notice. The note contains the helpful information for a better use of the product.

# Related Document

This Installation Guide is also available in PDF on our website. To obtain the latest documentation and product information, visit the official website:

<https://www.tp-link.com>

# Contents

---

Chapter 1	Introduction	1
1.1	Product Overview	1
1.2	Appearance	1
Chapter 2	Installation	9
2.1	Package Contents	9
2.2	Safety Precautions	9
2.3	Installation Tools	11
2.4	Product Installation	11
Chapter 3	Connection	13
3.1	Ethernet Port	13
3.2	SFP Port	13
3.3	Verify Installation	13
3.4	Power On	14
3.5	Initialization	14
3.6	Accessing the Switch	14
Appendix A	Troubleshooting	16
Appendix B	Specifications	17

# Chapter 1 Introduction

## 1.1 Product Overview

The Unmanaged/Easy Smart Switch provides you with a low-cost, easy-to-use, high-performance, seamless, and standard upgrade to improve your network to 100 Mbps or 1000 Mbps.

TL-SG1008MP/TL-SG1016PE/TL-SG1218MPE is also a Power Sourcing Equipment (PSE\*). The RJ45 ports 1 to 8 on the TL-SG1008MP and TL-SG1016PE and all 10/100/1000Mbps RJ45 ports on the TL-SG1218MPE support Power over Ethernet (PoE\*) function, which can automatically detect and supply power to those powered devices (PDs\*) complying with IEEE 802.3af and IEEE 802.3at.



### Note:


- \*PSE is a device (switch or hub for instance) that will provide power in a PoE setup.
- \*PoE is a technology that describes a system to transmit electrical power, along with data, to remote devices over standard twisted-pair cable in an Ethernet network.
- \*PD is a device powered by a PSE and thus consumes energy. Examples include powering IP telephones, wireless LAN access points, network cameras, network hubs, embedded computers, and so on.

## 1.2 Appearance

### Front Panel


The front panel of TL-SG1008 is shown as the following figure.

Figure 1-1 Front Panel of TL-SG1008

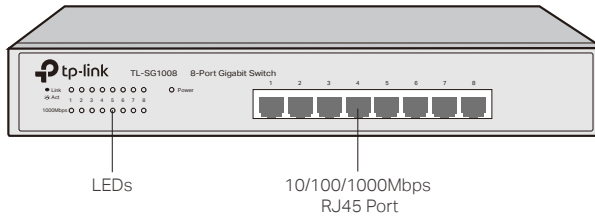

The front panel of TL-SG1008MP is shown as the following figure.


Figure 1-2 Front Panel of TL-SG1008MP

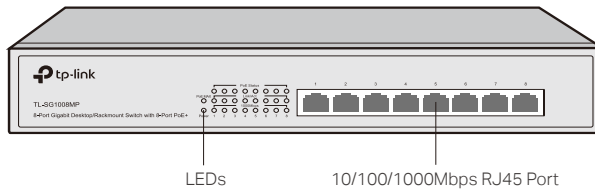

## Unmanaged/Easy Smart Rackmountable Switches


The front panel of TL-SF1016 is shown as the following figure.

Figure 1-3 Front Panel of TL-SF1016

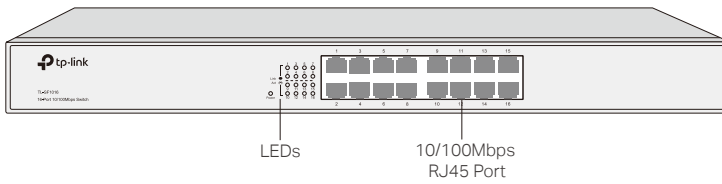


The front panel of TL-SF1016DS is shown as the following figure.

Figure 1-4 Front Panel of TL-SF1016DS

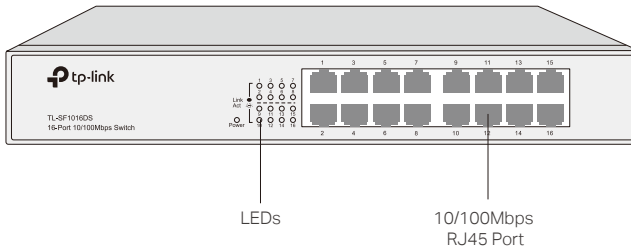


The front panel of TL-SG1016 is shown as the following figure.

Figure 1-5 Front Panel of TL-SG1016

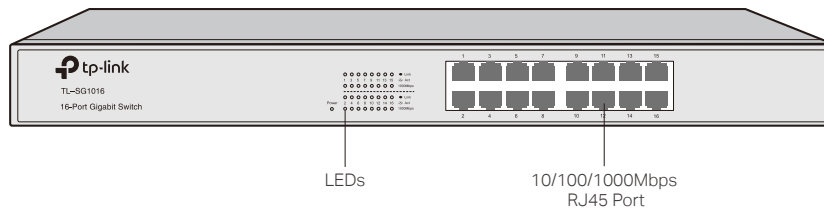


The front panel of TL-SG1016D is shown as the following figure.

Figure 1-6 Front Panel of TL-SG1016D

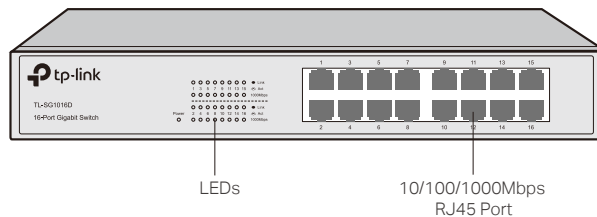


The front panel of TL-SG1016S is shown as the following figure.

Figure 1-7 Front Panel of TL-SG1016S

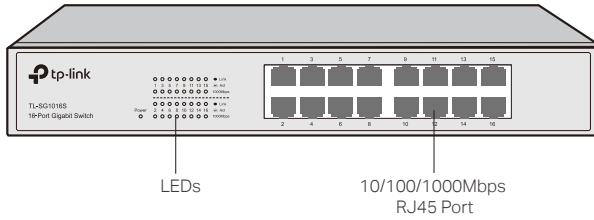


The front panel of TL-SG1016DE is shown as the following figure.

Figure 1-8 Front Panel of TL-SG1016DE

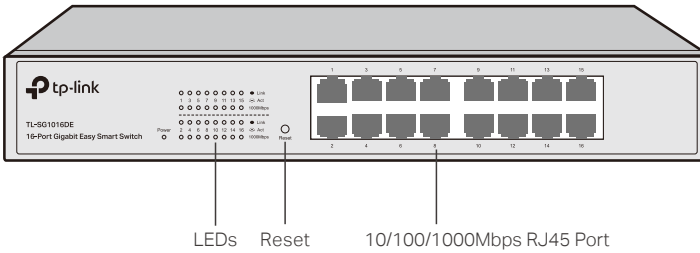


The front panel of TL-SG1016PE is shown as the following figure.

Figure 1-9 Front Panel of TL-SG1016PE

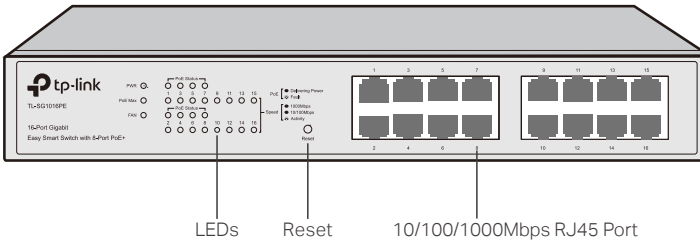

The front panel of TL-SF1024 is shown as the following figure.


Figure 1-10 Front Panel of TL-SF1024

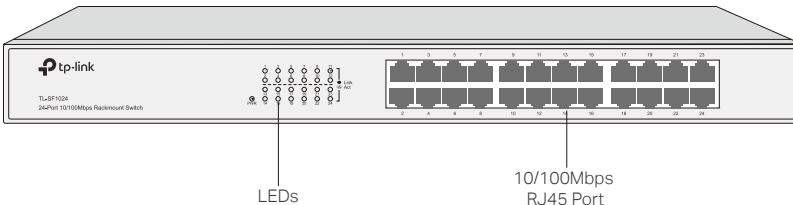

## Unmanaged/Easy Smart Rackmountable Switches


The front panel of TL-SF1024D is shown as the following figure.

Figure 1-11 Front Panel of TL-SF1024D

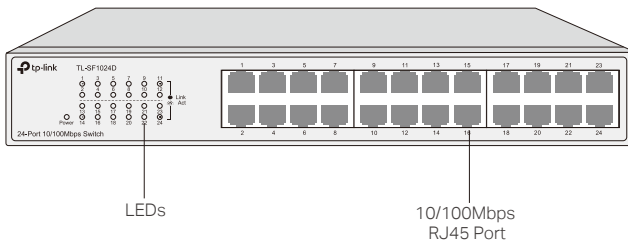


The front panel of TL-SG1024 is shown as the following figure.

Figure 1-12 Front Panel of TL-SG1024

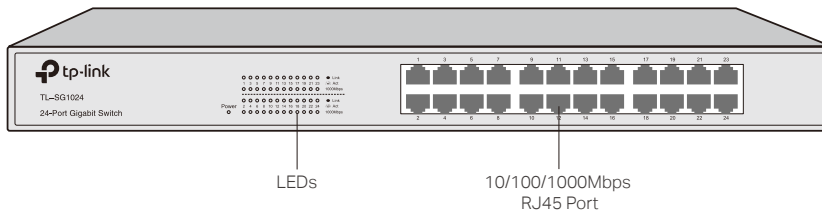


The front panel of TL-SG1024D is shown as the following figure.

Figure 1-13 Front Panel of TL-SG1024D

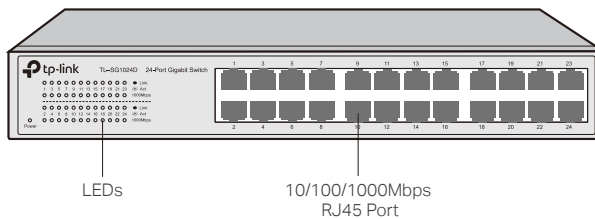

The front panel of TL-SG1024S is shown as the following figure.


Figure 1-14 Front Panel of TL-SG1024S

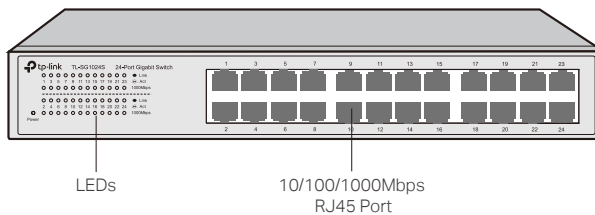




The front panel of TL-SG1024DE is shown as the following figure.

Figure 1-15 Front Panel of TL-SG1024DE

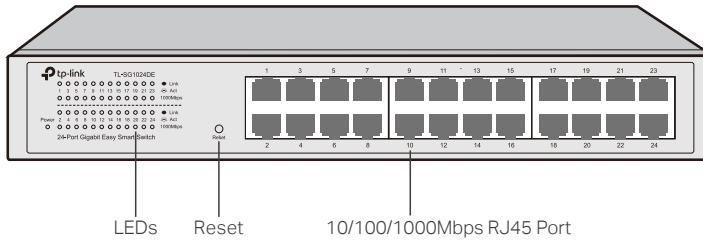


The front panel of TL-SF1048 is shown as the following figure.

Figure 1-16 Front Panel of TL-SF1048

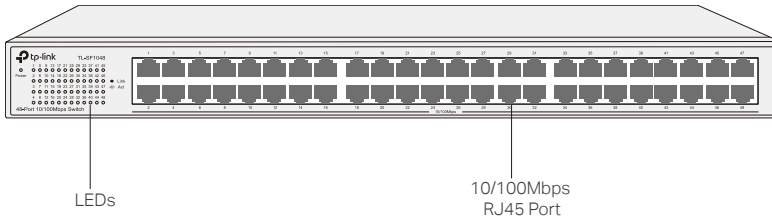


The front panel of TL-SG1048 is shown as the following figure.

Figure 1-17 Front Panel of TL-SG1048

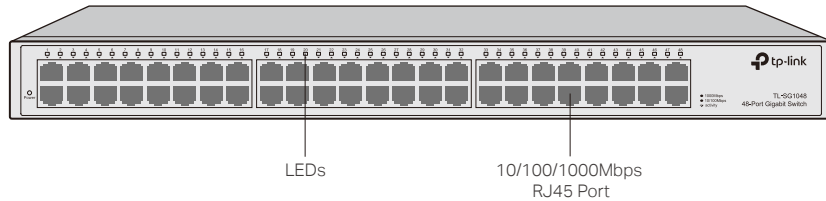

The front panel of TL-SG1218MPE is shown as the following figure.

Figure 1-18 Front Panel of TL-SG1218MPE

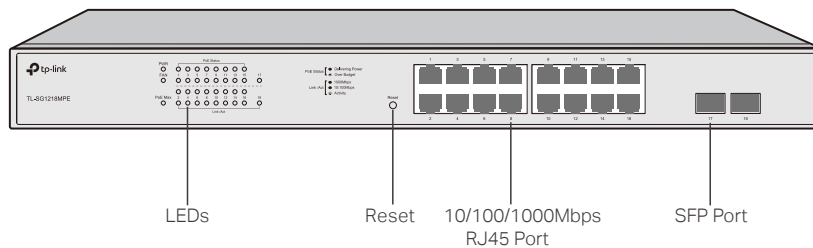

LED	Indication
Power PWR	<p><b>On:</b> The switch is powered on.</p> <p><b>Off:</b> The switch is powered off or power supply is abnormal.</p> <p><b>Flashing:</b> Power supply is abnormal.</p> <p>Note: PWR for TL-SG1016PE/TL-SF1024/TL-SG1218MPE; Power for other switches.</p>
1000Mbps	<p><b>On:</b> Running at 1000 Mbps.</p> <p><b>Off:</b> Running at 10/100 Mbps or no device is linked to the corresponding port.</p> <p>Note: For TL-SG1008/TL-SG1008MP/TL-SG1016/TL-SG1016D/TL-SG1016S/TL-SG1016DE/TL-SG1024/TL-SG1024D/TL-SG1024S/TL-SG1024DE.</p>
Link/Act	<p><b>On:</b> A device is linked to the corresponding port and running properly.</p> <p><b>Flashing:</b> Transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: For TL-SG1008/TL-SG1008MP/TL-SF1016/TL-SG1016/TL-SG1016D/TL-SG1016S/TL-SF1016DS/TL-SG1016DE/TL-SF1024/TL-SF1024D/TL-SG1024/TL-SG1024D/TL-SG1024S/TL-SG1024DE/TL-SF1048.</p> <p><b>Green On:</b> Running at 1000 Mbps but no activity.</p> <p><b>Green Flashing:</b> Running at 1000 Mbps and is transmitting or receiving data.</p> <p><b>Yellow on:</b> Running at 100/10 Mbps but no activity.</p> <p><b>Yellow Flashing:</b> Running at 100/10 Mbps and is transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: Only for TL-SG1048 and ports 1 to 16 of TL-SG1218MPE. The port 17 and port 18 of TL-SG1218MPE which only support 1000M SFP module connection just have <b>Green On/ Green Flashing/Off</b> LED indications.</p>
Speed	<p><b>Green On:</b> Running at 1000 Mbps but no activity.</p> <p><b>Green Flashing:</b> Running at 1000 Mbps and is transmitting or receiving data.</p> <p><b>Yellow on:</b> Running at 100/10 Mbps but no activity.</p> <p><b>Yellow Flashing:</b> Running at 100/10 Mbps and is transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: Only for TL-SG1016PE.</p>
PoE Status	<p><b>On:</b> The port is connecting and supplying power to a PD.</p> <p><b>Flashing:</b> The PoE power circuit may be in short or the power current may be overloaded.</p> <p><b>Off:</b> No PD is connected to the corresponding port or no power is supplied according to the power limits of the port.</p> <p>Note: Only for TL-SG1008MP.</p> <p><b>On:</b> The port is connecting and supplying power to a PD.</p> <p><b>Flashing:</b> The PoE power circuit may be in short or the power current may be overloaded or non-standard PD is connected or the amount of power of the port has exceeded the power limit.</p> <p><b>Off:</b> No PD is connected to the corresponding port or no power is supplied according to the power limit of the port.</p> <p>Note: Only for TL-SG1016PE and TL-SG1218MPE.</p>

LED	Indication
PoE Max	<p><b>On:</b> Total power supply is between 146 W and 153 W. No power may be supplied if additional PDs are connected.</p> <p><b>Flashing:</b> Total power supply is equal to or greater than 153 W.</p> <p><b>Off:</b> Total power supply is less than 146 W.</p> <p>Note: Only for TL-SG1008MP.</p> <p><b>On:</b> Total power supply is between 143 W and 150 W. No power may be supplied if additional PDs are connected.</p> <p><b>Flashing:</b> Total power supply is equal to or greater than 150 W.</p> <p><b>Off:</b> Total power supply is less than 143 W.</p> <p>Note: Only for TL-SG1016PE.</p> <p><b>On:</b> Total power supply is equal to or greater than 185 W.</p> <p><b>Flashing:</b> Total power supply is equal to or greater than 185 W and lasts for more than 2 minutes.</p> <p><b>Off:</b> Total power supply is less than 185 W.</p> <p>Note: Only for TL-SG1218MPE.</p>
FAN	<p><b>Green:</b> The fan works properly.</p> <p><b>Yellow:</b> The fan doesn't work properly.</p> <p>Note: Only for TL-SG1016PE and TL-SG1218MPE.</p>

**Note:**

For models that support the LED On/Off feature, the LEDs function as shown above only when the LED status is on.

**Reset**

Press this button for five seconds or above to reset the switch back to factory default settings.

**Note:**

Only TL-SG1016DE/TL-SG1016PE/TL-SG1024DE/TL-SG1218MPE has a Reset button.

**10/100/1000Mbps RJ45 Port**

Designed to connect to the device with a bandwidth of 10 Mbps, 100 Mbps or 1000 Mbps. For TL-SG1008MP and TL-SG1016PE, ports 1 to 8 can also provide power for PDs. For TL-SG1218MPE, ports 1 to 16 can also provide power for PDs.

**10/100Mbps RJ45 Port**

Designed to connect to the device with a bandwidth of 10 Mbps or 100 Mbps.


**SFP Port**

Designed to install the SFP module. TL-SG1218MPE features 2 individual SFP ports which support 1000M SFP module connection only.

## ▪ Rear Panel

The rear panel is shown as the following figure. Here we take TL-SG1016PE as an example.

Figure 1-19 Rear Panel

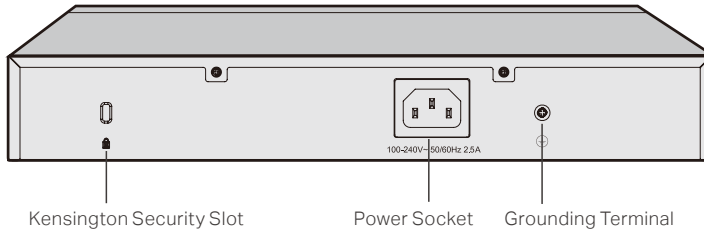

### Kensington Security Slot

Secure the lock (not provided) into the security slot to prevent the device from being stolen.



#### Note:

Only TL-SG1016PE and TL-SG1218MPE has a kensington security slot.

### Grounding Terminal

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable. For detailed information, refer to the Lightning Protection Guide from the Related Documents of our website:

[https://www.tp-link.com/us/configuration-guides/lightning\\_protection\\_guide](https://www.tp-link.com/us/configuration-guides/lightning_protection_guide)

### Power Socket

Plug the female connector of the power cord directly into the power socket and plug the male connector into an AC outlet. Make sure that the voltage of the power supply meets the requirement of the input voltage (100–240 V~ 50/60 Hz).



#### Caution:

You should use the provided power cord.


## Chapter 2 Installation

---

### 2.1 Package Contents

---

Make sure that the package contains the following items. If any of the listed items is damaged or missing, contact your distributor.

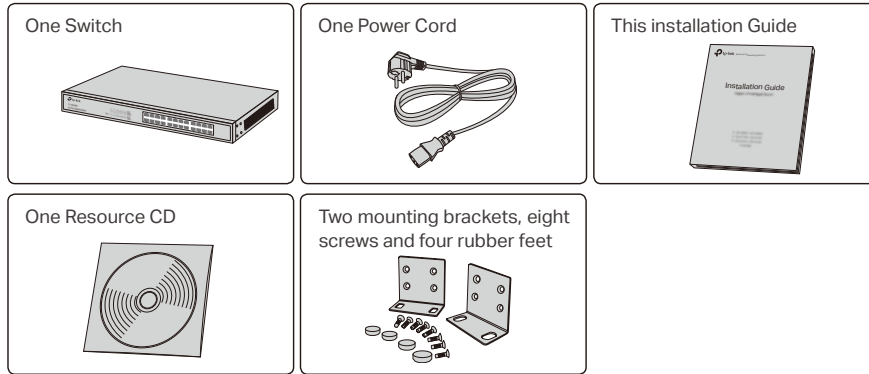

**Note:**

The resource CD is only for TL-SG1016DE/TL-SG1016PE/TL-SG1024DE/TL-SG1218MPE.

---

### 2.2 Safety Precautions

---

To avoid any device damage and bodily injury caused by improper use, you should observe the following rules.

▪ **Safety Precautions**

- Keep the power off during the installation.
- Wear an ESD-preventive wrist strap, and make sure that the wrist strap has a good skin contact and is well grounded.
- Use only the power cord provided with the switch.
- Make sure that the supply voltage matches the specifications indicated on the rear panel of the switch.
- Ensure that the switch is installed in a well-ventilated environment and its ventilation hole is not blocked.
- Do not open or remove the cover of the switch.
- Before cleaning the device, cut off the power supply. Do not clean it by the waterish cloth, and never use any other liquid cleaning method.
- Place the device with its bottom surface downward.

▪ **Site Requirements**

**Temperature/Humidity**



Keep the equipment room at an appropriate level of temperature and humidity. Too much or too little humidity may lead to bad insulation, leakage of electricity, mechanical property changes, and corrosion. High temperatures may accelerate aging of the insulation materials, significantly shortening the service life of the device. To find out the best temperature and humidity conditions for the device, check the following table.

Environment	Temperature	Humidity
Operating	0 °C to 50 °C (for TL-SG1008MP/TL-SG1218MPE) 0 °C to 40 °C (for other switches)	10% to 90%RH Non-condensing
Storage	-40 °C to 70 °C	5% to 90%RH Non-condensing

**Cleanness**



The dust accumulated on the switch can be absorbed by static electricity and result in poor contact of metal contact points. Some measures have been taken for the device to prevent static electricity, but too strong static electricity can cause deadly damage to the electronic elements on the internal circuit board. To avoid the effect of static electricity on the operation of the switch, attach much importance to the following items:

- Dust the device regularly, and keep the indoor air clean.
- Keep the device well grounded and ensure that the static electricity has been transferred.

**Electromagnetic Interference**



Electronic elements including capacitance and inductance on the device can be affected by external interferences, such as conducted emission by capacitance coupling, inductance coupling, and impedance coupling. To decrease the interferences, make sure to take the following measures:

- Use the power supply that can effectively filter interference from the power grid.
- Keep the device far from high-frequency and strong-current devices such as radio transmitting station.
- Use electromagnetic shielding when necessary.

**Lightning Protection**



Extremely high voltage currents can be produced instantly when lightning occurs and the air in the electric discharge path can be instantly heated up to 20,000 °C. As this instant current is strong enough to damage electronic devices, more effective lightning protection measures should be taken.

- Ensure that the rack and the device are well earthed.
- Make sure the power socket has a good contact with the ground.
- Keep a reasonable cabling system and avoid induced lightning.
- Use the signal SPD (Surge Protective Device) when wiring outdoor.




**Note:**

For detailed lightning protection measures, refer to the Lightning Protection Guide from the Related Documents of our website:

[https://www.tp-link.com/us/configuration-guides/lightning\\_protection\\_guide](https://www.tp-link.com/us/configuration-guides/lightning_protection_guide)

### Installation Site

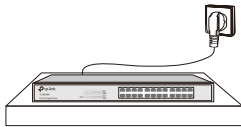

When installing the device on a rack or a flat workbench, attach much importance to the following items:

- The rack or workbench is flat, stable, and sturdy enough to support the weight of 5.5 kg at least.
- The rack or workbench has a good ventilation system. The equipment room is well ventilated.
- The rack is well grounded. Keep the device less than 1.5 meters away from the power socket.

## 2.3 Installation Tools

- Phillips screwdriver
- ESD-preventive wrist wrap
- Cables



**Note:**

These tools are not included with our product. If needed, you can purchase them separately.


## 2.4 Product Installation

### ▪ Desktop Installation

To install the device on the desktop, follow the steps:

1. Set the device on a flat surface which is strong enough to support the entire weight of the device with all fittings.
2. Remove the adhesive backing papers from the rubber feet.
3. Turnover the device and attach the supplied rubber feet to the recessed areas on the bottom at each corner of the device.

Figure 2-1 Desktop Installation

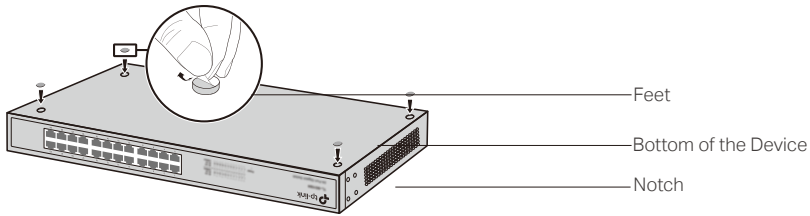


## ■ Rack Installation

To install the device in an EIA standard-sized, 19-inch rack, follow the instructions described below:


1. Check the efficiency of the grounding system and the stability of the rack.
2. Secure the supplied rack-mounting brackets to each side of the device with supplied screws, as illustrated in the following figure.

Figure 2-2 Bracket Installation

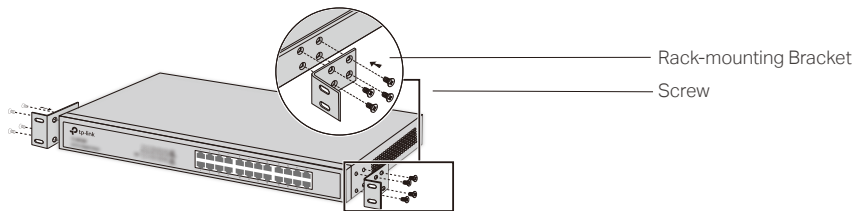

3. After the brackets are attached to the device, use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

Figure 2-3 Rack Installation

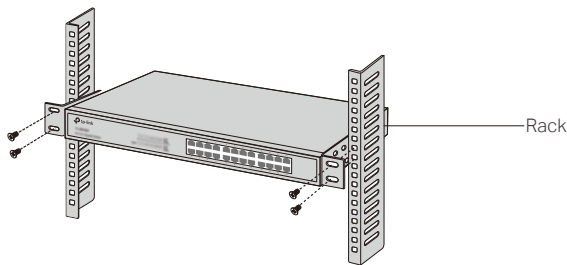

### Caution:

- Leave 5 to 10 cm gaps around the devices for air circulation.
- Avoid placing heavy things on the device.
- Mount devices in sequence from the bottom to top of the rack and ensure a certain clearance between devices for the purpose of heat dissipation.



## Chapter 3 Connection


---

### 3.1 Ethernet Port

---

Connect an Ethernet port of the switch to the computer by RJ45 cable as the following figure shows.

Figure 3-1 Connecting the RJ45 Port

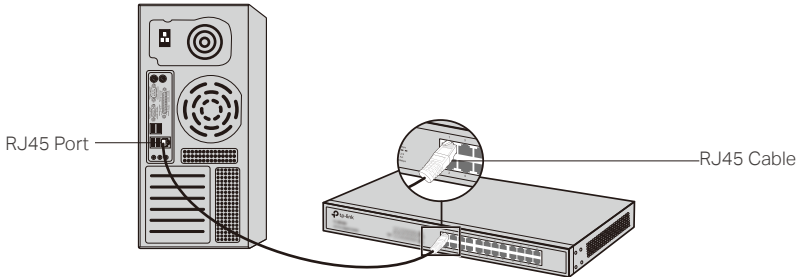


### 3.2 SFP Port

---

The following figure demonstrates the connection of SFP port to an SFP module.

Figure 3-2 Inserting the SFP Module

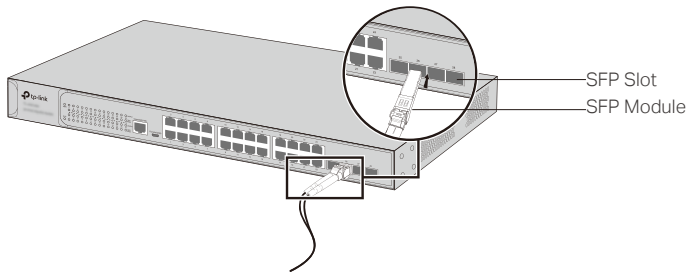

**Note:**

TL-SG1218MPE features 2 individual SFP ports which support 1000M SFP module connection only.

### 3.3 Verify Installation

---

After completing the installation, verify the following items:

- There should be 5 to 10 cm of clearance around the device for ventilation and make sure the air flow is adequate.
- The voltage of the power supply meets the requirement of the input voltage of the device.


- The power socket, device and rack are well grounded.
- The device is correctly connected to other network devices.

### 3.4 Power On

---

Plug the negative connector of the provided power cord into the power socket of the device and plug the positive connector into a power outlet as the following figure shows.

Figure 3-3 Connecting to Power Supply

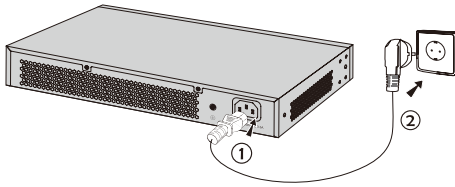

**Note:**

The figure is to illustrate the application and principle. The provided plug and the socket in your region may differ from the figures above.

---

### 3.5 Initialization

---

After the device is powered on, it begins the Power-On Self-Test. A series of tests run automatically to ensure the device functions properly. During this time, the LED indicators will respond as follows:

1. The PWR/Power LED indicator will light up.
2. The LED indicators of all the ports will flash momentarily and then turn off again after the initialization.

### 3.6 Accessing the Switch

---



**Note:**

Only for TL-SG1016DE/TL-SG1016PE/TL-SG1024DE/TL-SG1218MPE, you can access and manage the switch.

---

After the initialization finished, you can access and manage the switch using the Web-based GUI (Graphical User Interface) or using the Configuration Utility.

#### Using the Web-Based GUI

To access and manage the switch using the Web-Based GUI, take the following steps:

1. Find the IP address of the switch.
  - By default, the switch receives an IP address from a DHCP server (or a router that functions as a DHCP server) in your network. You can find this IP address on the DHCP server.
  - If the switch cannot receive an IP address from a DHCP server, it uses the static IP address of 192.168.0.1, with a subnet mask of 255.255.255.0.

2. Configure IP address on your PC to make sure the switch and PC are in the same subnet.
  - If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.
  - If the switch uses the static IP address of 192.168.0.1, configure your PC's IP address as 192.168.0.x ("x" ranges from 2 to 254), and subnet mask as 255.255.255.0.
3. Launch a web browser on your PC. Enter the IP address of the switch in the address bar and press **Enter**. Log in with **admin** as both user name and password.

**Note:**

For certain devices, you may need to change the password the first time you log in, which will better protect your network and devices.

---

Now you can configure the switch using the Web-based GUI. For further information, refer to the User Guide on the resource CD. You can find the latest version of this guide on the official website: <https://www.tp-link.com/download-center.html>

### Using the Configuration Utility

You can find the configuration utility on the resource CD or download it from the official website: <https://www.tp-link.com/download-center.html>

For detailed information about using the configuration utility, refer to the Easy Smart Configuration Utility User Guide on the resource CD. You can find the latest version of this guide on the official website: <https://www.tp-link.com/download-center.html>

## Appendix A Troubleshooting

---

### Q1. What could I do if I forgot the username and password of the Switch?

With the switch powered on, press the Reset button for at least 5 seconds to reset the system. The system will be reset to the factory default settings, and the default login user name and password are both **admin**.

### Q2. What should I do if I cannot access the web management page?

Please try the following:

1. Check every port LED on the switch and make sure the Ethernet cable is connected properly.
2. Try another port on the switch and make sure the Ethernet cable is suitable and works normally.
3. Power off the switch and, after a while, power it on again.
4. Make sure the IP address of your PC is set within the subnet of the switch.
5. If you still cannot access the configuration page, please reset the switch to its factory defaults. Then the IP address of your PC should be set as 192.168.0.x ("x" is any number from 2 to 254) and subnet mask as 255.255.255.0.

### Q3. Why is the Power/PWR LED not lit?

By default, the Power/PWR LED should be lit when the power system is working normally. If the Power/PWR LED is not lit, please try the following:

1. Make sure that the power cable is connected properly, and the power contact is normal.
2. Make sure the voltage of the power supply meets the requirement of the input voltage of the switch.
3. Make sure the power source is ON.
4. (For models that support the LED On/Off feature) On the LED On/Off configuration page, check whether the LED status is on. By default, the LED status is on.

### Q4. Why is the Link/Act LED not lit while a device is connected to the corresponding port?

Please try the following:

1. Make sure that the cable connectors are firmly plugged into the switch and the device.
2. Make sure the connected device is turned on and working normally.
3. The cable must be less than 100 meters long (328 feet).
4. (For models that support the LED On/Off feature) On the LED On/Off configuration page, check whether the LED status is on. By default, the LED status is on.

## Appendix B Specifications

Item	Content
Standards	IEEE 802.3i, IEEE 802.3u, IEEE 802.3x
	IEEE 802.3ab (except TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048)
	IEEE 802.1p (for TL-SG1008/TL-SG1008MP/TL-SG1016/TL-SG1016D/TL-SG1016DE/TL-SG1016PE/TL-SG1016S/TL-SG1024/TL-SG1024D/TL-SG1024DE/TL-SG1024S)
	IEEE 802.1q (for TL-SG1016DE/TL-SG1016PE/TL-SG1024DE)
	IEEE 802.3af (for TL-SG1008MP/TL-SG1016PE/TL-SG1218MPE)
	IEEE 802.3at (for TL-SG1008MP/TL-SG1016PE/TL-SG1218MPE)
	IEEE 802.3z (for TL-SG1218MPE)
Transmission Medium	10Base-T: 2-pair UTP/STP of Cat. 3 or above (maximum 100 m)
	100Base-TX: 2-pair UTP/STP of Cat. 5 or above (maximum 100 m)
	1000Base-T: 4-pair UTP/STP of Cat. 5e or above (maximum 100 m) (except TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048)
	1000BASE-SX: 62.5 $\mu$ m MMF (Minimum range: 2 m to 275 m) or 50 $\mu$ m MMF (Minimum range: 2 m to 550 m) (for TL-SG1218MPE)
	1000BASE-LX: 62.5 $\mu$ m/50 $\mu$ m MMF (Minimum range: 2 m to 550 m) or 10 $\mu$ m SMF (Minimum range: 2 m to 5000 m) (for TL-SG1218MPE)
	1000BASE-LX10: Type B1.1, B1.3 SMF (2 fiber) (Minimum range: 0.5 m to 10000 m) (for TL-SG1218MPE)
	1000BASE-BX10: Type B1.1, B1.3 SMF (1 fiber) (Minimum range: 0.5 m to 10000 m) (for TL-SG1218MPE)
Frame Forward Rate	10Base-T: 14881 pps/Port
	100Base-X: 148810 pps/Port
	1000Base-T: 1488095 pps/Port (except TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048)
	1000BASE-X: 1488095 pps/Port (for TL-SG1218MPE)

## Unmanaged/Easy Smart Rackmountable Switches

LEDs	Power, Link/Act (for TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048/TL-SG1048)
	Power, 1000 Mbps, Link/Act, PoE Status, PoE MAX (for TL-SG1008MP)
	PWR, Speed, PoE Status, PoE MAX, FAN (for TL-SG1016PE)
	PWR, Link/Act, PoE Status, PoE MAX, FAN (for TL-SG1218MPE)
	Power, 1000 Mbps, Link/Act (for other switches)
Operating Temperature	0°C to 40°C (32°F to 104°F)
	0°C to 50°C (32°F to 122°F) (for TL-SG1008MP/TL-SG1218MPE)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Operating Humidity	10% to 90%RH Non-condensing
Storage Humidity	5% to 90%RH Non-condensing

# FCC Compliance Information Statement



Product Name: Unmanaged/Easy Smart Rackmountable Switch

Model Number: TL-SG1008/TL-SG1008MP/TL-SF1016/TL-SF1016DS/TL-SG1016/TL-SG1016D/  
TL-SG1016S/TL-SG1016DE/TL-SG1016PE/TL-SF1024/TL-SF1024D/TL-SG1024/TL-SG1024D/  
TL-SG1024S/TL-SG1024DE/TL-SF1048/TL-SG1048/TL-SG1218MPE

Responsible party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <https://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: [sales.usa@tp-link.com](mailto:sales.usa@tp-link.com)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2019/11/13

## CE Mark Warning



This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/ce>

## Industry Canada Statement

CAN ICES-3 (A)/NMB-3(A)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



# BSMI Notice

## 安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

此為甲類資訊技術設備，于居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

## 限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	—	○	○	○	○	○

備考 1. "超出 0.1 wt %" 及 "超出 0.01 wt %" 系指限用物質之百分比含量超出百分比含量基準值。  
備考 2. "○" 系指該項限用物質之百分比含量未超出百分比含量基準值。  
備考 3. "—" 系指該項限用物質為排除項目。



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



## Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Place the device with its bottom surface downward.





Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。


VCCI-A

## Explanation of the symbols on the product label

Note: The product label can be found at the bottom of the product.

Symbol	Explanation
	AC voltage
	Indoor use only.
<b>RECYCLING</b>	
	This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.
	User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

# COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  **tp-link** is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2019 TP-Link Technologies Co., Ltd. All rights reserved.

<https://www.tp-link.com>



To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.



For technical support, the user guide and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



If you have any suggestions or needs on the product guides, welcome to email [techwriter@tp-link.com.cn](mailto:techwriter@tp-link.com.cn).