



Advanced Test Equipment Corp.

www.atecorp.com 800-404-ATEC (2832)

# TESTEQUITY

## Model 1027S

### Temperature Chamber

With F4 Controller and EZ-Zone Limit Controller

## Operation and Service Manual



**TestEquity LLC**  
6100 Condor Drive  
Moorpark, CA 93021

Support: 877-512-3457 Toll Free  
805-480-0638

Corporate: 800-732-3457  
805-498-9933

<http://www.testequity.com>



---

---

## Table of Contents

---

---

<b>Chapter 1 – Safety Instructions</b>	<b>1-1</b>
<b>Introduction</b>	<b>1-1</b>
<b>Installation Safety Notices</b>	<b>1-1</b>
<b>Operation Safety Notices</b>	<b>1-2</b>
<b>Chapter 2 – Installation</b>	<b>2-1</b>
<b>Uncrating</b>	<b>2-1</b>
<b>Preparation For Use</b>	<b>2-1</b>
<b>Installation Location</b>	<b>2-1</b>
<b>Condensate Drain</b>	<b>2-2</b>
<b>Input Power Configuration</b>	<b>2-2</b>
Overview	2-2
230 V / 60 Hz Input Configuration	2-3
208 V / 60 Hz Input Configuration	2-3
<b>Connection to the Power Source</b>	<b>2-3</b>
Power Source Connection	2-3
Phase Sequence	2-3
<b>Chapter 3 – Operation</b>	<b>3-1</b>
<b>Introduction</b>	<b>3-1</b>
<b>Summary of Chamber Operation</b>	<b>3-1</b>
<b>Front Panel Switches and Lights</b>	<b>3-2</b>
Main Disconnect Switch	3-2
Master Switch	3-2
Light Switch	3-2
Heat Light	3-2
Cool Light	3-2
<b>Loading the Chamber</b>	<b>3-3</b>
Port Plugs	3-3
Performance Considerations	3-4
Avoiding Moisture	3-4
Internal Test Fixtures	3-4
<b>Chapter 4 - Temperature Controller</b>	<b>4-1</b>
<b>Introduction</b>	<b>4-1</b>
Security Features	4-1
<b>Temperature Controller Keys and Displays</b>	<b>4-2</b>
<b>Main Page</b>	<b>4-3</b>
Static Set Point Control	4-3
<b>Profile Programming</b>	<b>4-4</b>
Step Types	4-4
How to Program a New Profile	4-6
Programming Hints	4-7
Profile Key	4-7
How to Start a Profile	4-7
How to Hold/Resume a Running Profile	4-8
How to Terminate a Running/Holding Profile	4-8
How to Delete or Re-Name a Profile	4-8
How to Edit a Profile	4-9
Profile Examples	4-10
<b>Digital Event Outputs</b>	<b>4-11</b>
Digital Output Connections	4-11
Event Board Option	4-11
<b>Operations Page</b>	<b>4-12</b>
<b>Setup Page</b>	<b>4-12</b>
<b>Factory Page</b>	<b>4-13</b>

---

---

## Table of Contents

---

---

<b>Computer Interface</b>	<b>4-13</b>
RS-232C	4-13
Common Modbus Registers	4-13
GPIB (optional)	4-13
Ethernet (optional)	4-13
<b>Chapter 5 - Limit Controller</b>	<b>5-1</b>
<b>Introduction</b>	<b>5-1</b>
Limit Controller Keys and Displays	5-2
How to Set the High and Low Temperature Safety Limits	5-2
Resetting an Out of Limit Condition	5-2
Silencing the Audible Alarm	5-2
Protecting an Energized Test Sample	5-3
<b>Chapter 6 – Frequently Asked Questions</b>	<b>6-1</b>
<b>Chapter 7 – Specifications</b>	<b>7-1</b>
<b>Model 1027S Chamber Specifications</b>	<b>7-1</b>
<b>F4 Temperature Controller Specifications</b>	<b>7-2</b>
<b>Chapter 8 – Maintenance</b>	<b>8-1</b>
<b>Preventive Maintenance Intervals</b>	<b>8-1</b>
<b>Maintenance Procedures</b>	<b>8-2</b>
How to clean the chamber interior and exterior.	8-2
How to listen for abnormal noise or vibration.	8-2
How to inspect the door seal.	8-2
How to inspect the refrigeration machinery compartment.	8-3
How to check the refrigerant charge.	8-3
How to verify the chamber performance.	8-4
How to inspect the electrical compartment.	8-5
How to clean the condenser.	8-5
How to verify the calibration.	8-5
<b>Theory of Operation</b>	<b>8-6</b>
Overview	8-6
Heating System	8-6
Refrigeration System	8-6
<b>Troubleshooting</b>	<b>8-8</b>
<b>Refrigeration System Charging Instructions</b>	<b>8-10</b>
R-404A Charge	8-10
<b>Recommended Spare Parts</b>	<b>8-11</b>
<b>Major Electrical Parts</b>	<b>8-12</b>
<b>Major Refrigeration Parts</b>	<b>8-12</b>
<b>General Parts</b>	<b>8-13</b>
<b>Series F4 Temperature Controller Setup Parameters</b>	<b>8-14</b>
Series F4 Setup Parameters	8-15
Series F4 Operations Parameters	8-16
Series F4 Set Lockout Parameters	8-16
<b>EZ-Zone Limit Controller Setup Parameters</b>	<b>8-17</b>
Setup Menu	8-17
Operations Menu	8-17
<b>Chapter 9 - Warranty</b>	<b>9-1</b>
<b>Chapter 10 – Drawings</b>	<b>10-1</b>


## Chapter 1 – Safety Instructions


### ***Introduction***

---

Follow all CAUTION notices to prevent damage to the chamber or your test sample. Failure to follow all CAUTION notices may void your warranty. CAUTION may also indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury.


WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


The safety alert symbol  precedes a general CAUTION or WARNING statement.


The electrical hazard symbol  precedes an electric shock hazard CAUTION or WARNING statement.


### ***Installation Safety Notices***


---

 **CAUTION:** The minimum clearance you should allow for proper ventilation around the chamber must be at least 12" from both the left and right side, and 24" from the rear.

 **CAUTION:** This chamber is designed for operation in a conditioned laboratory environment. Operation above 30°C (85°F) or below 16°C (60°F) ambient room temperature is NOT recommended.

 **CAUTION:** The Input Voltage label on the back of the chamber indicates the input voltage configuration as shipped from the factory. If the input voltage configuration is changed, this label must be replaced to reflect the new configuration. Replacement labels are available from TestEquity at no charge.

 **CAUTION:** This chamber must be properly configured for either 208 V or 230 V nominal input. 208 V and 230 V are NOT the same. Do NOT guess! Do NOT assume you have “220 V”. You must verify the exact type of electrical service you have. If there is any doubt, you must consult with a qualified electrician who is familiar with industrial plant wiring. In addition, the input line voltage should be measured while the chamber is operating in the COOL mode to ensure that the expected nominal voltage of either 208 V  $-5/+10\%$  or 230 V  $\pm 10\%$  is present. Operation below 198 V or greater than 253 V requires internal transformers, which can be supplied for a nominal charge.

 **CAUTION:** This chamber should be connected to the AC power source by a qualified electrician who is familiar with industrial plant wiring.

### ***Operation Safety Notices***

---

- ⚠ **CAUTION:** This chamber has a crankcase heater to protect the compressor. The chamber must be connected to the power source AND the Main Disconnect Switch must be ON for 3 hours prior to operating the chamber. Although it may be safe to use the chamber immediately, this procedure ensures the longest possible life for the compressor if the chamber has been removed from the power source for more than 24 hours.
- ⚠ **CAUTION:** The “Series F4 User’s Manual” is a general manual and is written by the manufacturer, Watlow, for a wide variety of applications and configurations. Not all features or functions are applicable. Only the capabilities of a model F4SH-CKA0-01, as described on page A.7 of the “Series F4 User’s Manual” are applicable. “Cascade Control” as described on page 3.6 of the “Series F4 User’s Manual” is not applicable in this configuration. The “Retransmit” function is available as an option.
- ⚠ **CAUTION:** The Series F4 “Alarm” functions are NOT used in the chamber’s safety system and are NOT connected. TestEquity does NOT recommend using the Series F4 alarm function as the main protection device. The independent EZ-Zone Limit Controller functions as the main protection device.
- ⚠ **CAUTION:** The Series F4 Temperature Controller has been properly configured by TestEquity to match the chamber’s system requirements and to perform optimally over a wide range of operating conditions. Improper modifications to these setup values can result in erratic performance and unreliable operation. Setup examples in the “Series F4 User’s Manual” are NOT applicable to this chamber. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. If there is any doubt, please call TestEquity before proceeding.
- ⚠ **CAUTION:** NEVER select “Full Defaults” in the Series F4 Controller’s Factory/Test Menu. This will erase all the correct values which are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.
- ⚠ **CAUTION:** The EZ-Zone Limit Controller has been properly configured by TestEquity to match the chamber’s system requirements. Improper modifications to these setup values can result in unreliable and unsafe operation. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. The correct values are documented in the “EZ-Zone Limit Controller Setup Parameters” section of this manual.
- ⚠ **CAUTION:** Always verify that the Limit Controller’s high and low limits are set to temperatures that are appropriate for your test sample.

---

## Chapter 1 – Safety

---

- △ **CAUTION:** If your test sample is energized, it may be capable of raising the workspace temperature beyond safe limits. This could occur if your test sample exceeds the live load rating of the chamber or if the chamber's refrigeration system fails. This chamber has a set of contacts that can be used to remove power to your test sample if the Limit Controller's temperature limits are exceeded.
  
- △ **CAUTION:** To prevent damage to your test sample and the chamber's compressors, do not exceed the live load rating of the chamber.
  
- △ **WARNING:** Do NOT put items in the chamber that could burn or explode at high temperatures. This chamber uses open wire heating elements which generate surface temperatures over 1000°F. This is NOT an explosion-proof chamber.
  
- △ **WARNING:** Do NOT put items in the chamber which can emit corrosive vapors or substances.
  
- △ **WARNING:** This chamber is NOT a curing oven. There are NO provisions for venting fumes.
  
- △ **WARNING:** The chamber door must remain closed while the chamber is operating. If you need to open the door while the chamber is operating, wear safety goggles to prevent the high velocity airflow from blowing particles or objects into your eyes.
  
- △ **WARNING:** This chamber operates at extreme temperatures. Avoid contact with air, objects, and surfaces that are hot or cold to prevent severe burns or frostbite. Protective gloves are recommended.





## Chapter 2 – Installation

### ***Uncrating***

---

Inspect the shipping container for any signs of visible damage. Notify the carrier and TestEquity immediately if there are signs of shipping damage.

The pallet is designed with ramps so the chamber can be rolled off without the need for a forklift or pallet jack.

### ***Preparation For Use***

---

1. Inspect the chamber for signs of shipping damage.
2. Read this entire manual.
3. Select a suitable location to install the chamber.
4. Verify the input voltage configuration.
5. Connect to the power source.
6. Perform following the procedures as described in the Preventive Maintenance section:
  - a. Inspect the electrical compartment.
  - b. Inspect the refrigeration machinery compartment.
  - c. Check the refrigeration charge.
  - d. Verify the chamber performance.

### ***Installation Location***

---

The chamber will produce a significant amount of heat during normal operation. Locate the chamber in a room with adequate ventilation to prevent excessive heat build-up. Allow enough space around the chamber to permit serviceability and the removal of the service access panels, which are located on each side and the rear.

The chamber must be on a solid and level floor.

**△ CAUTION:** The minimum clearance you should allow for proper ventilation around the chamber must be at least 12" from both the left and right side, and 24" from the rear.

**△ CAUTION:** This chamber is designed for operation in a conditioned laboratory environment. Operation above 30°C (85°F) or below 16°C (60°F) ambient room temperature is NOT recommended.

### ***Condensate Drain***

---

The chamber has a condensate drain connection on the rear of the chamber. This provides a way to remove condensate that may accumulate in the chamber during low-to-high temperature cycling or when the refrigeration system runs to maintain moderate temperatures. Any time the ambient air is subjected to temperatures below the dew point, moisture will condense out of the air. The effect is ice or frost during low temperature operation. When the chamber is heated above 0°C, the ice or frost will turn into water. The fitting accommodates a ½-inch male pipe thread. The chamber drain water is not under pressure, and is fed by gravity. Therefore, it must empty into an open floor drain. Alternatively, the chamber drain can empty into a condensate pump. You can purchase a condensate pump from suppliers such as Grainger ([www.grainger.com](http://www.grainger.com)).

### ***Input Power Configuration***

---

#### **Overview**

This chamber can be easily configured for operation from a 208 V / 60 Hz or 230 V / 60 Hz, 3 Phase nominal input. Other input voltages and 50 Hz operation are available as special options, and are not covered in these instructions.

Your chamber was configured prior to shipment for the particular voltage that was specified at time of order. These instructions should be used to verify the input voltage configuration prior to installation, or to change the input voltage from one configuration to another.

**⚠ CAUTION:** This chamber must be properly configured for either 208 V or 230 V nominal input. 208 V and 230 V are NOT the same. Do NOT guess! Do NOT assume you have “220 V”. You must verify the exact type of electrical service you have. If there is any doubt, you must consult with a qualified electrician who is familiar with industrial plant wiring. In addition, the input line voltage should be measured while the chamber is operating in a continuous HEAT mode to ensure that the expected nominal voltage of either 208 V  $-5/+10\%$  or 230 V  $\pm 10\%$  is present.



**Figure 2-1 – Location of Input Configuration Terminals on the Electrical Sub Panel**

**NOTE:** Refer to Figure 2-1 for the location of the input configuration terminals on the electrical sub panel that are described below.

### **230 V / 60 Hz Input Configuration**

1. Turn the Main Disconnect switch to the OFF position.
2. Remove the lower door retaining screw located on the right side. Open the lower door.
3. Locate the Control Transformer TR1. Wire number T1 must be connected to the 230 V terminal 4 on Control Transformer TR1.

### **208 V / 60 Hz Input Configuration**

4. Turn the Main Disconnect switch to the OFF position.
5. Remove the lower door retaining screw located on the right side. Open the lower door.
6. Locate the Control Transformer TR1. Wire number T1 must be connected to the 208 V terminal 3 on Control Transformer TR1.

### ***Connection to the Power Source***

---

**⚠ CAUTION:** This chamber should be connected to the AC power source by a qualified electrician who is familiar with industrial plant wiring.

The Main Disconnect Switch on the front panel removes primary power to the entire chamber. All branch circuits on the load side of the Main Disconnect Switch are individually fused. However, your local electrical code may require a separate disconnect switch within sight of the chamber.

### **Power Source Connection**

1. Turn the Disconnect Switch to the OFF position.
2. Remove the lower door retaining screw located on the right side. Open the lower door.
3. Remove the chamber's right side panel.
4. Mount the input wire through the hole on the rear of the chamber, using an appropriate bushing. An additional 5-feet of wire will be needed need to reach to the terminals on the electrical subpanel. The wires will need to pass through the Input Access Hole. This hole is located in the corner of the partition which separates the compressor compartment from the electrical compartment. Three tie points are provided on the side of the chamber to secure the input wiring with tie-wraps.
5. Connect the "Hot" input wires to terminals L1, L2 and L3 on the Main Disconnect Switch.
6. Connect the Ground wire (NOT A NEUTRAL) to the Ground terminal.

### **Phase Sequence**

This chamber has a protective circuit to ensure the proper input power phase sequence. If the chamber does not function with the initial wiring hookup, then reverse two of the input lines.



### Chapter 3 – Operation

#### ***Introduction***

---

The Front Panel Switches control power to the chamber. The Front Panel Lights provide indication of heat and cool functions.

The Limit Controller is a protection device. It turns the chamber OFF if the workspace temperature exceeds either a high temperature or low temperature limit set point.

The Temperature Controller controls the temperature of the chamber. It can function as either a single set point controller or as a programmable profile controller. The Temperature Controller automatically turns the refrigeration system on or off based on the demand for cooling.

**⚠ CAUTION:** This chamber has a crankcase heater to protect the compressor. The chamber must be connected to the power source AND the Main Disconnect Switch must be ON for 3 hours prior to operating the chamber. Although it may be safe to use the chamber immediately, this procedure ensures the longest possible life for the compressor if the chamber has been removed from the power source for more than 24 hours.

#### ***Summary of Chamber Operation***

---

1. Turn the Main Disconnect Switch ON.
2. Enter the appropriate high and low temperature safety limits on the Limit Controller.
3. Enter the desired temperature set point (or program) on the Temperature Controller.
4. Load your test sample in the chamber.
5. Turn the Master Switch ON.

### ***Front Panel Switches and Lights***

---

#### **Main Disconnect Switch**

The Main Disconnect Switch controls power to the entire chamber and provides a mechanical safety interlock to the lower door.

In the ON position (clockwise) primary power is connected. The Temperature Controller, Limit Controller, and (optional) Chart Recorder are always functional when the Main Disconnect Switch is ON, regardless of the Master Switch position. The Main Disconnect Switch should be left ON if the chamber is usually used on a daily basis.

In the OFF position (counter clockwise) primary power is disconnected. The Main Disconnect Switch can be left OFF if the chamber is not used on a daily basis. It can also be locked in the OFF position with a padlock. The knob has a red insert that can be pushed in at the top to reveal the lock-hole.

**△ CAUTION:** This chamber has a crankcase heater to protect the compressor. The chamber must be connected to the power source AND the Main Disconnect Switch must be ON for 3 hours prior to operating the chamber. Although it may be safe to use the chamber immediately, this procedure ensures the longest possible life for the compressor if the chamber has been removed from the power source for more than 24 hours.

#### **Master Switch**

The Master Switch enables all chamber functions. The Master Switch illuminates when it is ON.

#### **Light Switch**

The Light Switch controls the workspace light. The Light Switch illuminates when it is ON.

#### **Heat Light**

The Heat Light will illuminate when the Temperature Controller turns on the heater to maintain the workspace temperature. The Heat Light will cycle on/off as the workspace temperature approaches and reaches the temperature set point.

#### **Cool Light**

The Cool Light will illuminate when the Temperature Controller turns on the cooling valve to maintain the workspace temperature. The Cool Light will cycle on/off as the workspace temperature approaches and reaches the temperature set point.

***Loading the Chamber***

---

**⚠ WARNING:** Do NOT put items in the chamber that could burn or explode at high temperatures. This chamber uses open wire heating elements which generate surface temperatures over 1000°F. This is NOT an explosion-proof chamber.

**⚠ WARNING:** Do NOT put items in the chamber which can emit corrosive vapors or substances.

**⚠ WARNING:** This chamber is NOT a curing oven. There are NO provisions for venting fumes.

**⚠ WARNING:** The chamber door must remain closed while the chamber is operating. If you need to open the door while the chamber is operating, wear safety goggles to prevent the high velocity airflow from blowing particles or objects into your eyes.

**⚠ WARNING:** This chamber operates at extreme temperatures. Avoid contact with air, objects, and surfaces that are hot or cold to prevent severe burns or frostbite. Protective gloves are recommended.

**⚠ CAUTION:** If your test sample is energized, it may be capable of raising the workspace temperature beyond safe limits. This could occur if your test sample exceeds the live load rating of the chamber or if the chamber’s refrigeration system fails. This chamber has a set of contacts that can be used to remove power to your test sample if the Limit Controller’s temperature limits are exceeded.

**⚠ CAUTION:** To prevent damage to your test sample and the chamber’s compressors, do not exceed the live load rating of the chamber.

<b>Live Load Capacity for Model 1027S</b>					
<b>Temp</b>	<b>+23°C</b>	<b>0°C</b>	<b>-10°C</b>	<b>-20°C</b>	<b>-30°C</b>
<b>Watts</b>	4000 W	2800 W	2300 W	1800 W	1250 W

**Port Plugs**

Foam port plugs are provided with a gray silicone surface on one side. The port plug must be inserted with the gray silicone surface facing the inside of the chamber. Port plugs should be considered expendable and be replaced when they no longer provide a good seal.

### **Performance Considerations**

The performance of all chambers is significantly affected by the characteristics of your test sample. Factors include size, weight, material, shape, and power dissipation if energized. The test sample should be placed in the chamber in a manner that allows for air circulation. The air plenum is located on the back wall of the chamber, where air is sucked in from the bottom and exits from the top. You should not place the test sample directly on the chamber floor. It should be placed on the shelf. Multiple test samples should be distributed throughout the chamber to ensure even airflow and minimize temperature gradients. If necessary, additional shelves should be used to evenly distribute the load. Verify that the temperature gradients are within acceptable limits, by measuring the chamber temperature at strategic points using a multipoint thermocouple meter or data logger.

You may find that the temperature throughout the chamber is even, but always different from what the temperature controller indicates. The correct way to adjust what the temperature controller “displays” compared to what is measured at some point other than the controller’s sensor is with the “Calibration Offset” parameter, NOT by recalibrating the controller.

### **Avoiding Moisture**

Any time the ambient air is subjected to temperatures below the dew point, moisture will condense out of the air. The effect is ice or frost during low temperature operation, or water when maintaining over 0°C and cooling is required.

To avoid moisture condensation, make sure the port plugs are inserted at all times. Also, avoid opening the chamber door while the chamber is operating at temperatures below room ambient. When a low temperature test is completed, warm the chamber to at least room ambient before opening the chamber door and before removing your test sample.

### **Internal Test Fixtures**

Some applications require internal fixtures to support test samples and provide a convenient method of connecting wires and sensors. Fixtures must be designed to minimize their impact on chamber functionality and performance.

Fixtures should be designed for easy removal to permit maintenance and cleaning of the chamber. The chamber liner should never be drilled or screwed into. This will compromise the integrity of the liner and permit moisture migration due to condensation into the insulation, which will eventually impact performance and lead to premature rusting of the outer cabinet.

Fixtures should be constructed of stainless steel. This also applies to all screws and fasteners. All welds should be passivated. To prevent rust and corrosion, never use iron or mild steel even if it is painted or plated. Aluminum may be used. However, since the specific heat of aluminum is double that of steel, it represents a greater load and will have more impact on the chamber performance.

Make sure that all connectors, wiring, pc boards, and auxiliary components can withstand the temperature extremes that they will be subjected to. In some cases, these components may not be able to last after repeated tests and should be considered expendable.



## **Chapter 4 - Temperature Controller**

### ***Introduction***

---

The Series F4 Temperature Controller can function as either a single set point controller (static mode) or as a programmable profile controller. A four-line LCD display facilitates setup and programming, and presents informative messages about status, error, and alarm conditions. Digital outputs, profiles, and alarms can be named for easy reference. An Information Key gives you quick information about the pages, menus, parameters and values, as well as error and alarm conditions if they occur. The user-interface is organized into five “pages” of menus.

**⚠ CAUTION:** The Series F4 “Alarm” functions are NOT used in the chamber’s safety system and are NOT connected. TestEquity does NOT recommend using the Series F4 alarm function as the main protection device. The independent EZ-Zone Limit Controller functions as the main protection device.

**⚠ CAUTION:** The Series F4 Temperature Controller has been properly configured by TestEquity to match the chamber’s system requirements and to perform optimally over a wide range of operating conditions. Improper modifications to these setup values can result in erratic performance and unreliable operation. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. Setup examples in the “Series F4 User’s Manual” are NOT applicable to this chamber. If there is any doubt, please call TestEquity before proceeding. The correct values are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.


**⚠ CAUTION:** NEVER select “Full Defaults” in the Series F4 Factory/Test Menu. This will erase all the correct values which are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.

### **Security Features**

The Series F4 Controller has several levels of security to prevent unauthorized users from changing critical configuration parameters. Only the Set Point and Profile menus have “Full Access”. TestEquity has configured all other menus to “Password”, and have protected them with a password.

TestEquity does not recommend that these security levels be changed for most applications. However, there will be times when entry into these menus is necessary. For example, you may need to gain access to Setup Page in order to change from °C to °F display, or to change the time or date. You must call TestEquity at 877-512-3457 or 805-480-0638 to obtain the password.

**Temperature Controller Keys and Displays**

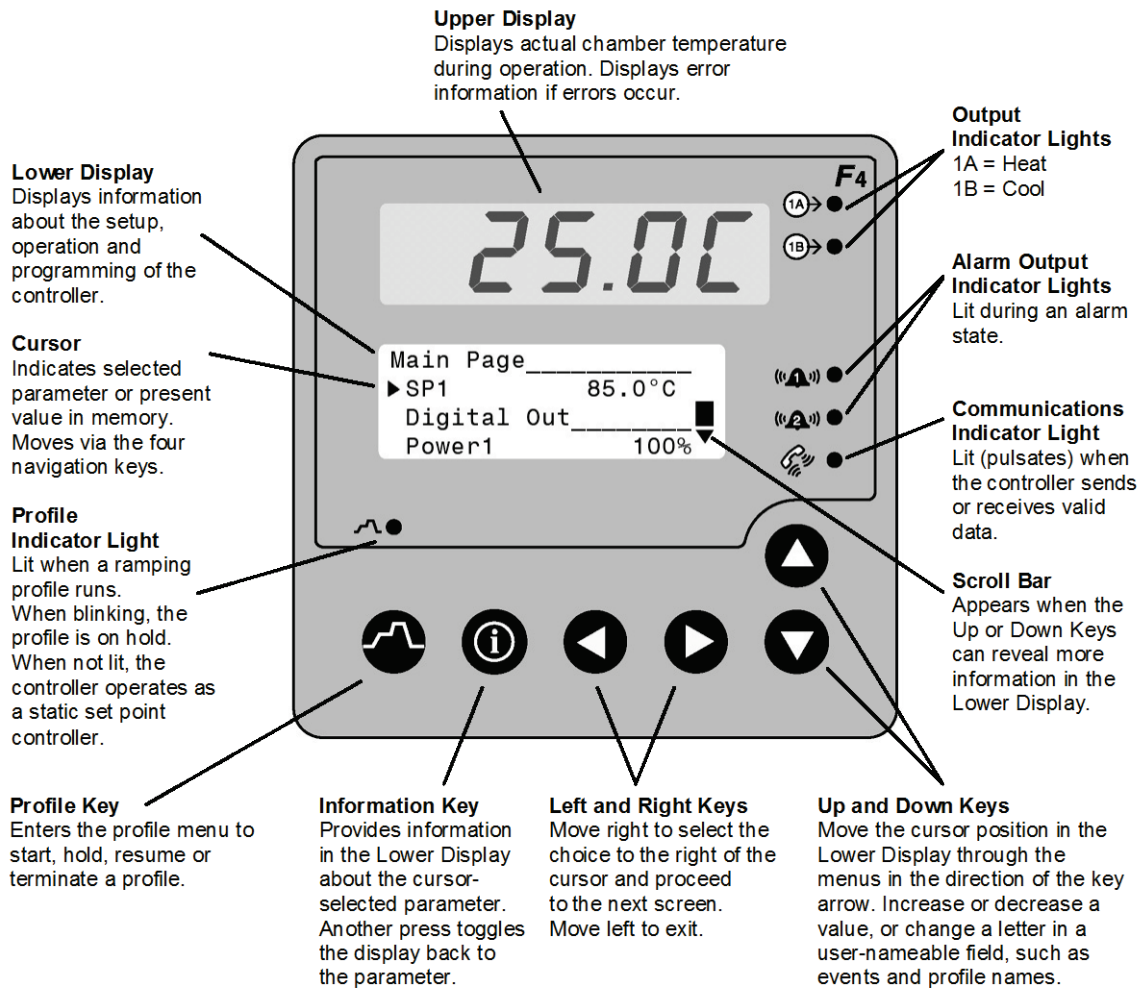

**Figure 4.1 – Temperature Controller Keys and Displays**

To navigate through the menus:

1. Use the ▲ or ▼ key to move the cursor to line up with the item to be selected in a menu on the lower display.
2. Press the ► key to select the item.
3. Enter or change the value, or make a choice with the ▲ or ▼ key.
4. Press the ► key to enter the value or choice.
5. Repeat until you return to the original list.

The ► key again saves the value and proceeds to the next parameter in the series.

The ◀ key saves the value and backs out of the series, and returns to the Main Page.

To edit a parameter, proceed through the series using the ► key without changing values until you find the parameter you want to change. After making the change with the ▲ or ▼ key, you may back using the ◀ key out or proceed using the ► key to the end of the series.

**Main Page**

The Main Page displays manual operating parameters, running program parameters and error messages. It also provides access to the Operations, Profiles, Setup and Factory pages. The following is a list of Main Page parameters and the description of their functions.

Main Page	
Current File	Displayed if running a profile, the name of the profile.
Current Step	Displayed if running a profile, the current step of the profile.
▶ SP1	Static (manual) temperature set point entry. If running a profile, the current set point.
Step Type	Displayed if running a profile, the type of step.
Target SP1	Displayed if running a profile, the target temperature during a ramp step.
WaitFor Status	Displayed if running a profile, the status during a WaitFor step.
Time Remaining	Displayed if running a profile, the remaining time of the current step.
DigitalOut	Status of the event outputs 1 to 8. An “8” indicates when cooling system is ON.
Power1	The % of throttle of the heat (positive number) or cool (negative number) output.
DigitalIn	Status of the digital inputs 1 through 4.
Date	Real-time clock date.
Time	Real-time clock time.
TESTEQUITY 1027S	Identifies the chamber model number.
Go to Operations	Access to Operations Page
Go to Profiles	Access to Profiles Page
Go to Setup	Access to Setup Page. Not displayed if running a profile.
Go to Factory	Access to Factory Page. Not displayed if running a profile.

**Static Set Point Control**

The Temperature Controller is in Static Mode when it is not controlling a Profile. When in a Static Mode, the Profile Indicator Light is off (see Fig. 4.1). The Upper Display shows the actual chamber workspace temperature. The Static Set Point (SP1) prompt is accessed from the Main Page.

To enter a Static Set Point:

1. Press the ▲ or ▼ key to position the Cursor next to the SP1 prompt. You may already be at this prompt.
2. Press the ▶ key once. You will see **Static Set Point1** in the lower display with the current set point indicated below.
3. Press the ▲ or ▼ key to change the temperature set point value.
4. Press the ▶ key once to enter the new temperature set point. You are now back to the Main Page.

Main Page \_\_\_\_\_  
▶ SP1 85.0 °C  
DigitalOut \_\_\_\_\_  
Power1 50%

Static Set Point1: \_\_\_\_\_  
85.0 °C  
▲  
▼ Adjusts Value  
◀ Back ▶ Next

### **Profile Programming**

---

The Series F4 Temperature Controller can be programmed to store up to 256 steps into as many as 10 profiles. You do not need a computer to enter a profile – it can be easily done through the controller's front panel keys. A Profile is a set of instructions programmed as a sequence of steps. The controller handles the profile steps automatically, in sequence. As many as 40 different profiles and a total of 256 steps can be stored in non-volatile memory. The 256 steps are grouped by profile. So, one profile could have 256 steps; or 39 profiles could have 6 steps and one could have 22; or 32 profiles could have eight steps each. The maximum number of steps is 256, and the maximum number of profiles is 40.

### **Step Types**

Use the six available step types – Autostart, Ramp Time, Ramp Rate, Soak, Jump and End – to create simple or complex profiles involving all inputs and outputs. The Series F4 prompts you to define each step's properties.

#### **Autostart Step**

The use of an Autostart step in a profile is optional. Autostart pauses a profile until the specified date or day, and time (of a 24-hour-clock). Define the Autostart by choosing:

- Day (of the week) or Date,
- Time

To invoke an Autostart step in a profile, you must activate the profile via the Profile Key and select the Autostart step.

#### **Ramp Time Step**

Ramp Time changes the set point to a new value in a chosen period of time. Define the Ramp Time step by choosing:

- \*Wait for an event or process value
- Event outputs 1 through 7 to turn ON or OFF (For controlling the power to remote devices.)
- Time (in hours, minutes and seconds)
- Temperature Set Point
- PID set (One of five sets of heat/cool PID parameters. Normally, just leave at PID Set 1.)
- \*\*Guaranteed Soak

#### **Ramp Rate Step**

Ramp Rate changes the set point to a new value in a chosen rate of time. Define the Ramp Rate step by choosing:

- \*Wait for an event or process value
- Event outputs 1 through 7 to turn ON or OFF (For controlling the power to remote devices.)
- Rate (in degrees per minute)
- Temperature Set Point
- PID set (One of five sets of heat/cool PID parameters. Normally, just leave at PID Set 1.)
- \*\*Guaranteed Soak

### Soak Step

Soak maintains the set point from the previous step for a chosen time in hours, minutes and seconds. Define the Soak step by choosing:

- \*Wait for an event or process value
- Event outputs 1 through 7 to turn ON or OFF (For controlling the power to remote devices.)
- Time
- PID set (One of five sets of heat/cool PID parameters. Normally, just leave at PID Set 1.)
- \*\*Guaranteed Soak

### Jump Step

Jump initiates another step or profile. Define the Jump step by choosing:

- Profile to jump to;
- Step to jump to; and
- Number of Repeats

**NOTE:** If a power-out condition occurs during a profile and more than 20 jump steps are stored in the F4's Profile Program memory, the controller will terminate the profile and turn off all outputs if Continue, Hold or Terminate was selected as the Power Out action. If Profile Reset or Go to Idle Set Point was selected, the controller will take those actions. A pop-up message will warn of this when the 21st jump step is programmed

### End Step

End terminates the profile in a chosen state. All profiles must have an End step. It cannot be deleted or changed to another step type. Define the End by choosing Hold, Control Off, All Off or Idle end state.

**NOTE:** TestEquity recommends having the end step type to be Hold or Idle. TestEquity does NOT recommend using an end step type of Control Off or All Off. This does not turn off the chamber fan. The chamber temperature can reach +55°C just from heat generated by the fan, and even higher if your test sample is energized.

### \*Wait For step option

The use of Wait For in a profile is optional. Ramp Time, Ramp Rate and Soak steps can be programmed to wait for a particular chamber temperature or event input condition. The wait conditions must be satisfied before the time clock and the step activity proceeds. Digital inputs must first be configured in the System Menu as Wait For Events, with the condition to be met also specified. Then, to wait for this digital input, you must specify On, meaning the condition as configured in the Setup Page, or Off, meaning the opposite of that condition. The digital inputs have been configured to Off by TestEquity, so this option will not show unless reconfigured.

### \*\*Guaranteed Soak step option

The use of Guaranteed Soak in a profile is optional. The Guaranteed Soak step requires the chamber temperature to be at the set point temperature, within the Guaranteed Soak Band value, before the time clock and the step activity proceeds. The Guaranteed Soak Band is configured by TestEquity for 3.0°C, and this can be changed in the System Menu.

## How to Program a New Profile

<p>1. <b>Go to the Profiles Page.</b> Move the cursor down the Main Page to Go to Profiles, then press the ► key.</p>	<p>Main Page _____ ► Go to Profiles   ▲ Go to Setup       ■ Go to Factory     ▼</p>
<p>2. <b>Create a new Profile.</b> The cursor will be on Create Profile. Press the ► key.</p>	<p>Main&gt;Profile _____ ► Create Profile   ■ Edit Profile       ▼ Delete Profile</p>
<p>3. <b>Name the profile.</b> You can name your profiles for easy reference if desired. Names can have up to 10 characters. You can also use one of the default profile names (ex. Profile1), and skip this step. To name a profile:</p> <ul style="list-style-type: none"> <li>• Press ► to enter the name space and the first position.</li> <li>• Press the ▲ or ▼ to scroll through the alphabet and stop at the letter or number desired.</li> <li>• Press ► to move to the next position.</li> <li>• Continue until the name is complete, or until you move through the name space into the next screen.</li> <li>• Press ► to save the name of the profile.</li> </ul>	<p>Choose to Name: _____ No ► Yes</p> <p>Enter Profile Name: _ <u>PROFILE1</u> ▲ ▼ Adjusts Char ◀▶ Save Changes</p>
<p>4. <b>Choose the step type.</b> • There are six step types, each of which must be defined through different parameters. (See “Step Types,” earlier in this chapter.)</p>	<p>Choose Step1 Type: _____ Autostart ► Ramp time       ■ Ramp Rate         ▼</p>
<p>5. <b>Define each step type.</b> • The Series F4 prompts you to define the parameters of each step type. (See “Step Types,” earlier in this chapter.)</p>	<p>Choose to wait: _____ ► Step does not wait Step waits for...</p> <p>Enter Ramp Time: _____ 00:00:01 (H:M:S) ▲ ▼ Adjusts Digit ◀▶ Save Changes</p> <p>Enter Ch1 SP: _____ 85.0 °C ▲ ▼ Adjusts Value ◀ Back   ▶ Next</p>
<p>6. <b>Choose the end-state.</b> • All profiles end with an End step, which is preprogrammed into the new profile. (See “End Step,” earlier in this chapter.)</p>	<p>Choose End State: _____ Control Off       ▲ All Off           ■ ► Idle</p>
<p>7. <b>Save your settings.</b> • Press ◀ to exit the Profiles Page. • After exiting the Profiles Page, choose ▲ to save profile data.</p>	<p>Save profile data or restore values? ▼ Restore   ▲ Save</p>

## Programming Hints

- The first step in a program should be an initialization step of 1-second, usually at a set point of +23°C.
- The next to last step establishes a condition to end on. For example, you may want to end the program by holding at +23°C, so this step would be to go to +23°C.
- The final step of every profile is End. You cannot delete an End step or change it to another type, but you can insert new steps before it.
- TestEquity recommends having the end step type to be Hold or Idle.
- TestEquity does NOT recommend using an end step type of All Off or Control Off. This does not turn off the chamber fan. The chamber temperature can reach +55°C just from heat generated by the fan, and even higher if your test sample is energized. See Protecting an Energized Test Sample in Chapter 5 for important information regarding energized test samples.

## Profile Key

The  Profile key:

- Initiates the profile mode;
- Initiates the Hold-profile state;
- Initiates the Resume-profile command;
- Initiates the Terminate-profile command.

The Profile Key functions only from the Main Page.

## How to Start a Profile

To initiate the profile mode, press the  Profile key and answer the questions that follow.

<p>1. <b>Press the Profile key to enter the Profile Control menu.</b></p> <ul style="list-style-type: none"> <li>• The Profile Indicator will begin blinking.</li> <li>• Press the ▲ key for Yes.</li> </ul>	<p>Start a Profile?</p> <p>▼ No    ▲ Yes</p>
<p>2. <b>Select the desired stored profile.</b></p> <ul style="list-style-type: none"> <li>• Press the ▲ or ▼ to scroll through the list of stored profiles.</li> <li>• Press ► to select the desired profile.</li> </ul>	<p>Start Profile: _____</p> <p>Profile1</p> <p>► Profile2    ▣</p> <p>Profile3    ▼</p>
<p>3. <b>Select the desired step to start on.</b></p> <ul style="list-style-type: none"> <li>• Press the ▲ or ▼ to scroll through the list of steps. Generally you would start on Step 1, but you can also start on any other step.</li> <li>• Press ► to select the desired start step and the profile will begin to run. The Profile Indicator will stay lit.</li> </ul>	<p>Start: _____</p> <p>► Step 1 Ramp Time    ▣</p> <p>Step 2 Soak    ▣</p> <p>Step 3 Ramp Time    ▼</p> <p>Main Page _____</p> <p>► Profile 2 Running    ▣</p> <p>Step 1    ▣</p> <p>SP1            85.0°C    ▼</p>

While running a profile, the Main Page on the lower display will keep you informed about the progress of the profile. Use the ▲ or ▼ key to scroll through the list of running profile parameters. You cannot manually change any operating condition while the profile is running.

## How to Hold/Resume a Running Profile

<p>1. <b>To Hold a running profile, press the Profile key to enter the Profile Control menu.</b></p> <ul style="list-style-type: none"> <li>• Then press ▲ or ▼ to make your choice for Hold.</li> <li>• Press ► to select Hold.</li> <li>• The Main Page will appear with a profile status of Holding. The Profile Indicator will be off.</li> </ul>	<pre> Hold Profile: _____   Don't Hold   ► Hold   Terminate  Main Page _____   ► Profile 2   Holding     Step           2     SP1           23.0°C ▼                     </pre>
<p>2. <b>To Resume profile on hold, press the Profile key to enter the Resume Profile menu.</b></p> <ul style="list-style-type: none"> <li>• Then press ▲ or ▼ to make your choice for Resume.</li> <li>• Press ► to select Resume.</li> </ul>	<pre> Resume Profile: _____   Continue Holding   ► Resume   Terminate                     </pre>

While a profile is on Hold, the current set point can be adjusted at the SP1 prompt on the Main Page. When a profile is resumed during a Ramp step, the controller uses the Static Set Point from the Main Page to calculate the rate of change needed to get to the set point at the end of the step. When a profile is resumed in a soak step, the new set point value will be used as the soak value for the time remaining in the step.

## How to Terminate a Running/Holding Profile

<p>1. <b>Press the Profile key while the profile is running to enter the Resume Control menu.</b></p> <ul style="list-style-type: none"> <li>• Then press ▲ or ▼ to make your choice for Terminate.</li> <li>• Press ► to select Terminate.</li> </ul>	<pre> Hold Profile: _____   Don't Hold   Hold   ► Terminate                     </pre>
--	--

If you manually terminate a running profile, the profile ends with a set point of Off. This does not turn off the chamber fan. The chamber temperature can reach +55°C just from heat generated by the fan, and even higher if your test sample is energized. See Protecting an Energized Test Sample in Chapter 5 for important information regarding energized test samples.

## How to Delete or Re-Name a Profile

<p>1. <b>Go to the Profiles Page.</b> Move the cursor down the Main Page to Go to Profiles, then press the ► key.</p>	<pre> Main Page _____   ► Go to Profiles  ▲     Go to Setup     ▼     Go to Factory                     </pre>
<p>2. <b>Choose Delete or Re-Name.</b></p> <ul style="list-style-type: none"> <li>• Press ▲ or ▼ to scroll through your choice.</li> <li>• Press ► to select your choice.</li> <li>• The controller will prompt you to select the profile you want to delete or re-name.</li> </ul>	<pre> Main&gt;Profile _____   Edit Profile      ▲   ► Delete Profile  ▼   Re-Name Profile                     </pre>



## How to Edit a Profile

<p>1. <b>Go to the Profiles Page.</b> Move the cursor down the Main Page to Go to Profiles, then press the ► key.</p>	<p>Main Page _____ ► Go to Profiles Go to Setup Go to Factory</p>
<p>2. <b>Choose Edit Profile.</b> • Press the ▼ key to choose on Edit Profile. • Then press the ► key.</p>	<p>Main&gt;Profile _____ Create Profile ► Edit Profile Delete Profile</p>
<p>3. <b>Select the desired stored profile to edit.</b> • Press the ▲ or ▼ to scroll through the list of stored profiles. • Press ► to select the desired profile.</p>	<p>...Edit Profile: _____ Profile1 ► Profile2 Profile3</p>
<p>4. <b>Choose how to edit the step.</b> • Press the ▲ or ▼ to scroll through the list of step edit choices. • Press ► to select your choice.</p>	<p>Choose to: _____ Insert Step ► Edit Step Delete Step Done</p>
<p>5. <b>To edit a step.</b> • Press the ▲ or ▼ to scroll through the list of steps you want to edit. • Press ► to scroll through the step parameters and make any desired changes.</p>	<p>Edit Step: _____ ► Step 1 Ramp Time Step 2 Soak Step 3 Ramp Time</p>
<p>6. <b>To insert a step.</b> • Choose Edit Profile (see step 4 above) • Press the ▲ or ▼ to scroll through the number of the step that the new step will precede. • Press ► to enter the new step and follow the step parameter prompts.</p>	<p>Insert Before: _____ Step 1 Ramp Time ► Step 2 Soak Step 3 Ramp Time</p>
<p>7. <b>To delete a step.</b> • Choose Delete Step (see step 4 above) • Press the ▲ or ▼ to scroll through the number of the step you want to delete. • Press ► to delete the step.</p>	<p>Delete Step: _____ Step 1 Ramp Time ► Step 2 Soak Step 3 Ramp Time</p>
<p>8. <b>Save your settings.</b> • Press ◀ successively to exit the Profiles Page. • After exiting the Profiles Page, choose ▲ to save the new profile values, or ▼ to restore the old values.</p>	<p>Save profile data or restore values? ▼ Restore ▲ Save</p>

- Inserting or deleting a step will renumber all steps that follow.
- A Jump Step that jumps to an End Step cannot be deleted.
- An End Step cannot be deleted.
- Inserting a new ramp step usually requires inserting an associated soak step.
- Deleting a ramp step usually requires deleting the associated soak step.

## Profile Examples

The following are examples of two typical profiles.

Profile Summary: -20°C to 85°C, no ramps, 30 minute soak time, 4 cycles. End with program hold at +23°C.

Step Number	Step Type	Date Day, Time	Wait for	1	2	3	4	5	6	7	Time H:M:S	Rate	Ch1 SP	PID Set	Guar. Soak	Jump to Profile	Step	Repeats	End Type
1	Ramp Time	—	>	>	>	>	>	>	>	>	00:00:01	—	23.0	1	—	—	—	—	—
2	Ramp Time	—	>	>	>	>	>	>	>	>	00:00:01	—	-20.0	1	—	—	—	—	—
3	Soak	—	>	>	>	>	>	>	>	>	00:30:00	—	—	1	Yes	—	—	—	—
4	Ramp Time	—	>	>	>	>	>	>	>	>	00:00:01	—	85.0	1	—	—	—	—	—
5	Soak	—	>	>	>	>	>	>	>	>	00:30:00	—	—	1	Yes	—	—	—	—
6	Jump	—	>	>	>	>	>	>	>	>	—	—	—	—	—	Name	2	3	—
7	Ramp Time	—	>	>	>	>	>	>	>	>	00:00:01	—	23.0	1	—	—	—	—	—
8	End	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	Hold

### Step Description

- Establishes a recommended initialization step. Goes to +23°C as quickly as possible.
- Goes to -20°C as quickly as possible.
- Will hold for 30 minutes. Time will not start until chamber reaches -17°C (within the 3° Guaranteed Soak Band\*).
- Goes to +85°C as quickly as possible.
- Will hold for 30 minutes. Time will not start until chamber reaches +82°C (within the 3° Guaranteed Soak Band\*).
- Jumps back to step 2. Repeats this 3-times, for a total of 4-cycles.
- After all cycles are completed, establishes the condition to end on. Goes to +23°C as quickly as possible.
- Holds at +23°C indefinitely, until program is manually stopped.

Profile Summary: +50°C to 0°C, 1°C/minute ramp, 1 hour soak time, 100 cycles. Test sample turned ON/OFF depending on step. End with return to +23°C manual set point.

Step Number	Step Type	Date Day, Time	Wait for	1	2	3	4	5	6	7	Time H:M:S	Rate	Ch1 SP	PID Set	Guar. Soak	Jump to Profile	Step	Repeats	End Type
1	Ramp Time	—	>	On	>	>	>	>	>	>	00:00:01	—	23.0	1	—	—	—	—	—
2	Ramp Rate	—	>	On	>	>	>	>	>	>	—	1.0	50.0	1	—	—	—	—	—
3	Soak	—	>	On	>	>	>	>	>	>	01:00:00	—	—	1	No	—	—	—	—
4	Ramp Rate	—	>	Off	>	>	>	>	>	>	—	1.0	0.0	1	—	—	—	—	—
5	Soak	—	>	Off	>	>	>	>	>	>	01:00:00	—	—	1	No	—	—	—	—
6	Jump	—	>	>	>	>	>	>	>	>	—	—	—	—	—	Name	2	99	—
7	Ramp Rate	—	>	Off	>	>	>	>	>	>	—	1.0	23.0	1	—	—	—	—	—
8	End	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	Idle

### Step Description

- Establishes a recommended initialization step. Goes to +23°C as quickly as possible. Test sample is turned ON via Event 1.
- Goes to +50°C at a controlled rate of 1°C per minute. Test sample is turned ON via Event 1.
- Will hold for 1 hour. Test sample remains ON via Event 1.
- Goes to 0°C at a controlled rate of 1°C per minute. Test sample is turned OFF via Event 1.
- Will hold for 1 hour. Test sample remains OFF via Event 1.
- Jumps back to step 2. Repeats this 3-times, for a total of 4-cycles.
- After all cycles are completed, establishes the condition to end on. Goes to +23°C at a controlled rate of 1°C per minute. Test sample is turned OFF via Event 1.
- End of program. Controller returns to a +23°C manual set point. Test sample is remains OFF via Event 1.

### Notes

- \* Guaranteed Soak Band is set at the factory for 3.0°C. Can be changed in the System Menu.
- > Means no entry or selection is required. Just scroll through this prompt to the next prompt.
- Means prompt does not show for this step type.

### **Digital Event Outputs**

---

The Temperature Controller has digital outputs which can be configured as Event Outputs to turn remote devices on and off. There are seven Event Outputs which are available for customer use. Output number eight is configured to control the refrigeration compressors and is not available for customer use. The Event Outputs are accessed from the Main Page.

To control the Event Outputs:

1. Press the ▲ or ▼ key to position the Cursor next to the DigitalOut prompt.
2. Press the ► key once. You will see Choose Event Output prompt in the lower display.
3. Press the ▲ or ▼ key to position the Cursor next to the EventOutput prompt which you want to change. You will be able to select from EventOutput1 through EventOutput7.
4. Press the ► key once to select the desired EventOutput. Then, press the ▲ or ▼ key to select On or Off.
5. Press the ► key once to return to the Choose Event Output prompt.
6. Press the ◀ key once to return back to the Main Page.

### **Digital Output Connections**

See page 12.9 of the “Series F4 User’s Manual” for details on how to connect to the Digital Outputs.

### **Event Board Option**

Your chamber may have been ordered with the Event Board option. The event board contains solid state relays to control AC operated devices, such as power to a test sample. The solid state relays are rated for 24 to 240 VAC, 3.0 Amps. However, TestEquity recommends derating the maximum current to 2.5 Amps. The solid state relay mounting board is UL recognized/CSA certified for 120 VAC max. with the board-mounted fuses; 250 VAC max. with a #22 solid copper jumper wire instead of the fuses.

### **Connecting to the Event Board**

1. Turn the Main Disconnect switch to the OFF position.
2. Remove the lower door retaining screw located on the right side. Open the lower door.
3. The Event Board is located next to the electrical subpanel. Connect to the events as follows:

<b>Event Output</b>	<b>Event Board Terminals</b>
Event 1	1, 2
Event 2	3, 4
Event 3	5, 6
Event 4	7, 8
Event 5	9, 10
Event 6	11, 12
Event 7	13, 14

4. The event outputs are just switches. You must provide power from an external source.
5. A 1/2-inch conduit hole is provided on the left side of the lower door to route your wires through. Use the appropriate wire/cable management fittings.

### ***Operations Page***

---

The Operations Page provides access to menus for control tuning (PID) and controller alarms. TestEquity has configured the security to require a password for access to all parameters in the Operations Page. You must call TestEquity at 877-512-3457 or 805-480-0638 to obtain the password.

**⚠ CAUTION:** The Series F4 Temperature Controller “Alarm” functions are NOT used in the chamber’s safety system and are NOT connected. TestEquity does NOT recommend using the Series F4 alarm function as the main protection device. The independent EZ-Zone Limit Controller functions as the main protection device.

**⚠ CAUTION:** The Series F4 Temperature Controller PID values have been properly configured by TestEquity to match the chamber’s system requirements and to perform optimally over a wide range of operating conditions. Improper modifications to these values can result in erratic performance and unreliable operation. Do not attempt to modify the PID values, unless you thoroughly understand what you are doing. Setup examples in the “Series F4 User’s Manual” are NOT applicable to this chamber. If there is any doubt, please call TestEquity before proceeding. The correct values are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.

**⚠ CAUTION:** The Autotune PID function is not appropriate for use in this chamber. Using this function will result in tuning values that will not work correctly.

### ***Setup Page***

---

The Setup Page provides access to menus for configuring the controller hardware. TestEquity has configured the security to require a password for access to the Setup Page. However, there will be times when entry into these menus is necessary. For example, you may need to gain access to Setup Page in order to change from °C to °F display, or to change the time or date. You must call TestEquity at 877-512-3457 or 805-480-0638 to obtain the password.

**⚠ CAUTION:** The Series F4 Temperature Controller setup values have been properly configured by TestEquity to match the chamber’s system requirements and to perform optimally over a wide range of operating conditions. Improper modifications to these values can result in erratic performance and unreliable operation. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. Setup examples in the “Series F4 User’s Manual” are NOT applicable to this chamber. If there is any doubt, please call TestEquity before proceeding. The correct values are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.

### **Factory Page**

---

The Factory Page provides access to menus for controller diagnostics and calibration. TestEquity has configured the security to require a password for access to the Setup Page. However, there will be times when entry into these menus is necessary. For example, you may need to gain access to Factory Page in order to perform a calibration, or to change the security password. You must call TestEquity at 877-512-3457 or 805-480-0638 to obtain the password.

**⚠ CAUTION:** NEVER select “Full Defaults” in the Factory/Test Menu. This will erase all the correct values which are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.

### **Computer Interface**

---

**⚠ CAUTION:** Every setting in the F4 Controller can be accessed via the computer interface. Improper modifications to configuration settings can result in erratic performance and unreliable operation. Setup examples in the “Series F4 User’s Manual” are NOT applicable to this chamber. The correct values are documented in the “Series F4 Temperature Controller Setup Parameters” section of this manual.

### **RS-232C**

The F4 Temperature Controller has an RS-232C interface. A DB-9 connector is located on the rear panel. It is wired to accommodate a null-modem cable. To communicate with the controller from a PC, you need to run software that uses the Modbus RTU protocol. Each controller function has a “register” number which can be read or written to (when applicable). These registers are listed Chapter Seven of the “Series F4 User’s Manual”. RS-232C Modbus programming resources can be downloaded from <http://www.testequity.com/RS232> .

### **Common Modbus Registers**

- The actual chamber temperature reading is Modbus register 100 (Input 1 Value).
- The static temperature set point is Modbus register 300 (Set Point 1).
- The temperature set point during a profile is Modbus register 4122 (Set Point 1, Current Profile Status).
- The decimal points are implied. For example, 1005 is actually 100.5 and -230 is -23.0.

### **GPIB (optional)**

The optional GPIB interface consists of an internal board which converts the F4 controller’s serial interface to GPIB. Chambers with a GPIB interface have a GPIB connector in place of the RS-232C connector. GPIB programming resources and LabVIEW drivers can be downloaded <http://www.testequity.com/GPIB> .

### **Ethernet (optional)**

The optional Ethernet interface, model TE-1055, consists of an external converter box that connects to the chamber’s RS-232C interface. Ethernet programming resources can be downloaded <http://www.testequity.com/ETHERNET> .



## Chapter 5 - Limit Controller

### *Introduction*

---

The EZ-Zone Limit Controller is a protection device. It turns the chamber OFF if the workspace temperature exceeds either a high temperature or low temperature limit. You can set these limits to correspond to the maximum and minimum temperature that your test sample can safely withstand. This provides protection against someone setting the F4 Controller to a temperature that is unsafe for the test sample. It also provides protection in the unlikely event of a chamber system component failure. The Limit Controller has its own temperature sensor (thermocouple) and functions completely independent of the F4 Controller.

This section provides a brief overview on how to operate the Limit Controller. For more detailed instructions, see the “EZ-Zone User’s Manual”.

**⚠ CAUTION:** The “EZ-Zone User’s Manual” is a general manual and is written by the manufacturer, Watlow, for a wide variety of applications and configurations. Not all features or functions are applicable. Only the capabilities of a model PM6L1AJ-AAAABAA are applicable.

**⚠ CAUTION:** The EZ-Zone Limit Controller has been properly configured by TestEquity to match the chamber’s system requirements. Improper modifications to these setup values can result in unreliable and unsafe operation. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. The correct values are documented in the “EZ-Zone Limit Controller Setup Parameters” section of this manual.

**⚠ CAUTION:** Always verify that the Limit Controller’s high and low limits are set to temperatures that are appropriate for your test sample.

**⚠ CAUTION:** If your test sample is energized, it may be capable of raising the workspace temperature beyond safe limits. This could occur if your test sample exceeds the live load rating of the chamber or if the chamber’s refrigeration system fails. This chamber has a set of contacts that can be used to remove power to your test sample if the Limit Controller’s temperature limits are exceeded.

## Limit Controller Keys and Displays

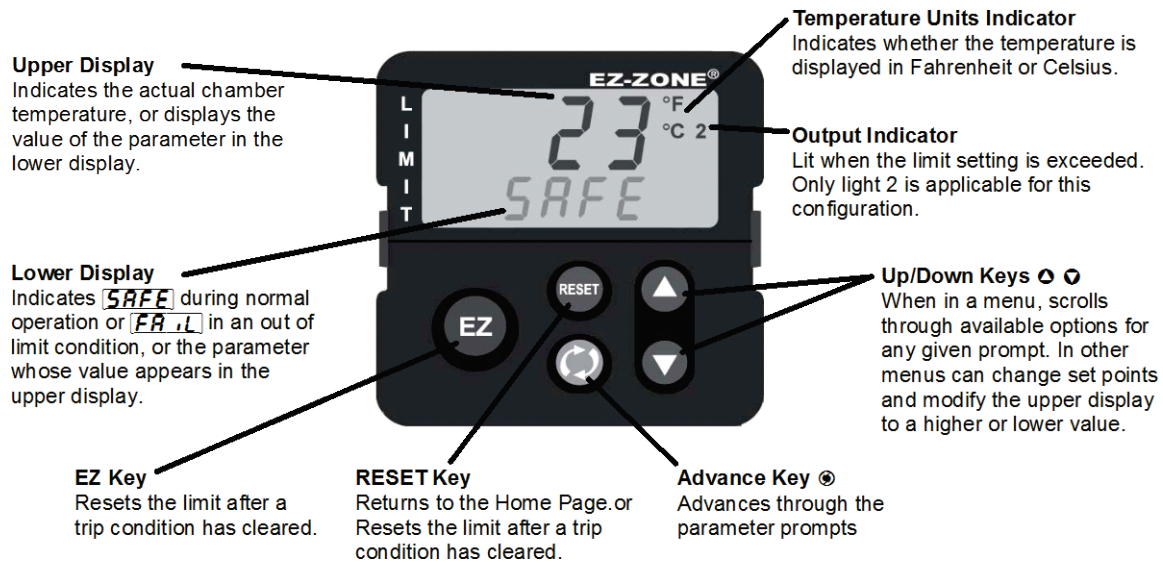


Figure 5.1 – Limit Controller Keys and Displays

### How to Set the High and Low Temperature Safety Limits

1. Press the **⊙** key once to get the **LLS** prompt in the lower display. This is the Low Limit Set Point prompt.
2. Press the **▲** or **▼** key to enter the desired Low Limit Set Point in the upper display. Make sure it is lower than your actual chamber temperature set point, and at least below room temperature to prevent nuisance tripping.
3. Press the **⊙** key once again to get the **LhS** prompt in the lower display. This is the High Limit Set Point prompt.
4. Press the **▲** or **▼** key to enter the desired High Limit Set Point in the upper display. Make sure it is higher than your actual chamber temperature set point to prevent nuisance tripping.
5. Press the RESET Key to return to the Home Page.
6. The upper display will show the actual chamber temperature while the lower display will show **SAFE** as long as the limits are not exceeded.

### Resetting an Out of Limit Condition

If the limit is exceeded, the Limit Controller will flash **L h I** (high limit) or **L l I** (low limit) in the upper display and **ALLO** in the lower display, alternating with the actual chamber temperature in the upper display and **FAIL** in the lower display. It will also shut down all chamber functions. The Limit Controller cannot be reset until the temperature returns to within the limit set points. Then, you must press the RESET or EZ Key to resume normal operation.

### Silencing the Audible Alarm

Turning off the MASTER switch on the chamber front panel lets you temporarily turn off the Audible Alarm, even though the High or Low Limit condition may still exist.



## Protecting an Energized Test Sample

If your test sample is energized, it may be capable of raising the workspace temperature beyond safe limits. This could occur if your test sample exceeds the live load rating of the chamber or if the chamber's refrigeration system fails.

This chamber has a set of safety contacts that can be used to remove power to your test sample if the Limit Controller's temperature limits are exceeded.

The safety contacts are rated as follows:

Resistive: 10 A, 250 VAC or 10 A, 28 VDC

Inductive: 7 A, 250 VAC

To access the safety contacts:

1. Turn the Main Disconnect Switch to the OFF position.
2. Remove the lower door retaining screw located on the right side. Open the lower door.
3. Locate terminal block TB3 on the electrical sub panel. Connections to the safety contacts are at terminals A1 and A2 on terminal strip TB3.

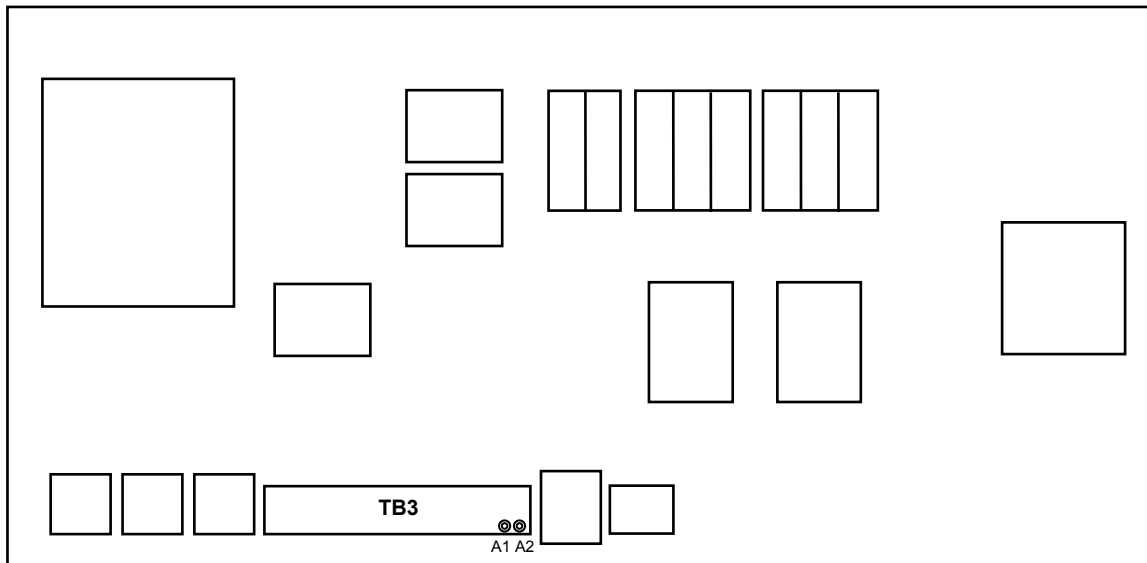


Figure 5-2 – Location of Safety Contact Connections on the Electrical Sub Panel



## Chapter 6 – Frequently Asked Questions

### **The input voltage label says 230 (or 208) VAC. I thought I had 220 (or 240) VAC. Is that ok?**

220 V is a misnomer—there is no such standard as nominal 220 V in the United States. You must verify the exact type of electrical service you have. If there is any doubt, you must consult with a qualified electrician who is familiar with industrial plant wiring. In addition, the input line voltage should be measured while the chamber is operating in a continuous HEAT mode to ensure that the expected nominal voltage of either 208 V  $-5/+10\%$  or 230 V  $\pm 10\%$  is present. Also, make sure the chamber is properly configured for either 208 V or 230 V nominal input as described in Chapter 2 - Input Power Configuration. If you have a 208 V line that measures under 198 V, the chamber will require boost transformers. If you have a 240 V line that measures over 252 V (a 240 V line which is 10% high could measure up to 264 V), the chamber will require bucking transformers.

### **Why doesn't the chamber come with a power cord and plug?**

Most local electrical codes require permanent wiring for this type of equipment. If used as a portable device, a flexible wire with a plug may be acceptable, but local codes may limit the length to 6 feet. TestEquity recommends that the appropriate method for your installation be determined by a qualified electrician who is familiar with industrial plant wiring.

### **I need to send the chamber outside North America. Will it work with their power?**

Outside North America, most countries have 50 Hz. Standard three phase voltage systems in most 50 Hz countries are typically 380 V or 400 V. Please call TestEquity for details on voltage reducing transformers for 50 Hz operation. Note that the cooling performance will be reduced by 17% at 50 Hz.

### **Why does my chamber heat or cool slower than the published specifications?**

Performance is significantly affected by the characteristics of your test sample. Factors include size, weight, material, shape, and power dissipation if energized. The test sample should be placed in the chamber in a manner that allows for air circulation. You should not place the test sample directly on the chamber floor. It should be placed on the shelf. Multiple test samples should be distributed throughout the chamber to ensure even airflow and minimize temperature gradients. If necessary, additional shelves should be used to evenly distribute the load. You can determine if the chamber is operating properly by following the procedure in “How to verify the chamber performance”.

### **How can I modify the chamber to cool faster?**

Unfortunately, there is little you can do to improve upon the designed-in performance. TestEquity does NOT recommend using CO<sub>2</sub> or LN<sub>2</sub> in this chamber to achieve faster cooling due to reliability and safety considerations, so it is NOT an available option. Modifying the chamber to add CO<sub>2</sub> or LN<sub>2</sub> will void the warranty.

---

## Chapter 6 – Frequently Asked Questions

---

### **Why is there water/ice/snow in the chamber?**

Any time the ambient air is subjected to temperatures below the dew point, moisture will condense out of the air. The effect is ice or frost during low temperature operation. When the chamber is heated above 0°C, the ice or frost will turn into water. To avoid moisture condensation, make sure the port plugs are inserted at all times. Also, avoid opening the chamber door while the chamber is operating at temperatures below room ambient. When a low temperature test is completed, warm the chamber to at least room ambient before opening the chamber door and before removing your test sample.

### **My test specification requires convection heat only. Can I turn the circulator motor off?**

NO! This will damage the heating and refrigeration systems and void the warranty. You need a “gravity convection oven” for that kind of test.

### **How accurate is the chamber?**

That’s a loaded question! There is no “chamber accuracy” specification as such. The answer requires an understanding of several performance parameters.

Control Tolerance – The Temperature Controller uses a thermocouple control sensor, which is located in the discharge airflow. Control tolerance is a measure of how much the temperature varies after stabilization at the control sensor. It is a measure of the relative variations, NOT the absolute accuracy of the readout. The control tolerance specification for this chamber is  $\pm 0.5^{\circ}\text{C}$ , or a total of  $1^{\circ}\text{C}$ . For example, the temperature set point may be  $-25.0^{\circ}\text{C}$ . The actual temperature varies between  $-25.4^{\circ}\text{C}$  and  $-24.5^{\circ}\text{C}$ . This corresponds to  $-0.4^{\circ}\text{C}$  and  $+0.5^{\circ}\text{C}$  or a total of  $0.9^{\circ}\text{C}$  of RELATIVE variations. These specifications are for an empty chamber. The addition of a test sample may effect the control variations. In some instances, the test sample will reduce these variations.

Uniformity – Also known as Gradients. This is a measure of variations in temperature at different locations throughout the chamber interior, at the same time, after stabilization. The uniformity specification for this chamber is  $\pm 1.0^{\circ}\text{C}$  or a total of  $2^{\circ}\text{C}$ , when measured at least 2" away from the chamber interior walls. These specifications are for an empty chamber. The addition of a test sample may affect the temperature uniformity. For example, an energized test sample will produce a higher temperature near the sample.

Controller Accuracy – This is the ability of the temperature controller to accurately display a temperature measurement when compared to a standard. The controller display accuracy is  $\pm 1.66^{\circ}\text{C}$ . However, the total measurement accuracy in the chamber includes the thermocouple sensor wire accuracy. Thermocouple wire accuracy is  $\pm 1^{\circ}\text{C}$  or 0.75% of reading, whichever is greater. Therefore, total system accuracy over the chamber’s operating range can be as much as  $\pm 2.66^{\circ}\text{C}$ , although the typical accuracy is often better than  $\pm 1.0^{\circ}\text{C}$ .

### **Can I tilt the chamber to move it?**

You should be able to tilt the chamber 45 degrees to move it. After tilting it and moving it into place, perform the steps as outlined in “How to inspect the refrigeration machinery compartment” and “How to check the refrigerant charge” before placing the chamber back into service to make sure that no damage has occurred.

---

## Chapter 6 – Frequently Asked Questions

---

### **I'm not going to use the chamber for a while. Is there anything I should do to prepare it for storage?**

Perform ALL the steps in the Preventive Maintenance Schedule before placing the chamber into storage. This will ensure that the chamber will be ready to operate when it is taken out of storage. If the chamber has a problem and is still under warranty, these problems should be resolved before being placed into storage, since the warranty period starts from the date of shipment. The chamber should be stored in a conditioned environment. Do not store it outside or where it will be subjected to dirt or excessive moisture.

### **I haven't used the chamber for a while. Is there anything I should do to prepare it for operation?**

Perform ALL the steps in the Preventive Maintenance Schedule before placing the chamber back into service. This will ensure that nothing has been damaged and that a leak has not developed.

This chamber has a crankcase heater to protect the compressor. The chamber must be connected to the power source AND the Main Disconnect Switch must be ON for 3 hours prior to operating the chamber. Although it may be safe to use the chamber immediately, this procedure ensures the longest possible life for the compressor if the chamber has been removed from the power source for more than 24 hours.

### **Can the person who services our air conditioning also service the chamber?**

Probably not. Most air conditioning mechanics are not familiar with low-temperature cascade refrigeration systems. While this chamber is relatively easy to maintain and repair, most air conditioning mechanics do not have the necessary refrigerants and may not be familiar with the microprocessor-based controls. This chamber should only be serviced by a qualified mechanic that is familiar with low-temperature cascade refrigeration systems. Call TestEquity to recommend one in your area, or to check if the one you would like to use is qualified.

### **Can/Should I put a filter in front of the condenser air inlet?**

No, TestEquity does not recommend this. Just follow the maintenance procedures and clean the condenser fins periodically.

### **How often should I charge the refrigeration system?**

This chamber uses a closed-loop refrigeration system. Just like your refrigerator at home, it does not need periodic charging. If the charge is low, this means that there is a leak. Leaks should be repaired before recharging.

### **What kind of Freon does the chamber use?**

The word Freon<sup>®</sup> is a DuPont registered trade name for their CFC-based refrigerants and is incorrectly used as a generic term for refrigerants. TestEquity chambers do not use CFC-based refrigerants. The refrigeration system uses R-404A, which is also known as DuPont Suva<sup>®</sup> HP62.



## Chapter 7 – Specifications

### ***Model 1027S Chamber Specifications***

---

<b>Temperature Range</b>	-35°C to +175°C
<b>Control Tolerance</b>	±0.5°C (±0.2°C Typical) (Measured at the control sensor after stabilization)
<b>Uniformity</b>	±1.0°C (Variations throughout the chamber after stabilization)

<b>Live Load Capacity @</b>	<b>+23°C</b>	<b>0°C</b>	<b>-10°C</b>	<b>-20°C</b>	<b>-30°C</b>
	4000 W	2800 W	2300 W	1800 W	1250 W

**Cool Down Transition Time (empty chamber)**

	<b>End Temp</b>					
<b>Start Temp to →</b>	<b>+23°C</b>	<b>0°C</b>	<b>-10°C</b>	<b>-20°C</b>	<b>-30°C</b>	<b>-35°C</b>
<b>+23°C</b>	-----	1 min	2 min	4 min	9 min	Ultimate
<b>+85°C</b>	7 min	7.5 min	10 min	13 min	19 min	Ultimate
<b>+150°C</b>	9 min	14 min	17 min	20 min	26 min	Ultimate

**Cool Down Transition Time (80 lb static aluminum load)**

	<b>End Temp</b>					
<b>Start Temp to →</b>	<b>+23°C</b>	<b>0°C</b>	<b>-10°C</b>	<b>-20°C</b>	<b>-30°C</b>	<b>-35°C</b>
<b>+85°C</b>	8 min	16 min	20 min	25 min	33 min	Ultimate

**Heat Up Transition Time (empty chamber)**

	<b>End Temp</b>					
<b>Start Temp to →</b>	<b>+23°C</b>	<b>+50°C</b>	<b>+85°C</b>	<b>+125°C</b>	<b>+150°C</b>	<b>+175°C</b>
<b>+23°C</b>	-----	1.5 min	7 min	14 min	20 min	25 min
<b>0°C</b>	1.5 min	3.5 min	13 min	20 min	23 min	31 min
<b>-10°C</b>	2.2 min	4.2 min	14 min	22 min	25 min	33 min
<b>-35°C</b>	5.5 min	10 min	16 min	23 min	29 min	34 min

**\*Note:** Transition times are measured after a 2 hour soak at the start temperature. To calculate rate of change for a particular condition, take the difference between the Start Temp and End Temp and divide by the Transition Time.

**Cool Down Example (empty):** From +85°C to -10°C = 95°C / 10 min = 9.5°C/min.

**Cool Down Example (80 lb):** From +85°C to -10°C = 95°C / 20 min = 4.75°C/min.

**Heat Up Example (empty):** From -35°C to +85°C = 120°C / 16 min = 7.5°C/min.

**Input Power Requirements**

**230 V ±10%, 60 Hz, 3 PH** Max Current Draw 31 A; Recommended Service 40 A

**208 V -5/+10%, 60 Hz, 3 PH** Max Current Draw 26 A; Recommended Service 35 A

Input may be configured for nominal 208 V or 230 V in the field by changing jumpers.

Call for other voltages or 50 Hz operation.

**Workspace Dimensions** 40" W x 32" H x 36.5" D (27 cubic feet)

**Outside Dimensions** 49" W x 73.25" H x 63" D (nominal)

Door latch adds 3" to width on right side. Circulator motor housing adds 6" to height.

**Min. Installed Clearance** 12" from the left and right side, 24" from the rear

**Access Ports** 4" Port on left and right side (two total), Supplied with foam plugs

**Weight** 1600 pounds

**NOTE:** Performance is typical and based on operation at 23°C (73°F) ambient and nominal input voltage. Designed for use in a normal conditioned laboratory. Operation at higher ambient temperatures may result in decreased cooling performance. Additional ports and shelves will also affect performance. Operation above 30°C (85°F) or below 16°C (60°F) ambient is not recommended.

### ***F4 Temperature Controller Specifications***

---

Specifications as configured for the TestEquity 1027S Chamber

<b>Accuracy &amp; Sensor Conformity*</b>	$\pm 1.55^{\circ}\text{C}$ (above $-50^{\circ}\text{C}$ ) $\pm 1.66^{\circ}\text{C}$ (below $-50^{\circ}\text{C}$ )
<b>Stability</b>	$\pm 0.1^{\circ}\text{C}/^{\circ}\text{C}$ rise in ambient
<b>Digital Inputs</b>	(Four) Contact closure or dc voltage, 10 k $\Omega$ impedance
<b>Retransmit Outputs (Optional)</b>	(Two) User-selectable ranges: 0 to 10 VDC, 0 to 5 VDC, 1 to 5 VDC 0 to 20 mA, 4 to 20 mA
<b>Alarm Outputs</b>	(Two) Electromechanical relay; Form C, 2 A @ 20 VDC or 240 VAC max.
<b>Digital Outputs</b>	(7 available for customer use) Open collector output OFF: 42 VDC @ 10 $\mu\text{A}$ max. ON: 0.2 VDC @ 50 mA sink max. Internal supply: 5 VDC @ 80 mA
<b>Communications</b>	EIA-232 and EIA-485 serial communications with Modbus™ RTU protocol
<b>Safety &amp; Agency Approvals</b>	UL/c-UL 916-listed, File #E185611 CE to EN61010 NEMA 4X and IP65 CE EMC to EN50082-2 CE EMC to EN55011
<b>Displays</b>	<b>Process:</b> 5, seven-segment red LED. <b>Interface Display:</b> 4-line high-definition green LCD; selectable $^{\circ}\text{C}$ or $^{\circ}\text{F}$
<b>Data Retention</b>	Retention upon power failure via nonvolatile memory (seven years for battery-backed RAM)

**\*Note:** Total system accuracy in the chamber includes thermocouple wire accuracy. Thermocouple wire accuracy is  $\pm 1^{\circ}\text{C}$  or 0.75% of reading, whichever is greater. Therefore, total system accuracy over the chamber's operating range can be as much as  $\pm 2.66^{\circ}\text{C}$ , although the typical accuracy is often better than  $\pm 1.0^{\circ}\text{C}$ .



## Chapter 8 – Maintenance

⚠ **WARNING:** Maintenance must be performed by properly trained personnel only.

### ***Preventive Maintenance Intervals***

---

#### **Daily or As Needed**

- Clean chamber interior and exterior.
- Listen for abnormal noise or vibration.

#### **Every 3 Months**

- Inspect the door seal.
- Inspect the refrigeration machinery compartment.
- Check the refrigeration charge.
- Verify the chamber performance.

#### **Every 6 Months**

- Inspect the electrical compartment.
- Clean the condenser.

#### **Every 12 Months**

- Verify the calibration.

### ***Maintenance Procedures***

---

#### **How to clean the chamber interior and exterior.**

- Wipe or vacuum out all debris.
- Clean surfaces with a damp cloth, mild detergent, or stainless-steel cleaner. Avoid cleaners that are abrasive or leave a residue. Do NOT use steel wool.
- If you clean the interior with something other than water, you may want to operate the chamber at high temperature (approximately +125°C) after cleaning. This helps to “bake out” any residue. Remove the port plugs to permit the residual vapors to escape.
- Clean the silicone door gaskets with a damp cloth or mild detergent.
- Clean the exterior painted surfaces with a damp cloth or mild detergent. If you are using a detergent, test a small inconspicuous area to make sure it does not damage the finish.

#### **How to listen for abnormal noise or vibration.**

You should become familiar with normal operating noises. Being able to recognize changes from normal operating noises can be a valuable way to identify problems and prevent further damage. Examples of noises to be aware of include:

- Circulator motor and fan noises (with compressors off).
- Compressor start-up and running noises, sequential starting of compressors.
- Condenser fan noises.
- Relay and valve cycling noises when cool light is cycling.

#### **How to inspect the door seal.**

The door has two silicone gaskets to minimize thermal losses and moisture migration.

- Inspect the gaskets for dirt and tears.
- Repair minor tears with a high quality RTV silicone such as GE RTV167.
- Check the integrity of the door seal by closing the door on a sheet of paper. With the door closed, slowly pull the paper. You should feel the resistance getting lighter as the paper goes past the inner gasket. Repeat this all around the door at several places.
- If the seal is not tight, adjust the door latch. The stainless-steel catch (on the bracket that is mounted to the chamber) has slotted holes to permit adjustment.
- If the seal is still loose on the hinge side, adjust the door hinge. The hinges have slotted holes (on the door side) to permit adjustment.

### How to inspect the refrigeration machinery compartment.

⚠ **WARNING:** Wear safety goggles when inspecting the machinery compartment to protect against a refrigerant line which could break.

1. Turn the Main Disconnect Switch OFF.
2. Remove the side and rear panels.
3. Inspect for signs of refrigeration tubing abrasion.
4. Inspect for oil around refrigeration valves, fittings and joints. This may be a sign of leaks.
5. Inspect for loose hardware and tighten as required.
6. Inspect for signs of insect or rodent infestation. Yes, it does happen!

### How to check the refrigerant charge.

The refrigerant charge is checked by observing the sightglass.

1. The sight glass is located behind the rear bottom panel, on the right side.
2. Set the Temperature Controller to a low-temperature Set Point. The Cool Light should be on continuously.
3. After about 5 minutes of operation in this mode, inspect the sightglass.
4. If you see bubbles or it appears partially full, then this indicates that there is probably a leak.
5. When the Temperature Controller is cycling (Cool Light cycles on/off), the sightglass may appear 1/2 to 2/3 full. This is normal.

### How to verify the chamber performance.

These tests verify the performance of the heating, refrigeration, electrical controls, temperature controller, and air circulation systems. The chamber should meet all published performance specifications if all of these tests are successfully passed.

These tests assume that the Temperature Controller's setup and tuning values have not been changed from the values as shipped from TestEquity. Also, the Limit Controller high limit must be set to over +85°C (+88°C would be fine), and the low limit set to -35°C.

If the chamber fails any of these tests, it should be removed from service to prevent further damage until the cause of the problem is determined and resolved.

1. The chamber interior should be empty and at ambient temperature, approximately +23°C.
2. Set the Temperature Controller Set Point to +85°C and turn the Master Switch ON.
3. The Heat Light should be ON continuously and the Cool Light should be OFF.
4. The chamber should heat up to about +80°C and begin controlling (Heat Light cycles ON/OFF) within 7 minutes.
5. The chamber temperature should slowly increase and stabilize to +85°C. It should NOT overshoot beyond +85°C by more than a few tenths of a degree, and the compressors should NOT need to turn ON in order to maintain +85°C.
6. After stabilization, the chamber temperature should vary no more than  $\pm 0.5^{\circ}\text{C}$ , or a total of 1°C.
7. Let the chamber stay at +85°C for two hours.
8. After two hours at +85°C, set the Temperature Controller Set Point to -30°C.
9. The compressor should turn ON within a few seconds. Then, the Cool Light should be ON continuously and the Heat Light should be OFF.
10. The chamber should cool down to about -25°C and begin controlling (Cool Light cycles ON/OFF) within approximately 15 minutes.
11. The chamber temperature should slowly decrease and stabilize to -30°C. It should NOT undershoot beyond -30°C by more than a few tenths of a degree, and the compressors should NOT need to turn OFF in order to maintain -30°C.
12. After stabilization, the chamber temperature should vary no more than  $\pm 0.5^{\circ}\text{C}$ , or a total of 1°C.
13. Set the Temperature Controller Set Point to +23°C. The chamber should begin to heat up. The compressors should turn off within approximately 1 minute.
14. This concludes the chamber performance verification tests.
15. Let the chamber heat up to +23°C before turning the Master Switch OFF.

### How to inspect the electrical compartment.

1. Disconnect the chamber from the power source.
2. Turn the Main Disconnect Switch to the OFF position.
3. Remove the lower door retaining screw located on the right side. Open the lower door.
4. Check for loose components, loose wires, burned insulation near terminals, and burned or excessively pitted contacts on contactors.

### How to clean the condenser.

1. Disconnect the chamber from the power source.
2. Turn the Main Disconnect Switch to the OFF position.
3. Remove the lower door retaining screw located on the right side. Open the lower door.
4. Clean the condenser and desuperheater fins with a vacuum cleaner.

**NOTE:** You may need to clean the condenser more frequently if the chamber is in a dusty environment. You may be able to clean the condenser less frequently if the chamber is in a very clean environment.

### How to verify the calibration.

TestEquity recommends verifying the calibration before attempting to actually perform a calibration. The state-of-the-art instrumentation used in TestEquity chambers is of the highest quality and seldom goes out of calibration. If you try to calibrate the instrumentation before determining that calibration is necessary, you may make it worse if done incorrectly.

Variations in temperature throughout the chamber interior is NOT a measurement of accuracy. These variations, called “gradients”, are a function of the physical design of the chamber and its airflow, the characteristics of the test sample, and how it is oriented in the chamber. You cannot “calibrate” to improve gradients. The correct way to adjust what the temperature controller “displays” compared to what is measured at some point other than the controller’s sensor, is with the “Calibration Offset” parameter. See page 6.2 of the “Series F4 User’s Manual” for details. Calibration verification should be performed with the Calibration Offset set to 0.0 (zero).

The F4 Temperature Controller accuracy is specified  $\pm 1.55^{\circ}\text{C}$  (above  $-50^{\circ}\text{C}$ ). Total system accuracy in the chamber includes the controller plus the thermocouple wire accuracy of  $\pm 1.0^{\circ}\text{C}$ . Total system accuracy over the chamber’s operating range is can be as much as  $\pm 2.55^{\circ}\text{C}$ , although it is typically better than  $\pm 1.0^{\circ}\text{C}$ .

The easiest way to verify the instrumentation accuracy is with an independent calibrated temperature sensor and display. Place the sensor near the chamber’s sensors, which are located towards the right side of the conditioner fan grille. If the readings agree within the specified limits above, then no calibration adjustments are necessary.

If calibration of the temperature controller is necessary, refer to page 9.2 of the “Series F4 User’s Manual” and follow the instructions for “Thermocouple Input Procedure”.

---

***Theory of Operation***

---

**Overview**

The chamber is heated by an open element nichrome heater. Cooling is accomplished by a single-stage refrigeration system. The air is circulated by a propeller fan. The heater, evaporator (cooling coil), and fan are located within an air plenum which is on the back wall of the chamber interior.

The heater, compressor, and circulator fan motor operate directly from the 208/230 VAC input line. All line branch circuits are individually fused. A stepdown transformer provides 115 VAC for all instrumentation and control elements.

Refer to the electrical and refrigeration drawings to identify the referenced items described below.

**Heating System**

The chamber is heated by an open-element nichrome heater (HT1). The heater is located in the air plenum. The temperature controller provides a time-proportioned output to the solid state relays (SSR1, 2). This turns the heater on/off as required to maintain the temperature set point. Pilot light PL1 provides an indication on the front panel when the heater is on.

Fusible heat limiters (HL1, 2, 3) provide failsafe protection against a catastrophic failure by opening the heater circuits at +240°C. The master heat contactor C1 provides a power interlock for the heaters, circulator fan motor, and the control system. C1 is controlled by both the Master Switch, the safety relay (CR3), and the phase control relay (PCR1). CR3 is controlled by the temperature limit controller (TCR2). If either the high or low temperature safety limits are exceeded, TCR2 turns off CR3, which turns off C1. PCR1 will disable CR1 if the input power phase-sequence is incorrect.

**Refrigeration System**

Cooling is accomplished by a single-stage refrigeration system. The refrigeration system provides cooling to the chamber interior through a finned evaporator coil, which is located in the air plenum.

The system uses refrigerant R-404A. High pressure liquid refrigerant is fed from the condenser through the liquid line, filter-drier, and sight glass to the thermostatic expansion valve. The thermostatic expansion valve feeds the finned evaporator coil, which is located in the air plenum where heat is absorbed to provide a cooling effect within the chamber. The thermostatic expansion valve controls the feed of liquid refrigerant to the evaporator and, by means of an orifice, reduces the pressure of the refrigerant to the evaporating or low side pressure. The reduction of pressure on the liquid refrigerant causes it to boil or vaporize, absorbing heat which provides a cooling effect. The expansion valve regulates the flow as necessary to maintain a preset temperature difference or superheat between the evaporating refrigerant and the vapor leaving the evaporator. The refrigerant vapor travels through the suction line to the compressor suction inlet. The compressor takes the low pressure vapor and compresses it, increasing both the pressure and the temperature. The hot, high pressure vapor is forced out of the compressor discharge valve and into the condenser. As the high pressure vapor passes through the condenser,

it is cooled by a fan, which blows ambient air across the finned condenser surface. The vapor condenses into a liquid and the cycle is repeated.

The temperature controller alternately cycles the low-stage liquid-line solenoid valve (SV1) and the hot-gas solenoid valve (SV2) ON/OFF through cool relay CR1 to control the chamber temperature. When SV1 is ON, liquid refrigerant flows through the thermostatic expansion valve and evaporator to cool the chamber. When SV1 is OFF, the flow stops. High pressure vapor feeds the hot gas regulator through SV2, which meters a precise amount into the suction line to maintain a minimum load on the system and keep it out of a vacuum. The hot gas regulator is adjusted to keep the suction pressure at 2 PSIG when SV1 is OFF. Pilot Light PL2 provides an indication on the front panel when SV1 is ON.

During a high temperature pulldown or a continuous bypass condition, it is possible for excessive hot gas to return to the compressor. The suction line cooling thermostatic expansion valve senses the suction line temperature and injects liquid refrigerant to cool the hot gas within safe limits.

The receiver has an integral fusible relief which opens in the event of a fire. A high/low pressure switch (DPS1) turns off the entire refrigeration system in the event of an out of limit condition. The compressor is also protected by an internal overload device. The compressor has a crankcase heater (CC1) to prevent refrigerant from condensing in the oil when the compressor is off.

The compressor rotation is phase-sensitive. A phase control relay (PCR1) ensures that the chamber can operate only if the input power phase-sequence is correct.

The temperature controller has internal logic to turn the compressors on if cooling is required to maintain the temperature set point.

***Troubleshooting***

SYMPTOM	CONDITION	CAUSES
<b>Chamber completely inoperative.</b>	<ol style="list-style-type: none"> <li>1. Power is applied to chamber but nothing lights up.</li> </ol>	<ol style="list-style-type: none"> <li>1. Incorrect phase sequence. Reverse two of the input lines.</li> <li>2. Control fuse F3 open. Likely cause is shorted solenoid coil on SV1 or SV2.</li> </ol>
<b>Does not heat up at all.</b>	<ol style="list-style-type: none"> <li>1. If controller light 1A is ON, circulator fan is ON, the Heat light is OFF.</li> <li>2. If controller light 1A is ON, circulator fan is ON, the Heat light is ON.</li> </ol>	<ol style="list-style-type: none"> <li>1. Solid State Relay SSR1 or SSR2 is defective.</li> <li>2. At least two Heat Limiters HL are open.</li> </ol>
<b>Heats up too slow.</b>	<ol style="list-style-type: none"> <li>1. Does not meet published specifications.</li> </ol>	<ol style="list-style-type: none"> <li>1. Chamber interior is overloaded. Port plug is not in port. Verify that input voltage is within tolerance. One heat limiter HL or one heater winding is open.</li> </ol>
<b>Heat is on all the time.</b>	<ol style="list-style-type: none"> <li>1. If temperature controller light 1A is OFF, the Heat light is ON.</li> </ol>	<ol style="list-style-type: none"> <li>1. Solid State Relay SSR1 or SSR2 is defective. Heater is shorted to chassis.</li> </ol>
<b>Does not cool at all.</b>	<ol style="list-style-type: none"> <li>1. If temperature controller light 1B is ON, the Cool light is OFF, both compressors are OFF.</li> <li>2. If temperature controller light 1B is ON, the Cool light is ON, both compressors are ON.</li> </ol>	<ol style="list-style-type: none"> <li>1. Pressure switch DPS1 or DPS2 is tripped.</li> <li>2. Solenoid valve SV1 may be defective in closed position.</li> </ol>
<b>R-404A pressure switch DPS1 trips.</b>	<ol style="list-style-type: none"> <li>1. Trips shortly after turn on.</li> <li>2. Trips after operating for a while.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ambient temperature may be too high. Low charge (leak).</li> <li>2. Dirty condenser, inadequate clearance from back of chamber to the wall. R-404A hot gas bypass regulator may be defective or set too low.</li> </ol>



## Chapter 8 – Maintenance

SYMPTOM	CONDITION	CAUSES
<b>Sightglass has bubbles or looks not full.</b>	<ol style="list-style-type: none"> <li>1. During all running conditions.</li> <li>2. Only when cool light is cycling.</li> </ol>	<ol style="list-style-type: none"> <li>1. Low charge (leak).</li> <li>2. No problem. This is normal.</li> </ol>
<b>Cools too slow.</b>	<ol style="list-style-type: none"> <li>1. No bubbles in sightglass.</li> </ol>	<ol style="list-style-type: none"> <li>1. Chamber interior is overloaded.. Test sample is energized, giving off heat. Port plug is not in port. Ambient temperature is too high.</li> </ol>
<b>Cools all the time.</b>	<ol style="list-style-type: none"> <li>1. When cool light is OFF.</li> </ol>	<ol style="list-style-type: none"> <li>1. Solenoid valve SV1 may be defective in open position.</li> </ol>
<b>Does not reach –35°C.</b>	<ol style="list-style-type: none"> <li>1. Sightglass looks full. Chamber is empty.</li> </ol>	<ol style="list-style-type: none"> <li>1. Port plug is not in port. Door is not sealing completely. Ice on evaporator. Ambient temperature is too high. Tuning PID control parameters are incorrect.</li> <li>2. Hot gas bypass regulator may be defective or set too high. Solenoid valve SV2 may be defective in open position.</li> </ol>
<b>Temperature varies more than ±0.5°C or 1°C total.</b>	<ol style="list-style-type: none"> <li>1. If tuning PID control parameters in temperature controller were changed.</li> <li>2. If tuning PID control parameters in temperature controller are as shipped from TestEquity.</li> <li>3. If tuning PID control parameters in temperature controller are as shipped from TestEquity and only occurs in cool mode.</li> </ol>	<ol style="list-style-type: none"> <li>1. Re-enter values as shipped from TestEquity.</li> <li>2. Control parameters may need to be changed for your unique test conditions.</li> <li>3. Control parameters may need to be changed for your unique test conditions. Hot gas bypass regulator may be defective or set too high.</li> </ol>
<b>Compressors turn on and off too frequently.</b>	<ol style="list-style-type: none"> <li>1. If compressor control parameters in temperature controller were changed.</li> <li>2. If compressor control parameters in temperature controller are as shipped from TestEquity.</li> </ol>	<ol style="list-style-type: none"> <li>1. Re-enter values as shipped from TestEquity.</li> <li>2. Control parameters may need to be changed for your unique test conditions. Solenoid valve SV1 may be defective in open position.</li> </ol>
<b>Excessive noise and vibration when the compressor starts.</b>	<ol style="list-style-type: none"> <li>1. Chamber has been off for several hours or more and is not connected to source of power, or main disconnect switch is off during that time.</li> <li>2. Chamber has been off for several hours or more, and is connected to source of power and main disconnect switch is on during that time.</li> </ol>	<ol style="list-style-type: none"> <li>1. The chamber must be connected to the power source AND the main disconnect switch must be on for 3 hours prior to operating the chamber.</li> <li>2. Crankcase heater defective (open).</li> </ol>

## **Refrigeration System Charging Instructions**

**⚠ WARNING:** Repair of the refrigeration system must be performed only by a properly trained mechanic who is experienced in repairing cascade refrigeration systems. Do NOT substitute any component. Do NOT substitute refrigerants. Improper repairs will void the warranty.

These instructions are intended as guidelines for repairing TestEquity chambers. Details such as how to attach a gauge manifold are not covered. These are NOT do-it-yourself instructions!

### **R-404A Charge**

TestEquity does NOT recommend charging the system by relying on a clear sight glass only. Although a clear sight glass generally means the system is fully charged, it can be misleading. For example, if the system is charged on a cool day or with an empty chamber, it could be undercharged for hot days or with a heavy load. The proper charging procedure is as follows:

1. Repair any leaks before recharging.
2. Attach a vacuum pump and manifold gauge to the suction and discharge ports.
3. Evacuate the system to at least 100 microns. DO NOT GUESS! You must use a micron gauge.
4. Use a charging scale to weigh in 80 ounces (5 pounds) of R-404A.
5. Verify the cooling performance as outlined in “How to verify the chamber performance”.

NOTE: If the Temperature Controller is cycling (Cool Light cycles on/off), the sightglass may appear 1/2 to 2/3 full. This is normal.

### ***Recommended Spare Parts***

---

Replacement parts are available from TestEquity. Parts are generally in-stock and ready for immediate shipment. Next-day delivery is always available. If you cannot risk being out of service for even one day, then you should purchase critical spare parts in advance. Although most parts are standard and available from a variety of local distributors, some parts are either harder to find or custom.

The following is a list of the kinds of parts that you may want to purchase in advance.

#### **Electrical Parts**

- Contactors
- Relays
- Fuses
- Heat Limiter
- Circulator Motor and Fan
- Switches

#### **Refrigeration Parts**

- Solenoid Valves
- Expansion Valves
- Regulator Valves

## Chapter 8 – Maintenance

### Major Electrical Parts

Description	Mfr	Mfr Part No.	Ref #	Part #	Qty	UOM
Appliance Light, 40W, 120V	Generic	Generic	LT1	300096	1	ea
Arc Suppressor	ITW Paktron	104M06QC100	AS1, 2	200115	2	ea
Audible Alarm	Floyd Bell	MC-09-201-Q	AL1	200005	1	ea
Circulator Motor Kit	CUSTOM	CUSTOM	FM3, 4	100575	2	ea
Contact, 3 P 30A	Hartland	HCC-3XT02SX	C1, 2	200245	2	ea
Control Transformer	Hammond	PH350MLI	TR1	200219	1	ea
Disconnect Switch, 3 Pole, 45A	ABB	OT63F3	DSW	200281	1	ea
Fuse, 20A	Bussman	FNQ-R-20	F4-6	200242	3	ea
Fuse, 20A	Bussman	LP-CC-20	F7-9	200206	3	ea
Fuse, 3A	Bussman	FNM-3	F3	200186	1	ea
Fuse, 4A	Bussman	FNQ-R-4	F1, 2	200083	2	ea
Heat Limiter	Thermodisc	G5A-01-240C	HL1, 2, 3	200070	3	ea
Heater, Air	CUSTOM	CUSTOM	HT1	200061	1	ea
High/Low Limit Controller	Watlow	PM6L1AJ-AAAABAB	TCR2	200301	1	ea
Indicator, Panel, 120V Neon	SoLiCo	S412-2-1-N1	PL2	200025	1	ea
Indicator, Panel, 240V Neon	SoLiCo	S412-2-1-N2	PL1	200026	1	ea
Relay, Octal DPDT 10A 120VAC	Idec	RR2P-UCAC120	CR1, 3	200292	2	ea
Relay, Phase Control	Crouzet	DWRS220A	PVR1	200067	1	ea
Solid State Relay, 25A	Siemens	SSRT-240D25	SSR1, 2	200021	2	ea
Solid State Relay, 5A	Omron	G3NE-210T-US DC5	SSR3	200129	1	ea
Switch, SPST, Rocker	Carlingswitch	LRA211-RA-B/125N	SW1, 2	200023	2	ea
Temperature Controller	Watlow	F4SH-CKA0-01AE	TCR1	200001	1	ea
<b>Chart Recorder Option</b>						
Recorder, 1 Pen, 10"	Honeywell	DR4301-0000-G0100	RCD1	200094	1	ea
Chart paper, -90 to 210 C	Honeywell	24001660-034		200095	1	ea
Chart paper, -130 to 410 F, Alternate	Honeywell	24001660-033		200096	1	ea
Pen, Purple, Six Pack	Honeywell	30735489-007		200097	1	ea

### Major Refrigeration Parts

Description	Mfr	Mfr Part No.	Ref #	Part #	Qty	UOM
Compressor	Copeland	ZF11K4E-TF5-241	1 (part of)	100059	1	ea
Evaporator Coil	CUSTOM	9X32-6R-12/96	8	100060	1	ea
Expansion Valve, Main	Sporlan	SBFSE-B-ZP 3/8 x 5/8 ODF	6	100300	1	ea
Expansion Valve, Suction Cooling	Sporlan	SBFJ-A-C 3/8 x 1/2 ODF	9	100065	1	ea
Distributor	Sporlan	1620-2-1/4-2-J	7	100066	1	ea
Solenoid Valve	Sporlan	E6S130, 3/8 x 3/8 ODF	5	100067	2	ea
Solenoid Valve Coil	Sporlan	MKC-1-120/50-60	(SV1, 2)	100011	2	ea
Hot Gas Bypass Regulator	Sporlan	ADRI-1-1/4-0/55 strgt 3/8x3/8 ODF	9	100078	1	ea
Dual Pressure Control	Johnson	P70NA-1C	11 (DPS1)	100015	1	ea
Filter Drier	Sporlan	C-083-S	4	100070	1	ea
Sight Glass	Danfoss	140-0143	3	100081	1	ea
Capillary Tube, 0.036 x 36"	J/B	TC-36	14	100043	2	ea
Gauge, 30" x 200 PSIG Compound	Miljoco	CUSTOM	12	100494	1	ea
Gauge, 0 x 400 PSIG Pressure	Miljoco	CUSTOM	14	100495	1	ea
Crankcase Heater, 40 W, 120 V	Copeland	018-0041-01	2 (CC1)	100071	1	ea

---

---

## Chapter 8 – Maintenance

---

---

### **General Parts**

---

<b>Description</b>	<b>Mfr</b>	<b>Mfr Part No.</b>	<b>Ref #</b>	<b>Part #</b>	<b>Qty</b>	<b>UOM</b>
Port Plug, Silicone Foam, 4"	CUSTOM	CUSTOM		300534	2	ea
Viewing Window	CUSTOM	CUSTOM		300447	1	ea
Door Gasket, Inner	CUSTOM	CUSTOM		300636	1	ea
Door Gasket, Outer	CUSTOM	CUSTOM		300637	1	ea
Fan, Alum, 7" D, 5/16" Bore, CW	Revcor	0705-31 R 0.3125 DANN		300006	2	ea
Door Latch, Chamber Workspace	Southco	A2-10-501-21		300009	1	ea
Caster, Swivel					2	ea
Caster, Rigid					2	ea
Shelf with 4 Clips	CUSTOM	CUSTOM		TE-2701	1	ea
Shelf Retainer Clip	Kason	Style 66, #0066000008		300015	4	ea

### ***Series F4 Temperature Controller Setup Parameters***

---

- ⚠ **CAUTION:** The “Series F4 User’s Manual” is a general manual and is written by the manufacturer, Watlow, for a wide variety of applications and configurations. Not all features or functions are applicable. Only the capabilities of a model F4SH-CKA0-01, as described on page A.7 of the “Series F4 User’s Manual” are applicable. “Cascade Control” as described on page 3.6 of the “Series F4 User’s Manual” is not applicable in this configuration. The “Retransmit” function is available as an option.
- ⚠ **CAUTION:** The Series F4 Temperature Controller has been properly configured by TestEquity to match the chamber’s system requirements and to perform optimally over a wide range of operating conditions. Improper modifications to these setup values can result in erratic performance and unreliable operation. Setup examples in the “Series F4 User’s Manual” are NOT applicable to this chamber. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. If there is any doubt, please call TestEquity before proceeding.
- ⚠ **CAUTION:** The alarm outputs of the Temperature Controller are NOT connected to the chamber’s safety system. TestEquity does NOT recommend using the Temperature Controller’s alarm function as the main protection device.
- ⚠ **CAUTION:** NEVER select “Full Defaults” in the Factory/Test Menu. “Full Defaults” are NOT the TestEquity configuration parameters for this chamber. If you select “Full Defaults”, you must reconfigure all System and Operation Parameters as documented in the TestEquity manual, NOT the “Series F4 User’s Manual”.

TestEquity has configured the Temperature Controller with the parameters as documented on the following pages.

Series F4 Setup Parameters

<p><b>System Menu</b>  <b>Main Page\Go to Setup\System</b>                  GSB 1 Source           Input 1                  Guar. Soak Band 1    3.0 °C (5.4 if °F)                  Current Time           (local time)                  Current Date           (local date)                  PID Units               US, Reset/Rate                  °F or °C                °C                  Show °F or °C         Yes, Upper Display                  Ch1 Autotune SP       90%                  Input 1 Fail            0%                  Open Loop Ch1         Off                  Power-Out Time        10 Sec                  Power-Out Action      Continue</p> <p><b>Analog Input Menu</b>  <b>Main Page\Go to Setup\Analog Input1</b>                  Sensor                 Thermocouple                  Type                    T                  Decimal                0.0                  SP Low Limit           -35.0 °C (-31.0 if °F)                  SP High Limit          175.0 °C (347.0 if °F)                  Calibration Offset     0.0                  Filter Time            1.0 sec                  Error Latch            Self-Clear</p> <p><b>Digital Input Menus</b>  <b>Main Page\Go to Setup\Digital Input (1-4)</b>                  Name                   No                  Function                Off</p> <p><b>Control Output Menus</b>  <b>Main Page\Go to Setup\Control Output 1A</b>                  Function               Heat                  Choose Cycle Time     Fixed Time                  Enter Cycle Time       3.0 sec                  Hi Power Limit         100 %                  Low Power Limit        0 %</p> <p><b>Main Page\Go to Setup\Control Output 1B</b>                  Function               Cool                  Choose Cycle Time     Fixed Time                  Enter Cycle Time       6.0 sec                  Hi Power Limit         100 %                  Low Power Limit        0 %</p>	<p><b>Alarm Output Menus</b>  <b>Main Page\Go to Setup\Alarm Output (1-2)</b>                  Name                   No                  Alarm Type            Process                  Source                 Input 1                  Latching               Alarm Self-Clears                  Silencing              Yes                  Hysterisis             1.7 °C (3.0 if °F)                  Alarm Sides            Both                  Alarm Logic            Open on Alarm                  Show Message         Yes on Main Page</p> <p><b>NOTE:</b> The alarm outputs of the Temperature Controller are NOT connected to the chamber's safety system. TestEquity does NOT recommend using the Temperature Controller's alarm function as the main protection device.</p> <p><b>Retransmit Output Menu</b>                  (if retransmit option is ordered)  <b>Main Page\Go to Setup\Retransmit Output 1</b>                  Retransmit Source     Set point 1                  Analog Range          0-5V                  Low Scale              -35.0 °C (-31.0 if °F)                  High Scale             175.0°C (347.0 if °F)                  Scale Offset           0.0</p> <p><b>Main Page\Go to Setup\Retransmit Output 2</b>                  Retransmit Source     Input 1                  Analog Range          0-5V                  Low Scale              -35.0 °C (-31.0 if °F)                  High Scale             175.0°C (347.0 if °F)                  Scale Offset           0.0</p>	<p><b>Digital Output Menu</b>  <b>Main Page\Go to Setup\Digital Output (1-7)</b>                  Name                   No                  Function                Event Output</p> <p><b>Main Page\Go to Setup\Digital Output 8</b>                  Function               Compressor                  Comp. On % Power      -2%                  Comp. Off % Power     2%                  Compressor Off Delay  60 sec                  Compressor On Delay  10 sec</p> <p><b>Communications Menu</b>  <b>Main Page\Go to Setup\Communications</b>                  Baud Rate              9600                  Address                1</p> <p><b>Custom Main Page Menu</b>  <b>Main Page\Go to Setup\Custom Main Page</b>                  P1                      Current File                  P2                      Current Step                  P3                      Set Point 1                  P4                      Step Type                  P5                      Target SP1                  P6                      WaitFor Status                  P7                      Time Remaining                  P8                      Digital Outputs                  P9                      % Power 1                  P10                     Digital Inputs                  P11                     Date                  P12                     Custom Message 1                  P13                     None                  P14                     None                  P15                     None                  P16                     None</p> <p><b>Static Page Menu</b>  <b>Main Page\Go to Setup\Static Message</b>                  Message 1              TESTEQUITY 1027S</p>
---	---	---

## Series F4 Operations Parameters

<p><b>PID Set Channel 1 Menu</b>  <b>Main Page\Go to Operations&gt;Edit PID\PID Set Channel 1\</b>  <b>PID Set (1-5)</b>                      Proportional BandA    5.0 °C (9.0 if °F)                      Reset A                    0.05 min                      Rate A                     0.00 min                      Dead Band A             0.0 °C                      Proportional BandB    5.0 °C (9.0 if °F)                      Reset B                    0.05 min                      Rate B                     0.00 min                      Dead Band B             0.0                      Hysteresis                0.0</p>	<p><b>Alarm Setpoints Menu</b>  <b>Main Page\Go to Operations\Alarm Setpoints\Alarm1</b>                      Alarm1 Low SP        -35.0 °C (-31.0 if °F)                      Alarm1 High SP       175.0 °C (347.0 if °F)  <b>Main Page\Go to Operations\Alarm Setpoints\Alarm2</b>                      Alarm2 Low SP        -35.0 °C (-31.0 if °F)                      Alarm2 High SP       175.0 °C (347.0 if °F)</p> <p><b>NOTE:</b> The alarm outputs of the Temperature Controller are NOT connected to the chamber’s safety system. TestEquity does NOT recommend using the Temperature Controller’s alarm function as the main protection device.</p>
--	---

## Series F4 Set Lockout Parameters

The Series F4 Controller has several levels of security to prevent unauthorized users from changing critical configuration parameters. Only the Set Point and Profile menus have “Full Access”. TestEquity has configured all other menus to “Password”, and have protected them with a password.

TestEquity does not recommend that these security levels be changed for most applications. However, there will be times when “Full Access” is necessary. For example, you may need to gain access to Setup Page in order to change from °C to °F display, or to change the time or date. You must call TestEquity at 877-512-3457 or 805-480-0638 to obtain the password.

### Set Lockout Menu

Main Page\Go to Factory\Set Lockout

Set Point	Full Access
Oper. Autotune PID	Password
Oper. Edit PID	Password
Oper. Alarm SP	Password
Profile	Full Access
Setup	Password
Factory	Password



## ***EZ-Zone Limit Controller Setup Parameters***

---

**△ CAUTION:** The EZ-Zone Limit Controller has been properly configured by TestEquity to match the chamber’s system requirements. Improper modifications to these setup values can result in erratic performance and unreliable operation. Do not attempt to modify the setup values, unless you thoroughly understand what you are doing. If there is any doubt, please call TestEquity before proceeding.

### **Setup Menu**

Prompt	Function	Setting	Alternate Setting
<b>LoC</b>	Lockout Menu	<b>2</b>	See NOTE 1 below
<b>SEn</b>	Sensor Type	<b>tC</b>	Do Not Change
<b>L<sub>in</sub></b>	Linearization	<b>t</b>	Do Not Change
<b>dEC</b>	Decimal	<b>0</b>	Alt. “0.0”
<b>C<sub>F</sub></b>	°C or °F	<b>C</b>	Alt. “F”
<b>rLo</b>	Range Low	<b>-37</b>	Do not make any lower
<b>rHi</b>	Range High	<b>180</b>	Do not make any higher
<b>Fn2</b>	Output 2 Function	<b>L<sub>HP</sub></b>	Do Not Change
<b>L<sub>Sd</sub></b>	Limit Sides	<b>both</b>	Alt. “high” (High only) or “LoW” (Low only)
<b>L<sub>hY</sub></b>	Limit Hysteresis	<b>2</b>	Change not recommended
<b>ALY</b>	Alarm Type	<b>oFF</b>	Do Not Change
<b>PAR<sub>1</sub></b>	Upper Display	<b>ALP<sub>U</sub></b>	Alt. “none”
<b>PAR<sub>2</sub></b>	Lower Display	<b>L<sub>SE</sub></b>	Alt. “Lh.s” (High Set Point) or “LL.S” (Low Set Point)
<b>AdS</b>	Zone Address	<b>1</b>	Not functional for this application

NOTE 1: The Lockout Menu **LoC** sets the security clearance level as follows:

<b>1</b>	Operations Menu, read only
<b>2</b>	Operations Menu, set point read/write
<b>3</b>	Operations Menu, set point read or write (same as level 2)
<b>4</b>	Operations Menu, full access read/write (required to access Calibration Offset below)
<b>5</b>	Operations Menu and Setup Menu full access (required to access Setup Menu and Calibration Offset below)

### **Operations Menu**

Prompt	Function	Setting	Alternate Setting
<b>LLS</b>	Low Set Point	<b>-37</b>	Appropriate Low Limit Set Point
<b>LhS</b>	High Set Point	<b>180</b>	Appropriate High Limit Set Point
<b>.CR</b>	Calibration Offset	<b>0</b>	Calibration Offset as required (see NOTE 2 below)

NOTE 2: LoC parameter in Setup Menu must be set for 4 or 5 to access the Calibration Offset parameter.



## **Chapter 9 - Warranty**

### **TestEquity LLC Limited Warranty**

TestEquity LLC (TestEquity) warrants Environmental Chambers (Equipment) manufactured by TestEquity and supplied under this contract to be free from defects in materials and workmanship under normal use and proper maintenance.

TestEquity will repair or replace any defective part for a period of THREE YEARS from the date of invoice. TestEquity reserves the right to require any defective part be returned, freight prepaid, to TestEquity's factory or to inspect any defective part at the Purchaser's site. TestEquity shall have sole discretion to determine whether any part is defective and whether any defective part will be repaired or replaced. This limited warranty shall extend to any standard chamber accessory and component part which is normally sold by TestEquity. Non-standard accessories and component parts specified by the Purchaser shall be warranted only to the extent of the original manufacturer's warranty, if any exists.

If the repair or replacement is performed in the FIRST YEAR from the date of invoice, TestEquity will also pay for the labor associated with the repair at the Purchaser's site, subject to TestEquity's prior approval. During the SECOND and THIRD YEAR of the warranty period, Purchaser will be responsible for the installation and cost of installation of replacement or repaired parts. Purchaser shall notify TestEquity in writing of any alleged defect within 10 days after its discovery within the warranty period. TestEquity reserves the right to satisfy the labor portion of this limited warranty either through its own service personnel or an authorized agent. In order to provide expeditious service, TestEquity reserves the right to satisfy its limited warranty obligation by sending replacement parts to be installed by the Purchaser if they can be installed easily without special tools or training. TestEquity reserves the right to satisfy this limited warranty by requiring the Purchaser to return the Equipment to TestEquity when such return is feasible.

The following parts are excluded from this limited warranty and are sold as-is or are considered expendable: interior light bulb, viewing window, paint and cosmetic surface finishes and treatments, port plugs, and refrigerant.

This limited warranty shall extend in full to Equipment installed within continental United States and Canada. For all other locations, Purchaser is responsible for all labor costs for repairs or parts installation, and for all shipping costs associated with providing replacement parts.

This limited warranty does not cover: (1) Defects or damages arising as the result of shipment by common carriers or private transportation, unless TestEquity undertakes shipment and transportation of the Equipment to Purchaser's site or contractually assumes the risk of damage to the Equipment in shipment; (2) Defects or damages arising out of, or as the result, of mishandling, modification, or improper start up, installation or maintenance of the Equipment (including start up, installation or maintenance not in accordance with TestEquity's written procedures); (3) Defects or damages resulting from, or arising out of, abuse, misuse, neglect, intentional damage, accident, fire, flood, earthquake, or any other act of God.

This warranty as to Equipment is LIMITED to repair or replacement of parts or Equipment in the determination of TestEquity LLC THE FORGOING LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. TestEquity LLC DISCLAIMS ANY LIABILITY FOR ANY DAMAGES RESULTING FROM DELAY OR LOSS OF USE IN SERVICE OR REPAIR, OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE EQUIPMENT, EXCEPT AS STATED IN THIS PARAGRAPH.

This limited warranty cannot be modified in any way except in writing by both TestEquity and Purchaser. Invalidation of any one or more of the provisions of this limited warranty shall in no way affect any of the other provisions hereof, which remain in full force and effect.

This limited warranty shall be extended only to the first Purchaser of this Equipment and is not transferable.



**Chapter 10 – Drawings**



