

# KTA-LW600/4

## 4MB Memory Upgrade for

### Apple® LaserWriter 4/600 PS

---




## Introduction:

Kingston Technology® manufactures a 4MB memory upgrade, KTA-LW600/4 (4MB), for Apple® LaserWriter 4/600 PS printers. The printer comes standard with 2MB of memory, expandable to 6MB via the installation of a Kingston 4MB upgrade.

## Installation Procedure:

1. The LaserWriter 4/600 PS has no on/off switch. Before beginning this procedure, make sure the AC power cord is unplugged.
2. Open the toner cartridge door, located on top of the printer, and remove the toner cartridge.
3. In order to access the memory expansion socket, the printer's outer case must be removed. Inside the compartment where you just removed the toner cartridge, locate four phillips-head screws. Remove all four screws.
4. There is a plastic tab on each corner of the case; in order to release these tabs, you need to pull out and up on each corner of the case. The case is a very tight fit and it can be difficult to get all four of the tabs to release. However, if you release one corner at a time, until all four corners are free, you should be successful.

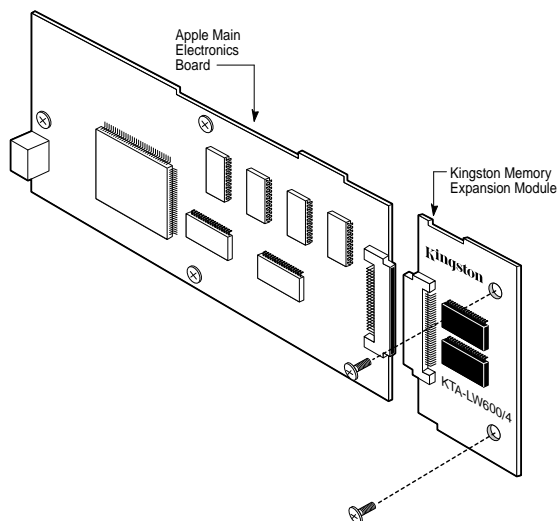

**Note:** If you have problems removing the case, you may want to contact your authorized Apple® Service Center for assistance.

5. Once the outer case has been removed, you must remove the sheet metal cover that conceals the memory expansion socket. Assuming you are facing the front of the printer, the metal panel is located on the left side. The panel is held in place with eight phillips-head screws. Remove all eight screws and remove the panel.
6. Install the memory upgrade as shown in the illustration. Secure your memory upgrade to the printer with the two screws (provided in the installation kit) as shown in the illustration.
7. Replace the metal cover; reinstall the printer's outer case; install the four screws that secure the outer case to the printer chassis; and install the toner cartridge.
8. After the memory is installed, you must configure the printing software to recognize the newly installed memory. Follow the instructions in your *LaserWriter 4/600 PS Owner's Manual* in the section "Configuring Your Printer Software." Once the software is configured, the installation is complete.