

How-To Guide

Serial-to-USB Adapter





Table of Contents

Overview	3
Step 1: Install Serial-to-USB Adapter	3
Step 2: Install SigPlus	4



Overview

With so many new computers lacking 9 PIN serial ports, Topaz has conducted tests with serial-to-USB adapters for your Topaz serial tablet. The Topaz-recommended serial-to-USB adapter is listed below. Topaz is also willing to test the compatibility of other serial-to-USB adapters. For more information, contact us.



Keyspan High-Speed USB to Serial Adapter

Model Number: USA-19HS

The USA-19HS is available at: www.tripplite.com.

Step 1: Install Serial-to-USB Adapter

The necessary drivers for serial-to-USB adapters are included with the adapters when purchased. Be sure to first follow all installation instructions provided with your adapter. Once these drivers are successfully installed, and the adapter is plugged in, SigPlus will need to be installed and configured to ensure full Tablet functionality. Before installing the latest version of SigPlus, start by finding to what virtual COM port the adapter has been assigned by following the instructions below.


- 1. Click on "Start" → "Settings" → "Control Panel".
- 2. Open the "System" icon.
- 3. Click on the "Hardware" tab.
- 4. Click on the "Device Manager" button.






Serial-to-USB Adapter How-To Guide

- 5. Locate the "+" sign in front of "Ports", and click on it.
- 6. The adapter will be listed with the COM setting next to it in ().

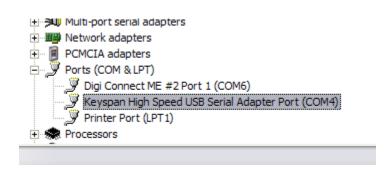


In this instance, the adapter is operating through COM4.

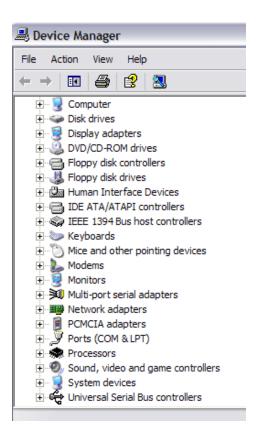

Step 2: Install SigPlus

Now that the serial-to-USB adapter is properly installed and operating through a virtual COM port, install SigPlus. The latest version can be downloaded at: www.topazsystems.com/Software/sigplus.exe.

The SigPlus installation process will take the user step-by-step through properly setting up the Topaz signature pad in order to function through the virtual COM port already installed.

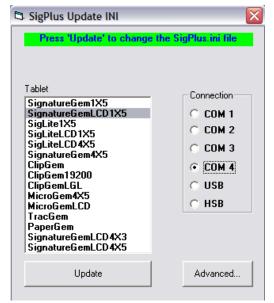

NOTE: BE SURE TO INSTALL SIGPLUS FOR SERIAL AND NOT USB OR HSB. CHOOSE THE VIRTUAL COMPORT ASSIGNED TO THE ADAPTER.

If SigPlus is already installed on your machine, then the settings can be changed by using the SigPlus Adjust tool, which can be downloaded from the Topaz site at: www.topazsystems.com/sigplusadjust.html.

For an in depth explanation of how SigPlus Adjust works, see the SigPlus Adjust How-To Guide.