



Halmac Services (Qld) Pty Ltd

ACN 098 852 923 ABN 40 741 712 113 ECL 53064

30 Palmer Place Murarrie, Qld 4172

Telephone (07) 3249 9500 Fax (07) 3249 9599

A QUALITY COMPANY TO AS/ISO9001

SP280 LAWSON PLACE SEWAGE PUMP STATION SWITCHBOARD

OPERATION & MAINTENANCE MANUAL

JOB No A4214

HALMAC SERVICES IS A QUALITY COMPANY SERVING QUEENSLAND SINCE 1960

ELECTRICAL ENGINEERS & CONTRACTORS, DATA & COMMUNICATIONS, SERVICE AND MAINTENANCE, SWITCHBOARD MANUFACTURE, PLC, SCADA, TELEMETRY DESIGN & INSTALLATION

Email info@halmac.net.au

Web Site www.halmac.net.au

ACR 999 922 923 ABR 42 241 212 125
Halmac Services(Qld)Pty.Ltd.
 30 Palmer Place Murarrie, Qld. 4172
 Telephone : (07) 3249 9500 Fax : (07) 3249 9599
 A QUALITY COMPANY TO AS/1509001



**SP280 LAWSON
 PLACE SEWAGE PUMP
 STATION**

**OPERATION &
 MAINTENANCE
 MANUAL**

JOB NO: A4214

1	<i>MOULDED CASE CIRCUIT BREAKER</i>
2	<i>MINIATURE CIRCUIT BREAKER</i>
3	<i>CONTACTOR</i>
4	<i>CONTROL RELAY & PHASE FAILURE RELAY</i>
5	<i>CHASSIS</i>
6	<i>FUSE & FUSE HOLDER</i>
7	<i>GSM MODEM</i>
8	<i>HUMAN MACHINE INTERFACE</i>
9	<i>LOAD BREAK SWITCH</i>
10	<i>LEVEL TRANSMITTER</i>
11	<i>MULTITRODE LEVEL RELAY</i>
12	<i>POWER SUPPLY & BATTERY</i>
13	<i>PROXIMITY SWITCH</i>
14	<i>PUSHBUTTON & INDICATOR</i>
15	<i>PRESSURE TRANSMITTER & ADJUSTMENT UNIT</i>
16	<i>SOFT STARTER</i>
17	<i>SURGE DIVERTER & SURGE REDUCTION FILTER</i>
18	<i>TIMER</i>
19	<i>TEST SHEETS</i>
20	<i>SECTION NOT USED</i>
21	<i>SECTION NOT USED</i>
22	<i>SECTION NOT USED</i>
23	<i>SECTION NOT USED</i>
24	<i>SECTION NOT USED</i>



8



Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113


MOULDED CASE CIRCUIT BREAKER

1. S400NE MCCB TECHNICAL DETAILS
2. S125GJ & E125NJ MCCB TECHNICAL DETAILS
3. MCCB ACCESSORIES

NHP

Electronic type

S400NE

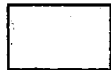

50kA

Current rating: 100 – 400A

Approvals and Tests:
Standards: AS/NZS 3947-2, and IEC60947-2

Interrupting capacity:

	Voltage	Icu	Ics
AC use	380/415	50	50

Over Current Relay:


- Electronic, for general & selectivity applications
- 7 dial selectable characteristic curves suited for a variety of applications
- Base current I_r is adjustable from 40% - 100% of the nominal rated current I_n .
- STD setting 2.5 – 10 ($\times I_R$)²
- INST setting 13 – 14 ($\times I_R$)²

OCR Options:

- Ground Fault Trip
- Neutral Pole protection for 4 pole ONLY MCCBs
- Pre-Trip Alarm

Dimensions (mm)

Poles	3	4
H	260	260
W	140	185
D (less toggle)	103	103

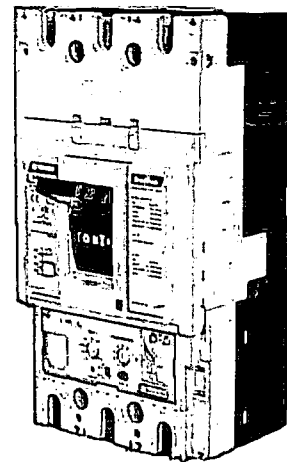

Ampere

Rating

I_R Adjustment

NRC

Min.

Max.

Cat. No. 1)

250	100	250	S400 NE _ 250
400	160	400	S400 NE _ 400

Price Adder - if OCR options are required, add the selected OCR option price below to the above MCCB price to calculate the total MCCB cost.

3P OCR options: PTA ³⁾	S400 NE 3 AP #
GF ³⁾	S400 NE 3 AG #
PTA + GF ³⁾	S400 NE 3 APG #
4P OCR options: PTA ³⁾	S400 NE 4 AP #
AP ³⁾	S400 NE 4 AN #
PTA + NP ³⁾	S400 NE 4 APN #
GF + NP ³⁾	S400 NE 4 AGN #
PTA + GF + NP ³⁾	S400 NE 4 APGN #


- 1) Add poles to complete MCCB catalogue number. Eg: 3 pole 250A: S400NE 3 250. "*" add OCR trip unit rating where shown.
- 2) The STD and Instantaneous pickup currents (I_{sd} & I_i) settings are not individually adjustable, however by selecting different curve types and different I_R settings the values will vary. Curve 1 & 2 $I_{sd} = 2.5 \times I_R$, curve 3 $I_{sd} = 5 \times I_R$, curve 4 - 7 $I_{sd} = 10 \times I_R$. I_R dial setting 0.4 – 0.9 $I_i = 14 \times I_R$ and I_R dial setting 0.95 – 1.0 $I_i = 13 \times I_R$. Refer curve examples & setting data on pages 18 to 30.
NRC = Nominal rated current, I_R = Current adjustment dial setting, STD = Short Time Delay, INST = instantaneous
- 3) To order a MCCB with the above options insert the required option after the pole to make up the cat. number. Eg: S400NE 4 APGN 250 is a S400GE 4 Pole 250A MCCB c/w Pre-trip Alarm, Neutral Protection and Ground Fault protection.

Replaces: XS400SE, Note: check exact ratings or dimensions to suit your application requirement

Price Schedule T2



TEMBREAK 2 MCCBs

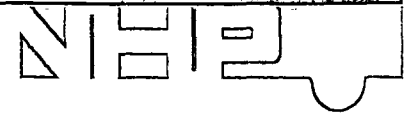


OPERATING CHARACTERISTICS

ELECTRONIC CHARACTERISTICS

S400-NE, S400-GE, H400-NE, L400-NE

SECTION 3

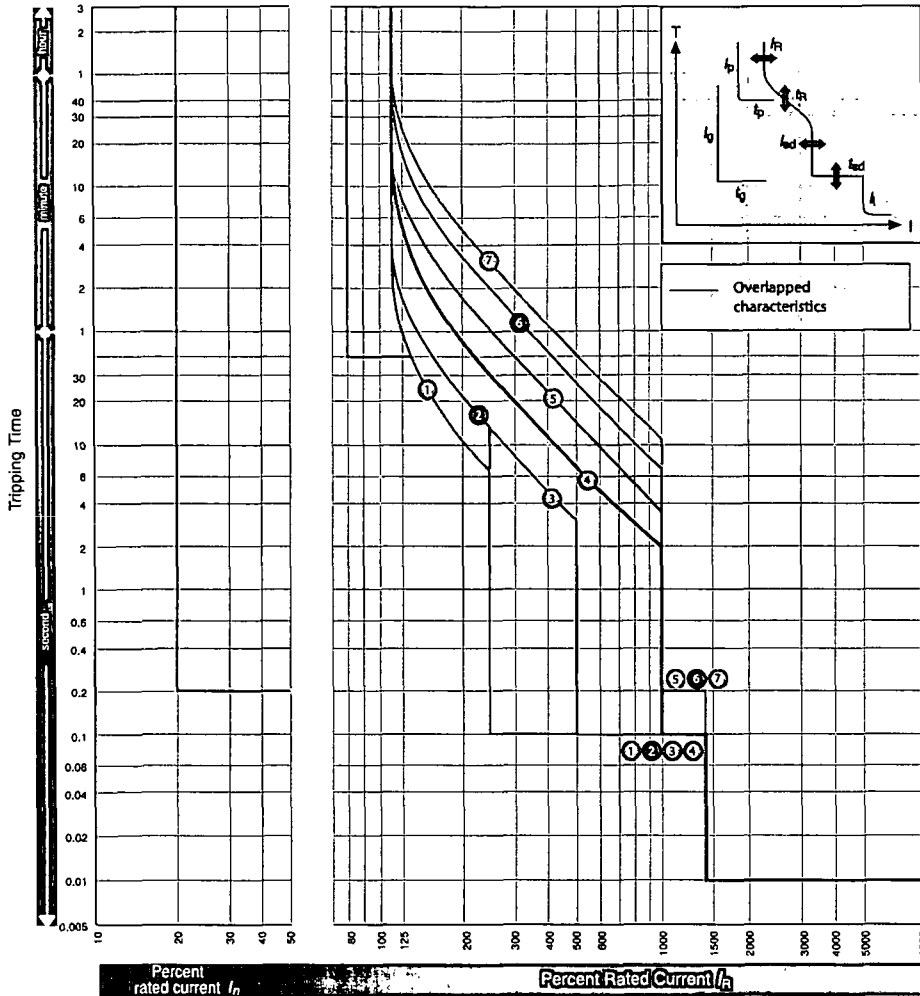

$I_N = 400A; 250A$

		$I_R(A)$									
		LTD Pick-up current	I_R	x/I_N	0.4	0.5	0.63	0.8	0.9	0.95	1.0
Standard	LTD	t_R	(s)		11	21	21	5	10	19	29
	STD	I_{sd}	x/I_R		2.5		5	10			
		t_{sd}	(s)		0.1				0.2		
	INST	I_i	x/I_R		14(Max: 13 x I_N) Note (1)						
Option	PTA	I_p	x/I_R		0.8						
		t_p	(s)		40						
	GFT	I_g	x/I_N		0.2						
		t_g	(s)		0.2						
N	I_N	x/I_N		1.0							
	t_N	(s)		$t_N = t_R$ Note(2)							

Note

(1) I_i max. = 13 x I_N . (2) Standard setting of I_N is 100% of I_N . For any other setting please specify when ordering.



TEMBREAK 2 MCCBs





OPERATING CHARACTERISTICS

LET-THROUGH PEAK CURRENT CHARACTERISTICS

H160-NJ, L160-NJ, S250-PE, H250-NJ, H250-NE, L250-NJ. 440V AC.



H160-NJ, L160-NJ, S250-PE, H250-NJ, H250-NE, L250-NJ. 690V AC.

SECTION 3

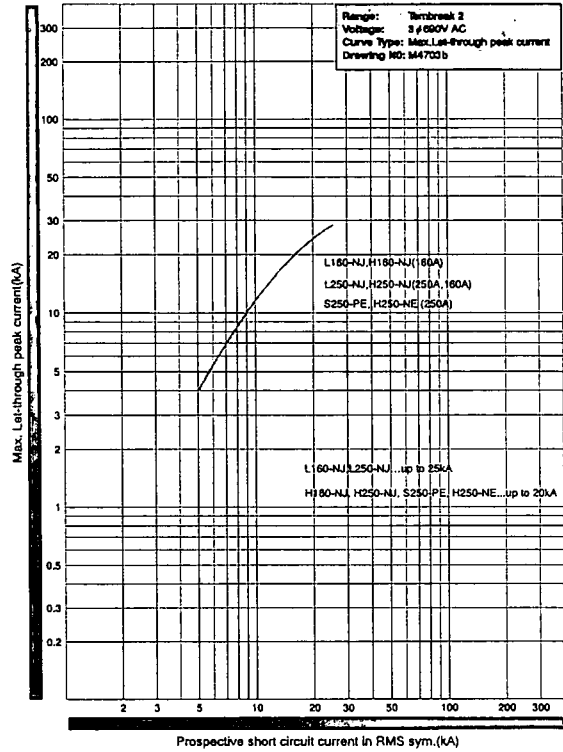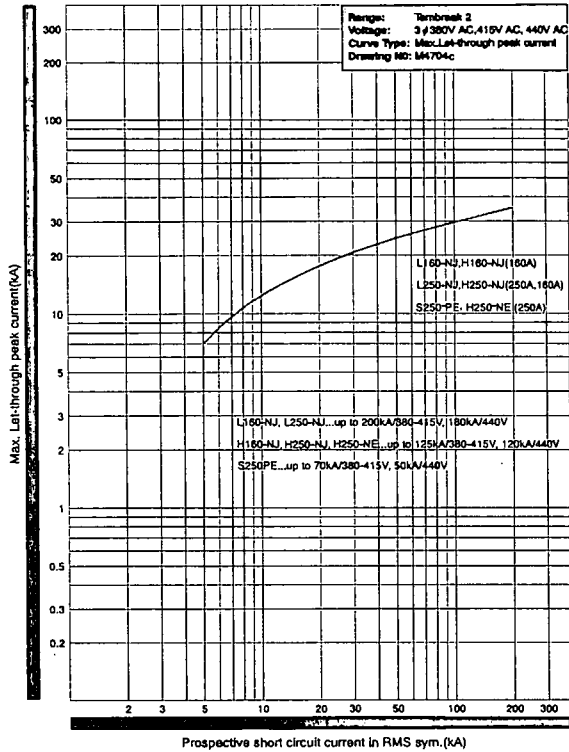

E400-NJ, S400-CJ, S400-NJ, S400-NE, S400-GJ, S400-GE, 415V AC.

S400-CJ, S400-NJ, S400-NE, S400-GJ, S400-GE, 690V AC.

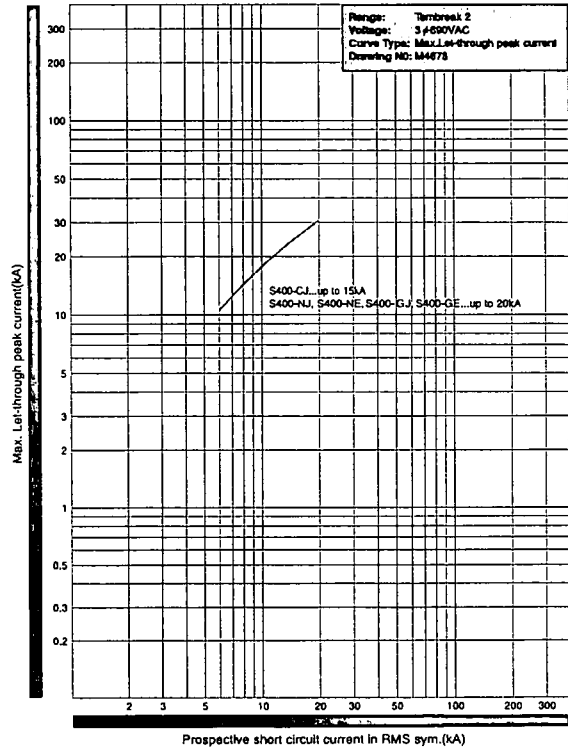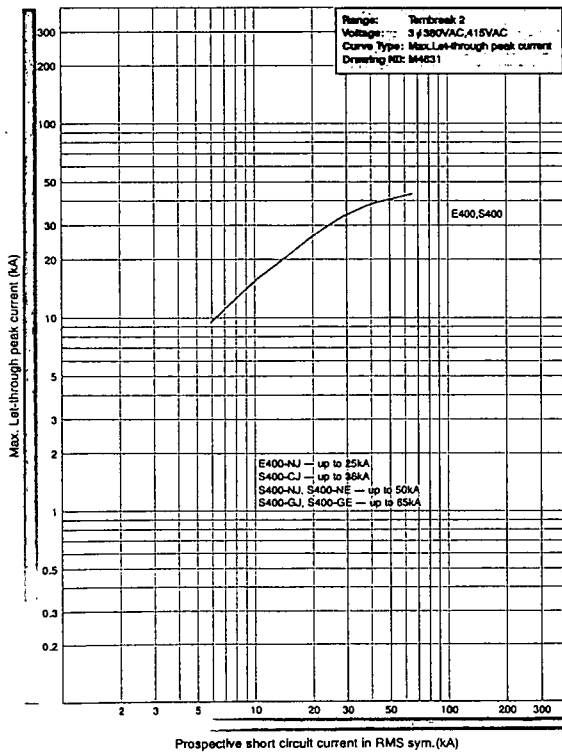

Selectivity & Cascade Tables
@ 400 / 415 V

Downstream MCCBs	Upstream MCCBs	kA (RMS)	S250PE	H250NE	S400NE	S400E	H400NE	L400NE	E630NE	S630E
			70	125	50	70	125	200	36	50
E125NJ	25	25/25	25/65	25/36	25/50	25/65	25/85	25/36	25/25	
S125NJ	36	36/36	36/85	36/50	36/65	36/85	36/125	36/36	36/36	
S125GJ	65	65/65	65/125	50/50	65/70	65/125	65/150	36/36	50/50	
H125NJ	125	70/70	125/125	50/50	70/70	125/125	125/200	36/36	50/50	
S160NJ	36			36/50	36/65	36/85	36/125	36/36	36/50	
S160GJ	65			50/50	65/70	65/125	65/150	36/36	50/50	
H160NJ	125					125/125	125/200	36/36	50/50	
E250NJ	25					25/65	25/85	25/36	25/25	
S250NJ	36					36/85	36/125	36/36	36/36	
S250GJ	65					65/125	65/150	36/36	50/50	
S250PE	70					40/125	70/150	36/36	50/50	
H250NJ	125					125/125	125/200	36/36	50/50	
H250PE	125					125/125	125/200	36/36	50/50	
E400NJ	25							10/25	10/25	
S400CJ	36							10/36	10/36	
S400NE	50							10/36	10/50	
S400NJ	50							10/36	10/36	
S400GJ	70							10/36	10/50	
H400NJ	125							10/36	10/50	
H400NE	125							10/36	10/50	
E630NE	36									
E630CE	50									
S630GE	70									
XS630CJ	45									
XS630NJ	65									
XS630PJ	85									
XS630SE	50									
XH630SE	65									
XH630PE	65									
XS800NJ	65									
XS800SE	50									
XJ800PJ	85									
XH800SE	65									
XH800PE	65									
XS1250SE	65									
XS1600SE	85									

XX / YY		Selectivity / Cascade									
S630GE	TL630NE	XS800SE	XH800SE	TL800NE	XS1250SE	TL1250NE	XS1600SE	XS2000NE	XS2500NE	XS2500SE	XS2500NE
70	125	50	65	125	85	125	100	85	85	85	85
25/50	25/25	25/36	25/36	25/65	25/25	25/25	25/25	25/25	25/25	25/25	25/25
36/65	36/36	36/50	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36
65/70	65/65	65/50	65/65	65/65	65/65	65/65	65/65	65/65	65/65	65/65	65/65
70/70	70/70	50/50	65/65	65/65	85/50	85/50	100/100	85/85	85/85	85/85	85/85
36/50	36/36	36/36	36/65	36/65	36/36	36/36	36/36	36/36	36/36	36/36	36/36
65/70	65/65	50/50	50/65	50/65	65/65	65/65	65/65	65/65	65/65	65/65	65/65
70/70	70/70	50/50	50/65	50/65	85/65	85/65	100/100	85/85	85/85	85/85	85/85
25/50	25/25	25/25	25/50	25/50	25/25	25/25	25/25	25/25	25/25	25/25	25/25
36/65	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36
65/70	65/65	50/50	50/65	50/65	65/65	65/65	65/65	65/65	65/65	65/65	65/65
70/70	70/70	50/50	50/65	50/65	70/70	70/70	70/70	70/70	70/70	70/70	70/70
70/70	70/70	50/50	50/65	50/65	85/85	85/85	100/100	85/85	85/85	85/85	85/85
70/70	70/70	50/50	50/65	50/65	85/85	85/85	100/100	85/85	85/85	85/85	85/85
10/50	10/36	25/25	25/25	25/36	25/25	25/25	25/36	25/25	25/25	25/25	25/25
10/65	10/50	25/36	25/36	25/50	36/36	36/36	36/50	36/36	36/36	36/36	36/36
10/50	10/50	25/50	25/50	25/50	50/50	50/50	50/50	50/50	50/50	50/50	50/50
10/70	10/65	25/50	25/50	25/65	50/50	50/50	50/65	50/50	50/50	50/50	50/50
10/70	10/70	25/50	25/50	25/65	70/36	70/36	70/85	70/70	70/70	70/70	70/70
10/70	10/70	25/50	25/65	25/65	125/85	125/85	125/100	125/85	125/85	125/85	125/85
10/70	10/70	25/50	25/65	25/65	125/85	125/85	125/100	125/85	125/85	125/85	125/85
		25/36	25/36	25/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36
		25/50	25/50	25/50	50/50	50/50	50/50	50/50	50/50	50/50	50/50
					70/70	70/70	70/70	70/70	70/70	70/70	70/70
					30/45	30/45	30/45	35/45	35/45	35/45	35/45
					30/65	30/65	30/65	35/65	36/65	36/65	36/65
					30/85	30/85	30/85	35/85	35/85	35/85	35/85
					30/65	30/65	30/85	30/85	30/85	30/85	30/85
					30/65	30/65	30/85	30/85	30/85	30/85	30/85
					30/65	30/65	30/85	30/85	30/85	30/85	30/85
					15/65	15/65	20/65	35/65	35/65	35/65	35/65
					15/50	15/50	20/50	35/50	35/50	35/50	35/50
					15/85	15/85	20/85	35/85	35/85	35/85	35/85
					15/65	15/65	20/65	35/65	35/65	35/65	35/65
					15/65	15/65	20/65	35/65	35/65	35/65	35/65
							20/65	35/65	35/65	35/65	35/65
								35/85	35/85	35/85	35/85

APPLICATION DATA
SELECTIVITY TABLES

TEMBREAK 2 MCCBs



Beyond the Standard™ TemBreak page 7

SECTION 4



TEMBREAK 2 MCCBs



APPLICATION DATA

CASCADE TABLES

SECTION 4

CASCADE @ 380 - 415 V AC ¹⁾ Downstream MCCBs	kA (RMS)	E125NJ	S125NJ	S125GJ	H125NJ	L125NJ	S160NJ	S160GJ	H160NJ	L160NJ	E250NJ	S250NJ	S250GJ	S250PE	H250NJ	H250NE	L250NJ
		25	36	65	125	200	36	65	125	200	25	36	65	70	125	125	200
E125NJ	25	-	36	36	65	85	36	36	65	85	-	36	36	-	65	65	85
S125NJ	36	-	-	50	85	125	-	50	85	125	-	-	-	-	85	85	125
S125GJ	65	-	-	-	125	150	-	-	125	150	-	-	65	-	125	125	150
H125NJ	125	-	-	-	-	200	-	-	-	200	-	-	65	-	-	-	200
S160NJ	36	-	-	65	-	-	-	65	85	125	-	-	65	65	85	85	125
S160GJ	65	-	-	-	-	-	-	-	125	150	-	-	-	70	125	125	150
H160NJ	125	-	-	-	-	-	-	-	-	200	-	-	-	-	-	-	200
S250NJ	36	-	-	-	-	-	-	65	-	-	-	-	-	65	85	85	125
S250GJ	65	-	-	-	-	-	-	-	-	-	-	-	-	70	125	125	150
S250PE	70	-	-	-	-	-	-	-	-	-	-	-	-	-	125	125	150
H250NJ	125	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
E400NJ	25	-	-	-	-	-	-	-	-	-	-	-	-	36	65	65	-
S400CJ	36	-	-	-	-	-	-	-	-	-	-	-	-	50	70	70	-
S400NJ	50	-	-	-	-	-	-	-	-	-	-	-	-	50	65	85	85
S400GJ	70	-	-	-	-	-	-	-	-	-	-	-	-	50	-	125	125
H400NJ	125	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: ¹⁾ Ratings have not been verified where a dash "-" is shown.

All pick-up and time delay settings are to be set at a maximum for upstream MCCB's

CASCADE @ 380 - 415 V AC ¹⁾ Downstream MCCBs	kA (RMS)	Upstream MCCBs																		
		S400CJ	S400NE	S400GJ	S400GE	H400NE	H400NJ	L400NJ	L400NE	E630NE	S630CE	S630GE	TL630NE	XS800SE	XS800NJ	XH800SE	TL800NE	XS1250SE	XS1600SE	
E125NJ	25	36	36	50	65	85	85	36	-	50	-	36	36	36	-	-	-	-	-	-
S125NJ	36	-	50	65	85	125	125	-	-	65	-	50	50	-	-	-	-	-	-	-
S125GJ	65	-	-	70	125	150	150	-	50	70	-	-	-	65	-	-	-	-	-	-
H125NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	65	-	50	-	-	-	-
S160NJ	36	-	50	65	85	125	125	-	50	50	-	-	65	65	-	-	-	-	-	-
S160GJ	65	-	-	70	125	150	150	-	-	70	-	-	-	-	-	-	-	-	-	-
H160NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	65	-	65	-	-	-	-
E250NJ	25	36	36	50	65	85	85	36	-	50	-	-	36	50	-	-	-	-	-	-
S250NJ	36	-	50	65	85	125	125	-	-	65	-	-	65	-	-	-	-	-	-	-
S250GJ	65	-	-	70	125	150	150	-	-	70	-	-	-	-	-	-	-	-	-	-
S250PE	70	-	-	-	125	150	150	-	-	-	-	-	-	-	-	-	-	-	-	-
H250NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	-	-	-	-	-	-	-
E400NJ	25	36	36	50	65	85	85	36	-	50	36	-	-	-	36	-	-	-	-	36
S400CJ	36	-	50	65	70	100	100	-	-	65	50	-	-	-	50	-	-	-	-	50
S400NJ	50	-	-	70	85	125	125	-	36	70	65	-	-	50	65	-	-	-	-	65
S400GJ	70	-	-	-	125	150	150	-	36	-	-	-	-	50	-	36	85	-	-	-
H400NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: ¹⁾ Ratings have not been verified where a dash "-" is shown.

All pick-up and time delay settings are to be set at a maximum for upstream MCCBs

APPLICATION DATA

SELECTIVITY AND CASCADE TEMBREAK 2 MCCBs AND DIN-T / SAFE-T MCBs

Downstream MCB	Amp rating	kA (RMS)	Upstream MCCB							
			E125NJ	S125NJ	H125NJ S125GJ	S250NJ	S250GJ	S400CJ	S400GE S400GJ	H400NJ
			25	36	65	36	65	36	70	125
DTCB6	2 – 20	6	18/18	25/25	35/35	35/35	35/35	–	–	–
	25 – 63	6	18/18	20/25	20/25	30/30	30/30	–	–	–
DTCB10	0.5 – 32	10	18/18	30/30	30/50	35/35	40/50	35/35	40/50	40/50
	40 – 63	10	18/18	20/25	25/25	30/30	30/30	30/30	30/30	30/30
DSRCBH /	0.5 – 32	10	18/18	30/30	30/50	35/35	40/50	35/35	40/50	40/50
	DSRCD	40	18/18	20/25	25/25	30/30	30/30	30/30	30/30	30/30
Din-T10H	80 – 125	10	4/18	4/25	4/25	15/15	15/15	10/10	10/10	–
DTCH15	0.5 – 32	15	18/18	30	30/50	35/35	40/50	35/35	40/50	40/50
	40 – 63	15	18/18	20	25/25	30/30	30/30	30/30	30/30	30/30
Safe-T	16 – 20	6	3/10	3/10	3/10	–	–	–	–	–
SRCB	16 – 20	6	3/10	3/10	3/10	–	–	–	–	–

Guide


XX / YY

Selectivity	Cascade
-------------	---------

Notes: All figures stated are at 400/415 V AC.



TEMBREAK 2 MCCBs

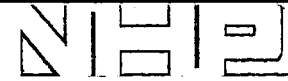

APPLICATION DATA

MOTOR STARTING TYPE 1 CO-ORDINATION TABLES

Short-Circuit Co-Ordination Motor Starting Table

Type '1'
Terasaki MCCB's & Sprecher + Schuh KT7's
DOL starting 50/65 kA @ 400/415 V to AS/NZS 60947.4.1



SECTION 4

Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	XM30PB/1.4	CA7-8
0.55	1.5	XM30PB/2	CA7-8
0.75	1.8	XM30PB/2.8	CA7-8
1.1	2.6	XM30PB/4.0	CA7-8
1.5	3.4	XM30PB/5	CA7-8
2.2	4.8	XM30PB/8	CA7-8
3	6.5	XM30PB/10	CA7-8
4	8.2	XM30PB/12	CA7-8
5.5	11	S125GJ/20	CA7-12
7.5	14	S125GJ/20	CA7-16
11	21	S125GJ/32	CA7-23
15	28	S125GJ/50	CA7-30
18.5	34	S125GJ/50	CA7-37
22	40	S125GJ/83	CA7-43
30	55	S125GJ/100	CA7-60
37	66	S125GJ/100	CA7-72
45	80	S125GJ/125	CA7-85
55	100	S125GJ/125	CA8-110
5	130	S250PE/250	CA8-140
0	155	S250PE/250	CA8-180
10	200	S250PE/250	CA8-210
32	225	S400GE/400	CA8-210
60	270	S400GE/400	CA8-300
00	361	S400GE/400	CA8-420

Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1.0A	CA7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-4.0A	CA7-9
CT 7-24	4.0 - 8.0	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-10A	CA7-9
CT 7-24	10 - 16	KTA7-25H-16A	CA7-12
CT 7-24	10 - 16	KTA7-25H-16A	CA7-16
CT 7-24	16 - 24	KTA7-45H-20A	CA7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA7-43
CT 7-75	45 - 60	KTA3-100-63A	CA7-60
CT 7-75	60 - 75	KTA3-100-90A	CA7-72
CT 7-100	70 - 80	KTA3-100-90A	CA7-85
CEF 1-11/12	20 - 180	KTA3-160S-100A	CA6-110
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-140
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-180
CEF 1-41/42	180 - 400	KTA3-250S-200A	CA6-210
CEF 1-41/42	180 - 400	KTA3-250S-250A	CA6-250
CEF 1-41/42	180 - 400	KTA3-400S-320A	CA6-300
CEF 1-41/42	180 - 400	KTA3-400S-400A	CA6-420

- Notes:
- Thermal or electronic overload relays may be used.
 - XM30PB MCCB's can be replaced with S125GJ/20 if required.
 - Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

APPLICATION DATA

MOTOR STARTING TYPE 2 CO-ORDINATION TABLES

Short-Circuit Co-Ordination DOL Motor Starting Table

Type '2'
 Terasaki MCCB's & Sprecher + Schuh KT7's
 DOL starting 50/65 kA @ 400/415 V to AS/NZS 60947.4.1

**TYPE 2
 50/65 kA**

Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	XM30PB/1.4	CA7-8
0.55	1.5	XM30PB/2	CA7-8
0.75	1.8	XM30PB/2.8	CA7-8
1.1	2.6	XM30PB/4.0	CA7-18
1.5	3.4	XM30PB/5	CA7-18
2.2	4.8	XM30PB/8	CA7-18
3	6.5	XM30PB/10	CA7-30
4	8.2	XM30PB/12	CA7-30
5.5	11	S125GJ/20	CA7-30
7.5	14	S125GJ/20	CA7-30
11	21	S125GJ/32	CA7-30
15	28	S125GJ/50	CA7-43
18.5	34	S125GJ/50	CA7-43
22	40	S125GJ/83	CA7-43
30	55	S125GJ/100	CA7-72
37	66	S125GJ/100	CA7-72
45	80	S125GJ/125	CA8-105
55	100	S250PE/180	CA8-105
75	130	S250PE/250	CA8-140
90	155	S250PE/250	CA8-170
110	200	S250PE/250	CA8-210
132	225	S400PE/400	CA8-210
160	270	S400PE/400	CA8-300
200	361	S400PE/400	CA8-420


Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1A	CA7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.8A	CA7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-4A	CA7-9
CT 7-24	4.0 - 8.0	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-10A	CA7-9
CT 7-24	10 - 18	KTA7-25H-16A	CA7-12
CT 7-24	10 - 18	KTA7-25H-16A	CA7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA7-30
CT 7-45	30 - 46	KTA7-45H-45A	CA7-37
CT 7-45	30 - 46	KTA7-45H-45A	CA7-43
CT 7-75	46 - 80	KTA3-100-63A	CA7-60
CT 7-75	80 - 75	KTA3-100-90A	CA7-72
CT 7-100	70 - 80	KTA3-100-90A	CA7-85
CEF 1-11/12	20 - 180	KTA3-160S-100A	CA6-110
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-140
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-180
CEF 1-41/42	180 - 400	KTA3-250S-200A	CA6-210
CEF 1-41/42	180 - 400	KTA3-250S-250A	CA6-250
CEF 1-41/42	180 - 400	KTA3-400S-320A	CA6-300
CEF 1-41/42	180 - 400	KTA3-400S-400A	CA6-420

Notes: • Thermal or electronic overload relays may be used.
 • XM30PB combinations can be replaced with S125GJ/20 and CA7-30 if required.
 • Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

SECTION 4



TEMBREAK 2 MCCBs

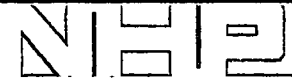

APPLICATION DATA

MOTOR STARTING TYPE 2 CO-ORDINATION

Short-Circuit Co-Ordination DOL Motor Starting Table

Type '2'
Terasaki MCCB's & Sprecher + Schuh KT7's
DOL starting 85 kA @ 400/415 V to AS/NZS 60947.4.1



SECTION 4

Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	XM30PB/1.4	CA 7-9
0.55	1.5	XM30PB/2	CA 7-9
0.75	1.8	XM30PB/2.6	CA 7-9
1.1	2.6	XM30PB/4.0	CA 7-18
1.5	3.4	XM30PB/5	CA 7-18
2.2	4.8	XM30PB/8	CA 7-30
3	6.5	XM30PB/10	CA 7-30
4	8.2	XM30PB/12	CA 7-30
5.5	11	H125NJ/20	CA 7-30
7.5	14	H125NJ/20	CA 7-30
11	21	H125NJ/32	CA 7-30
15	28	H125NJ/50	CA 7-49
18.5	34	H125NJ/50	CA 7-49
22	40	H125NJ/63	CA 7-49
30	55	H125NJ/100	CA 7-72
37	66	H125NJ/100	CA 7-72
45	80	H125NJ/180	CA 8-105
55	100	H180NJ/180	CA 8-105
75	130	H250PE/250	CA 8-210
90	155	H250PE/250	CA 8-210
110	200	H250PE/250	CA 8-210
132	225	H400NE/400	CA 8-210
160	270	H400NE/400	CA 8-300
200	361	H400NE/400	CA 8-420

Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1A	CA 7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA 7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-4A	CA 7-9
CT 7-24	4.0 - 8.0	KTA7-25H-6.3A	CA 7-9
CT 7-24	8.0 - 10	KTA7-25H-6.3A	CA 7-9
CT 7-24	8.0 - 10	KTA7-25H-10A	CA 7-9
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-12
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA 7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA 7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-43
CT 7-75	45 - 80	KTA3-100-63A	CA7-60
CT 7-75	80 - 75	KTA3-100-90A	CA7-72
CT 7-100	70 - 80	KTA3-100-90A	CA7-85
GEF 1-11/12	20 - 180	-	-
GEF 1-11/12	20 - 180	-	-
GEF 1-11/12	20 - 180	-	-
GEF 1-41/42	180 - 400	-	-
GEF 1-41/42	180 - 400	-	-
GEF 1-41/42	180 - 400	-	-
GEF 1-41/42	180 - 400	-	-

- Notes:
- Thermal or electronic overload relays may be used.
 - XM30PB combinations can be replaced with H125GJ/20 and CA7-30 if required.
 - Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

APPLICATION DATA

MOTOR STARTING TYPE 2 CO-ORDINATION

Short-Circuit Co-Ordination DOL Motor Starting Table

Type '2'
Terasaki MCCB's & Sprecher + Schuh KT7's
DOL starting 100 kA @ 400/415 V to AS/NZS 60947.4.1



Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	H125NJ/20	CA 7-30
0.55	1.5	H125NJ/20	CA 7-30
0.75	1.8	H125NJ/20	CA 7-30
1.1	2.6	H125NJ/20	CA 7-30
1.5	3.4	H125NJ/20	CA 7-30
2.2	4.8	H125NJ/20	CA 7-30
3	6.5	H125NJ/20	CA 7-30
4	8.2	H125NJ/20	CA 7-30
5.5	11	H125NJ/20	CA 7-30
7.5	14	H125NJ/20	CA 7-30
11	21	H125NJ/32	CA 7-30
15	28	H125NJ/50	CA 7-43
18.5	34	H125NJ/50	CA 7-43
22	40	H125NJ/63	CA 7-43
30	55	H125-NJ/100	CA 7-80
37	66	H125-NJ/100	CA 7-72
45	80	H125-NJ/125	CA 7-85
55	100	H250-NE/180	CA 8-85
75	130	H250-NE/250	CA 8-140
90	155	H250-NE/250	CA 8-140
110	200	H250-NE/250	CA 8-180
132	225	H400-NE/400	CA 8-420
160	270	H400-NE/400	CA 8-420
200	361	H400-NE/400	CA 8-420

Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1A	CA 7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA 7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-4A	CA 7-9
CT 7-24	4.0 - 8.0	KTA7-25H-6.3A	CA 7-9
CT 7-24	8.0 - 10	KTA7-25H-6.3A	CA 7-9
CT 7-24	8.0 - 10	KTA7-25H-10A	CA 7-9
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-12
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA 7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA 7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-43
CT 7-75	45 - 80	-	-
CT 7-75	80 - 75	-	-
CT 7-100	70 - 80	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-

Notes: • Thermal or electronic overload relays may be used.
• Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

SECTION 4



TEMBREAK 2 MCCBs



INSTALLATION

TEMPERATURE RATINGS & DERATINGS

Calibration Temperature: 45°C

MCCB type	Connection Type	Rating at calibration temperature (50°C)	Rated Current (A)			
			50°C	55°C	60°C	65°C
E125-NJ S125-NJ S125-GJ	Front	20A	19	18.5	18	17.5
	Rear	32A	31	30.5	30	29
	Plug-in	50A	48	45	43	41
		63A	60	57	55	52
		100A	97	94	90	87
		125A	121	117	113	109
H125-NJ L125-NJ	Front	20A	19	18.5	18	17.5
	Rear	32A	31	30	29	28
	Plug-in	50A	48	47	45	44
		63A	61	59	57	55
		100A	97	95	92	89
		125A	121	118	114	111
S160-NJ S160-GJ	Front	20A	19	18.5	18	17.5
	Rear	32A	31	30	29	28
	Plug-in	50A	48	46	44	42
		63A	61	59	57	55
		100A	97	94	91	88
		125A	121	117	113	109
H160-NJ L160-NJ	Front	160A	156	151	146	141
	Plug-in	160A	156	151	147	143
E250-NJ	Front	20A	19	18.5	18	17.5
	Rear	32A	31	30	29	28
	Plug-in	50A	48	46	44	42
		63A	61	59	57	55
		100A	97	94	91	88
		125A	121	117	113	109
E250-NJ S250-NJ S250-GJ	Front	160A	156	151	146	141
	Plug-in	250A	243	235	227	219
H250-NJ L250-NJ	Front	160A	156	151	147	143
	Rear	160A	156	151	147	143
	Plug-in	160A	156	151	147	143
E400-NJ S400-CJ S400-NJ S400-GJ	Front	250A	244	237	230	223
	Plug-in	400A	390	380	369	358
H400-NJ L400-NJ	Front	250A	243	237	230	223
	Rear	400A	390	381	371	361
	Plug-in	250A	243	237	231	224
		400A	392	384	376	368

Calibration Temperature: 30°C

MCCB type	Connection Type	Rating at calibration temperature (30°C)	Rated Current (A)						
			35°C	40°C	45°C	50°C	55°C	60°C	65°C
H250-NJ L250-NJ	Plug-in Conn.	250A	244	236	225	219	209	200	190

MCCB Type	Connection Type	Rating	Rated Current (A)							
			30°C	35°C	40°C	45°C	50°C	55°C	60°C	65°C
S250-PE H250-NE	Front	250A	250	250	250	250	237.5	225	200	200
	Rear	250A	250	250	250	250	250	250	225	200
	Plug-in	250A	250	237.5	225	225	200	200	157.5	157.5
S400-NE S400-GE	Front	250A	250	250	250	250	250	250	225	200
	Rear	400A	400	400	400	400	400	380	360	320
	Plug-in	400A	400	400	400	400	400	380	360	320
H400-NE L400-NE	Front	250A	250	250	250	250	250	250	225	200
	Rear	400A	400	400	400	400	400	380	360	320
	Plug-in	250A	250	250	250	250	250	250	225	200
		400A	400	400	400	400	400	380	360	320
E630-NE S630-CE S630-GE	Front	630A	630	630	630	630	598.5	598.5	567	504
	Rear	630A	630	630	630	630	598.5	598.5	567	504

SECTION 6

TEMBREAK 2 MCCBs




DIMENSIONS


E400-NJ, S400-CJ, S400-NJ, S400-NE, S400-GJ, S400-GE

ASL: Arrangement Standard Line
Ht: Handle Frame Centre Line


Front connected

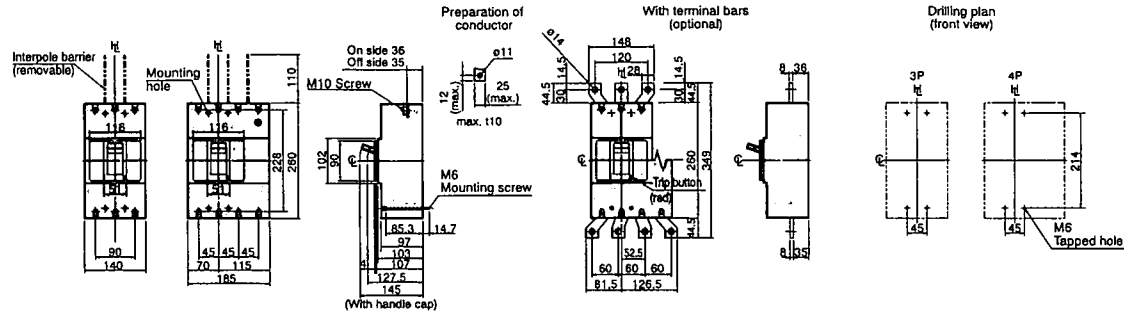


Rear connected

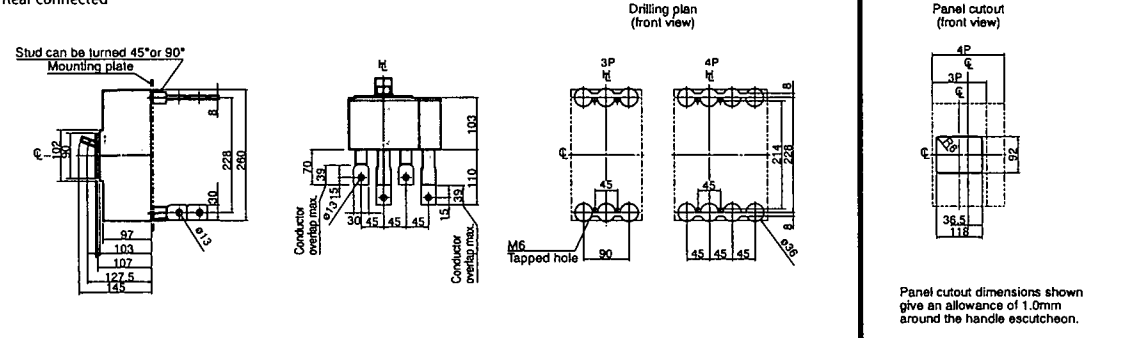

Front connected with Motor Operator

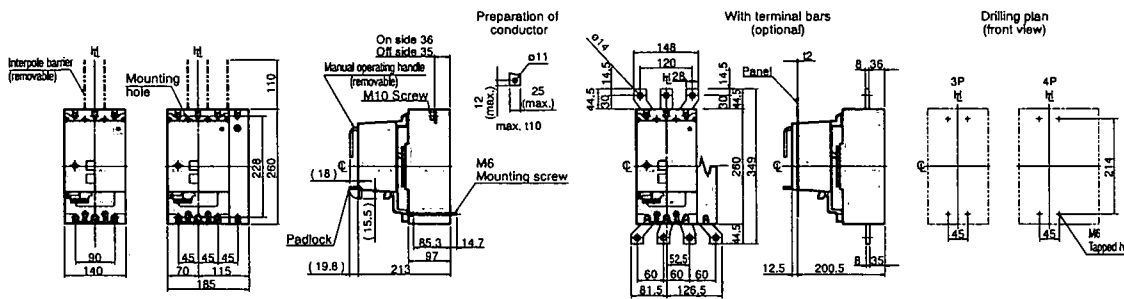

Rear connected with Motor Operator

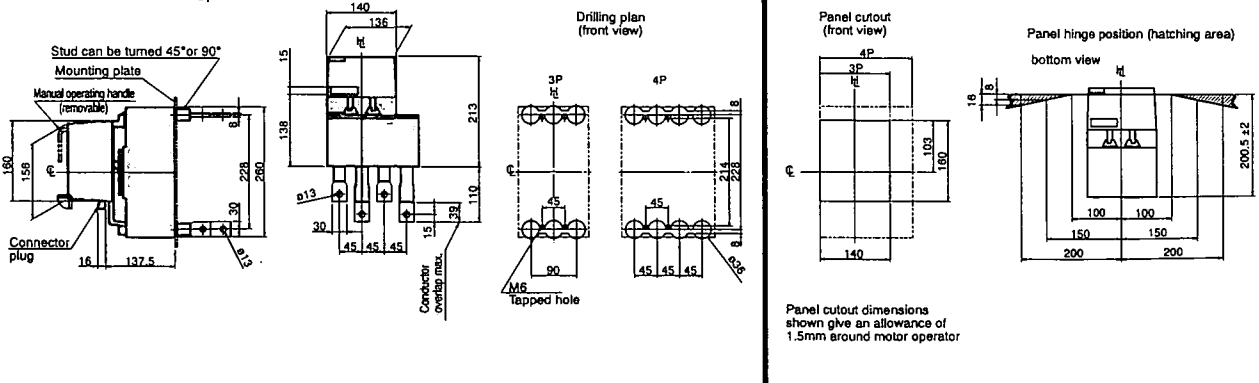



TEMBREAK 2 MCCBs





OPERATING CHARACTERISTICS

LET-THROUGH ENERGY CHARACTERISTICS

H160-NJ, L160-NJ, S250-PE, H250-NE, H250-NJ, L250-NJ. 440V AC.



H160-NJ, L160-NJ, S250-PE, H250-NE, H250-NJ, L250-NJ. 690V AC.

SECTION 3

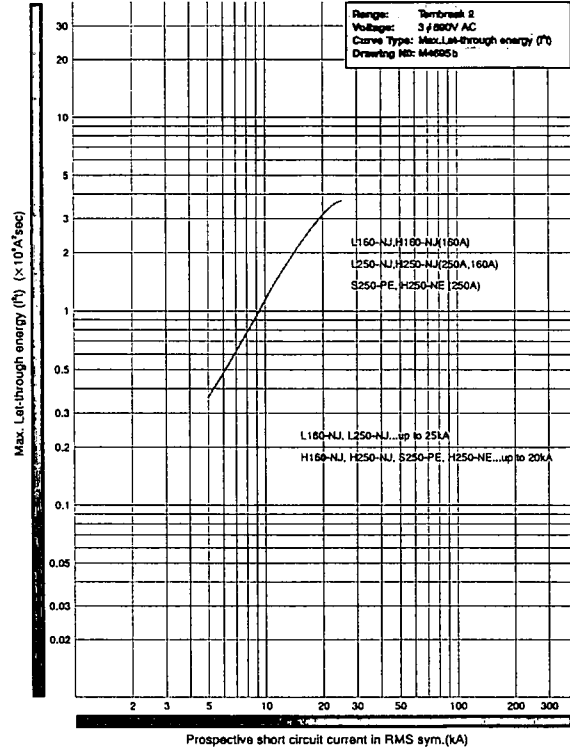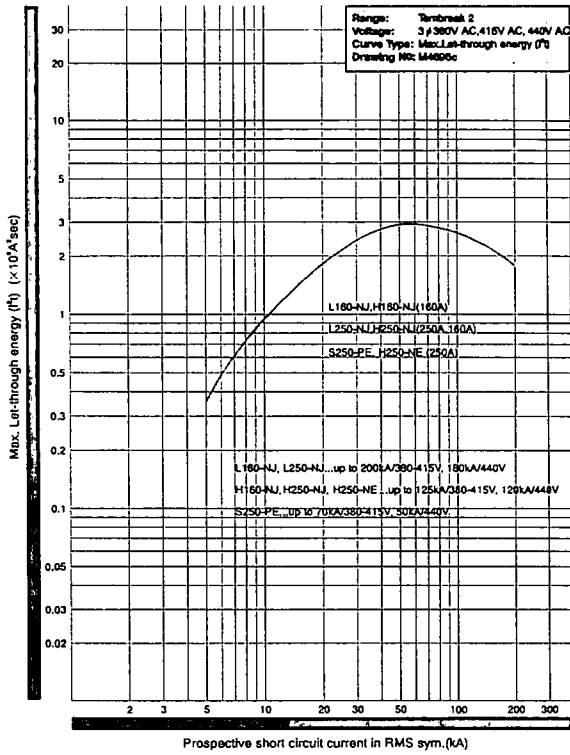

E400-NJ, S400-CJ, S400-NJ, S400-NE, S400-GJ, S400-GE. 415V AC.

S400-CJ, S400-NJ, S400-NE, S400-GJ, S400-GE. 690V AC.

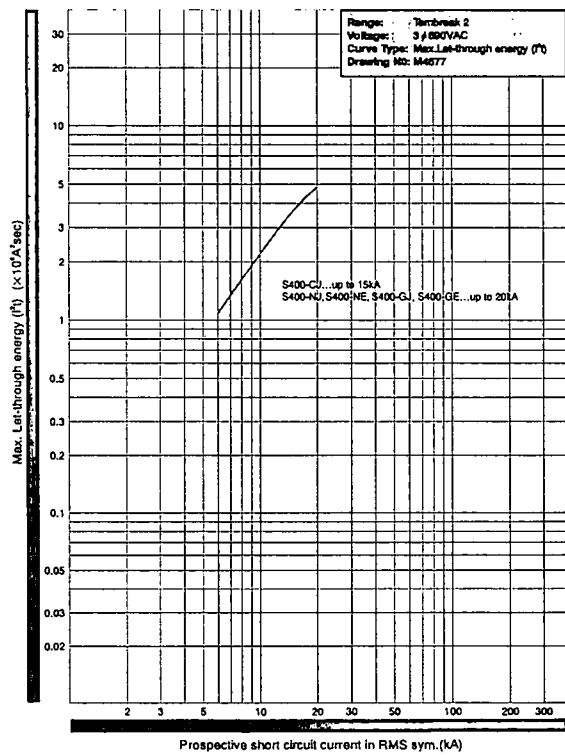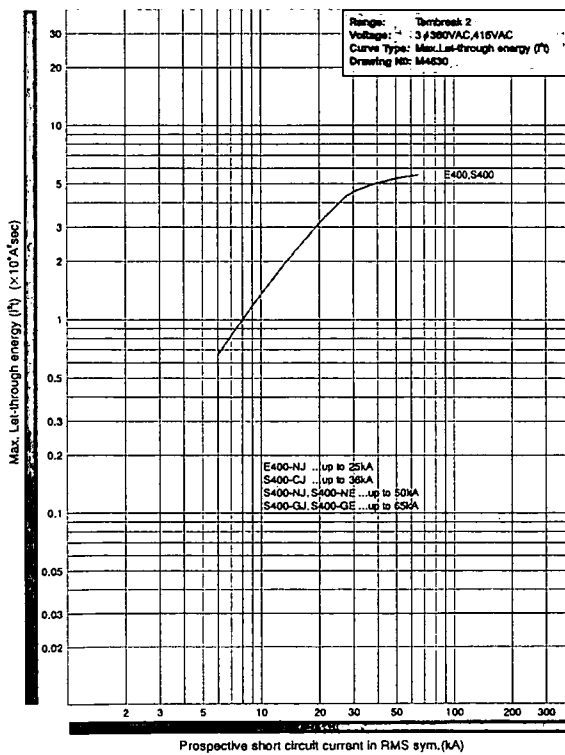




ACCESSORIES

INSULATION ACCESSORIES


Terminal Covers for Front Connection (CF)

Terminal covers for front connection are suitable for covering the exposed live parts of conductors terminated on the MCCB.

SECTION 5

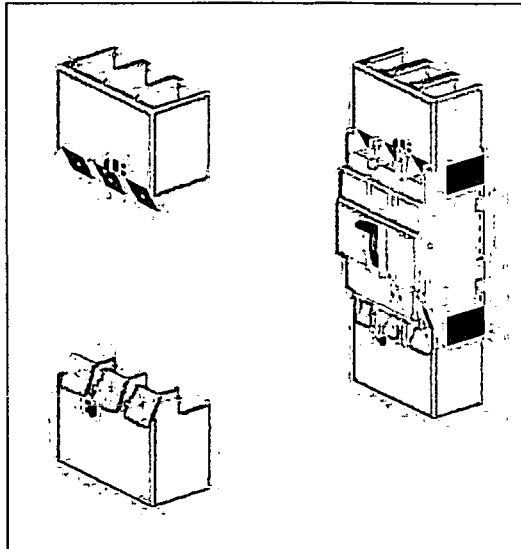

Terminal Covers for Front Connection

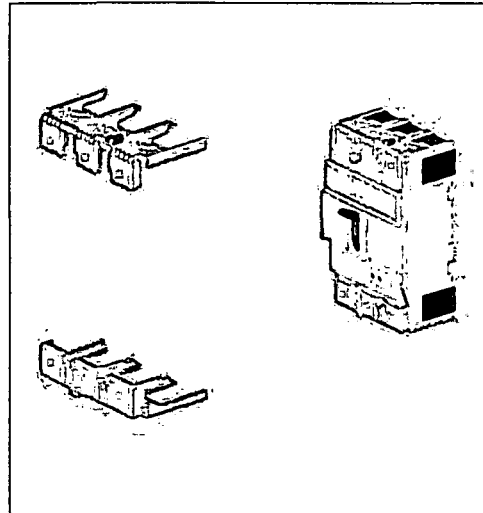

Flush Terminal Covers


Flush Terminal Covers (CS)

Flush terminal covers are useful for increasing the ingress protection rating at the terminals without increasing the overall length. They can be used with busbar and for direct entry of stranded cable (with solderless cable clamp terminals (FW), refer to Section 6, Installation).

Flush terminal covers are identical to rear terminal covers for 400A and 630A frame models. The user can remove a section of the rear terminal cover using a tool to allow entry of the conductor.

Terminal covers for Rear Connection (CR)

Terminal covers for rear connection may be used on MCCBs fitted with rear connections (RP) or plug-in connections (PM). They prevent access to the terminals from the front and top.

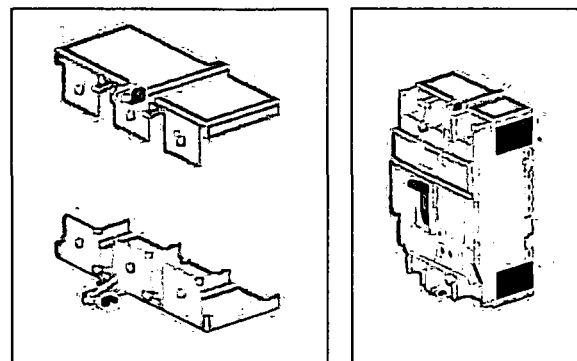

Terminal Covers for Rear Connection



TEMBREAK 2 MCCBs




INSTALLATION


CONNECTION AND MOUNTING OPTIONS AND ACCESSORIES

Plug-in Mounting

The plug in mounting system allows fast replacement of the MCCB body without the need to disturb the terminations. Solid conductors or cables terminated with compression terminals can be used.

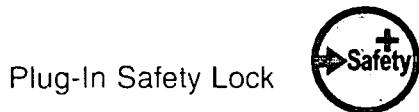

The plug-in MCCB body is automatically locked to the base when the contacts are closed (toggle ON). It cannot be removed unless the contacts are in the isolated position (toggle OFF or TRIPPED). This system ensures safe removal of the MCCB from the base.

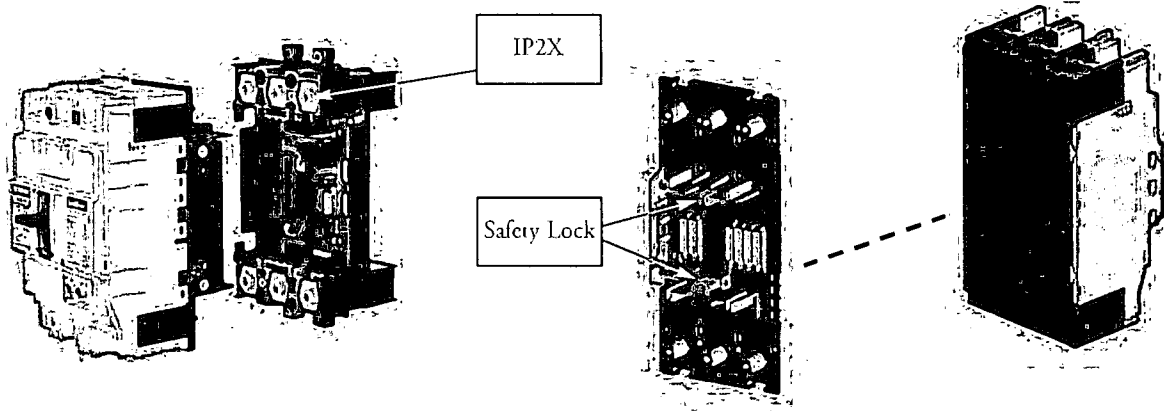


Plug-in MCCB and base

Plug-in connections and safety lock are fitted to the back of the MCCB

SECTION 6

The connection bars for plug-in bases are optional and can be configured in the field either for front or rear access. The illustrations below show possible mounting and connection options for plug in bases.

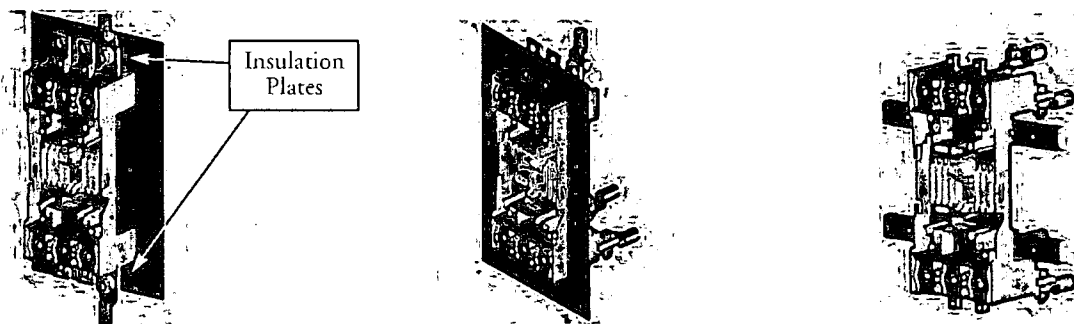


1. Mounted on base plate with connection bars mounted for front access. Insulation plates are supplied as standard and must be fitted.
2. Terminations in separate compartment. Connection bars are mounted for top access at the top and rear access at the bottom.
3. Mounted on angle bars. Connection bars are mounted for rear access.



TempBreak MCCB's

NHP

**Thermal magnetic type
S125GJ**

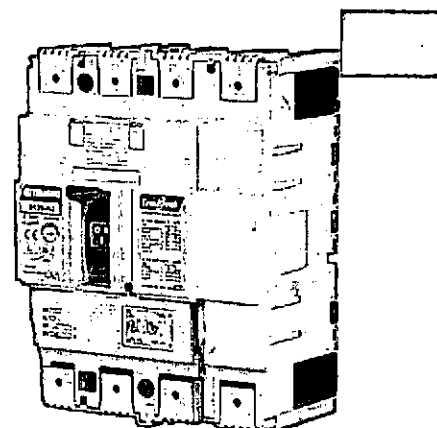

65kA

Current rating: 12.5 – 125A

Approvals and Tests:
Standards AS/NZS 3947-2, and IEC60947-2

Interrupting capacity:

	Voltage	Icu	Ics
AC use	380/400	65	36
DC use	250V	40	40

Trip unit:
Adjustable thermal (0.63 *I_r* to 100% *I_r*) and adjustable magnetic (6 *I_m* to 12 *I_m*)

Dimensions (mm)

Poles	3	4
H	155	155
W	90	120
D (less toggle)	68	68
Toggle cut-out	Standard DIN	

Ampere Rating NRC	Adj. <i>I_r</i> ¹⁾ Min - Max.	Adj. <i>I_m</i> ¹⁾ Min - Max.	Cat. No.
20	12.5 - 20	120 - 240	S125 GJ 3 20
			S125 GJ 4 20
32	20 - 32	192 - 384	S125 GJ 3 32
			S125 GJ 4 32
50	32 - 50	300 - 600	S125 GJ 3 50
			S125 GJ 4 50
63	40 - 63	378 - 756	S125 GJ 3 63
			S125 GJ 4 63
100	63 - 100	600 - 1200	S125 GJ 3 100
			S125 GJ 4 100
125	80 - 125	750 - 1500	S125 GJ 3 125
			S125 GJ 4 125

1) NRC: Nominal rated current
Adj. *I_r*: Adjustable thermal setting
Adj. *I_m*: Adjustable magnetic setting

Replaces: XH125NJ, TL100NJ, Note: check exact ratings or dimensions to suit your application requirement

Price Schedule T2

NHP

Thermal magnetic type

E125NJ



25kA

Current rating: 12.5 – 125A

Approvals and Tests:
Standards AS/NZS 3947-2, and IEC60947-2


Interrupting capacity:

	Voltage	Icu	Ics
AC use	380/415	25	19
DC use	250V	25	19

Trip unit:
Adjustable thermal (0.63 *I_r* to 100% *I_r*) and adjustable magnetic (6 *I_m* to 12 *I_m*)

Dimensions (mm)

Poles	3
H	155
W	90
D (less toggle)	68
Toggle cut-out	Standard DIN

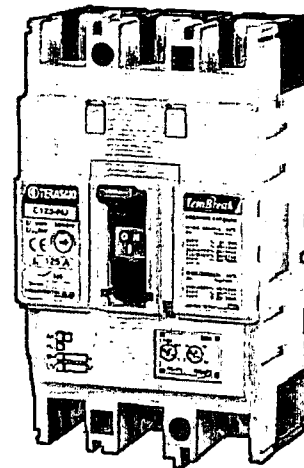

Ampere

Rating NRC	Adj. <i>I_r</i> ¹⁾ Min - Max.	Adj. <i>I_m</i> ¹⁾ Min - Max.	Cat. No.
20	12.5 - 20	120 - 240	E125 NJ 3 20
32	20 - 32	192 - 384	E125 NJ 3 32
50	32 - 50	300 - 600	E125 NJ 3 50
63	40 - 63	378 - 756	E125 NJ 3 63
100	63 - 100	600 - 1200	E125 NJ 3 100
125	80 - 125	750 - 1500	E125 NJ 3 125

1) NRC: Nominal rated current
Adj. *I_r*: Adjustable thermal setting
Adj. *I_m*: Adjustable magnetic setting

Replaces: XS125CJ, Note: check exact ratings or dimensions to suit your application requirement

Price Schedule T2



TEMBREAK 2 MCCBs




DIMENSIONS

E125-NJ, S125-NJ, S125-GJ


ASL: Arrangement Standard Line

H: Handle Frame Centre Line


Front connected

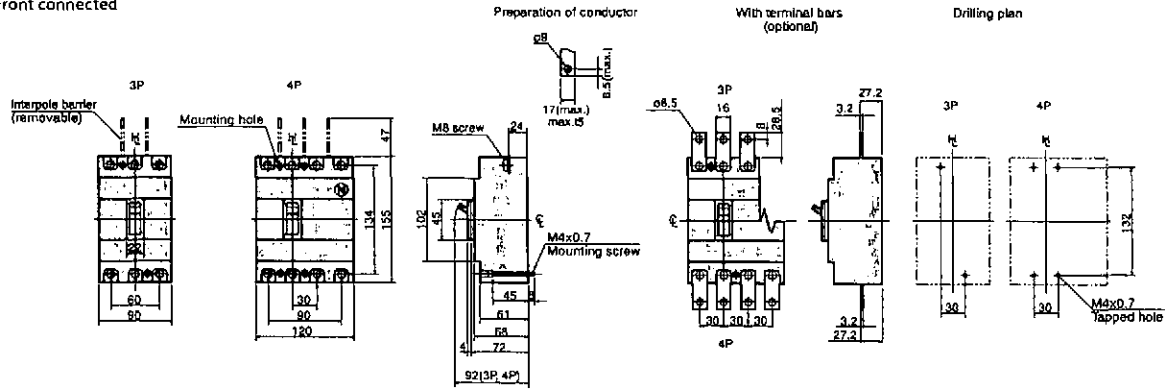

Rear connected

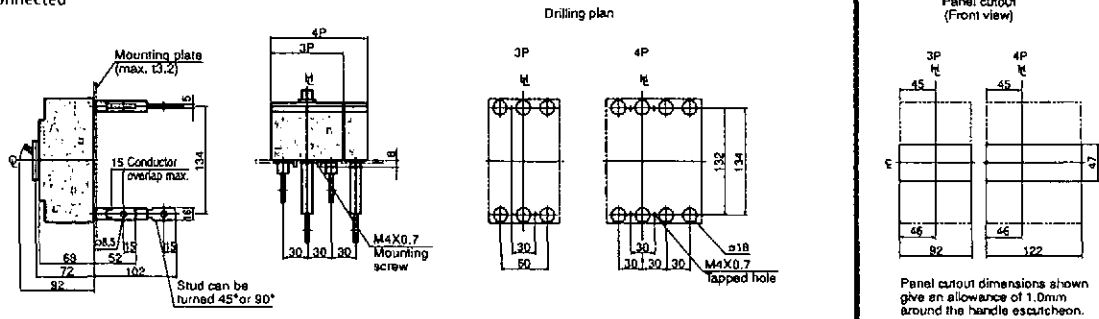


Front connected with Motor Operator

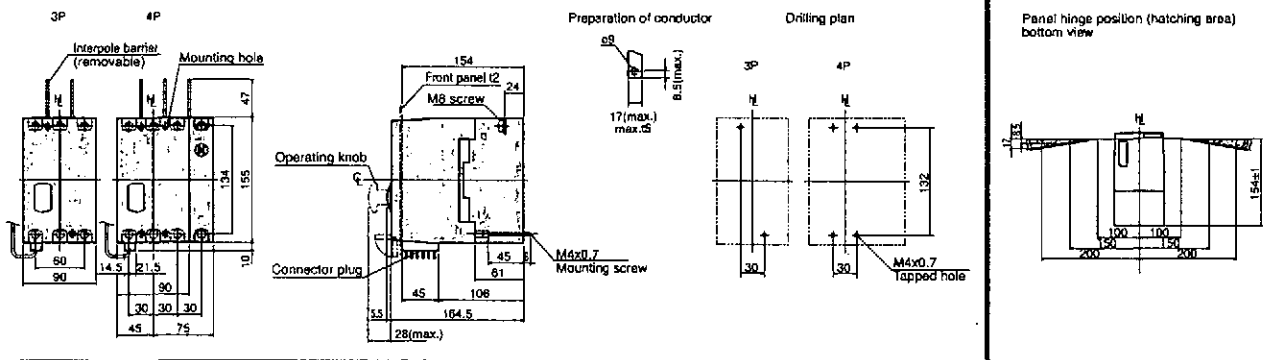

SECTION 7

Rear connected with Motor Operator

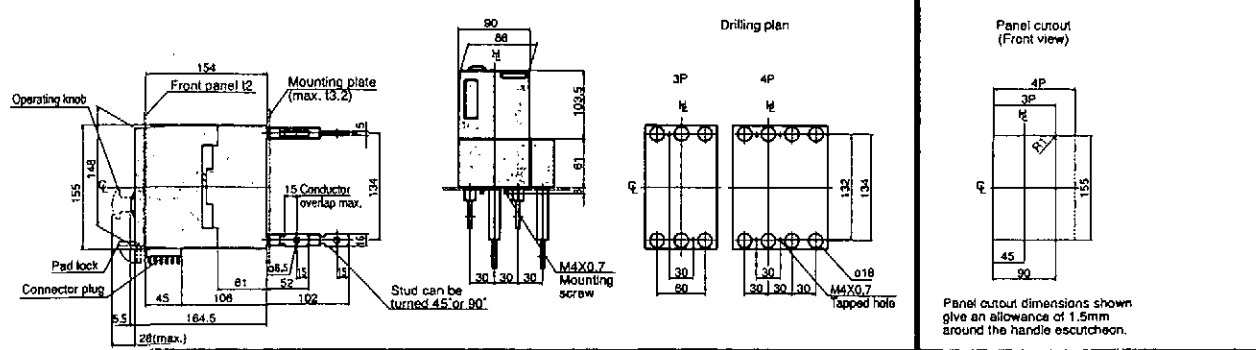



TEMBREAK 2 MCCBs



INSTALLATION

INSULATION DISTANCE IN mm (AT 440V AC MAXIMUM)

Model	Type	A	B1	B2	C	D	E
E125	NJ	50	10	10	0	25	*(1)
S125	NF	50	10	10	0	25	*(1)
S125	NJ	50	10	10	0	25	*(1)
S125	GJ	75	45	25	0	25	*(1)
H125	NJ	100	80	60	0	50	*(1)
L125	NJ	100	80	60	0	50	*(1)
S160	NF	50	40	30	0	25	*(1)
S160	NJ	50	40	30	0	25	*(1)
S160	GJ	100	80	60	0	50	*(1)
H160	NJ	100	80	60	0	50	*(1)
L160	NJ	100	80	60	0	50	*(1)
E250	NJ	50	40	30	0	25	*(1)
S250	NJ	50	40	30	0	25	*(1)
S250	GJ	100	80	30	0	25	*(1)
S250	PE	100	80	60	0	50	*(1)
H250	NJ	100	80	60	0	50	*(1)
H250	NE	100	80	60	0	50	*(1)
L250	NJ	100	80	60	0	50	*(1)
E400	NJ	100	80	40	0	30	*(1)
S400	CJ	100	80	40	0	30	*(1)
S400	NJ	100	80	40	0	30	*(1)
S400	GJ	100	80	40	0	30	*(1)
S400	GE	100	80	40	0	30	*(1)
H400	NJ	120	120	80	0	80	*(1)
H400	NE	120	120	80	0	80	*(1)
L400	NJ	120	120	80	0	80	*(1)
L400	NE	120	120	80	0	80	*(1)
E630	NE	120	100	80	0	80	*(1)
S630	CE	120	100	80	0	80	*(1)
S630	GE	120	100	80	0	80	*(1)

*Note: (1) Insulate the exposed conductor until it overlaps the moulded case at the terminal, or the terminal cover.

SECTION 6

APPLICATION DATA

SELECTIVITY (DISCRIMINATION) AND CASCADE

Selectivity

The principle of Selectivity (Discrimination) is based upon an analysis of several circuit breaker characteristics. These include time-current (tripping) curves, peak-let-through current (I_{peak}) and energy let-through (I^2t).

The figures stated give the maximum selectivity level with the two nominated breakers in series under short-circuit conditions. For an indication on selectivity under overloads refer to the circuit breaker tripping/characteristic curves, or use the NHP TemCurve selectivity analysis software package.

Selectivity can be enhanced beyond the breaking capacity of the downstream breaker provided it is backed up by an appropriately selected upstream breaker, which should not trip (unlatch) under the stated short circuit current.

Cascade

Cascading is achieved by using an upstream device to assist (back-up) a downstream device in clearing a fault current. This principle is necessary should the downstream device be required to clear a prospective short circuit current greater than the devices' breaking capacity.

In most cascading applications it is generally necessary for the upstream breaker to trip (unlatch), as well as the downstream breaker to give adequate back-up protection. As such, cascade is commonly used in feeding and protecting non-essential loads, such as basic lighting.

For more information on selectivity and cascading please refer to the latest NHP Part C catalogue.

Selectivity & Cascade Tables
@ 400 / 415 V

Downstream MCCBs	Upstream MCCBs	kA (RMS)	S250PE	H250NE	S400NE	S400GE	H400NE	L400NE	E630NE	S630CE
			70	125	50	70	125	200	36	50
E125NJ	25	25	25/25	25/65	25/36	25/50	25/65	25/85	25/36	25/25
S125NJ	36	36	36/36	36/85	36/50	36/65	36/85	36/125	36/36	36/36
S125GJ	65	65	65/65	65/125	50/50	65/70	65/125	65/150	36/36	50/50
H125NJ	125	70	70/70	125/125	50/50	70/70	125/125	125/200	36/36	50/50
S160NJ	36				36/50	36/65	36/85	36/125	36/36	36/50
S160GJ	65				50/50	65/70	65/125	65/150	36/36	50/50
H160NJ	125						125/125	125/200	36/36	50/50
E250NJ	25						25/65	25/85	25/36	25/25
S250NJ	36						36/85	36/125	36/36	36/36
S250GJ	65						65/125	65/150	36/36	50/50
S250PE	70						40/125	70/150	36/36	50/50
H250NJ	125						125/125	125/200	36/36	50/50
H250PE	125						125/125	125/200	36/36	50/50
E400NJ	25								10/25	10/25
S400CJ	36								10/36	10/36
S400NE	50								10/36	10/50
S400NJ	50								10/36	10/36
S400GJ	70								10/36	10/50
H400NJ	125								10/36	10/50
H400NE	125								10/36	10/50
E630NE	36									
E630CE	50									
S630GE	70									
XS630CJ	45									
XS630NJ	65									
XS630PJ	85									
XS630SE	50									
XH630SE	65									
XH630PE	65									
XS800NJ	65									
XS800SE	50									
XJ800PJ	85									
XH800SE	65									
XH800PE	65									
XS1250SE	65									
XS1600SE	85									

Beyond the Standard™ TemBreak

page 40

XX/YY
Selectivity/Cascade

S630GE	TL630NE	XS800SE	XH800SE	TL800NE	XS1250SE	TL1250NE	XS1600SE	XS2000NE	XS2500NE
70	125	50	65	125	85	125	100	85	85
25/50	25/25	25/36	25/36	25/65	25/25	25/25	25/25	25/25	25/25
36/65	36/36	36/50	36/36	36/36	36/36	36/36	36/36	36/36	36/36
65/70	65/65	65/50	65/65	65/65	65/65	65/65	65/65	65/65	65/65
70/70	70/70	50/50	65/65	65/65	85/50	85/50	100/100	85/85	85/85
36/50	36/36	36/36	36/65	36/65	36/36	36/36	36/36	36/36	36/36
65/70	65/65	50/50	50/65	50/65	65/65	65/65	65/65	65/65	65/65
70/70	70/70	50/50	50/85	50/65	85/65	85/65	100/100	85/85	85/85
25/50	25/25	25/25	25/50	25/50	25/25	25/25	25/25	25/25	25/25
36/65	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36
65/70	65/65	50/50	50/65	50/65	65/65	65/65	65/65	65/65	65/65
70/70	70/70	50/50	50/65	50/65	70/70	70/70	70/70	70/70	70/70
70/70	70/70	50/50	50/65	50/65	85/85	85/85	100/100	85/85	85/85
10/50	10/36	25/25	25/25	25/36	25/25	25/25	25/36	25/25	25/25
10/65	10/50	25/36	25/36	25/50	36/36	36/36	36/50	36/36	36/36
10/50	10/50	25/50	25/50	25/50	50/50	50/50	50/50	50/50	50/50
10/70	10/65	25/50	25/50	25/65	50/50	50/50	50/65	50/50	50/50
10/70	10/70	25/50	25/50	25/65	70/36	70/36	70/85	70/70	70/70
10/70	10/70	25/50	25/65	25/65	125/85	125/85	125/100	125/85	125/85
10/70	10/70	25/50	25/65	25/65	125/85	125/85	125/100	125/85	125/85
		25/36	25/36	25/36	36/36	36/36	36/36	36/36	36/36
		25/50	25/50	25/50	50/50	50/50	50/50	50/50	50/50
					70/70	70/70	70/70	70/70	70/70
					30/45	30/45	30/45	35/45	35/45
					30/65	30/65	30/65	35/65	36/65
					30/85	30/85	30/85	35/85	35/85
					30/65	30/65	30/85	30/85	30/85
					30/65	30/65	30/85	30/85	30/85
					30/65	30/65	30/85	30/85	30/85
					15/65	15/65	20/65	35/65	35/65
					15/50	15/50	20/50	35/50	35/50
					15/85	15/85	20/85	35/85	35/85
					15/65	15/65	20/65	35/65	35/65
					15/65	15/65	20/65	35/65	35/65
							20/65	35/65	35/65
								35/85	35/85



TEMBREAK 2 MCCBs


APPLICATION DATA

SELECTIVITY TABLES

NEPA



TEMBREAK 2 MCCBs

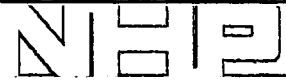

APPLICATION DATA

CASCADE TABLES

SECTION 4

CASCADE @ 380 - 415 V AC ¹⁾ Downstream MCCBs	kA (RMS)	E125NJ	S125NJ	S125GJ	H125NJ	L125NJ	S160NJ	S160GJ	H160NJ	L160NJ	E250NJ	S250NJ	S250GJ	S250PE	H250NJ	H250NE	L250NJ
		25	36	65	125	200	36	65	125	200	25	36	65	70	125	125	200
E125NJ	25	-	36	36	65	85	36	36	65	85	-	36	36	-	65	65	85
S125NJ	36	-	-	50	85	125	-	50	85	125	-	-	-	-	85	85	125
S125GJ	65	-	-	-	125	150	-	-	125	150	-	-	65	-	125	125	150
H125NJ	125	-	-	-	-	200	-	-	-	200	-	-	65	-	-	-	200
S160NJ	36	-	-	65	-	-	-	65	85	125	-	-	65	65	85	85	125
S160GJ	65	-	-	-	-	-	-	-	125	150	-	-	-	70	125	125	150
H160NJ	125	-	-	-	-	-	-	-	-	200	-	-	-	-	-	-	200
S250NJ	36	-	-	-	-	-	-	65	-	-	-	-	-	65	85	85	125
S250GJ	65	-	-	-	-	-	-	-	-	-	-	-	-	70	125	125	150
S250PE	70	-	-	-	-	-	-	-	-	-	-	-	-	-	125	125	150
H250NJ	125	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
E400NJ	25	-	-	-	-	-	-	-	-	-	-	-	-	36	65	65	-
S400CJ	36	-	-	-	-	-	-	-	-	-	-	-	-	50	70	70	-
S400NJ	50	-	-	-	-	-	-	-	-	-	-	-	50	65	85	85	-
S400GJ	70	-	-	-	-	-	-	-	-	-	-	-	50	-	125	125	-
H400NJ	125	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-


Note: ¹⁾ Ratings have not been verified where a dash "-" is shown.

All pick-up and time delay settings are to be set at a maximum for upstream MCCB's

CASCADE @ 380 - 415 V AC ¹⁾ Downstream MCCBs	kA (RMS)	Upstream MCCBs																	
		S400CJ	S400NE	S400GJ	S400GE	H400NE	H400NJ	L400NJ	L400NE	E630NE	S630CE	S630GE	TL630NE	XS800SE	XS800NJ	XH800SE	TL800NE	XS1250SE	XS1600SE
E125NJ	25	36	36	50	65	85	85	36	-	50	-	36	36	36	-	-	-	-	-
S125NJ	36	-	50	65	85	125	125	-	-	65	-	50	50	-	-	-	-	-	-
S125GJ	65	-	-	70	125	150	150	-	50	70	-	-	-	65	-	-	-	-	-
H125NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	85	-	-	50	-	-
S160NJ	36	-	50	65	85	125	125	-	50	50	-	-	65	65	-	-	-	-	-
S160GJ	65	-	-	70	125	150	150	-	-	70	-	-	-	-	-	-	-	-	-
H160NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	65	-	-	65	-	-
E250NJ	25	36	36	50	65	85	85	36	-	50	-	-	36	50	-	-	-	-	-
S250NJ	36	-	50	65	85	125	125	-	-	65	-	-	65	-	-	-	-	-	-
S250GJ	65	-	-	70	125	150	150	-	-	70	-	-	-	-	-	-	-	-	-
S250PE	70	-	-	-	125	150	150	-	-	-	-	-	-	-	-	-	-	-	-
H250NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	-	-	-	-	-	-
E400NJ	25	36	36	50	65	85	85	36	-	50	36	-	-	-	36	-	-	-	36
S400CJ	36	-	50	65	70	100	100	-	-	65	50	-	-	-	50	-	-	-	50
S400NJ	50	-	-	70	85	125	125	-	36	70	65	-	-	50	65	-	-	-	65
S400GJ	70	-	-	-	125	150	150	-	36	-	-	-	-	50	-	-	36	85	-
H400NJ	125	-	-	-	-	200	200	-	-	-	-	-	-	-	-	-	-	-	-

Note: ¹⁾ Ratings have not been verified where a dash "-" is shown.

All pick-up and time delay settings are to be set at a maximum for upstream MCCBs

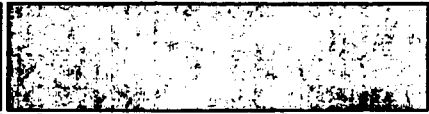

TEMBREAK 2 MCCBs


APPLICATION DATA

SELECTIVITY AND CASCADE TEMBREAK 2 MCCBs AND DIN-T / SAFE-T MCBs

Downstream MCB	Amp rating	kA (RMS)	Upstream MCCB								
			E125NJ	S125NJ	H125NJ	S250NJ	S250GJ	S400CJ	S400GE	S400GJ	H400NJ
			25	36	65	36	65	36	70	125	
DTCB6	2 – 20	6	18/18	25/25	35/35	35/35	35/35	-	-	-	
	25 – 63	6	18/18	20/25	20/25	30/30	30/30	-	-	-	
DTCB10	0.5 – 32	10	18/18	30/30	30/50	35/35	40/50	35/35	40/50	40/50	
	40 – 63	10	18/18	20/25	25/25	30/30	30/30	30/30	30/30	30/30	
DSRCBH /	0.5 – 32	10	18/18	30/30	30/50	35/35	40/50	35/35	40/50	40/50	
DSRCD	40	10	18/18	20/25	25/25	30/30	30/30	30/30	30/30	30/30	
Din-T10H	80 – 125	10	4/18	4/25	4/25	15/15	15/15	10/10	10/10	-	
DTCH15	0.5 – 32	15	18/18	30	30/50	35/35	40/50	35/35	40/50	40/50	
	40 – 63	15	18/18	20	25/25	30/30	30/30	30/30	30/30	30/30	
Safe-T	16 – 20	6	3/10	3/10	3/10	-	-	-	-	-	
SRCB	16 – 20	6	3/10	3/10	3/10	-	-	-	-	-	

SECTION 4

Guide

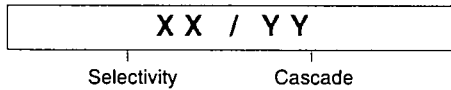

Notes: All figures stated are at 400/415 V AC.



TEMBREAK 2 MCCBs



APPLICATION DATA

MOTOR STARTING TYPE 1 CO-ORDINATION TABLES

Short-Circuit Co-Ordination Motor Starting Table

Type '1'
 Terasaki MCCB's & Sprecher + Schuh KT7's
 DOL starting 50/65 kA @ 400/415 V to AS/NZS 60947.4.1



SECTION 4


Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactar
0.37	1.1	XM30PB/1.4	CA7-8
0.55	1.5	XM30PB/2	CA7-8
0.75	1.8	XM30PB/2.8	CA7-8
1.1	2.6	XM30PB/4.0	CA7-8
1.5	3.4	XM30PB/5	CA7-8
2.2	4.8	XM30PB/6	CA7-8
3	6.5	XM30PB/10	CA7-8
4	8.2	XM30PB/12	CA7-8
5.5	11	S125GJ/20	CA7-12
7.5	14	S125GJ/20	CA7-16
11	21	S125GJ/32	CA7-23
15	28	S125GJ/50	CA7-30
18.5	34	S125GJ/50	CA7-37
22	40	S125GJ/83	CA7-43
30	55	S125GJ/100	CA7-60
37	66	S125GJ/100	CA7-72
45	80	S125GJ/125	CA7-85
55	100	S125GJ/125	CA8-110
5	130	S250PE/250	CA8-140
0	155	S250PE/250	CA8-180
10	200	S250PE/250	CA8-210
32	225	S400GE/400	CA8-210
60	270	S400GE/400	CA8-300
00	361	S400GE/400	CA8-420

Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactar
CT 7-24	1.0 - 1.8	KTA7-25S-1.0A	CA7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-4.0A	CA7-9
CT 7-24	4.0 - 8.0	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-10A	CA7-9
CT 7-24	10 - 18	KTA7-25H-16A	CA7-12
CT 7-24	10 - 18	KTA7-25H-16A	CA7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA7-43
CT 7-75	45 - 80	KTA3-100-63A	CA7-60
CT 7-75	80 - 75	KTA3-100-90A	CA7-72
CT 7-100	70 - 80	KTA3-100-90A	CA7-85
CEF 1-11/12	20 - 180	KTA3-160S-100A	CA6-110
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-140
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-180
CEF 1-41/42	180 - 400	KTA3-250S-200A	CA6-210
CEF 1-41/42	180 - 400	KTA3-250S-250A	CA6-250
CEF 1-41/42	180 - 400	KTA3-400S-320A	CA6-300
CEF 1-41/42	180 - 400	KTA3-400S-400A	CA6-420

Notes: • Thermal or electronic overload relays may be used.
 • XM30PB MCCB's can be replaced with S125GJ/20 if required.
 • Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.



TEMBREAK 2 MCCBs

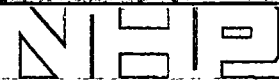

APPLICATION DATA

MOTOR STARTING TYPE 2 CO-ORDINATION TABLES

Short-Circuit Co-Ordination DOL Motor Starting Table

Type '2'
 Terasaki MCCB's & Sprecher + Schuh KT7's
 DOL starting 50/65 kA @ 400/415 V to AS/NZS 60947.4.1



Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	XMS0PB/1.4	CA7-8
0.55	1.5	XMS0PB/2	CA7-8
0.75	1.8	XMS0PB/2.6	CA7-8
1.1	2.6	XMS0PB/4.0	CA7-18
1.5	3.4	XMS0PB/5	CA7-18
2.2	4.8	XMS0PB/8	CA7-18
3	6.5	XMS0PB/10	CA7-30
4	8.2	XMS0PB/12	CA7-30
5.5	11	S125GJ/20	CA7-30
7.5	14	S125GJ/20	CA7-30
11	21	S125GJ/32	CA7-30
15	28	S125GJ/50	CA7-43
18.5	34	S125GJ/50	CA7-43
22	40	S125GJ/83	CA7-43
30	55	S125GJ/100	CA7-72
37	68	S125GJ/100	CA7-72
45	80	S125GJ/125	CAB-105
55	100	S250PE/180	CAB-105
75	130	S250PE/250	CAB-140
90	155	S250PE/250	CAB-170
110	200	S250PE/250	CAB-210
132	225	S400PE/400	CAB-210
160	270	S400PE/400	CAB-300
200	361	S400PE/400	CAB-420


Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1A	CA7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-2.5A	CA7-9
CT 7-24	2.4 - 4.0	KTA7-25S-4A	CA7-9
CT 7-24	4.0 - 8.0	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-6.3A	CA7-9
CT 7-24	8.0 - 10	KTA7-25S-10A	CA7-9
CT 7-24	10 - 18	KTA7-25H-16A	CA7-12
CT 7-24	10 - 18	KTA7-25H-16A	CA7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA7-43
CT 7-75	45 - 80	KTA3-100-63A	CA7-60
CT 7-75	80 - 75	KTA3-100-90A	CA7-72
CT 7-100	70 - 80	KTA3-100-90A	CA7-85
CEF 1-11/12	20 - 180	KTA3-160S-100A	CA6-110
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-140
CEF 1-11/12	20 - 180	KTA3-160S-160A	CA6-180
CEF 1-41/42	180 - 400	KTA3-250S-200A	CA6-210
CEF 1-41/42	180 - 400	KTA3-250S-250A	CA6-250
CEF 1-41/42	180 - 400	KTA3-400S-320A	CA6-300
CEF 1-41/42	180 - 400	KTA3-400S-400A	CA6-420

- Notes:
- Thermal or electronic overload relays may be used.
 - XM30PB combinations can be replaced with S125GJ/20 and CA7-30 if required.
 - Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

SECTION 4



TEMBREAK 2 MCCBs

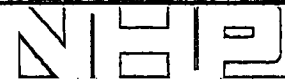

APPLICATION DATA

MOTOR STARTING TYPE 2 CO-ORDINATION

Short-Circuit Co-Ordination DOL Motor Starting Table

Type '2'
Terasaki MCCB's & Sprecher + Schuh KT7's
DOL starting 85 kA @ 400/415 V to AS/NZS 60947.4.1



SECTION 4

Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	XM30PB/1.4	CA 7-8
0.55	1.5	XM30PB/2	CA 7-8
0.75	1.8	XM30PB/2.8	CA 7-8
1.1	2.6	XM30PB/4.0	CA 7-18
1.5	3.4	XM30PB/5	CA 7-18
2.2	4.8	XM30PB/8	CA 7-30
3	6.5	XM30PB/10	CA 7-30
4	8.2	XM30PB/12	CA 7-30
5.5	11	H125NJ/20	CA 7-30
7.5	14	H125NJ/20	CA 7-30
11	21	H125NJ/32	CA 7-30
15	28	H125NJ/50	CA 7-43
18.5	34	H125NJ/50	CA 7-43
22	40	H125NJ/89	CA 7-43
30	55	H125NJ/100	CA 7-72
37	66	H125NJ/100	CA 7-72
45	80	H125NJ/180	CA 8-105
55	100	H180NJ/180	CA 8-105
75	130	H250PE/250	CA 8-210
90	155	H250PE/250	CA 8-210
110	200	H250PE/250	CA 8-210
132	225	H400NE/400	CA 8-210
160	270	H400NE/400	CA 8-300
200	361	H400NE/400	CA 8-420

Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1A	CA 7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA 7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-4A	CA 7-9
CT 7-24	4.0 - 8.0	KTA7-25H-6.3A	CA 7-9
CT 7-24	8.0 - 10	KTA7-25H-6.3A	CA 7-9
CT 7-24	8.0 - 10	KTA7-25H-10A	CA 7-9
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-12
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA 7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA 7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-43
CT 7-75	45 - 80	KTA3-100-63A	CA7-60
CT 7-75	80 - 75	KTA3-100-90A	CA7-72
CT 7-100	70 - 80	KTA3-100-90A	CA7-85
CEF 1-11/12	20 - 180	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-

- Notes:
- Thermal or electronic overload relays may be used.
 - XM30PB combinations can be replaced with H125GJ/20 and CA7-30 if required.
 - Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

APPLICATION DATA

MOTOR STARTING TYPE 2 CO-ORDINATION

Short-Circuit Co-Ordination DOL Motor Starting Table

Type '2'
 Terasaki MCCB's & Sprecher + Schuh KT7's
 DOL starting 100 kA @ 400/415 V to AS/NZS 60947.4.1



Motor Size (kW)	Approx. amps @ 400/415 V (A)	Terasaki Combinations	
		MCCB	Contactors
0.37	1.1	H125NJ/20	CA 7-30
0.55	1.5	H125NJ/20	CA 7-30
0.75	1.8	H125NJ/20	CA 7-30
1.1	2.6	H125NJ/20	CA 7-30
1.5	3.4	H125NJ/20	CA 7-30
2.2	4.8	H125NJ/20	CA 7-30
3	6.5	H125NJ/20	CA 7-30
4	8.2	H125NJ/20	CA 7-30
5.5	11	H125NJ/20	CA 7-30
7.5	14	H125NJ/20	CA 7-30
11	21	H125NJ/32	CA 7-30
15	28	H125NJ/50	CA 7-43
18.5	34	H125NJ/50	CA 7-43
22	40	H125NJ/83	CA 7-43
30	55	H125-NJ/100	CA 7-60
37	66	H125-NJ/100	CA 7-72
45	80	H125-NJ/125	CA 7-85
55	100	H250-NE/160	CA 8-85
75	130	H250-NE/250	CA 8-140
90	155	H250-NE/250	CA 8-140
110	200	H250-NE/250	CA 8-180
132	225	H400-NE/400	CA 8-420
160	270	H400-NE/400	CA 8-420
200	361	H400-NE/400	CA 8-420

Terasaki Combinations		Sprecher + Schuh Combinations	
Overload Relay	Thermal Setting (A)	KT7 Circuit Breaker	Contactors
CT 7-24	1.0 - 1.8	KTA7-25S-1A	CA 7-9
CT 7-24	1.0 - 1.8	KTA7-25S-1.6A	CA 7-9
CT 7-24	1.8 - 2.4	KTA7-25S-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-2.5A	CA 7-9
CT 7-24	2.4 - 4.0	KTA7-25H-4A	CA 7-9
CT 7-24	4.0 - 8.0	KTA7-25H-6.3A	CA 7-9
CT 7-24	6.0 - 10	KTA7-25H-6.3A	CA 7-9
CT 7-24	6.0 - 10	KTA7-25H-10A	CA 7-9
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-12
CT 7-24	10 - 18	KTA7-45H-16A	CA 7-16
CT 7-24	18 - 24	KTA7-45H-20A	CA 7-23
CT 7-45	18 - 30	KTA7-45H-32A	CA 7-30
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-37
CT 7-45	30 - 45	KTA7-45H-45A	CA 7-43
CT 7-75	45 - 80	-	-
CT 7-75	80 - 75	-	-
CT 7-100	70 - 80	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-11/12	20 - 180	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-
CEF 1-41/42	180 - 400	-	-

Notes: • Thermal or electronic overload relays may be used.
 • Combinations based on the thermal overload relay tripping before the circuit breaker at overload currents up to the motor locked rotor current.

SECTION 4



TEMBREAK 2 MCCBs



OPERATING CHARACTERISTICS



THERMAL MAGNETIC CHARACTERISTICS

125A Frame MCCBs

Time/current characteristic curves
E125-NJ, S125-NJ, S125-GJ

Time/current characteristic curves
H125-NJ, L125-NJ



SECTION 3

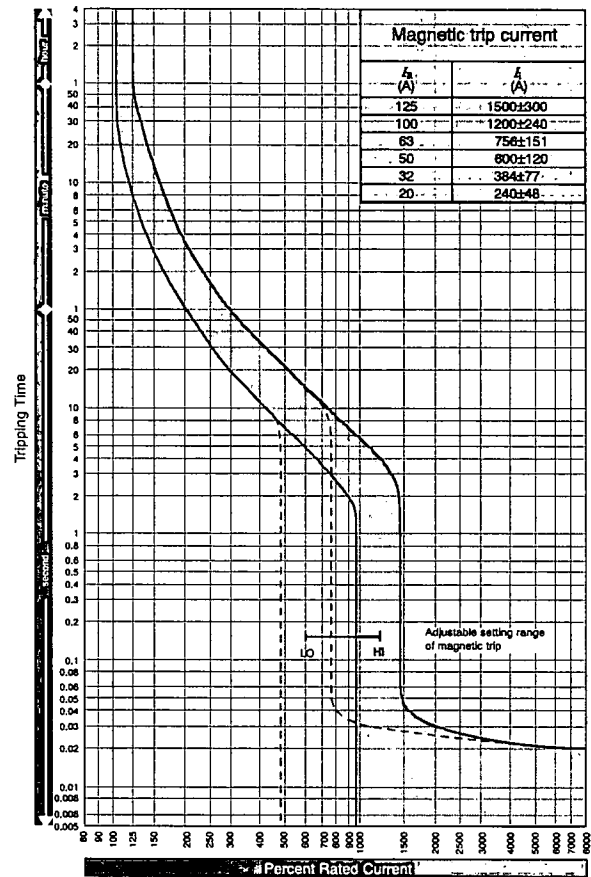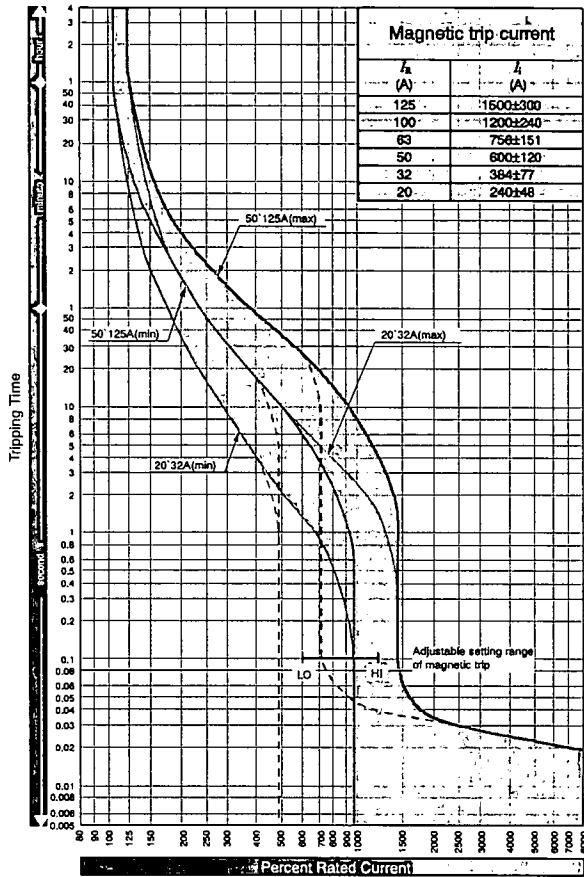

OPERATING CHARACTERISTICS

THERMAL MAGNETIC PROTECTION

Adjustment Dials

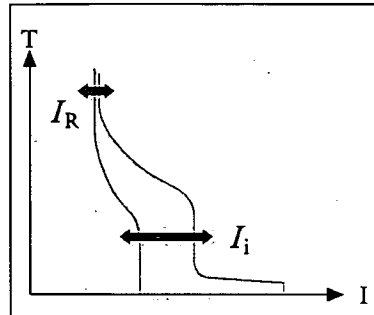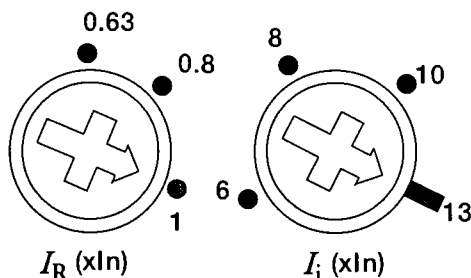

SECTION 3

1. I_R is the thermal element adjustment dial and is used to set the rated current to match the conductor rating.

I_R can be set between 0.63 and 1.0 times I_n .

2. I_i is the magnetic element adjustment dial and is used to set the short circuit tripping threshold to suit the application.

I_i can be set between 6 and 12 times I_n on 125A and 400A frame models.

I_i can be set between 6 and 13 times I_n on 250A frame models with ratings of 160A, 200A and 250A.

I_i can be set between 6 and 12 times I_n on 250A frame models with ratings of 125A and less.

Models, Types and Rated Currents of Thermal Elements

Model	Type	Current Rating In (A)
S125	-NF	16, 20, 25, 32, 40, 50, 63, 80, 100, 125
E125	-NJ	20, 32, 50, 63, 100, 125
S125	-NJ	20, 32, 50, 63, 100, 125
S125	-GJ	20, 32, 50, 63, 100, 125
H125	-NJ	20, 32, 50, 63, 100, 125
L125	-NJ	20, 32, 50, 63, 100, 125
S160	-NF	16, 20, 25, 32, 40, 50, 63, 80, 100, 125, 160
S160	-NJ	20, 32, 50, 63, 100, 125, 160
S160	-GJ	50, 63, 100, 125, 160
H160	-NJ	160
L160	-NJ	160
E250	-NJ	20, 32, 50, 63, 100, 125, 160, 200, 250
S250	-NJ	160, 200, 250
S250	-GJ	160, 200, 250
H250	-NJ	160, 250
L250	-NJ	160, 250
E400	-NJ	250, 400
S400	-CJ	250, 400
S400	-NJ	250, 400
S400	-GJ	250, 400
H400	-NJ	250, 400
L400	-NJ	250, 400



TEMBREAK 2 MCCBs





OPERATING CHARACTERISTICS

LET-THROUGH PEAK CURRENT CHARACTERISTICS

S125-NF, 240V AC



S160-NF, 240V AC.


SECTION 3

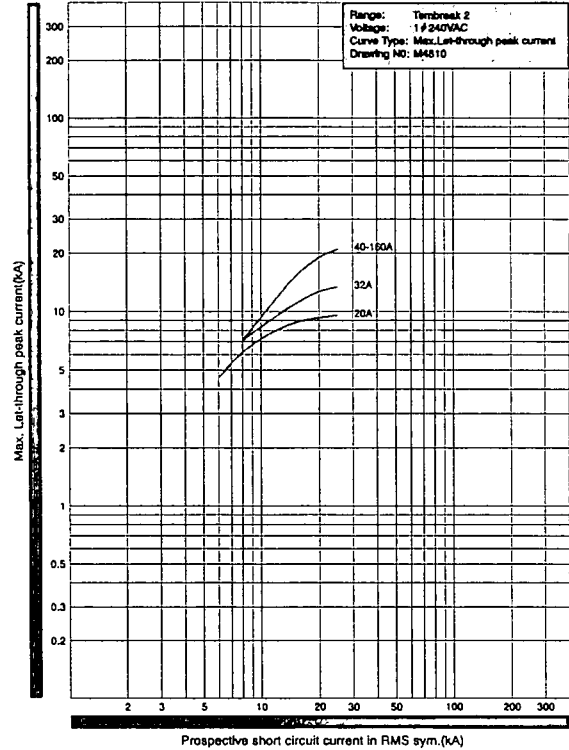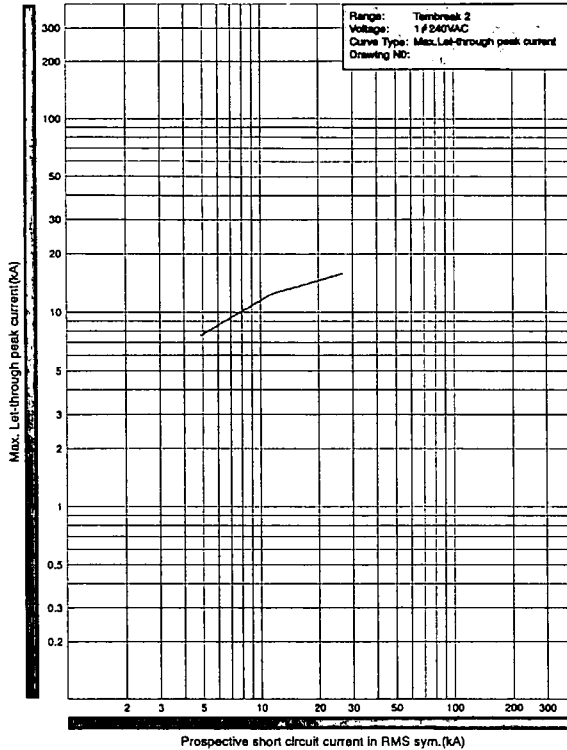

E125-NJ, S125-NJ, S125-GJ. 440V AC.

S125-NJ, S125-GJ. 690V AC.

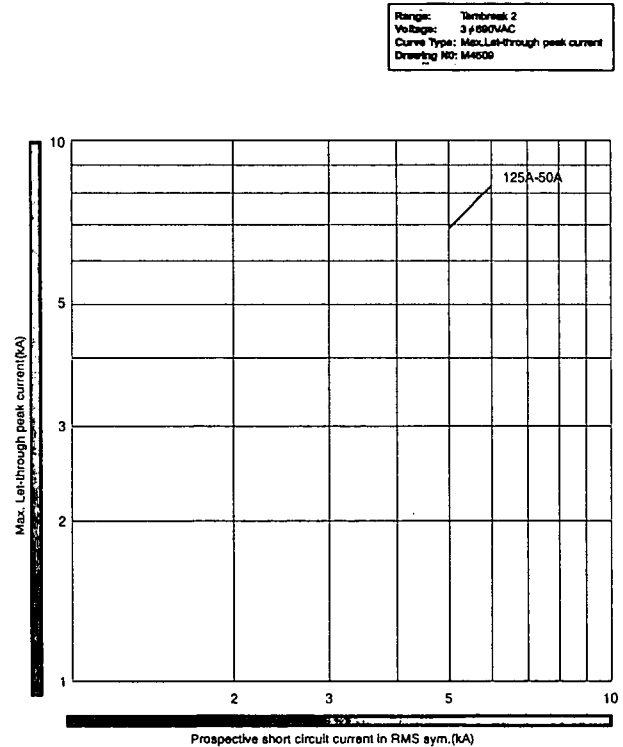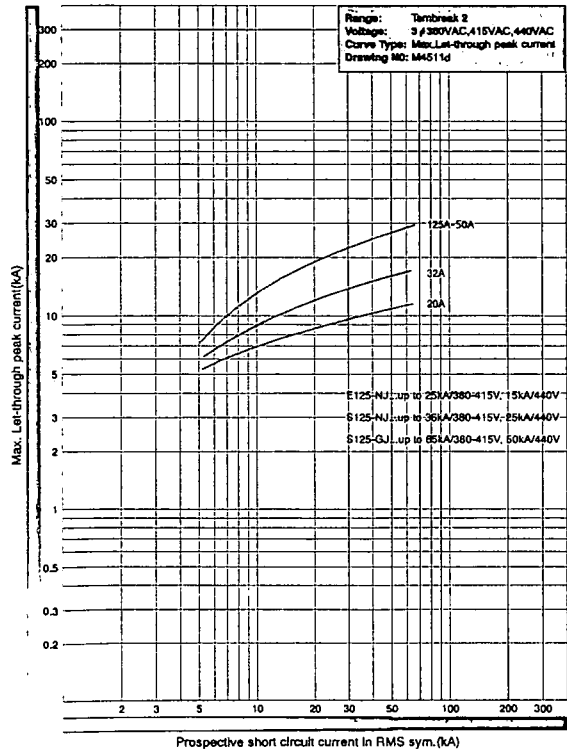

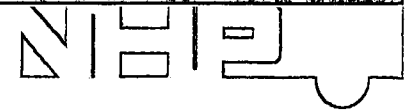



OPERATING CHARACTERISTICS

LET-THROUGH ENERGY CHARACTERISTICS

S125-NF. 240V AC



S160-NF. 240V AC

SECTION 3

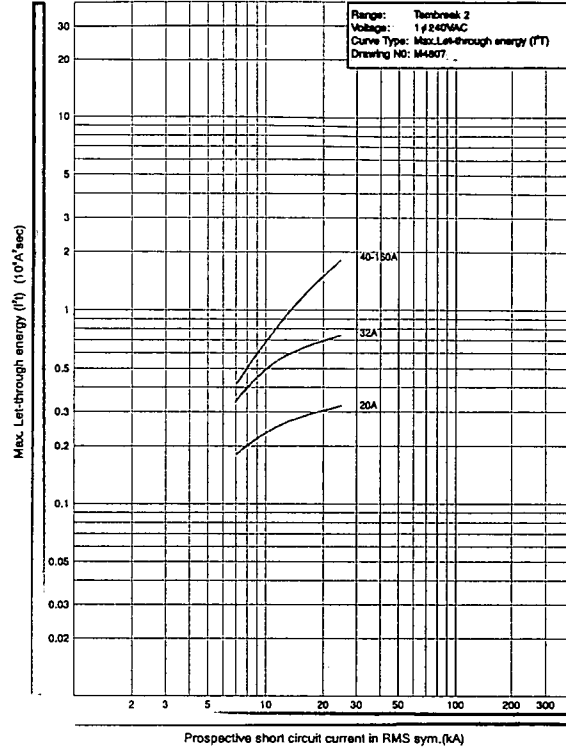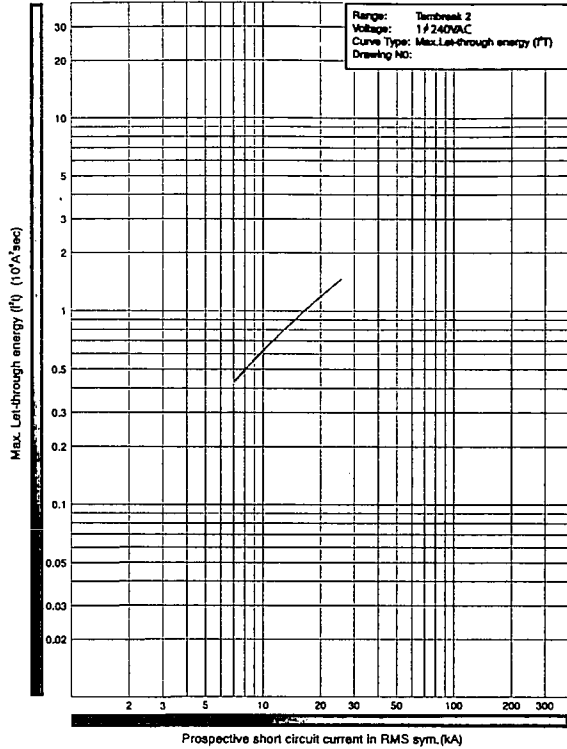

E125-NJ, S125-NJ, S125-GJ. 440V AC.

S125-NJ, S125-GJ. 690V AC.

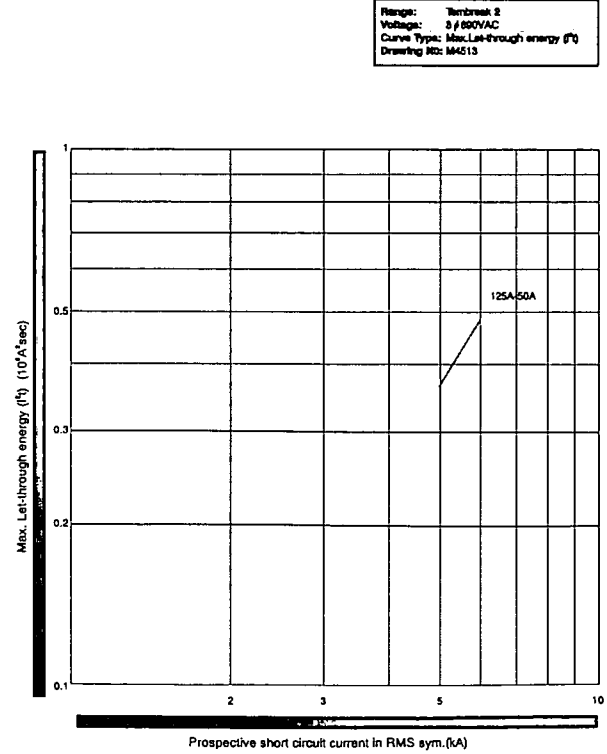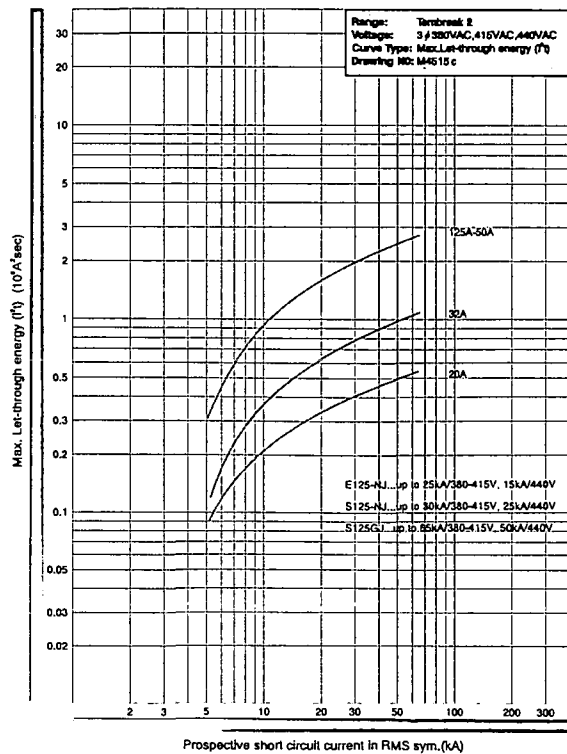

NHP

Accessories to suit 125 - 630AF MCCBs




External accessories

Cat. No.

Door interlocking, variable depth Suits MCCB types

E125, S125

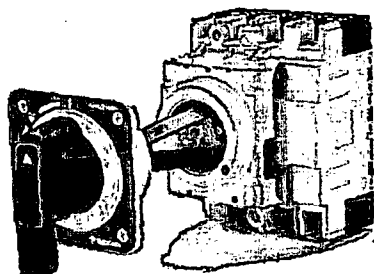

IP54 rated

Grey/black
Grey/black c/w key lock
Red/yellow
Red/yellow c/w key lock


T2HP12R5BNA4
T2HP12R5BKA4
T2HP12R5RNA4
T2HP12R5RKA4

IP65 rated

Grey/black
Grey/black c/w key lock
Red/yellow
Red/yellow c/w key lock

T2HP12R6BNA4
T2HP12R6BKA4
T2HP12R6RNA4
T2HP12R6RKA4

H125, L125, S160, H160, L160, E250, S250, H250, L250

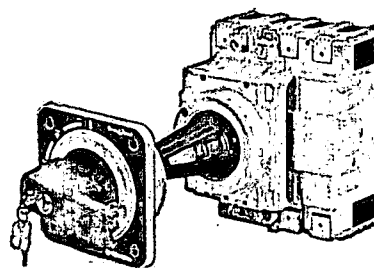

IP54 rated

Grey/black
Grey/black c/w key lock
Red/yellow
Red/yellow c/w key lock


T2HP25R5BNA4
T2HP25R5BKA4
T2HP25R5RNA4
T2HP25R5RKA4

IP65 rated

Grey/black
Grey/black c/w key lock
Red/yellow
Red/yellow c/w key lock

T2HP25R6BNA4
T2HP25R6BKA4
T2HP25R6RNA4
T2HP25R6RKA4

Note: Handles supplied with shaft

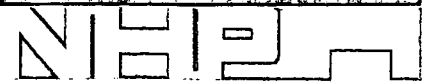

ACCESSORIES

OPERATING HANDLES & LOCKING DEVICES

TemBreak 2 handles are extremely reliable, having been designed to endure the same switching duty as the host MCCB.

It is easy to fit the operating unit to the MCCB. Fitting involves three easy steps:

1. Align breaker toggle with operating mechanism
2. Push handle into position (the handle's round pegs locate securely in the breaker's round holes and the handle's* square pegs in the breaker's square holes).
3. Twist locking screws through 45 degrees.*

Safety Features

- Door interlock mechanism with override facility included as standard
- IP54 (door mounted version), IP 54 as standard (breaker mounted version)
- IP65 (door mounted version), IP 65 optional (breaker mounted version)
- Locks OFF with up to 3 padlocks (8mm hasps)
- Optional keylock in OFF position
- Available in black or red and yellow
- A trip test can be performed with the handle fitted to the MCCB


SECTION 5

Orientation

To switch the breaker from OFF to ON the handle is rotated through 90 degrees in a clockwise direction.

The ON (I) and OFF (O) indication of the handle can be re-oriented in steps of 90 degrees with respect to the operating mechanism. This allows the indication position to remain the same whether the breaker is mounted vertically (right side up or upside down) or horizontally (on its left side or on its right side). The hole cut-out dimensions for a panel or door will remain unchanged if the handle is re-oriented. The handle's axis of rotation is on the intersection of the centre lines of a 3P MCCB.


This means that the positioning of the door cutouts is symmetrical for breakers mounted horizontally on either side of a vertical busbar system.

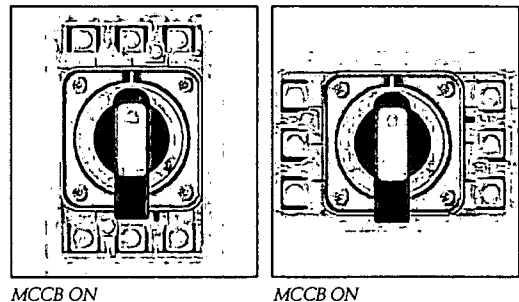


MCCB ON

MCCB ON

Cubicle Door Cutouts

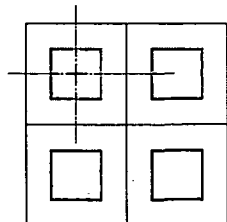

Using TemBreak 2 Operating Handles

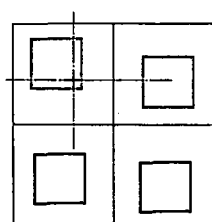


Using other MCCB Operating Handles

*handles for 400A and 630A Frame models are secured with four screws.

ACCESSORIES

OPERATING HANDLES & LOCKING DEVICES


Door Mounted Handle (HP)

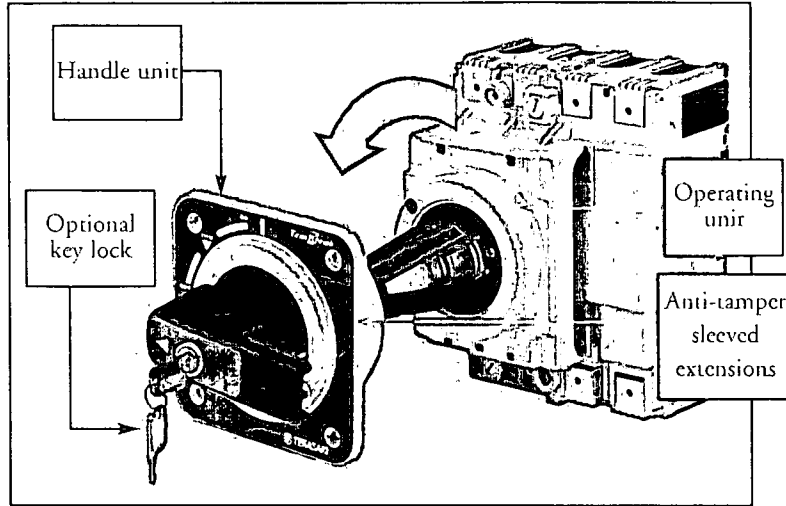

The door mounted operating handle is used to operate a circuit breaker mounted inside a cubicle from outside the door. It consists of an operating mechanism that is mounted on the breaker, an operating handle that is mounted on the door, and a shaft that transmits the turning force from the handle to the operating unit. The shaft can be cut to the required length.

Door Mounted Handle with Optional Keylock

Breaker Mounted Handle (HB)

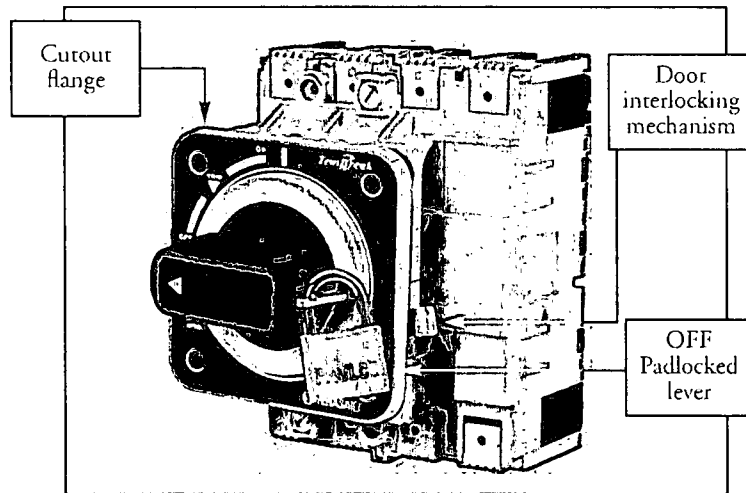


This handle is used to operate a circuit breaker mounted just behind a compartment door with the door closed. The operating unit and the handle itself are mounted directly onto the circuit breaker. The handle protrudes through a cutout in the door. A moulded door flange is supplied with the handle which covers the cutout from the front. Padlocking and keylocking is possible in the OFF position or both the ON and OFF position depending on the mounting direction.


Breaker Mounted Handle Padlocked in the OFF Position

Locking Devices

Toggle locking devices allow MCCBs to be locked ON or OFF using up to three padlocks. Locking devices for 125A, 160A and 250A frame models accept padlocks with 5mm hasp diameter. Locking devices for 400A and 630A frame models accept padlocks with 8mm hasp diameter.

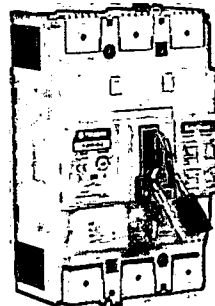

S250 Locked OFF

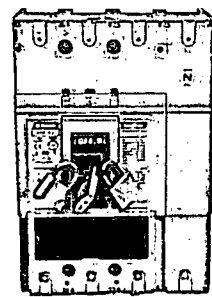


S400 Locked OFF

Fittings for Castell and Fortress locks are available. They are suitable for use on toggle-operated MCCBs, or on door mounted handles (HP) for MCCBs.

SECTION 5



TEMBREAK 2 MCCBs

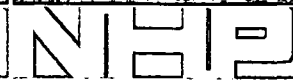





DIMENSIONS

Door Mounted Handle

Applicable MCCB	A *1	B	C	Shaft support
E125 S125	540 max.	370	421	With +


*1: Max. means the maximum length for A without cutting the shaft.

+ The shaft can be cut to the required length. If it is necessary to cut the shaft so short that it does not protrude beyond the shaft support, the shaft support may be removed.

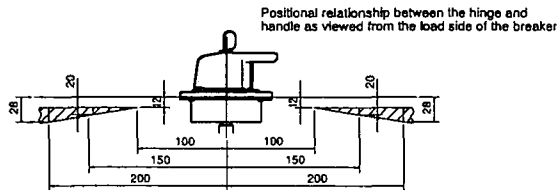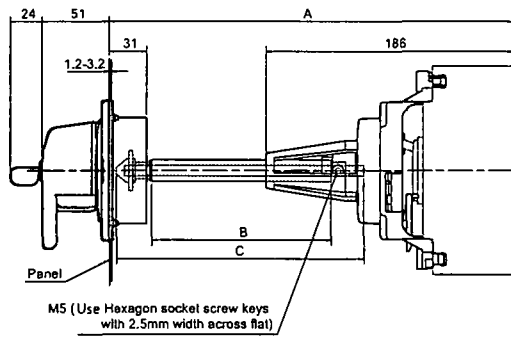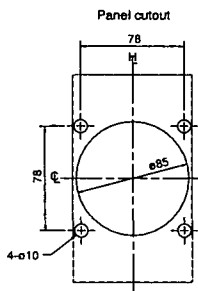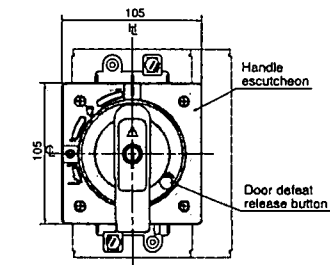

ASL: Arrangement Standard Line
 HL: Handle Frame Centre Line
 CL: Handle Centre Line

Padlock dimensions (mm)

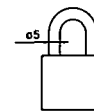



TEMBREAK 2 MCCBs







DIMENSIONS

Door Mounted Handle

Applicable MCCB	A *1	B	C	D	Shaft support
E250 S250 (except S250-PE)	540 max.	370	421	186	With +
S250-PE H125 L125 H160 L160 H250 L250	575 max.	370	421	221	With +

*1: Max. means the maximum length for A without cutting the shaft.

+ The shaft can be cut to the required length. If it is necessary to cut the shaft so short that it does not protrude beyond the shaft support, the shaft support may be removed.

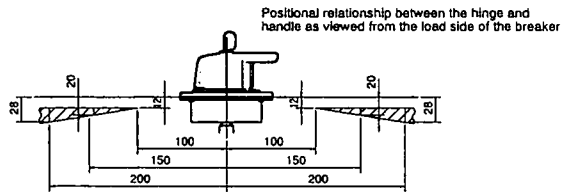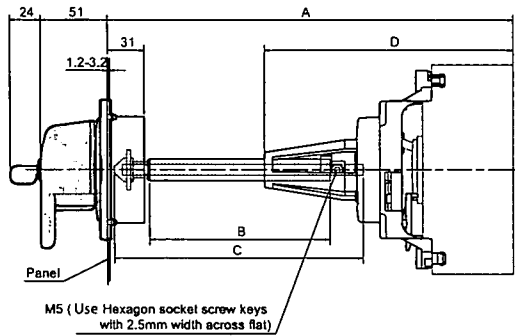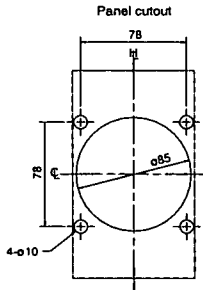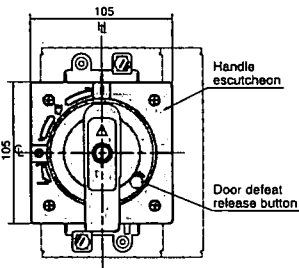


ASL: Arrangement Standard Line


ht: Handle Frame Centre Line

∅: Handle Centre Line

Padlock dimensions (mm)

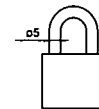

SECTION 7

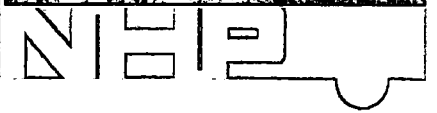

DIMENSIONS


Door Mounted Handle

Applicable MCCB	A *1	B	C	D	Shaft support
E400 E630	270 min.	12	107.5	—	Without
S400 S630	610 max.	280	447.5	261	With +
H400	307 min.	12	107.5	—	Without
L400	647 max.	280	447.5	298	With +

*1: Min. means the minimum length for A by cutting the shaft.

Max. means the maximum length for A without cutting the shaft.


+ The shaft can be cut to the required length. If it is necessary to cut the shaft so short that it does not protrude beyond the shaft support, the shaft support may be removed.

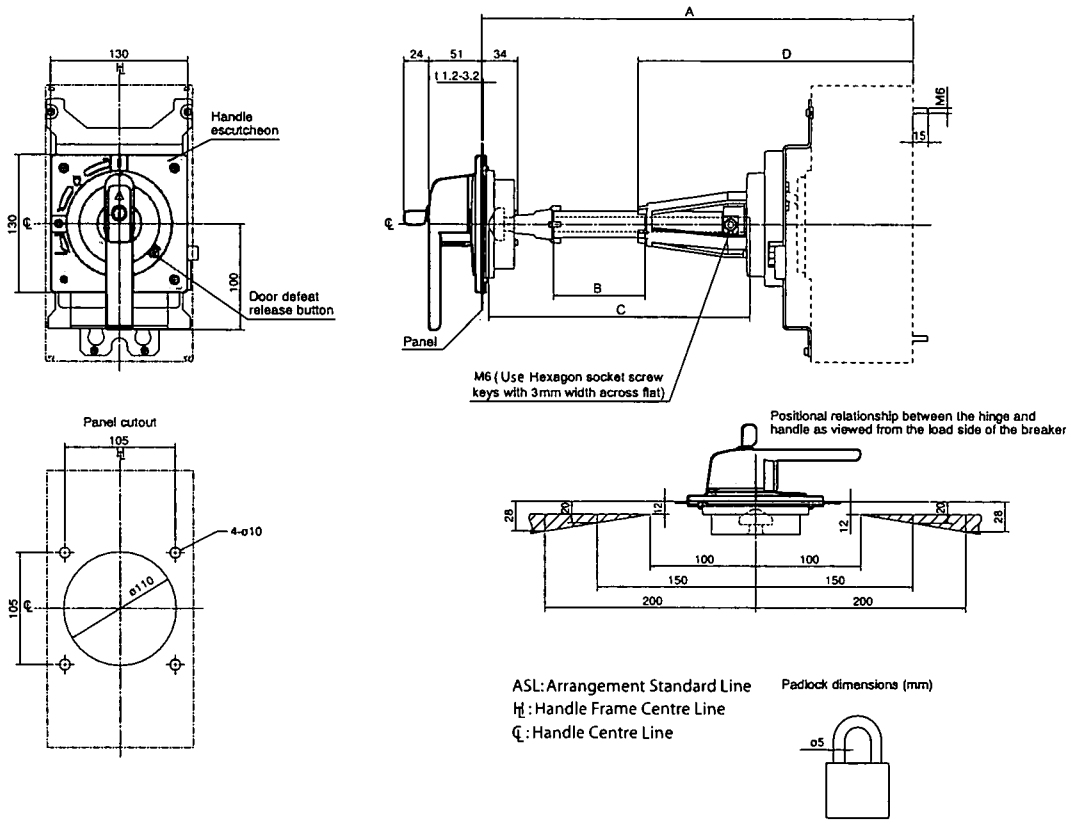

SECTION 1

NHP

Accessories to suit 125 - 630AF MCCBs

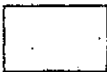


External accessories

Cat. No.

Door interlocking, variable depth Suits MCCB types

E400, S400, H400, L400, E630, S630

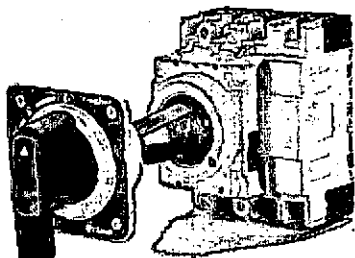


IP54 rated	
Grey/black	T2HP40R5BNA4
Grey/black c/w key lock	T2HP40R5BKA4
Red/yellow	T2HP40R5RNA4
Red/yellow c/w key lock	T2HP40R5RKA4
IP65 rated	
Grey/black	T2HP40R6BNA4
Grey/black c/w key lock	T2HP40R6BKA4
Red/yellow	T2HP40R6RNA4
Red/yellow c/w key lock	T2HP40R6RKA4

Note: Handles supplied with shaft

Mechanical Interlocks

Link Interlock – suitable for manual or motorised operation. Will accept handles. Suitable for front or rear connection

E125, S125

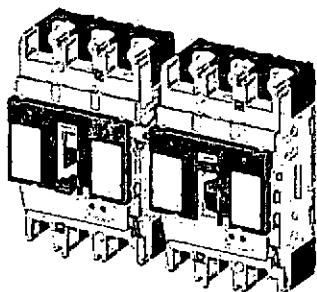

With trip interlock function	
3 or 4 pole right side section	T2ML12RA
3 pole left side section	T2ML12L3A
4 pole left side section	T2ML12L4A

H125, L125, S160, H160, L160, E250, S250, H250, L250

With trip interlock function	
3 or 4 pole right side section	T2ML25RA
3 pole left side section	T2ML25L3A
4 pole left side section	T2ML25L4A

E400, S400, H400, L400, E630, S630

With trip interlock function	
3 or 4 pole right side section	T2ML40RA
3 pole left side section	T2ML40L3A
4 pole left side section	T2ML40L4A

Refer page 53 if MCCB labels are required or refer to NHP.

Price Schedule T2

ACCESSORIES

OPERATING HANDLES & LOCKING DEVICES

TemBreak 2 handles are extremely reliable, having been designed to endure the same switching duty as the host MCCB.

It is easy to fit the operating unit to the MCCB. Fitting involves three easy steps:

1. Align breaker toggle with operating mechanism
2. Push handle into position (the handle's round pegs locate securely in the breaker's round holes and the handle's* square pegs in the breaker's square holes).
3. Twist locking screws through 45 degrees.*

Safety Features


- Door interlock mechanism with override facility included as standard
- IP54 (door mounted version), IP 54 as standard (breaker mounted version)
- IP65 (door mounted version), IP 65 optional (breaker mounted version)
- Locks OFF with up to 3 padlocks (8mm hasps)
- Optional keylock in OFF position
- Available in black or red and yellow
- A trip test can be performed with the handle fitted to the MCCB

Orientation


To switch the breaker from OFF to ON the handle is rotated through 90 degrees in a clockwise direction.

The ON (I) and OFF (O) indication of the handle can be re-oriented in steps of 90 degrees with respect to the operating mechanism. This allows the indication position to remain the same whether the breaker is mounted vertically (right side up or upside down) or horizontally (on its left side or on its right side). The hole cut-out dimensions for a panel or door will remain unchanged if the handle is re-oriented. The handle's axis of rotation is on the intersection of the centre lines of a 3P MCCB.

This means that the positioning of the door cutouts is symmetrical for breakers mounted horizontally on either side of a vertical busbar system.

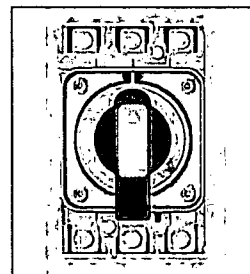


MCCB ON

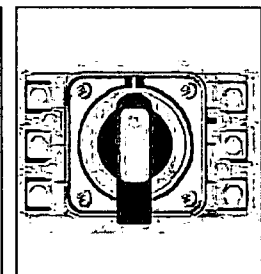


MCCB ON

Cubicle Door Cutouts

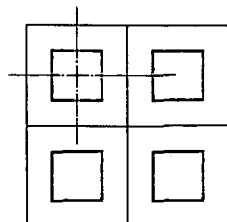

Using TemBreak 2 Operating Handles

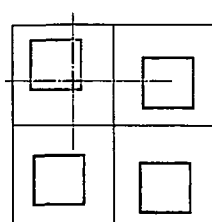

Using other MCCB Operating Handles

*handles for 400A and 630A Frame models are secured with four screws.




TEMBREAK 2 MCCBs



ACCESSORIES

OPERATING HANDLES & LOCKING DEVICES


Door Mounted Handle (HP)

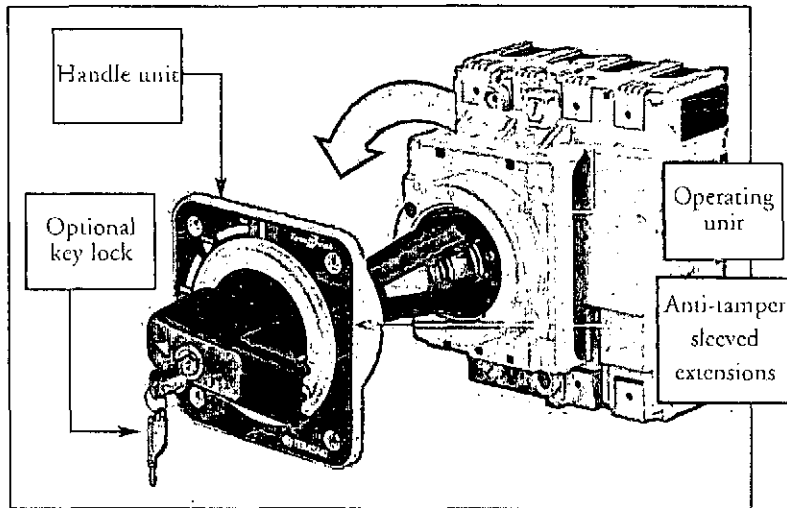

The door mounted operating handle is used to operate a circuit breaker mounted inside a cubicle from outside the door. It consists of an operating mechanism that is mounted on the breaker, an operating handle that is mounted on the door, and a shaft that transmits the turning force from the handle to the operating unit. The shaft can be cut to the required length.

Door Mounted Handle with Optional Keylock

Breaker Mounted Handle (HB)

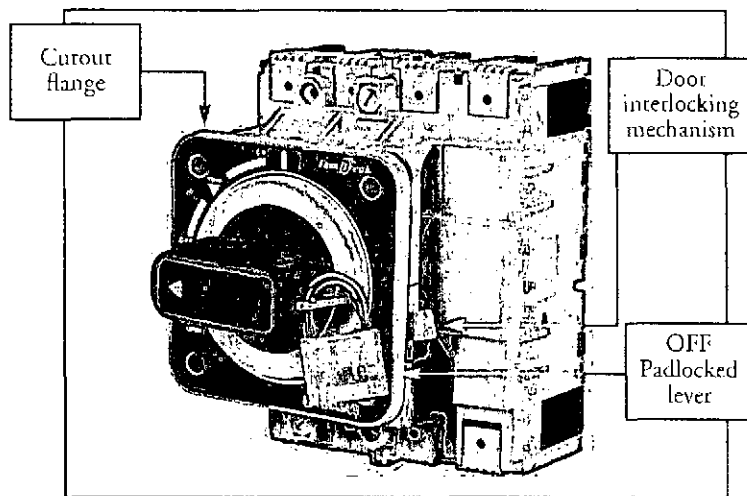


This handle is used to operate a circuit breaker mounted just behind a compartment door with the door closed. The operating unit and the handle itself are mounted directly onto the circuit breaker. The handle protrudes through a cutout in the door. A moulded door flange is supplied with the handle which covers the cutout from the front.

Padlocking and keylocking is possible in the OFF position or both the ON and OFF position depending on the mounting direction.


Breaker Mounted Handle Padlocked in the OFF Position

Locking Devices

Toggle locking devices allow MCCBs to be locked ON or OFF using up to three padlocks. Locking devices for 125A, 160A and 250A frame models accept padlocks with 5mm hasp diameter. Locking devices for 400A and 630A frame models accept padlocks with 8mm hasp diameter.

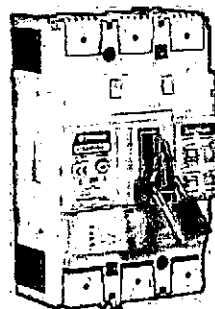

250 Locked OFF

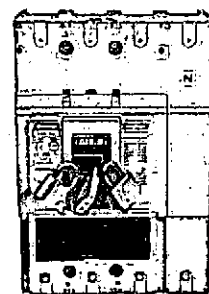

400 Locked OFF

Fittings for Castell and Fortress locks are available. They are suitable for use on toggle-operated MCCBs, or on door mounted handles (HP) for MCCBs.

SECTION 5



TEMBREAK 2 MCCBs







DIMENSIONS

Door Mounted Handle

Applicable MCCB	A *1	B	C	Shaft support
E125 S125	540 max.	370	421	With +


*1: Max. means the maximum length for A without cutting the shaft.

+ The shaft can be cut to the required length. If it is necessary to cut the shaft so short that it does not protrude beyond the shaft support, the shaft support may be removed.

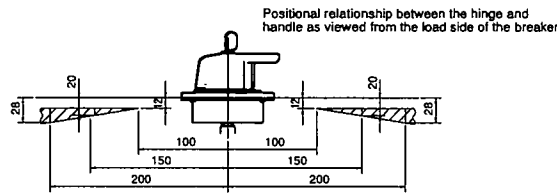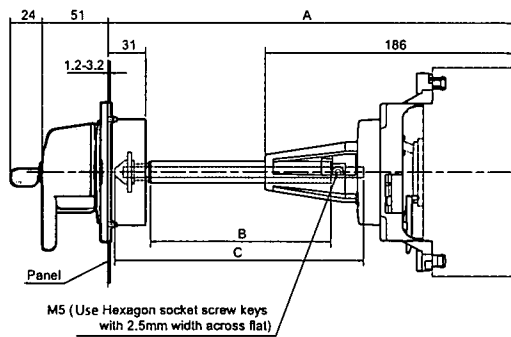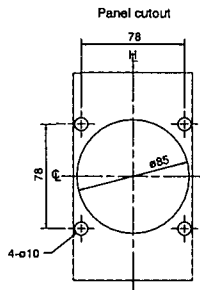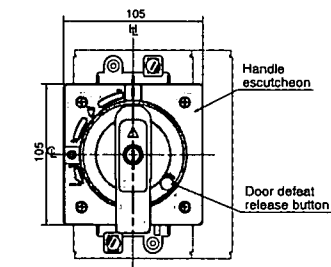

ASL: Arrangement Standard Line
 H1: Handle Frame Centre Line
 CL: Handle Centre Line

Padlock dimensions (mm)

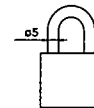



TEMBREAK 2 MCCBs







DIMENSIONS

Door Mounted Handle


Applicable MCCB	A *1	B	C	D	Shaft support
E250 S250 (except S250-PE)	540 max.	370	421	186	With +
S250-PE H125 L125 H160 L160 H250 L250	575 max.	370	421	221	With +

*1: Max. means the maximum length for A without cutting the shaft.
 + The shaft can be cut to the required length. If it is necessary to cut the shaft so short that it does not protrude beyond the shaft support, the shaft support may be removed.

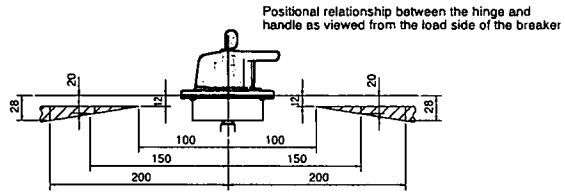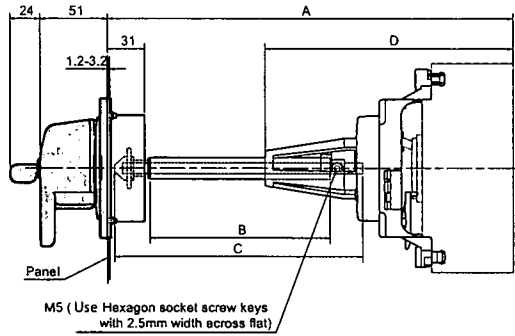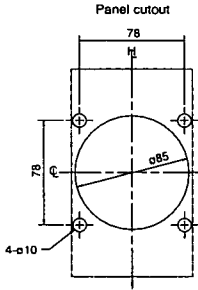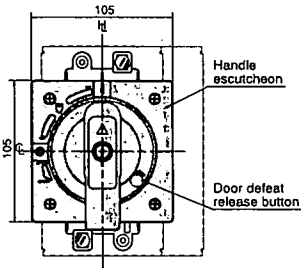

ASL: Arrangement Standard Line
 H: Handle Frame Centre Line
 C: Handle Centre Line

Padlock dimensions (mm)

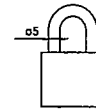



DIMENSIONS


Door Mounted Handle

Applicable MCCB	A *1	B	C	D	Shaft support
E400 E630	270 min.	12	107.5	—	Without
S400 S630	610 max.	280	447.5	261	With +
H400	307 min.	12	107.5	—	Without
L400	647 max.	280	447.5	298	With +

*1: Min. means the minimum length for A by cutting the shaft.

Max. means the maximum length for A without cutting the shaft.

+ The shaft can be cut to the required length. If it is necessary to cut the shaft so short that it does not protrude beyond the shaft support, the shaft support may be removed.

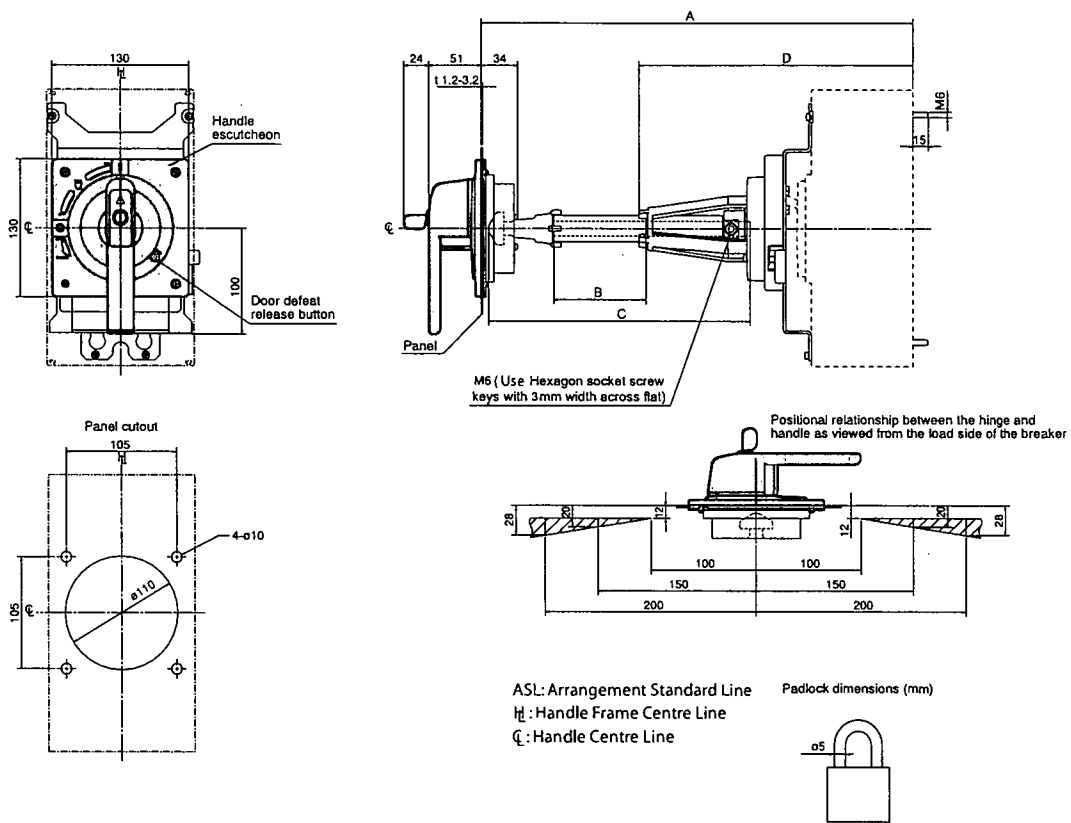

SECTION



Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

MINIATURE CIRCUIT BREAKER


1. MCB TECHNICAL DETAILS
2. MCB/RCD TECHNICAL DETAILS



Miniature circuit breakers

Din-T6 series 6 kA MCB

DTCB6
1 pole

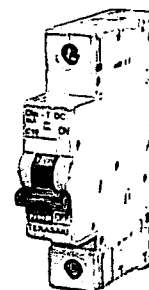

- Standards AS/NZS 4898
- Approval No. N17481
- Current range 2-63 Amps 1, 2 and 3 pole
- Sealable and lockable handle
- Available in curve type C and D
- Mounts on CD chassis (250 A and 355 A)

1 pole 1 module

In (A)	C - Curve 5-10 In
2	DTCB6102C
4	DTCB6104C
6	DTCB6106C
10	DTCB6110C
13	DTCB6113C
16	DTCB6116C
20	DTCB6120C
25	DTCB6125C
32	DTCB6132C
40	DTCB6140C
50	DTCB6150C
63	DTCB6163C

2 pole 2 modules

2	DTCB6202C
4	DTCB6204C
6	DTCB6206C
10	DTCB6210C
13	<input type="checkbox"/> DTCB6213C
16	DTCB6216C
20	DTCB6220C
25	DTCB6225C
32	DTCB6232C
40	DTCB6240C
50	DTCB6250C
63	DTCB6263C

3 pole 3 modules

2	DTCB6302C
4	DTCB6304C
6	DTCB6306C
10	DTCB6310C
13	<input type="checkbox"/> DTCB6313C
16	DTCB6316C
20	DTCB6320C
25	DTCB6325C
32	DTCB6332C
40	DTCB6340C
50	DTCB6350C
63	DTCB6363C

Short circuit capacity 6 kA

In (A)	2 - 63	
1 P	240 V AC	
2 P	240 - 415 V AC	
3 P	240 - 415 V AC	
DC use	1 P	2 P ¹⁾
Short circuit	20 kA	25 kA
Max.voltage (DC)	48 V	110 V

Use at DC

When using Din-T6 in a DC application the magnetic tripping current is approximately 40 % higher than in AC 50/60 Hz.

Shock resistance (In X, Y, Z directions).

20 g with shock duration 10 ms (minimum 18 shocks).
40 g with shock duration 5 ms (minimum 18 shocks).

Vibration resistance (In X, Y, Z directions).

3 g in frequency range 10 to 55 Hz
(operating time at least 30 min).
According to IEC 60068-2-6.

Storage temperature

From -55 °C to +55 °C, according to IEC 88 part 2 - 1
(duration 96 hours).

Operating temperature

From -25 °C to +55 °C, according to
VDE 0664 parts 1 and 2.

Use at 400 Hz

At 400 Hz the magnetic trip current is approximately
50 % higher than in AC 50/60 Hz.

- Notes: ¹⁾ 2 pole MCB connected in series.
The line side is the "OFF" (bottom) side of
the MCB, and connects to CD chassis tee-offs.
 Available on indent only.


Din-T MCBs Technical data

Characteristics according to BS EN 60898

Miniature Circuit Breakers are intended for the protection of wiring installations against both overloads and short-circuits in **domestic** or **commercial** wiring installations where operation is possible by **uninstructed** people

3

Tripping characteristic curves

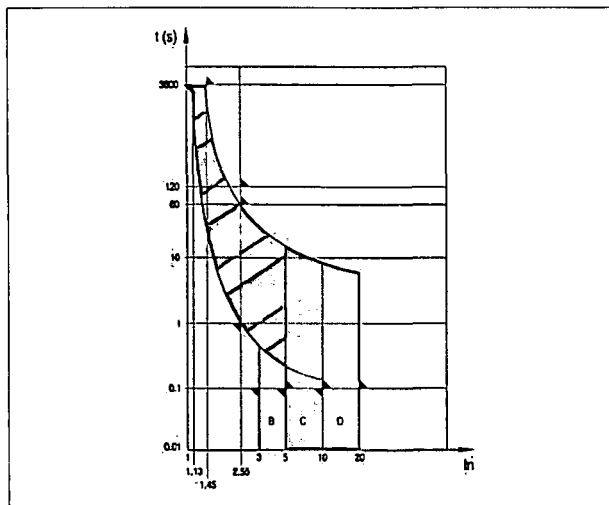

Magnetic release

An electromagnet with plunger ensures instantaneous tripping in the event of short-circuit. The NHP Din-T range has 3 different types, following the current for instantaneous release: types B, C and D curve.

Icn (A)	Test current	Tripping time	Applications
B	3 x In 5 x In	0.1 < t < 45 s (In ≤ 32 A) 0.1 < t < 90 s (In > 32 A) t < 0.1 s	Only for resistive loads eg: • electrical heating • water heater • stoves.
C	5 x In 10 x In	0.1 < t < 15 s (In ≤ 32 A) 0.1 < t < 30 s (In > 32 A) t < 0.1 s	Usual loads such as: • lighting • socket outlets • small motors
D	10 x In 20 x In	0.1 < t < 4 s (**) (In ≤ 32 A) 0.1 < t < 8 s (In > 32 A) t < 0.1 s	Control and protection of circuits having important transient inrush currents (large motors)

Thermal release

The release is initiated by a bimetal strip in the event of overload. The standard defines the range of releases for specific overload values. Reference ambient temperature is 30 °C.

Test current	Tripping time
1.13 x In	t ≥ 1 h (In ≤ 63 A) t ≥ 2 h (In > 63 A)
1.45 x In	t < 1 h (In ≤ 63 A) t < 2 h (In > 63 A)
2.55 x In	1 s < t < 60 s (In ≤ 32 A) 1 s < t < 120 s (In > 32 A)

Rated short-circuit breaking capacity (Icn)

Is the value of the short-circuit that the MCB is capable of withstanding in the following test of sequence of operations: O-t-CO.

After the test the MCB is capable, without maintenance, to withstand a dielectric strength test at a test voltage of 900 V. Moreover, the MCB shall be capable of tripping when loaded with 2.8 In within the time corresponding to 2.55 In but greater than 0.1s.

Service short-circuit breaking capacity (Ics)

Is the value of the short-circuit that the MCB is capable of withstanding in the following test of sequence of operations: O-t-CO-t-CO.


After the test the MCB is capable, without maintenance, to withstand a dielectric strength test at a test voltage of 1500 V. Moreover, the MCB shall not trip at a current of 0.96 In. The MCB shall trip within 1h when current is 1.6 In.

- O - Represents an opening operation
- C - Represents a closing operation followed by an automatic opening.
- t - Represents the time interval between two successive short-circuit operations: 3 minutes.

The relation between the rated short-circuit capacity (Icn) and the rated service short-circuit breaking capacity (Ics) shall be as follows:

Icn (A)	Ics (A)
≤ 6000	6000
> 6000 ≤ 10000	0.75 Icn min. 6000
> 10000	0.75 Icn min. 7500

In both sequences all MCBs are tested for emission of ionized gases during short-circuit (grid distance), in a safety distance between two MCBs of 35 mm when devices are installed in two different rows in the enclosure. This performance allows the use of any NHP/Terasaki enclosure.

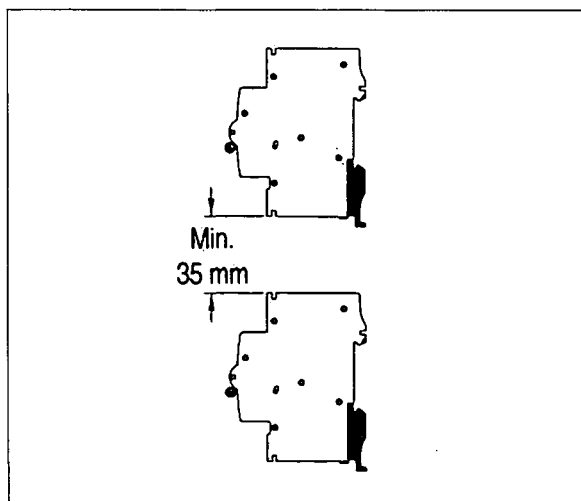


Din-T MCBs Technical data

Tripping curves according to EN 60898

The following tables show the average tripping curves of the Terasaki Din-T MCBs based on the thermal and magnetic characteristics.

Curve C

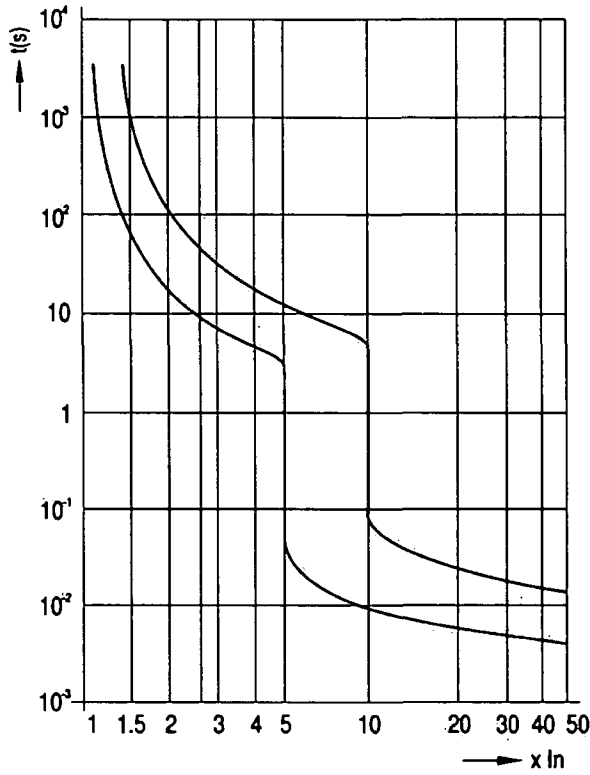

3



Din-T MCBs Technical data

Influence of ambient air temperature on the rated current

The maximum value of the current which can flow through an MCB depends on the nominal current of the MCB, the conductor cross-section and the ambient air temperature.

The values shown in the table below are for devices in free air. For devices installed with other modular devices in the same switchboard, a correction factor (K) shall be applied relative to the mounting situation of the MCB, the ambient temperature and the number of main circuits in the installation.

No of devices	K ¹⁾
2 or 3	0.9
4 or 5	0.8
6 or 9	0.7
> 10	0.6

Calculation example

Within a distribution board consisting of eight 2 Pole, 16 A, 'C' curve type MCBs, with an operating ambient temperature of 45 °C, which is the highest temperature the MCB can operate at without unwanted tripping?

Calculation

The correction factor K = 0.7, for use in an eight circuit installation: 16 A x 0.7 = 11.2 A


As the MCB is working at 45 °C it shall be given another factor (90 % = 0.9):

In at 45 °C = In at 30 °C x 0.9 = 11.2 A x 0.9 = 10.1 A.


Note: ¹⁾ Applicable for MCBs working at maximum rated currents.

The thermal calibration of the MCBs was carried out at an ambient temperature of 30 °C. Ambient temperatures different from 30 °C influence the bimetal and this results in earlier or later thermal tripping.


0.5 - 6 A

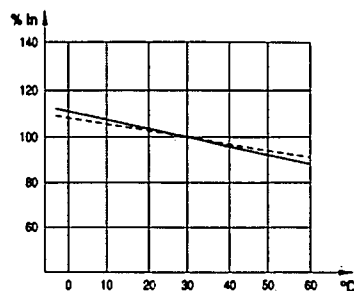


10 A

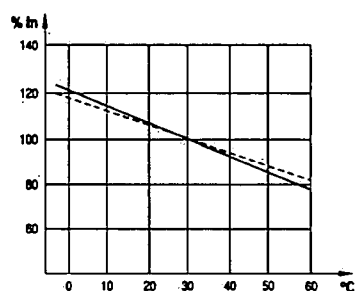

16 - 40 A

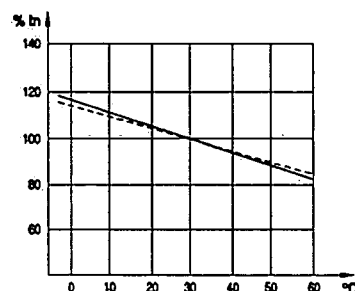

50 - 63 A

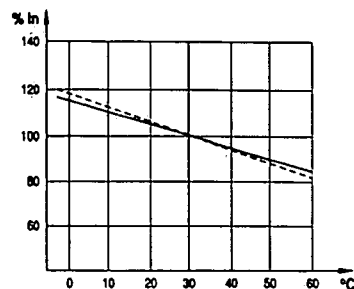

————— : 1P (single pole)

- - - - - : mP (multi-pole)

3

Din-T MCBs Technical data

Effects of frequency on the tripping characteristic

All the MCBs are designed to work at frequencies of 50-60 Hz, therefore to work at different values, consideration must be given to the variation of the tripping characteristics. The thermal tripping does not change with variation of the frequency but the magnetic tripping values can be up to 50 % higher than the ones at 50-60 Hz.

Tripping current variation

60 Hz	100 Hz	200 Hz	300 Hz	400 Hz
1	1.1	1.2	1.4	1.5

Power losses

The power losses are calculated by measuring the voltage drop between the incoming and the outgoing terminals of the device at rated current.

Power loss per pole

In (A)	Voltage drop (V)	Energy loss (W)	Resistance (mOhm)
0.5	2.230	1.115	4458.00
1	1.270	1.272	1272.00
2	0.620	1.240	310.00
3	0.520	1.557	173.00
4	0.370	1.488	93.00
6	0.260	1.570	43.60
8	0.160	1.242	19.40
10	0.160	1.560	15.60
13	0.155	2.011	11.90
16	0.162	2.586	10.10
20	0.138	2.760	6.90
25	0.128	3.188	5.10
32	0.096	3.072	3.00
40	0.100	4.000	2.50
50	0.090	4.500	1.80
63	0.082	5.160	1.30
80	0.075	6.000	0.90
100	0.075	7.500	0.75
125	0.076	9.500	0.60


Limitation curves

Let-through energy I^2t

The limitation capacity of an MCB in short-circuit conditions, is its capacity to reduce the value of the let-through energy that the short-circuit would be generating.

Peak current I_p

Is the value of the maximum peak of the short-circuit current limited by the MCB.

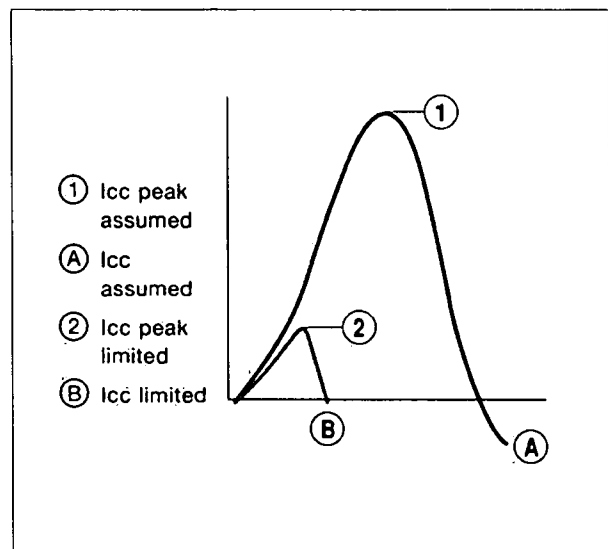

See following pages



Din-T MCBs Technical data

Din-T 6

6 kA

C curve

3

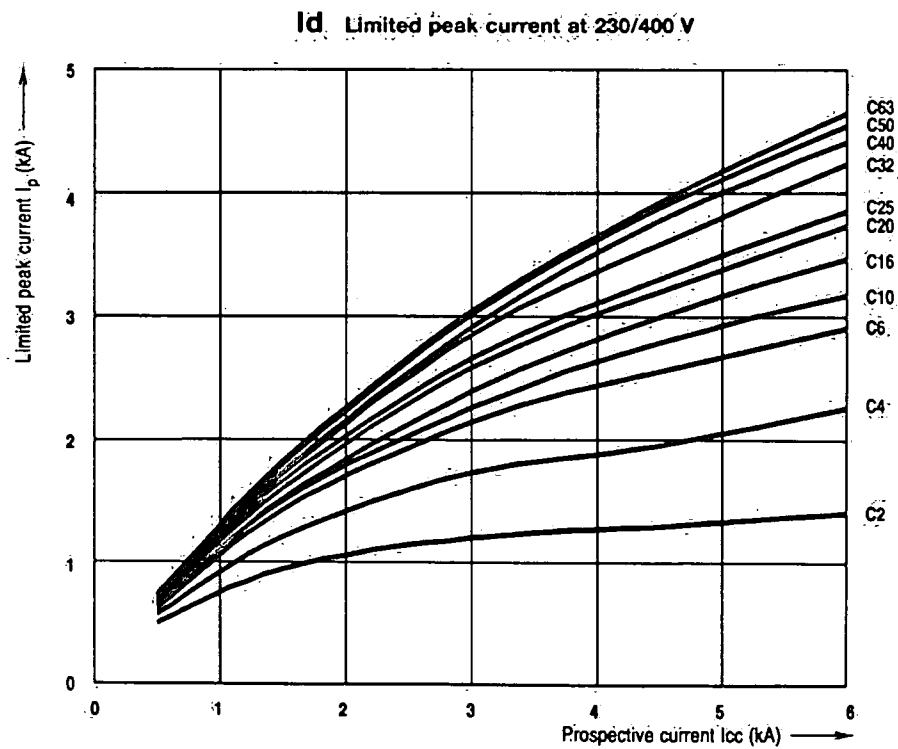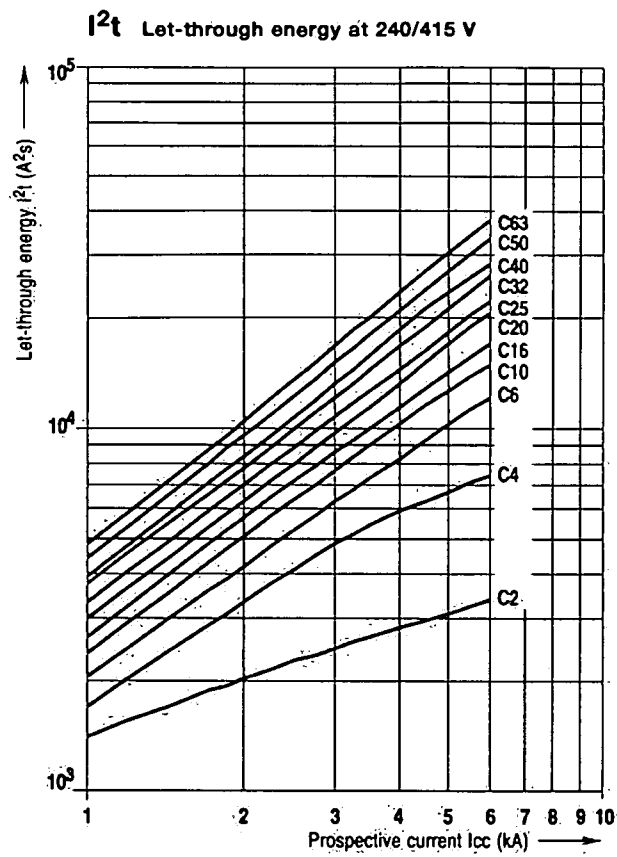



Din-T MCBs Technical data

Use of standard MCB for DC use

For MCBs designed to be used in alternating current but used in installations in direct current, the following should be taken into consideration:

- For protection against overloads it is necessary to connect the two poles to the MCB. In these conditions the tripping characteristic of the MCB in direct current is similar to alternating current.

- For protection against short-circuits it is necessary to connect the two poles to the MCB. In these conditions the tripping characteristic of the MCB in direct current is 40% higher than the one in alternating current.

3

Use in DC selection table

Series	Rated current (A)	48 V 1 pole Icu (kA)	110 V 2 poles in series Icu (kA)	250 V 1 pole Icu (kA)	440 V 2 poles in series Icu (kA)
Din-T 6	0.5...63 A	20	25	-	-

Din-T MCBs Technical data

Text for specifiers

MCB Series Din-T 6

- According to EN 60898 standard
- For DIN rail mounting according to DIN EN 50022; EN 50022; future EN 60715; IEC 60715 (top hat rail 35 mm)
- Grid distance 35 mm
- Working ambient temperature from -25 °C up to +50 °C
- Approved by CEBEC, VDE, KEMA, IMQ.
- 1 pole is a module of 18 mm wide
- Nominal rated currents are:
0.5/1/2/3/4/6/10/13/16/20/25/32/40/50/63 A
- Tripping characteristics: B,C,D (B curve Din-T 10 only).
- Number of poles: 1 P, 1 P+N, 2 P, 3 P, 3 P+N, 4 P
- The short-circuit breaking capacity is: 6/10k A, energy limiting class 3
- Terminal capacity from 1 up to 35 mm² rigid wire or 1.5 up to 25 mm² flexible wire.
- Screw head suitable for flat or Pozidrive screwdriver
- Can be connected by means of both pin or fork busbars
- The toggle can be sealed in the ON or OFF position
- Rapid closing
- Both incoming and outgoing terminals have a protection degree of IP 20 and they are sealable
- Isolator function thanks to Red/Green printing on the toggle.
- Maximum voltage between two phases; 440 V~
- Maximum voltage for utilisation in DC current: 48 V 1 P and 110 V 2 P
- Two position rail clip
- Mechanical shock resistance 40 g (direction x, y, z) minimum 18 shocks 5 ms half-sinusoidal acc. to IEC 60068-2-27
- Vibration resistance: 3 g (direction x, y, z) minimum 30 min. according to IEC 60068-2-6
- Extensions can be added on both left or right hand side
 - ☛ Auxiliary contact
 - ☛ Shunt trip
 - ☛ Undervoltage release
 - ☛ Motor operator
 - ☛ Panelboard switch
- Add-on RCD can be coupled.

Din-T MCBs Technical data

Series		Din-T6 AS/NZS 4898		
Standards (Aust / NZ / International)		IEC 60898		
Tripping characteristics		C, D		
Nominal current		A	C/D(0.5-63)	
Calibration temperature		°C	30	
Number of poles (# mod)		1/2/3/4		
Neutral pole protected		yes		
Nominal voltage Un	AC 1 P	V	240/415	
	3 P/4 P	V	415	
	DC 1 P ¹⁾	V DC	48	
	2 P (in series ¹⁾)	V DC	110	
Frequency		Hz	50/60	
		Hz	DC: magn.trip +40%	
		Hz	400: magn.trip +50%	
Maximum service voltage U _{bmax} between two wires		V	250/440; 53/120	
Minimum service voltage U _{bmin}		V	12; 12	
Selectivity class (IEC 60898)		3		
Isolator application IEC 60947-2		yes		
Rated insulation voltage	Pollution degree 2	V	500	
	Pollution degree 3	V	440	
Impulse withstand test voltage		kV	6	
Insulation resistance		mΩm	10,000	
Dielectric rigidity		kV	2.5	
Vibration resistance (in x, y, z direction) (IEC 77/16.3)		3 g		
Endurance	Electrical at Un, In	10,000		
	mechanical	20,000		
Utilisation category (IEC 60947-2)		A		
Protection degree (outside / inside, in enclosure with door)		IP 20/IP 40		
Self-extinguish degree (according to UL94)		V2		
Tropicalisation (according to IEC 60068-2 / DIN 40046) °C/RH		+55 °C/95 % RH		
Operating temperature		°C	-25/+55	
Storage temperature		°C	-55/+55	
Terminal capacity	Rigid cable min/max (top)	mm ²	1/35	
	Flexible cable min*/max (top)	mm ²	0.75/25	
	Rigid cable min/max (bottom)	mm ²	1/35	
	Flexible cable min*/max (bottom)	mm ²	0.75/25	
	(* Flexible cable 0.75/1/1.5 mm ² with cable lug)			
	Torque	Nm	4.5	
Add-on devices (side add-on)	Auxiliary contacts	yes		
	UVI	yes		
	Shunt trip	yes		
	Motor operator	yes		
	Panelboard switch	yes		
Busbar systems	Pin (top/bottom)	yes/yes		
	Fork (top/bottom)	-/yes		
Accessories		yes		
Dimensions, weights, packaging				
(HxDxW) 86x68xW		mm/mod.	18	
Weight/mod.		g	120	
Package		mod.	12	
Short-circuit capacity AC (kA)		AS/NZS 4898		
IEC 60898	Icn	1 P	230/400 V	6
		2 P	230/400 V	6
		3 P/4 P	230/400 V	6
Ics (service)		100 % Icn		
IEC 60947-2	Icu (ultimate)	1 P	127 V	20
			240 V	10
			415 V	3
	2 P	127 V	-	
		240 V	15	
		415 V	10	
	3 P, 4 P	240 V	15	
		415 V	10	
		440 V	6	
	Ics (service)		75 % Icu	
NEMA AB1 (120/240V)		20		
Short-circuit capacity DC (kA)				
IEC 60947-2	Icu (ultimate)	1 P	≤60 V	20
			≤220 V	-
			≤125 V	25
2 P	≤125 V	25		
	≤440 V	-		
Ics (service)		100 % Icu		

Notes Refer pages 3 - 23, 24 for information on SAFE-T MCBs.

¹⁾ Preferred values of rated control supply voltage (IEC 60947 - 2): 24 V, 48 V, 110 V, 125 V, 250 V

¹⁾ 0.5-4 A/6-25 A/32-40 A/50-63 A

¹⁾ 10 (125 V DC)

¹⁾ 10 (250 V DC)

¹⁾ Dn request.


3

Din-T MCBs Technical data

Miniature circuit breakers - Din-T 6

Dimensions in mm.

3

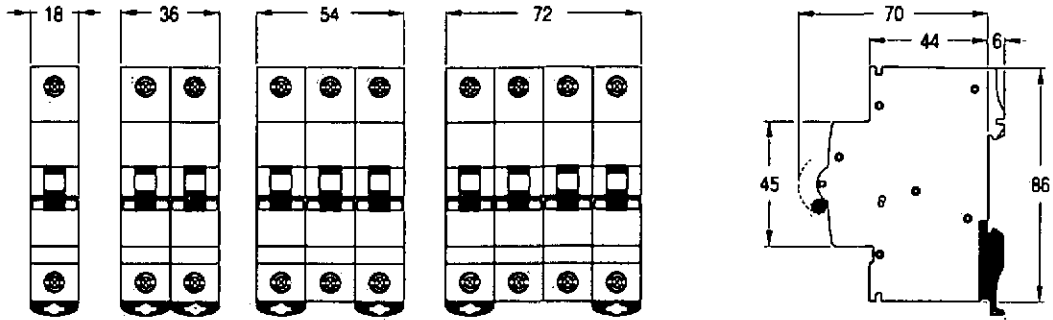




Miniature circuit breakers

Din-T15 series 15 kA, 20 kA, 25 kA MCBs

- Standards AS/NZS 3947-2
- Current range 6-63 Amp 1, 2, 3 and 4 pole
- Sealable and lockable handle
- Modular design
- Mounts on CD chassis (250 A and 355 A)
- Industrial applications

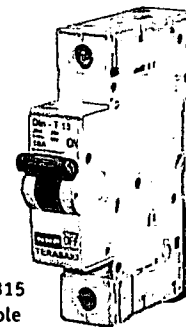

DTCB15
1 pole

1 pole 1 module ³⁾

In (A)	Icu (kA)	C - Curve 5 - 10 In
6	25	DTCB15106C
10	25	DTCB15110C
13	25	<input type="checkbox"/> DTCB15113C
16	25	DTCB15116C
20	25	DTCB15120C
25	25	DTCB15125C
32	20	DTCB15132C
40	20	DTCB15140C
50	15	DTCB15150C
63	15	DTCB15163C

2 pole 2 modules ³⁾

In (A)	Icu (kA)	C - Curve 5 - 10 In
6	25	<input type="checkbox"/> DTCB15206C
10	25	<input type="checkbox"/> DTCB15210C
13	25	<input type="checkbox"/> DTCB15213C
16	25	<input type="checkbox"/> DTCB15216C
20	25	<input type="checkbox"/> DTCB15220C
25	25	<input type="checkbox"/> DTCB15225C
32	20	<input type="checkbox"/> DTCB15232C
40	20	<input type="checkbox"/> DTCB15240C
50	15	<input type="checkbox"/> DTCB15250C
63	15	<input type="checkbox"/> DTCB15263C

In (A)	6 - 63
1 P	240 V AC
2 P	240/415 V AC
3 P	240/415 V AC
4 P	240/415 V AC

Shock resistance (in x, y, z direction)
20 g with shock duration of 10 ms
(minimum 18 shocks)
40 g with shock duration of 5 ms
(minimum 18 shocks)

Vibration resistance (in x, y, z direction)
3 g in frequency range 10 to 55 Hz
(operating time at least 30 mins)
according to IEC 60068-2-6

Storage temperature
from -55 °C to +55 °C according to
VDE 0664 parts 1 and 2

Operating temperature
from -25 °C to +55 °C according to
VDE 0664 Parts 1 and 2.


Use at 400 Hz
At 400 Hz the magnetic tripping current
is approximately 50 % higher than at AC
50/60 Hz

3 pole 3 modules ³⁾


6	25	DTCB15306C
10	25	DTCB15310C
13	25	<input type="checkbox"/> DTCB15313C
16	25	DTCB15316C
20	25	DTCB15320C
25	25	DTCB15325C
32	20	DTCB15332C
40	20	DTCB15340C
50	15	DTCB15350C
63	15	DTCB15363C

4 pole 4 modules ³⁾ ³⁾

6	25	<input type="checkbox"/> DTCB15406C
10	25	<input type="checkbox"/> DTCB15410C
13	25	<input type="checkbox"/> DTCB15413C
16	25	<input type="checkbox"/> DTCB15416C
20	25	<input type="checkbox"/> DTCB15420C
25	25	<input type="checkbox"/> DTCB15425C
32	20	<input type="checkbox"/> DTCB15432C
40	20	<input type="checkbox"/> DTCB15440C
50	15	<input type="checkbox"/> DTCB15450C
63	15	<input type="checkbox"/> DTCB15463C

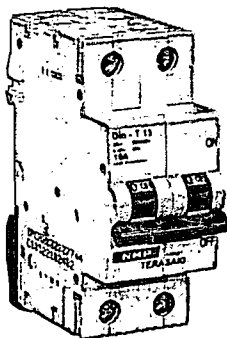

DTCB15
2 pole

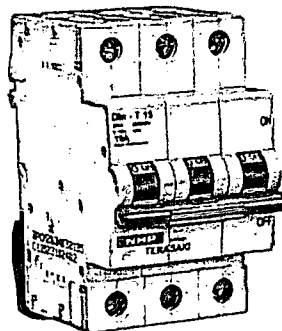

DTCB15
3 pole

Notes: ¹⁾ 2 P MCB connected in series.
The LINE-side is the OFF or bottom of the MCB and connects to CD chassis tee-offs.

²⁾ All poles include overcurrent and short circuit protection.

³⁾ Refer Section 3 for kA ratings at 240/415 V. The above ratings are at 415 V AC.


Available on indent only.

Din-T MCBs Technical data

Characteristics according to EN 60947-2

Miniature Circuit Breakers are intended for the protection of the lines against both overloads and short-circuits in industrial wiring installations where normal operation is done by instructed people

Tripping characteristic curves

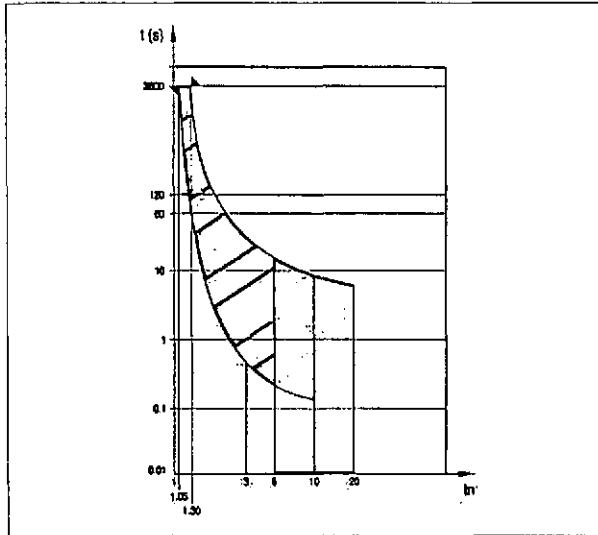

Magnetic release

An electromagnet with plunger ensures instantaneous tripping in the event of short-circuit. The standard leaves the calibration of magnetic release to the manufacturers discretion.

NHP offers instantaneous tripping ranges:

- release between 5 and 10 In
- release between 10 and 20 In

Thermal release

The release is initiated by a bimetal strip in the event of overload. The standard defines the range of release for two special overload values. Reference ambient temperature is 40 °C.

Test current	Tripping time
1.05 x In	t ≥ 1 h (In ≤ 63 A) t ≥ 2 h (In > 63 A)
1.30 x In	t < 1 h (In ≤ 63 A) t < 2 h (In > 63 A)

Rated ultimate short-circuit breaking capacity (Icu)

Is the value of the short-circuit that the MCB is capable of withstanding in the following test of sequence of operations: O-t-CO.

After the test the MCB is capable, without maintenance, to withstand a dielectric strength test at a test voltage of 1000 V. Moreover the MCB shall be capable of tripping when loaded with 2.5 In within the time corresponding to 2 In but greater than 0.1 s.

Rated service short-circuit breaking capacity (Ics)

Is the value of the short-circuit that the MCB is capable of withstanding in the following test of sequence of operations: O-t-CO-t-CO.

After the test the MCB is capable, without maintenance, to withstand a dielectric strength test at a test voltage of twice its rated insulation voltage with a minimum of 1000 V. A verification of the overload releases on In and moreover the MCB shall trip within 1 h when current is 1.45 In (for In < 63 A) and 2 h (for In > 63 A).

- O - Represents an opening operation
- C - Represents a closing operation followed by an automatic opening.
- t - Represents the time interval between two successive short-circuit operations: 3 minutes.

Category A: Without a short-time withstand current rating.

Utilization

category	Application with respect to selectivity
A	Circuit breakers not specifically intended for selectivity under short-circuit conditions with respect to other short-circuit protective devices in series on the load side, i.e. without an intentional short-time delay provided for selectivity under short-circuit conditions, and therefore without a short-time withstand current rating according to 4.3.5.4
B	Circuit breakers specifically intended for selectivity under short-circuit conditions with respect to other short-circuit protective devices in series on the load side, i.e. without an intentional short-time delay (which may be adjustable), provided for selectivity under short-circuit conditions. Such circuit-breakers have a short-time withstand current rating according to 4.3.5.4


3

Din-T MCBs Technical data

Tripping curves according to EN 60898

The following tables show the average tripping curves of the Terasaki Din-T MCBs based on the thermal and magnetic characteristics.

Curve C

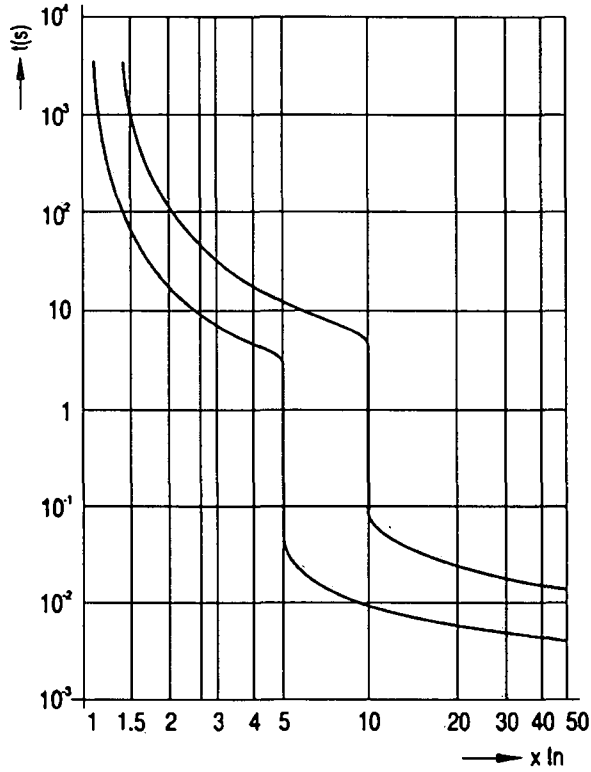

3

Din-T MCBs Technical data

Definitions related to circuit breakers

MCB = Miniature Circuit Breaker

Short-circuit (making and breaking) capacity

Alternating component of the prospective current, expressed by its RMS value, which the circuit breaker is designed to make, to carry for its opening time and to break under specified conditions.

Ultimate or rated short-circuit breaking capacity (I_{cn} - EN 60898)

A breaking capacity for which the prescribed conditions, according to a specified test sequence, do not include the capability of the MCB to carry 0.96 times its rated current for the conventional time.

Ultimate short-circuit breaking capacity (I_{cu} - EN 60947-2)

A breaking capacity for which the prescribed conditions, according to a specified test sequence, do not include the capability of the MCB to carry its rated current for the conventional time.

Service short-circuit breaking capacity (I_{cs} - EN 60898)

A breaking capacity for which the prescribed conditions, according to a specified test sequence, include the capability of the MCB to carry 0.96 times its rated current for the conventional time.

Prospective current

The current that would flow in the circuit, if each main current path of the MCB were replaced by a conductor of negligible impedance.

Conventional non-tripping current (I_{nt})

A specified value of current which the circuit breaker is capable of carrying for a specified time without tripping.

Open position

The position in which the predetermined clearance between open contacts in the main circuit of the MCB is secured.

Closed position

The position in which the predetermined continuity of the main circuit of the MCB is secured.

Maximum prospective peak current (I_p)

The prospective peak current when the initiation of the current takes place at the instant which leads to the highest possible value.



Din-T MCBs Technical data

Influence of ambient air temperature on the rated current

3

The maximum value of the current which can flow through an MCB depends on the nominal current of the MCB, the conductor cross-section and the ambient air temperature.

The values shown in the table below are for devices in free air. For devices installed with other modular devices in the same switchboard, a correction factor (K) shall be applied relative to the mounting situation of the MCB, the ambient temperature and the number of main circuits in the installation.

No of devices	K ¹⁾
2 or 3	0.9
4 or 5	0.8
6 or 9	0.7
> 10	0.6

Calculation example

Within a distribution board consisting of eight 2 Pole, 16 A, 'C' curve type MCBs, with an operating ambient temperature of 45 °C, which is the highest temperature the MCB can operate at without unwanted tripping?

Calculation





The correction factor K = 0.7, for use in an eight circuit installation: 16 A x 0.7 = 11.2 A

As the MCB is working at 45 °C it shall be given another factor (90 % = 0.9):

In at 45 °C = In at 30 °C x 0.9 = 11.2 A x 0.9 = 10.1 A.

Note: ¹⁾ Applicable for MCBs working at maximum rated currents.

The thermal calibration of the MCBs was carried out at an ambient temperature of 30 °C. Ambient temperatures different from 30 °C influence the bimetal and this results in earlier or later thermal tripping.

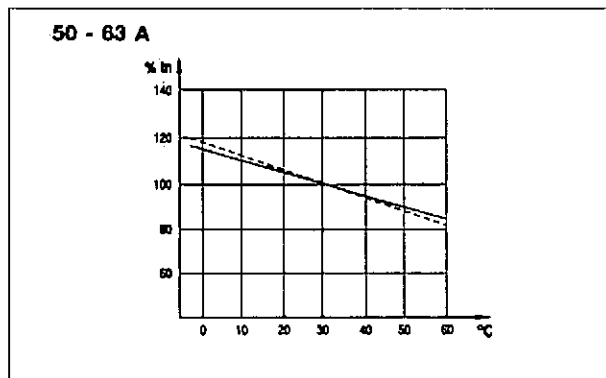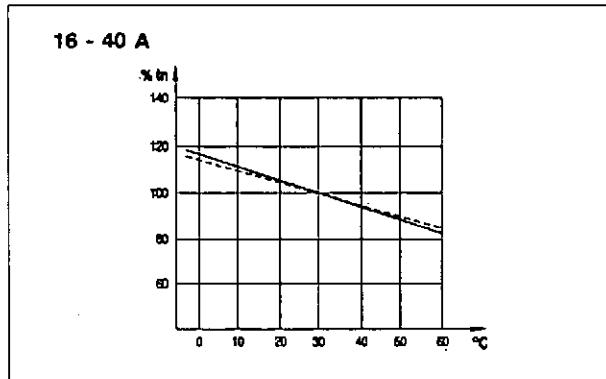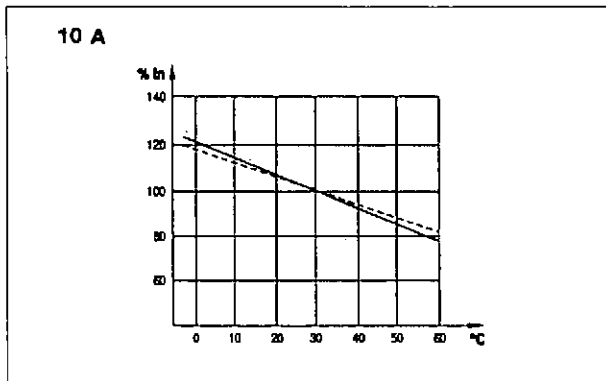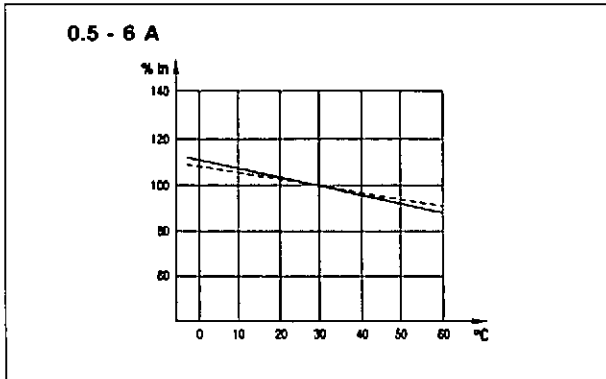

———— : 1P (single pole)

----- : mP (multi-pole)

Din-T MCBs Technical data

Effects of frequency on the tripping characteristic

All the MCBs are designed to work at frequencies of 50-60 Hz, therefore to work at different values, consideration must be given to the variation of the tripping characteristics. The thermal tripping does not change with variation of the frequency but the magnetic tripping values can be up to 50 % higher than the ones at 50-60 Hz.

Tripping current variation

60 Hz	100 Hz	200 Hz	300 Hz	400 Hz
1	1.1	1.2	1.4	1.5

Power losses

The power losses are calculated by measuring the voltage drop between the incoming and the outgoing terminals of the device at rated current.

Power loss per pole

In (A)	Voltage drop (V)	Energy loss (W)	Resistance (mOhm)
0.5	2.230	1.115	4458.00
1	1.270	1.272	1272.00
2	0.620	1.240	310.00
3	0.520	1.557	173.00
4	0.370	1.488	93.00
6	0.260	1.570	43.60
8	0.160	1.242	19.40
10	0.160	1.560	15.60
13	0.155	2.011	11.90
16	0.162	2.586	10.10
20	0.138	2.760	6.90
25	0.128	3.188	5.10
32	0.096	3.072	3.00
40	0.100	4.000	2.50
50	0.090	4.500	1.80
63	0.082	5.160	1.30


Limitation curves

Let-through energy I²t

The limitation capacity of an MCB in short-circuit conditions, is its capacity to reduce the value of the let-through energy that the short-circuit would be generating.

Peak current I_p

Is the value of the maximum peak of the short-circuit current limited by the MCB.

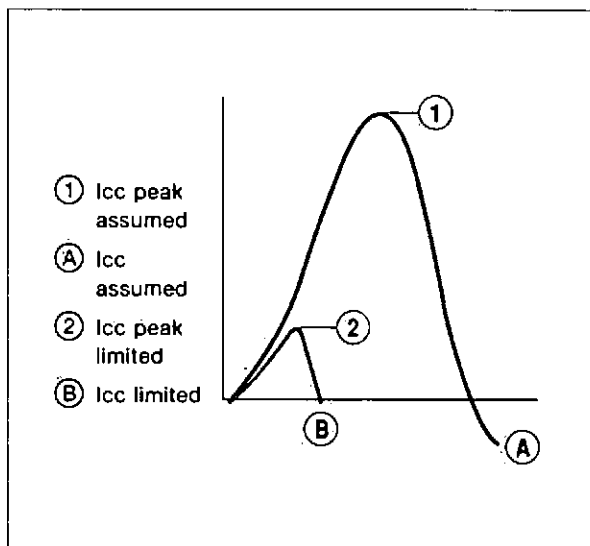


See following pages

Din-T MCBs Technical data

Din-T 15

15 kA

C curve

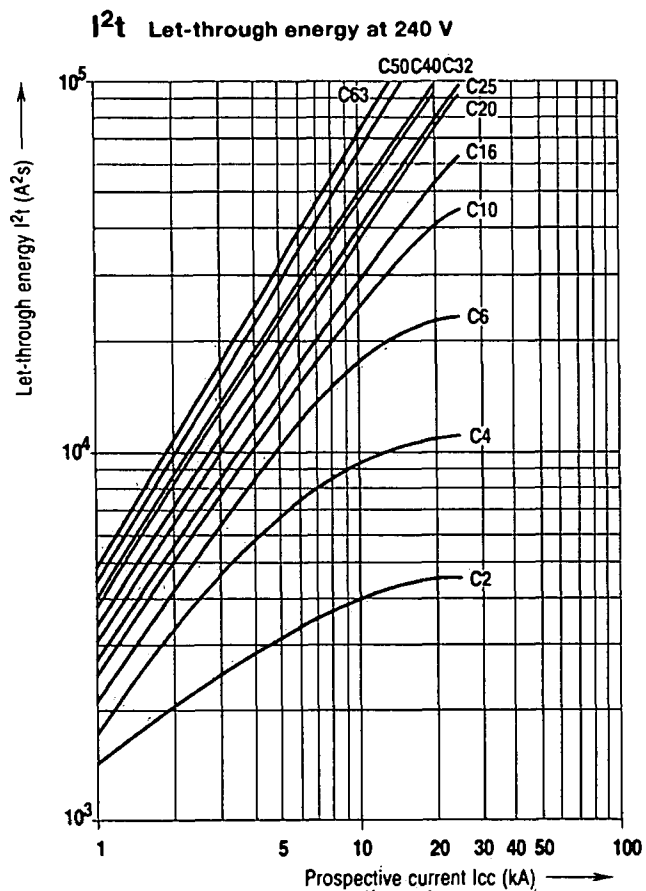

Din-T MCBs Technical data

Use of standard MCB for DC use

For MCBs designed to be used in alternating current but used in installations in direct current, the following should be taken into consideration:

- For protection against overloads it is necessary to connect the two poles to the MCB. In these conditions the tripping characteristic of the MCB in direct current is similar to alternating current.

- For protection against short-circuits it is necessary to connect the two poles to the MCB. In these conditions the tripping characteristic of the MCB in direct current is 40% higher than the one in alternating current.

3

Use in DC selection table

Series	Rated current (A)	48 V 1 pole Icu (kA)	110 V 2 poles in series Icu (kA)	250 V 1 pole Icu (kA)	440 V 2 poles in series Icu (kA)
Din-T 15	6...25 A	10	10	-	-

Installation of Din-T DC MCBs in direct current

Din-T MCBs + RCDs Technical data

Text for specifiers

MCB Series Din-T 15

- According to EN 60947.2 standard
- For DIN rail mounting according to DIN EN 50022; EN 50022; future EN 60715; IEC 60715 (top hat rail 35 mm)
- Working ambient temperature from -25 °C up to +50 °C
- 1 pole is a module of 18 mm wide
- Nominal rated currents are:
6/10/13/16/20/25/32/40/50/63 A
- Tripping characteristic: C
- Number of poles: 1 P, 2 P, 3 P, 4 P
- Short-circuit capacity is: 15 kA
- Terminal capacity from 1 up to 35 mm² rigid wire or 1.5 up to 25 mm² flexible wire
- Screw head suitable for flat or Pozidrive screwdriver
- Can be connected by means of both pin or fork busbars
- The toggle can be sealed in the ON or OFF position
- Rapid closing
- Both incoming and outgoing terminals have a protection degree of IP 20 and they are sealable
- Isolator function thanks to Red/Green printing on the toggle.
- Maximum voltage between two phases; 440 V~
- Maximum voltage for utilisation in DC current: 48 V 1 P and 110 V 2 P
- Two position rail clip
- Mechanical shock resistance 40 g (direction x, y, z) minimum 18 shocks 5 ms half-sinusoidal acc. to IEC 60068-2-27
- Vibration resistance: 3 g (direction x, y, z) minimum 30 min. according to IEC 60068-2-6
- Extensions can be added on both left or right hand side
 - ☛ Auxiliary contact
 - ☛ Shunt trip
 - ☛ Undervoltage release
 - ☛ Motor operator
 - ☛ Panelboard switch
- Add-on RCD can be coupled.

Din-T MCBs Technical data

Series		Din-T15 AS/NZS 3947-2		
Standards (Aust / NZ / International)		IEC 60947-2		
Tripping characteristics		C		
Nominal current		A	0.5-63	
Calibration temperature		°C	40	
Number of poles (# mod)		1/2/3/4		
Neutral pole protected		-		
Nominal voltage Un	AC 1 P	V	240/415	
	3 P/4 P	V	415	
	DC 1 P ¹⁾	V DC	48	
	2 P (in series) ¹⁾	V DC	110	
Frequency		Hz	50/60	
		Hz	DC: magn.trip +40%	
		Hz	400: magn.trip +50%	
Maximum service voltage U _{max} between two wires		V	250/440; 53/120	
Minimum service voltage U _{min}		V	12; 12	
Selectivity class (IEC 60898)		3		
Isolator application		IEC 60947-2 yes		
Rated insulation voltage	Pollution degree 2	V	500	
	Pollution degree 3	V	440	
Impulse withstand test voltage		kV	6	
Insulation resistance		MΩm	10,000	
Dielectric rigidity		kV	2.5	
Vibration resistance (in x, y, z direction) (IEC 77/16.3)		3 g		
Endurance	Electrical at Un, In	4000		
	mechanical	20,000		
Utilisation category (IEC 60947-2)		A		
Protection degree (outside / inside, in enclosure with door)		IP 20/IP 40		
Self-extinguish degree (according to UL94)		V2		
Tropicalisation (according to IEC 60068-2 / DIN 40046) °C/RH		+55 °C/95 % RH		
Operating temperature		°C	-25/+55	
Storage temperature		°C	-55/+55	
Terminal capacity	Rigid cable min/max (top)	mm ²	1/35	
	Flexible cable min*/max (top)	mm ²	0.75/25	
	Rigid cable min/max (bottom)	mm ²	1/35	
	Flexible cable min*/max (bottom)	mm ²	0.75/25	
	(* Flexible cable 0.75/1/1.5 mm ² with cable lug)			
	Torque	Nm	4.5	
Add-on devices (side add-on)	Auxiliary contacts	yes		
	UVI	yes		
	Shunt trip	yes		
	Motor operator	yes		
	Panelboard switch	yes		
Busbar systems	Pin (top/bottom)	yes/yes		
	Fork (top/bottom)	-/yes		
Accessories		yes		
Dimensions, weights, packaging				
	(HxDxW) 86x68xW	mm/mod.	18	
	Weight/mod.	g	120	
	Package	mod.	12	
Short-circuit capacity AC (kA)		AS/NZS 3947-2		
IEC 60898	Icn	1 P	230/400 V	-
		2 P	230/400 V	-
		3 P/4 P	230/400 V	-
Ics (service)		-		
IEC 60947-2	Icu (ultimate)	1 P	127 V	50
			240 V	50/25/20/15 ¹⁾
			415 V	-
		2 P	127 V	-
			240 V	50/50/40/30 ¹⁾
			415 V	50/25/20/15 ¹⁾
	3 P, 4 P	240 V	50/50/40/30 ¹⁾	
		415 V	50/25/20/15 ¹⁾	
		440 V	50/20/15/10 ¹⁾	
	Ics (service)		75 % Icu	
	NEMA AB1 (120/240V)		-	
	Short-circuit capacity DC (kA)			
IEC 60947-2	Icu (ultimate)	1 P	≤60 V	25
			≤220 V	-
	2 P	≤125 V	30	
		≤440 V	-	
Ics (service)		100 % Icu		

Notes Refer pages 3 - 23, 24 for information on SAFE-T MCBs.

¹⁾ Preferred values of rated control supply voltage (IEC 60947 - 2): 24 V, 48 V, 110 V, 125 V, 250 V

¹⁾ 0.5-4 A/6-25 A/32-40 A/50-63 A
¹⁾ 10 (125 V DC)

¹⁾ 10 (250 V DC)
¹⁾ On request.


3

Din-T MCBs + RCDs Technical data

Miniature circuit breakers - Din-T 15

Dimensions in mm.


3

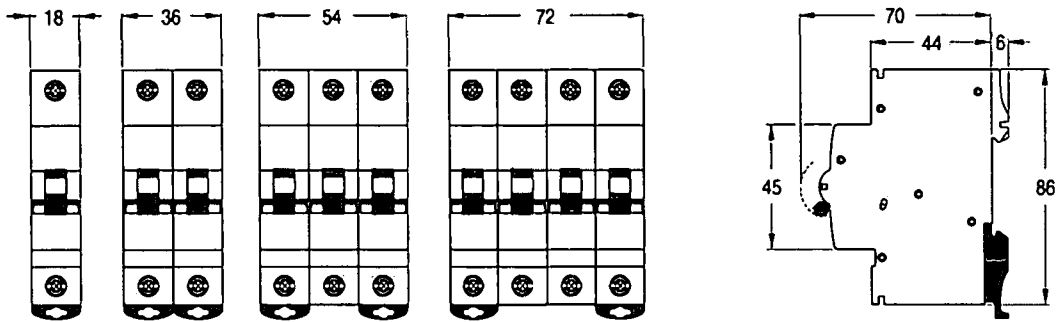



Miniature circuit breakers Din-Safe single pole width residual current circuit breaker (RCBO)

- Standards AS/NZS 61009
- Approval N17482
- One module wide (18 mm)
- Short circuit, overcurrent and earth leakage protection
- Short circuit protection 10 kA
- Sensitivity 10 and 30 mA
- Din rail mount
- Suits CD chassis
- Type "A" residual current device (AC/DC)

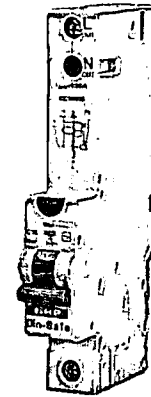

Amp rating (A)	Modules (18mm)	Voltage (AC)	Short circuit (kA)	Trip Sensitivity (mA)	Cat. No ¹⁾ ²⁾
6	1	240	10	30	DSRCBH0630A
10	1	240	10	30	DSRCBH1030A
16	1	240	10	30	DSRCBH1630A
20	1	240	10	30	DSRCBH2030A
25	1	240	10	30	DSRCBH2530A
32	1	240	10	30	DSRCBH3230A
40	1	240	10	30	DSRCBH4030A
6	1	240	10	10	¹⁾ DSRCBH0610A
10	1	240	10	10	¹⁾ DSRCBH1010A
16	1	240	10	10	¹⁾ DSRCBH1610A
20	1	240	10	10	¹⁾ DSRCBH2010A
25	1	240	10	10	¹⁾ DSRCBH2510A
32	1	240	10	10	¹⁾ DSRCBH3210A
40	1	240	10	10	¹⁾ DSRCBH4010A

Note: ¹⁾ Neutral not switched.
²⁾ Will not accept side mounting accessories.
¹⁾ Available on indent only.


Operation

This unit combines the overload and short circuit protection of an MCB with earth leakage protection of an RCD. The unit occupies one, sub- circuit (one pole) of the distribution board and provides single phase protection against overload, short circuit and earth leakage current.

- The MCB element provides thermal and magnetic tripping protection which is rated to 10 kA prospective fault current.
- The RCD element of the device provides core-balance detection of the difference between the active and neutral currents and amplification to provide high sensitivity. The rated residual operating current (I_{Δn}) is 10 mA or 30 mA.
- The green/yellow earth reference cable, in case of loss of supply neutral, ensures the device will continue to provide earth leakage protection and will operate normally upon detection of an earth leakage current.

Dimensions (mm)


Note: A 1.2 m long pigtail lead is included as standard.

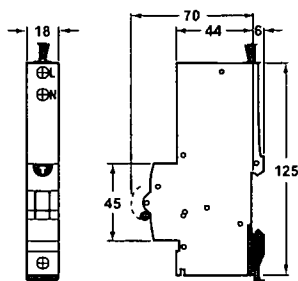

Application

The Din-Safe single pole width residual current circuit breaker will fit the standard Din-T chassis for use in NHP panelboards. The design makes it possible to provide an MCB complete with earth leakage protection in an 18 mm wide module, which allows a greater number of devices to be fitted into a distribution board.

Connection diagram

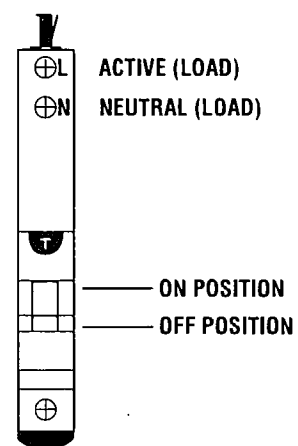


Note: Nuisance tripping may be experienced in VFD and motor starting applications refer NHP.

Din-T MCBs + RCDs Technical data

Tripping curves according to EN 60898

The following tables show the average tripping curves of the Terasaki Din-T MCBs based on the thermal and magnetic characteristics.

Curve C

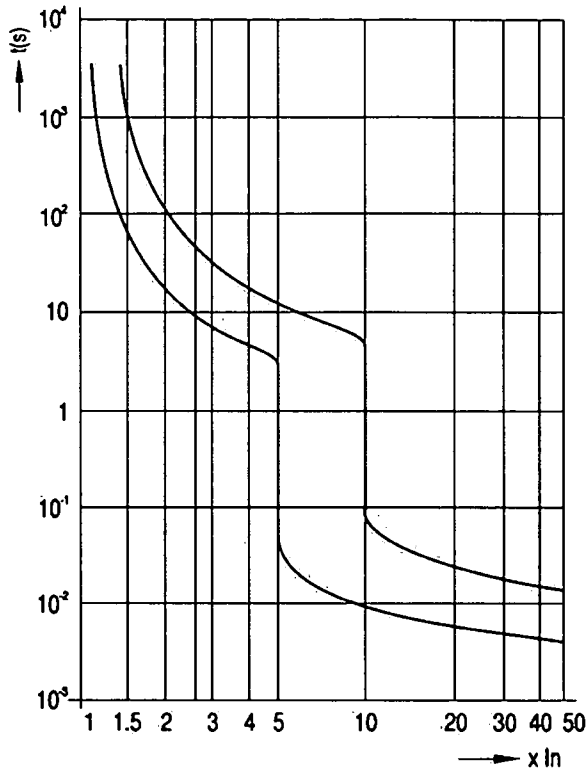

3

Din-T MCBs + RCDs Technical data

What is an RCD?

3

The RCD (Residual Current Device) is a device intended to protect people against indirect contact, the exposed conductive parts of the installation being connected to an appropriate earth electrode. It may be used to provide protection against fire hazards due to a persistent earth fault current, without operation of the overcurrent protective device.


RCDs having a rated residual operating current not exceeding 30 mA are also used as a means for additional protection in case of failure of the protective means against electric shock (direct contact).

Working Principle

The main components of an RCD are the following:

- The core transformer: which detects the earth fault current.
- The relay: when an earth fault current is detected, the relay reacts by tripping and opening the contacts.
- The mechanism: element to open and close the contacts either manually or automatically.
- The contacts: to open or close the main circuit.

The RCD constantly monitors the vectorial sum of the current passing through all the conductors. In normal conditions the vectorial sum is zero ($I_1+I_2=0$) but in case of an earth fault, the vectorial sum differs from zero ($I_1+I_2=I_d$), this causes the actuation of the relay and therefore the release of the main contacts.

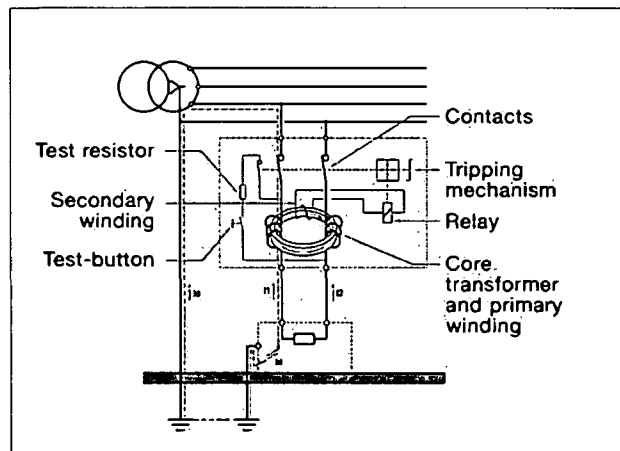

Definitions related to RCDs

RCCB = Residual Current Circuit Breaker without overcurrent protection.

RCBO = Residual Current Circuit Breaker with overcurrent protection.

Breaking capacity

A value of AC component of a prospective current that an RCCB is capable of breaking at a stated voltage under prescribed conditions of use and behaviour.

Residual making and breaking capacity ($I_{\Delta m}$)

A value of the AC component of a residual prospective current which an RCCB can make, carry for its opening time and break under specified conditions of use and behaviour.

Conditional residual short-circuit current ($I_{\Delta c}$)

A value of the AC component of a prospective current which an RCCB protected by a suitable SCPD (short-circuit protective device) in series, can withstand, under specific conditions of use and behaviour.

Conditional short-circuit current (I_{nc})

A value of the AC component of a residual prospective current which an RCCB protected by a suitable SCPD in series, can withstand, under specific conditions of use and behaviour.

Residual short-circuit withstand current

Maximum value of the residual current for which the operation of the RCCB is ensured under specified conditions, and above which the device can undergo irreversible alterations.

Prospective current

The current that would flow in the circuit, if each main current path of the RCCB and the overcurrent protective device (if any) were replaced by a conductor of negligible impedance.

Making capacity

A value of AC component of a prospective current that an RCCB is capable to make at a stated voltage under prescribed conditions of use and behaviour.

Open position

The position in which the predetermined clearance between open contacts in the main circuit of the RCCB is secured.

Closed position

The position in which the predetermined continuity of the main circuit of the RCCB is secured.

Tripping time

The time which elapses between the instant when the residual operating current is suddenly attained and the instant of arc extinction in all poles.

Residual current ($I_{\Delta n}$)

Vector sum of the instantaneous values of the current flowing in the main circuit of the RCCB.

Residual operating current

Value of residual current which causes the RCCB to operate under specified conditions.

Rated short-circuit capacity (I_{cn})

Is the value of the ultimate short-circuit breaking capacity assigned to the circuit breaker. (Only applicable to RCBO)

Conventional non-tripping current (I_{nt})

A specified value of current which the circuit breaker is capable of carrying for a specified time without tripping. (Only applicable to RCBO)

Conventional tripping current (I_t)

A specified value of current which causes the circuit breaker to trip within a specified time. (Only applicable to RCBO)

Din-T MCBs + RCDs Technical data

RCDs classification according to EN 61008/61009

RCDs may be classified according to:

The behaviour in the presence of DC current
(types for general use).


- Type AC
- Type A

The time-delay (in the presence of residual current)


- RCDs without time delay: type for general use
- RCDs with time delay: type S for selectivity

Type AC '1) '2)

The type AC RCDs are designed to release with sinusoidal residual currents which occur suddenly or slowly rise in magnitude.

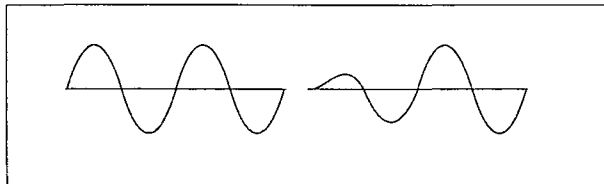

Residual current	Tripping time
0.5 x I Δ n	t = ∞
1 x I Δ n	t = <300 ms
2 x I Δ n	t = <150 ms
5 x I Δ n	t = \leq 40 ms

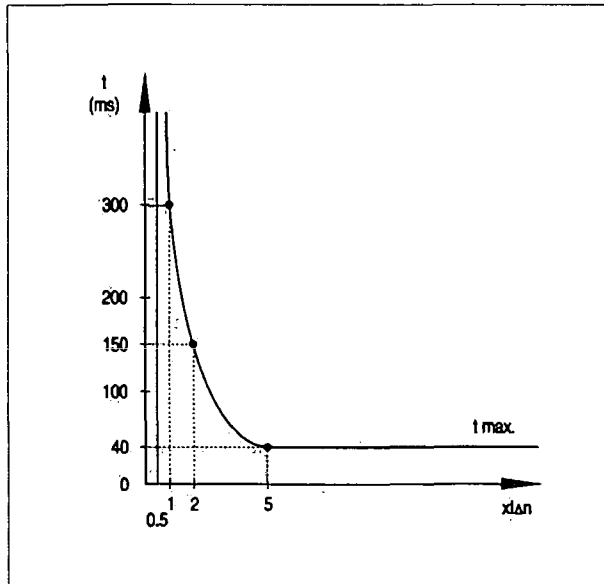

Tripping curve type AC

- '1) Standard in Australia
- '2) Type A acceptable in Australia

- Tripping curve type A
- '3) Standard in New Zealand
 - '4) DSRCBH is type A.

Type A '3) '4)

Certain devices during faults can be the source of non-sinusoidal earth leakage currents (DC components) due to the electronic components e.g. diodes, thyristors etc.


Type A RCDs are designed to ensure that under these conditions the residual current devices operate on sinusoidal residual current and also with pulsating direct current(*) which occur suddenly or slowly rise in magnitude.

(*) Pulsating direct current: current of pulsating wave form which assumes, in each period of the rated power frequency, the value 0 or a value not exceeding 0.006 A DC during one single interval of time, expressed in angular measure of at least 150°.

Residual current	Tripping time
1. For sinusoidal residual current	
0.5 x I Δ n	t = ∞
1 x I Δ n	t = <300 ms
2 x I Δ n	t = <150 ms
5 x I Δ n	t = \leq 40 ms

2. For residual pulsating direct current

Residual current	Tripping time
At point of wave 0°	
0.35 x I Δ n	t = ∞
1.4 x I Δ n	t = <300 ms
2.8 x I Δ n	t = <150 ms
7 x I Δ n	t = \leq 40 ms
At point of wave 90°	
0.25 x I Δ n	t = ∞
1.4 x I Δ n	t = <300 ms
2.8 x I Δ n	t = <150 ms
7 x I Δ n	t = \leq 40 ms
At point of wave 135°	
0.11 x I Δ n	t = ∞
1.4 x I Δ n	t = <300 ms
2.8 x I Δ n	t = <150 ms
7 x I Δ n	t = \leq 40 ms

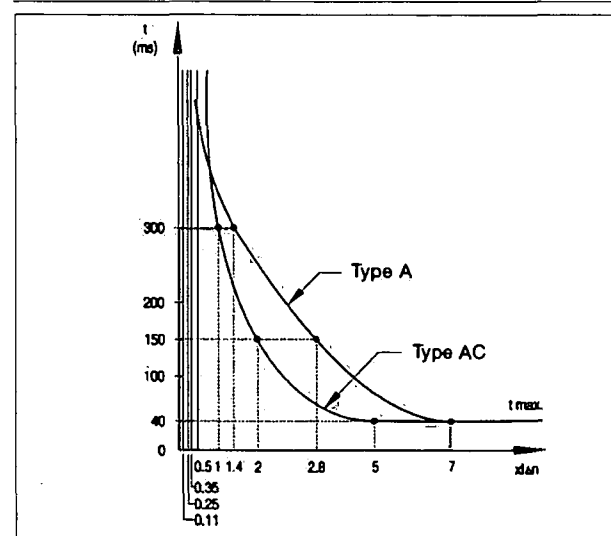

3


Din-T MCBs + RCDs Technical data

Nuisance tripping


All DinSafe RCDs have a high level of immunity to transient currents, against current impulses of 8/20 μ s according to EN 61008/61009 and VDE 0664.T1.

Type A, AC.....250 A 8/20 μ s

Type S.....3000 A 8/20 μ s

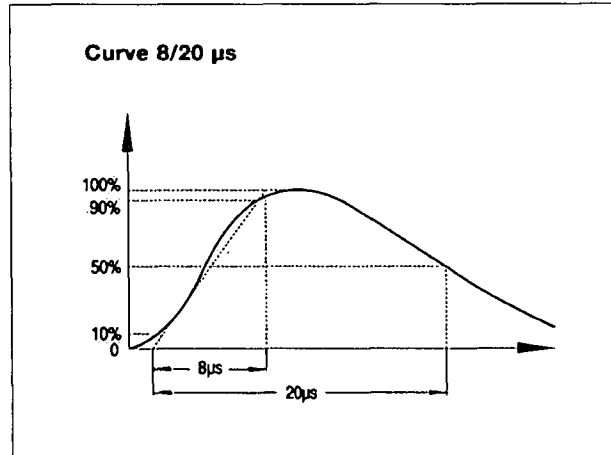


RCDs have a high level of immunity against alternating currents of high frequency according to EN 61008/61009.

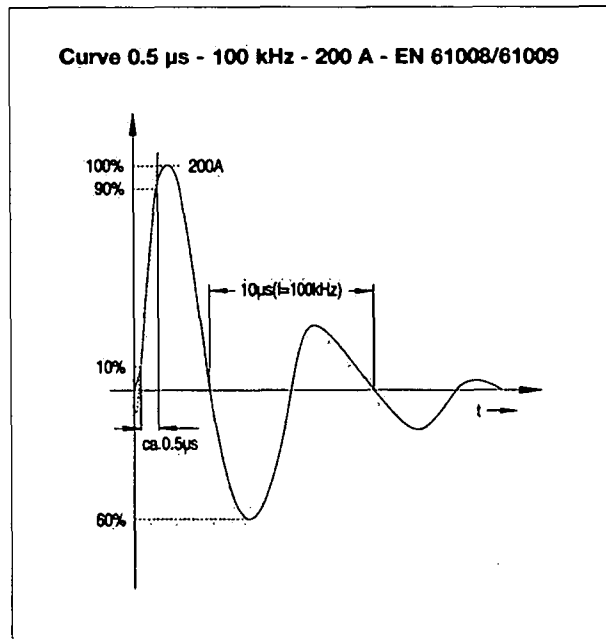


Din-T MCBs + RCDs Technical data

Use of an RCBO (DSRCBH)

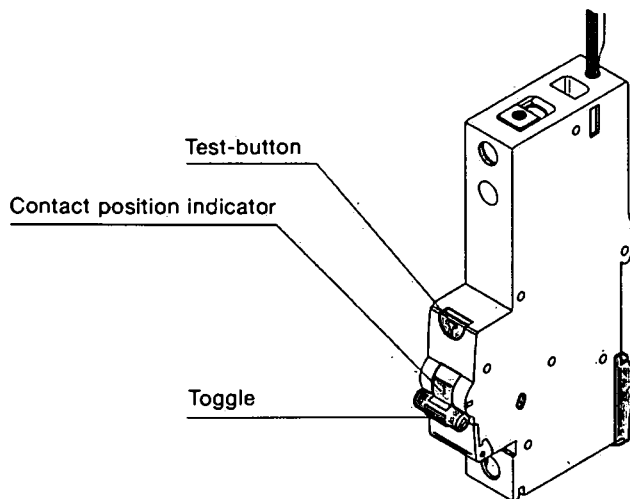


TEST-BUTTON

To ensure the correct functioning of the RCBO, the test-button T shall be pressed frequently. The device must trip when the test-button is pressed.

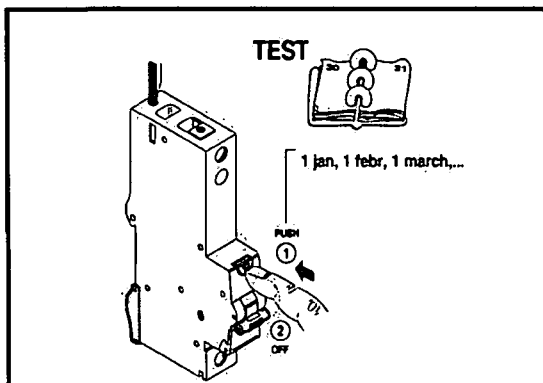


CONTACT POSITION INDICATOR

Printing on the toggle to provide information of the real contact position.

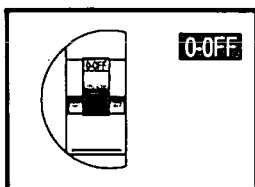

O-OFF
Contacts in open position. Ensure a distance between contacts > 4 mm.

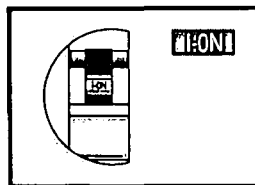


I-ON
Contacts in closed position. Ensure continuity in the main circuit.

TOGGLE

To manually switch the RCBO ON or OFF

CABLE CONNECTION

The power supply (L) must be done at the bottom terminal, and the supply neutral flying cable (black) shall be connected to the neutral bar. Load connection shall be done in both terminals at the top side (L out / N out). The earth reference cable (FE white) ensures protection against earth leakage in case of loss of supply neutral.

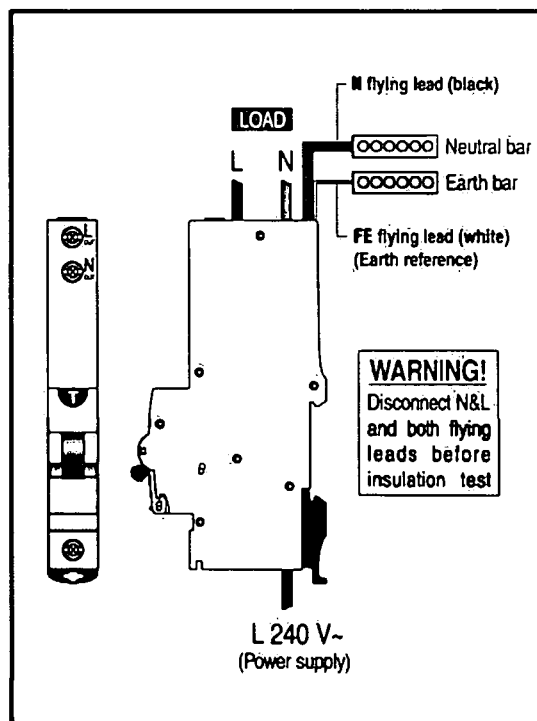




Din-T MCBs + RCDs Technical data

Product related information

Influence of temperature on RCBOs (DinSafe DSRCB)

The thermal calibration of the RCBO was carried out at an ambient temperature of 30 °C. Ambient temperatures different from 30 °C influence the bimetal and this results in earlier or later thermal tripping.

3

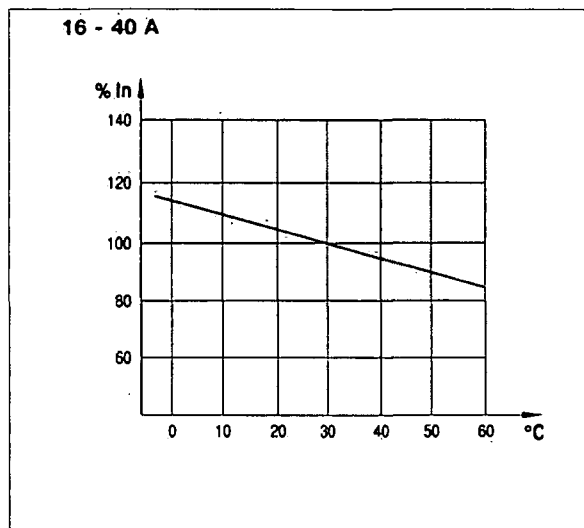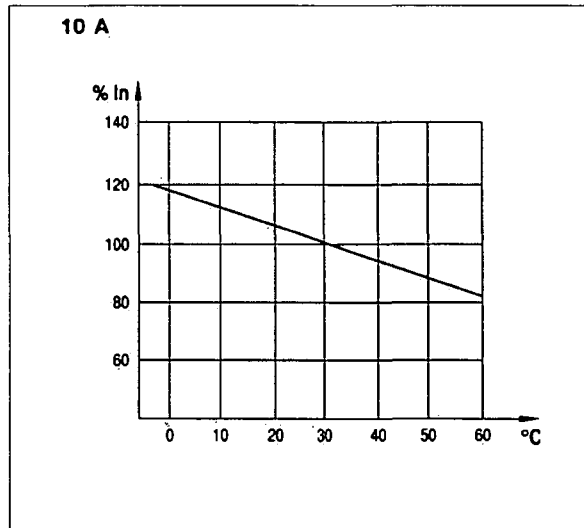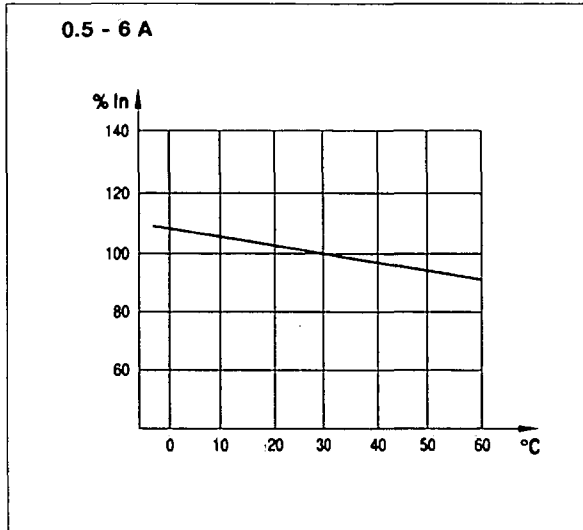

Din-T MCBs + RCDs Technical data

Tripping current as a function of the frequency

All RCDs are designed to work at frequencies of 50-60 Hz, therefore to work at different values, we must consider the variation of the tripping sensitivity according to the tables below. It should be taken into consideration that there is a no tripping risk when pushing the test-button, due to the fact that such action is made by means of an internal resistor with a fixed value.

RCBO DSRCBH ¹⁾

Type AC ¹⁾	10 Hz	30 Hz	50 Hz	100 Hz	200 Hz	300 Hz	400 Hz
30 mA	0.62	0.65	0.80	0.91	1.24	1.55	1.88
100 mA	0.74	0.71	0.80	0.95	1.16	1.38	1.59
300 mA	0.80	0.74	0.80	0.97	1.19	1.44	1.64
500 mA	1.10	0.81	0.80	0.89	1.18	1.38	1.68

Type A ¹⁾

30 mA	8.17	3.13	0.75	1.70	3.10	3.52	3.67
100 mA	6.81	2.71	0.75	1.43	2.35	2.58	2.71
300 mA	6.20	2.16	0.75	0.49	0.87	0.74	0.95
500 mA	4.34	1.53	0.75	0.39	0.59	0.62	0.64

Notes: ¹⁾ The standard NHP/Terasaki type is the "type AC" in Australia, Type "A" in New Zealand.

²⁾ The standard NHP/Terasaki DSRCBH single pole RCBO is "type A" in Australia and New Zealand.

³⁾ The numbers in the table above are multipliers, e.g. A "DSRCD" at 50 hz has an 0.8 multiplier. Therefore a 30 mA, "type AC" RCD will trip at (0.8 x 30 mA) 24 mA.

Power losses

The power losses are calculated by means of measuring the voltage drop between the incoming and the outgoing terminal of the device at rated current. Power loss per pole:

RCBO-Single pole DSRCBH

In (A)	6	10	13	16	20	25	32	40	50	63
Z (mOhm)	45.8	16.4	12.5	10.6	7.3	5.4	3.2	2.6	1.9	1.4
Pw (W)	1.65	1.7	2.1	2.7	2.9	3.3	3.4	4.2	4.8	5.6

3

Din-T MCBs + RCDs Technical data


RCBO (DSRCB) let-through energy I^2t

The benefit of an RCBO in short-circuit conditions, is its ability to reduce the value of the let-through energy that the short-circuit would be generating.

Din-T single pole width RCD (DSRCBH)


Curve C

Let-through energy at 230 V

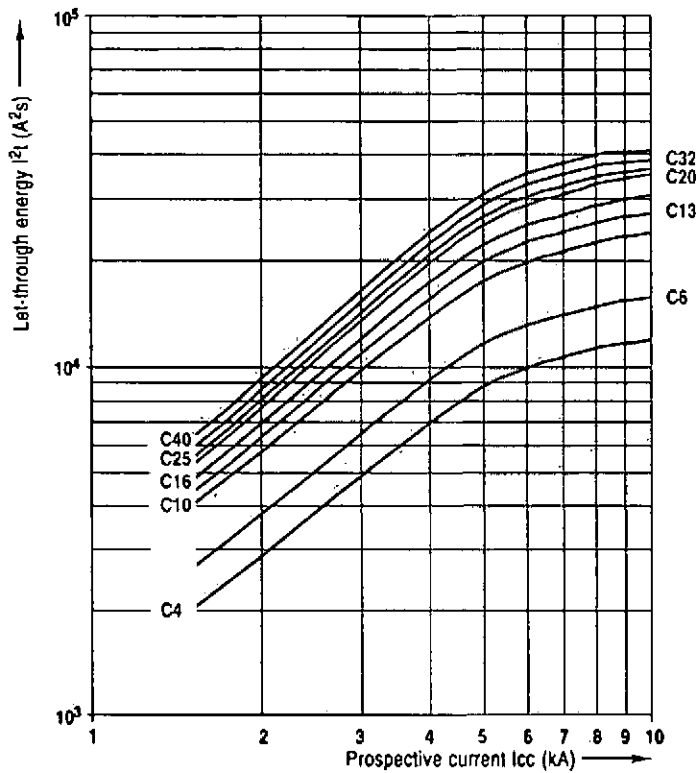

RCCB - Din-Safe safety switch (DSRCD)

RCBO - Din-Safe (DSRCBH)

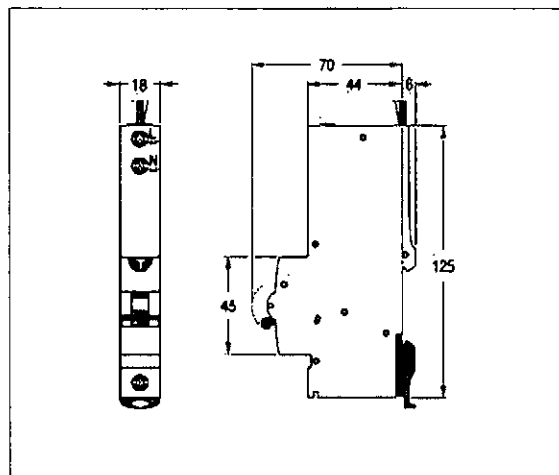

Dimensions in mm

Din-T MCBs + RCDs Technical data

Overview Din-Safe RCDs

RCBO



Device type definition

Rating/description	Cat. No.	DSRCBH
Standards		IEC 61009-1
Magnetic tripping characteristics		C
Residual tripping characteristic ¹⁾		A
Tripping time at I _{Δn}		
Instantaneous	ms	<300
Selective	ms	-
Rated current	A	6, 10, 16, 20, 25, 32, 40
Rated residual current I _{Δn}	mA	10, 30
Calibration temperature	°C	30
Number of poles versus modules		1
Rated voltage U _n		240 (1 P+N)
2 P AC	V	
3 P AC	V	-
4 P AC	V	-
Frequency	Hz	50/60
Maximum service voltage U _{bmax}	V	255
Minimum service voltage U _{bmin}	V	100
Power supply		Bottom
Selectivity class		3
Rated making and breaking capacity (I _m)	A	10xI _n
Residual making and breaking capacity (I _{Δm})	A	10000
Conditional short-circuit capacity (I _{nc})	A	-
Conditional residual short-circuit capacity (I _{Δc})	A	-
Short-circuit capacity (I _{cn})	A	10000
Grid distance (safety distance between two devices)	mm	-
Isolator application		yes
Insulation degree		
Insulation voltage	V (DC)	500 ²⁾
Shock voltage (1.2/50 ms)	kV	6 ²⁾
Insulation resistance	(mOhm)	1000 ²⁾
Dielectric strength	V	2500 ²⁾
Shock resistance (in x, y, z direction)(IEC 60077/16.3)		40 g, 18 shocks 5 ms
Vibration resistance (in x, y, z direction; IEC 60068-2-6)		2 g, 30 min, 0...80 Hz
Endurance		
electrical at U _n , I _n		10000
mechanical at U _n , I _n		20000
Protection degree (outside/inside electrical enclosure)		IP 20 / IP 40
Self extinguish degree (according to UL 94)		V2
Tropicalisation (according to IEC 60068-2, DIN 40046)	°C/RH	+55/95 %
Pollution degree (acc. IEC 60947-1)		3
Operating temperature	°C	-5...+60
Storage temperature	°C	-25...+70
Terminals capacity		
Rigid cable min/max (Top)	mm ²	1/25
Flexible cable min*/max (Top)	mm ²	1/16
Rigid cable min/max (bottom)	mm ²	1/35
Flexible cable min*/max (bottom)	mm ²	1/25
	(*Flexible cable 0.75/1/1.5 mm ² with cable lug)	
Torque	Top/Bottom	Nm
		3
Add-on devices (side add-on)		
Auxiliary contacts		-
UVT		-
Shunt trip		-
Motor operator		-
Panelboard switch		Bottom
Busbars systems		
Pin		Bottom
Fork		yes
Accessories		
Dimensions, weights, packaging		
# Poles		1+N
(HxDxW) 86x68xW	mm	18
Weight/unit	g	350
Package/unit		1

Note: ¹⁾ Refer catalogue section for types.

²⁾ Making sure that N-L and both flying leads are disconnected.





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

CONTACTOR

1. CA7 CONTACTOR TECHNICAL DETAILS



AC contactors

3 pole open type with AC coil




Refer catalogue CA 6, 2212, SACS


AC 3 rating at 60°C

Ratings to IEC 947 and AS 3497 400/415 V


- For CA 7 contactors with coil terminals on line side, add ...V AC to Catalogue No. Eg - CA 7-9-10-240 V AC²⁾
- For CA 7 contactors with coil terminals on load side, add ...V AC-U to Catalogue No. Eg - CA 7-9-10-240 V AC-U

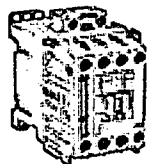


Contactor CA 7-9

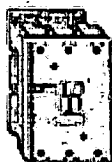


Contactor CA 7-12

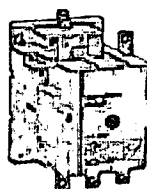


Contactor CA 6-105-EI

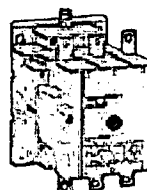

Contactor CA 6-170-EI

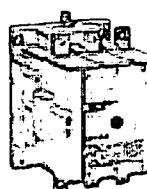

Contactor CA 6-250-EI

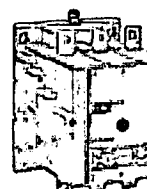

Contactor CA 6-420-EI


AC 3 400/415 V kW ¹⁾	AC 3 400/415 V Amps ¹⁾	AC 1 ⁴⁾ Amps 40 °C	AC 1 ⁴⁾ Amps 60 °C	Auxiliary contacts standard			Cat. No. ²⁾
				N/O	N/C	Max.	
4	9	32	32	1	0	9	CA 7-9-10...V AC
				0	1	9	CA 7-9-01...V AC
5.5	12	32	32	1	0	9	CA 7-12-10...V AC
				0	1	9	CA 7-12-01...V AC
7.5	16	32	32	1	0	9	CA 7-16-10...V AC
				0	1	9	CA 7-16-01...V AC
11	23	32	32	1	0	9	CA 7-23-10...V AC
				0	1	9	CA 7-23-01...V AC
15	30	50	45	0	0	8	CA 7-30-00...V AC
18.5	37	50	45	0	0	8	CA 7-37-00...V AC
22	43	85	63	0	0	8	CA 7-43-00...V AC
30	60	100	100	0	0	8	CA 7-60-00...V AC
37	72	100	100	0	0	8	CA 7-72-00...V AC
45	85	100	100	0	0	8	CA 7-85-00...V AC
55 (45)	95 (33)	160	135	1	1	8	CA 6-85-11...V AC
75 (55)	130 (40)	160	135	1	1	8	CA 6-105-11...V AC
90 (75)	155 (55)	250	210	1	1	8	CA 6-140-11...V AC
75 (55)	130 (40)	160	135	1	1	8	CA 6-105-EI-11...V AC ³⁾
90 (75)	155 (55)	250	210	1	1	8	CA 6-140-EI-11...V AC ³⁾
100 (90)	170 (65)	250	210	1	1	8	CA 6-170-EI-11...V AC ³⁾
132 (111)	225 (80)	350	300	1	1	8	CA 6-210-EI-11...V AC ³⁾
150 (133)	258 (95)	350	300	1	1	8	CA 6-250-EI-11...V AC ³⁾
185 (163)	320 (115)	450	380	1	1	8	CA 6-300-EI-11...V AC ³⁾
250 (225)	425 (160)	500	425	1	1	8	CA 6-420-EI-11...V AC ³⁾
220 (220)	370 (155)	500	420	2	2	8	CA 5-370...V AC ³⁾
265 (280)	450 (200)	600	510	2	2	8	CA 5-450...V AC ³⁾
325 (355)	550 (250)	780	645	2	2	8	CA 5-550...V AC ³⁾
430 (500)	700 (340)	1000	850	2	2	8	CA 5-700...V AC ³⁾
520 (550)	860 (380)	1100	930	2	2	8	CA 5-860...V AC ³⁾
600	1000	1200	1020	1	1	8	CA 5-1000...V AC ³⁾
700	1150	1350	1150	1	1	8	CA 5-1200...V AC ³⁾

- Notes:
- 1) 1000 volt ratings ()
 - 2) Add control voltage to Cat. No. when ordering: 24, 32, 110, 240, 415, 440V 50 Hz. Standard voltages for CA 6-105-EI...250-EI are 24, 48, 110, 240 and 415 V AC. Standard voltages for CA 6-300-EI...420-EI 48, 110, 240 and 415 V AC. Standard voltages for CA 5-370...1200, 110, 240 and 415 V AC.
 - 3) All CA 7 coils can be reversed for line or load side coil terminals as required. Both versions are held in NHP stock for convenience.
 - 4) Electronically controlled mechanism (ECM) with interface suffix (EI).
 - 5) 55 °C enclosed.
 - 6) Contact NHP for recommended cable size.

240/415 V rated coils are suitable for use on 230/400 V in accordance with AS 60038 : 2000.

Refer catalogue SACS

The highest switching capacity in the smallest space

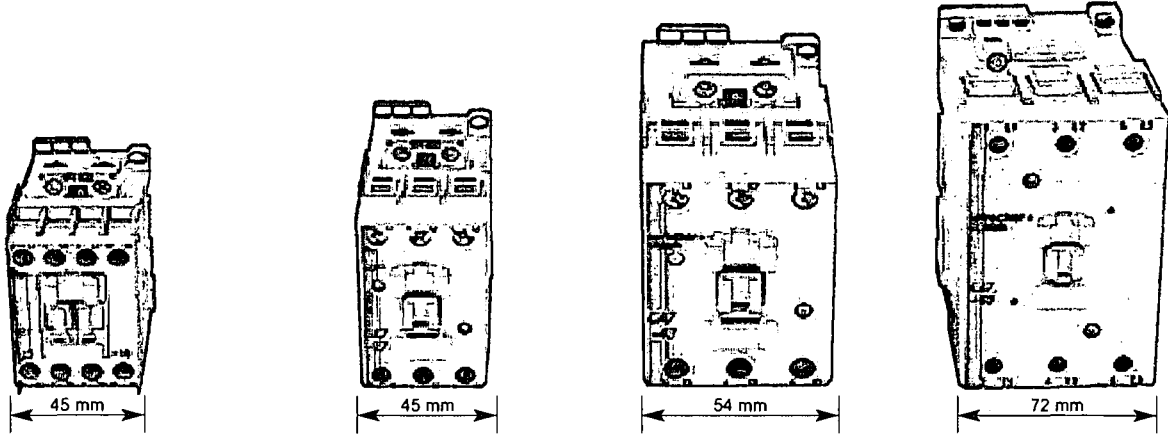

Compact without compromise

Compact without compromise is the best way to describe the CA 7 range of contactors and motor protection relays from Sprecher + Schuh. In spite of the new compact dimensions, the CA 7 range features high breaking capacity and extraordinary flexibility. Up to 18.5 kW the contactors are only 45 mm wide and even the largest 45 kW frame is only 72 mm wide. The CA 7 contactors are the main component in the new Advanced Control System (ACS).

With CA 7 you have flexibility with auxiliary contacts


Common auxiliaries from 9 to 85 amps

Three fitting positions

- Front mounting
- Side mounting left
- Side mounting right

Alternatively you can choose to combine left, right and front mounting auxiliary contacts to fulfil your requirements.

Instead of the top mounted auxiliary contacts, on or off delay timing modules or mechanical latches can be fitted.

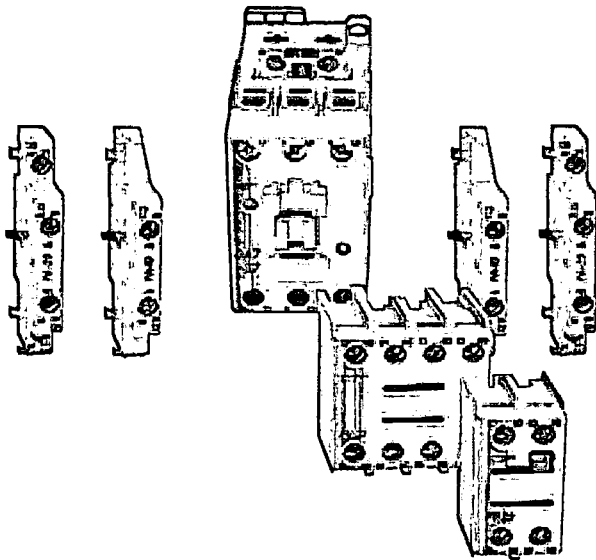

Motor switching rating AC 3 @ 400/415 V

CA 7-9	4 kW	45 mm		9 A
CA 7-12	5.5 kW			12 A
CA 7-16	7.5 kW			16 A
CA 7-23	11 kW			23 A
CA 7-30	15 kW	45 mm		30 A
CA 7-37	18.5 kW			37 A
CA 7-43	22 kW	54 mm		43 A
CA 7-60	30 kW	72 mm		60 A
CA 7-72	37 kW			72 A
CA 7-85	45 kW			85 A

With CA 7 you have more clip on accessories

Common accessories from 9 to 85 amps

- On and off delay pneumatic timers
- Coil mounted electronic timers on delay, off delay, star delta
- Coil mounted 24 V DC interface
- Coil mounted RC and varistor suppressor modules
- Mechanical latch
- Mechanical interlock
- Mechanical interlock with integrated N/C interlock contacts
- Moulded wire link sets for DOL, reversing and star delta starters
- Large choice of front and side mounting auxiliary contacts



ACS contactors CA 7

4-45kW




Refer catalogue SACS

Innovation and ease of use provide solutions for your control systems

Coil terminals are always in the correct position

The coil terminations on the CA 7 contactors can be supplied optionally at the top or the bottom of the contactor. It is also a simple task to change this on site should the requirements change.


When CA 7 contactors are used in combination with KTA 7 circuit motor circuit breakers the bottom coil terminations are used. For use with standard CT 7 thermal or CEP 7 electronic overloads the top coil termination should be selected.

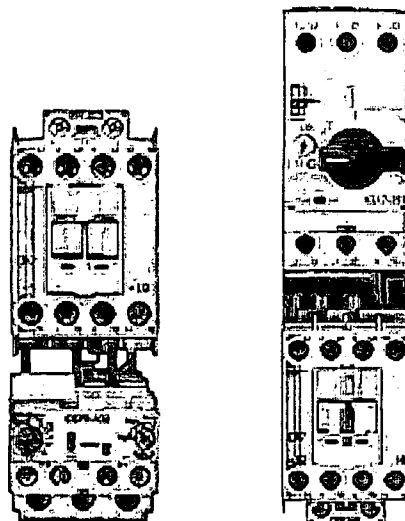

Mechanical interlocks save space

Only 9mm wide, the CM 7 mechanical interlock snaps into place between any of the CA 7 contactors. It is allowed also to interlock different sizes of the CA 7 range with the same interlock.

The basic mechanical interlock is supplemented by a variation with built in N/C auxiliary contacts for electrical interlocking. This version is also only 9mm wide and further minimises space requirements.

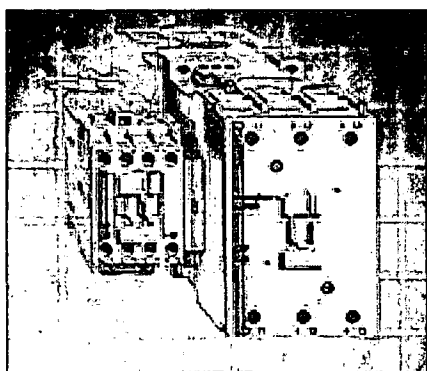


CA 7 contactors provide improved wiring terminals


The main terminals of all CA 7 contactors are designed to accept at least two cables. At the same time they comply with safety standards regarding touch protection.

The larger contactors CA 7-30 and upwards employ a special cage terminal which allows the connection of two cables in separate chambers.


The ease of wiring with CA 7 contactors saves both time and money.

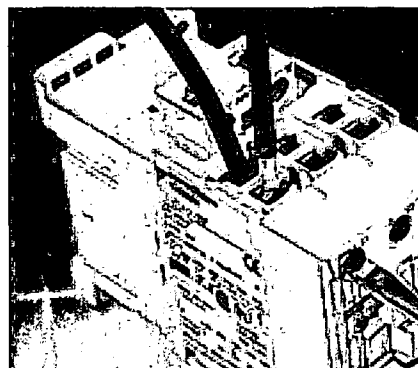

With Sprecher + Schuh you can choose the best protection for your motors.

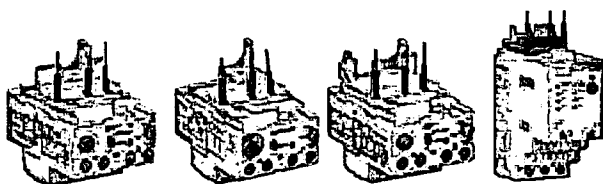

High tech electronic protection type CEP 7 in trip class 10 or 20.

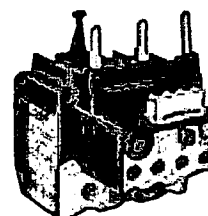

Standard thermal overloads type CT 7

Refer Catalogue C-CO

Automatic Type '2' co-ordination¹⁾ with
no-oversizing of contactors

DOL starting

50/65 kA @ 400/415 V



Motor size kW	Approx. amps @ 400/415 V	Sprecher + Schuh circuit breaker	Setting range amps	Magnetic amps	Sprecher + Schuh contactor	AC-3 amps
0.18	0.60	KT 7-25S	0.40 - 0.63	8.2	CA 7-9	9
0.25	0.80	KT 7-25S	0.63 - 1.00	13	CA 7-9	9
0.37	1.10	KT 7-25S	1.00 - 1.60	21	CA 7-9	9
0.55	1.50	KT 7-25S	1.00 - 1.60	21	CA 7-9	9
0.75	1.80	KT 7-25S	1.60 - 2.50	33	CA 7-9	9
1.10	2.60	KT 7-25S	2.50 - 4.00	52	CA 7-9	9
1.15	3.40	KT 7-25S	2.50 - 4.00	52	CA 7-9	9
2.20	4.80	KT 7-25S	4.00 - 6.30	80	CA 7-9	9
3.00	6.50	KT 7-25S	6.30 - 10.0	130	CA 7-9	9
4.00	8.20	KT 7-25S	6.30 - 10.0	130	CA 7-9	9
5.50	11.00	KT 7-25S	10.0 - 16.0	208	CA 7-12	12
7.50	14.00	KT 7-25S	10.0 - 16.0	208	CA 7-16	16
9.00	17.00	KT 7-25H	14.5 - 20.0	260	CA 7-23	23
11.00	21.00	KT 7-25H	18.0 - 25.0	325	CA 7-23	23
15.00	28.00	KT 7-45H	23.0 - 32.0	416	CA 7-30	30
18.50	34.00	KT 7-45H	32.0 - 45.0	585	CA 7-37	37
22.00	40.00	KT 7-45H	32.0 - 45.0	585	CA 7-43	43
30.00	55.00	KT 3-100	40.0 - 63.0	882	CA 7-60	60
37.00	66.00	KT 3-100	63.0 - 90.0	1260	CA 7-72	72
45.00	80.00	KT 3-100	63.0 - 90.0	1260	CA 7-85	85


Definition Type '2' co-ordination according to IEC 947-4-1:

- The contactor or the starter must not endanger persons or systems in the event of a short circuit
- The contactor or the starter must be suitable for further use
- No damage to the overload relay or other parts may occur with the exception of welding of the contactor or starter contacts provided that these can be easily separated without significant deformation (such as with a screwdriver)
- In the event of a short circuit, fast opening current limiting circuit breakers KT 7 make it possible to build economical, fully short circuit co-ordinated starter combinations in accordance with IEC 947-4-1, Type '2' co-ordination
- Type '2' co-ordination without oversizing of contactors means: Type '1' = Type '2'

Note: ¹⁾ What is meant by Automatic Type '2' co-ordination?

The high speed operation of the new KT 7 motor protection circuit breakers means that contactors need not be oversized to achieve type '2' co-ordination. Simply select the normal AC 3 rated contactor and the corresponding KT 7 circuit breaker and type '2' co-ordination is assured.

240/415 V rating suitable for use on 230/400 V in accordance with AS 60038 : 2000

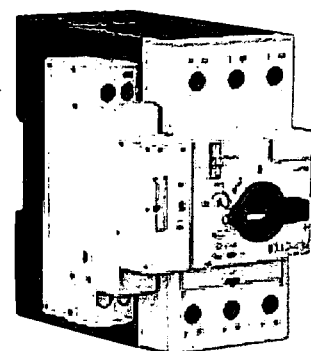

sprecher +
schuh

TERASAKI
Engineering Solutions. Maintaining Quality.

Short circuit co-ordination

Type 1 with circuit breakers or fuses



Refer Catalogue C-CO

MCCB or fuse DOL starting
50/65 kA @ 400/415 V to AS 3947.4.1

TemBreak Moulded Case Circuit Breaker or fuse

Motor size kW	Approx. amps	Terasaki circuit breaker	or	NHP HRC fuse to BS88	Sprecher + Schuh contactor type	Sprecher + Schuh thermal O/L relay type	Setting range amps
0.37	1.1	XM30PB/1.4		NTIA-6	CA 7-9	CT 7-24	1 - 1.6
0.55	1.5	XM30PB/2		NTIA-6	CA 7-9	CT 7-24	1 - 1.6
0.75	1.8	XM30PB/2.6		NTIA-10	CA 7-9	CT 7-24	1.6 - 2.4
1.1	2.6	XM30PB/4.0		NTIA-10	CA 7-9	CT 7-24	2.4 - 4
1.5	3.4	XM30PB/5		NTIA-10	CA 7-9	CT 7-24	2.4 - 4
2.2	4.8	XM30PB/8		NTIA-16	CA 7-9	CT 7-24	4 - 6
3.0	6.5	XM30PB/10		NTIA-16	CA 7-9	CT 7-24	6 - 10
4.0	8.2	XM30PB/12		NTIA-25	CA 7-9	CT 7-24	6 - 10
5.5	11	XH125NJ/20		NTIA-32	CA 7-12	CT 7-24	10 - 16
7.5	14	XH125NJ/20		NTIS-40	CA 7-16	CT 7-24	10 - 16
11	21	XH125NJ/32		NTIS-50	CA 7-23	CT 7-24	16 - 24
15	28	XH125NJ/50		NTIS-63	CA 7-30	CT 7-45	18 - 30
18.5	34	XH125NJ/50		NTCP-80	CA 7-37	CT 7-45	30 - 45
22	40	XH125NJ/63		NTCP-80	CA 7-43	CT 7-45	30 - 45
30	55	XH125NJ/100		NTCP-100	CA 7-60	CT 7-75	45 - 60
37	66	XH125NJ/100		NTF-160	CA 7-72	CT 7-75	60 - 75
45	80	XH125NJ/125 ¹⁾		NTF-160	CA 6-85	CT 7-100	70 - 90
55	100	XH125NJ/125 ¹⁾		NTF-200	CA 6-105-EI	CT 6-110	85 - 110
75	130	XH250NJ/250		NTKF-250	CA 6-140-EI	CT 6-150	105 - 150
90	155	XH250NJ/250 ¹⁾		NTKF-250	CA 6-170-EI	CT 6-200	140 - 200
110	200	XH250NJ/250 ¹⁾		NTKF-315	CA 6-210-EI	CEF 1-41/42	160 - 400
132	225	XH400NE/400		NTMF-355	CA 6-210-EI	CEF 1-41/42	160 - 400
150	250	XH400NE/400		NTMF-355	CA 6-250-EI	CEF 1-41/42	160 - 400
160	270	XH400NE/400		NTMF-400	CA 6-300-EI	CEF 1-41/42	160 - 400
185	310	XH400NE/400		NTTF-450	CA 6-300-EI	CEF 1-41/42	160 - 400
200	361	XH400NE/400		NTTM-500	CA 6-420-EI/CA 5-450	CEF 1-41/42	160 - 400
250	425	XH630NE/630		NTTM-630	CA 6-420-EI/CA 5-450	CEF 1-52	160 - 630
315	530	XH630NE/630		NTLM-710	CA 5-550	CEF 1-52	160 - 630

Notes: Fuses 65 kA. XH125NJ circuit breaker combinations limited to 50 kA, others 65 kA.

Overloads may be changed to different types eg. thermal style to electronic.

Some combinations also gives Type '2' performance.

¹⁾ Use 'magnetic only' breaker - Refer NHP.

240/415 V rating suitable for use on 230/400 V in accordance with AS 60038 : 2000

Sprecher+
Schuh

TERASAKI
Engineering Services Manufacturing Quality

Short circuit co-ordination

Type '2' with NHP fuses



Refer Catalogue C-CO

Fuse protection DOL starting ¹⁾)
 50/65 kA @ 400/415 V to AS 3947.4.1

Fuse

Motor size kW	Approx. amps @ 400/415 V	NHP HRC fuse to BS88	Sprecher + Schuh contactor	Sprecher + Schuh overload relay ²⁾ ³⁾)	Setting range amps
0.37	1.1	NTIA-4	CA 7-9	CEP 7	1.0 - 2.9
0.75	1.8	NTIA-6	CA 7-9	CEP 7	1.0 - 2.9
1.5	3.4	NTIA-10	CA 7-9	CEP 7	1.6 - 5
2.2	4.8	NTIA-16	CA 7-9	CEP 7	3.7 - 12
4.0	8.2	NTIA-20	CA 7-9	CEP 7	3.7 - 12
5.5	11	NTIA-25	CA 7-12	CEP 7	3.7 - 12
7.5	14	NTIA-32	CA 7-16	CEP 7	12 - 32
11	21	NTIS-50	CA 7-30	CEP 7	12 - 32
15	28	NTIS-63	CA 7-30	CEP 7	12 - 37
18.5	34	NTCP-80	CA 7-37	CEP 7	12 - 37
22	40	NTCP-80	CA 7-43	CEP 7	14 - 45
30	55	NTCP-100	CA 7-60	CEP 7	26 - 85
37	66	NTF-125	CA 7-72	CEP 7	26 - 85
45	80	NTF-160	CA 7-85	CEP 7	26 - 85
55	100	NTF-200	CA 6-105-EI	CT 6-110	85 - 110
75	130	NTKF-250	CA 6-140-EI	CT 6-150	105 - 150
90	155	NTKF-250	CA 6-170-EI	CT 6-200	140 - 200
110	200	NTKF-315	CA 6-210-EI	CEF 1-41/42 ⁴⁾)	160 - 400
132	225	NTMF-355	CA 6-210-EI	CEF 1-41/42 ⁴⁾)	160 - 400
150	250	NTMF-355	CA 6-250-EI	CEF 1-41/42 ⁴⁾)	160 - 400
185	320	NTTM-450	CA 6-300-EI	CEF 1-41/42 ⁴⁾)	160 - 400
250	425	NTTM-560	CA 6-420-EI	CEF 1-52 ⁴⁾)	160 - 630
320	538	NTLM-710	CA 5-550	CEF 1-52 ⁴⁾)	160 - 630
380	650	NTLM-800	CA 5-700	CEF 1-11/12P ⁴⁾)	300 - 1200

- Notes:**
- ¹⁾) Fuses with equal or lower let through energy may also be used.
 - ²⁾) Thermal overloads may be used instead of electronic CEP 7.
 - ³⁾) Above 37 kW overloads may also be electronic or thermal.
 - ⁴⁾) CET 4 may be used instead of CEF 1.

240/415 V rating suitable for use on 230/400 V in accordance with AS 60038 : 2000

sprecher
schuh

TERASAKI
Ensuring Service Maintaining Quality

Short circuit co-ordination

Type '2' using Terasaki circuit breakers



Refer Catalogue C-CO

**TemBreak circuit breakers DOL starting
50 kA @ 400/415 V to AS 3947.4.1**

TemBreak MCCBs

Motor size kW	Approx. amps	Terasaki circuit breaker	Sprecher + Schuh contactor	Sprecher + Schuh overload relay	Setting range amps
0.37	1.1	XM30PB/1.4	CA 7-9	CT 7-24-1.6	1 - 1.6
0.55	1.5	XM30PB/2	CA 7-9	CT 7-24-1.6	1 - 1.6
0.75	1.8	XM30PB/2.6	CA 7-9	CT 7-24-2.4	1.6 - 2.4
1.1	2.6	XM30PB/4.0	CA 7-16	CT 7-24-4	2.4 - 4
1.5	3.4	XM30PB/5	CA 7-16	CT 7-24-4	2.4 - 4
2.2	4.8	XM30PB/8	CA 7-16	CT 7-24-6	4 - 6
3	6.5	XM30PB/10	CA 7-30	CT 7-24-10	6 - 10
4	8.2	XM30PB/12	CA 7-30	CT 7-24-10	6 - 10
5.5	11	XH125NJ/20	CA 7-30	CT 7-24-16	10 - 16
7.5	14	XH125NJ/20	CA 7-30	CT 7-24-16	10 - 16
11	21	XH125NJ/32	CA 7-30	CT 7-24-24	16 - 24
15	28	XH125NJ/50	CA 7-43	CT 7-45-30	18 - 30
18.5	34	XH125NJ/50	CA 7-43	CT 7-45-45	30 - 45
22	40	XH125NJ/63	CA 7-43	CT 7-45-45	30 - 45
30	55	XH125NJ/100	CA 6-85	CT 7-75 ²⁾	45 - 60
37	66	XH125NJ/100	CA 6-85	CT 7-75 ²⁾	60 - 75
45	80	XH125NJ/125	CA 6-105-EI	CT 6-90	70 - 90
55	100	XH125NJ/125 ¹⁾	CA 6-105-EI	CT 6-110	85 - 110
75	130	XH250NJ/250	CA 6-140-EI	CT 6-150	105 - 150
90	155	XH250NJ/250	C A6-170-EI	CT 6-200	140 - 200
110	200	XH250NJ/250 ¹⁾	CA 6-210-EI	CEF 1-41/42	160 - 400
132	225	XS400SE/400	CA 6-210-EI	CEF 1-41/42	160 - 400
150	250	XS400SE/400	CA 6-250-EI	CEF 1-41/42	160 - 400
160	270	XS400SE/400	CA 6-300-EI	CEF 1-41/42	160 - 400
200	361	XS400SE/400	CA 6-420-EI	CEF 1-41/42	160 - 400
200	361	XS400SE/400	CA 5-450	CEF 1-22 ²⁾	160 - 400
250	425	XS630SE/630	CA 5-700	CEF 1-52 ²⁾	160 - 630
320	538	XS630SE/630	CA 5-700	CEF 1-52 ²⁾	160 - 630

Notes: Overloads may be thermal or electronic.
 Combinations based on the overload tripping before the circuit breaker at overload currents up to the motor locked rotor current.
¹⁾ Use 'magnetic only' breaker or next higher circuit breaker / contactor combination.
²⁾ Use with separate mounting bracket.
 Data for 65 kA co-ordination available refer Cat. C-CO.

240/415 V rating suitable for use on 230/400 V in accordance with AS 60038 : 2000

Sprecher +
Schuh

TERASAKI
Engineering Science Manufacturing Quality

Short circuit co-ordination

Type '2' using Terasaki circuit breakers



Refer Catalogue C-CO

TemBreak circuit breakers DOL starting. 85 kA @ 400/415 V to AS 3947.4.1

MCCBs

Motor size kW	Approx. FLC @ 400/415 V (A)	Terasaki circuit breaker	Sprecher + Schuh contactor	Sprecher + Schuh thermal O/L type	Setting range (A)
0.37	1.1	XM30PB/1.4	CA 7-9	CEP 7-M32-2.9-10	1.0 - 2.9
0.55	1.5	XM30PB/2.0	CA 7-9	CEP 7-M32-2.9-10	1.0 - 2.9
0.75	1.8	XM30PB/2.6	CA 7-9	CEP 7-M32-2.9-10	1.0 - 2.9
1.1	2.6	XM30PB/4	CA 7-16	CEP 7-M32-2.9-10	1.0 - 2.9
1.5	3.4	XM30PB/5	CA 7-16	CEP 7-M32-5-10	1.6 - 5
2.2	4.8	XM30PB/8	CA 7-30	CEP 7-M32-12-10	3.7 - 12
3	6.5	XM30PB/8	CA 7-30	CEP 7-M32-12-10	3.7 - 12
4	8.2	XM30PB/10	CA 7-30	CEP 7-M32-12-10	3.7 - 12
5.5	11	TL100NJ/20	CA 7-30	CEP 7-M32-12-10	3.7 - 12
7.5	14	TL100NJ/20	CA 7-30	CEP 7-M32-32-10	12 - 32
9	17	TL100NJ/32	CA 7-30	CEP 7-M32-32-10	12 - 32
10	19	TL100NJ/32	CA 7-30	CEP 7-M32-32-10	12 - 32
11	21	TL100NJ/32	CA 7-30	CEP 7-M32-32-10	12 - 32
15	28	TL100NJ/50	CA 7-43	CEP 7-M32-32-10	12 - 32
18.5	34	TL100NJ/50	CA 7-43	CEP 7-M37-37-10	12 - 37
22	40	TL100NJ/63	CA 7-43	CEP 7-M45-45-10	14 - 45
30	55	TL100NJ/100	CA 7-72	CEP 7-M85-85-10	26 - 85
37	66	TL100NJ/100	CA 7-72	CEP 7-M85-85-10	26 - 85
45	80	TL250NJ/160	CA 6-105	CEP 7-M85-85-10	26 - 85
55	100	TL250NJ/160	CA 6-105	CEF 1-11/12	0.5 - 180
75	135	TL250NJ/250	CA 6-210-EI	CEF 1-11/12	0.5 - 180
90	160	TL250NJ/250	CA 6-210-EI	CEF 1-11/12	0.5 - 180
110	200	TL250NJ/250	CA 6-210-EI	CEF 1-41/42/52	160 - 630
132	230	TL400NE/400	CA 6-210-EI	CEF 1-41/42/52	160 - 630
160	270	TL400NE/400	CA 6-300-EI	CEF 1-41/42/52	160 - 630
200	361	TL400NE/400	CA 6-420-EI	CEF 1-41/42/52	160 - 630

Din-T circuit breakers with rotary isolator. DOL starting.
50 kA @ 400/415 V to AS 3947.4.1**Din-T MCBs**

Motor size kW	Approx. amps @ 400/415 V	Sprecher + Schuh isolator	Terasaki circuit breaker	Sprecher + Schuh current limiter	Sprecher + Schuh contactor	Sprecher + Schuh thermal O/L relay	Thermal overload range
0.37	1.1	LA 7-80	Din-T 10 / 4	-	CA 7-9	CT 7-24	0.6 - 1.6
0.55	1.5	LA 7-80	Din-T 10 / 4	-	CA 7-9	CT 7-24	1 - 1.6
0.75	1.8	LA 7-80	Din-T 10 / 4	-	CA 7-9	CT 7-24	1.6 - 2.4
1.1	2.6	LA 7-80	Din-T 10 / 6	-	CA 7-23	CT 7-24	2.4 - 4
1.5	3.4	LA 7-80	Din-T 10 / 6	-	CA 7-23	CT 7-24	2.4 - 4
2.2	4.8	LA 7-80	Din-T 10 / 10	KTL 3-65	CA 7-23	CT 7-24	4 - 6
3	6.5	LA 7-80	Din-T 10 / 16	KTL 3-65	CA 7-23	CT 7-24	6 - 10
4	8.2	LA 7-80	Din-T 10 / 16	KTL 3-65	CA 7-23	CT 7-24	6 - 10
5.5	11	LA 7-80	Din-T 10 / 20	KTL 3-65	CA 7-23	CT 7-24	10 - 16
7.5	14	LA 7-80	Din-T 10 / 32	KTL 3-65	CA 7-30	CT 7-45	10 - 16
11	21	LA 7-80	Din-T 10 / 40	KTL 3-65	CA 7-30	CT 7-24	16 - 24
15	28	LA 7-100	Din-T 10 / 63	KTL 3-65	CA 7-37	CT 7-45	18 - 30
18.5	34	LA 7-100	Din-T 10 / 63	KTL 3-65	CA 7-37	CT 7-45	30 - 45

Note: 240/415 V rating suitable for use on 230/400 V in accordance with AS 60038 : 2000



ACS contactors CA 7

Technical data



Refer Catalogue C-CO

TemBreak circuit breakers DOL starting. 85 kA @ 400/415 V to AS 3947.4.1

MCCBs

Motor size kW	Approx. FLC @ 400/415 V (A)	Terasaki circuit breaker	Sprecher + Schuh contactor	Sprecher + Schuh thermal O/L type	Setting range (A)
0.37	1.1	XM30PB/1.4	CA 7-9	CEP 7-M32-2.9-10	1.0 - 2.9
0.55	1.5	XM30PB/2.0	CA 7-9	CEP 7-M32-2.9-10	1.0 - 2.9
0.75	1.8	XM30PB/2.6	CA 7-9	CEP 7-M32-2.9-10	1.0 - 2.9
1.1	2.6	XM30PB/4	CA 7-16	CEP 7-M32-2.9-10	1.0 - 2.9
1.5	3.4	XM30PB/5	CA 7-16	CEP 7-M32-5-10	1.6 - 5
2.2	4.8	XM30PB/8	CA 7-30	CEP 7-M32-12-10	3.7 - 12
3	6.5	XM30PB/8	CA 7-30	CEP 7-M32-12-10	3.7 - 12
4	8.2	XM30PB/10	CA 7-30	CEP 7-M32-12-10	3.7 - 12
5.5	11	TL100NJ/20	CA 7-30	CEP 7-M32-12-10	3.7 - 12
7.5	14	TL100NJ/20	CA 7-30	CEP 7-M32-32-10	12 - 32
9	17	TL100NJ/32	CA 7-30	CEP 7-M32-32-10	12 - 32
10	19	TL100NJ/32	CA 7-30	CEP 7-M32-32-10	12 - 32
11	21	TL100NJ/32	CA 7-30	CEP 7-M32-32-10	12 - 32
15	28	TL100NJ/50	CA 7-43	CEP 7-M32-32-10	12 - 32
18.5	34	TL100NJ/50	CA 7-43	CEP 7-M37-37-10	12 - 37
22	40	TL100NJ/63	CA 7-43	CEP 7-M45-45-10	14 - 45
30	55	TL100NJ/100	CA 7-72	CEP 7-M85-85-10	26 - 85
37	66	TL100NJ/100	CA 7-72	CEP 7-M85-85-10	26 - 85
45	80	TL250NJ/160	CA 6-105	CEP 7-M85-85-10	26 - 85
55	100	TL250NJ/160	CA 6-105	CEF 1-11/12	0.5 - 180
75	135	TL250NJ/250	CA 6-210-EI	CEF 1-11/12	0.5 - 180
90	160	TL250NJ/250	CA 6-210-EI	CEF 1-11/12	0.5 - 180
110	200	TL250NJ/250	CA 6-210-EI	CEF 1-41/42/52	160 - 630
132	230	TL400NE/400	CA 6-210-EI	CEF 1-41/42/52	160 - 630
160	270	TL400NE/400	CA 6-300-EI	CEF 1-41/42/52	160 - 630
200	361	TL400NE/400	CA 6-420-EI	CEF 1-41/42/52	160 - 630

Din-T circuit breakers with rotary isolator. DOL starting.
50 kA @ 400/415 V to AS 3947.4.1

Din-T MCBs

Motor size kW	Approx. amps @ 400/415 V	Sprecher + Schuh isolator	Terasaki circuit breaker	Sprecher + Schuh current limiter	Sprecher + Schuh contactor	Sprecher + Schuh thermal O/L relay	Thermal overload range
0.37	1.1	LA 7-80	Din-T 10 / 4	-	CA 7-9	CT 7-24	0.6 - 1.6
0.55	1.5	LA 7-80	Din-T 10 / 4	-	CA 7-9	CT 7-24	1 - 1.6
0.75	1.8	LA 7-80	Din-T 10 / 4	-	CA 7-9	CT 7-24	1.6 - 2.4
1.1	2.6	LA 7-80	Din-T 10 / 6	-	CA 7-23	CT 7-24	2.4 - 4
1.5	3.4	LA 7-80	Din-T 10 / 6	-	CA 7-23	CT 7-24	2.4 - 4
2.2	4.8	LA 7-80	Din-T 10 / 10	KTL 3-65	CA 7-23	CT 7-24	4 - 6
3	6.5	LA 7-80	Din-T 10 / 16	KTL 3-65	CA 7-23	CT 7-24	6 - 10
4	8.2	LA 7-80	Din-T 10 / 16	KTL 3-65	CA 7-23	CT 7-24	6 - 10
5.5	11	LA 7-80	Din-T 10 / 20	KTL 3-65	CA 7-23	CT 7-24	10 - 16
7.5	14	LA 7-80	Din-T 10 / 32	KTL 3-65	CA 7-30	CT 7-45	10 - 16
11	21	LA 7-80	Din-T 10 / 40	KTL 3-65	CA 7-30	CT 7-24	16 - 24
15	28	LA 7-100	Din-T 10 / 63	KTL 3-65	CA 7-37	CT 7-45	18 - 30
18.5	34	LA 7-100	Din-T 10 / 63	KTL 3-65	CA 7-37	CT 7-45	30 - 45

Note: 240/415 V rating suitable for use on 230/400 V in accordance with AS 60038 : 2000

General data	CA 7-9...CA 7-85									
Rated insulation voltage U_i										
IEC	690 V									
UL, CSA	600 V									
Rated impulse voltage withstand U_{imp}	8k V									
Test voltage										
1 minute (to IEC 947-4)	2500 V									
Rated voltage U_e										
AC	110, 240, 400/415, 500, 690 V									
DC	24, 48, 110, 220, 440 V									
Rated frequency of coil	50/60 Hz									
Ambient temperature										
Storage	-55...+80 °C (-67...176 °F)									
Operation at nominal current	-25...+60 °C (-13...140 °F)									
Maximum with 15 % AC 1 current reduction > 60 °C	-25...+70 °C (-13...158 °F)									
Climatic withstand	Cyclicly changing humid atmosphere to IEC 68-2-30 and DIN 50 016, 56									
Maximum altitude	2000 m NN, to IEC 947-4									
Protection class										
IP 2LX (IEC 529 and DIN 40050)	In connected condition									
Protection against contact	Touch protection to VDE 0106, Part 100									
Standards	IEC 947-1/4; VDE 0660, Part 100/104; UL 508; CSA 22.2. Part 14									
Compliance	CE; UL; CSA									
Short time withstand										
I_{cw} , 60°	CA7-9	CA7-12	CA7-16	CA7-23	CA7-30	CA7-37	CA7-43	CA7-60	CA7-72	CA7-85
1 s (A)	210	210	290	380	480	525	650	1100	1150	1250
4 s (A)	140	150	220	280	360	390	480	820	860	910
10 s (A)	100	120	175	220	290	310	375	640	680	710
15 s (A)	90	100	150	200	250	270	325	560	600	620
60 s (A)	60	60	90	125	170	175	200	350	370	380
240 s (A)	40	40	50	60	100	100	120	190	190	200
900 s (A)	30	30	38	38	54	60	76	108	108	120
Minimum cooling time at zero current [Min]	20	20	20	20	20	20	20	20	20	20



ACS contactors CA 7

Technical data



Auxiliary contact data			Built-in auxiliary contacts CA 7-9...23							Clip-on auxiliary contacts and accessories								
Switching of AC current																		
AC 1 _{th}	at 40 °C	[A]	25							10								
	at 60 °C	[A]	20							6								
AC 15	at rated voltage	[V]	24	48	120	240	400	500	600	690	24	48	120	240	400	500	600	690
		[A]	16	16	14	10	5	2.5	1.8	1	6	6	6	3	2	1.5	1.2	0.7
Short circuit protection		Fuse gG																
Co-ordination type '2'		[A]	10							10								
Rated impulse voltage																		
withstand U _{imp}		[kV]	8							6								
Isolation between control and load																		
circuits to DIN, VDE 0106, parts		[V]	400							Between auxiliary circuit 250 V, between load & auxiliary circuit 690 V								
Contact reliability to DIN 19240			17 V, 5 mA,							17 V, 5 mA,								
without soiling, normal industry atmosphere			>10 ⁸ switchings per failure							>10 ⁸ switchings per failure								
Terminals for auxiliary contacts																		
Terminal size to IEC 947-1			2 x A4							2 x A4								
Flexible wire with sleeve	1 wire [mm ²]		1...4							0.5...2.5								
	2 wire [mm ²]		1...4							0.75...2.5								
Stranded/solid core	1 wire [mm ²]		1.5...6							0.5...2.5								
	2 wire [mm ²]		1.5...6							0.75...2.5								
Tightening torque		[Nm]	1...2.5							1...1.5								

			Built-in auxiliary contacts CA 7-9...85					Clip-on auxiliary contacts Front mount					Clip-on auxiliary contacts Side mount				
Switching DC loads																	
L/R < 1 ms, resistive loads at:	[V]		24	48	110	220	440	24	48	110	220	440	24	48	110	220	440
	[A]		12	9	3.5	0.55	0.2	12	9	3.5	0.55	0.2	6	3.2	0.45	0.18	0.1
L/R < 15 ms, inductive loads with economy resistor in series at:	[V]		24	48	110	220	440	24	48	110	220	440	24	48	110	220	440
	[A]		9	5	2	0.4	0.16	9	5	2	0.4	0.16	2	1.6	0.3	0.12	0.05
DC-13, switching electro magnets at:																	
	[V]		24	48	110	220	440	24	48	110	220	440	24	48	110	220	440
	[A]		5	2	0.7	0.25	0.12	5	2	0.7	0.25	0.12	3	1.5	0.6	0.3	0.2

Additional rating data - contactors to IEC 947

Contactor	CA 7-9	CA 7-12	CA 7-16	CA 7-23	CA 7-30	CA 7-37	CA 7-43	CA 7-60	CA 7-72	CA 7-85
-----------	--------	---------	---------	---------	---------	---------	---------	---------	---------	---------

AC 1 resistive load

switching 3~

Ambient temperature 40 °C

I_e ¹⁾ [A]	32	32	32	32	50	50	85	100	100	100
230/240 V [kW]	10	10	13	13	18	20	25	36	36	40
400/415 V [kW]	18	18	23	23	32	36	45	64	64	71
690 V [kW]	30	30	38	38	54	60	75	108	108	120

Ambient temperature 60 °C

I_e ¹⁾ [A]	32	32	32	32	45	45	63	100	100	100
230/240 V [kW]	8	8	10	10	14	16	20	29	29	34
400/415 V [kW]	14	14	17	17	26	28	36	51	51	61
690 V [kW]	24	24	29	29	44	48	60	86	86	102

AC motor switching

AC 2, AC 3, AC 4

230/240 V [A]	11.5	14.5	20	26.5	34	37	42	62	70	85
400/415 V [A]	9	12	16	23	30	37	43	60	72	85
690 V [A]	5	7	9.3	12	17	20	25	34	42	49
230/240 V [kW]	3	4	5.5	7.5	10	11	13	18.5	22	25
400/415 V [kW]	4	5.5	7.5	11	15	18.5	22	30	37	45
690 V [kW]	4	5.5	7.5	10	15	18.5	22	30	37	45

Rated making capacity

I_e AC 4, 50 Hz max. 690 V [A]	135	180	240	345	450	555	645	900	1080	1275
----------------------------------	-----	-----	-----	-----	-----	-----	-----	-----	------	------

Rated breaking capacity

I_e AC 4 max. 460 V [A]	135	180	240	345	450	555	645	900	1080	1275
max. 690 V [A]	75	105	140	140	255	300	375	510	630	735

Short circuit protection

without protection relay

fuse gG to IEC 947-4-1

co-ordination type '1' [A]	50	50	50	63	100	125	160	200	250	250
co-ordination type '2' [A]	20	25	25	35	50	80	100	100	125	160

Main current circuit

resistance [mΩ]	2.7	2.7	2.7	2	2	2	1.5	0.9	0.9	0.9
-----------------	-----	-----	-----	---	---	---	-----	-----	-----	-----

Power dissipated by all

circuits at I_e AC 3 [w]	0.7	1.2	2.1	3.2	5.4	8.2	8.3	9.7	14	19.5
----------------------------	-----	-----	-----	-----	-----	-----	-----	-----	----	------

Total power dissipation

at I_e AC 3 AC control [w]	3.3	3.8	4.7	6.2	8.4	11.2	11.5	14.2	18.5	—
DC control [w]	6.7	7.2	8.1	12.4	14.6	17.4	18.4	14.6	18.9	—

Life span in millions of operations

Mechanical AC control	13	13	13	13	13	13	12	10	10	10
DC control	13	13	13	13	13	13	13	10	10	10

Operating times (DC)

Make (mS)	40...70	40...70	40...70	40...70	50...80	50...80	50...80	20...40	20...40	20...40
Break (mS)	7...15	7...15	7...15	7...15	7...15	7...15	—	—	—	—

Note: ¹⁾ Contact NHP for recommended cable size.




ACS contactors CA 7


Dimensions



Dimensions in (mm)

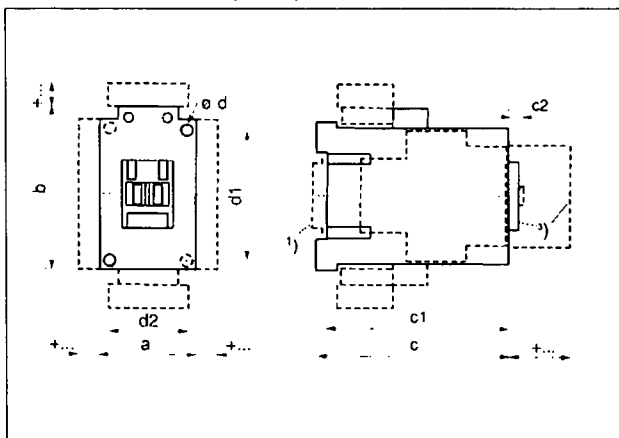

Mounting position

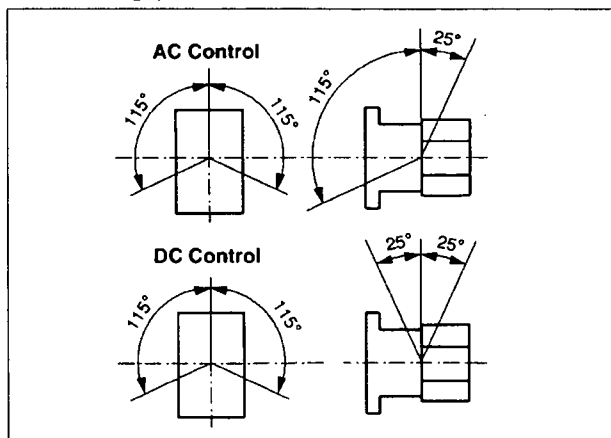

Contactor (AC control)

Type	a	b	c	c1	c2	ød	d1	d2 ¹⁾
CA 7-9...CA 7-23 ²⁾	45	81	80.5	75.5	6	4.5	60	35
CA 7-30...CA 7-37	45	81	97.5	92.6	6.5	4.5	60	35
CA 7-43	54	81	100.5	95.6	6.5	4.5	60	45
CA 7-60...CA 7-85	72	122	117	111.5	8.5	5.4	100	55

(DC control)

Type	a	b	c	c1	c2	ød	d1	d2 ¹⁾
CA 7-9C...CA 7-16C	45	81	106.5	101.5	6	4.5	60	35
CA 7-23C	45	81	123.5	119	6	4.5	60	35
CA 7-30C...CA 7-37C	45	81	141.5	136.5	6.5	4.5	60	35
CA 7-43C	54	81	144.5	140	6.5	4.5	60	45
CA 7-60C...CA 7-85C	72	122	117	111.5	8.5	5.4	100	55

Accessories

Contactor with		(AC control) (mm)	(DC control) (mm)
Front mounting auxiliary contact	2 or 4 pole	c/c1 + 39	c/c1 + 39
Side mounting auxiliary contact	1 or 2 pole	a + 9	a + 9
Pneumatic timing module		c/c1 + 58	–
Electronic timing module	coil mounting	b + 24	b + 24
Mechanical interlock	mounts between contactors	a + 9	a + 9
Mechanical latch		c/c1 + 61	–
Interface	coil mounting	b + 9	–
Suppressor	coil mounting	b + 3	b + 3
With inscriptions ³⁾	labels	+0	+0
	label support system V4/V5	+5.5	+5.5

- Notes: ¹⁾ DIN Rail mounting 35 mm to EN 50 022.
²⁾ Dimensions for 4 pole contactors same as 3 pole with auxiliary.
³⁾ Dimensions with inscriptions.




ACS electronic overloads CEP 7

Dimensions with and without contactors




Dimensions in (mm)

CEP 7, CEP 7s and CEP 7-B mounted on CA 7 contactors

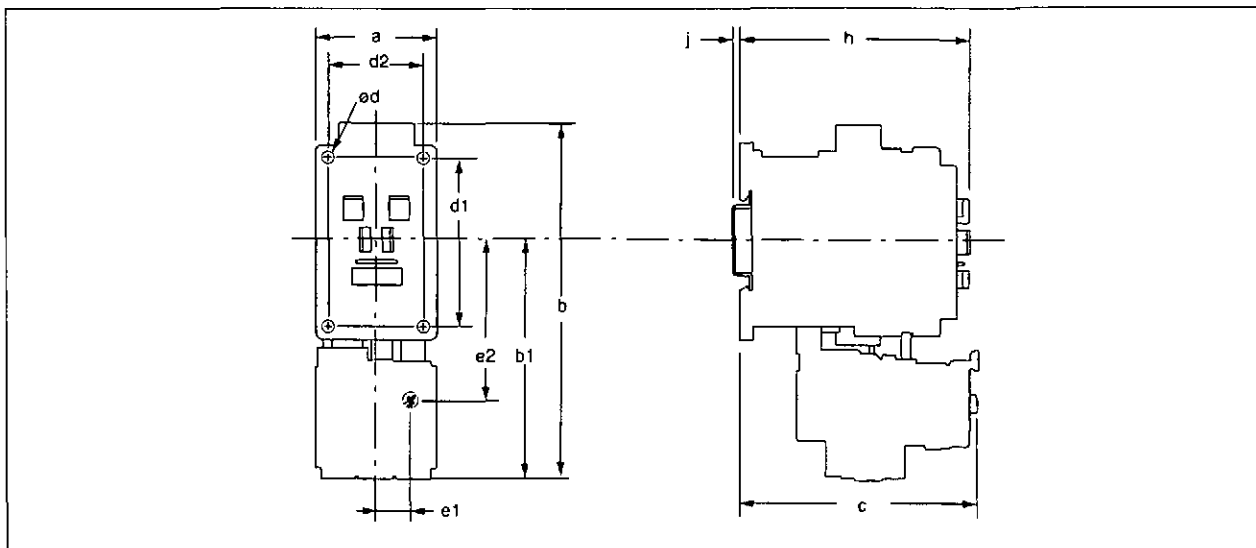

Cat. No.	a	b	b1	c	e1	e2	d1	d2	h	j	ød
CA 7-9/12/16/23 with CEP 7 or CEP 7S	45	131	86	88.5	16.5	69	60	35	86.5	2	4.2
CA 7-9/12/16/23 with CEP 7-B	54	137	97	90.7	5.1	59	60	35	85.1	2	4.2
CA 7-30/37 with CEP 7 or CEP 7S	45	136.5	91.5	92	16.5	69	60	35	104	2	4.2
CA 7-30/37 with CEP 7-B	54	137	97	92.1	5.2	59	60	35	104.7	2	4.2
CA 7-43 with CEP 7, CEP 7S or CEP 7-B	54	136.5	91.5	93	22	69	60	45	107	2	4.2
CA 7-60/72/85 with CEP 7, CEP 7S or CEP 7-B	72	188.5	120	120	18	84.5	100	55	125.5	2	5.5

CEP 7 with separate mounting bracket

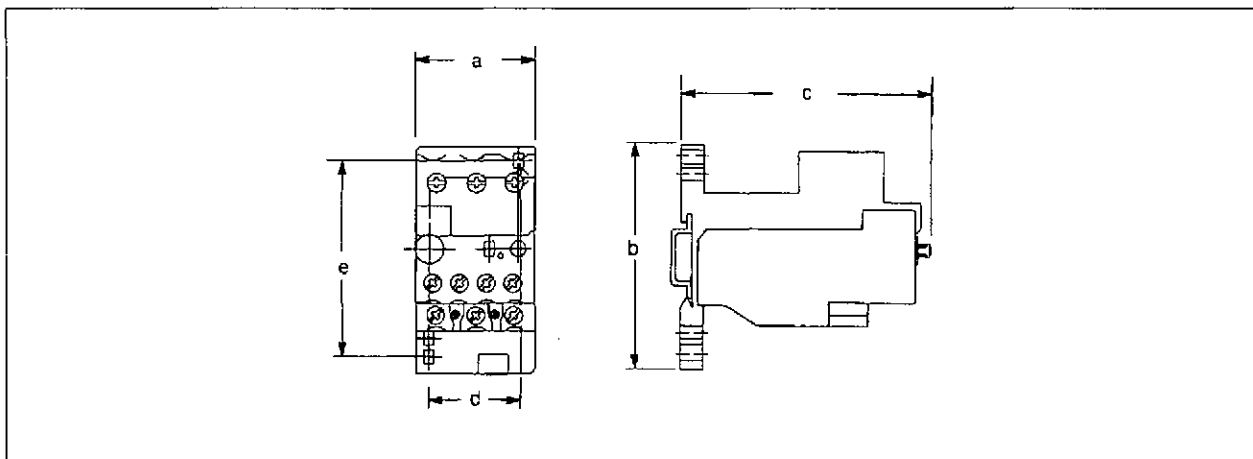

Type	a	b	c	d	e
CEP 7-37-P-A	45	90	75	30	75
CEP 7-45-P-A	55	90	96.5	40	75
CEP 7-85-P-A	70	115	110	55	105

sprecher
Schuh

ACS thermal overloads CT 7

Technical data



General	CT 7-24	CT 7-45	CT 7-75	CT 7-100
Weight	[kg] 0.13	0.21	0.21	1.3
Standards	IEC 947, EN 60 947, DIN VDE 0660, UL, LRS, GUS, CSA			
Climatic	damp/heat, constant, to DIN, IEC 68, Part 2 - 3 damp/heat, cyclic, to DIN, IEC 68, Part 2 - 30			
Ambient temperature	open	-25...+60 °C		
	enclosed	-25...+50 °C		
Temperature compensation	continuous temperature range -5...+40 °C to IEC 947, EN 60947; PTB: -5...+50 °C			
Shock resistance (sinusoidal 10 ms) [G]	10			
Protection	IP 00 IP 2LX			
Protection	touch proof (VDE 0106, Part 100)			

Contactor, timer and overload selection chart for auto transformer starters

ATS kW	Line contactor	Trans contactor	Star contactor	Timer	Overload
11	CA 7-23-10	CA 7-16-10	CA 7-9-10	RZ7 FSY2D	CEP 7-M32-32-10
15	CA 7-30-00	CA 7-23-10	CA 7-12-10	RZ7 FSY2D	CEP 7-M37-37-10
18.5	CA 7-37-00	CA 7-30-00	CA 7-16-10	RZ7 FSY2D	CEP 7-M37-37-10
22	CA 7-43-00	CA 7-30-00	CA 7-23-10	RZ7 FSY2D	CEP 7-M45-45-10
30	CA 7-60-00	CA 7-37-00	CA 7-30-00	RZ7 FSY2D	CEP 7-M85-85-10
37	CA 7-72-00	CA 7-43-00	CA 7-30-00	RZ7 FSY2D	CEP 7-M85-85-10
45	CA 7-85-00	CA 7-60-00	CA 7-37-00	RZ7 FSY2D	CEP 7-M85-85-10
55	CA 6-85-11	CA 7-60-00	CA 7-43-00	RZ7 FSY2D	CT 6-110
75	CA 6-105-11	CA 7-85-00	CA 7-60-00	RZ7 FSY2D	CT 6-150
90	CA 6-140EI-11	CA 6-85-11	CA 7-72-00	RZ7 FSY2D	CT 6-200
110	CA 6-170EI-11	CA 6-105-11	CA 7-85-00	RZ7 FSY2D	CEF 1-41
132	CA 6-210EI-11	CA 6-140EI-11	CA 6-105-11	RZ7 FSY2D	CEF 1-41
150	CA 6-250EI-11	CA 6-140EI-11	CA 6-105-11	RZ7 FSY2D	CEF 1-41
185	CA 6-300EI-11	CA 6-210EI-11	CA 6-140EI-11	RZ7 FSY2D	CEF 1-41
220	CA 6-420EI-11	CA 6-210EI-11	CA 6-140-EI-11	RZ7 FSY2D	CEF 1-41

Contactor, timer and overload selection chart for star delta starters

SDS kW	Line contactor	Delta contactor	Star contactor	Timer	Overload
7.5	CA 7-9-10	CA 7-9-01	CA 7-9-01	RZ7 FSY2D	CEP 7-M32-12-10
11	CA 7-12-10	CA 7-12-01	CA 7-9-01	RZ7 FSY2D	CEP 7-M32-32-10
15	CA 7-16-10	CA 7-16-01	CA 7-9-01	RZ7 FSY2D	CEP 7-M32-32-10
18.5	CA 7-23-10	CA 7-23-01	CA 7-12-01	RZ7 FSY2D	CEP 7-M32-32-10
22	CA 7-23-10	CA 7-23-01	CA 7-16-01	RZ7 FSY2D	CEP 7-M32-32-10
30-37	CA 7-37-00	CA 7-37-00	CA 7-23-01	RZ7 FSY2D	CEP 7-M45-45-10
45	CA 7-60-11	CA 7-60-11	CA 7-30-00	RZ7 FSY2D	CEP 7-M85-85-10
55	CA 7-60-11	CA 7-60-11	CA 7-37-00	RZ7 FSY2D	CEP 7-M85-85-10
75	CA 7-85-00	CA 7-85-00	CA 7-43-00	RZ7 FSY2D	CEP 7-M85-85-10
90	CA 6-85-11	CA 6-85-11	CA 7-60-00	RZ7 FSY2D	CT 6-90
110	CA 6-105-11	CA 6-105-11	CA 7-72-00	RZ7 FSY2D	CT 6-110
132	CA 6-140EI-11	CA 6-140EI-11	CA 7-85-00	RZ7 FSY2D	CT 6-150
150	CA 6-170EI-11	CA 6-170EI-11	CA 6-85-00	RZ7 FSY2D	CTA 6-200
185	CA 6-210EI-11	CA 6-210EI-11	CA 6-105-11	RZ7 FSY2D	CEF 1-41
220	CA 6-210-EI-11	CA 6-210-EI-11	CA 6-140-EI-11	RZ7 FSY2D	CEF 1-41




ACS thermal overloads CT 7

Dimensions with and without contactors




Mounted on CA 7 contactors

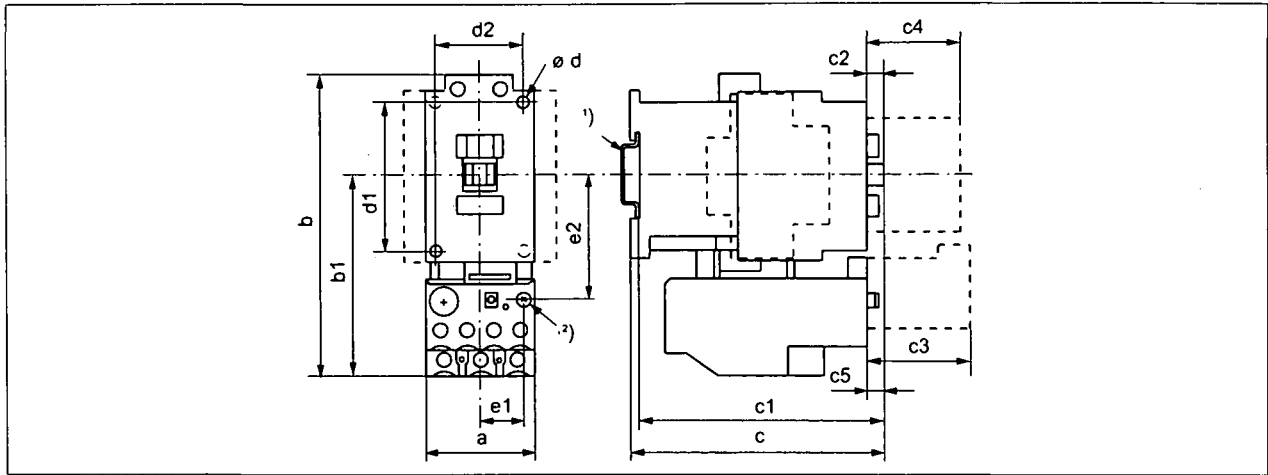


CT 7-24, CT 7-45, CT 7-75

Type	For contactor	a	b	b1	c	c1	c2	c3	c4	c5	ød	d1	d2	e1	e2
CT 7-24	CA 7-9...23	45	127	83	96	91	15	51	39	5	4.5	60	35 ¹⁾	16.5	51
	CA 7-30...37	45	127	83	105	99	6.5	51	39	9.5	4.5	60	35 ¹⁾	16.5	51
CT 7-45	CA 7-30...37	60	140	97	105	99	6.5	51	39	6.5	4.5	60	35 ¹⁾	16.5	57
	CA 7-43	60	140	97	107	103	6.5	51	39	8.5	4.5	60	45 ¹⁾	16.5	57
CT 7-75	CA 7-60...85	72	185	120	125	120	8.5	51	39	28.5	5.4	100	55 ¹⁾	16.5	82

Separate mounting with bracket

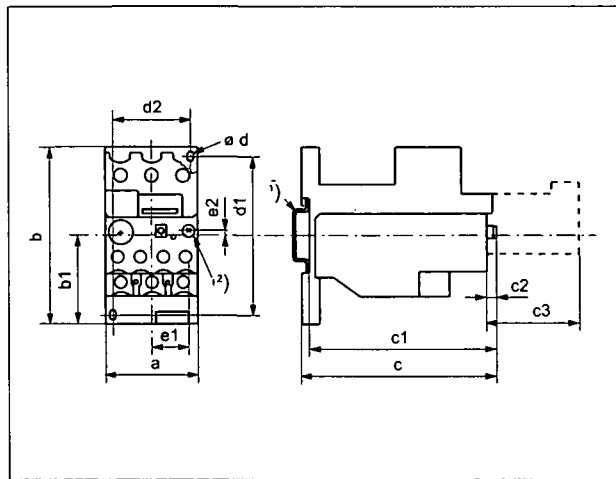

Separate mounting

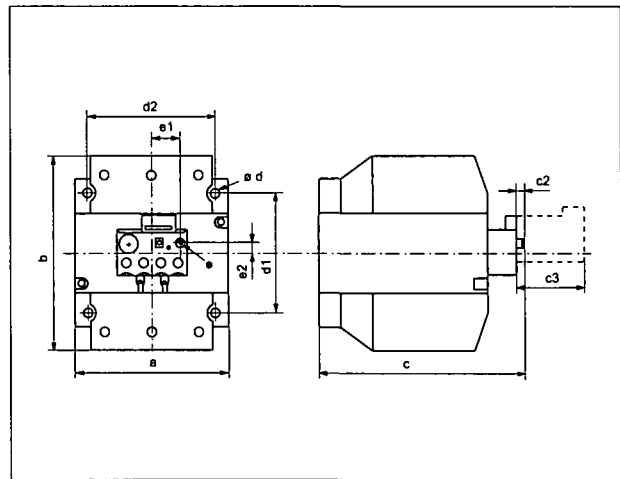

Type	a	b	b1	c	c1	c2	c3	ød	d1	d2	e1	e2
CT 7-24	45	85	44	95	70.5	5	51	4.5	60...74	35 ¹⁾	16	3
CT 7-75	60	90	44	117	112	15	51	5.4	74	50 ¹⁾	16	0
CT 7-90	100	120	-	135	-	5	51	6.2	74	80 ¹⁾	16	7

- Notes: ¹⁾ Standard DIN rail to EN 50 022-35.
²⁾ With reset rod, maintain 9 mm maximum operating radius from centre of reset button.
 c3 Reset magnet.
 c4 Auxiliary contact block.





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113


CONTROL RELAY & PHASE FAILURE RELAY

1. IDEC CONTROL RELAY TECHNICAL DETAILS
2. PHASE FAILURE RELAY TECHNICAL DETAILS


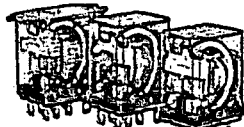


RH Series Compact Power Relays

SPDT through 4PDT, 10A contacts
Compact power type relays

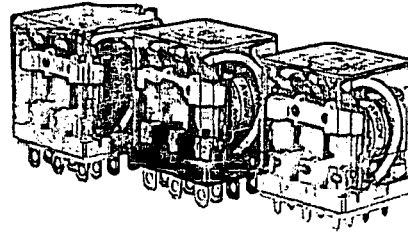The RH series are miniature power relays with a large capacity. The RH relays feature 10A contact capacity as large as the RR series but in a miniature package. The compact size saves space.



Part Number Selection

Contact	Model	Part Number		Coil Voltage Code (Standard Stock in bold)
		Blade Terminal	PCB Terminal	
SPDT 	Basic	RH1B-U	RH1V2-U	
	With Indicator	RH1B-UL	—	AC6V, AC12V, AC24V, AC110V, AC120V, AC220V, AC240V
	With Check Button	RH1B-UC	—	DC6V, DC12V, DC24V, DC48V, DC110V
	With Indicator and Check Button	RH1B-ULC	—	
	Top Bracket Mounting	RH1B-UT	—	
	With Diode (DC coil only)	RH1B-UD	RH1V2-UD	DC6V, DC12V, DC24V, DC48V, DC110V
	With Indicator and Diode (DC coil only)	RH1B-ULD	—	DC12V, DC24V, DC48V, DC110V
DPDT 	Basic	RH2B-U	RH2V2-U	
	With Indicator	RH2B-UL	RH2V2-UL	AC6V, AC12V, AC24V, AC110-120V, AC220-240V
	With Check Button	RH2B-UC	—	DC6V, DC12V, DC24V, DC48V, DC100-110V
	With Indicator and Check Button	RH2B-ULC	—	
	Top Bracket Mounting	RH2B-UT	—	
	With Diode (DC coil only)	RH2B-UD	RH2V2-UD	DC6V, DC12V, DC24V, DC48V, DC100-110V
	With Indicator and Diode (DC coil only)	RH2B-ULD	—	
3PDT 	Basic	RH3B-U	RH3V2-U	
	With Indicator	RH3B-UL	RH3V2-UL	AC6V, AC12V, AC24V, AC110V, AC120V, AC220V, AC240V
	With Check Button	RH3B-UC	—	DC6V, DC12V, DC24V, DC48V, DC110V
	With Indicator and Check Button	RH3B-ULC	—	
	Top Bracket Mounting	RH3B-UT	—	
	With Diode (DC coil only)	RH3B-D*	RH3V2-D*	DC6V, DC12V, DC24V, DC48V, DC110V
	With Indicator and Diode (DC coil only)	RH3B-LD*	—	
4PDT 	Basic	RH4B-U	RH4V2-U	
	With Indicator	RH4B-UL	RH4V2-UL	AC6V, AC12V, AC24V, AC110V, AC120V, AC220V, AC240V
	With Check Button	RH4B-UC	—	DC6V, DC12V, DC24V, DC48V, DC110V
	With Indicator and Check Button	RH4B-ULC	—	
	Top Bracket Mounting	RH4B-UT	—	
	With Diode (DC coil only)	RH4B-UD	RH4V2-UD	DC6V, DC12V, DC24V, DC48V, DC110V
	With Indicator and Diode (DC coil only)	RH4B-LD*	—	



- * Carries no UL recognition mark.
- PCB terminal relays are designed to mount directly to a circuit board without any socket.

Ordering Information

When ordering, specify the Part No. and coil voltage code:

(example) **RH3B-U** **AC120V**
Part No. Coil Voltage Code

Relays & Sockets

RH Series



Sockets (for Blade Terminal Models)

Relays	Standard DIN Rail Mount ¹	Finger-safe DIN Rail Mount ¹	Through Panel Mount	PCB Mount
RH1B	SH1B-05	SH1B-05C	SH1B-51	SH1B-62
RH2B	SH2B-05	SH2B-05C	SH2B-51	SH2B-62
RH3B	SH3B-05	SH3B-05C	SH3B-51	SH3B-62
RH4B	SH4B-05	SH4B-05C	SH4B-51	SH4B-62



1. DIN Rail mount socket comes with two horseshoe clips. Do not use unless you plan to insert pullover wire spring. Replacement horseshoe clip part number is Y778-011.

Hold Down Springs & Clips

Appearance	Description	Relay	For DIN Mount Socket	For Through Panel & PCB Mount Socket	Min Order Qty
	Pullover Wire Spring	RH1B	SY2S-02F1 ²	SY4S-51F1	10
		RH2B	SY4S-02F1 ²		
		RH3B	SH3B-05F1 ²		
		RH4B	SH4B-02F1 ²		
	Leaf Spring (side latch)	RH1B, RH2B, RH3B, RH4B	SFA-202 ³	SFA-302 ³	20
	Leaf Spring (top latch)	RH1B, RH2B, RH3B, RH4B	SFA-101 ³	SFA-301 ³	



2. Must use horseshoe clip when mounting in DIN mount socket. Replacement horseshoe clip part number is Y778-011.
3. Two required per relay.

AC Coil Ratings

Voltage (V)	Rated Current (mA) ±15% at 20°C								Coil Resistance (Ω) ±10% at 20°C				Operation Characteristics (against rated values at 20°C)		
	AC 50Hz				AC 60Hz				SPDT	DPDT	3PDT	4PDT	Max. Continuous Applied Voltage	Pickup Voltage	Dropout Voltage
	SPDT	DPDT	3PDT	4PDT	SPDT	DPDT	3PDT	4PDT							
6	170	240	330	387	150	200	280	330	330	9.4	6.4	5.4	110%	80% maximum	30% minimum
12	86	121	165	196	75	100	140	165	165	39.3	25.3	21.2			
24	42	60.5	81	98	37	50	70	83	83	153	103	84.5			
110	9.6	—	18.1	21.6	8.4	—	15.5	18.2	18.2	—	2,200	1,800			
110-120	—	9.4-10.8	—	—	—	8.0-9.2	—	—	—	—	—	—			
120	8.6	—	16.4	19.5	7.5	—	14.2	16.5	16.5	—	10,800	7,360			
220	4.7	—	8.8	10.7	4.1	—	7.7	9.1	9.1	—	10,800	7,360			
220-240	—	4.7-5.4	—	—	—	4.0-4.6	—	—	—	18,820	—	—			
240	4.9	—	8.2	9.8	4.3	—	7.1	8.3	8.3	—	12,100	9,120			

DC Coil Ratings

Voltage (V)	Rated Current (mA) ±15% at 20°C				Coil Resistance (Ω) ±10% at 20°C				Operation Characteristics (against rated values at 20°C)		
	SPDT	DPDT	3PDT	4PDT	SPDT	DPDT	3PDT	4PDT	Max. Continuous Applied Voltage	Pickup Voltage	Dropout Voltage
6	128	150	240	250	47	40	25	24	110%	80% maximum	10% minimum
12	64	75	120	125	188	160	100	96			
24	32	36.9	60	62	750	650	400	388			
48	18	18.5	30	31	2,660	2,600	1,600	1,550			
100-110	—	8.2-9.0	—	—	—	12,250	—	—			
110	8	—	12.8	15	13,800	—	8,600	7,340			



Standard coil voltages are in BOLD.

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers



RH Series

Relays & Sockets

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

Contact Ratings

Model	Continuous Current	Maximum Contact Capacity				
		Allowable Contact Power		Rated Load		
		Resistive Load	Inductive Load	Voltage (V)	Res. Load	Ind. Load
SPDT	10A	1540VA 300W	990VA 210W	110 AC	10A	7A
				220 AC	7A	4.5A
				30 DC	10A	7A
DPDT 3PDT 4PDT	10A	1650VA 300W	1100VA 225W	110 AC	10A	7.5A
				220 AC	7.5A	5A
				30 DC	10A	7.5A

Note: Inductive load for the rated load — cos φ = 0.3, L/R = 7 ms



TÜV Ratings

Voltage	RH1	RH2	RH3	RH4
240V AC	10A	10A	7.5A	7.5A
30V DC	10A	10A	10A	10A

AC: cos φ = 1.0, DC: L/R = 0 ms



UL Ratings

Voltage	Resistive			General Use			Horse Power Rating		
	RH1 RH2	RH3	RH4	RH1 RH2	RH3	RH4	RH1 RH2	RH3	RH4
240V AC	10A	7.5A	7.5A	7A	6.5A	5A	1/3 HP	1/3 HP	—
120V AC	—	10A	10A	—	7.5A	7.5A	1/6 HP	1/6 HP	—
30V DC	10A	10A	—	7A	—	—	—	—	—
28V DC	—	—	10A	—	—	—	—	—	—

CSA Ratings

Voltage	Resistive				General Use				Horse Power Rating
	RH1	RH2	RH3	RH4	RH1	RH2	RH3	RH4	RH1, 2, 3
240V AC	10A	10A	—	7.5A	7A	7A	7A	5A	1/3 HP
120V AC	10A	10A	10A	10A	7.5A	7.5A	—	7.5A	1/6 HP
30V DC	10A	10A	10A	10A	7A	7.5A	—	—	—

Socket Specifications

	Sockets	Terminal	Electrical Rating	Wire Size	Torque	
DIN Rail Mount Sockets	SH1B-05	(Coil) M3 screws (contact) M3.5 screws with captive wire clamp	250V, 10A	Maximum up to 2-#12AWG	5.5 - 9 in•lbs 9 - 11.5 in•lbs	
	SH2B-05 SH3B-05 SH4B-05	M3.5 screws with captive wire clamp	300V, 10A	Maximum up to 2-#12AWG	9 - 11.5 in•lbs	
	Finger-safe DIN Rail Mount	SH1B-05C	(coil) M3 screws (contact) M3.5 screws with captive wire clamp, fingersafe	250V, 10A	Maximum up to 2-#12AWG	5.5 - 9 in•lbs 9 - 11.5 in•lbs
		SH2B-05C SH3B-05C SH4B-05C	M3.5 screws with captive wire clamp, fingersafe	300V, 10A	Maximum up to 2-#12AWG	9 - 11.5 in•lbs
Through-Panel Mount Socket	SH1B-51 SH2B-51 SH3B-51 SH4B-51	Solder	300V, 10A	—	—	
PCB Mount Socket	SH1B-62	PCB mount	250V, 10A	—	—	
	SH2B-62 SH3B-62 SH4B-62	PCB mount	300V, 10A	—	—	

Accessories

Description	Appearance	Use with	Part No.	Remarks
Aluminum DIN Rail (1 meter length)		All DIN rail sockets	BNDN1000	IDEC offers a low-profile DIN rail (BNDN1000). The BNDN1000 is designed to accommodate DIN mount sockets. Made of durable extruded aluminum, the BNDN1000 measures 0.413 (10.5mm) in height and 1.37 (35mm) in width (DIN standard). Standard length is 39" (1,000mm).
DIN Rail End Stop		DIN rail	8NL5	9.1 mm wide.
Replacement Hold-Down Spring Anchor.		DIN mount sockets and hold down springs.	Y77B-011	For use on DIN rail mount socket when using pullover wire hold down spring. 2 pieces included with each socket.

Relays & Sockets

RH Series



Specifications

Contact Material	Silver cadmium oxide	
Contact Resistance ¹	50mΩ maximum	
Minimum Applicable Load	24V DC, 30 mA; 5V DC, 100 mA (reference value)	
Operate Time ²	SPDT DPDT	20ms maximum
	3PDT 4PDT	25ms maximum
Release Time ²	SPDT DPDT	20ms maximum
	3PDT 4PDT	25ms maximum
Power Consumption (approx.)	SPDT	AC: 1.1VA (50Hz), 1VA (60Hz) DC: 0.8W
	DPDT	AC: 1.4VA (50Hz), 1.2VA (60Hz) DC: 0.9W
	3PDT	AC: 2VA (50Hz), 1.7VA (60Hz) DC: 1.5W
	4PDT	AC: 2.5VA (50Hz), 2VA (60Hz) DC: 1.5W
Insulation Resistance	100MΩ minimum (500V DC megger)	
Dielectric Strength ³	SPDT	Between live and dead parts: 2,000V AC, 1 minute
		Between contact and coil: 2,000V AC, 1 minute
		Between contacts of the same pole: 1,000V AC, 1 minute
	DPDT 3PDT 4PDT	Between live and dead parts: 2,000V AC, 1 minute
		Between contact and coil: 2,000V AC, 1 minute
		Between contacts of different poles: 2,000V AC, 1 minute
		Between contacts of the same pole: 1,000V AC, 1 minute
Operating Frequency	Electrical:	1,800 operations/hour maximum
	Mechanical:	18,000 operations/hour maximum
Vibration Resistance	Damage limits:	10 to 55Hz, amplitude 0.5 mm
	Operating extremes:	10 to 55Hz, amplitude 0.5 mm
Shock Resistance	Damage limits:	1,000m/s ² (100G)
	Operating extremes:	200m/s ² (20G - SPDT, DPDT) 100m/s ² (10G - 3PDT, 4PDT)
Mechanical Life	50,000,000 operations minimum	
Electrical Life	DPDT	500,000 operations minimum (120V AC, 10A)
	SPDT 3PDT 4PDT	200,000 operations minimum (120V AC, 10A)
Operating Temperature ⁴	SPDT	-25 to +50°C (no freezing)
	DPDT 3PDT 4PDT	-25 to +40°C (no freezing)
Operating Humidity	45 to 85% RH (no condensation)	
Weight (approx.)	SPDT: 24g, DPDT: 37g, 3PDT: 50g, 4PDT: 74g	



Note: Above values are initial values.

1. Measured using 5V DC, 1A voltage drop method
2. Measured at the rated voltage (at 20°C), excluding contact bouncing
Release time of relays with diode: 40 ms maximum
3. Relays with indicator or diode: 1000V AC, 1 minute
4. For use under different temperature conditions, refer to Continuous Load Current vs. Operating Temperature Curve. The operating temperature range of relays with indicator or diode is -25 to +40°C.

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers



Characteristics (Reference Data)

Switches & Pilot Lights

Display Lights






Timers

Terminal Blocks




Circuit Breakers

Electrical Life Curves



AC Load

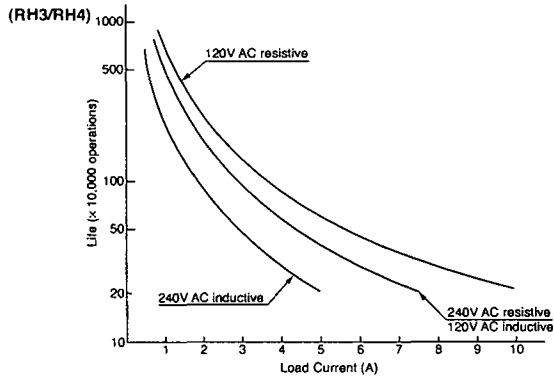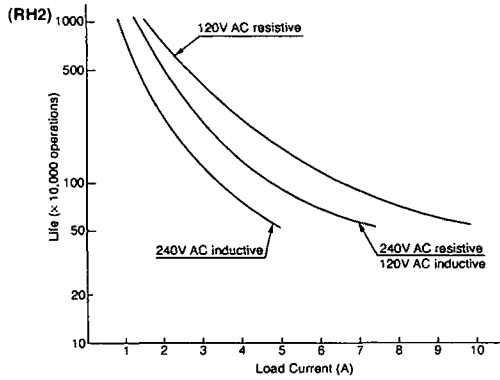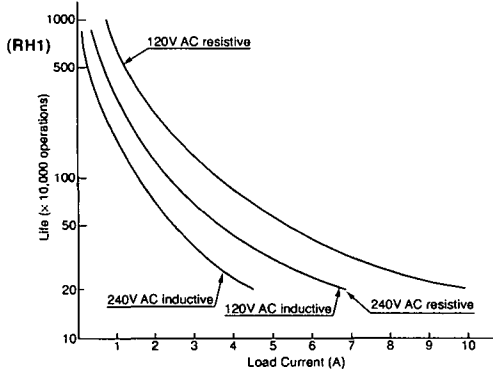

DC Load

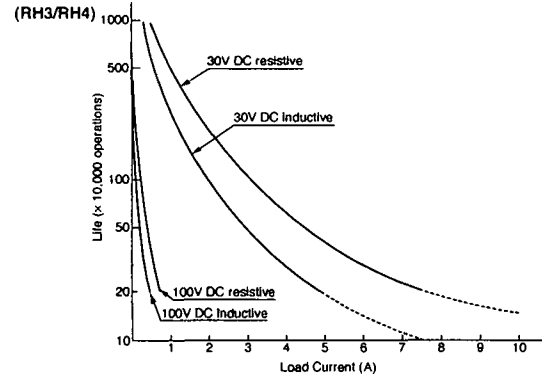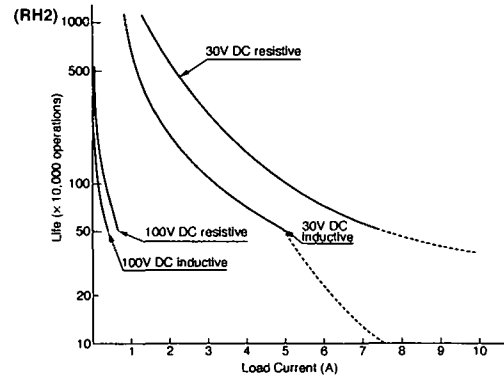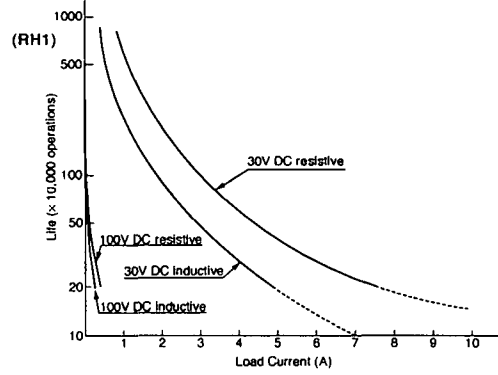

Maximum Switching Capacity


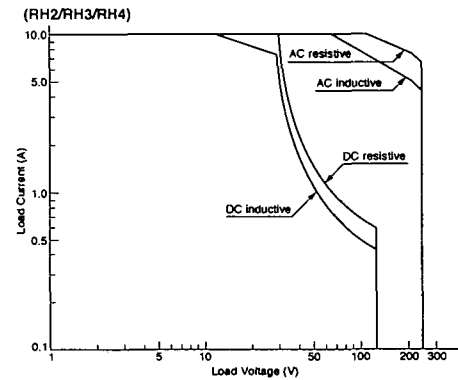
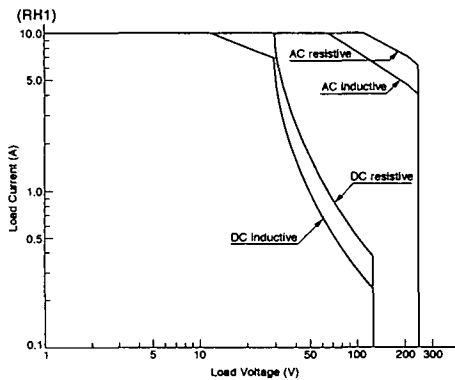


Relays & Sockets


RH Series




Continuous Load Current vs. Operating Temperature Curve (Basic Type, With Check Button, and Top Bracket Mounting Type)

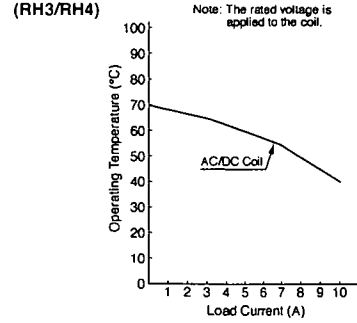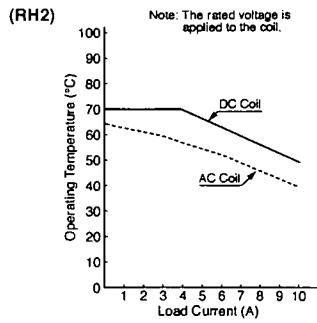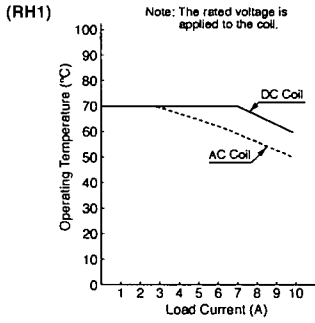


Internal Connection (View from Bottom)
Basic Type

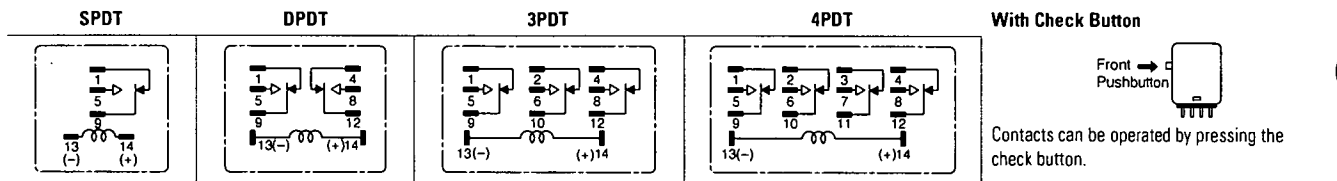

With Indicator (-L type)

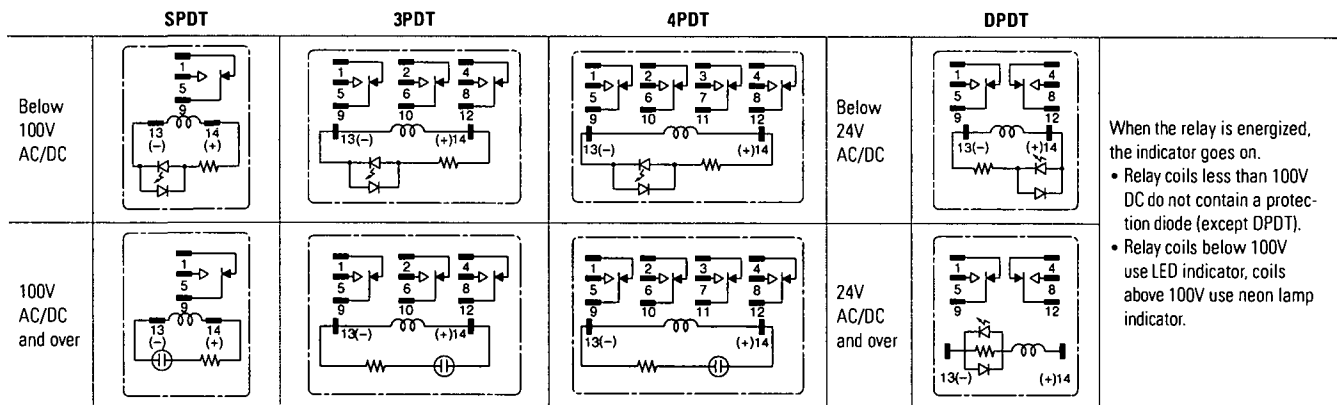

With Diode (-D type)

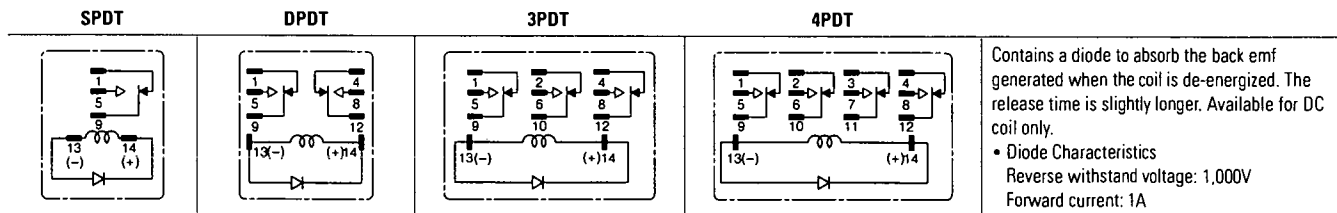

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers


Terminal Blocks

Circuit Breakers

With Indicator LED & Diode (-LD type)

Switches & Pilot Lights


Display Lights

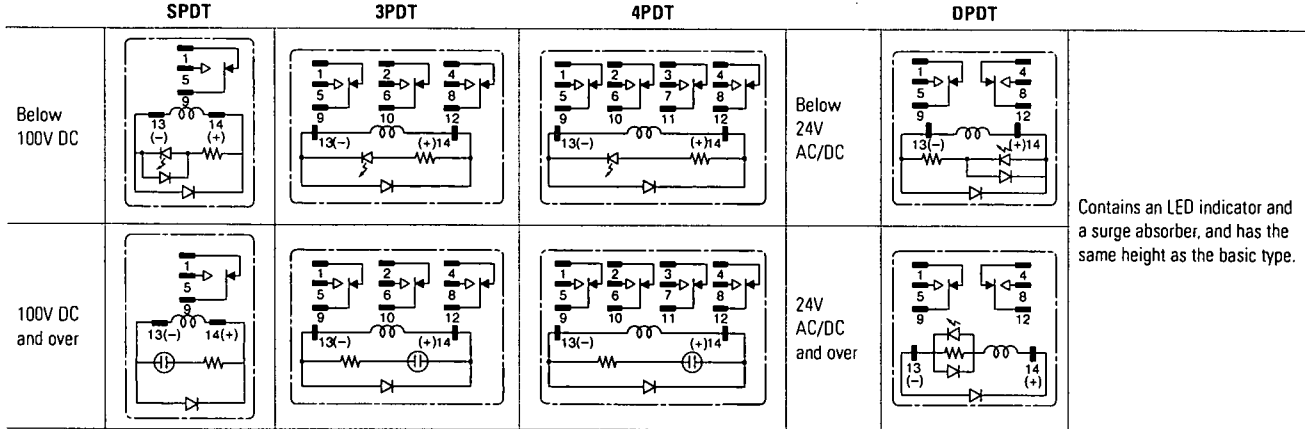


Dimensions (mm)

Relays & Sockets


RH1B-U/RH1B-UL/RH1B-UD/RH1B-ULD

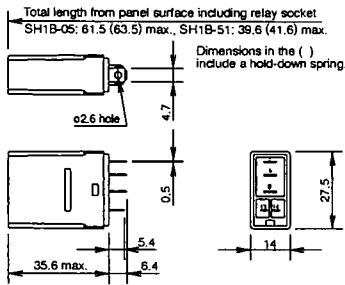

RH2B-U/RH2B-UL/RH2B-UD/RH2B-ULD

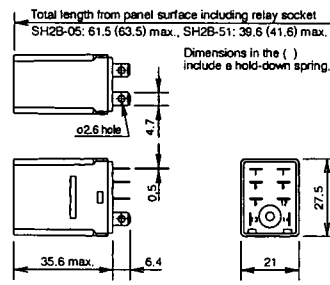


RH3B-U/RH3B-UL/RH3B-D/RH3B-LD

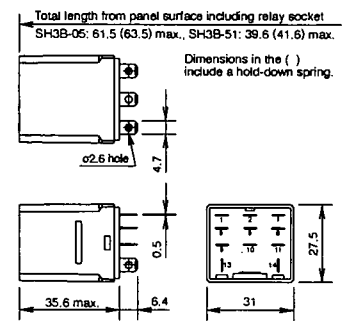


Timers


RH4B-U/RH4B-UL/RH4B-UD/RH4B-LD

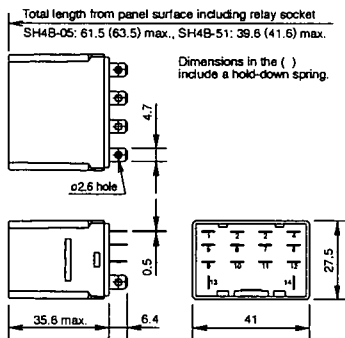

RH1B-UT

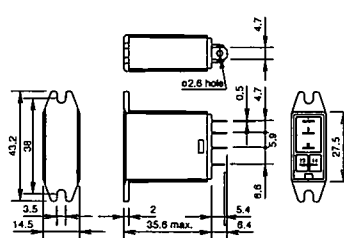


RH2B-UT

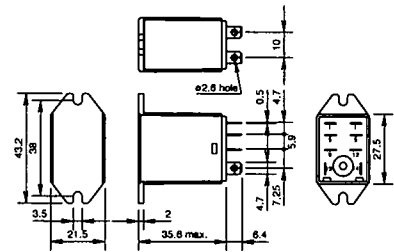


Terminal Blocks

RH3B-UT

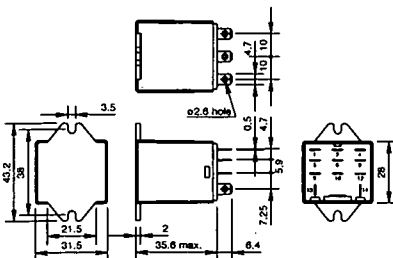

RH4B-UT

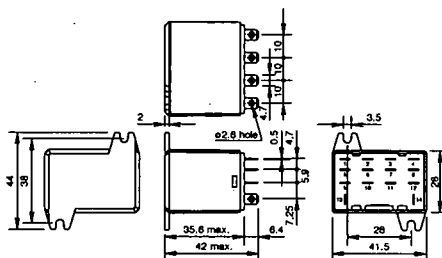

Circuit Breakers

Relays & Sockets

RH Series



Dimensions con't (mm)

Switches & Pilot Lights

Display Lights


Relays & Sockets

Timers


Terminal Blocks

Circuit Breakers


RH1V2-U/RH1V2-UD

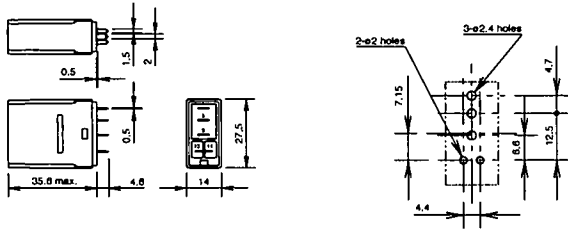


RH2V2-U/RH2V2-UL/RH2V2-UD

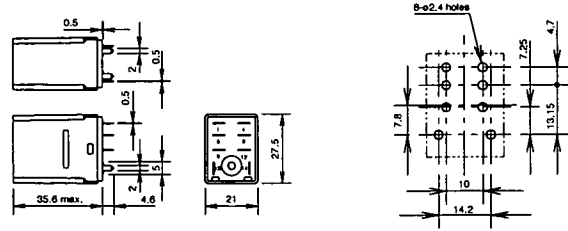

RH3V2-U/RH3V2-UL/RH3V2-D

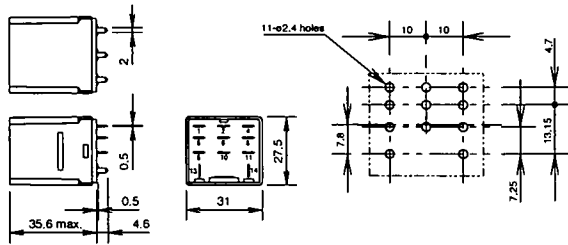


RH4V2-U/RH4V2-UL/RH4V2-UD

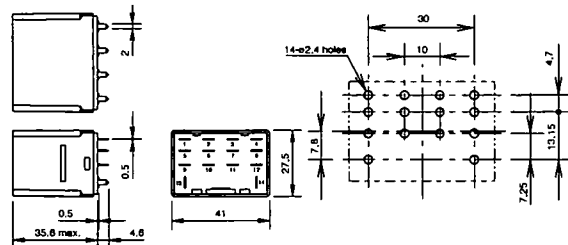


Standard DIN Rail Mount Sockets


SH1B-05

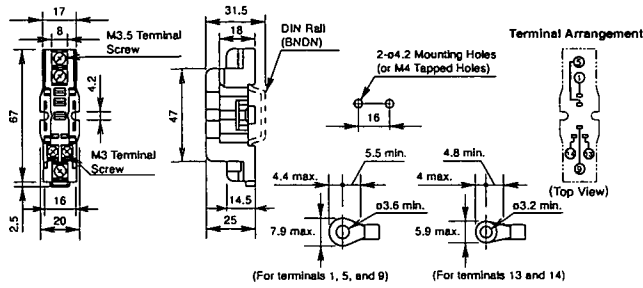


SH2B-05

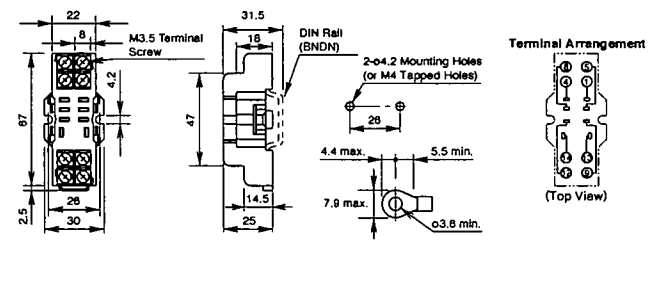

SH3B-05

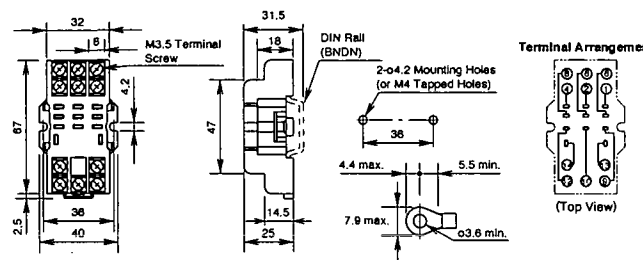

SH4B-05

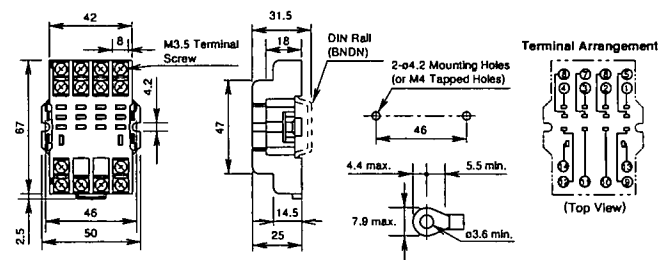


USA: 800-262-IDEC

Canada: 888-317-IDEC


Dimensions con't (mm)

Finger-safe DIN Rail Mount Sockets


SH1B-05C

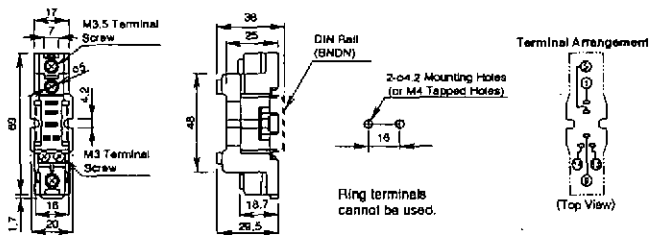


SH2B-05C

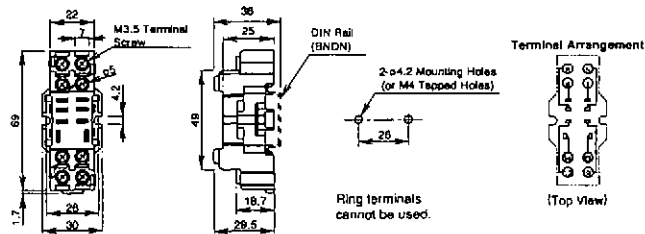

SH3B-05C

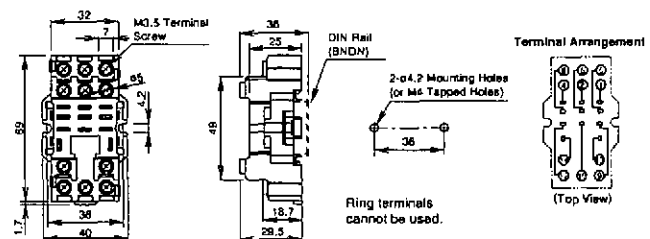


SH4B-05C

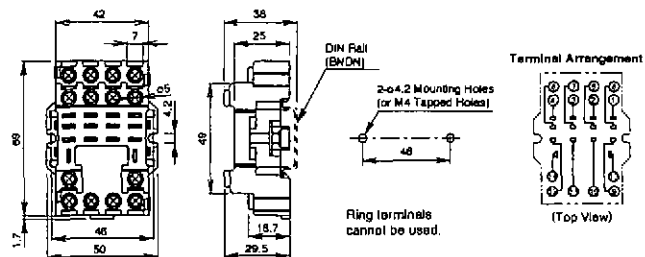


Through Panel Mount Socket


SH1B-51

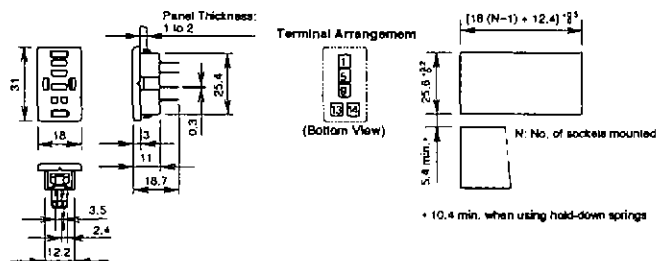


SH2B-51

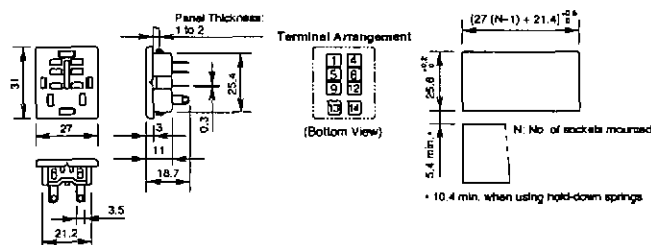

SH3B-51

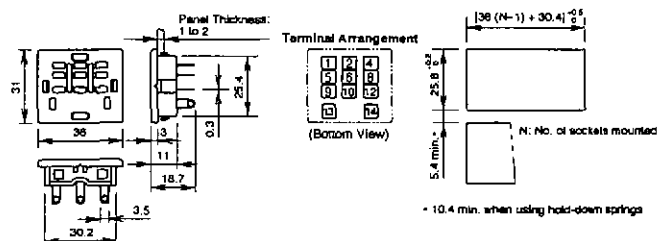

SH4B-51

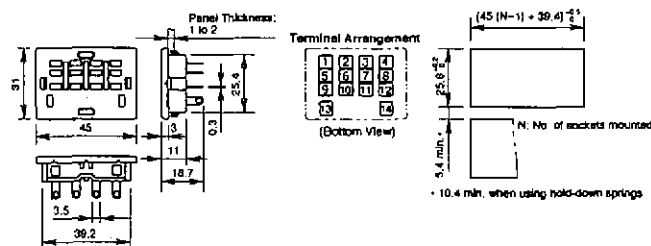

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers


Terminal Blocks

Circuit Breakers


Dimensions con't (mm)

PCB Mount Sockets


SH1B-62

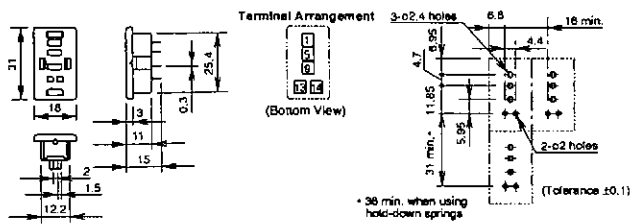


SH2B-62

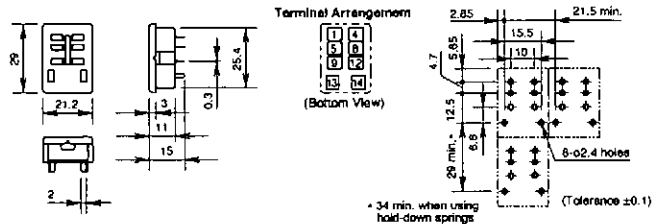

SH3B-62

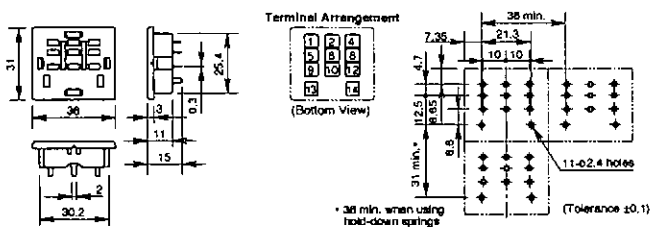

SH4B-62

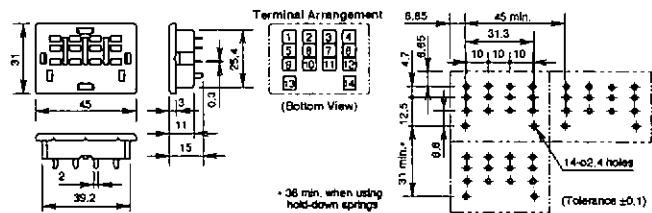

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers


Terminal Blocks

Circuit Breakers


Operating Instructions

Driving Circuit for Relays


- To ensure correct relay operation, apply rated voltage to the relay coil.
- Input voltage for the DC coil:
A complete DC voltage is best for the coil power to make sure of stable relay operation. When using a power supply containing a ripple voltage, suppress the ripple factor within 5%. When power is supplied through a rectification circuit, the relay operating characteristics, such as pickup voltage and dropout voltage, depend on the ripple factor. Connect a smoothing capacitor for better operating characteristics as shown below.

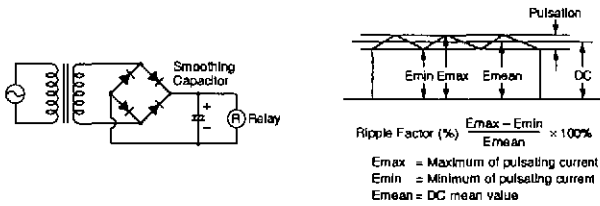

- Leakage current while relay is off:
When driving an element at the same time as the relay operation, special consideration is needed for the circuit design. As shown in the incorrect circuit below, leakage current (I_o) flows through the relay coil while the relay is off. Leakage current causes coil release failure or adversely affects the vibration resistance and shock resistance. Design a circuit as shown in the correct example.

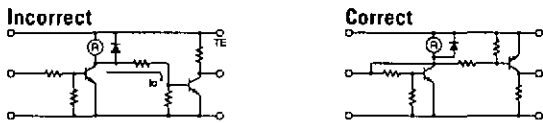

- Surge suppression for transistor driving circuits:
When the relay coil is turned off, a high-voltage pulse is generated, causing a transistor to deteriorate and sometimes to break. Be sure to connect a diode to suppress the back electromotive force. Then, the coil release time becomes slightly longer. To shorten the coil release time, connect a Zener diode between the collector and emitter of the transistor. Select a Zener diode with a Zener voltage slightly higher than the power voltage.

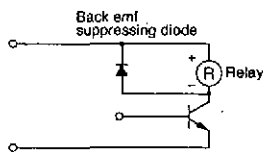

Protection for Relay Contacts

- The contact ratings show maximum values. Make sure that these values are not exceeded. When an inrush current flows through the load, the contact may become welded. If this is the case, connect a contact protection circuit, such as a current limiting resistor.
- Contact protection circuit:
When switching an inductive load, arcing causes carbides to form on the contacts, resulting in increased contact resistance. In consideration of contact reliability, contact life, and noise suppression, use of a surge absorbing circuit is recommended. Note that the release time of the load becomes slightly longer. Check the operation using the actual load. Incorrect use of a contact protection circuit will adversely affect switching characteristics. Four typical examples of contact protection circuits are shown in the following table:

RC		This protection circuit can be used when the load impedance is smaller than the RC impedance in an AC load power circuit. • R: Resistor of approximately the same resistance value as the load • C: 0.1 to 1 μF
		This protection circuit can be used for both AC and DC load power circuits. R: Resistor of approximately the same resistance value as the load C: 0.1 to 1 μF
Diode		This protection circuit can be used for DC load power circuits. Use a diode with the following ratings. Reverse withstand voltage: Power voltage of the load circuit x 10 Forward current: More than the load current
Varistor		This protection circuit can be used for both AC and DC load power circuits. For a best result, when using a power voltage of 24 to 48V AC/DC, connect a varistor across the load. When using a power voltage of 100 to 240V AC/DC, connect a varistor across the contacts.

- Do not use a contact protection circuit as shown below:

	This protection circuit is very effective in arc suppression when opening the contacts. But, the capacitor is charged while the contacts are opened. When the contacts are closed, the capacitor is discharged through the contacts, increasing the possibility of contact welding.
	This protection circuit is very effective in arc suppression when opening the contacts. But, when the contacts are closed, a current flows to charge the capacitor, causing contact welding.

Generally, switching a DC inductive load is more difficult than switching a DC resistive load. Using an appropriate arc suppressor, however, will improve the switching characteristics of a DC inductive load.

Soldering

- When soldering the relay terminals, use a soldering iron of 30 to 60W, and quickly complete soldering (within approximately 3 seconds).
- Use a non-corrosive rosin flux.

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

Operating Instructions con't

Other Precautions

1. General notice:

To maintain the initial characteristics, do not drop or shock the relay.

The relay cover cannot be removed from the base during normal operation. To maintain the initial characteristics, do not remove the relay cover.

Use the relay in environments free from condensation, dust, sulfur dioxide (SO₂), and hydrogen sulfide (H₂S).

Make sure that the coil voltage does not exceed applicable coil voltage range.

2. UL and CSA ratings may differ from product rated values determined by IDEC.


3. Do not use relays in the vicinity of strong magnetic field, as this may affect relay operation.

Safety Precautions

- Turn off the power to the relay before starting installation, removal, wiring, maintenance, and inspection of the relays. Failure to turn power off may cause electrical shock or fire hazard.
- Observe specifications and rated values, otherwise electrical shock or fire hazard may be caused.
- Use wires of the proper size to meet voltage and current requirements. Tighten the terminal screws on the relay socket to the proper tightening torque.
- Surge absorbing elements on AC relays with RC or DC relays with diode are provided to absorb the back electromotive force generated by the coil. When the relay is subject to an excessive external surge voltage, the surge absorbing element may be damaged. Add another surge absorbing provision to the relay to prevent damage.

Precautions for the RU Relays

- Before operating the latching lever of the RU relay, turn off the power to the RU relay. After checking the circuit, return the latching lever to the original position.
- Do not use the latching lever as a switch. The durability of the latching lever is a minimum of 100 operations.
- When using DC loads on 4PDT relays, apply a positive voltage to terminals of neighboring poles and a negative voltage to the other terminals of neighboring poles to prevent the possibility of short circuits.
- DC relays with a diode have a polarity in the coil terminals. Apply the DC voltage to the correct terminals.

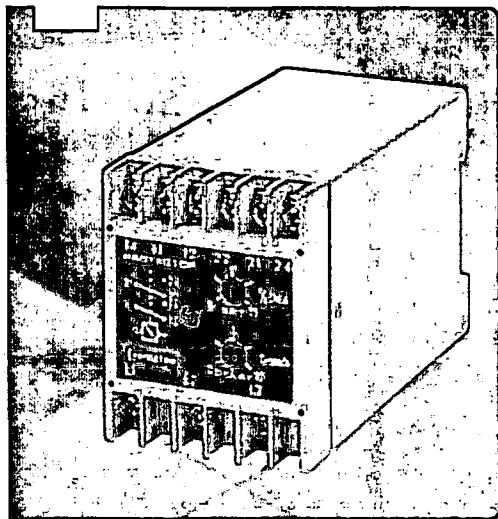

250 Series DIN-rail and Wall Mounted Relays

Phase Balance

The 250 series phase balance protector module provides continuous surveillance of a three-phase, three- or four-wire system and monitors the correct phase rotation or sequence of three-phase supply systems. The module protects against phase loss, reversal or sequence, phase unbalance and system under-voltage.

Operation

Rotating machines are particularly vulnerable to incorrect phase sequence. Three-phase motors can rotate in the wrong direction, potentially leading to physical damage or the risk of injury to personnel, yet voltage and current readings may appear normal. If one phase is lost because of a blown fuse, electric motors can continue to operate (single-phasing) which can result in severe electrical or mechanical damage. This relay has the added advantage that it will detect the phantom or regenerated phase that can be caused by a single-phase failure on some equipment or when running motors at low load levels.

An unbalanced supply voltage can lead to temperature rises in motors. An unbalanced voltage as little as 10% can increase operating temperature to 150% of normal. For permanent installations, this relay should be used to monitor the incoming supply, protecting all equipment against incorrect connection at initial installation or after maintenance work. Rotating machines that cannot tolerate reverse rotation or pose significant risk to personnel under this condition should be individually protected with this relay. The possibility of incorrect supply connection is much more likely in portable equipment or marine applications.

The protector continuously monitors the three-phase supply. With the correct phase sequence applied and all three voltages balanced within the required limits, the front panel LED will illuminate and the output relay will be energised. An incorrect sequence, missing phase, out of balance or under-voltage condition will de-energise the relay and the LED will be extinguished.

The set point control allows adjustment of the voltage matching between 5% and 15%. The time delay function operates only for the voltage unbalance condition. The delay can be used to prevent nuisance tripping due to short term unbalance situations. Incorrect phase rotation, a missing phase or an under-voltage condition trip the relay immediately.

Features

- Three-phase, three or four-wire
- Adjustable set point
- Adjustable time delay
- Internal differential
- LED trip indication
- Double-pole relay contacts
- Automatic reset

Benefits

- Monitoring of correct phase rotation
- Protects against phantom or regenerated phase voltage
- Protection against phase loss, reversal or sequence
- Under-voltage and unbalanced voltage monitoring
- Prevents reverse rotation of motor driven equipment
- Ensures correct engine rotation
- Protects portable electrical equipment
- Nuisance tripping avoidance

Applications

- Marine panels
- Switchgear
- Distribution systems
- Generator sets
- Control panels
- Process control
- Motor protection
- Transformers
- Overload protection

Product Codes


Relay	Protection	ANSI no.	Cat. no.
3-phase 3- or 4-wire	Phase loss and unbalance 5-15%	47	252-PSF
3-phase 3- or 4-wire	Phase loss, unbalance and under-voltage 5-15%	47/27	252-PSG

Please specify system voltage, frequency and required options at time of ordering.

Specification - Phase Balance

Nominal voltage	110V, 120V, 208V, 220V, 230V, 240V, 277V, 380V, 400V, 415V, 440V or 480V
System frequency	50 or 60Hz
Voltage burden	3VA approx.
Overload	1.2 x rating continuously, 1.5 x rating for 10 x seconds
Set point repeatability	>0.5% of full span
Under-voltage set point	Pre-set at 15% of nominal voltage. Other values 10 to 30% to order (model 252-P5G only)
Trip level adjustment	Phase unbalance adjustable 5 to 15%
Time delay	10 seconds as standard. Up to 30 seconds available
Auxiliary voltage burden	4VA (max)
Output relay	2-pole change over
Relay contact rating	AC: 240V 5A, non inductive DC: 24V 5A resistive
Relay mechanical life	0.2 million operations at rated loads
Relay reset	Automatic
Operating temperature	0°C to +60°C (0°C to +40°C for UL models)
Storage temperature	-20°C to +70°C
Temperature co-efficient	0.05% per °C
Interference immunity	Electrical stress surge withstand and non-function to ANSI/IEEE C37 90a
Enclosure style	DIN-rail with wall mounting facility
Material	Flame retardant polycarbonate/ABS
Enclosure integrity	IP50
Model 252 dimensions	55mm (2.2") wide x 70mm (2.8") high x 112mm (4.4") deep
Weight	0.4Kg approx.


Connections

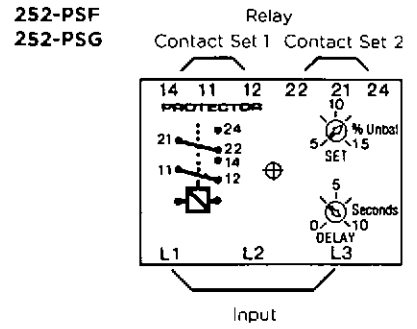

Note: Neutral connection not required.

Dimensions

Model 252

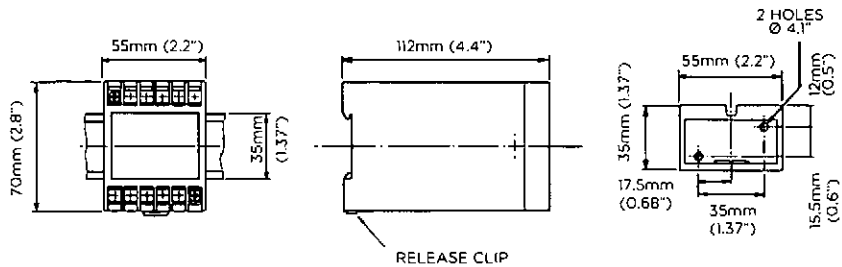





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

CHASSIS

1. CD-2 CHASSIS TECHNICAL DETAILS




Panelboards, loadcentres and accessories

2

CONCEPT•PLUS and Premier busbar chassis – Din-T

- Standards AS/NZS 3439
- Current rating 250 A
- Withstand rating 250 A/20 kA for 0.2 sec
- Splayed busbar to suit 160 A & 250 A switch
- Top and bottom feed – splayed top & bottom
- Tee-offs stripped and 50% capped
- Top power feed stripped and capped
- Full 35 mm DIN rail, improved MCB mounting security
- Improved insulation coating

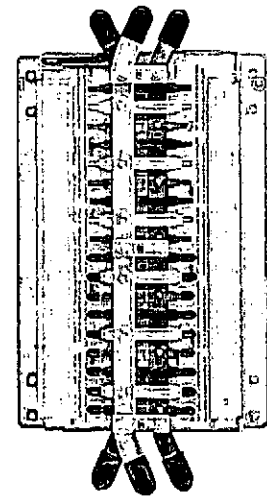

3 pole CD chassis to suit Din-T MCBs

Concept Din-T – 250 to suit Din-T MCBs (18 mm pole pitch) ¹⁾

Pole capacity	250 A Cat. No. ¹⁾
12	CD-2-12/18-3U
18	CD-2-18/18-3U
24	CD-2-24/18-3U
30	CD-2-30/18-3U
36	CD-2-36/18-3U
42	CD-2-42/18-3U
48	CD-2-48/18-3U
54	CD-2-54/18-3U
60	CD-2-60/18-3U
72	CD-2-72/18-3U
78	CD-2-78/18-3U
84	CD-2-84/18-3U
96	CD-2-96/18-3U

- Notes: ¹⁾ 4 pole and other special configurations available to special order refer NHP.
²⁾ 'OFF' (line) side of MCB connects to chassis tee-off.
 MCB DIN clips may be disengaged or removed when mounting onto "CD" chassis.
 If applicable use insulated tool provided to disengage DIN clip when removing MCB from chassis.
³⁾ Not suitable for CONCEPT economy Panelboards. Contact NHP for availability.
 Available on indent only.

Accessories

Description	Cat. No.
Split tariff kit 250/355 A (supplied loose)	STKCD
Split tariff kit (fitted)	REFER NHP
Plastic tee-off cap 250 / 355 A	CD250TOPC

Technical data – CD/CT busbar chassis

Description	CD-250 A
Busbar rating (Amp)	250
Voltage rating (V)	415
Short circuit rating (kA)	20
Short circuit time (sec)	0.2
Insulation material	Polyolefin PPA-441

Catalogue number structure – CD/CT busbar chassis

XX	X	XX	XX	X
Type	Current rating	No. of ways	Pole pitch (mm)	No. of phases
CD Din-T	2 250 A	12	18 Din-T	2 1 P + N (red, black)
CDH Din-T10H	3 355 A	18	27 Din-T10H	3 3 P (red, white, blue)
CT Safe-T	Etc.	24	27/18 Hybrid Din-T10H/Din-T	4 3 P + N (red, white, blue, black)
		30	25 Safe-T	
		36 etc.		
		27 mm/18 mm		
		6/24		
		12/60		







Panelboards, loadcentres and accessories


Dimensions (mm)

2

CD chassis 250 to suit Din-T6, 10 and 15

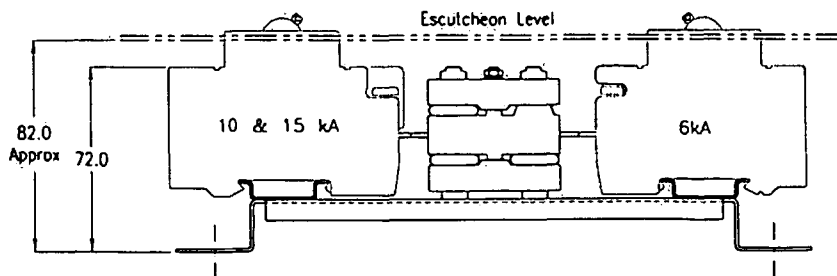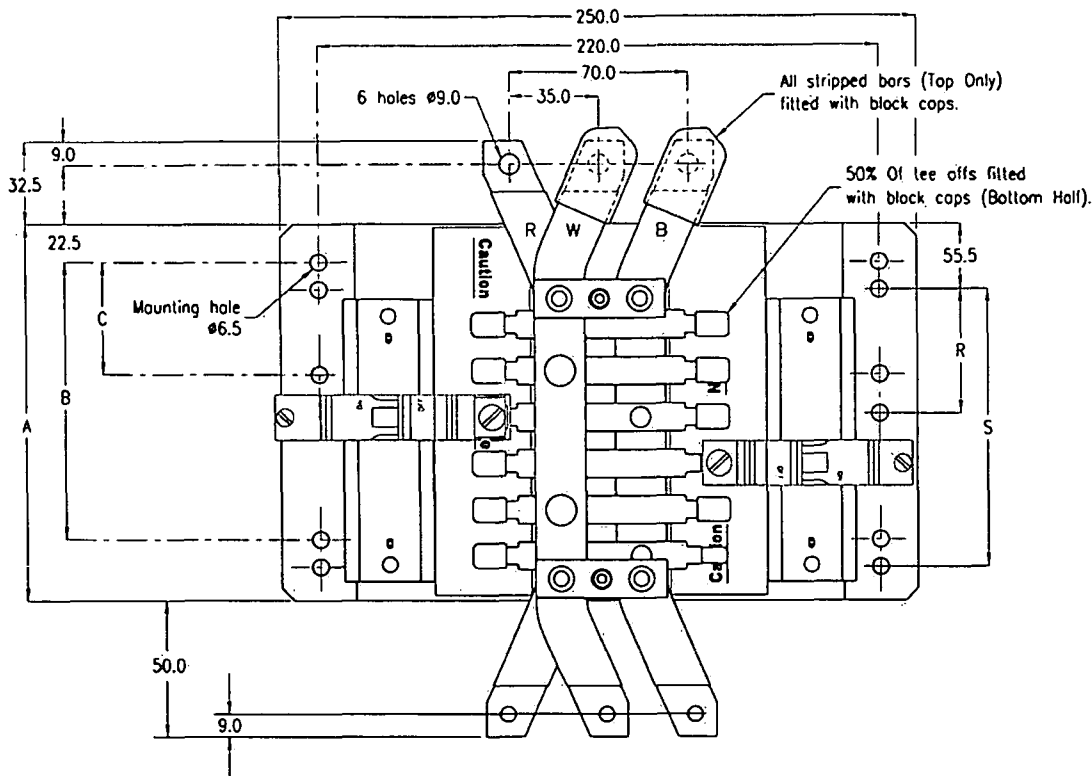

Escutcheon cut-out details

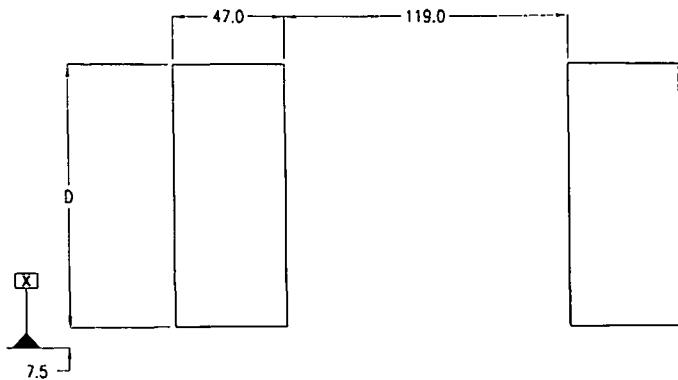

Dimensions (mm)

Chassis size ¹⁾	A	B	C	D	R	S
CD-X-12/18-3U	152	100	-	110	-	100
CD-X-18/18-3U	206	100	-	164	-	100
CD-X-24/18-3U	260	100	-	218	-	100
CD-X-30/18-3U	314	200	-	272	-	200
CD-X-36/18-3U	368	300	-	326	-	300
CD-X-42/18-3U	422	300	-	280	-	300
CD-X-48/18-3U	476	400	-	434	-	400
CD-X-54/18-3U	530	400	-	488	-	400
CD-X-60/18-3U	584	500	-	542	-	500
CD-X-72/18-3U	692	600	-	650	-	600
CD-X-78/18-3U	745	700	300	704	300	700
CD-X-84/18-3U	800	700	300	758	300	700
CD-X-96/18-3U	908	800	400	866	400	800

Notes: ¹⁾ "X" insert 2 = 250 A or 3 = 355 A, current rating does not effect above dims.
 Maximum current rating of tee-off = 100 A.
 'OFF' (line) side of MCB connects to chassis tee-off.
 MCB DIN clips may be disengaged or removed when mounting onto "CD" chassis.
 Use insulated tool provided to disengage DIN clip when removing MCB from chassis.



□





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

FUSE & FUSE HOLDER

1. FUSE LINKS TECHNICAL DETAILS
2. FUSE HOLDER TECHNICAL DETAILS

BS compact fuse links

- Complies with BS 88
- Reduced dimensions
- Low watts loss

Refer catalogue NF

Clip-in offset tags

Rating (A)	BS 88 ref.	Overall length (mm)	Overall Dia. (mm)	Cat. No. ¹⁾			
2	F1	60	14	NNS 2			
4				NNS 4			
6				NNS 6			
10				NNS 10			
16				NNS 16			
20				NNS 20			
25				NNS 25			
32				NNS 32			
20M25				NNS 20M25			
20M32				NNS 20M32			
20				F2	68	17	NES 20
25							NES 25
32	NES 32						
40	NES 40						
50	NES 50						
63	NES 63						

FUSES PROVIDE SUPERIOR SHORT CIRCUIT PROTECTION.



NNS 2



NES 20



NNIT 16



NTIA 16

Bolted pattern offset tags

Rating (A)	BS 88 ref.	Fixing centres (mm)	Cat. No. ¹⁾
2	A1	44.5	NNIT 2
4			NNIT 4
6			NNIT 6
10			NNIT 10
16			NNIT 16
20			NNIT 20
25			NNIT 25
32			NNIT 32
20M25			NNIT 20M25
20M32			NNIT 20M32
32M40			NNIT 32M40
32M50			NNIT 32M50
32M63	NNIT 32M63		
2	A2	73	NTIA 2
4			NTIA 4
6			NTIA 6
10			NTIA 10
16			NTIA 16
20			NTIA 20
25			NTIA 25
32			NTIA 32
32M40			NTIA 32M40
32M50			NTIA 32M50
32M63			NTIA 32M63

Note: ¹⁾ 'M' in catalogue No. denotes motor starting type.



DIN and BS fuse link selection chart

BS Fuses

Switch-fuses								Fuse type Cat. No.
800	630	400	315	250	200	160	125	Prefix
								NNS_
								NNIT_
						✓	✓	NTIA_
						✓	✓	NTIS_
						✓	✓	NOS_
						✓		NTCP_
								NTFP_
								NTSLOO_
		✓	✓	✓	✓			NTBC_
		✓	✓	✓	✓			NTC_
		✓	✓	✓	✓			NTF_
		✓	✓	✓				NTKF_
								NTSL3_
		✓						NTMF_
✓	✓							NTM_
✓	✓							NTTM_
✓								NTLM_

NHP HRC fuse holders									Fuse type Cat. No.
NC (Bolt-in)						NV (Clip-in)			Prefix
315	200	100	63	32	20	63	32	20	
							✓	✓	NNS_
						✓			NES_
				✓	✓				NNIT_
	✓ ¹⁾	✓	✓						NTIA_
	✓ ²⁾	✓	✓ ³⁾						NTIS_
	✓ ¹⁾	✓							NOS_
	✓								NTCP_
	✓								NTFP_
✓									NTBC_
✓									NTC_
✓									NTF_
✓									NTKF_

Quick - Link fuse reference guide

DIN Fuses

Switch-fuses						Fuse type Cat. No.
800	630	400	250	160	125	Prefix
				✓	✓	N00_
			✓			N1_
		✓				N2_
✓	✓					N3_

- Legend:**
- ✓ Fuse links fit direct.
 - ✓¹⁾ Fuses require 100MFLK adaptor, see page 11-107.
 - ✓²⁾ 'M' type (motor rated) NTIS not suitable for NC63... Use NC100 fuse holder.

11

HRC

High rupturing capacity (HRC) or High breaking capacity denotes the ability of a fuse-link to interrupt extremely high fault currents, usually up to 80kA.

Current limiting fuse-link

A fuse-link that limits the circuit current during its operation to a value much lower than the peak value of the prospective current. In practice, the terms HRC and current limiting are synonymous.

Rated breaking capacity

The highest value of fault current that a fuse-link has been tested to interrupt eg. 80kA.

Rated voltage

The maximum system voltage that the fuse-link is designed to interrupt. Rated voltages may be in AC, DC, or both.

Current rating

The value of current that a fuse-link will carry continuously without deterioration under specified conditions.

Minimum fusing current

The minimum value of current that will cause melting of the fuse element.

Power dissipation

The power released in a fuse-link carrying rated current under a specified condition, usually expressed in watts.

Time current characteristics (refer table 1)

A curve detailing the pre-arcing or operating time as a function of prospective current.

Let through characteristics (I²t) (refer table 2)

A curve or chart showing values pre-arcing and operating let through energies as a function of prospective current, I²t is proportional to energy in Amp² seconds.


Cut off characteristics (refer table 3)

A curve detailing the cut off current as a function of prospective current. Cut off current being the maximum instantaneous value of current let through by the fuse-link during operation.

Discrimination (refer tables 4 and 5)


Discrimination is the ability of fuse-links to operate selectively and to disconnect only the parts of the circuit that are subject to faults. Discrimination can be checked by ensuring that the time current characteristics, including their tolerances, do not overlap at any point and that the total let through energy, (I²t) of the downstream (or minor) fuse-link does not exceed the pre-arcing energy (I²t) of the upstream (or major) fuse-link at the applied system voltage. Discrimination is normally achieved with the ratio of 1.6 between upstream and downstream fuses.

Table 1

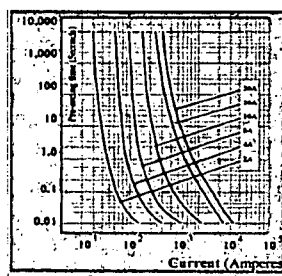


Typical time current curves

Table 2

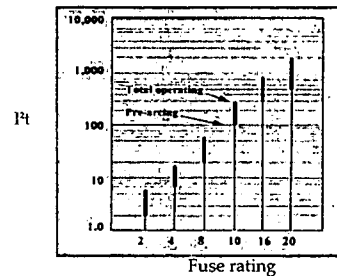


Operating and pre-arcing I²t values

Table 3

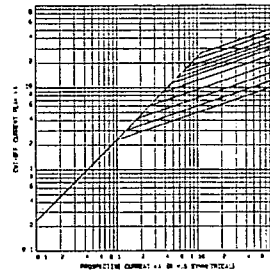


Cut off characteristics

Table 4

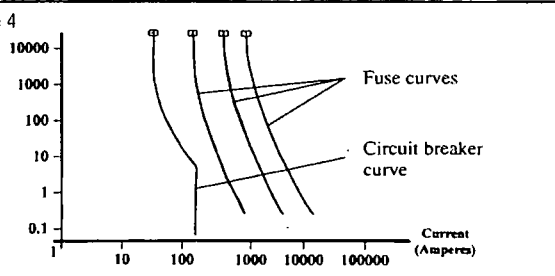

Discrimination achieved

Table 5

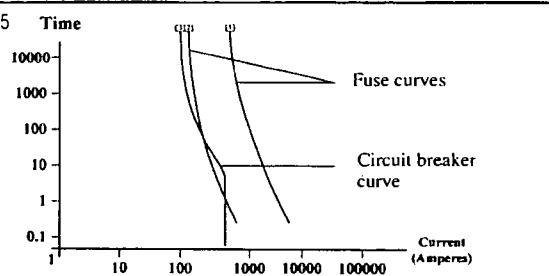

Discrimination **NOT** achieved




NHP COMPACT FUSES

HRC cartridge fuse-links

Dimensions



Dimensions (mm)

Fuse link type	A max. mm	B max. mm	D max. mm	E mm	F mm	G nom. mm	H mm	J mm
NNIT	36	14	55	11	0.8	44.5	4.8	
NTIA NTIS	56	21	86	9	1.2	73	5.5	7.5
NTIS(M)	58	26	90	13	1.6	73	5.5	
NOS	58	27	90	13	1.6	73	5.5	
NTCP	62	27	110	19	2.4	94	8.7	
NTCP(M)	62	30	110	19	2.4	94	8.7	
NTFP	77	30	110	19	2.4	94	8.7	10.3
NTFP(M)	77	40	110	19	2.4	94	8.7	10.3

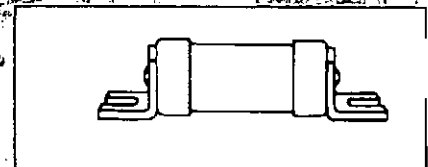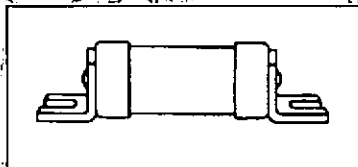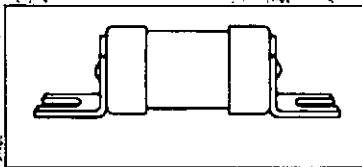

Dimensions (mm)

Fuse link type	A max. mm	B max. mm	D max. mm	E mm	F mm	G nom. mm	H mm	J mm	L mm
NTB	57	21	114	13	1.6	97	7.2	11	
NTB (M)	57	26	116	13	1.6	97	7.2	11	
NTBC	57	21	134	16	2.0	111	8.7	16	
NTBC (M)	58	26	136	16	3.2	111	8.7	16	
NTC	66	36	135	19	3.6	111	8.7	16	
NTF	76	41	137	19	3.6	111	8.7	16	
NTKF	76	51	137	26	4.0	111	8.7	16	
NTMF	81	58	136	26	5.2	111	8.7	16	
NTKM	76	51	158	26	4.0	133	8.7	16	
NTM	81	58	210	26	5.2	133/184	10.3	16	25.4
NTTM	83	74	210	26	6.5	133/184	10.3	16	25.4
NTLM	84	82	210	26	10	133/184	10.3	16	25.4
NTT	83	74	267	38	6.5	165	10.3	16	32
NTLT	84	82	267	38	10	165	10.3	16	32
NTXU	83	100	198	63.5	9.5	149	14.3	19	32

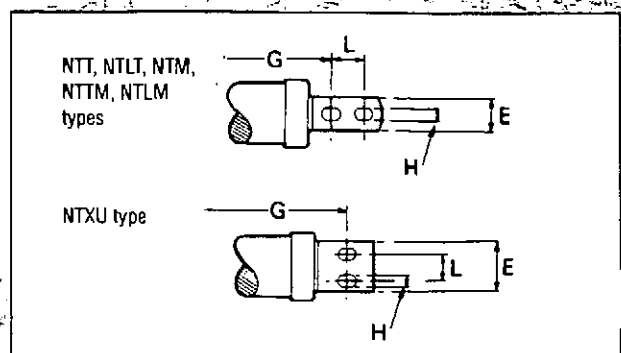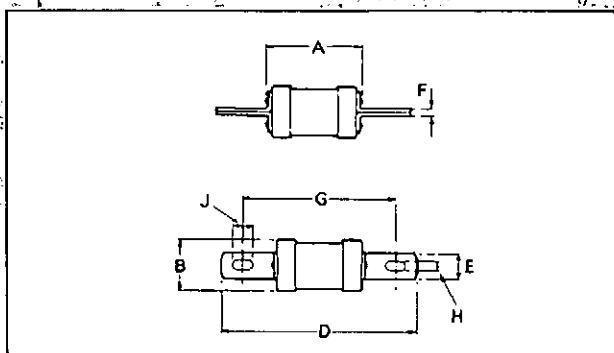



I²t characteristics


BS fuses I²t data

I ² t characteristics			
Rating (amperes)	I ² t pre-arcing	I ² t total @ 240 volts	I ² t total @ 415 volts
2	2	2	4
4	10	15	21
6	34	52	74
10	188	289	408
16	92	211	412
20	155	355	690
20M25	574	1084	1809
20M32	574	1561	2605
25	826	1084	1809
32	826	1561	2605
35	1200	2400	4100
32M40	2482	4416	7019
32M50	3305	5879	9345
32M63	5875	10452	16612
40	2482	4416	7019
50	3305	5879	9345
63	5875	10452	16612
80 & 63M80	7800	15500	26000
100 & 63M100	14000	28000	46000
125 & 100M125	30000	51000	75500
160 & 100M160	58500	99000	145000
200 & 100M200	120000	205000	300000
250 & 200M250	210000	360000	530000
315 & 200M315	270000	460000	680000
355	365000	620000	915000
400 & 315M400	480000	820000	1200000
450	755000	1300000	1900000
500	1100000	1850000	2700000
560	1200000	2400000	4000000
630	1550000	3100000	5150000
710	1903565	2992861	4306813
800	3820349	6006505	8643534
1000	7000000	15000000	16000000
1250	12000000	20500000	30000000


NHP COMPACT FUSES

Fuse curves

BS fuse curves

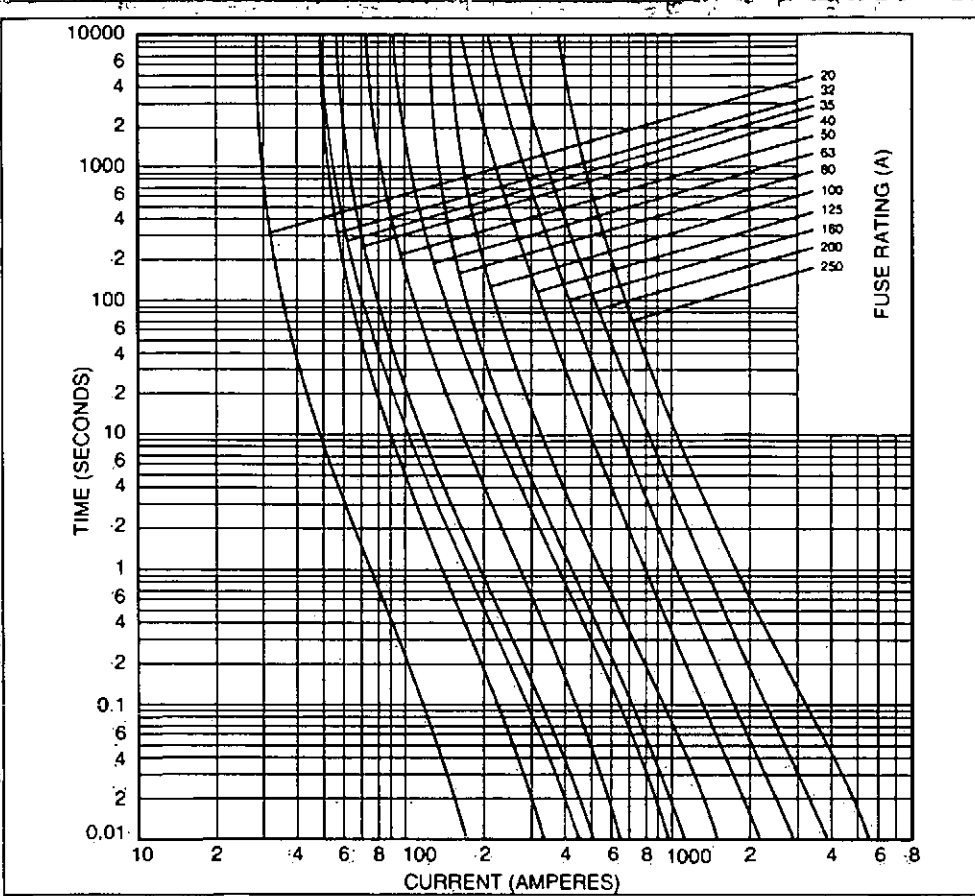

NHP Compact BS fuses from 20 to 250 amps

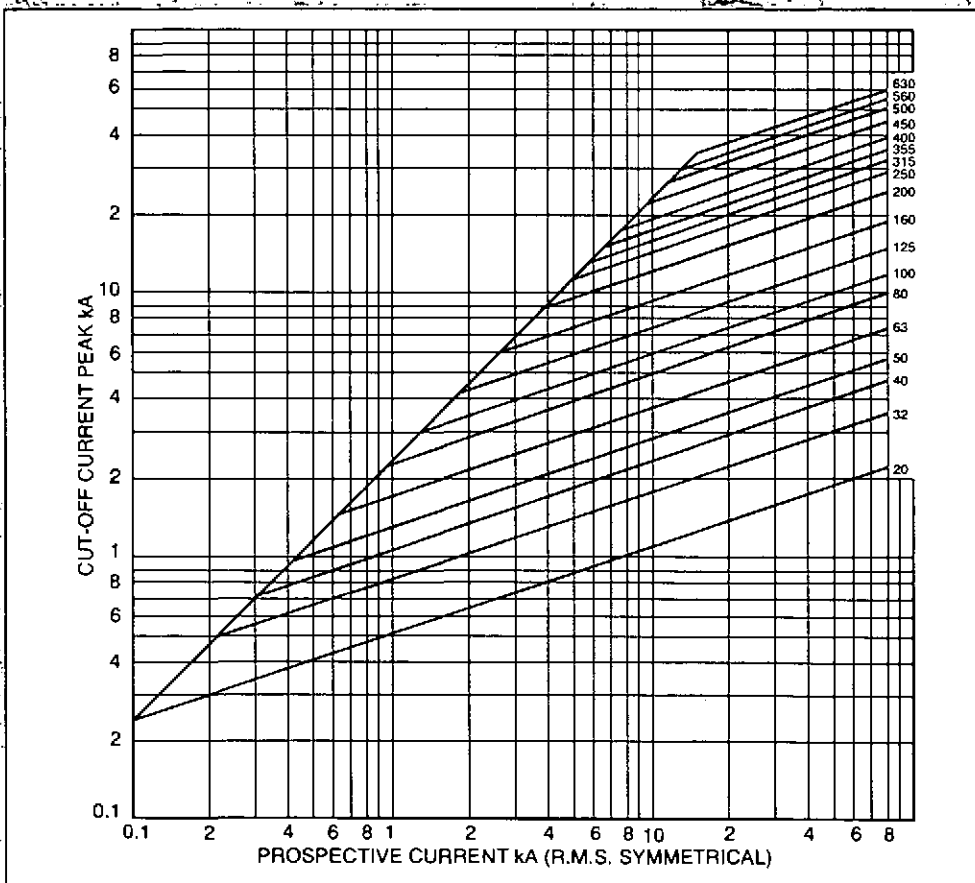

NHP Compact BS fuses cut-off current data from 20 to 630 amps

NHP COMPACT FUSES

BS fuse holders


NHP

FUSES PROVIDE SUPERIOR SHORT CIRCUIT PROTECTION

Refer Catalogue NF

Compact fuse holders (Bolt-in)

- New compact size
- Front (FW) or stud/front (SFW) versions
- Smaller dimensions
- Saves panel space

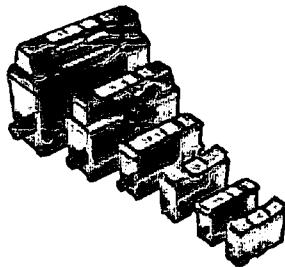

	Dimensions (mm)			Suggested Max.
	H	W	D	cable size
NC32_	87	27	50	10 mm ²
NC63_	109	31	62	25 mm ²
NC100_	118	35	72	50 mm ²
NC200_	154	54	108	95 mm ²



UP TO 30% SMALLER

Rating (A)	Fuse link to suit		Cat. No.
Front wired – bolt in			
32		NNIT	NC32FW
63		NTIA NTIS	NC63FW
100	NOS	NTIA NTIS	NC100FW
200		NTIA '1) NTIS '1)	NC200FW
	NTFP	NOS '1) NTCP	

Back stud/front wired – bolt in			
32		NNIT	NC32SFW
63		NTIA NTIS	NC63SFW
100	NOS	NTIA NTIS	NC100SFW
200		NTIA '1) NTIS '1)	NC200SFW
	NTFP	NOS '1) NTCP	

Note: '1) Fuses can be fitted using adaptor 100M FLK.

Standard fuse holders (Bolt-in)

- Ratings from 20 to 200 A
- Front (FW) or stud/front (SFW) versions
- Complies with BS88



OLD STYLE

N20FW

	Dimensions (mm)			Suggested Max.
	H	W	D	cable size
N20_	87	27	50	10 mm ²
N32_	109	31	62	10 mm ²
N63_	118	35	72	50 mm ²
N100_	154	54	108	70 mm ²
N200_	193	70	149	150 mm ²

Rating (A)	Fuse link to suit		Cat. No.
Front wired – bolt in			
20		NNIT	N20FW
32		NTIA	N32FW
63		NTIA NTIS	N63FW
100		NTIA '1) NTIS '1)	N100FW
		NOS '1) NTCP	
200		NTBC NTC	N200FW
		NTF	

Back stud/front wired – bolt in			
20		NNIT	N20SFW
32		NTIA	N32SFW
63		NTIA NTIS	N63SFW
100		NTIA '1) NTIS '1)	N100SFW
		NOS '1) NTCP	
200		NTBC NTC	N200SFW
		NTF	

Clip-in fuse holders - DIN rail mount


Fast, reliable fitting and removal of fuse links



NV20FW



NV32FW

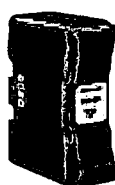

NV63FW

Rating (A)	Fuse link to suit		Cat. No.
Front wired – clip-in – Black			
20		NSS	NV20FW
32		NSS	NV32FW
63		NES	NV63FW
Front wired – Clip-in – White			
32		NNS	NV32FWW
63		NES	NV63FWW






Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

GSM MODEM

1. **FASTRACK SUPREME GSM MODEM
TECHNICAL DETAILS**
2. **FASTRACK SUPREME GSM MODEM USER
GUIDE**

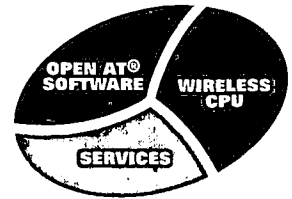

Fastrack Supreme

**GSM/GPRS/EDGE
with unlimited expandability**

Fastrack Supreme is a versatile Plug & Play Wireless CPU* that will carry your applications well into the future. It has been designed to accommodate any additional features you can imagine, thanks to a revolutionary, open standard Internal Expansion Socket which you can populate with an expansion card from Wavecom – or one of your own.

SECURE CELLULAR INTERNET

Prevent hacker attacks by using our Security software Plug-In to connect your sales terminal, meter, vehicle, asset tracking or monitoring product via GSM, GPRS or high speed EDGE to the cellular Internet highway.

**POWERFUL CORE
APPLICATION PROCESSING**

Every Fastrack Supreme features a Wavecom Q26-family Wireless CPU*: a powerful central processing unit with an ARM9 32 bit, 26-104MHz core, programmable via any combination of AT commands, C and Lua.

FASTRACK = YOUR PRODUCT

By designing your product value as an expansion card you save time and money in cellular learning curve, certification, mechanical design and time to market. Fastrack can now become *your* product.

UNHEARD-OF EXPANDABILITY

Add additional IO connectivity or features like GPS, WiFi, Bluetooth, Zigbee and more. The open interface means you can develop your own expansion modules for your specific needs.

INTELLIGENT DEVICE SERVICES


Our Intelligent Device Services enable you to remotely monitor and securely upgrade the software of your product, in order to reduce post-deployment field maintenance costs.

PROFESSIONAL SERVICES

Accelerate your product design and ensure you capitalize on market opportunities!

WAVECOM®
Smart wireless. Smart business.

Operating Systems | Plug-Ins | Integrated Development Environments | Wireless CPUs | Services

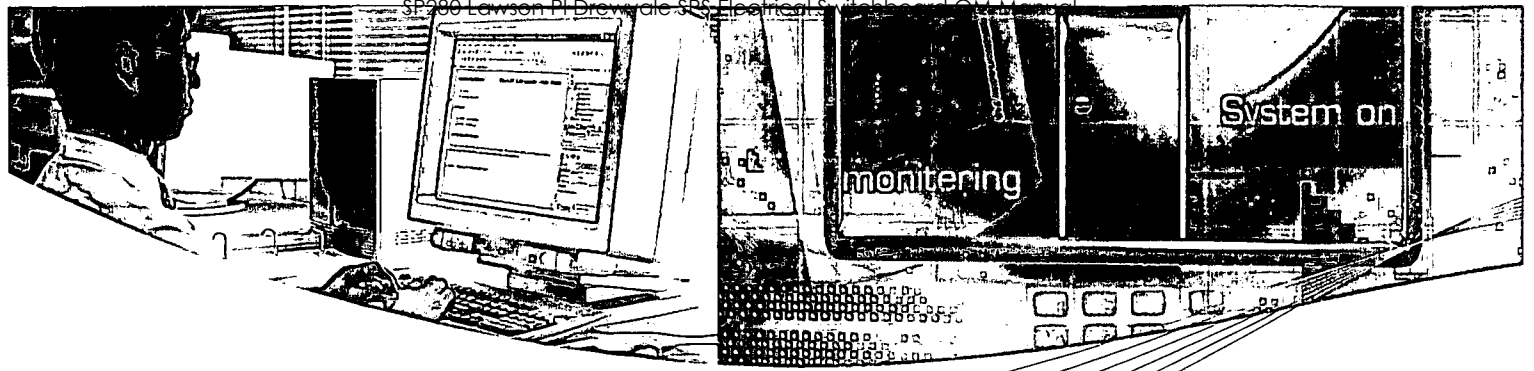

Fastrack Supreme

Plug and play with unlimited expandability

Evolve to the latest cellular technology and add functionality without sacrificing the form factor you have come to rely on. The Fastrack Supreme is the same size, has the same interfaces and is completely backward compatible with previous Fastrack products, and is packed with a host of new features.

Wavecom has developed an exciting new, open-standard Internal Expansion Socket (IES) interface for you to add additional IO connectivity or features like GPS, WiFi, Bluetooth, Zigbee and more. The open interface means you can develop your own expansion modules and customize the product for your specific requirements, or you can look to Wavecom for new expansion modules designed to address your most-pressing needs.

Features


	Wireless CPU		IESM			
	FASTRACK Supreme 10	FASTRACK Supreme 20	IESM GPRS:USB	IESM IO:USB	IESM IO:USB:GPRS	IESM Ethernet
Core CPU	ARM9, 32 bit with cache	ARM9, 32 bit with cache				
Open AT* Software suite	FW6.63/OS4.20	FW6.63/OS4.20				
Processor	26/104MHz	26/104MHz				
MIPS	87 max.	87 max.				
QoS	Type I & II	Type I & II				
External Interruption	<1ms	<1ms				
RTC Interruption	<1ms	<1ms				
GPIO	2	2		3+2	2	
Analogue Audio	2	2				
ADC/DAC/SPI/I2C				1/1/1/1	1/1/1/1	
RS485	1	1		1	1	
USB			1	1	1	1
SIM/RUIM	3V/1.8V SIM	3V/1.8V SIM				
Voltage ADC (nom)	5.5 to 32	5.5 to 32	4		4	4
Current (A)max	0.48 @ 5.5V	0.48 @ 5.5V	0.12 @ 5.5V		0.12 @ 5.5V	
UART
SMA
Dimensions	73x54.5x25.5	73x54.5x25.5	58x35.7x10.01	58x35.7x10.01	58x35.7x10.01	58x35.7x10.01
Weight/g	89	89	<10	<10	<10	<10
SIM holder
Operating Temp	-30°C+75°C	-30°C+75°C	-30°C+65°C	-30°C+65°C	-30°C+65°C	-30°C+65°C
Power
GPRS class	10	10				
EDGE class		10				
Power (max) 1500	.	.				
Max Sensitivity (dBm)	-109 @ 900	-109 @ 900				
Codecs	FR/EFR/HR	FR/EFR/HR				
IRL	.	.				
AT/PA & Internet	Plug-In	Plug-In				
Ethernet						Companion
Bluetooth	Plug-In	Plug-In				
Security	Plug-In	Plug-In				
GPS	Plug-In	Plug-In	Companion		Companion	



Open AT® Software Suite 2.0

Industrial software for industrial design demands

The Open AT® Software Suite allows you to develop, compile, test, debug, download and natively execute your applications written in standard ANSI C directly on the Fastrack Supreme, or indeed any other Wavecom Wireless CPU®. It is royalty free and comprises operating system, compiler and integrated development environments. There are no hidden costs - maintenance and qualification are provided for free by Wavecom.

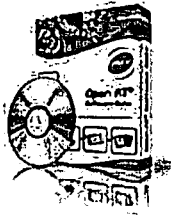

- Multitasked Pre-Emptive Event-Based Real-Time Operating System
- Integrated Development Environment built on Eclipse™
- Extensive Set of Plug-Ins (Internet Suite, C-GPS and more)
- GSM Release 99 compliant modem firmware
- Secure Intelligent Device Services (IDS) compatible

REAL TIME OPERATING SYSTEM

Real-Time

Guaranteed response time to interruption (even during GSM/GPRS/EDGE activities, calls and transfer).

Wireless CPU® Resources Direct Access and IT Management

- Hardware and Software Timers
- DSP
- SPI
- ADC
- External Interrupt Pins
- GPIOs
- UARTS (coming in 2008)

Multitasking

Auto shut-down feature

Feature improving the overall consumption of the application by deactivating the RS232 interface.

Application dedicated Hardware Watchdog

- application dedicated for close monitoring
- tunable depending on the complexity of the processing (ex: Pulse count Vs RSA signature calculation...)

CROSS-PLATFORM INTEGRATED DEVELOPMENT ENVIRONMENT

For eased application debug it can be performed on PC: for very fast and convenient application debugging through Remote Task Environment.

On target for final Integration and time-critical behavior management:

- Live through Traces
- Post mortem through BackTraces

On field:

- for difficult error causing operating scenarios through IDS device monitoring services and BackTraces over the air retrieval.

SEAMLESSLY PLUG-IN ADDITIONAL FEATURES

Plug-Ins are an optional range of software feature packages that are selected when your order your Wireless CPU®. The standard range provides access to Internet clients & protocols, controller-less companion wireless peripherals such as Bluetooth & GPRS. Of course, the powerful flexibility of Open AT® Software Suite means that you can also develop your own Plug-Ins and own custom AT commands.



Lua
Easy Scripting



Internet
Clients & Protocols



C-GPS
Companion




C-Bluetooth™
Companion



aqLink®
in-band modem

WAVECOM BSP-BASED EMBEDDED SOFTWARE ARCHITECTURE

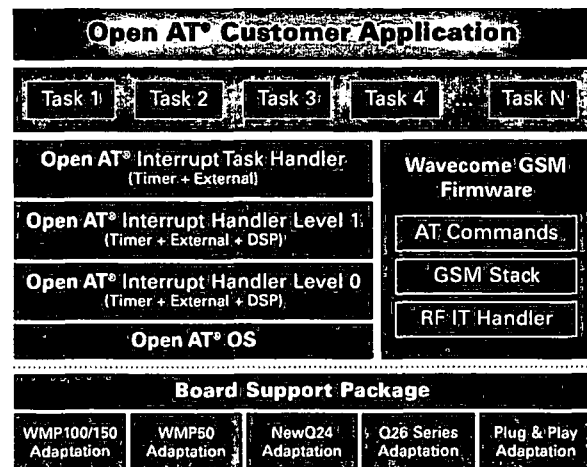

Wavecom Services

The wireless products you are developing are most probably very complex, and they will stay in the field for many years. With this in mind, Wavecom has created a range of professional and operated services to make the development process easier and to help you protect your investment, enrich your products and services, and reduce the lifetime cost of your device network.

Professional services: Less pain, more gain

Wavecom Professional Services help you be faster, sleeker and more adaptable to the ever changing needs of your market, all along the typical product lifecycle timeline:

<p>WAVECOM UNIVERSITY</p> <ul style="list-style-type: none"> → Open AT® Developer course → Open AT® Expert course 	<p>PRODUCT BUILD</p> <ul style="list-style-type: none"> → IMEI implementation → Tailored Delivery (Express & Fast) → Tailored Product Configuration
<p>PRODUCT DESIGN</p> <ul style="list-style-type: none"> → Customer Design Review → Customer Product Certification → Open AT® Application Code Review 	<p>AFTER SALES</p> <ul style="list-style-type: none"> → Reconfiguration for Wireless CPU® → Out Of Warranty repair for Wireless CPU® → Repair Equipment Wireless CPU®


Intelligent Device Services: Investment protection

Wavecom has created the world's first cellular operated service portfolio to benefit from easy to use end-to-end Intelligent Device Services that enable to remotely monitor and securely upgrade the application software of your product in addition to the entire Wavecom embedded Open AT® Software:

<p>WIRELESS DEVICE MANAGEMENT</p> <ul style="list-style-type: none"> → Simplify your device installation and protect your wireless investment while reducing your field service costs
<p>COMMUNICATION MANAGEMENT</p> <ul style="list-style-type: none"> → Analyze your traffic load and roaming usage, and adjust your tariff plans to your real usage
<p>APPLICATION MANAGEMENT</p> <ul style="list-style-type: none"> → Benefit from proactive maintenance services to diagnose issues and take action before a significant problem occurs

See the Fastrack Supreme online:
www.wavecom.com/fastracksupreme

Join the Wavecom Developer community:
www.wavecom.com/forum

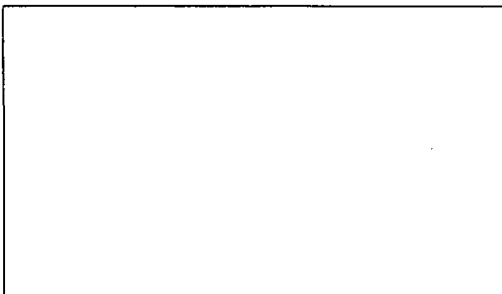

Wavecom®, Open AT®, and certain other trademarks and logos appearing on this document, are filed or registered trademarks of Wavecom S.A. in France or in other countries. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Wavecom is under licence. Eclipse™ and Built on Eclipse are trademarks of Eclipse foundation, Inc. IBM® and WebSphere® are trademarks of International Business Machines Corporation in the United States, other countries, or both. Java™ is a registered trademark of Sun Microsystems, Inc. in the United States and other countries. All other company and/or product names mentioned may be filed or registered trademarks of their respective owners. 06/08

wavecom[®]
 Smart wireless. Smart business.

WAVECOM S.A. - 3, esplanade du Foncet - 92442 Issy-les-Moulineaux Cedex - France - Tel: +33 (0)1 46 29 08 00 - Fax: +33 (0)1 46 29 08 08
 Wavecom, Inc. - 4810 Eastgate Mall - Second Floor - San Diego, CA 92121 - USA - Tel: +1 858 362 0101 - Fax: +1 858 558 5485
 WAVECOM Asia Pacific Ltd. - Unit 201-207, 2nd Floor - Bio-Informatics Centre - No. 2 Science Park West Avenue - Hong Kong
 Science Park, Shatin - New Territories, Hong Kong - Tel: +852 2824 0254 - Fax: +852 2824 0255



www.wavecom.com

Wavecom S.A. may, at any time and without notice, make changes or improvements to the product and services offered and/or cease producing or commercializing them.

Design: McKin Partners - Makheia group.

Fastrack Supreme User Guide

WA_DEV_Fastrk_UGD_001


Plug and Play Wireless CPU[®]

FASTRACK Supreme User Guide

Reference: WA_DEV_Fastrk_UGD_001

Revision: 001e

Date: 5 june, 2007

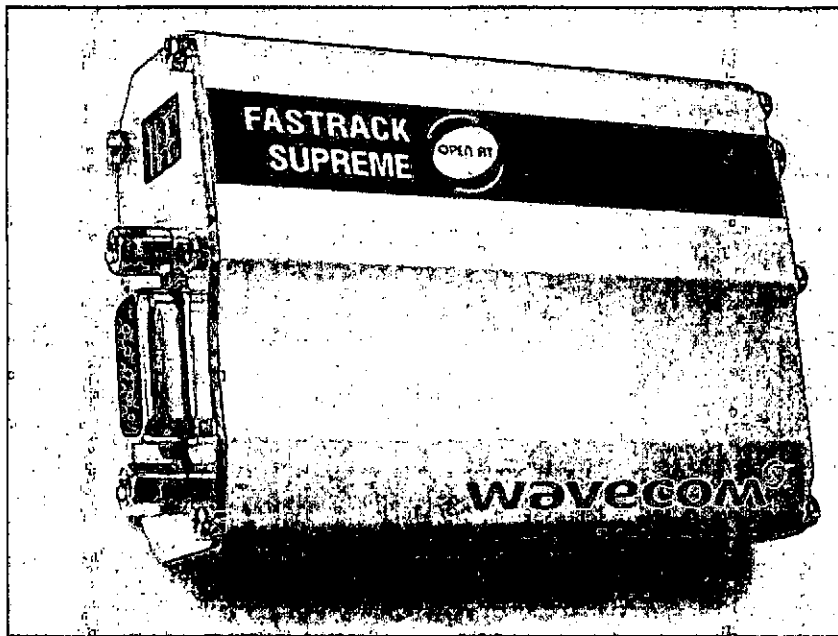

Supports Open AT[®] embedded ANSI C applications



Fastrack Supreme User Guide
WA_DEV_Fastrk_UGD_001

Document History

Revision	Date	List of revisions	
001	9 February, 07	First Issue	
001a	23 February, 2007	Update DC cable GPIO mapping, add AutoShutDown	
001b	21 May, 07	Add detail of IES, RTC and serial port autoshtutdown	
001c	1 Jun, 07	Change to Quad Band	
001d	4 Jun, 07	Update label/packaging photo	
001e	5 Jun, 07	Comment	

Overview

The FASTRACK Supreme 10 and FASTRACK Supreme 20 are discrete, rugged cellular Plug & Play Wireless CPU[®] offering state-of-the-art GSM/GPRS (and EGPRS for FASTRACK Supreme 20) connectivity for machine to machine applications.

Proven for reliable, stable performance on wireless networks worldwide, Wavecom's latest generation of FASTRACK Supreme continues to deliver rapid time to market and painless integration.

Having comparable size with the previous M1306B generation, and updated with new features, the FASTRACK Supreme offers an Internal Expansion Socket (IES) interface accessible for customer use. Expanding application features is easy without voiding the warranty of the FASTRACK Supreme by simply plugging in of an Internal Expansion Socket Module (IESM) board.

Fully certified, the quad band 850/900/1800/1900 MHz FASTRACK Supreme 10 offers GPRS Class 10 capability and FASTRACK Supreme 20 offers GPRS/EGPRS Class 10 capability. Both support a powerful open software platform (Open AT[®]). Open AT[®] is the world's most comprehensive cellular development environment, which allows embedded standard ANSI C applications to be natively executed directly on the Wireless CPU[®].

FASTRACK Supreme is controlled by firmware through a set of AT commands.

This document describes the FASTRACK Supreme and gives information on the following topics:

- general presentation,
- functional description,
- basic services available,
- technical characteristics,
- installing and using the FASTRACK Supreme,
- user-level troubleshooting.
- recommended accessories to be used with the product.

Note:

This document covers the FASTRACK Supreme Plug & Play alone and does not include

- The programmable capabilities provided via the use of Open AT[®] Software Suites.
- The development guide for IESM for expanding the application feature through the IES interface.

For detailed, please refer to the documents shown in the "Reference documents" section.

Fastrack Supreme User Guide

WA_DEV_Fastrk_UGD_001

RoHS Directive

The FASTRACK Supreme is now compliant with RoHS Directive 2002/95/EC, which sets limits for the use of certain restricted hazardous substances. This directive states that "from 1st July 2006, new electrical and electronic equipment put on the market does not contain lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE)".

Plug & Plays which are compliant with this directive are identified by the RoHS logo on their label.



Disposing of the product


This electronic product is subject to the EU Directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). As such, this product must not be disposed off at a municipal waste collection point. Please refer to local regulations for directions on how to dispose off this product in an environmental friendly manner.



Cautions

Information furnished herein by WAVECOM is accurate and reliable. However, no responsibility is assumed for its use. Please read carefully the safety recommendations given in Section 9 for an application based on FASTRACK Supreme Plug & Play.

Trademarks

®, WAVECOM®, Wireless CPU®, Open AT® and certain other trademarks and logos appearing on this document, are filed or registered trademarks of Wavecom S.A. in France or in other countries. All other company and/or product names mentioned may be filed or registered trademarks of their respective owners.

Copyright

This manual is copyrighted by WAVECOM with all rights reserved. No part of this manual may be reproduced in any form without the prior written permission of WAVECOM. No patent liability is assumed with respect to the use of their respective owners.

Web Site Support

General information about Wavecom and its range of products:	www.wavecom.com
Specific support is available for the FASTRACK Supreme Plug & Play Wireless CPU®:	TBD
Open AT® Introduction:	www.wavecom.com/OpenAT
Developer community for software and hardware:	www.wavecom.com/forum



Contents

DOCUMENT HISTORY2

OVERVIEW3

CAUTIONS5

TRADEMARKS5

COPYRIGHT5

WEB SITE SUPPORT6

CONTENTS7

LIST OF FIGURES11

LIST OF TABLES12

1 REFERENCES13

1.1 Reference Documents13

1.1.1 Open AT® Software Documentation13

1.1.2 AT Software Documentation13

1.1.3 Firmware Upgrade Documents13

1.1.4 Delta between M1306B Documents13

1.1.5 IESM Related Documents13

1.2 Abbreviations14

2 PACKAGING17

2.1 Contents17

2.2 Packaging Box18

2.3 Production Labelling19

3 GENERAL PRESENTATION20

3.1 Description20

3.2 External Connections22

3.2.1 Connectors22

3.2.1.1 Antenna Connector22

3.2.1.2 Power Supply Connector22

3.2.1.3 Sub HD 15-pin Connector23



Fastrack Supreme User Guide

WA_DEV_Fastrk_UGD_001

3.2.1.4 IES Connector.....25

3.2.2 Power supply cable29

4 FEATURES AND SERVICES.....31

4.1 Basic Features and Services31

4.2 Additional NEW Features34

4.2.1 Support Additional GSM850/PCS1900 Bands34

4.2.2 IES Interface for Easy Expansion of Application Features.....34

4.2.3 Serial Port Auto Shut Down or Improving Power Consumption34

4.2.4 Real Time Clock (RTC) for Saving Date and Time34

4.2.5 SIM Card Lock Feature35

5 USING THE FASTRACK SUPREME PLUG & PLAY36

5.1 Getting Started.....36

5.1.1 Mount the FASTRACK Supreme.....36

5.1.2 Set up the FASTRACK Supreme36

5.1.3 Check the communication with the FASTRACK Supreme.....37

5.1.4 Reset the FASTRACK Supreme37

5.2 Specific Recommendations when Using the FASTRACK Supreme on Trucks38

5.2.1 Recommended Power Supply Connection on Trucks.....38

5.2.2 Technical Constraints on Trucks38

5.3 FASTRACK Supreme Operational Status.....39

5.4 Echo Function Disabled.....40

5.5 Verify the Received Signal Strength.....41

5.6 Check the Pin Code Status41

5.7 Switch between EU/US Band(s).....41

5.8 Check the Band(s) Selection42

5.9 Verify the FASTRACK Supreme Network Registration43

5.10 Main AT Commands for the Plug & Play44

5.11 Firmware Upgrade Procedure45

6 TROUBLESHOOTING46

6.1 No Communication with the FASTRACK Supreme through the Serial Link46

6.2 Receiving "ERROR" Message.....46

6.3 Receiving "NO CARRIER" Message47

7 FUNCTIONAL DESCRIPTION50

7.1 Architecture.....50

7.2 EU and US Bands.....51

7.2.1 General Presentation.....51

7.2.2 AT COMMAND for Bands Switch.....51

7.3 Power Supply.....51



Fastrack Supreme User Guide

WA_DEV_Fastrk_UGD_001

7.3.1	General Presentation.....	51
7.3.2	Protections.....	51
7.4	RS232 Serial Link.....	51
7.4.1	General Presentation.....	51
7.4.2	Autobauding Mode	52
7.4.3	Pin Description.....	53
7.4.4	Serial Port Auto shut down Feature	53
7.5	General Purpose Input/Output (GPIO)	54
7.6	BOOT.....	54
7.7	RESET.....	54
7.7.1	General presentation.....	54
7.7.2	Reset Sequence	55
7.8	Audio.....	56
7.8.1	Microphone Inputs	56
7.8.2	Speaker Outputs.....	57
7.9	Real Time Clock (RTC)	58
7.10	FLASH LED 58	
8	TECHNICAL CHARACTERISTICS.....	59
8.1	Mechanical Characteristics.....	59
8.2	Electrical Characteristics	61
8.2.1	Power Supply.....	61
8.2.2	Power Consumption	62
8.2.3	Audio Interface	65
8.2.4	General Purpose Input/Output.....	66
8.2.5	SIM Interface	66
8.2.6	RESET Signal.....	66
8.2.7	RF Characteristics	67
8.2.7.1	Frequency Ranges.....	67
8.2.7.2	RF Performances.....	68
8.2.7.3	External Antenna	69
8.3	Environmental Characteristics.....	69
8.4	Conformity	72
8.5	Protections.....	72
8.5.1	Power Supply.....	72
8.5.2	Overvoltage	73
8.5.3	Electrostatic Discharge.....	73
8.5.4	Miscellaneous.....	73
9	SAFETY RECOMMENDATIONS	74
9.1	General Safety.....	74
9.2	Vehicle Safety.....	74
9.3	Care and Maintenance	75
9.4	Your Responsibility.....	75



Fastrack Supreme User Guide

WA_DEV_Fastrk_UGD_001

10 RECOMMENDED ACCESSORIES.....76

11 ONLINE SUPPORT77



List of Figures

Figure 1: Complete package contents.....	17
Figure 2: Packaging box.....	18
Figure 3: Production Label	19
Figure 4: FASTRACK Supreme general description	20
Figure 5: FASTRACK Supreme holding bridles	21
Figure 6: SMA connector for antenna connection	22
Figure 7: Power supply connector	23
Figure 8: Sub HD 15-pin connector	24
Figure 9: IES connector for feature expansion.....	26
Figure 10: Power supply cable	29
Figure 11: SIM card lock feature	35
Figure 12: FASTRACK Supreme mounting.....	36
Figure 13: Recommended power supply connection on trucks.....	38
Figure 14: Example of electrical connection which may dramatically damage the FASTRACK Supreme	39
Figure 15: Functional architecture	50
Figure 16: RS232 Serial Link signals	52
Figure 17: Reset sequence diagram	56
Figure 18: Dimensioning diagram.....	60



List of Tables

Table 1: Power supply connector pin description.....	23
Table 2: Sub HD 15-pin connector description.....	24
Table 3: IES Connector Description	27
Table 4: Basic features of the FASTRACK Supreme.....	31
Table 5: FASTRACK Supreme operational status	40
Table 6: Values of received signal strength	41
Table 7: AT+CPIN Responses	41
Table 8: AT+WMBS Band Selection	42
Table 9: AT+WMBS Responses.....	42
Table 10: Values of network registration	43
Table 11: Main usual AT commands for the Plug & Play.....	44
Table 12: Solutions for no connection with FASTRACK Supreme through serial link	46
Table 13: Solutions for "NO CARRIER" message.....	48
Table 14: Interpretation of extended error code	49
Table 15: Mechanical characteristics	59
Table 16: Electrical characteristics.....	61
Table 17: Effects of power supply defect.....	61
Table 18: Power consumption (1*).....	62
Table 19: Audio parameters characteristics	65
Table 20: Microphone inputs internal audio filter characteristics	65
Table 21: Recommended characteristics for the microphone:.....	65
Table 22: Recommended characteristics for the speaker:.....	66
Table 23: Operating conditions.....	66
Table 24: SIM card characteristics	66
Table 25: Electrical characteristics.....	66
Table 26: Operating conditions.....	67
Table 27: Frequency ranges.....	67
Table 28: Receiver and transmitter RF performances	68
Table 29: External antenna characteristics	69
Table 30: Ranges of temperature.....	69
Table 31: Environmental standard constraints.....	70
Table 32: List of recommended accessories.....	76

1 References

1.1 Reference Documents

For more details, several reference documents may be consulted. The Wavecom reference documents are provided in the Wavecom documents package contrary to the general reference documents, which are not Wavecom owned.

1.1.1 Open AT[®] Software Documentation

- [1] Getting started with Open AT[®] (Ref.WM_ASW_OAT_CTI_001)
- [2] Open AT[®] Tutorial (Ref.WM_ASW_OAT_UGD_001)
- [3] Tools Manual (Ref. WM_ASW_OAT_UGD_003)
- [4] Open AT[®] Programming Guide (Ref. TBD)
- [5] Open AT[®] Customer Release Note (Ref. WM_ASW_OAT_DVD_00062)

Remark: The document above is for Open AT3.12 and FASTRACK Supreme will use new release of Open AT4.21. Reference document not yet available and TBC.

1.1.2 AT Software Documentation

- [6] AT commands interface Guide for X51 (Ref. WM_ASW_OAT_UGD_00016)
- [7] Customer Release Note X51 (Ref. WM_ASW_OAT_DVD_00120)

Remark: The document above is for X51 and FASTRACK Supreme will use new release of FW6.63. Reference document not yet available and TBC.

1.1.3 Firmware Upgrade Documents

- [8] Firmware upgrade procedure (Ref. WM_SW_GEN_UGD_001)

1.1.4 Delta between M1306B Documents

- [9] Delta between M1306B and FASTRACK Supreme (Ref. WA_DEV_Fastrk_UGD_004)

1.1.5 IESM Related Documents

- [10] IESM Product Technical Specification (Ref. WA_DEV_Fastrk_PTS_001)
- [11] IESM-GPS+USB User Guide (Ref. WA_DEV_Fastrk_UGD_002)
- [12] IESM-GPS+USB Installation Guide (Ref. WA_DEV_Fastrk_UGD_003)
- [13] IESM-IO+USB Installation Guide (Ref. WA_DEV_Fastrk_UGD_005)
- [14] IESM-IO+USB User Guide (Ref. WA_DEV_Fastrk_UGD_006)

Note:

New versions of software may be available. Wavecom recommends customers to check the web site for the latest documentation.

1.2 Abbreviations

Abbreviation	Definition
AC	Alternating Current
ACM	Accumulated Call Meter
AMR	Adaptive Multi-Rate
AT	ATtention (prefix for Wireless CPU® commands)
CLK	CLoCK
CMOS	Complementary Metal Oxide Semiconductor
CS	Coding Scheme
CTS	Clear To Send
dB	Decibel
dBc	Decibel relative to the Carrier power
dB _i	Decibel relative to an Isotropic radiator
dBm	Decibel relative to one milliwatt
DC	Direct Current
DCD	Data Carrier Detect
DCE	Data Communication Equipment
DCS	Digital Cellular System
DSR	Data Set Ready
DTE	Data Terminal Equipment
DTMF	Dual Tone Multi-Frequency
DTR	Data Terminal Ready
EEPROM	Electrically Erasable Programmable Read-Only Memory
EFR	Enhanced Full Rate
E-GSM	Extended GSM
EMC	ElectroMagnetic Compatibility
EMI	ElectroMagnetic Interference
ESD	ElectroStatic Discharges
ETSI	European Telecommunications Standards Institute
FIT	Series of connectors (micro-FIT)
FR	Full Rate

Fastrack Supreme User Guide

References

Abbreviation	Definition
FTA	Full Type Approval
GCF	Global Certification Forum
GND	GrouND
GPIO	General Purpose Input Output
GPRS	General Packet Radio Service
GSM	Global System for Mobile communications
HR	Half Rate
I	Input
IEC	International Electrotechnical Commission
IES	Internal Expansion Socket
IESM	Internal Expansion Socket Module
IMEI	International Mobile Equipment Identification
I/O	Input / Output
LED	Light Emitting Diode
MAX	MAXimum
ME	Mobile Equipment
MIC	MICrophone
Micro-Fit	Family of connectors from Molex
MIN	MINimum
MNP	Microcom Networking Protocol
MO	Mobile Originated
MS	Mobile Station
MT	Mobile Terminated
NOM	NOMinal
O	Output
Pa	Pascal (for speaker sound pressure measurements)
PBCCH	Packet Broadcast Control CHannel
PC	Personal Computer
PCL	Power Control Level
PDP	Packet Data Protocol
PIN	Personal Identity Number
PLMN	Public Land Mobile Network
PUK	Personal Unblocking Key
RF	Radio Frequency

Fastrack Supreme User Guide

References

Abbreviation	Definition
RFI	R adio F requency I nterference
RI	R ing I ndicator
RMS	R oot M ean S quare
RTS	R equest T o S end
RX	R eceive
SIM	S ubscriber I dentification M odule
SMA	S ub M iniature version A R F connector
SMS	S hort M essage S ervice
SNR	S ignal-to- N oise R atio
SPL	S ound P ressure L evel
SPK	S pea K er
SRAM	S tatic R AM
TCP/IP	T ransmission C ontrol P rotocol / I nternet P rotocol
TDMA	T ime D ivision M ultiple A ccess
TU	T ypical U rban fading profile
TUHigh	T ypical U rban, H igh speed fading profile
TX	T ransmit
TYP	T YPical
VSWR	V oltage S tationary W ave R atio

2 Packaging

2.1 Contents

The complete package content of the FASTRACK Supreme consists of (see):

- one packaging box (A),
- one FASTRACK Supreme (B),
- two holding bridles (C),
- one power supply cable with fuse integrated (D)
- a mini notice (E) with:
 - a summary of the main technical features,
 - safety recommendations,
 - EC declaration of conformity.

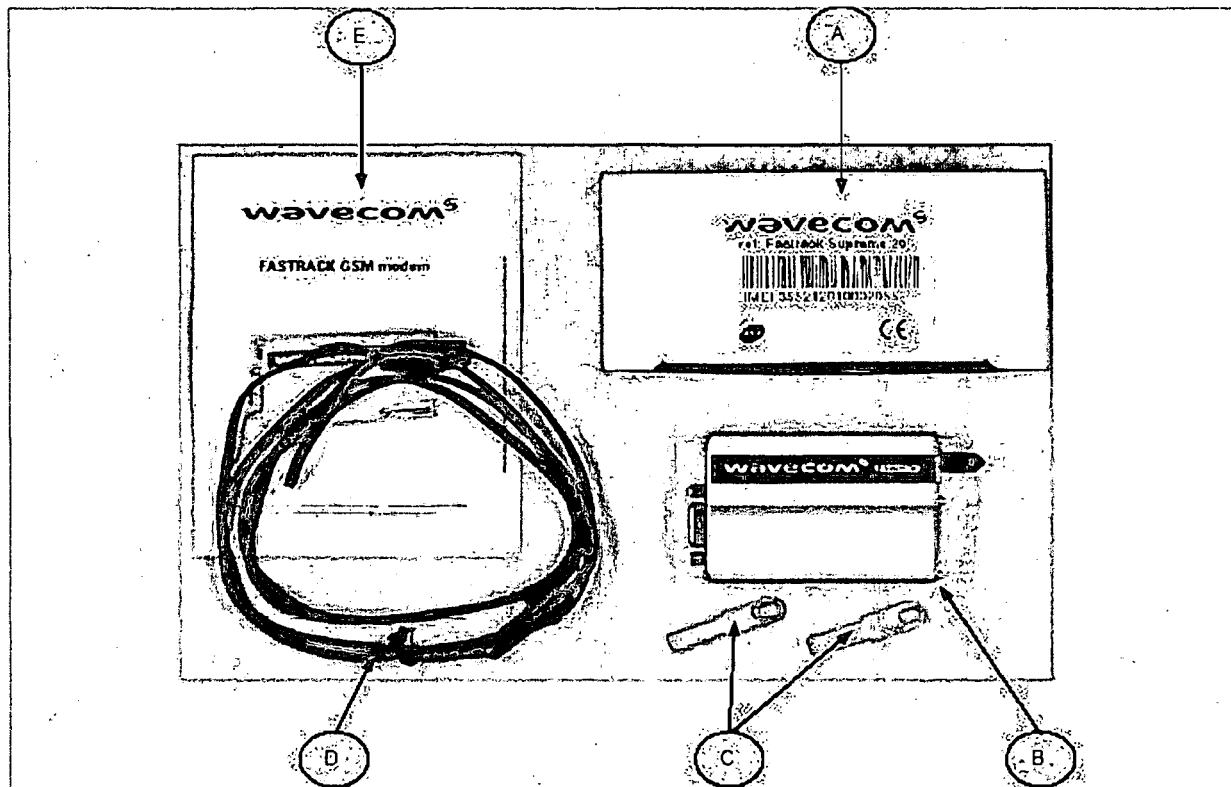


Figure 1: Complete package contents

Fastrack Supreme User Guide

Packaging

2.2 Packaging Box

The packaging box is a carton box (see) with the following external dimensions:

- width: 54.5 mm,
- height: 68 mm,
- length: 108 mm.

A packaging label is slicked on the packaging box cover and supports the:

- WAVECOM logo,
- Product reference (Supreme),
- CE marking
- 15-digit IMEI code
- Open AT[®] Logo
- RoHS logo
- WEEE logo



Figure 2: Packaging box

The packaging label dimensions are:

- height: 40 mm,
- length: 65 mm.

Fastrack Supreme User Guide

Packaging

2.3 Production Labelling

A production label (see Figure 3) located at the FASTRACK Supreme back side gives the following information:

- product reference (**FASTRACK Supreme 10** or **FASTRACK Supreme 20**),
- part number (WM19183),
- CE marking,
- 15-digit IMEI code,
- OpenAT[®] logo



Figure 3: Production Label

3 General Presentation

3.1 Description

The FASTRACK Supreme description is given in the Figure 4 below.

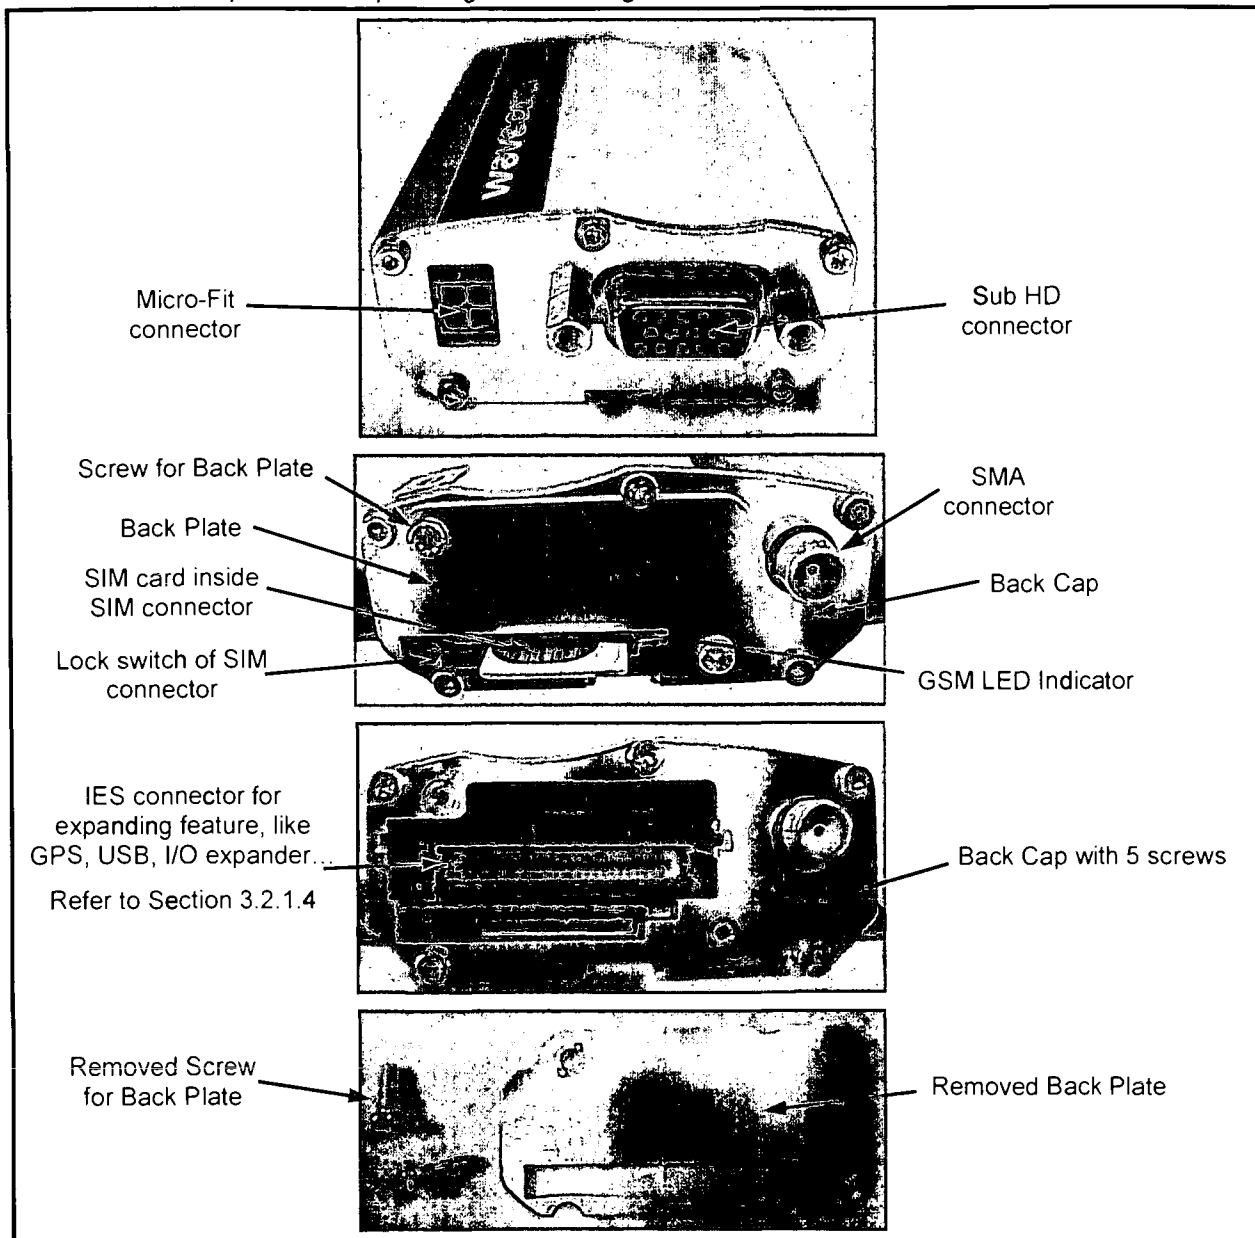


Figure 4: FASTRACK Supreme general description

Fastrack Supreme User Guide**General Presentation**

CAUTION: Users are free to remove the back plate for IESM board plug in/unplug without voiding the warranty of the FASTRACK Supreme. However, the warranty will be voided if unscrewing any screw of the back cap.

In addition, two holding bridles are provided to tighten the FASTRACK Supreme on a support.

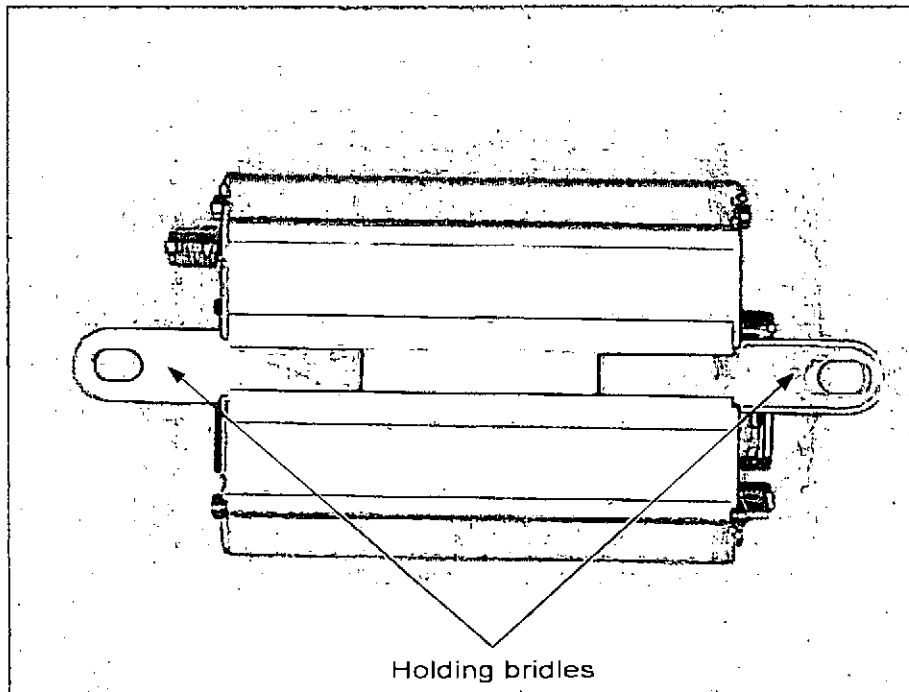


Figure 5: FASTRACK Supreme holding bridles

Fastrack Supreme User Guide


General Presentation

3.2 External Connections

3.2.1 Connectors

3.2.1.1 Antenna Connector

The antenna connector is a SMA type connector for a 50 Ω RF connection.

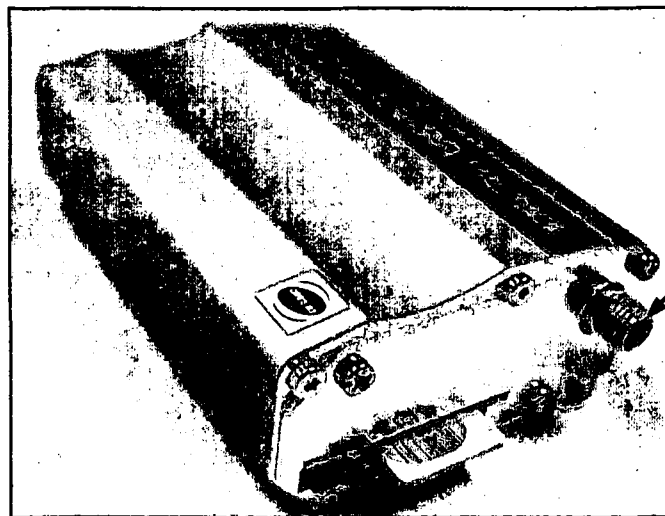

SMA connector for
antenna connection

Figure 6: SMA connector for antenna connection

3.2.1.2 Power Supply Connector

The power supply connector is a 4-pin Micro FIT connector for:

- external DC Power Supply connection,
- GPIOs connection (two General Purpose Input/Output signals available).

Fastrack Supreme User Guide

General Presentation

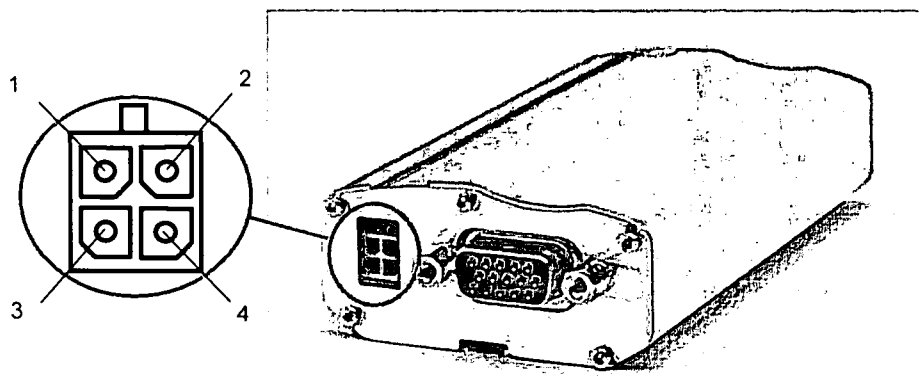


Figure 7: Power supply connector

Table 1: Power supply connector pin description

Pin #	Signal	I/O	I/O type	Description	Reset State	Comment
1	V+BATTERY	I	Power supply	Battery voltage input: <ul style="list-style-type: none"> ▪ 5.5 V Min. ▪ 13.2 V Typ. ▪ 32 V Max. 		High current
2	GND		Power supply	Ground		
3	GPIO21	I/O	2V8	General Purpose Input/output	Undefined	Not mux
4	GPIO25	I/O	2V8	General Purpose Input/output	Z	Multiplex with INT1

Warning:

Both pin 3 and pin 4 are used by GPIO interface. It is strictly prohibited to connect them to any power supply at the risk of damage to the FASTRACK Supreme.

3.2.1.3 Sub HD 15-pin Connector

The Sub D high density 15-pin connector is used for:

- RS232 serial link connection,
- Audio lines (microphone and speaker) connection,
- BOOT and RESET signal connection.

Fastrack Supreme User Guide
General Presentation

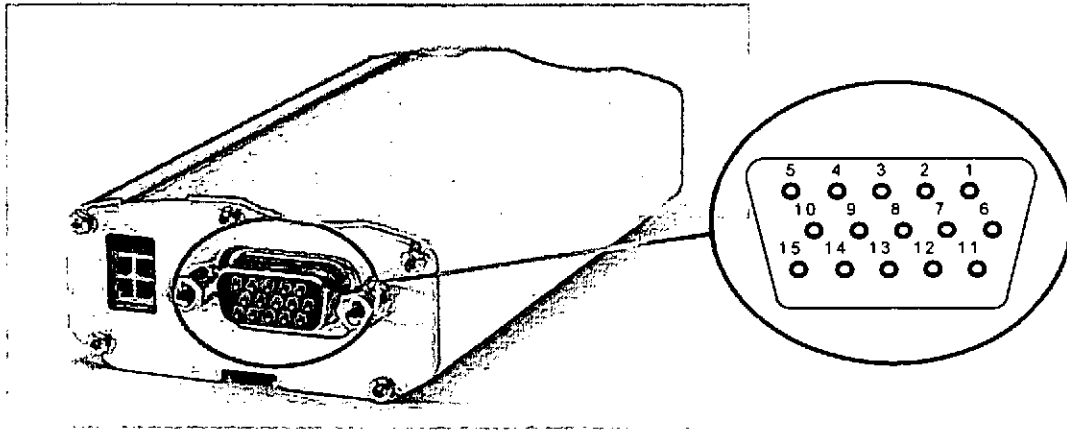


Figure 8: Sub HD 15-pin connector

Table 2: Sub HD 15-pin connector description

Pin #	Signal (CCITT / EIA)	I/O	I/O type	Description	Comment
1	CDCD/CT109	O	STANDARD RS232	RS232 Data Carrier Detect	
2	CTXD/CT103	I	STANDARD RS232	RS232 Transmit serial data	
3	BOOT	I	CMOS	Boot	This signal must not be connected. Its use is strictly reserved to Wavecom or competent retailers.
4	CMIC2P	I	Analog	Microphone positive line	
5	CMIC2N	I	Analog	Microphone negative line	
6	CRXD/CT104	O	STANDARD RS232	RS232 Receive serial data	
7	CDSR/CT107	O	STANDARD RS232	RS232 Data Set Ready	
8	CDTR/CT108-2	I	STANDARD RS232	RS232 Data Terminal Ready	
9	GND	-	GND	Ground	

Fastrack Supreme User Guide

General Presentation

Pin #	Signal (CCITT / EIA)	I/O	I/O type	Description	Comment
10	CSPK2P	O	Analog	Speaker positive line	
11	CCTS/CT106	O	STANDARD RS232	RS232 Clear To Send	
12	CRTS/CT105	I	STANDARD RS232	RS232 Request To Send	
13	CRI/CT125	O	STANDARD RS232	RS232 Ring Indicator	
14	RESET	I/O	Schmitt	Supreme Plug & Play reset	Active low
15	CSPK2N	O	Analog	Speaker negative line	

3.2.1.4 IES Connector

The IES connector is a 50 pins board-to-board connector for expanding application features like GPS, USB, I/O expander... Currently there are already 3 IESM boards available for customer to expand the FASTRACK Supreme features immediately. They are:

- IESM-GPS+USB+I/O
- IESM-GPS+USB
- IESM-USB+I/O

For detail, please refer to Document in Section 1.1.5.

Fastrack Supreme User Guide
General Presentation

For sales and support, please contact Wavecom sales/FAE or your distributor.

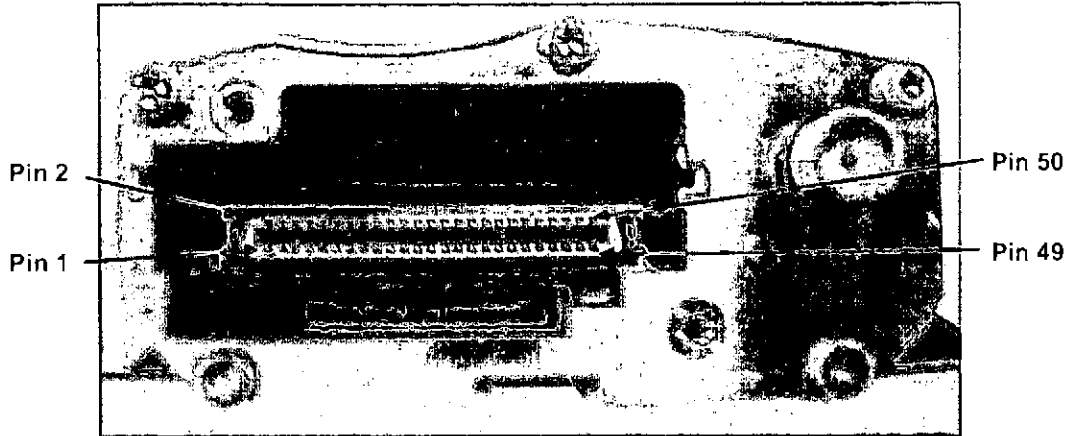


Figure 9: IES connector for feature expansion

Fastrack Supreme User Guide

General Presentation

Table 3: IES Connector Description

Pin Number	Signal Name		I/O type	Voltage	I/O*	Reset State	Description	Dealing with unused pins
	Nominal	Mux						
1	GND						Ground	
2	GND						Ground	
3	GPIO4	COL0	C8	GSM-1V8	I/O	Pull-up	Keypad column 0	NC
4	GPIO5	COL1	C8	GSM-1V8	I/O	Pull-up	Keypad column 1	NC
5	GPIO6	COL2	C8	GSM-1V8	I/O	Pull-up	Keypad column 2	NC
6	GPIO7	COL3	C8	GSM-1V8	I/O	Pull-up	Keypad column 3	NC
7	VPAD-USB			VPAD-USB	I		USB Power supply input	NC
8	USB-DP			VPAD-USB	I/O		USB Data	NC
9	USB-DM			VPAD-USB	I/O		USB Data	NC
10	GSM-1V8*			GSM-1V8	O		1.8V Supply Output (for GPIO pull-up only)	NC
11	GSM-2V8*			GSM-1V8	O		2.8V Supply Output (for GPIO pull-up only)	NC
12	BOOT			GSM-1V8	I		Not Used	Add a test point / a jumper/ a switch to VCC_1V8 (Pin 10) in case Download Specific mode is used (See product specification for details)
13	~RESET		C4	GSM-1V8	I/O		RESET Input	NC or add a test point
14	AUX-ADC		A2	Analog	I		Analog to Digital Input	Pull to GND
15	~SPI1-CS	GPIO31	C1	GSM-2V8	O	Z	SPI1 Chip Select	NC
16	SPI1-CLK	GPIO32	C1	GSM-2V8	O	Z	SPI1 Clock	NC
17	SPI1-I	GPIO30	C1	GSM-2V8	I	Z	SPI1 Data Input	NC
18	SPI1-IO	GPIO29	C1	GSM-2V8	I/O	Z	SPI1 Data Input / Output	NC
19	SPI2-CLK	GPIO32	C1	GSM-2V8	O	Z	SPI2 Clock	NC
20	SPI2-IO	GPIO33	C1	GSM-2V8	I/O	Z	SPI2 Data Input / Output	NC
21	~SPI2-CS	GPIO35	C1	GSM-2V8	O	Z	SPI2 Chip Select	NC
22	SPI2-I	GPIO34	C1	GSM-2V8	I	Z	SPI2 Data Input	NC
23	CT104-RXD2	GPIO15	C1	GSM-1V8	O	Z	Auxiliary RS232 Receive	Add a test point for firmware upgrade
24	CT103-TXD2	GPIO14	C1	GSM-1V8	I	Z	Auxiliary RS232 Transmit	(TXD2) Pull-up to VCC_1V8 with 100kΩ and add a test point for firmware update
25	~CT106-CTS2	GPIO16	C1	GSM-1V8	O	Z	Auxiliary RS232 Clear To Send	(CTS2) Add a test point for firmware update
26	~CT105-RTS2	GPIO17	C1	GSM-1V8	I	Z	Auxiliary RS232 Request To Send	(RTS2) Pull-up to VCC_1V8 with 100kΩ and add a test point for

Fastrack Supreme User Guide

General Presentation

Pin Number	Signal Name		I/O type	Voltage	I/O*	Reset State	Description	Dealing with unused pins
	Nominal	Mux						
								firmware update
27	GPIO8	COL4	C8	GSM-1V8	I/O	Pull-up	Keypad column 4	NC
28	GPIO26	SCL	A1	Open Drain	O	Z	I ² C Clock	NC
29	GPIO19		C1	GSM-2V8	I/O	Z		NC
30	GPIO27	SDA	A1	Open Drain	I/O	Z	I ² C Data	NC
31	GPIO20		C1	GSM-2V8	I/O	Undefined		NC
32	INT0	GPIO3	C1	GSM-1V8	I	Z	Interruption 0 Input	If INT0 is not used, it should be configured as GPIO
33	GPIO23	**	C1	GSM-2V8	I/O	Z		NC
34	GPIO22	**	C1	GSM-2V8	I/O	Z		NC
35	~CT108-2-DTR1	GPIO41	C1	GSM-2V8	I	Z	Main RS232 Data Terminal Ready	(DTR1) Pull-up to VCC_2V8 with 100kΩ
36	PCM-SYNC			GSM-1V8	O	Pull-down	PCM Frame Synchro	NC
37	PCM-IN		C5	GSM-1V8	I	Pull-up	PCM Data Input	NC
38	PCM-CLK			GSM-1V8	O	Pull-down	PCM Clock	NC
39	PCM-OUT			GSM-1V8	O	Pull-up	PCM Data Output	NC
40	AUX-DAC			Analog	O		Digital to Analog Output	NC
41	VCC-2V8			VCC_2V8	O		LDO 2.8V Supply Output	NC
42	GND						Ground	
43	DC-IN			DC-IN from 5.5V~32VDC	O		DC voltage input through Micro-Fit connector	NC
44	DC-IN			DC-IN from 5.5V~32VDC	O		DC voltage input through Micro-Fit connector	NC
45	GND						Ground	
46	4V			4V	O		4V DC/DC converter Output	NC
47	4V			4V	O		4V DC/DC converter Output	NC
48	GND						Ground	
49	GND						Ground	
50	GND						Ground	

Fastrack Supreme User Guide General Presentation

3.2.2 Power supply cable

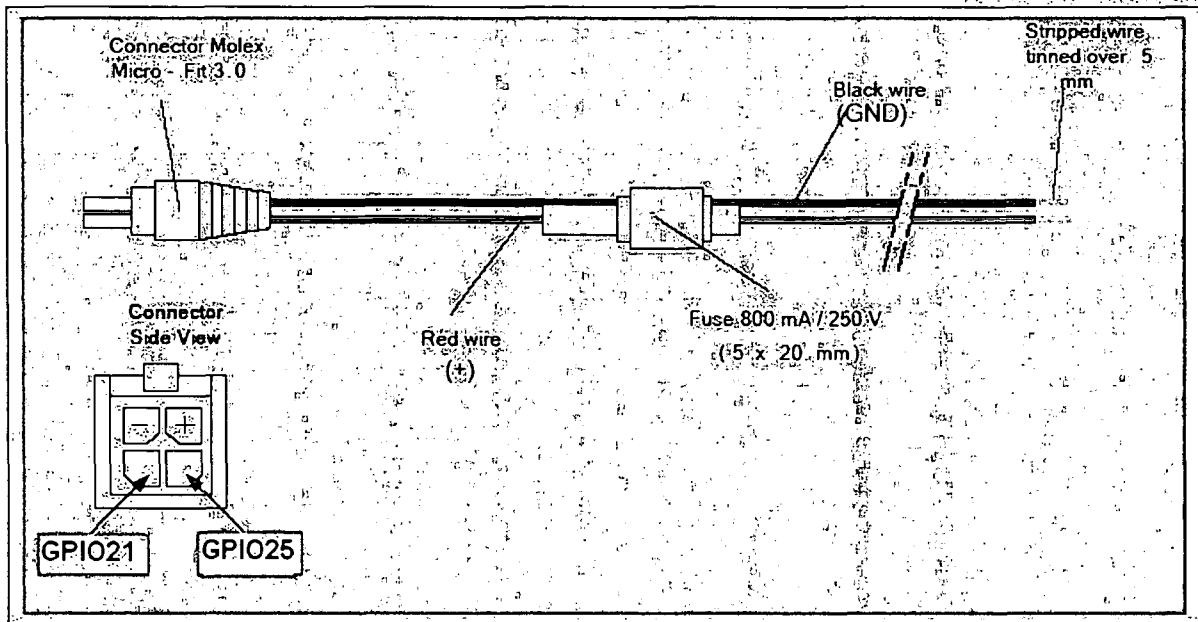


Figure 10: Power supply cable

Fastrack Supreme User Guide

General Presentation

Component	Characteristics
Micro-Fit connector 4-pin	Part number: MOLEX 43025-0400
Cable	Cable length: ~1.5 m
Wire	Core: tinned copper 24 x 0.2 mm
	Section: 0.75 mm ²

Fastrack Supreme User Guide

Features and Services

4 Features and Services

4.1 Basic Features and Services

Basic features of the FASTRACK Supreme and available services are summarized in the table below.

Table 4: Basic features of the FASTRACK Supreme

Features	GSM850 / GSM900	DCS1800 / PCS1900
Open AT[®]	Open AT [®] programmable: Native execution of embedded standard ANSI C applications, Custom AT command creation, Custom application library creation, Standalone operation.	
Standard	850MHz / 900 MHz. E-GSM compliant. Output power: class 4 (2W). Fully compliant with ETSI GSM phase 2 + small MS.	1800 MHz / 1900MHz Output power: class 1 (1W). Fully compliant with ETSI GSM phase 2 + small MS.
GPRS	Class 10. PBCCH support. Coding schemes: CS1 to CS4. Compliant with SMG31bis. Embedded TCP/IP stack.	
EGPRS	Output power: 0.5W	Output power: 0.4W
(for FASTRACK Supreme 20 only)	Class 10. PBCCH support. Coding schemes: MCS1 to MCS9. Compliant with SMG31bis. Embedded TCP/IP stack.	

Fastrack Supreme User Guide

Features and Services

Features	GSM850 / GSM900	DCS1800 / PCS1900
Interfaces	RS232 (V.24/V.28) Serial interface supporting: <ul style="list-style-type: none"> ▪ Baud rate (bits/s): 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800 and 921600. ▪ Autobauding (bits/s): from 1200 to 921600. 2 General Purpose Input/Output gates (GPIOs) available. 1.8 V / 3 V SIM interface. AT command set based on V.25ter and GSM 07.05 & 07.07. Open AT® interface for embedded application. Open AT® Plug-In Compatible.	
SMS	Text & PDU. Point to point (MT/MO). Cell broadcast.	
Data	Data circuit asynchronous. Transparent and Non Transparent modes. Up to 14.400 bits/s. MNP Class 2 error correction. V42.bis data compression.	
Fax	Automatic fax group 3 (class 1 and Class 2).	
Audio	Echo cancellation Noise reduction Telephony. Emergency calls. Full Rate, Enhanced Full Rate, Half Rate operation and Adaptive Multi-Rate (FR/EFR/HR/AMR). Dual Tone Multi Frequency function (DTMF).	



Fastrack Supreme User Guide
Features and Services

Features	GSM850 / GSM900	DCS1800 / PCS1900
GSM supplement services	Call forwarding. Call barring. Multiparty. Call waiting and call hold. Calling line identity. Advice of charge. USSD	
Other	DC power supply Real Time Clock with calendar Complete shielding	

For other detailed technical characteristics, refer to Section 8.

Fastrack Supreme User Guide

Features and Services

4.2 Additional NEW Features

4.2.1 Support Additional GSM850/PCS1900 Bands

Apart from GSM900/DCS1800, the FASTRACK Supreme Plug & Play now supports also the GSM850/PCS1900 bands. FASTRACK Supreme is fully compliant to PTCRB and FCC also.

4.2.2 IES Interface for Easy Expansion of Application Features

The FASTRACK Supreme Plug & Play offers a 50 pin Internal Expansion Socket (IES) Interface accessible for customer use. It is the additional interface which is easy for customers to expand their application features without voiding the warrantee of the FASTRACK Supreme, by simply plugging in an Internal Expansion Socket Module (IESM) board through the matting connector of the IES interface.

Thanks to the flexible IES interface, customers are ready to expand the application features by plugging in the corresponding Internal Expansion Socket Module (IESM) of GPS, I/O expander..., etc.

For brief description of the interface, please refer to Section 3.2.1.4.

For technical detail, please refer to Document [11] or contact your Wavecom distributor or Wavecom FAE.

4.2.3 Serial Port Auto Shut Down or Improving Power Consumption

In order to save power consumption when there is no data communication between the Plug & Play and the DTE, FASTRACK Supreme has now implement the Serial Port Auto Shut Down feature. User can activate or deactivate the Serial Port Auto Shut Down mode by simple AT-command.

For detail, please refer to Section 7.3.4.

4.2.4 Real Time Clock (RTC) for Saving Date and Time

The FASTRACK Supreme has now implemented the Real Time Clock for saving date and time when the Plug & Play is unplugged from the DC power supply through the DC power cable.

For detail, please refer to Section 7.8.

Fastrack Supreme User Guide
Features and Services

4.2.5 SIM Card Lock Feature

The FASTRACK Supreme has now implemented a SIM connector having a carrier with lock. This helps ensuring the user to have proper SIM card insertion and locked before proper use of GSM network.

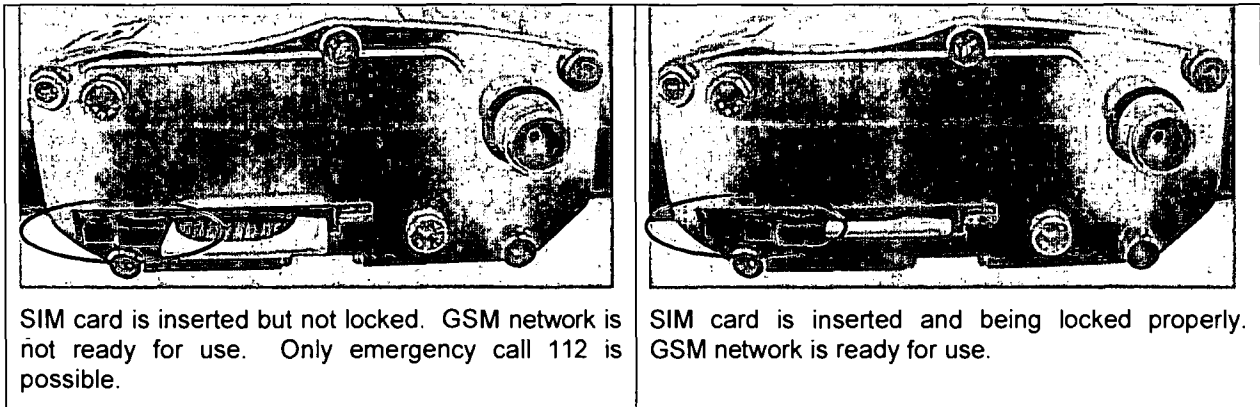


Figure 11: SIM card lock feature

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

5 Using the FASTRACK Supreme Plug & Play

5.1 Getting Started

5.1.1 Mount the FASTRACK Supreme

To mount the FASTRACK Supreme on its support, bind it using the holding bridles as shown in the Figure 12 below.

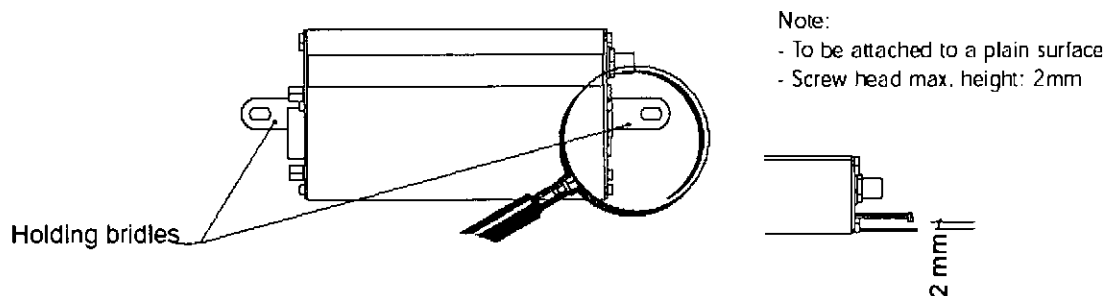


Figure 12: FASTRACK Supreme mounting

For the drill template, refer to Figure 18.

5.1.2 Set up the FASTRACK Supreme

To set up the FASTRACK Supreme, perform the following operations:

- Insert the SIM card into the SIM card holder of the FASTRACK Supreme.
- Lock the SIM card by sliding the lever towards the SIM card.
- Connect the antenna to the SMA connector.
- Connect both sides of the serial and control cable (15-pin Sub HD connector on the FASTRACK Supreme side).
- Connect the power supply cable to the external power supply source.

Note:

For automotive application, it is recommended to connect the V+BATTERY line of the FASTRACK Supreme directly to the battery positive terminal.

- Plug the power supply cable into the FASTRACK Supreme and switch on the external power supply source.
- The FASTRACK Supreme is ready to work. Refer to Section 5.10 for the description of AT commands used to configure the FASTRACK Supreme.

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

5.1.3 Check the communication with the FASTRACK Supreme

To check the communication with the FASTRACK Supreme, do the following operations:

- Connect the RS232 link between the DTE (port COM) and the FASTRACK Supreme (DCE).
- Configure the RS232 port of the DTE as follows:
 - Bits per second: **115.200 bps**,
 - Data bits: **8**,
 - Parity: **None**,
 - Stop bits: **1**,
 - Flow control: **hardware**.
- Using a communication software such as a HyperTerminal, enter the **AT+J** command. The response of the FASTRACK Supreme must be **OK** displayed in the HyperTerminal window.
- If the communication cannot be established with the FASTRACK Supreme, do the following:
 - Check the RS232 connection between the DTE and the FASTRACK Supreme (DCE),
 - Check the configuration of the port COM used on the DTE.
- Example of AT commands which can be used after getting started the FASTRACK Supreme:
 - **AT+CGMI** : FASTRACK Supreme answer is "WAVECOM MODEM" when serial link is OK.
 - **AT+CPIN=xxxx** : to enter a PIN code xxxx (if activated).
 - **AT+CSQ**: to verify the received signal strength.
 - **AT+CREG?**: to verify the registration of the FASTRACK Supreme Plug & Play on the network.
 - **ATD<phone number>;**: to initiate a voice call.
 - **ATH**: to hang up (end of call).

For further information on these AT commands and their associated parameters, refer to "AT Commands Interface Guide" [6].

5.1.4 Reset the FASTRACK Supreme

To reset the FASTRACK Supreme, a hardware reset signal is available on pin 14 of the Sub HD 15-pin connector (RESET).

The FASTRACK Supreme reset is carried out when this pin is low for at least 200 μ s.

Warning This signal has to be considered as an emergency reset only. For further details on the FASTRACK Supreme reset, refer to Section 7.7.

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

5.2 Specific Recommendations when Using the FASTRACK Supreme on Trucks

Warning: The power supply connection of the FASTRACK Supreme must NEVER be directly connected to the truck battery.

5.2.1 Recommended Power Supply Connection on Trucks

All trucks have a circuit breaker on the exterior of the cabin. The circuit breaker is used for safety reasons: if a fire blazes in the trucks, (for example, on the wiring trunk) the driver may cut the current source to avoid any damage (explosion). The circuit breaker is connected to the truck ground, most often associated with the fuse box.

Most of truck circuit breakers do not cut the Positive Supply line of the battery, but cut the ground line of the later.

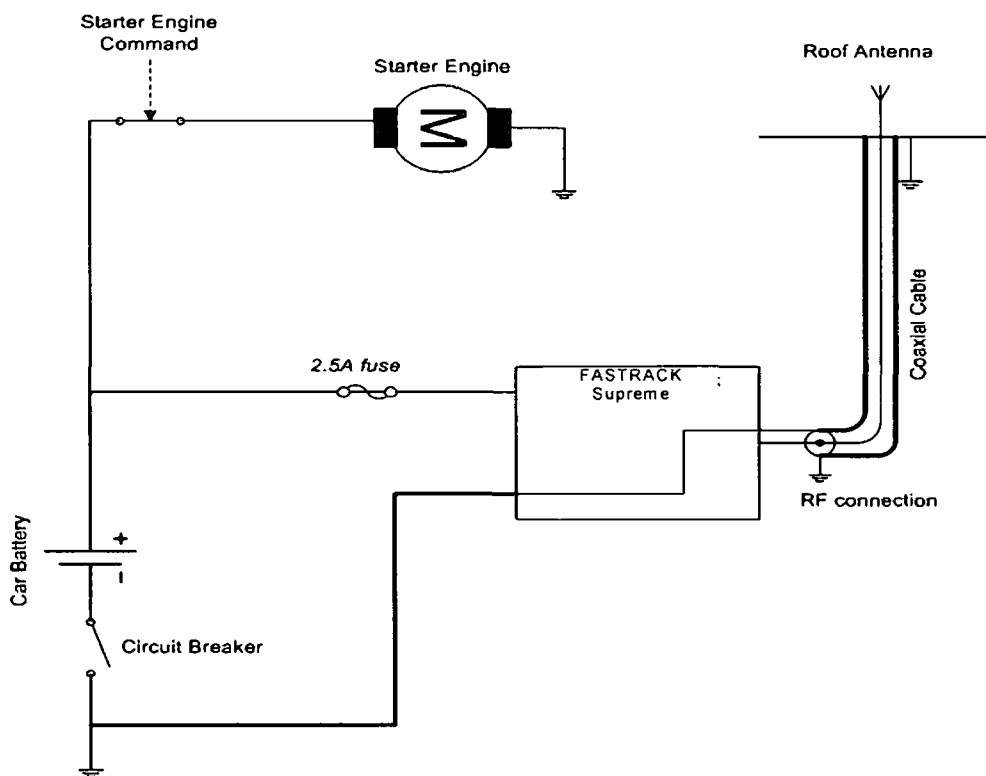


Figure 13: Recommended power supply connection on trucks

Figure 13 gives the recommended power supply connection where the ground connection of the FASTRACK Supreme is not directly connected to the battery but is connected after the Circuit Breaker (on the truck ground or the fuse box).

5.2.2 Technical Constraints on Trucks

It is highly not recommended to connect directly the power supply on the battery rather than on the circuit breaker. The FASTRACK Supreme may be damaged when starting the truck if the circuit breaker is switched OFF (in this case, the truck ground and the battery ground will be connected through the FASTRACK Supreme as shown in the figure below).

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

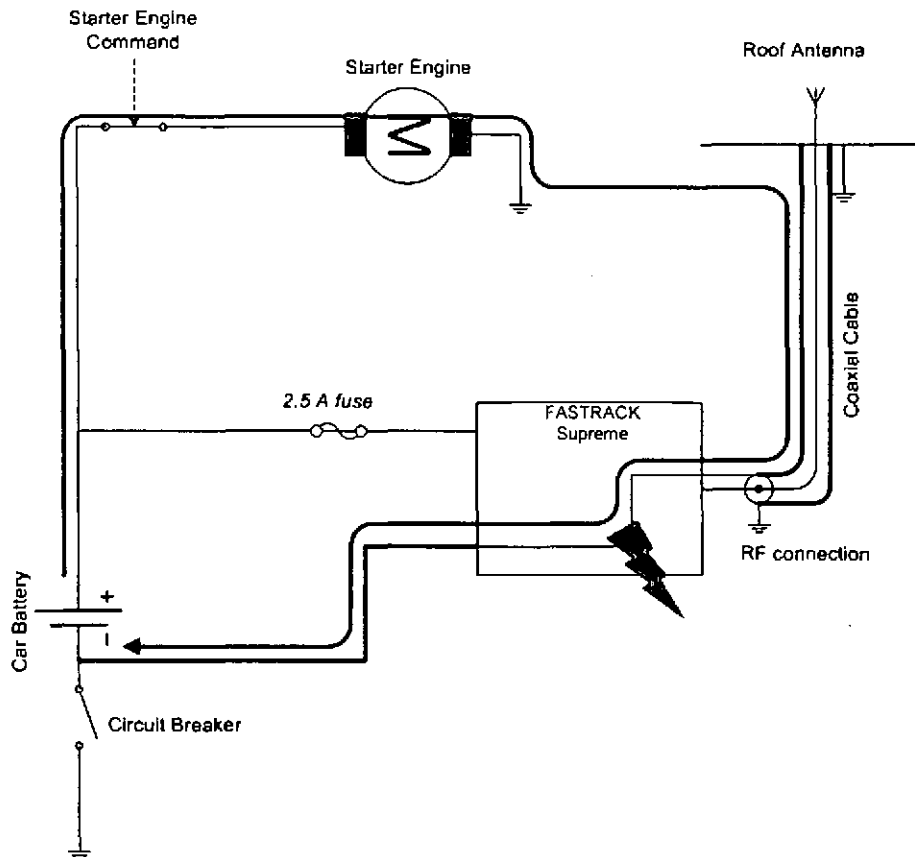


Figure 14: Example of electrical connection which may dramatically damage the FASTRACK Supreme

Figure 14 gives an example of electrical connection which may dramatically damage the FASTRACK Supreme when its ground connection is directly connected to the battery ground.

In this example, when the circuit breaker is switched OFF, the current flows through the FASTRACK Supreme and powers the electrical circuit of the truck (for example, dashboard).

Furthermore, when the Starter Engine command will be used, it will destroy the cables or the FASTRACK Supreme.

Since the internal tracks are not designed to support high current (up to 60 A when starting the truck), they will be destroyed.

5.3 FASTRACK Supreme Operational Status

The FASTRACK Supreme operational status is given by the red LED status located next to the SIM connector on the FASTRACK Supreme panel.

The Table 5 below gives the meaning of the various statuses available.

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

Table 5: FASTRACK Supreme operational status

LED Status	LED light activity	FASTRACK Supreme Plug & Play status
ON	LED ON permanent	FASTRACK Supreme is switched ON but not registered on the network
	LED Flashing slowly	FASTRACK Supreme is switched ON and registered on the network, but no communication is in progress (Idle mode)
	LED Flashing rapidly	FASTRACK Supreme is switched ON and registered on the network, and a communication is in progress
OFF	LED OFF	FASTRACK Supreme is switched OFF, or Flash LED is disabled* by the user.

* : Flash LED can be disabled by user when in Slow Standby mode in order to save power consumption. For detail, please refer to Section 7.9.

5.4 Echo Function Disabled

If no echo is displayed when entering an AT command, that means:

- The "local echo" parameter of your communication software (such as HyperTerminal) is disabled.
- The FASTRACK Supreme echo function is disabled.

To enable the FASTRACK Supreme echo function, enter the **ATE1**.

When sending AT commands to the FASTRACK Supreme by using a communication software, it is recommended:

- to disable the "local echo" parameter of your communication software (such as HyperTerminal),
- to enable the FASTRACK Supreme echo function (**ATE1** command).

In a Machine To Machine communication with the FASTRACK Supreme, it is recommended to disable the FASTRACK Supreme echo function (**ATE0** command) in order to avoid useless CPU processing.

For further information on **ATE0** and **ATE1** commands, refer to "AT Commands Interface Guide" [6].

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

5.5 Verify the Received Signal Strength

The FASTRACK Supreme establishes a call only if the received signal is sufficiently strong.

To verify the received signal strength, do the following operations:

- Using a communication software such as HyperTerminal, enter the AT command **AT+CSQ**. The response returned has the following format:
+CSQ: <rsssi>, <ber> with:
 - **<rsssi>** = received signal strength indication,
 - **<ber>** = channel bit error rate.
- Verify the **<rsssi>** value returned using the Table 6 below.

Table 6: Values of received signal strength

Value of received signal strength indication (<rsssi>)	Interpretation of the received signal strength
0 - 10	Insufficient(*)
11 - 31	Sufficient(*)
32 - 98	Not defined
99	No measure available

(*) Based on general observations.

For further information on AT commands, refer to "AT Commands Interface Guide" [6].

5.6 Check the Pin Code Status

To check that the pin code has been entered, use a communication software such as a HyperTerminal, then enter **AT+CPIN?** command.

The table below gives the main responses returned:

Table 7: AT+CPIN Responses

AT+CPIN response (*)	Interpretation
+CPIN: READY	Code PIN has been entered
+CPIN: SIM PIN	Code PIN has not been entered

(*)For further information on the other possible responses and their meaning, refer to "AT Commands Interface Guide" [6].

5.7 Switch between EU/US Band(s)

To switch between EU/US band(s) for the FASTRACK Supreme, use a communication software such as a HyperTerminal, then enter **AT+WMBS=<band> [, <param>]** command.

The table below gives the commands for various band(s) selection:

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

Table 8: AT+WMBS Band Selection

AT+WMBS response (*)	Interpretation
AT+WMBS=0 , x	Select mono band mode 850MHz.
AT+WMBS=1 , x	Select mono band mode extended 900MHz
AT+WMBS=2 , x	Select mono band mode 1800MHz
AT+WMBS=3 , x	Select mono band mode 1900MHz
AT+WMBS=4 , x	Select dual band mode 850/1900MHz
AT+WMBS=5 , x	Select dual band mode extended 900MHz/1800MHz
AT+WMBS=6 , x	Select dual band mode extended 900MHz/1900MHz

(*)For further information on the other possible responses and their meaning, refer to "AT Commands Interface Guide" [6].

Remark:

x=0 : The Plug & Play will have to be reset to start on specified band(s).

x=1 : The change is effective immediately. This mode is forbidden while in communication and during Plug & Play initialization.

Refer to "AT Commands Interface Guide" [6] for further information on AT commands.

5.8 Check the Band(s) Selection

To check the band selection for the FASTRACK Supreme, use a communication software such as a HyperTerminal, then enter **AT+WMBS?** command.

The table below gives the main responses returned:

Table 9: AT+WMBS Responses

AT+WMBS response (*)	Interpretation
+WMBS: 0 , x	Mono band mode 850MHz is selected
+WMBS: 1 , x	Mono band mode extended 900MHz is selected
+WMBS: 2 , x	Mono band mode 1800MHz is selected
+WMBS: 3 , x	Mono band mode 1900MHz is selected
+WMBS: 4 , x	Dual band mode 850/1900MHz are selected
+WMBS: 5 , x	Dual band mode extended 900MHz/1800MHz are selected
+WMBS: 6 , x	Dual band mode extended 900MHz/1900MHz are selected

(*)For further information on the other possible responses and their meaning, refer to "AT Commands Interface Guide" [6].

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

5.9 Verify the FASTRACK Supreme Network Registration

1. Make sure a valid SIM card has been previously inserted and locked in the FASTRACK Supreme SIM card holder.
2. Using a communication software such as a HyperTerminal, enter the following AT commands:
 - a. **AT+CPIN=xxxx** to enter PIN code xxxx.
 - b. **AT+WMBS?** To check the current band setting in the Plug & Play
 - c. **AT+WMBS=<Band> [, <param>]** To switch band/mode when needed
 - d. **AT+CREG?** . To ascertain the registration status.
 The format of the returned response is as follows:
+CREG: <mode> , <stat> with:
 - **<mode>** = unsolicited registration message configuration,
 - **<stat>** = registration state.
3. Verify the state of registration according the returned value given in the table below.

Table 10: Values of network registration

Returned Value (*) <mode> , <stat>	Network registration
+CREG: 0,0	No (not registered)
+CREG: 0,1	Yes (registered, home network)
+CREG: 0,5	Yes (registered, roaming)

(*)For further information on the other returned values and their meaning, refer to "AT Commands Interface Guide" [6].

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

If the FASTRACK Supreme is not registered, perform the following procedure:

- Check the connection between the FASTRACK Supreme and the antenna.
- Verify the signal strength to determine the received signal strength (refer to Section 5.5).

Note: For information on AT command relating to the network registration in GPRS mode, and in particular: CGREG, CGCLASS, CGATT, refer to "AT Commands Interface Guide" [6].

5.10 Main AT Commands for the Plug & Play

The table below lists the main AT commands required for starting the Plug & Play.

For other AT commands available or further information on the AT commands, refer to "AT Commands Interface Guide" [6].

Table 11: Main usual AT commands for the Plug & Play

Description	AT commands	FASTRACK Supreme Plug & Play, response.	Comment
Check for selected band(s)	AT+WMBS?	+WMBS:<Band>,<ResetFlag> OK	Current selected band mode is return
Band(s) switch	AT+WMBS=<Band>	OK	Band switch is accepted, Plug & Play has to be reset for change to be effective
	AT+WMBS=<Band>,0	OK	Band switch is accepted, Plug & Play has to be reset for change to be effective
	AT+WMBS=<Band>,1	OK	Band switch is accepted and GSMS stack restarted
	AT+WMBS=<Band>	+CME ERROR: 3	Band not allowed
Enter PIN Code	AT+CPIN=xxxx (xxxx = PIN code)	OK	PIN Code accepted.
		+CME ERROR: 16	Incorrect PIN Code (with +CMEE = 1 mode) (1*)
		+CME ERROR: 3	PIN code already entered (with +CMEE = 1 mode) (1*)
Network registration checking	AT+CREG?	+CREG: 0,1	FASTRACK Supreme Plug & Play registered on the network.
		+CREG: 0,2	FASTRACK Supreme Plug & Play not registered on the network, registration attempt.

Fastrack Supreme User Guide

Using the FASTRACK Supreme Plug & Play

Description	AT commands	FASTRACK Supreme Plug & Play response	Comment
		+CREG: 0,0	FASTRACK Supreme Plug & Play not registered on the network, no registration attempt.
Receiving an incoming call	ATA	OK	Answer the call.
Initiate a call	ATD<phone number>; (Don't forget the « ; » at the end for « voice » call)	OK	Communication established.
		+CME ERROR: 11	PIN code not entered (with +CMEE = 1 mode).
		+CME ERROR: 3	AOC credit exceeded or a communication is already established.
Initiate an emergency call	ATD112; (Don't forget the « ; » at the end for « voice » call)	OK	Communication established.
Communication loss		NO CARRIER	
Hang up	ATH	OK	
Store the parameters in EEPROM	AT&W	OK	The configuration settings are stored in EEPROM.

(1*) The command "AT+CMEE=1" switch to a mode enabling more complete error diagnostics.

5.11 Firmware Upgrade Procedure

The firmware upgrade procedure is used to update the firmware embedded into the FASTRACK Supreme.

That procedure consists in downloading the firmware into internal memories through the RS232 serial link available on the SUB-D 15-pin connector.

Refer to "Firmware upgrade procedure" [8] for a detailed description of this procedure.

Fastrack Supreme User Guide

Troubleshooting

6 Troubleshooting

This section of the document describes possible problems encountered when using the FASTRACK Supreme and their solutions.

To review other troubleshooting information, refer the 'FAQs' (Frequently Asked Questions) page at www.wavecom.com or use the following link:
<http://www.wavecom.com/support/faqs.php>

6.1 No Communication with the FASTRACK Supreme through the Serial Link

If the FASTRACK Supreme does not answer to AT commands through the serial link, refer to the table below for possible causes and solutions.

Table 12: Solutions for no connection with FASTRACK Supreme through serial link

If the Supreme returns	then ask	Action
Nothing	Is the FASTRACK Supreme powered correctly?	Make sure the external power supply is connected to the FASTRACK Supreme and provides a voltage in the range of 5.5 V to 32 V.
	Is the serial cable connected at both sides?	Check the serial cable connection
	Does the serial cable follow correctly pin assignment shown in paragraph 3.2.1.2.	Connect the cable by following pin assignment given in paragraph 3.2.1.1.
Nothing or non-significant characters	Is the communication program properly configured on PC?	Ensure the setting of the communication program is fit to setting of FASTRACK Supreme. FASTRACK Supreme factory setting is: Data bits = 8 Parity = none Stop bits = 1 Baud = 115 200 bps. Flow control = hardware
	Is there another program interfering with the communication program (i.e. Conflict on communication port access)	Close the interfering program.

6.2 Receiving "ERROR" Message

The FASTRACK Supreme returns an "ERROR" message (in reply to an AT command) in the following cases:

Fastrack Supreme User Guide

Troubleshooting

- AT command syntax is incorrect: check the command syntax (refer to "AT Commands Interface Guide" [6]),
- AT command syntax is correct, but transmitted with wrong parameters:
- Enter the **AT+CME=1** command in order to change the error report method to the verbose method, which includes the error codes.
- Enter again the AT command which previously caused the reception of "ERROR" message in order to get the Mobile Equipment error code.

When the verbose error report method is enabled, the response of the FASTRACK Supreme in case of error is as follows:

- Either +CME ERROR: <error result code>,
- Or +CMS ERROR: <error result code>.

Refer to "AT Commands Interface Guide" [6] for error result code description and further details on the **AT +CME** command.

Note: It is strongly recommended to always enable the verbose error report method to get the Mobile Equipment error code (enter **AT +CME=1** command).

6.3 Receiving "NO CARRIER" Message

If the FASTRACK Supreme returns a "NO CARRIER" message upon an attempted call (voice or data), then refer to the table below for possible causes and solutions.

Fastrack Supreme User Guide

Troubleshooting

Table 13: Solutions for "NO CARRIER" message

If the Supreme returns...	Then ask...	Action...
"NO CARRIER"	Is the received signal strong enough?	Refer to section 5.5 to verify the strength of the received signal.
	Is the FASTRACK Supreme registered on the network?	Refer to section 5.9 to verify the registration.
	Is the antenna properly connected?	Refer to section 8.2.7.3 for antenna requirements.
	Is the band selection correction?	Refer to Section 7.2 for band switch
"NO CARRIER" (when trying to issue a voice communication)	Is the semicolon (;) entered immediately after the phone number in the AT command?	Ensure that the semicolon (;) is entered immediately after the phone number in the AT command. e.g. ATD#####;
"NO CARRIER" (when trying to issue a data communication)	Is the SIM card configured for data / fax calls?	Configure the SIM card for data / fax calls (Ask your network provider if necessary).
	Is the selected bearer type supported by the called party?	Ensure that the selected bearer type is supported by the called party.
	Is the selected bearer type supported by the network?	Ensure that the selected bearer type is supported by the network. If no success, try bearer selection type by AT command: AT+CBST=0,0,3

If the FASTRACK Supreme returns a "NO CARRIER" message, you may have the **extended error code** by using AT command **AT+CEER**. Refer to the table below for interpretation of **extended error code**.

Fastrack Supreme User Guide

Troubleshooting

Table 14: Interpretation of extended error code

Error Code	Diagnostic	Hint
1	Unallocated phone number	
16	Normal call clearing	
17	User busy	
18	No user responding	
19	User alerting, no answer	
21	Call rejected	
22	Number changed	
31	Normal, unspecified	
50	Requested facility not subscribed	
68	ACM equal or greater than ACMmax	Credit of your pre-paid SIM card expired.
252	Call barring on outgoing calls	
253	Call barring on incoming calls	
3, 6, 8, 29, 34, 38, 41, 42, 43, 44, 47, 49, 57, 58, 63, 65, 69, 70, 79, 254	Network causes	See "AT Commands Interface Guide" [6] for further details or call network provider.

Note: For all other codes, and/or details, see AT commands documentation [6].

7 Functional Description

7.1 Architecture

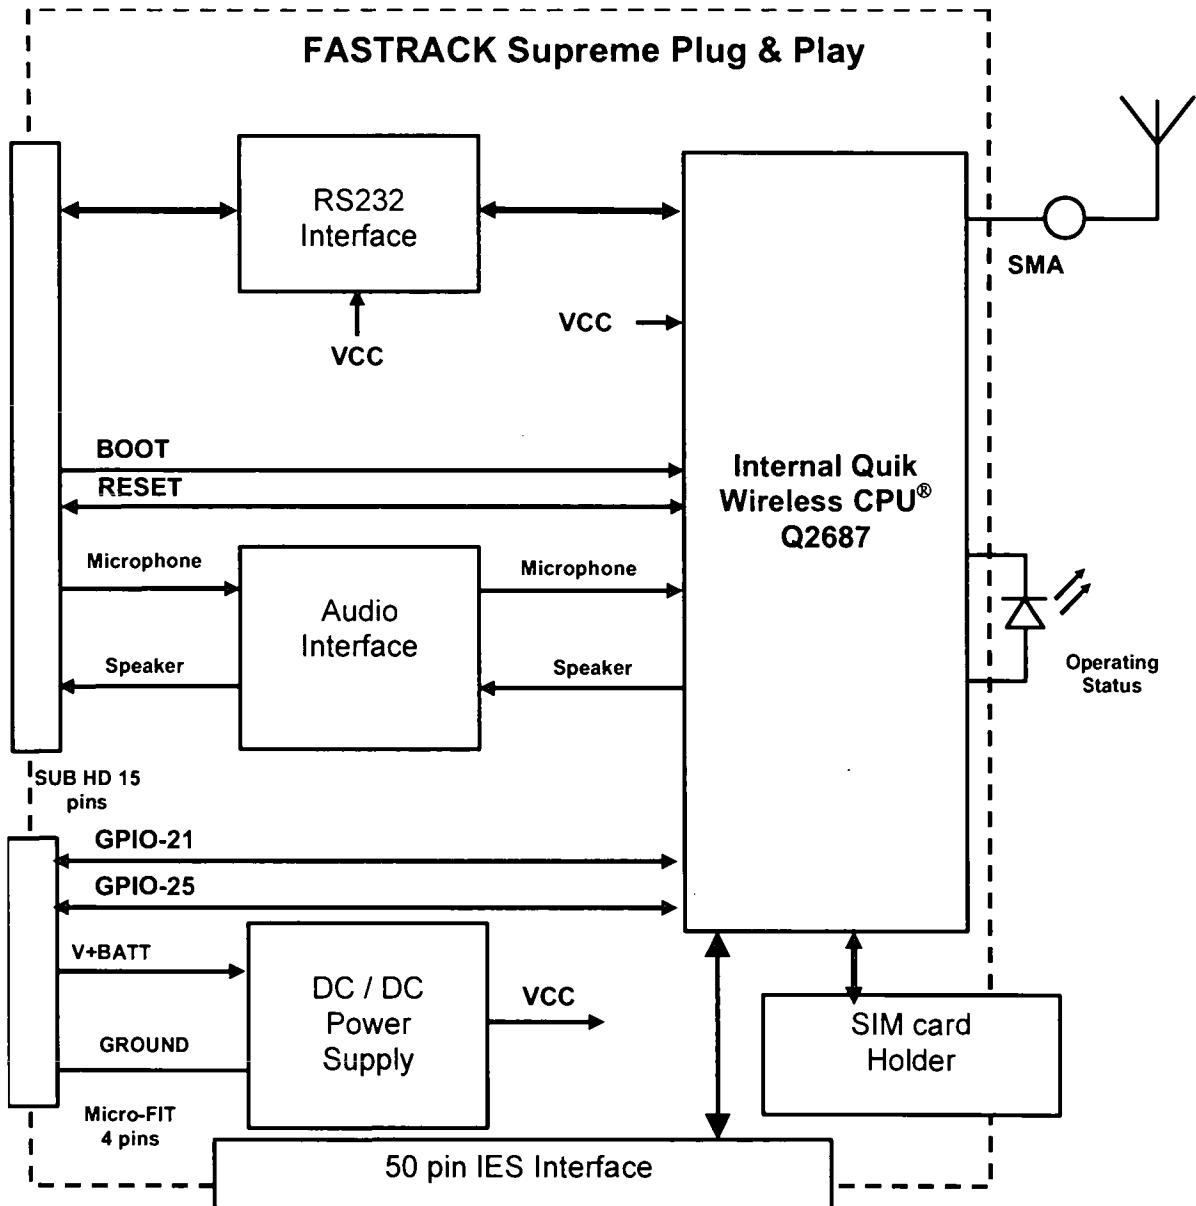


Figure 15: Functional architecture

Fastrack Supreme User Guide

Functional Description

7.2 EU and US Bands

7.2.1 General Presentation

The FASTRACK Supreme is a quad band Plug & Play. It supports either EU bands (EGSM900/DCS1800) or US bands (GSM850/ PCS1900), depending on the band setting within the Plug & Play. Users are free to switch between EU bands and US bands by simple AT commands when the selected bands are supported.

7.2.2 AT COMMAND for Bands Switch

EU/US band is easily switched/checked by AT command **AT+WMBS**.

For detail, please refer to Section 5.7 and 5.8.

7.3 Power Supply

7.3.1 General Presentation

The FASTRACK Supreme is supplied by an external DC voltage (V+BATTERY) from +5.5 V to +32 V at 2.2 A.

Main regulation is made with an internal DC/DC converter in order to supply all the internal functions with a DC voltage.

Correct operation of the FASTRACK Supreme in communication mode is not guaranteed if input voltage (V+BATTERY) falls below 5.5 V.

Note: The minimum input voltage specified here is at the FASTRACK Supreme input. Be careful of the input voltage decrease caused by the power cable. See paragraph 8.2.1 for more information.

7.3.2 Protections

The FASTRACK Supreme is protected by a 800 mA / 250 V fuse directly bonded on the power supply cable.

The FASTRACK Supreme is also protected against voltage over +32 V.

Filtering guarantees:

- EMI/RFI protection in input and output,
- Signal smoothing.

7.4 RS232 Serial Link

7.4.1 General Presentation

The RS232 interface performs the voltage level adaptation (V24/CMOS \Leftrightarrow V24/V28) between the internal FASTRACK Supreme Plug & Play (DCE) and the external world (DTE).

Fastrack Supreme User Guide

Functional Description

The RS232 interface is internally protected (by ESD protection) against electrostatic surges on the RS232 lines.

Filtering guarantees:

- EMI/RFI protection in input and output,
- Signal smoothing.

Signals available on the RS232 serial link are:

- TX data (CT103/TX),
- RX data (CT104/RX),
- Request To Send (CT105/RTS),
- Clear To Send (CT106/CTS),
- Data Terminal Ready (CT108-2/DTR),
- Data Set Ready (CT107/DSR),
- Data Carrier Detect (CT109/DCD),
- Ring Indicator (CT125/RI).

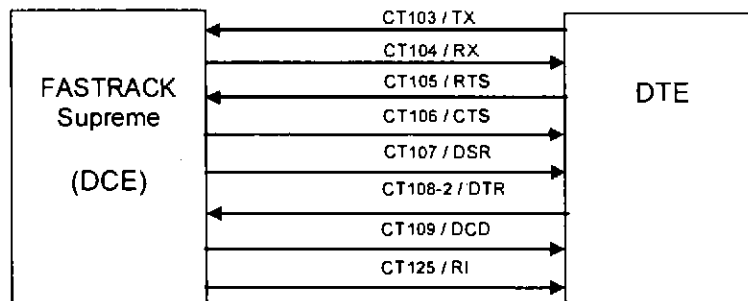


Figure 16: RS232 Serial Link signals

RS232 interface has been designed to allow flexibility in the use of the serial interface signals. However, the use of TX, RX, CTS and RTS signals is mandatory, which is not the case for DTR, DSR, DCD and RI signals which can be not used.

7.4.2 Autobauding Mode

The autobauding mode allows the FASTRACK Supreme to detect the baud rate used by the DTE connected to the RS232 serial link.

Autobauding mode is controlled by AT commands. See "AT Commands Interface Guide" [6] for details on this function.

Fastrack Supreme User Guide

Functional Description

7.4.3 Pin Description

Signal	Sub HD connector Pin number	I/O	I/O type RS232 STANDARD	Description
CTXD/CT103	2	I	TX	Transmit serial data
CRXD/CT104	6	O	RX	Receive serial data
CRTS/CT105	12	I	RTS	Request To Send
CCTS/CT106	11	O	CTS	Clear To Send
CDSR/CT107	7	O	DSR	Data Set Ready
CDTR/CT108-2	8	I	DTR	Data Terminal Ready
CDCD/CT109	1	O	DCD	Data Carrier Detect
CRI/CT125	13	O	RI	Ring Indicator
CT102/GND	9		GND	Ground

7.4.4 Serial Port Auto shut down Feature

The UART1 can be shut down when there is no activity between the DTE and the FASTRACK Supreme Plug & Play. This can help for improving power consumption performance.

Serial Port Auto shut down feature is easily controlled by AT command **AT+WASR**.

- **AT+WASR=1** for entering the serial port auto shut down mode
- **AT+WASR=0** for exiting the serial port auto shut down mode

Refer to "AT Commands Interface Guide" [6] for further information on AT commands.

CAUTION: GPIO24 is reserved for serial port auto shut down feature. It is prohibited for customer use. Improper access to GPIO24 by customer may lead to unexpected behavior on UART1 performance.

Fastrack Supreme User Guide

Functional Description

7.5 General Purpose Input/Output (GPIO)

The FASTRACK Supreme provides two General Purpose Input / Output lines available for external use: GPIO21 and GPIO25.

These GPIOs may be controlled by AT commands:

- **AT+WIOW** for a write access to the GPIO value, when the GPIO is used as an output,
- **AT+WIOR** for a read access to the GPIO value, when the GPIO is used as an input.

Refer to "AT Commands Interface Guide" [6] for further information on AT commands.

After reset, both GPIOs are configured as inputs. The **AT+WIOM** command has to be used to change this configuration (refer to "AT Commands Interface Guide" [6] for further details).

Pin description

Signal	Power Supply connector (4-pin Micro-Fit)	I/O	I/O Voltage	Reset state	Description	Multiplex with
GPIO21	3	I/O	2V8	Undefined	General Purpose I/O	No mux
GPIO25	4	I/O	2V8	Z	General Purpose I/O	INT1

Notes:

- The power supply cable may need to be modified due to the GPIO signals (GPIO21 & GPIO25) available on the 4-pin Micro-FIT connector of the FASTRACK Supreme.
- The previous generation M1306B have GPIO4 and GPIO5 being replaced by GPIO21 and GPIO25 respectively, for which both are of LOW level at reset state.

7.6 BOOT

This signal must not be connected. Its use is strictly reserved to Wavecom or competent retailers.

Caution: Previous generation M1306B has BOOT signal of HIGH level at 2.8V. But the FASTRACK Supreme now of 1.8V BOOT instead.

7.7 RESET

7.7.1 General presentation

This signal is used to force a reset procedure by providing low level during at least 200 μ s.

This signal must be considered as an emergency reset only. A reset procedure is automatically driven by an internal hardware during the power-up sequence.

Fastrack Supreme User Guide

Functional Description

This signal may also be used to provide a reset to an external device. It then behaves as an output. If no external reset is necessary, this input may be left open, if used (emergency reset), it has to be driven either by an open collector or an open drain output:

- RESET pin 14 = 0, for FASTRACK Supreme Reset,
- RESET pin 14 = 1, for normal mode.

Pin description

Signal	Sub HD 15-Pin connector Pin number	I/O	I/O type	Voltage	Description
RESET	14	I/O	Open Drain	1V8	FASTRACK Supreme Reset

Caution: Previous generation M1306B has RESET signal of HIGH level at 2.8V. But the FASTRACK Supreme now of 1.8V RESET instead.

Additional comments on RESET:

The RESET process is activated either by the external RESET signal or by an internal signal (coming from a RESET generator). This automatic reset is activated at Power-up.

The FASTRACK Supreme remains in RESET mode as long as the RESET signal is held low.

Caution: This signal should be used only for "emergency" reset.

A software reset is always preferred to a hardware reset.

Note: See "AT Commands Interface Guide" [6] for further information on software reset.

7.7.2 Reset Sequence

To activate the "emergency" reset sequence, the RESET signal has to be set to low for 200 μ s minimum.

As soon as the reset is done, the AT interface answers "OK" to the application. For this, the application must send **AT-J**.

If the application manages hardware flow control, the AT command may be sent during the initialization phase. Another solution is to use the **AT+WIND** command to get an unsolicited status from the FASTRACK Supreme.

For further details, refer to AT commands "AT Commands Interface Guide" [6].

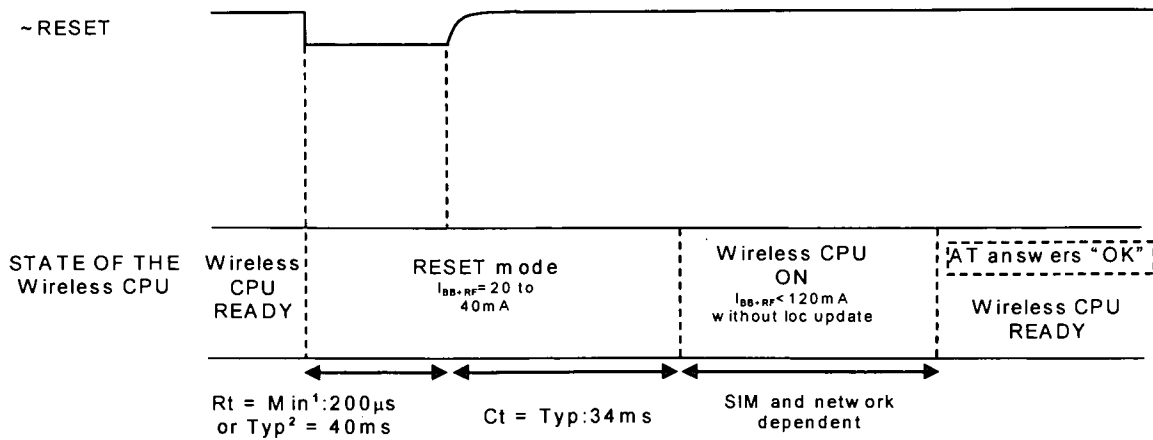


Figure 17: Reset sequence diagram

7.8 Audio

Audio interface is a standard one for connecting a phone handset.

Echo cancellation and noise reduction features are also available to improve the audio quality in case of hand-free application.

7.8.1 Microphone Inputs

The microphone inputs are differential ones in order to reject common mode noise and TDMA noise.

They already include the convenient biasing for an electret microphone (0.5 mA and 2 Volts) and are ESD protected.

This electret microphone may be directly connected to these inputs allowing an easy connection to a handset.

The microphone impedance must be around 2 kΩ.

AC coupling is already embedded in the Wireless CPU®.

The gain of the microphone inputs is internally adjusted and may be tuned from 30 dB to 51 dB using an **AT +VGT** command (refer to AT commands documentation [6]).

Pin description

Signal	Sub D 15-pin Pin #	I/O	I/O type	Description
CMIC2P	4	I	Analog	Microphone positive input
CMIC2N	5	I	Analog	Microphone negative input

Fastrack Supreme User Guide

Functional Description

7.8.2 Speaker Outputs

This connection is differential to reject common mode noise and TDMA noise.

Speaker outputs are connected to internal push-pull amplifiers and may be loaded down between 32 to 150 Ohms and up to 1 nF (see details in table *Speaker gain vs Max output voltage*, in "AT Commands Interface Guide" [6]). These outputs may be directly connected to a speaker.

The output power may be adjusted by step of 2 dB. The gain of the speaker outputs is internally adjusted and may be tuned using an **AT +VGR** command (refer to AT commands documentation [6]).

Pin description

Signal	Sub D 15-pin Pin #	I/O	I/O type	Description
CSPK2P	10	O	Analog	Speaker positive output
CSPK2N	15	O	Analog	Speaker negative output

Fastrack Supreme User Guide

Functional Description

7.9 Real Time Clock (RTC)

The FASTRACK Supreme has now implemented the Real Time Clock for saving date and time when the Plug & Play is unplugged from the DC power supply through the DC power cable.

Item	Min	Typical	Max
Charging Time start from fully discharged to fully charged		940 min	
RTC Time Period*	Guarantee	2475 min	
	Non-guarantee	5225 min	

Remark: The RTC time period is measured from the RTC battery is fully charged before being unplugged from the DC power source.

7.10 FLASH LED

The FASTRACK Supreme has a red LED indicator to show the status of the GSM network. For detail description of the various status, please refer to Section 5.3.

However, during operation mode of Slow Standby, there will be no network registration and so the red LED indicator will always be ON. It is possible for user to deactivate the LED indication during Slow Standby mode, in order to reduce power consumption.

The Flash LED can be deactivated by AT command `at+whcnf=1,0`

The Flash LED can be activated by AT command `at+whcnf=1,1`

However, the new setting will be taken into account only after a restart. For detail, please refer to Document[6].

Fastrack Supreme User Guide

Technical Characteristics

8 Technical Characteristics

8.1 Mechanical Characteristics

Table 15: Mechanical characteristics

Dimensions	73 x 54.5 x 25.5 mm (excluding connectors)
Overall Dimension	88 x 54.5 x 25.5 mm
Weight	≈ 80 grams (FASTRACK Supreme only) < 120 grams (FASTRACK Supreme + bridles + power supply cable)
Volume	101.5 cm ³
Housing	Aluminum profiled

The next page gives the dimensioning diagram of the FASTRACK Supreme including the clearance areas to take into account for the FASTRACK Supreme installation.

Fastrack Supreme User Guide
Technical Characteristics

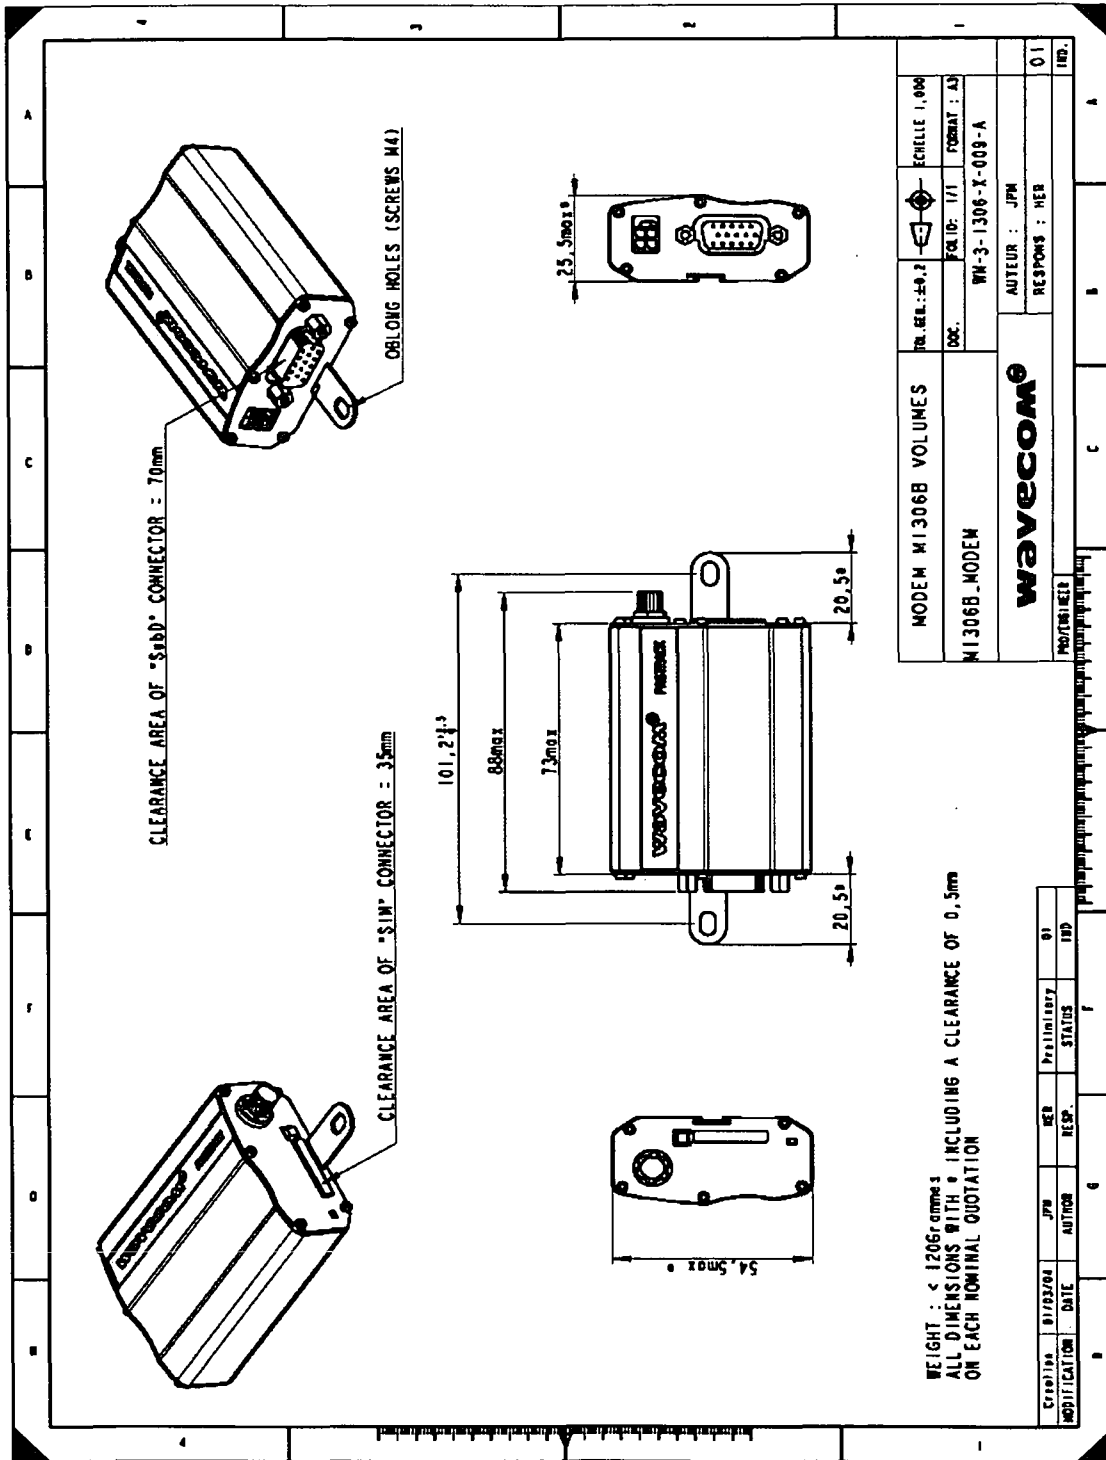


Figure 18: Dimensioning diagram

Fastrack Supreme User Guide

Technical Characteristics

8.2 Electrical Characteristics

8.2.1 Power Supply

Table 16: Electrical characteristics

Operating Voltage ranges	5.5 V to 32 V DC.
Maximum current	480 mA Average at 5.5V. 2.1 A Peak at 5.5 V. (TBC)

Note:

The FASTRACK Supreme is permanently powered once the power supply is connected. The following table describes the consequences of over-voltage and under-voltage with the FASTRACK Supreme.

Warning:

All the input voltages specification described in this Section are at the FASTRACK Supreme input. While powering the FASTRACK Supreme, take into account the input drop caused by the power cable. With the delivered cable, this input drop is around 700 mV at 5.5 V and 220 mV at 32V.

Table 17: Effects of power supply defect

If the voltage	then
falls below 5.5 V,	the GSM communication is not guaranteed.
is over 32 V (Transient peaks),	the FASTRACK Supreme guarantees its own protection.
Is over 32 V (continuous overvoltage)	the protection of the FASTRACK Supreme is done by the fuse (the supply voltage is disconnected).

The fuse is a 800 mA / 250 V FAST-ACTING 5*20mm. See Section 10 for recommended references.

The following table provides information on power consumption of the FASTRACK Supreme, assuming an operating temperature of +25 °C and using a 3 V SIM card.

Fastrack Supreme User Guide
Technical Characteristics

8.2.2 Power Consumption

The following table provides information on power consumption of the FASTRACK Supreme, assuming an operating temperature of +25 °C and using a 3 V SIM card.

Table 18: Power consumption (1*)

Power Consumption In E-GSM 900/DCS 1800 MHz - GPRS class 10				E-GSM 900	DCS 1800
GSM	I _{peak}	GSM900: During TX bursts @ PCL5 DCS1800 : During TX bursts @ PCL0	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
	I _{avg}	GSM900 : Average @ PCL5 DCS1800 : Average @ PCL0	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
GPRS Class 2	I _{peak}	GSM900: During 1TX bursts @ PCL5 DCS1800 : During 1TX bursts @ PCL0	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
	I _{avg}	GSM900 : Average 1TX/1RX @PCL5 DCS1800 : Average 1TX/1RX @PCL0	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
GPRS Class 10	I _{peak}	GSM900: During 2TX bursts @ PCL5 (Gamma 3) DCS1800 : During 2TX bursts @ PCL0 (Gamma 2)	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
	I _{avg}	GSM900 : Average 2TX/3RX @ PCL5 (Gamma 3) DCS1800 : Average 2TX/3RX @ PCL0 (Gamma 2)	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
EGPRS Class 2	I _{peak}	GSM900: During 1TX bursts @ PCL8 (Gamma 6) DCS1800 : During 1TX bursts @ PCL2 (Gamma 5)	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
	I _{avg}	GSM900 : Average 1TX/1RX @ PCL8 (Gamma 6) DCS1800 : Average 1TX/1RX @ PCL2 (Gamma 5)	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC



Fastrack Supreme User Guide
Technical Characteristics

Power Consumption in E-GSM 900/DCS 1800 MHz - GPRS class 10			E-GSM 900	DCS 1800	
EGPRS Class 10	I_{peak}	GSM900: During 2TX bursts @ PCL8 (Gamma 6) DCS1800 : During 2TX bursts @ PCL2 (Gamma 5)	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
	I_{avg}	GSM900 : Average 2TX/3RX @ PCL8 (Gamma 6) DCS1800 : Average 2TX/3RX @ PCL2 (Gamma 5)	@ 5.5V	TBC	TBC
			@ 13.2V	TBC	TBC
			@ 32V	TBC	TBC
I_{avg} in Fast Idle mode Page 9 (2*)	Serial port auto shut down deactivated	@ 5.5V	33	TBC	
		@ 13.2V	TBC	TBC	
		@ 32V	TBC	TBC	
	Serial port auto shut down activated	@ 5.5V	17	TBC	
		@ 13.2V	TBC	TBC	
		@ 32V	TBC	TBC	
I_{avg} in Slow Idle mode Page 9 (3*)	Serial port auto shut down deactivated	@ 5.5V	23	TBC	
		@ 13.2V	TBC	TBC	
		@ 32V	TBC	TBC	
	Serial port auto shut down activated	@ 5.5V	5	TBC	
		@ 13.2V	TBC	TBC	
		@ 32V	TBC	TBC	
I_{avg} in Fast Standby mode (4*)	Serial port auto shut down deactivated	@ 5.5V	52	TBC	
		@ 13.2V	TBC	TBC	
		@ 32V	TBC	TBC	
	Serial port auto shut down activated	@ 5.5V	35	TBC	
		@ 13.2V	TBC	TBC	
		@ 32V	TBC	TBC	

Fastrack Supreme User Guide

Technical Characteristics

Power Consumption in E-GSM 900/DCS 1800 MHz - GPRS class 10			E-GSM 900	DCS 1800
I_{avg} in Slow Standby mode (with FLASH LED activated) (4*)	Serial port auto shut down deactivated	@ 5.5V	24	TBC
		@ 13.2V	TBC	TBC
		@ 32V	TBC	TBC
	Serial port auto shut down activated	@ 5.5V	8	TBC
		@ 13.2V	TBC	TBC
		@ 32V	TBC	TBC
I_{avg} in Slow Standby mode (with FLASH LED deactivated) (4*)	Serial port auto shut down deactivated	@ 5.5V	TBC	TBC
		@ 13.2V	TBC	TBC
		@ 32V	TBC	TBC
	Serial port auto shut down activated	@ 5.5V	4	TBC
		@ 13.2V	TBC	TBC
		@ 32V	TBC	TBC

(1*): The power consumption might vary by 5 % over the whole operating temperature range (-20 °C to +55 °C).

(2*): In this Mode, the RF function is active and the FASTRACK Supreme synchronized with the network, but there is no communication.

(3*): In this Mode, the RF function is disabled, but regularly activated to keep the synchronization with the network. This Mode works only when the DTE send AT command to shut down the serial link by software approach (DTE turns DTR in inactive state).

(4*): In this Mode, the RF function is disabled, and there is no synchronization with the network.

Fastrack Supreme User Guide

Technical Characteristics

8.2.3 Audio Interface

The audio interface is available through the Sub HD 15-pin connector.

Table 19: Audio parameters characteristics

Audio parameters	Min	Typ	Max	Unit	Comments
Microphone input current @2 V/2 k Ω		0.5		mA	
Absolute microphone input voltage			100	mVpp	AC voltage
Speaker output current 150 Ω //1 nF		16		mA	
Absolute speaker impedance	32	50		Ω	
Impedance of the speaker amplifier output in differential mode			1	Ω	+/-10 %

Table 20: Microphone inputs internal audio filter characteristics

Frequency	Gain
0-150 Hz	< -22 dB
150-180 Hz	< -11 dB
180-200 Hz	< -3 dB
200-3700 Hz	0 dB
>4000 Hz	< -60 dB

Table 21: Recommended characteristics for the microphone:

Feature	Value
Type	Electret 2 V / 0.5 mA
Impedance	Z = 2 k Ω
Sensitivity	-40 dB to -50 dB
SNR	> 50 dB
Frequency response	compatible with the GSM specifications

Fastrack Supreme User Guide

Technical Characteristics

Table 22: Recommended characteristics for the speaker:

Feature	Value
Type	10 mW, electro-magnetic
Impedance	Z = 32 to 50 Ω
Sensitivity	110 dB SPL min. (0 dB = 20 μ Pa)
Frequency response	compatible with the GSM specifications

8.2.4 General Purpose Input/Output

Both GPIO21 and GPIO25 may be interfaced with a component that comply with 3 Volts CMOS levels.

Table 23: Operating conditions

Parameter	I/O type	Min	Typ	Max	Condition
V _{IL}	CMOS			0.84 V	
V _{IH}	CMOS	1.96 V			
V _{OL}	CMOS			0.4 V	I _{OL} = -4 mA
V _{OH}	CMOS	2.4 V			I _{OH} = 4 mA
I _{OH}				4mA	
I _{OL}				-4mA	

Clamping diodes are present on I/O pads.

8.2.5 SIM Interface

Table 24: SIM card characteristics

SIM card	1.8V / 3 V
----------	------------

8.2.6 RESET Signal

Table 25: Electrical characteristics

Parameter	Min	Typ	Max	Unit
Input Impedance (R)*		330K		k Ω
Input Impedance (C)		10n		nF

*Internal pull-up

Fastrack Supreme User Guide

Technical Characteristics

Table 26: Operating conditions

Parameter	Minimum	Typ	Maximum	Unit
~RESET time (Rt) ¹	200			µs
~RESET time (Rt) ² at power up only	20	40	100	ms
Cancellation time (Ct)		34		ms
V _H	0.57			V
V _{IL}	0		0.57	V
V _{IH}	1.33			V

* V_H: Hysteresis Voltage

1 This reset time is the minimum to be carried out on the ~RESET signal when the power supply is already stabilized.

2 This reset time is internally carried out by the Wireless CPU power supply supervisor only when the Wireless CPU power supplies are powered ON.

8.2.7 RF Characteristics

8.2.7.1 Frequency Ranges

Table 27: Frequency ranges

Characteristic	GSM 850	E-GSM 900	DCS 1800	PCS 1900
Frequency TX	824 to 849 MHz	880 to 915 MHz	1710 to 1785 MHz	1850 to 1910 MHz
Frequency RX	869 to 894 MHz	925 to 960 MHz	1805 to 1880 MHz	1930 to 1990 MHz

Fastrack Supreme User Guide

Technical Characteristics

8.2.7.2 RF Performances

RF performances are compliant with the ETSI recommendation GSM 05.05.

The RF performances for receiver and transmitter are given in the table below.

Table 28: Receiver and transmitter RF performances

Receiver	
E-GSM900/GSM850 Reference Sensitivity	-104 dBm Static & TUHigh
DCS1800/PCS1900 Reference Sensitivity	-102 dBm Static & TUHigh
Selectivity @ 200 kHz	> +9 dBc
Selectivity @ 400 kHz	> +41 dBc
Linear dynamic range	63 dB
Co-channel rejection	>= 9 dBc
Transmitter	
Maximum output power (E-GSM 900/GSM850) at ambient temperature	33 dBm +/- 2 dB
Maximum output power (DCS1800/PCS1900) at ambient temperature	30 dBm +/- 2 dB
Minimum output power (E-GSM 900/GSM850) at ambient temperature	5 dBm +/- 5 dB
Minimum output power (DCS1800/PCS1900) at ambient temperature	0 dBm +/- 5 dB

Fastrack Supreme User Guide

Technical Characteristics

8.2.7.3 External Antenna

The external antenna is connected to the FASTRACK Supreme via the SMA connector.

The external antenna must fulfill the characteristics listed in the table below.

Table 29: External antenna characteristics

Antenna frequency range	Quad-band GSM 850/GSM900/DCS1800/PCS1900 MHz
Impedance	50 Ohms nominal
DC impedance	0 Ohm
Gain (antenna + cable)	0 dBi
VSWR (antenna + cable)	2

Note: Refer to Section 10 for recommended antenna.

8.3 Environmental Characteristics

The FASTRACK Supreme Plug & Play is compliant with the following operating class. To ensure the proper operation of the FASTRACK Supreme, the temperature of the environment must be within a specific range as described in the table below.

Table 30: Ranges of temperature

Conditions	Temperature range
Operating / Class A	-20 °C to +55°C
Operating / Class B	-30 °C to +85°C
Storage	-40 °C to +85°C

Function Status Classification:

Class A:

The FASTRACK Supreme remains fully functional, meeting GSM performance criteria in accordance with ETSI requirements, across the specified temperature range.

Class B:

The FASTRACK Supreme remains fully functional, across the specified temperature range. Some GSM parameters may occasionally deviate from the ETSI/PTCRB specified requirements and this deviation does not affect the ability of the FASTRACK Supreme to connect to the cellular network and function fully, as it does within the Class A range.

Fastrack Supreme User Guide

Technical Characteristics

The detailed climatic and mechanics standard environmental constraints applicable to the FASTRACK Supreme are listed in the table below:

Table 31: Environmental standard constraints

Environmental Tests (IEC TR 60721-4)		Environmental Classes (IEC 60721-3)			
Tests	Standards	Storage (IEC 60721-3-1) Class IE13	Transportation (IEC 60721-3-2) Class IE23	Operation	
				Stationary (IEC 60721-3-3) Class IE35	Non-Stationary (IEC 60721-3-7) Class IE73
Cold	IEC 60068-2-1 : Ab/Ad	-25°C, 16 h	-40°C, 16 h	-5°C, 16 h	-5°C, 16 h
Dry heat	IEC 60068-2-2 : Bb/Bd	+70°C, 16 h	+70°C, 16 h	+55°C, 16 h	+55°C, 16 h
Change of temperature	IEC 60068-2-14 : Na/Nb	-33°C to ambient 2 cycles, t1=3 h 1 °C.min ⁻¹	-40°C to ambient 5 cycles, t1=3 h t2<3 min	-5°C to ambient 2 cycles, t1=3 h 0,5 °C.min ⁻¹	-5°C to ambient 5 cycles, t1=3 h t2<3 min
Damp heat	IEC 60068-2-56 : Cb	+30°C, 93% RH 96 h	+40°C, 93% RH 96 h minimum	+30°C, 93% RH, 96 h	+30°C, 93% RH, 96 h
Damp heat, cyclic	60068-2-30 : Db Variant 1 or 2	+40°C, 90% to 100% RH One cycle Variant 2	+55°C, 90% to 100% RH Two cycles Variant 2	+30°C, 90% to 100% RH Two cycles Variant 2	+40°C, 90% to 100% RH Two cycles Variant 1
Vibration (sinusoidal)	IEC 60068-2-6 : Fc	1-200 Hz 2 m.s ⁻² 0,75 mm 3 axes 10 sweep cycles	1-500 Hz 10 m.s ⁻² 3,5 mm 3 axes 10 sweep cycles	1-150 Hz 2 m.s ⁻² 0,75 mm 3 axes 5 sweep cycles	1-500 Hz 10 m.s ⁻² 3,5 mm 3 axes 10 sweep cycles
Vibration (random)	IEC 60068-2-64 : Fh	-	10-100 Hz / 1,0 m ² .s ³ 100-200 Hz / -3 dB.octave ⁻¹ 200-2000 Hz / 0,5 m ² .s ³ 3 axes 30 min	-	-
Shock (half-sine)	IEC 60068-2-27 : Ea	-	-	50 m.s ⁻² 6 ms 3 shocks 6 directions	150 m.s ⁻² 11 ms 3 shocks 6 directions
Bump	IEC 60068-2-29 : Eb	-	250 m.s ⁻² 6 ms 50 bumps vertical direction	-	-
Free fall	ISO 4180-2	-	Two falls in each specified attitude	-	2 falls in each specified attitude 0,025 m (<1kg)
Drop and topple	IEC 60068-2-31 : Ec	-	One drop on relevant corner One topple about each bottom edge	-	One drop on each relevant corner One topple on each of 4 bottom edges

Fastrack Supreme User Guide

Technical Characteristics

Notes:

Short description of Class IE13 (For more information see standard IEC 60721-3-1)

"Locations without controlled temperature and humidity, where heating may be used to raise low temperatures, locations in buildings providing minimal protection against daily variations of external climate, prone to receiving rainfall from carrying wind".

Short description of Class IE23 (For more information, see standard IEC 60721-3-2)

"Transportation in unventilated compartments and in conditions without protection against bad weather, in all sorts of trucks and trailers in areas of well developed road network, in trains equipped with buffers specially designed to reduce shocks and by boat".

Short description of Class IE35 (For more information see standard IEC 60721-3-3)

"Locations with no control on heat or humidity where heating may be used to raise low temperatures, to places inside a building to avoid extremely high temperatures, to places such as hallways, building staircases, cellars, certain workshops, equipment stations without surveillance".

Short description of Class IE73 (For more information see standard IEC 60721-3-7)

"Transfer to places where neither temperature nor humidity are controlled but where heating may be used to raise low temperatures, to places exposed to water droplets, products can be subjected to ice formation, these conditions are found in hallways and building staircases, garages, certain workshops, factory building and places for industrial processes and hardware stations without surveillance".

Warning: The specification in the above table applies to the FASTRACK Supreme product only. Customers are advised to verify that the environmental specification of the SIM Card used is compliant with the FASTRACK Supreme environmental specifications. Any application must be qualified by the customer with the SIM Card in storage, transportation and operation.

The use of standard SIM cards may drastically reduce the environmental conditions in which the Product can be used. These cards are particularly sensible to humidity and temperature changes. These conditions may produce oxidation of the SIM card metallic layers and cause, in the long term, electrical discontinuities. This is particularly true in left alone applications, where no frequent extraction/insertion of the SIM card is performed.

In case of mobility when the application is moved through different environments with temperature variations, some condensation may appear. These events have a negative impact on the SIM and may favor oxidation.

If the use of standard SIM card, with exposition to the environmental conditions described above, can not be avoided, special care must be taken in the integration of the final application in order to minimize the impact of these conditions. The solutions that may be proposed are:

- Lubrication of the SIM card to protect the SIM Contact from oxidation.
- Putting the FASTRACK Supreme Plug & Play in a waterproof enclosure with desiccant bags.

Lubrication of the SIM card had been tested by Wavecom (using Tutela Fluid 43EM from MOLYDUVAL) and gives very good results.

If waterproof enclosure with a desiccant solution is used, check with your desiccant retailer the quantity that must be used according to the enclosure dimensions. Ensure humidity has been removed before sealing the enclosure.

Any solution selected must be qualified by the customer on the final application.

To minimize oxidation problem on the SIM card, its manipulation must be done with the greatest precautions. In particular, the metallic contacts of the card must never be touched with bare fingers or any matter which

Fastrack Supreme User Guide

Technical Characteristics

may contain polluted materials liable to produce oxidation (such as, e.g. substances including chlorine). In case a cleaning of the Card is necessary, a dry cloth must be used (never use any chemical substance).

8.4 Conformity

The complete product complies with the essential requirements of article 3 of R&TTE 1999/5/EC Directive and satisfied the following standards:

Domain	Applicable standard
Safety standard	EN 60950 (ed.1999)
Efficient use of the radio frequency spectrum	EN 301 419-(v 4.1.1) EN 301 511 (V 7.0.1)
EMC	EN 301 489-1 (edition 2002) EN 301 489-7 (edition 2002)
Global Certification Forum – Certification Criteria	GCF-CC V3.13.0
PTCRB	
FCC	
IC	

8.5 Protections

8.5.1 Power Supply

The FASTRACK Supreme is protected by a 800 mA / 250 V fuse directly bonded on the power supply cable. The model of fuse used is: **FSD 800 mA / 250 V FAST-ACTING**.

Fastrack Supreme User Guide

Technical Characteristics

8.5.2 Overvoltage

The FASTRACK Supreme is protected against voltage over +32 V.

When input voltages exceed +32 V, the supply voltage is disconnected in order to protect the internal electronic components from an overvoltage.

8.5.3 Electrostatic Discharge

The FASTRACK Supreme withstands ESD according to IEC 1000-4-2 requirements for all accessible parts of the FASTRACK Supreme except the RF part:

- 8 kV of air discharge,
- 4 kV of contact discharge.

8.5.4 Miscellaneous

Filtering guarantees:

- EMI/RFI protection in input and output,
- Signal smoothing.

Fastrack Supreme User Guide

Safety recommendations

9 Safety recommendations

9.1 General Safety

It is important to follow any special regulations regarding the use of radio equipment due in particular to the possibility of radio frequency (RF) interference. Please follow the safety advice given below carefully.

Switch OFF your Wireless CPU®:

- When in an aircraft. The use of cellular telephones in an aircraft may endanger the operation of the aircraft, disrupt the cellular network and is illegal. Failure to observe this instruction may lead to suspension or denial of cellular telephone services to the offender, or legal action or both,
- When at a refueling point,
- When in any area with a potentially explosive atmosphere which could cause an explosion or fire,
- In hospitals and any other place where medical equipment may be in use.

Respect restrictions on the use of radio equipment in:

- Fuel depots,
- Chemical plants,
- Places where blasting operations are in progress,
- Any other area where signalization reminds that the use of cellular telephone is forbidden or dangerous.
- Any other area where you would normally be advised to turn off your vehicle engine.

There may be a hazard associated with the operation of your FASTRACK Supreme Plug & Play close to inadequately protected personal medical devices such as hearing aids and pacemakers. Consult the manufacturers of the medical device to determine if it is adequately protected.

Operation of your FASTRACK Supreme Plug & Play close to other electronic equipment may also cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.

The FASTRACK Supreme Plug & Play is designed for and intended to be used in "**fixed**" and "**mobile**" applications:

- "**Fixed**" means that the device is physically secured at one location and is not able to be easily moved to another location.
- "**Mobile**" means that the device is designed to be used in other than fixed locations and generally in such a way that a separation distance of at least 20 cm (8 inches) is normally maintained between the transmitter's antenna and the body of the user or nearby persons.

The FASTRACK Supreme Plug & Play is not designed for and intended to be used in portable applications (within 20 cm or 8 inches of the body of the user) and such uses are strictly prohibited.

9.2 Vehicle Safety

Do not use your FASTRACK Supreme Plug & Play while driving, unless equipped with a correctly installed vehicle kit allowing 'Hands-Free' Operation.

Respect national regulations on the use of cellular telephones in vehicles. Road safety always comes first.

Fastrack Supreme User Guide

Safety recommendations

If incorrectly installed in a vehicle, the operation of FASTRACK Supreme Plug & Play telephone could interfere with the correct functioning of vehicle electronics. To avoid such problems, make sure that the installation has been performed by a qualified personnel. Verification of the protection of vehicle electronics should form part of the installation.

The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

9.3 Care and Maintenance

Your FASTRACK Supreme Plug & Play is the product of advanced engineering, design and craftsmanship and should be treated with care. The suggestion below will help you to enjoy this product for many years.

Do not expose the FASTRACK Supreme Plug & Play to any extreme environment where the temperature or humidity is high.

Do not use or store the FASTRACK Supreme Plug & Play in dusty or dirty areas. Its moving parts (SIM holder for example) can be damaged.

Do not attempt to disassemble the Wireless CPU[®]. There are no user serviceable parts inside.

Do not expose the FASTRACK Supreme Plug & Play to water, rain or spilt beverages. It is not waterproof.

Do not abuse your FASTRACK Supreme Plug & Play by dropping, knocking, or violently shaking it. Rough handling can damage it.

Do not place the FASTRACK Supreme Plug & Play alongside computer discs, credit or travel cards or other magnetic media. The information contained on discs or cards may be affected by the Wireless CPU[®].

The use of third party equipment or accessories, not made or authorized by Wavecom may invalidate the warranty of the Wireless CPU[®].

Do contact an authorized Service Center in the unlikely event of a fault in the Wireless CPU[®].

9.4 Your Responsibility

This FASTRACK Supreme Plug & Play is under your responsibility. Please treat it with care respecting all local regulations. It is not a toy. Therefore, keep it in a safe place at all times and out of the reach of children.

Try to remember your Unlock and PIN codes. Become familiar with and use the security features to block unauthorized use and theft.

Fastrack Supreme User Guide

Recommended Accessories

10 Recommended Accessories

Accessories recommended by Wavecom for the FASTRACK Supreme are given in the table below.

Table 32: List of recommended accessories

Designation	Part number	Supplier
Quad-band antenna	1140.26	ALLGON
	MA112VX00	MAT Equipement
	MCA1890 MH/PB/SMA m	HIRSCHMANN
SMA/FME Antenna adaptor		PROCOM
Power adaptor (Europe)	EGSTDW P2 EF9W3 24W Out: 12 V - 2A In: 100 to 240 V – 50/60 Hz – 550 mA Mounted with micro-fit connector	EGSTDW (for power adaptor) MOLEX (for micro-fit connector)*
Fuse	F800L250V	Shanghai Fullness
IESM GPS + USB	M13SUE01	WAVECOM
IESM IO + USB	M13SUE02	WAVECOM
IESM IO + USB + GPS	M13SUE03	WAVECOM

* Information not available for this preliminary version.



Fastrack Supreme User Guide

Online Support

11 Online Support

Wavecom provides an extensive range on online support which includes the following areas of Wavecom's wireless expertise:

- the latest version of this document
- new versions of our Operating System user guides
- comprehensive support for Open AT[®]
- regulatory certifications
- carrier certifications
- application notes

To gain access to this support, simply visit our web site at www.wavecom.com or click on the desire link in Page. Privileged access via user login is provided to Wavecom authorized distributors.





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

HUMAN MACHINE INTERFACE


1. HUMAN MACHINE INTERFACE TECHNICAL DETAILS



Tel +1 (717) 767-6511
 Fax +1 (717) 764-0839
 www.redlion.net

Bulletin No. G306A-B
 Drawing No. LP0666
 Released 4/08

MODEL G306A - GRAPHIC COLOR LCD OPERATOR INTERFACE TERMINAL WITH TFT QVGA DISPLAY AND TOUCHSCREEN

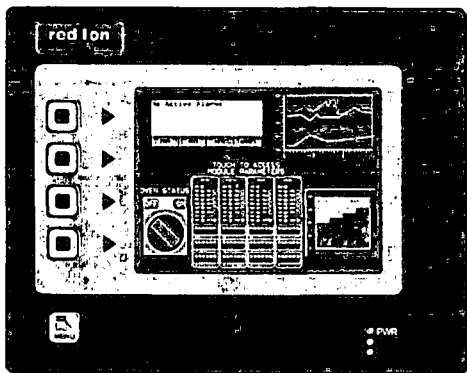

- CONFIGURED USING CRIMSON® SOFTWARE (BUILD 424 OR NEWER)
- UP TO 5 RS-232/422/485 COMMUNICATIONS PORTS (2 RS-232 AND 1 RS-422/485 ON BOARD, 1 RS-232 AND 1 RS422/485 ON OPTIONAL COMMUNICATIONS CARD)
- 10 BASE T/100 BASE-TX ETHERNET PORT TO NETWORK UNITS AND HOST WEB PAGES
- USB PORT TO DOWNLOAD THE UNIT'S CONFIGURATION FROM A PC OR FOR DATA TRANSFERS TO A PC
- UNIT'S CONFIGURATION IS STORED IN NON-VOLATILE MEMORY (8 MBYTE FLASH)
- COMPACTFLASH® SOCKET TO INCREASE MEMORY CAPACITY
- 5.7-INCH TFT ACTIVE MATRIX 256 COLOR QVGA 320 X 240 PIXEL LCD
- 5-BUTTON KEYPAD FOR ON-SCREEN MENUS
- THREE FRONT PANEL LED INDICATORS
- POWER UNIT FROM 24 VDC ±20% SUPPLY
- RESISTIVE ANALOG TOUCHSCREEN



FOR USE IN HAZARDOUS LOCATIONS:
 Class I, Division 2, Groups A, B, C, and D
 Class II, Division 2, Groups F and G
 Class III, Division 2

GENERAL DESCRIPTION

The G306A Operator Interface Terminal combines unique capabilities normally expected from high-end units with a very affordable price. It is built around a high performance core with integrated functionality. This core allows the G306A to perform many of the normal features of the Paradigm range of Operator Interfaces while improving and adding new features.

The G306A is able to communicate with many different types of hardware using high-speed RS232/422/485 communications ports and Ethernet 10 Base T/100 Base-TX communications. In addition, the G306A features USB for fast downloads of configuration files and access to trending and data logging. A CompactFlash socket is provided so that Flash cards can be used to collect your trending and data logging information as well as to store larger configuration files.

In addition to accessing and controlling of external resources, the G306A allows a user to easily view and enter information. Users can enter data through the touchscreen and/or front panel 5-button keypad.

SAFETY SUMMARY

All safety related regulations, local codes and instructions that appear in the manual or on equipment must be observed to ensure personal safety and to prevent damage to either the instrument or equipment connected to it. If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Do not use the controller to directly command motors, valves, or other actuators not equipped with safeguards. To do so can be potentially harmful to persons or equipment in the event of a fault to the controller.



The protective conductor terminal is bonded to conductive parts of the equipment for safety purposes and must be connected to an external protective earthing system.



WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2/CLASS II, DIVISION 2/CLASS III, DIVISION 2



CAUTION: Risk Of Danger.
 Read complete instructions prior to installation and operation of the unit.



CAUTION: Risk of electric shock.

CompactFlash is a registered trademark of CompactFlash Association.

CONTENTS OF PACKAGE

- G306A Operator Interface.
- Panel gasket.
- Template for panel cutout.
- Hardware packet for mounting unit into panel.
- Terminal block for connecting power.

ORDERING INFORMATION

MODEL NO.	DESCRIPTION	PART NUMBER
G306A	Operator Interface for indoor applications, textured finish with embossed keys	G306A000
G3CF	64 MB CompactFlash Card ⁵	G3CF064M
	256 MB CompactFlash Card ⁵	G3CF256M
	512 MB CompactFlash Card ⁵	G3CF512M
G3RS	RS232/485 Optional Communication Card	G3RS0000
G3CN	CANopen Optional Communication Card	G3CN0000
G3DN	DeviceNet option card for G3 operator interfaces, latest high speed communications ports	G3DN0000
G3PBDP	Profibus DP Optional Communication Card	G3PBDP00
PSDR7	DIN Rail Power Supply	PSDR7000
SFCRM2	Crimson 2.0 ²	SFCRM200
CBL	RS-232 Programming Cable	CBLPROG0
	USB Cable	CBLUSB00
	Communications Cables ¹	CBLxxxxx
DR	DIN Rail Mountable Adapter Products ³	DRxxxxxx
	Replacement Battery ⁴	BNL20000
G3FILM	Protective Films	G3FILM06

¹ Contact your Red Lion distributor or visit our website for complete selection.

² Use this part number to purchase the Crimson® software on CD with a printed manual, USB cable, and RS-232 cable. Otherwise, download for free from www.redlion.net.

³ Red Lion offers RJ modular jack adapters. Refer to the DR literature for complete details.

⁴ Battery type is lithium coin type CR2025.

⁵ Industrial grade two million write cycles.

SPECIFICATIONS

1. POWER REQUIREMENTS:

Must use Class 2 or SELV rated power supply.
 Power connection via removable three position terminal block.
 Supply Voltage: +24 VDC ±20%
 Typical Power¹: 8 W
 Maximum Power²: 14 W

Notes:

1. Typical power with +24 VDC, RS232/485 communications, Ethernet communications, CompactFlash card installed, and display at full brightness.
2. Maximum power indicates the most power that can be drawn from the G306A. Refer to "Power Supply Requirements" under "Installing and Powering the G306A."
3. The G306A's circuit common is not connected to the enclosure of the unit. See "Connecting to Earth Ground" in the section "Installing and Powering the G306A."
4. Read "Power Supply Requirements" in the section "Installing and Powering the G306A" for additional power supply information.

2. **BATTERY:** Lithium coin cell. Typical lifetime of 10 years.

3. LCD DISPLAY:

SIZE	5.7-inch
TYPE	TFT
COLORS	256
PIXELS	320 X 240
BRIGHTNESS	500 cd/m ²
BACKLIGHT*	40,000 HR TYP.

*Lifetime at room temperature. Refer to "Display" in "Software/Unit Operation"

4. **5-KEY KEYPAD:** for on-screen menus.


5. **TOUCHSCREEN:** Resistive analog

6. MEMORY:

On Board User Memory: 8 Mbyte of non-volatile Flash memory.
Memory Card: CompactFlash Type II slot for Type I and Type II CompactFlash cards.

7. COMMUNICATIONS:

USB Port: Adheres to USB specification 1.1. Device only using Type B connection.



WARNING - DO NOT CONNECT OR DISCONNECT CABLES WHILE POWER IS APPLIED UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS. USB PORT IS FOR SYSTEM SET-UP AND DIAGNOSTICS AND IS NOT INTENDED FOR PERMANENT CONNECTION.

Serial Ports: Format and Baud Rates for each port are individually software programmable up to 115,200 baud.

PGM Port: RS232 port via RJ12.

COMMS Ports: RS422/485 port via RJ45, and RS232 port via RJ12.

DH485 TXEN: Transmit enable; open collector, V_{OH} = 15 VDC, V_{OL} = 0.5 V @ 25 mA max.

Note: For additional information on the communications or signal common and connections to earth ground please see the "Connecting to Earth Ground" in the section "Installing and Powering the G306A."

Ethernet Port: 10 BASE-T / 100 BASE-TX

RJ45 jack is wired as a NIC (Network Interface Card).

Isolation from Ethernet network to G3 operator interface: 1500 Vrms

8. ENVIRONMENTAL CONDITIONS:

Operating Temperature Range: 0 to 50°C

Storage Temperature Range: -20 to 70°C

Operating and Storage Humidity: 80% maximum relative humidity (non-condensing) from 0 to 50°C.

Vibration according to IEC 68-2-6: Operational 5 to 8 Hz, 0.8" (p-p), 8 to 500 Hz, in X, Y, Z direction, duration: 1 hour, 3 g.

Shock according to IEC 68-2-27: Operational 40 g, 9 msec in 3 directions. Altitude: Up to 2000 meters.

9. CERTIFICATIONS AND COMPLIANCES:

SAFETY

UL Recognized Component, File #E179259, UL61010-1, CSA 22.2 No.61010-1 Recognized to U.S. and Canadian requirements under the Component Recognition Program of Underwriters Laboratories, Inc.

UL Listed, File #E211967, UL61010-1, UL1604, CSA 22.2 No. 61010.1, CSA 22.2 No. 213-M1987

LISTED by Und. Lab. Inc. to U.S. and Canadian safety standards

Type 4X Indoor Enclosure rating (Face only), UL50

IECEE CB Scheme Test Certificate #US/12460/UL,

CB Scheme Test Report #E179259-A1-CB-1

Issued by Underwriters Laboratories Inc.

IEC 61010-1, EN 61010-1: Safety requirements for electrical equipment for measurement, control, and laboratory use, Part 1.

IP66 Enclosure rating (Face only), IEC 529

ELECTROMAGNETIC COMPATIBILITY

Emissions and Immunity to EN 61326: Electrical Equipment for Measurement, Control and Laboratory use.

Immunity to Industrial Locations:

Electrostatic discharge	EN 61000-4-2	Criterion A 4 kV contact discharge 8 kV air discharge
Electromagnetic RF fields	EN 61000-4-3	Criterion A 10 V/m
Fast transients (burst)	EN 61000-4-4	Criterion A 2 kV power 1 kV signal
Surge	EN 61000-4-5	Criterion A 1 kV L-L, 2 kV L&N-E power
RF conducted interference	EN 61000-4-6	Criterion A 3 V/rms

Emissions:

Emissions	EN 55011	Class A
-----------	----------	---------

Note:

1. Criterion A: Normal operation within specified limits.

10. **CONNECTIONS:** Compression cage-clamp terminal block.

Wire Gage: 12-30 AWG copper wire


Torque: 5-7 inch-pounds (56-79 N-cm)

11. **CONSTRUCTION:** Steel rear metal enclosure with NEMA 4X/IP66 aluminum front plate for indoor use only when correctly fitted with the gasket provided. Installation Category II, Pollution Degree 2.

12. **MOUNTING REQUIREMENTS:** Maximum panel thickness is 0.25" (6.3 mm). For NEMA 4X/IP66 sealing, a steel panel with a minimum thickness of 0.125" (3.17 mm) is recommended.

Maximum Mounting Stud Torque: 17 inch-pounds (1.92 N-m)

13. **WEIGHT:** 3.0 lbs (1.36 Kg)

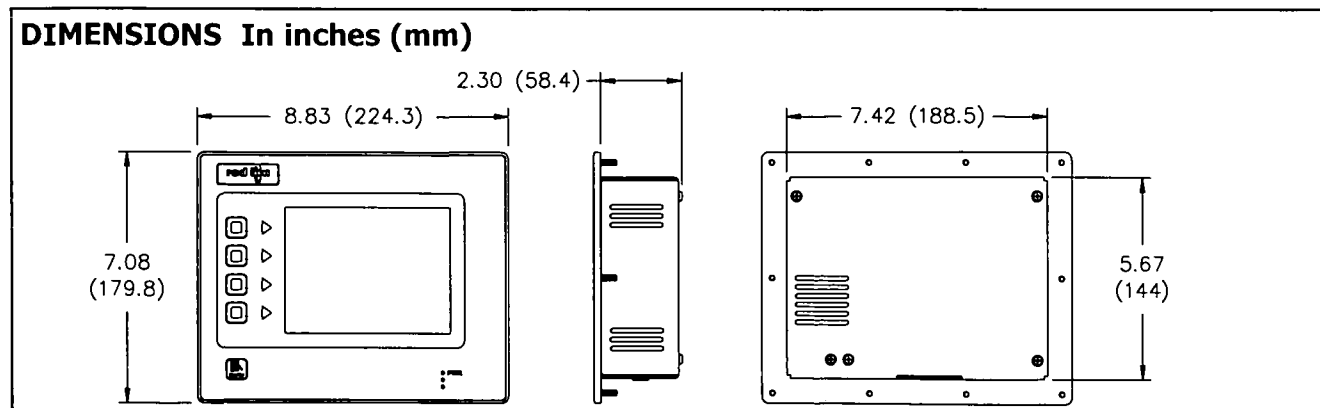



INSTALLING AND POWERING THE G306A

MOUNTING INSTRUCTIONS

This operator interface is designed for through-panel mounting. A panel cut-out diagram and a template are provided. Care should be taken to remove any loose material from the mounting cut-out to prevent that material from falling into the operator interface during installation. A gasket is provided to enable sealing to NEMA 4X/IP66 specification. Install the ten keps nuts provided and tighten evenly for uniform gasket compression.

Note: Tightening the keps nuts beyond a maximum of 17 inch-pounds (1.92 N·m) may cause damage to the front panel.

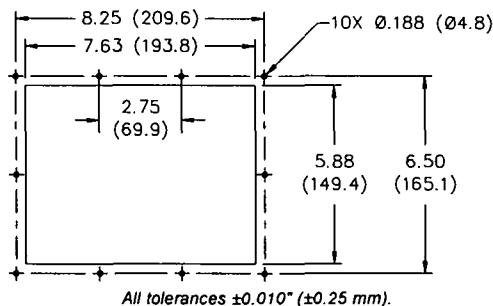



ALL NONINCENDIVE CIRCUITS MUST BE WIRED USING DIVISION 2 WIRING METHODS AS SPECIFIED IN ARTICLE 501-4 (b), 502-4 (b), AND 503-3 (b) OF THE NATIONAL ELECTRICAL CODE, NFPA 70 FOR INSTALLATION WITHIN THE UNITED STATES, OR AS SPECIFIED IN SECTION 19-152 OF CANADIAN ELECTRICAL CODE FOR INSTALLATION IN CANADA.

CONNECTING TO EARTH GROUND



The protective conductor terminal is bonded to conductive parts of the equipment for safety purposes and must be connected to an external protective earthing system.

Each G306A has a chassis ground terminal on the back of the unit. Your unit should be connected to earth ground (protective earth).

The chassis ground is not connected to signal common of the unit. Maintaining isolation between earth ground and signal common is not required to operate your unit. But, other equipment connected to this unit may require isolation between signal common and earth ground. *To maintain isolation between signal common and earth ground care must be taken when connections are made to the unit.* For example, a power supply with isolation between its signal common and earth ground must be used. Also, plugging in a USB cable may connect signal common and earth ground.¹

¹ USB's shield may be connected to earth ground at the host. USB's shield in turn may also be connected to signal common.

POWER SUPPLY REQUIREMENTS

The G306A requires a 24 VDC power supply. Your unit may draw considerably less than the maximum rated power depending upon the options being used. As additional features are used your unit will draw increasing amounts of power. Items that could cause increases in current are additional communications, optional communications card, CompactFlash card, and other features programmed through Crimson.

In any case, it is very important that the power supply is mounted correctly if the unit is to operate reliably. Please take care to observe the following points:

- The power supply must be mounted close to the unit, with usually not more than 6 feet (1.8 m) of cable between the supply and the operator interface. Ideally, the shortest length possible should be used.
- The wire used to connect the operator interface's power supply should be at least 22-gage wire. If a longer cable run is used, a heavier gage wire should be used. The routing of the cable should be kept away from large contactors, inverters, and other devices which may generate significant electrical noise.
- A power supply with a Class 2 or SELV rating is to be used. A Class 2 or SELV power supply provides isolation to accessible circuits from hazardous voltage levels generated by a mains power supply due to single faults. SELV is an acronym for "safety extra-low voltage." Safety extra-low voltage circuits shall exhibit voltages safe to touch both under normal operating conditions and after a single fault, such as a breakdown of a layer of basic insulation or after the failure of a single component has occurred.

COMMUNICATING WITH THE G306A

CONFIGURING A G306A

The G306A is configured using Crimson[®] software. Crimson is available as a free download from Red Lion's website, or it can be purchased on CD. Updates to Crimson for new features and drivers are posted on the website as they become available. By configuring the G306A using the latest version of Crimson, you are assured that your unit has the most up to date feature set. Crimson[®] software can configure the G306A through the RS232 PGM port, USB port, or CompactFlash.

The USB port is connected using a standard USB cable with a Type B connector. The driver needed to use the USB port will be installed with Crimson.

The RS232 PGM port uses a programming cable made by Red Lion to connect to the DB9 COM port of your computer. If you choose to make your own cable, use the "G306A Port Pin Out Diagram" for wiring information.

The CompactFlash can be used to program a G3 by placing a configuration file and firmware on the CompactFlash card. The card is then inserted into the target G3 and powered. Refer to the Crimson literature for more information on the proper names and locations of the files.

USB, DATA TRANSFERS FROM THE COMPACTFLASH CARD



WARNING - DO NOT CONNECT OR DISCONNECT CABLES WHILE POWER IS APPLIED UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS. USB PORT IS FOR SYSTEM SET-UP AND DIAGNOSTICS AND IS NOT INTENDED FOR PERMANENT CONNECTION.

In order to transfer data from the CompactFlash card via the USB port, a driver must be installed on your computer. This driver is installed with Crimson and is located in the folder C:\Program Files\Red Lion Controls\Crimson 2.0\Device\ after Crimson is installed. This may have already been accomplished if your G306A was configured using the USB port.

Once the driver is installed, connect the G306A to your PC with a USB cable, and follow "Mounting the CompactFlash" instructions in the Crimson 2 user manual.

CABLES AND DRIVERS

Red Lion has a wide range of cables and drivers for use with many different communication types. A list of these drivers and cables along with pin outs is available from Red Lion's website. New cables and drivers are added on a regular basis. If making your own cable, refer to the "G306A Port Pin Outs" for wiring information.

ETHERNET COMMUNICATIONS

Ethernet communications can be established at either 10 BASE-T or 100 BASE-TX. The G306A unit's RJ45 jack is wired as a NIC (Network Interface Card). For example, when wiring to a hub or switch use a straight-through cable, but when connecting to another NIC use a crossover cable.

The Ethernet connector contains two LEDs. A yellow LED in the upper right, and a bi-color green/amber LED in the upper left. The LEDs represent the following statuses:

LED COLOR	DESCRIPTION
YELLOW solid	Link established.
YELLOW flashing	Data being transferred.
GREEN	10 BASE-T Communications
AMBER	100 BASE-TX Communications

On the rear of each unit is a unique 12-digit MAC address and a block for marking the unit with an IP address. Refer to the Crimson manual and Red Lion's website for additional information on Ethernet communications.


RS232 PORTS

The G306A has two RS232 ports. There is the PGM port and the COMMS port. Although only one of these ports can be used for programming, both ports can be used for communications with a PLC.

The RS232 ports can be used for either master or slave protocols with any G306A configuration.


Examples of RS232 communications could involve another Red Lion product or a PC. By using a cable with RJ12 ends on it, and a twist in the cable, RS232 communications with another G3 product or the Modular Controller can be established. Red Lion part numbers for cables with a twist in them are CBLPROG0¹, CBLRLC01², or CBLRC02³.

CONNECTING A G306A OPERATOR INTERFACE TO AN ICM5

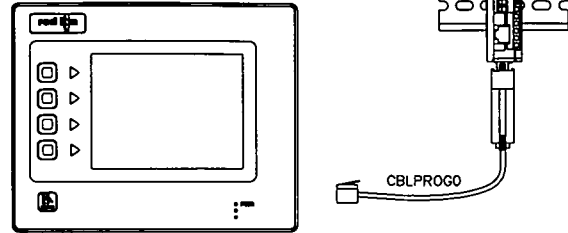

G3 RS232 to a PC

Connections			
G3: RJ12	Name	PC: DB9	Name
4	COMM	1	DCD
5	Tx	2	Rx
2	Rx	3	Tx
	N/C	4	DTR
3	COM	5	GND
	N/C	6	DSR
1	CTS	7	RTS
6	RTS	8	CTS
	N/C	9	RI

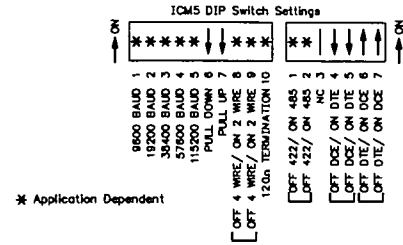


¹ CBLPROG0 can also be used to communicate with either a PC or an ICM5.

² DB9 adapter not included, 1 foot long.


³ DB9 adapter not included, 10 feet long.

G306A PORT PIN OUTS

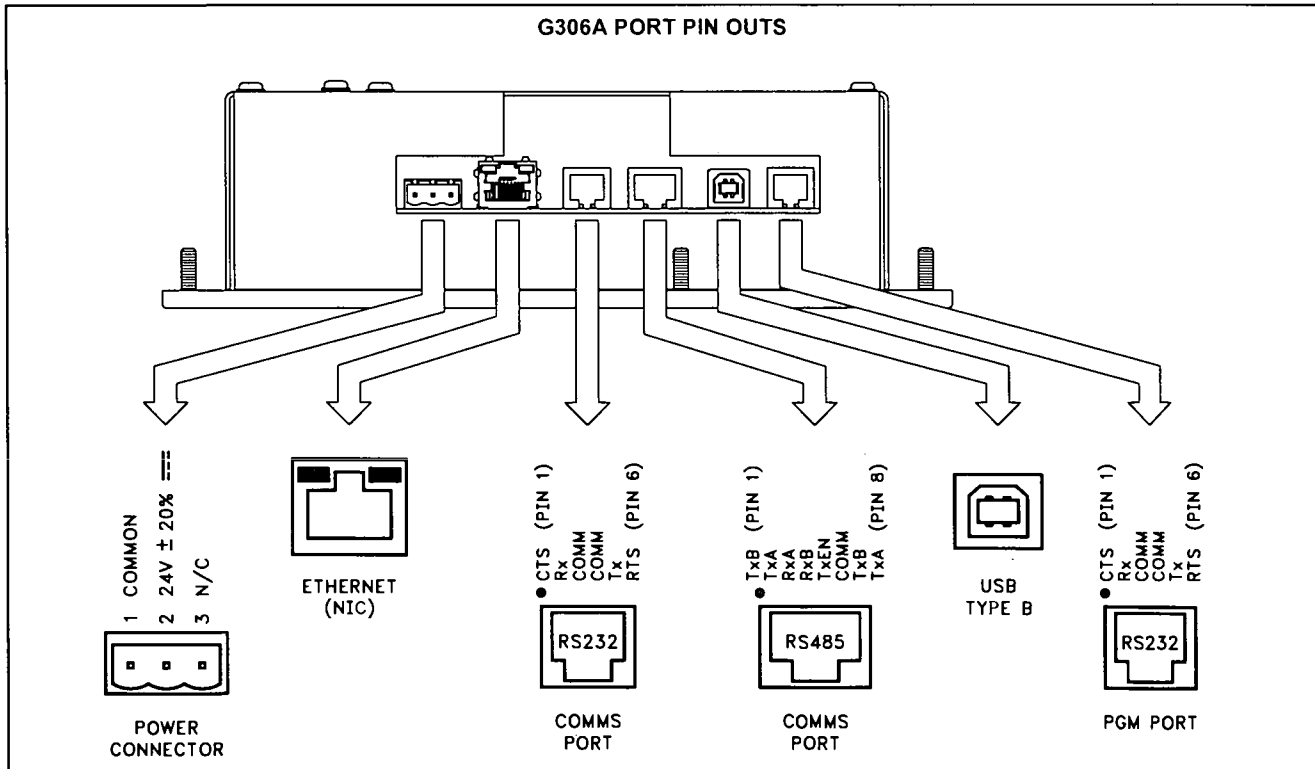

RS422/485 COMMS PORT

The G306A has one RS422/485 port. This port can be configured to act as either RS422 or RS485.

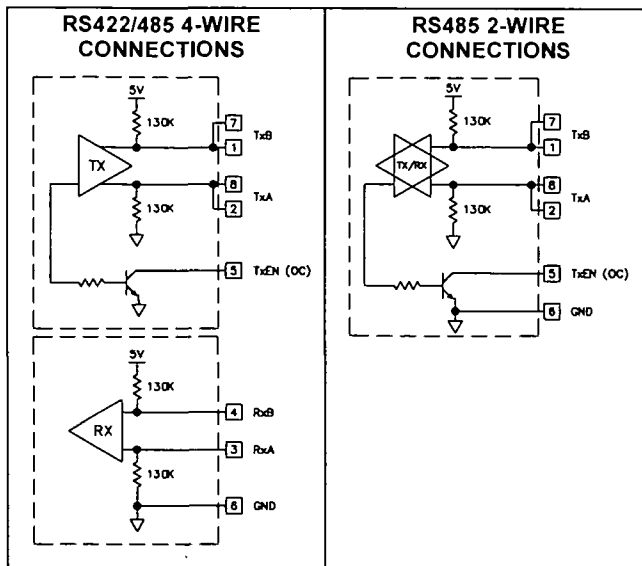

Note: All Red Lion devices connect A to A and B to B, except for Paradigm devices. Refer to www.redlion.net for additional information.

DH485 COMMUNICATIONS

The G306A's RS422/485 COMMS port can also be used for Allen Bradley DH485 communications.

WARNING: DO NOT use a standard DH485 cable to connect this port to Allen Bradley equipment. A cable and wiring diagram are available from Red Lion.

G3 to AB SLC 500 (CBLAB003)

Connections			
RJ45: RLC	Name	RJ45: A-B	Name
1	TxB	1	A
2	TxA	2	B
3, 8	RxA	-	24V
4, 7	RxB	-	COMM
5	TxEN	5	TxEN
6	COMM	4	SHIELD
4, 7	TxB	-	COMM
3, 8	TxA	-	24V

Examples of RS485 2-Wire Connections

G3 to Red Lion RJ11 (CBLRLC00) DLC, IAMS, ITMS, PAXCDC4C

Connections			
G3: RJ45	Name	RLC: RJ11	Name
5	TxEN	2	TxEN
6	COM	3	COM
1	TxB	5	B-
2	TxA	4	A+

G3 to Modular Controller (CBLRLC05)

Connections			
G3	Name	Modular Controller	Name
1,4	TxB	1,4	TxB
4,1	RxB	4,1	RxB
2,3	TxA	2,3	TxA
3,2	RxA	3,2	RxA
5	TxEN	5	TxEN
6	COM	6	COM
7	TxB	7	TxB
8	TxA	8	TxA

SOFTWARE/UNIT OPERATION

CRIMSON® SOFTWARE

Crimson® software is available as a free download from Red Lion's website or it can be purchased on a CD, see "Ordering Information" for part number. The latest version of the software is always available from the website, and updating your copy is free.

DISPLAY

This operator interface uses a liquid crystal display (LCD) for displaying text and graphics. The display utilizes a cold cathode fluorescent tube (CCFL) for lighting the display. The CCFL tubes can be dimmed for low light conditions.

These CCFL tubes have a limited lifetime. Backlight lifetime is based upon the amount of time the display is turned on at full intensity. Turning the backlight off when the display is not in use can extend the lifetime of your backlight. This can be accomplished through the Crimson® software when configuring your unit.

FRONT PANEL LEDs

There are three front panel LEDs. Shown below is the default status of the LEDs.

LED	INDICATION
RED (TOP, LABELED "PWR")	
FLASHING	Unit is in the boot loader, no valid configuration is loaded. ¹
STEADY	Unit is powered and running an application.
YELLOW (MIDDLE)	
OFF	No CompactFlash card is present.
STEADY	Valid CompactFlash card present.
FLASHING RAPIDLY	CompactFlash card being checked.
FLICKERING	Unit is writing to the CompactFlash, either because it is storing data, or because the PC connected via the USB port has locked the drive. ²
FLASHING SLOWLY	Incorrectly formatted CompactFlash card present.
GREEN (BOTTOM)	
FLASHING	A tag is in an alarm state.
STEADY	Valid configuration is loaded and there are no alarms present.

¹ The operator interface is shipped without a configuration. After downloading a configuration, if the light remains in the flashing state continuously, try cycling power. If the LED still continues to flash, try downloading a configuration again.

² Do not turn off power to the unit while this light is flickering. The unit writes data in two minute intervals. Later Microsoft operating systems will not lock the drive unless they need to write data; Windows 98 may lock the drive any time it is mounted, thereby interfering with logging. Refer to "Mounting the CompactFlash" in the Crimson 2 User Manual.

TOUCHSCREEN

This operator interface utilizes a resistive analog touchscreen for user input. The unit will only produce an audible tone (beep) when a touch on an active touchscreen cell is sensed. The touchscreen is fully functional as soon as the operator interface is initialized, and can be operated with gloved hands.

KEYPAD

The G306A keypad consists of five keys that can be used for on-screen menus.


TROUBLESHOOTING YOUR G306A


If for any reason you have trouble operating, connecting, or simply have questions concerning your new G306A, contact Red Lion's technical support. For contact information, refer to the back page of this bulletin for phone and fax numbers.

EMAIL: techsupport@redlion.net

Web Site: <http://www.redlion.net>

BATTERY & TIME KEEPING

 **WARNING - EXPLOSION HAZARD - THE AREA MUST BE KNOWN TO BE NON-HAZARDOUS BEFORE SERVICING/REPLACING THE UNIT AND BEFORE INSTALLING OR REMOVING I/O WIRING AND BATTERY.**

 **WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN DISCONNECTED AND THE AREA IS KNOWN TO BE NON-HAZARDOUS.**

A battery is used to keep time when the unit is without power. Typical accuracy of the G306A time keeping is less than one minute per month drift. The battery of a G306A unit does not affect the unit's memory, all configurations and data is stored in non-volatile memory.




CAUTION: RISK OF ELECTRIC SHOCK

The inverter board, attached to the mounting plate, supplies the high voltage to operate the backlight. Touching the inverter board may result in injury to personnel.



CAUTION: The circuit board contains static sensitive components. Before handling the operator interface without the rear cover attached, discharge static charges from your body by touching a grounded bare metal object. Ideally, handle the operator interface at a static controlled clean workstation. Also, do not touch the surface areas of the circuit board. Dirt, oil, or other contaminants may adversely affect circuit operation.



To change the battery of a G306A, remove power, cabling, and then the rear cover of the unit. To remove the cover, remove the four screws designated by the arrows on the rear of the unit. Then, by lifting the top side, hinge the cover, thus providing clearance for the connectors on the bottom side of the PCB as shown in the illustration below. Install in the reverse manner.

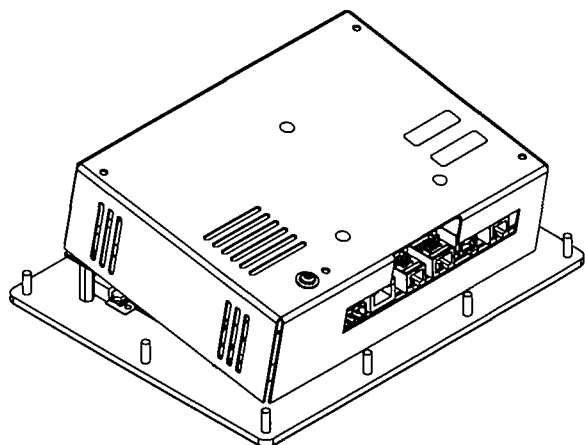

Remove the old battery* from the holder and replace with the new battery. Replace the rear cover, cables, and re-apply power. Using Crimson or the unit's keypad, enter the correct time and date.

* Please note that the old battery must be disposed of in a manner that complies with your local waste regulations. Also, the battery must not be disposed of in fire, or in a manner whereby it may be damaged and its contents come into contact with human skin.

The battery used by the G306A is a lithium type CR2025.

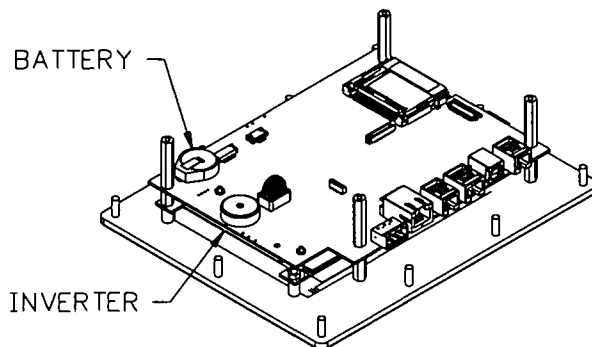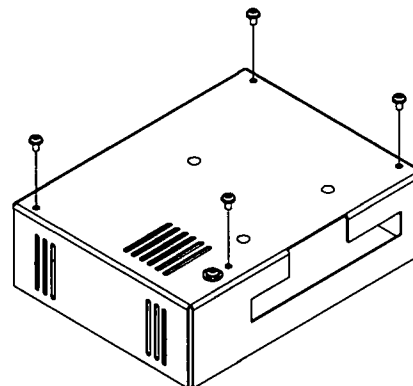

OPTIONAL FEATURES AND ACCESSORIES


OPTIONAL COMMUNICATION CARD

Red Lion offers optional communication cards for fieldbus communications. These communication cards will allow your G306A to communicate with many of the popular fieldbus protocols.

Red Lion is also offering a communications card for additional RS232 and RS422/485 communications. Visit Red Lion's website for information and availability of these cards.

CUSTOM LOGO


Each G3 operator interface has an embossed area containing the Red Lion logo. Red Lion can provide custom logos to apply to this area. Contact your distributor for additional information and pricing.

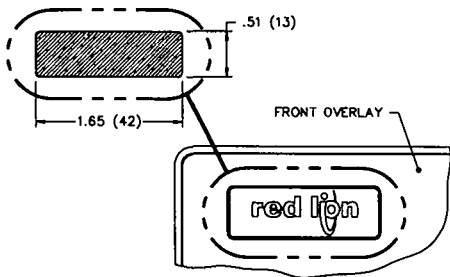

COMPACTFLASH SOCKET

CompactFlash socket is a Type II socket that can accept either Type I or II cards. Use cards with a minimum of 4 Mbytes and a maximum of 2 Gbytes with the G306A's CompactFlash socket. Cards are available at most computer and office supply retailers.

CompactFlash can be used for configuration transfers, larger configurations, data logging, and trending.

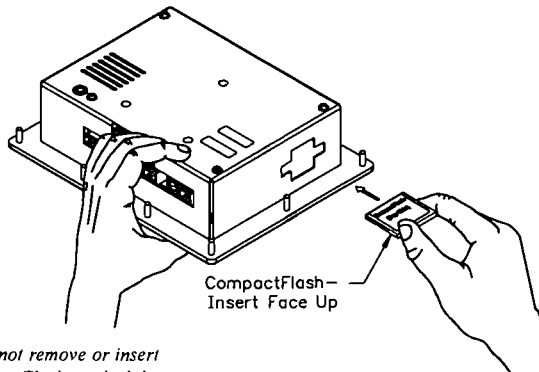

Note: Do not remove or insert the CompactFlash card while power is applied. Refer to "Front Panel LEDs."

Information stored on a CompactFlash card by a G306A can be read by a card reader attached to a PC. This information is stored in IBM (Windows®) PC compatible FAT16 file format.

NOTE

For reliable operation in all of our products, Red Lion recommends the use of SanDisk® and SimpleTech brands of CompactFlash cards. Industrial grade versions that provide up to two million write/erase cycles minimum are available from Red Lion.

LIMITED WARRANTY

The Company warrants the products it manufactures against defects in materials and workmanship for a period limited to two years from the date of shipment, provided the products have been stored, handled, installed, and used under proper conditions. The Company's liability under this limited warranty shall extend only to the repair or replacement of a defective product, at The Company's option. The Company disclaims all liability for any affirmation, promise or representation with respect to the products.

The customer agrees to hold Red Lion Controls harmless from, defend, and indemnify RLC against damages, claims, and expenses arising out of subsequent sales of RLC products or products containing components manufactured by RLC and based upon personal injuries, deaths, property damage, lost profits, and other matters which Buyer, its employees, or sub-contractors are or may be to any extent liable, including without limitation penalties imposed by the Consumer Product Safety Act (P.L. 92-573) and liability imposed upon any person pursuant to the Magnuson-Moss Warranty Act (P.L. 93-637), as now in effect or as amended hereafter.

No warranties expressed or implied are created with respect to The Company's products except those expressly contained herein. The Customer acknowledges the disclaimers and limitations contained herein and relies on no other warranties or affirmations.

Red Lion Controls
20 Willow Springs Circle
York PA 17406
Tel +1 (717) 767-6511
Fax +1 (717) 764-0839

Red Lion Controls BV
Printerweg 10
NL - 3821 AD Amersfoort
Tel +31 (0) 334 723 225
Fax +31 (0) 334 893 793

Red Lion Controls AP
Unit 101, XinAn Plaza
Building 13, No.99 Tianzhou Road
ShangHai, P.R. China 200223
Tel +86 21 6113-3688
Fax +86 21 6113-3683



Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113


LOAD BREAK SWITCH

1. SLB SERIES LOAD BREAK SWITCH TECHNICAL DETAILS



SLB Standard load-break switches

COMO M 20 to 100 A

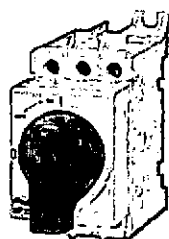

SLB 20...40


The COMO M range of load-break switches offer compact IP 20 finger safe solutions for switching up to and including 100 A. They are ideal for the arduous switching of motors.

Standard mounting is by DIN rail or base mount with screws.

The COMO M comes complete with direct mount handle, or pistol handles and shaft. Fourth pole and auxiliary switching can also be achieved with easy clip-on modules - refer accessories.

Front operated surface mount (Supplied with direct or external handle)

	AC 22 400 V (A)	AC 23 400 V (A)	AC 23 400 V (kW)	Handle type	Cat. No.
20 A	20	20	9	Direct	SLB 20D 3P
				Pistol	SLB 20P 3P
25 A	25	25	11	Direct	SLB 25D 3P
				Pistol	SLB 25P 3P
32 A	32	32	15	Direct	SLB 32D 3P
				Pistol	SLB 32P 3P
40 A	40	40	18.5	Direct	SLB 40D 3P
				Pistol	SLB 40P 3P
63 A	63	63	30	Direct	SLB 63D 3P
				Pistol	SLB 63P 3P
80 A	80	80	40	Direct	SLB 80D 3P
				Pistol	SLB 80P 3P
100 A	100	80	40	Direct	SLB 100D 3P
				Pistol	SLB 100P 3P

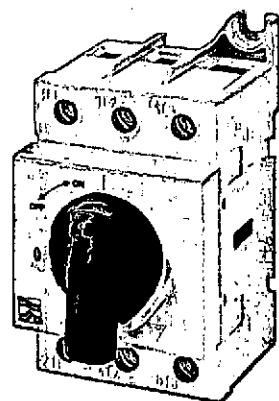


SLB 63...100



SLB Standard load-break switches

New Range

SIRCO 125 to 4000 A

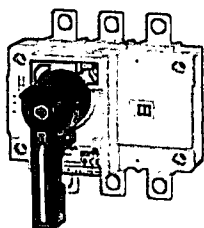

SLB 125...630

The SIRCO range of load-break switches offer compact solutions for switching from 125 A to 4000 A. Base mounting is standard.

The SIRCO range are a proven, reliable design that more than suit harsh Australian conditions.


The switches come complete with extended shaft and door mountable pistol grip handle.

Available in three and four pole versions with a large range of accessories to choose from.

Front operated surface mount (Supplied with external handle and shaft)

	AC 21 400 V (A)	AC 23 400 V (A)	AC 23 400 V (kW)	No. of poles ¹⁾	Cat. No.
125 A	125	125	63	3	SLB 125 3P
				4	SLB 125 4P
160 A	160	160	80	3	SLB 160 3P
				4	SLB 160 4P
200 A	200	200	100	3	SLB 200 3P
				4	SLB 200 4P
250 A	250	250	132	3	SLB 250 3P
				4	SLB 250 4P
315 A	315	315	160	3	SLB 315 3P
				4	SLB 315 4P
400 A	400	400	220	3	SLB 400 3P
				4	SLB 400 4P
500 A	500	400	280	3	SLB 500 3P
				4	SLB 500 4P
630 A	630	500	280	3	SLB 630 3P
				4	<input type="checkbox"/> SLB 630 4P
800 A	800	800	450	3	SLB 800 3P
				4	<input type="checkbox"/> SLB 800 4P

Notes: ¹⁾ 6 and 8 pole switches available on indent. Refer NHP.
 Available on indent only.

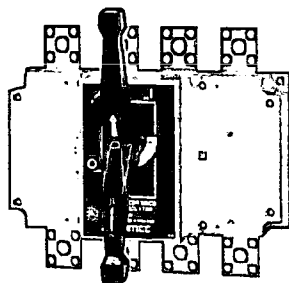

SLB 800...3150




SLB Standard load-break switches SIRCO 125 to 4000 A (cont'd)



The SIRCO range of load-break switches offer compact solutions for switching from 125 A to 4000 A. Base mounting is standard.

The SIRCO switches come complete with extended shaft and door mountable pistol grip handle. Available in three and four pole versions with a large range of accessories to choose from.

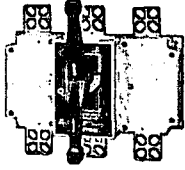


SLB 800...3150

Front operated surface mount (Supplied with external handle and shaft)

	AC 21 400 V (A)	AC 23 400 V (A)	AC 23 400 V (kW)	No. of poles ¹⁾	Cat. No.
1000 A	1000	1000	560	3	SLB 1000 3P
				4	<input type="checkbox"/> SLB 1000 4P
1250 A	1250	1000	560	3	SLB 1250 3P
				4	<input type="checkbox"/> SLB 1250 4P
1600 A	1600	1000	560	3	SLB 1600 3P
				4	<input type="checkbox"/> SLB 1600 4P
1800 A	1800	1000	560	3	SLB 1800 3P
				4	<input type="checkbox"/> SLB 1800 4P
2000 A	2000	1250	710	3	SLB 2000 3P
				4	<input type="checkbox"/> SLB 2000 4P
2500 A	2500	1250	710	3	SLB 2500 3P
				4	<input type="checkbox"/> SLB 2500 4P
3150 A	3150	1250	710	3	SLB 3150 3P
				4	<input type="checkbox"/> SLB 3150 4P
4000 A	4000	1250	710	3	SLB 4000 3P ²⁾
				4	<input type="checkbox"/> SLB 4000 4P ²⁾

Notes: ¹⁾ 6 and 8 pole switches available on indent. Refer NHP.
²⁾ Supplied with 2 N/O and 2 N/C auxiliaries as standard.
 Available on indent only.

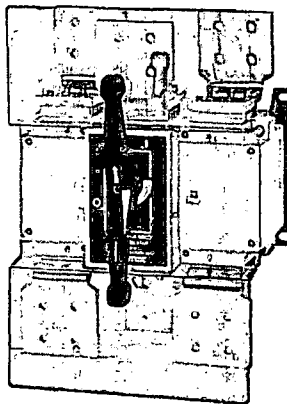


SLB 4000




Technical data and dimensions (mm)

COMO M SLB 20 to 100 A


COMO M 20 to 40 A

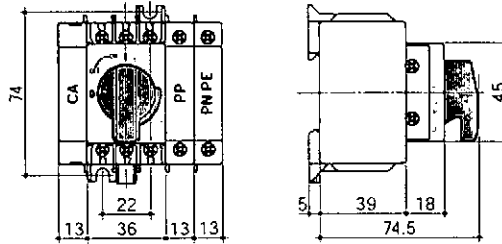


COMO M 63 to 100 A

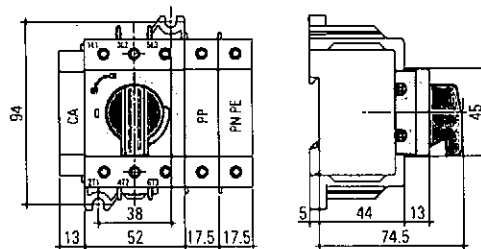

COMO M Selector handle door drilling

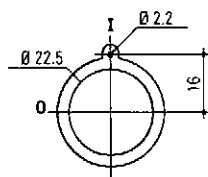

COMO M Pistol handle door drilling

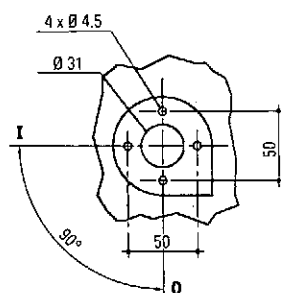





Technical data and dimensions (mm)

SIRCO SLB 125 to 2500 A


SIRCO 125 to 2500 A

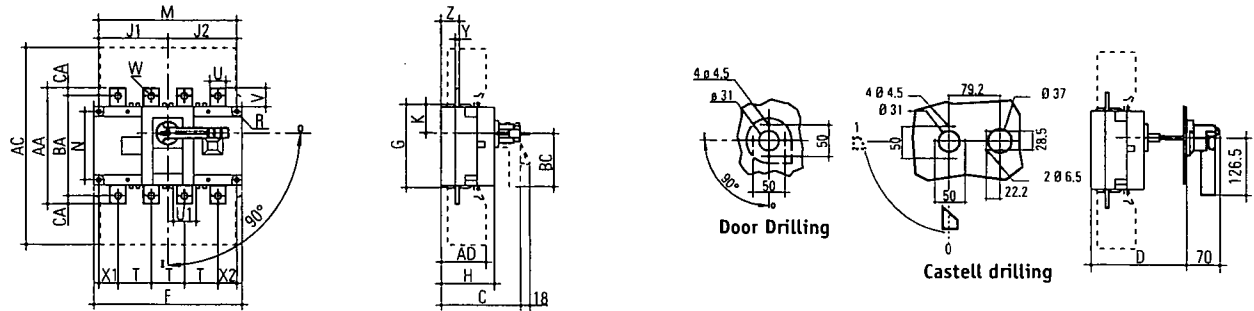

Rating A	Overall dimensions			Terminal shrouds		Switch body						Switch mounting				Connection terminals														
	A	C	D	AC	AD	F 3p	F 4p	G	H	J1 3p	J1 4p	J2	K	BC	M 3p	M 4p	N	R	T	U	U1	V	Y	Z	AA	BA	CA			
125	120	124...354	235	50	140	170	93	65	45	75	75	31.5	80	120	150	65	5.5	36	20	20.5	25	9	28	22	20	3.5	20.5	135	115	10
160	120	124...354	235	50	140	170	93	65	45	75	75	31.5	80	120	150	65	5.5	36	20	20.5	25	9	28	22	20	3.5	20.5	135	115	10
200	130	135...365	290	60	180	230	108	75	55	105	105	34	115	160	210	80	5.5	50	25	25.5	30	11	33	33	27	3.5	22.5	160	130	15
250	130	135...365	290	60	180	230	108	75	55	105	105	34	115	160	210	80	5.5	50	25	25.5	30	11	33	33	27	3.5	22.5	160	130	15
315	165	167...397	401	89	230	290	170	110	75	135	135	55	115	210	270	140	7	65	32	45.5	37.5	11	42.5	37.5	37.5	5	36	235	205	15
400	165	167...397	401	89	230	290	170	110	75	135	135	55	115	210	270	140	7	65	32	45.5	37.5	11	42.5	37.5	37.5	5	36	235	205	15
500	165	167...397	401	89	230	290	170	110	75	135	135	55	115	210	270	140	7	65	32	45.5	37.5	13	42.5	37.5	37.5	5	36	235	205	15
630	165	167...397	400	89	230	290	170	110	75	135	135	55	115	210	270	140	7	65	45	45.5	50	13	42.5	37.5	37.5	5	36	260	220	20

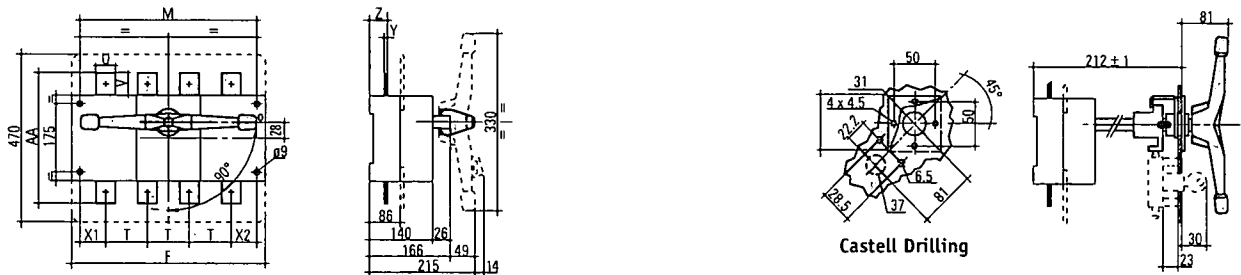

Rating A	Switch body		Switch mounting		T	U	V	Connection terminals				
	F 3p	F 4p	M 3p	M 4p				Y	X1	X2	Z	AA
800	280	360	255	335	80	50	60.5	7	47.5	47.5	46.5	321
1000	280	360	255	335	80	50	60.5	7	47.5	47.5	46.5	321
1250	372	492	347	467	120	90	44	8	53.5	53.5	47.5	288
1600	372	492	347	467	120	90	44	8	53.5	53.5	47.5	288
1800	372	492	347	467	120	90	44	8	53.5	53.5	47.5	288

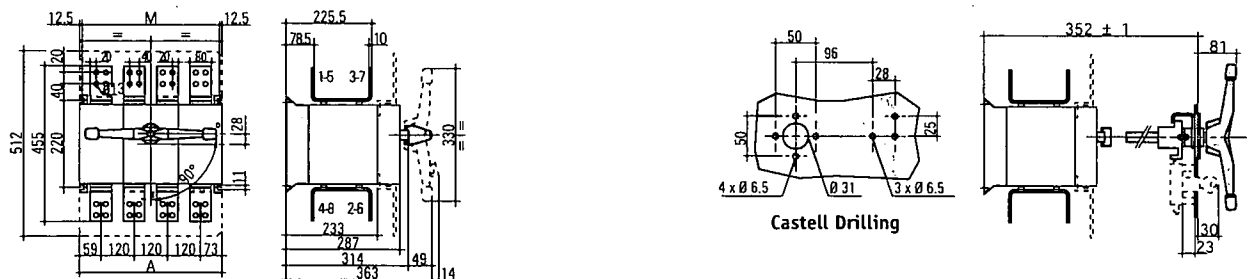


Rating A	Overall dimensions		Switch mounting	
	A 3p	A 4p	M 3p	M 4p
2000	372	492	347	467
2500	372	492	347	467



Technical data and dimensions (mm)


SIRCO SLB 3150 to 4000 A

SIRCO 3150 A

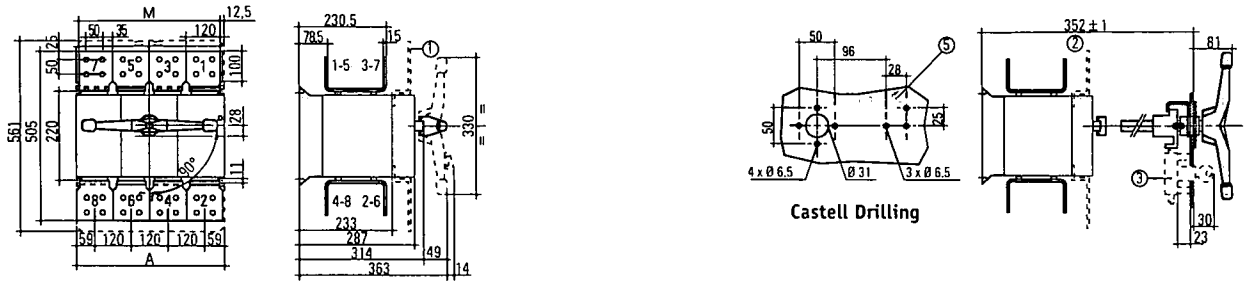


Rating A	Overall dimensions		Switch mounting	
	A 3p	A 4p	M 3p	M 4p
3150	372	492	347	467

SIRCO 4000 A

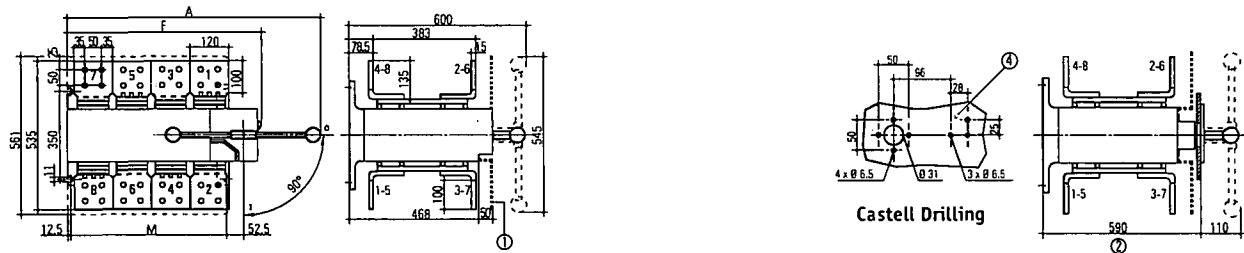

Rating A	Overall dimensions		Switch body		Switch mounting	
	A 3p	A 4p	F 3p	F 4p	M 3p	M 4p
4000	684	804	470	590	347	467

SIRCO Connection terminals - 800 to 4000 A

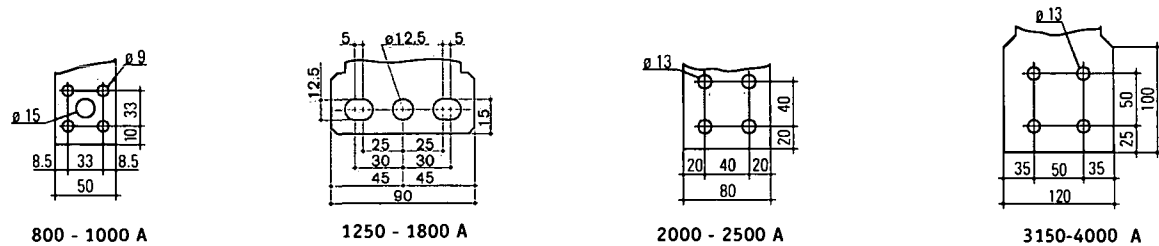



Technical data and ratings chart

COMO M SLB 20 to 100 A

Ratings to AS 3947-3 and IEC 60947-3

		20 A	25 A	32 A	40 A	63 A	80 A	100 A
Rated insulation voltage and rated operation voltage AC 20/DC 20	V	800	800	800	800	800	800	800
Rated impulse withstand voltage	kV	8	8	8	8	8	8	8
Rated operational current								
AC 21A	400 V A	20	25	32	40	63	80	100
	500 V A	20	25	32	40	63	80	100
	690 V A	20	25	32	40	63	80	100
AC 22A	400 V A	20	25	32	40	63	80	100
	500 V A	20	25	32	40	63	80	100
	690 V A	20	25	32	40	63	80	100
AC23A	400 V A	20	25	32	40	63	80	80
	500 V A	16	20	25	32	50	63	63
	690 V A	16	20	20	20	50	50	50
Rated operational current								
DC 21A	400 V A							
	500 V A							
DC 22A	400 V A	Refer NHP						
	500 V A							
DC 23A	400 V A	Refer NHP						
	500 V A							
Operational power								
AC 23A	400 V kW	9	11	15	18.5	30	40	40
	500 V kW	9	11	15	18.5	33	40	40
	690 V kW	11	15	15	15	45	45	45
Overload capacity								
Short time withstand current I _{cw} (RMS 1s) 690 V	kA	1.26	1.26	1.26	1.26	1.5	1.5	1.5
Breaking capacity AC 23A	400 V A	160	200	256	320	504	640	640
Fuse protected short circuit withstand. (kA RMS prospective)	400 V AC kA	50	50	50	50	25	25	25
	Fuse A	20	25	32	40	63	80	100
Mechanical endurance	Ops	100000	100000	100000	100000	30000	30000	30000
Weight (3 pole)	Kg	0.13	0.13	0.13	0.13	0.25	0.25	0.25
Min. tightening torque	Nm	2	2	2	2	4	4	4
Connection cable size	mm ²	2.5/16	2.5/16	4/16	6/16	16/50	16/50	25/50

Note: 240/415 V ratings suitable for use on 230/400 V in accordance with AS 60038 : 2000.



Technical data and ratings chart

SIRCO SLB 125 to 630 A

Ratings to AS 3947-3 and IEC 60947-3

			125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A
Rated insulation voltage and rated operation voltage AC 20/DC 20	V		800	800	800	800	1000	1000	1000	1000
Rated impulse withstand voltage	kV		8	8	8	8	12	12	12	12
Rated operational current										
AC 21A	400 V	A	125	160	200	250	315	400	500	630
	500 V	A	125	160	200	250	315	400	500	630
	690 V	A	125	160	200	250	315	400	500	500
AC 22A	400 V	A	125	160	200	250	315	400	500	630
	500 V	A	125	125	200	250	315	400	500	500
	690 V	A	-	-	-	125	250	250	250	315
AC23A	400 V	A	125	160	200	250	315	400	500	500
	500 V	A	100	100	160	200	315	315	315	315
	690 V	A	-	-	-	100	160	160	160	160
Rated operational current										
DC 21A	400 V	A	125	160	160	250	315	400	400	630
	500 V	A	125	125	160	200	315	400	400	500
DC 22A	400 V	A	125	160	160	200	315	400	400	500
	500 V	A	125	125	160	200	315	315	315	500
DC 23A	400 V	A	125	125	160	200	315	400	400	500
	500 V	A	125	125	160	200	315	400	400	500
Operational power										
AC 23A	400 V	kW	63	80	100	132	160	220	280	280
	500 V	kW	63	63	110	140	220	220	220	220
	690 V	kW	55	55	75	90	150	150	150	150
Overload capacity										
Short time withstand current I _{cw} (RMS 1s) 690 V	kA		7	7	9	9	13	13	13	13
Breaking capacity AC 23A	400 V	A	1000	1280	1600	2000	2520	3200	4000	4000
Fuse protected short circuit withstand. (kA RMS prospective)	400 V AC	kA	100	100	80	50	100	100	100	70
	Fuse	A	125	160	200	250	315	400	500	630
Rated capacitor power	kVAr		55	75	90	115	145	185	230	290
Mechanical endurance	Ops		10000	10000	10000	10000	5000	5000	5000	5000
Weight (3 pole)	Kg		1	1.5	2	2	3.5	3.5	3.5	3.5
Min. tightening torque	Nm		6.5	6.5	10	10	15.4	14.5	14.5	14.5
Connection cable size	mm ²		35/50	50/95	70/95	95/150	150/240	185/240	240/240	2 (150/300)

Note: 240/415 V ratings suitable for use on 230/400 V in accordance with AS 60038 : 2000.



Technical data and ratings chart

SIRCO SLB 800 to 4000 A

Ratings to AS 3947-3 and IEC 60947-3

		800 A	1000 A	1250 A	1600 A	1800 A	2000 A	2500 A	3150 A	4000 A
Rated insulation voltage and rated operation voltage AC 20/DC 20	V	1000	1000	1000	1000	1000	1000	1000	1000	1000
Rated impulse withstand voltage	kV	12	12	12	12	12	12	12	12	12
Rated operational current										
AC 21A	400 V A	800	1000	1250	1600	1600	2000	2500	3150	3150
	500 V A	800	1000	1250	1600	1600	2000	2500	3150	3150
	690 V A	800	1000	1000	1600	1600	2000	2000	2000	2000
AC 22A	400 V A	800	1000	1250	1250	1250	2000	2000	2500	2500
	500 V A	800	1000	1000	1250	1250	1600	1600	2000	2000
	690 V A	800	630	630	800	800	1000	1000	1000	1000
AC 23A	400 V A	800	1000	1000	1000	1000	1250	1250	1250	1250
	500 V A	630	800	800	1000	1000	1000	1000	1000	1000
	690 V A	200	400	400	500	500	800	800	800	800
Rated operational current										
DC 21A	400 V A	800	1000	1250	1600	1600	2000	2000	2000	2000
	500 V A	630	1000	1250	1250	1250	1250	1250	1250	1250
DC 22A	400 V A	800	1000	1250	1250	1250	1250	1250	1250	1250
	500 V A	800	1000	1250	1250	1250	1250	1250	1250	1250
DC 23A	400 V A	800	1000	1000	1000	1000	1000	1000	1000	1000
	500 V A	800	1000	1000	1000	1000	1000	1000	1000	1000
Operational power										
AC 23A	400 V kW	450	560	560	560	560	710	710	710	710
	500 V kW	450	560	560	710	710	710	710	710	710
	690 V kW	185	400	400	475	475	750	750	750	750
Overload capacity										
Short time withstand current I _{cw} (RMS 1s) 690 V	kA	26	35 ¹⁾	50	50	50	50	50	55	70
Breaking capacity AC 23A	400 V A	6400	8000	8000	8000	8000	10000	10000	10000	10000
Fuse protected short circuit withstand. (kA RMS prospective)	400 V AC kA	50	100	100	100	100	100	100	-	-
	Fuse A	800	1000	1250	2x800	2x800	2x1000	2x1000	-	-
Rated capacitor power	kVA _r	365	460	575	-	-	-	-	-	-
Mechanical endurance	Ops	4000	4000	4000	3000	3000	3000	2500	2500	2500
Weight (3 pole)	Kg	8	10.5	10.5	16	17	31	32	42	90
Min. tightening torque	Nm	37	37	37	50	50	60	60	60	110
Connection cable size	mm ²	2 (185/300)	2 240/4 185	4 185 max	6 240 max	-	-	-	-	-


Notes: ¹⁾ 50 kA switch available in larger frame size. Refer NHP.
240/415 V ratings suitable for use on 230/400 V in accordance with AS 60038 : 2000.



Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

LEVEL TRANSMITTER

1. LEVEL TRANSMITTER TECHNICAL DETAILS

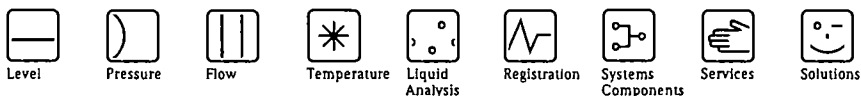


Technical Information

Waterpilot FMX167

Hydrostatic level measurement

Reliable and robust level probe with ceramic measuring cell

Compact device for level measurement in fresh water, wastewater and saltwater

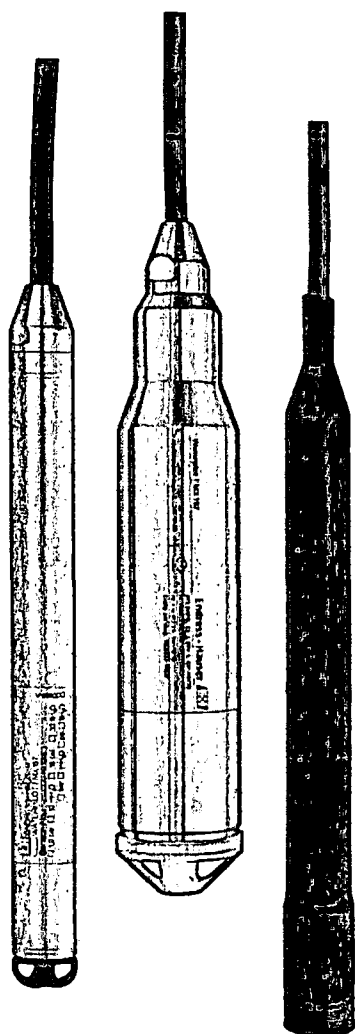

Application

The Waterpilot FMX167 is a pressure sensor for hydrostatic level measurement.

Three versions of FMX167 are available at Endress+Hauser:

- FMX167 with a stainless steel housing, outer diameter of 22 mm (0.87 inch): Standard version suitable for drinking water applications and for use in bore holes and wells with small diameters
- FMX167 with a stainless steel housing, outer diameter of 42 mm (1.66 inch): Heavy duty version, easy clean flush-mounted process diaphragm. Ideally suited to wastewater and sewage treatment plants
- FMX167 with a coated housing, outer diameter of 29 mm (1.15 inch): Corrosion resistant version generally for use in saltwater, particularly for ship ballast water tanks.

Your benefits

- High mechanical resistance to overload and aggressive media
- High-precision, robust ceramic measuring cell with long-term stability
- Climate proofed sensor thanks to completely potted electronics and 2-filter pressure compensation system
- 4 to 20 mA output signal with integrated overvoltage protection
- Simultaneous measurement of level and temperature with optionally integrated Pt100 temperature sensor
- Drinking water approvals: KTW, NSF, ACS
- Approvals: ATEX, FM and CSA
- Marine certificate: GL, ABS
- Extensive range of accessories provides complete measuring point solutions

T1351P/24/ae/06.09

Endress+Hauser

People for Process Automation


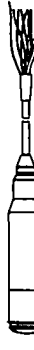


Table of contents

Function and system design	3	Extension cable	18
Device selection	3	Terminals	18
Measuring principle	4	Installation tool – indicating the customer-specific length on the cable	19
Measuring system	5		
System integration	6	Certificates and approvals	20
Input	7	CE mark	20
Measured variable	7	Ex approval, type of protection	20
Measuring range	7	Drinking water approval for FMX167 with outer diameter 22 mm (0.87 in)	20
Input signal	7	Marine approval	20
Output	8	Standards and guidelines applied	20
Output signal	8	Ordering information	21
Load	8	FMX167	21
Power supply	9	FMX167 (continued)	22
Measuring unit electrical connection	9	Accessories	22
Supply voltage	10	Mounting clamp	22
Cable specifications	10	Terminal box	22
Power consumption	10	Additional weight for FMX167 with an outer diameter of 22 mm and 29 mm (0.87" and 1.14")	22
Current consumption	10	TMT181 temperature head transmitter	22
Residual ripple	10	Extension cable mounting screw	23
Accuracy	11	Terminals	23
Reference operating conditions	11	Test adapter for FMX167 with an outer diameter of 22 mm and 29 mm (0.87" and 1.14")	23
Maximum measured error	11	Additional documentation	23
Long-term stability	11	Field of activities	23
Influence of medium temperature	11	Technical Information	23
Warm-up period	11	Operating Instructions	23
Rise time	11	Safety instructions	23
Settling time	11	Installation/Control Drawings	23
Installation conditions	12	Drinking water approval	23
Installation instructions	12		
Environment	13		
Ambient temperature range	13		
Storage temperature range	13		
Degree of protection	13		
Electromagnetic compatibility (EMC)	13		
Overvoltage protection	13		
Process conditions	14		
Medium temperature range	14		
Medium temperature limits	14		
Mechanical construction	15		
Dimensions of the level probe	15		
Dimensions of the mounting clamp	15		
Dimensions of the extension cable mounting screws	16		
Dimensions of the terminal box IP 66/IP 67 with filter	16		
Dimensions of the TMT181 temperature head transmitter	17		
Terminal box with integrated TMT181 temperature head transmitter	17		
Weight	17		
Material	18		

Waterpilot FMX167

Function and system design

Device selection


<p>Waterpilot FMX167</p>	 <p>P01-FMX167-16-32-32-002</p>	 <p>P01-FMX167-16-32-32-003</p>	 <p>P01-FMX167-16-32-32-004</p>
<p>Field of application</p>	<p>Hydrostatic level measurement in deep wells e.g. drinking water</p>	<p>Hydrostatic level measurement in wastewater</p>	<p>Hydrostatic level measurement in saltwater</p>
<p> Caution! The Waterpilot is not suitable for use in biogas plants since the gases can diffuse through the elastomers (seals, extension cable). Endress+Hauser offers the Deltapilot level transmitter for biogas applications.</p>			
<p>Process connection</p>	<ul style="list-style-type: none"> - Mounting clamp - Extension cable mounting screw with G1 1/2 A or 1 1/2 NPT thread 		
<p>Outer diameter</p>	<p>22 mm (0.87")</p>	<p>42 mm (1.65")</p>	<p>Max. 29 mm (1.14")</p>
<p>Extension cable</p>	<ul style="list-style-type: none"> - PE extension cable - PUR extension cable - FEP extension cable 		
<p>Seals</p>	<ul style="list-style-type: none"> - FKM Viton - EPDM ¹⁾ 	<ul style="list-style-type: none"> - FKM Viton 	<ul style="list-style-type: none"> - FKM Viton - EPDM
<p>Measuring ranges</p>	<ul style="list-style-type: none"> - Nine fixed pressure measuring ranges in bar, mH₂O, psi and ftH₂O, from 0 to 0.1 bar to 0 to 20 bar (0 to 1 mH₂O to 0 to 200 mH₂O/ 0 to 1.5 psi to 0 to 300 psi/0 to 3 ftH₂O to 0 to 600 ftH₂O) - Customer-specific measuring ranges; factory-calibrated 		<ul style="list-style-type: none"> - Seven fixed pressure measuring ranges in bar, mH₂O, psi and ftH₂O, from 0 to 0.1 bar to 0 to 4 bar (0 to 1 mH₂O to 0 to 40 mH₂O/ 0 to 1.5 psi to 0 to 60 psi/ 0 to 3 ftH₂O to 0 to 150 ftH₂O) - Customer-specific measuring ranges; factory-calibrated
<p>Overload</p>	<p>Up to 40 bar (580 psi)</p>		<p>Up to 25 bar (362 psi)</p>
<p>Process temperature</p>	<p>-10 to +70 °C (14 to 158°F)</p>		<p>0 to +50 °C (32 to 122°F)</p>
<p>Ambient temperature range</p>	<p>-10 to +70 °C (14 to 158°F)</p>		<p>0 to +50 °C (32 to 122°F)</p>
<p>Maximum measured error</p>	<p>±0.2 % of upper range value (URV)</p>		
<p>Supply voltage</p>	<p>10 to 30 V DC</p>		
<p>Output</p>	<p>4 to 20 mA</p>		
<p>Options</p>	<ul style="list-style-type: none"> - Drinking water approval - Integrated Pt100 temperature sensor - Integrated Pt100 temperature sensor and TMT181 temperature head transmitter (4 to 20 mA/HART) - Marine approval 		
<p>Specialties</p>	<ul style="list-style-type: none"> - Large selection of approvals, including ATEX II 2 G, FM and CSA - High-precision, robust ceramic measuring cell with long-term stability - Customer-specific cable marking 		

1) Recommended for drinking water applications, not suitable for use in hazardous areas

Measuring principle

The ceramic measuring cell is a dry measuring cell, i.e. pressure acts directly on the robust ceramic process isolating diaphragm of the Waterpilot.

Any changes in the air pressure are routed through the extension cable, via a pressure compensation tube, to the rear of the ceramic process isolating diaphragm and compensated for. A pressure-dependent change in capacitance caused by the movement of the process isolating diaphragm is measured at the electrodes of the ceramic carrier. The electronics convert the movement into a pressure-proportional signal which is linear to the medium level.

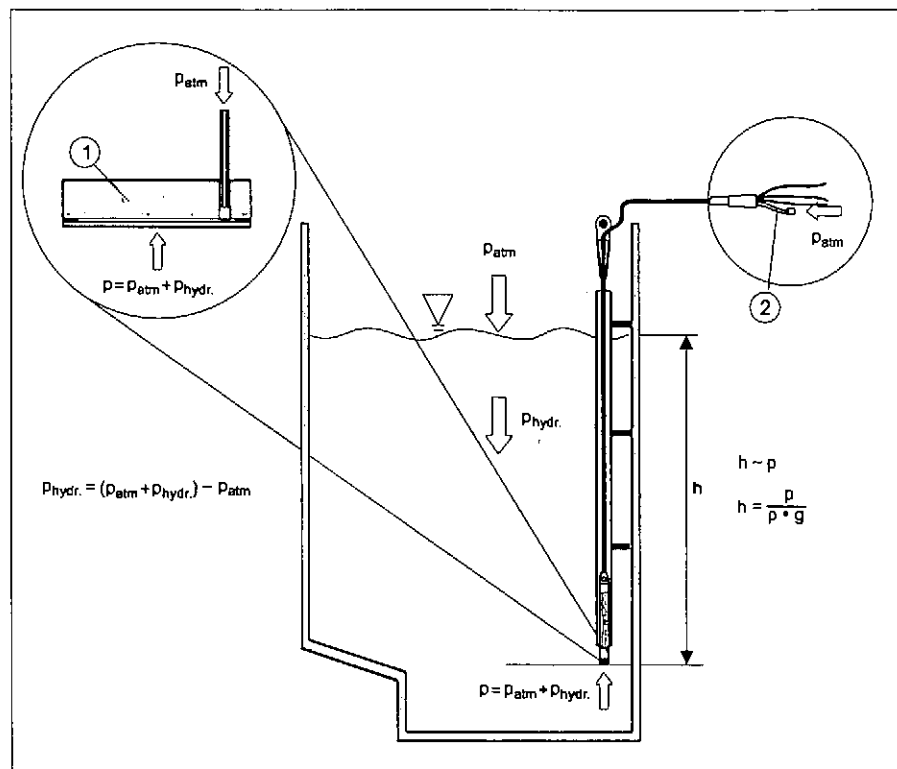**Measuring principle**

- 1 Ceramic measuring cell
- 2 Pressure compensation tube
- h Level height
- p Total pressure = hydrostatic pressure + atmospheric pressure
- ρ Density of the medium
- g Gravitational acceleration
- p_{hydr} Hydrostatic pressure
- p_{atm} Atmospheric pressure

Temperature measurement with optional Pt100¹⁾

Endress+Hauser also offers the Waterpilot FMX167 with an optional 4-wire Pt100 resistance thermometer to measure level and temperature simultaneously. The Pt100 belongs to Accuracy Class B in accordance with DIN EN 60751, see also → 22, Sect. "Accessories."

Temperature measurement with optional Pt100 and TMT181 temperature head transmitter

To convert the Pt100 signal to a 4 to 20 mA signal, Endress+Hauser also offers the TMT181 temperature transmitter.


1) Not for use in hazardous areas.

Waterpilot FMX167

Measuring system

The complete standard measuring system consists of Waterpilot and a transmitter power supply unit with supply voltage of 10 to 30 V DC.

Possible measuring point solutions with a transmitter and evaluation units from Endress+Hauser:

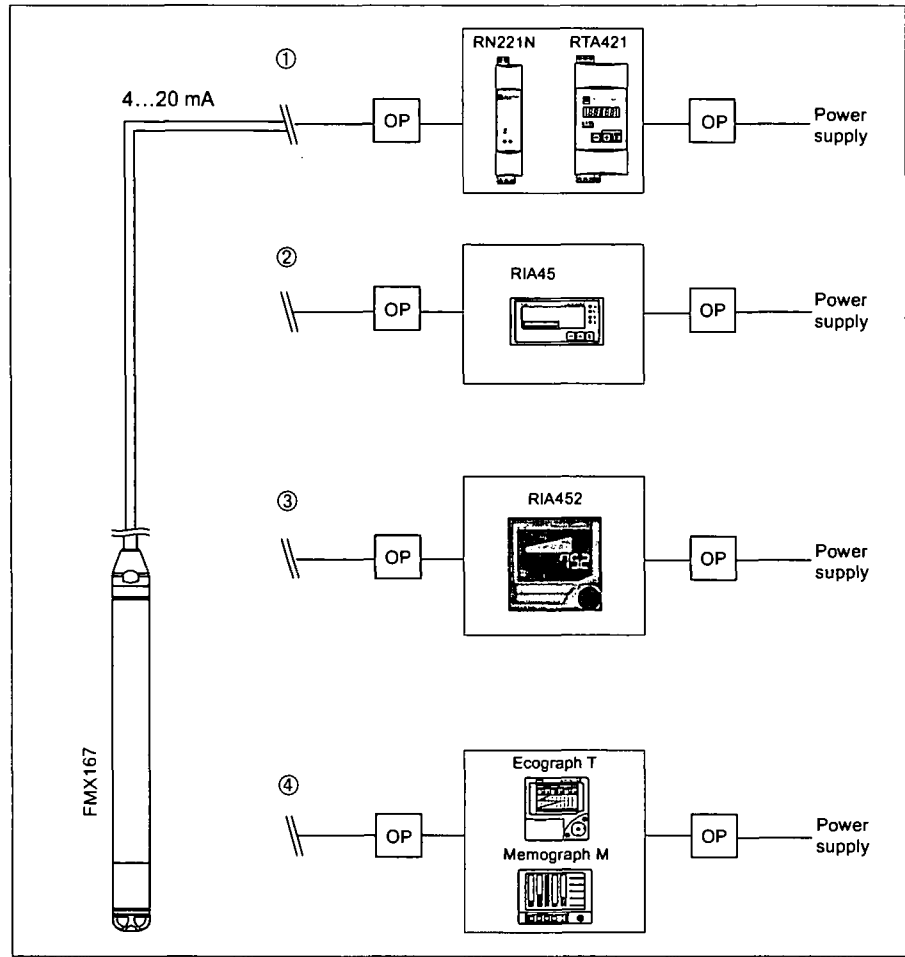

Application examples with FMX167


OVP = Overvoltage protection e.g. HAW from Endress+Hauser (not for use in hazardous areas)

- OVP on the sensor side for field installation: HAW569/for top-hat rail/DINrail: HAW562

- OVP on the supply side for top-hat rail/DINrail: HAW561 (115/230 V) and HAW561K (24/48 V AC/DC)

Option dependent on supply voltage.

1. Simple cost-effective measuring point solution: Power supply of Waterpilot in hazardous and non-hazardous areas using RN221N active barrier. Power supply and additional control of two consumers, e.g. pumps, via limit switch RTA421 with onsite display.
2. Evaluation unit RIA45 (for panel mounting) provides a power supply system, an onsite display and two switch outputs.
3. If several pumps are used, the pump service life can be prolonged by alternate switching. With alternating pump control, the pump which was out of service for the longest period of time is switched on. The evaluation unit RIA452 (for panel mounting) provides this option in addition to several other functions.
4. State-of-the-art recording technology with graphic display recorders from Endress+Hauser, such as Ecograph T, Memograph M, or paper recorders such as Alphalog for documenting, monitoring, visualizing and archiving purposes.

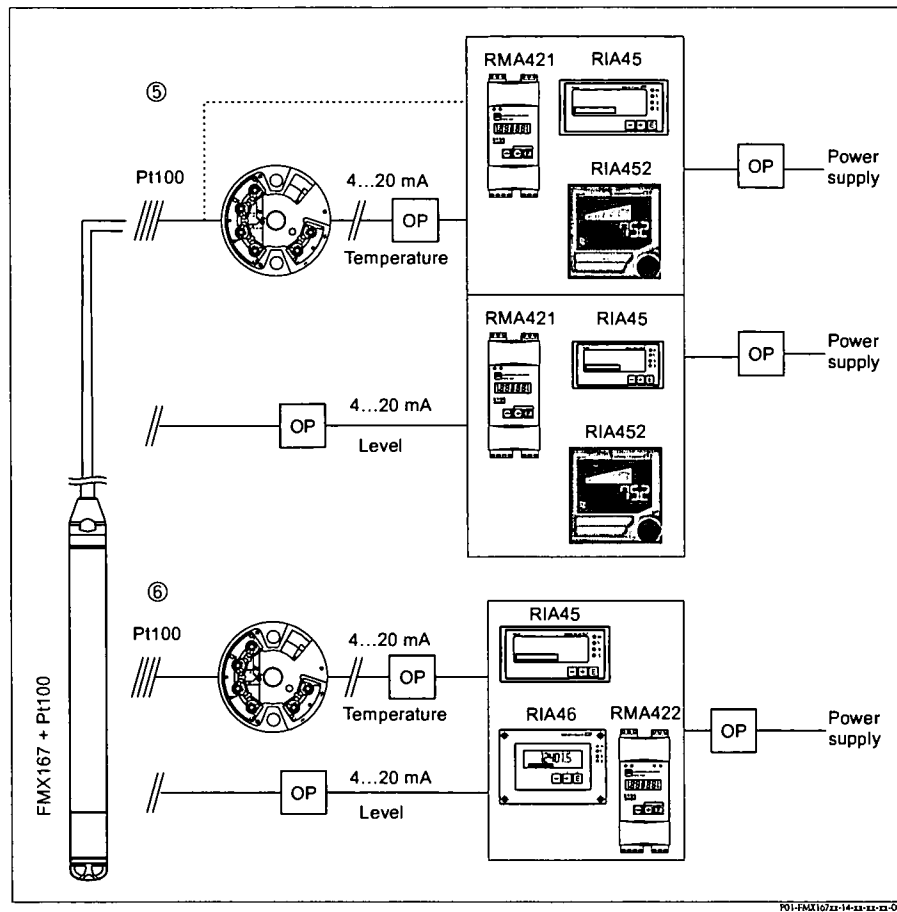

Application examples with FMX167

OVP = Overvoltage protection e.g. HAW from Endress+Hauser (not for use in hazardous areas)

- OVP on the sensor side for field installation: HAW569/for top-hat rail/DINrail: HAW562

- OVP on the supply side for top-hat rail/DINrail: HAW561 (115/230 V) and HAW561K (24/48 V AC/DC)

Option dependent on supply voltage.

5. If you want to measure, display and evaluate the temperature as well as the level, e.g. to monitor temperature in fresh water to detect temperature limits for germ formation, you have the following options:
The optional TMT181 temperature head transmitter can convert the Pt100 signal to a 4 to 20 mA HART signal and transfer it to any common evaluation unit. The RMA421, RIA45 and RIA452 evaluation units also offer a direct input for the Pt100 signal.
6. If you want to record and evaluate the level and temperature measured value with one device, use the RMA422, RIA45 and RIA46 evaluation units with two inputs. It is even possible to mathematically link the input signals with this unit. These evaluation units are not HART-compatible.

System integration

The device can be fitted with a tag name, see → 21 ff, "Ordering information", feature 995 "Marking" version "1".

Waterpilot FMX167

Input

Measured variable	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ Hydrostatic pressure of a liquid ■ Pt100: Temperature of a liquid 	TMT181 temperature head transmitter (optional) <ul style="list-style-type: none"> ■ Temperature
--------------------------	---	---

Measuring range	<ul style="list-style-type: none"> ■ Nine fixed pressure measuring ranges in bar, mH₂O, psi and ftH₂O; → 21, "Ordering information" Section ■ Customer-specific measuring ranges; factory-calibrated ■ Temperature measurement from -10 to +70 °C (optional with Pt100)
------------------------	--

Sensor measuring range	Lowest span that can be calibrated	Maximum overload/OPL ¹⁾	Vacuum resistance
bar (psi)	bar (psi)	bar (psi)	bar _{abs} (psia)
0.1 (1.5)	0.01 (0.15)	5.0 (73)	0.3 (4.3)
0.2 (3)	0.02 (0.29)	5.0 (73)	0.3 (4.3)
0.4 (6)	0.04 (0.58)	7.0 (101)	0
0.6 (10)	0.06 (0.87)	10.0 (150)	0
1.0 (15)	0.1 (1.5)	10.0 (150)	0
2.0 (30)	0.2 (3)	18.0 (261)	0
4.0 (60)	0.4 (6)	25.0 (362)	0
10.0 ²⁾ (150)	1.0 (15)	40.0 (580)	0
20.0 ²⁾ (300)	2.0 (30)	40.0 (580)	0

- 1) OPL: overpressure limit, depending on the weakest element, in terms of pressure, of the selected components
- 2) These measuring ranges are not offered for the probe version with a coated housing, outer diameter 29 mm (1.14").

Input signal	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ Change in capacitance ■ Pt100: change in resistance 	TMT181 temperature head transmitter (optional) <ul style="list-style-type: none"> ■ Pt100 resistance signal, 4-wire
---------------------	---	---

Output

Output signal

FMX167 + Pt100 (optional)

- FMX167: 4 to 20 mA for hydrostatic pressure measured value, two-wire
- Pt100: Temperature-dependent resistance value of the Pt100

TMT181 temperature head transmitter (optional)

- 4 to 20 mA for temperature measured value, two-wire

Load

FMX167 + Pt100 (optional)

$$R_{tot} \leq \frac{U_b - 10 \text{ V}}{0.0225 \text{ A}} - 2 \cdot 0.09 \frac{\Omega}{\text{m}} \cdot l - R_{add}$$

P01-FMX167/11-10-11-11-11-000

TMT181 temperature head transmitter (optional)


$$R_{tot} \leq \frac{U_b - 8 \text{ V}}{0.025 \text{ A}} - R_{add}$$

P01-FMX167/11-10-11-11-11-001


- R_{ges} = Max. load resistance [Ω]
- R_{add} = additional resistances such as resistance of evaluation unit and/or display unit, cable resistance [Ω]
- U_b = Supply voltage [V]
- l = Simple length of extension cable [m] (cable resistance per wire $\leq 0.09 \text{ } \Omega/\text{m}$)

Note!

When using the measuring device in hazardous areas, installation must comply with the applicable national standards and regulations and the Safety Instructions or Installation or Control Drawings.

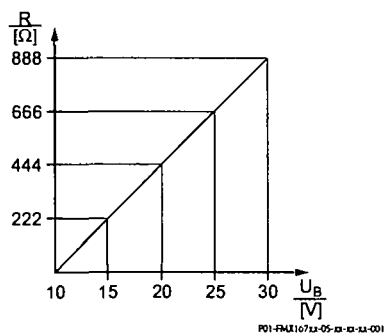

FMX167 load chart for estimating the load resistance. Additional resistances, such as the resistance of the extension cable, have to be subtracted from the value calculated as shown in the equation.

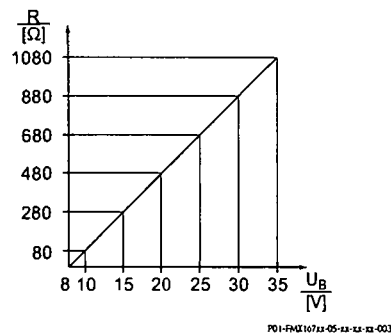

Temperature head transmitter load chart for estimating the load resistance. Additional resistances have to be subtracted from the value calculated as shown in the equation.

Waterpilot FMX167


Power supply

Measuring unit electrical connection


Note!

- When using the measuring device in hazardous areas, installation must comply with the applicable national standards and regulations and the Safety Instructions (XAs) or the Installation or Control Drawings (ZDs), see also → 23, Sect. "Safety instructions", "Installation/Control Drawings".
- Reverse polarity protection is integrated in the Waterpilot FMX167 and in the temperature head transmitter TMT181. Changing the polarities will not result in the destruction of the devices.
- The cable must end in a dry room or a suitable terminal box. For installation outside, use the terminal box (IP 66/IP 67) with a GORE-TEX® filter from Endress+Hauser. The terminal box can be ordered using the order code of the FMX167 (→ 21, Sect. "Ordering information") or as an accessory Accessories (order number: 52006252).

Waterpilot FMX167, standard

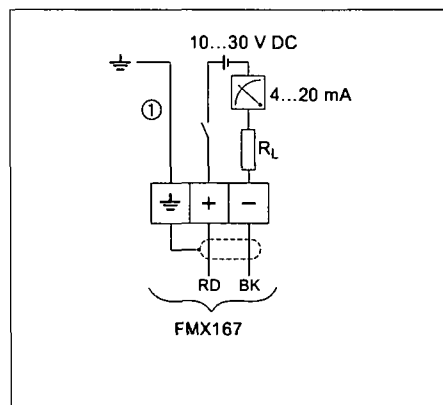

Waterpilot FMX167 with Pt100

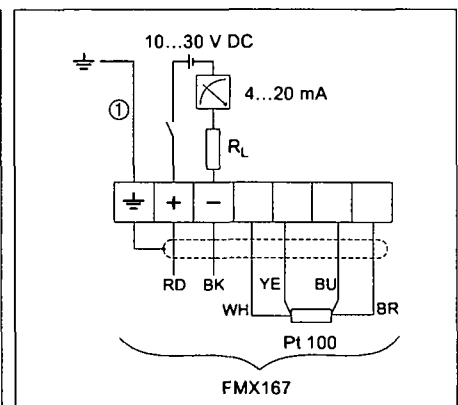


FMX167 electrical connection, versions "7" or "3" for Feature 70 "Additional options" in the order code (→ 21).

FMX167 electrical connection with Pt100, versions "1" or "4" for Feature 70 "Additional options" in the order code (→ 21).

① Not for FMX167 with outer diameter 29 mm (1.15 in)

Waterpilot FMX167 with Pt100 and TMT181 temperature head transmitter TMT181) (4 to 20 mA)

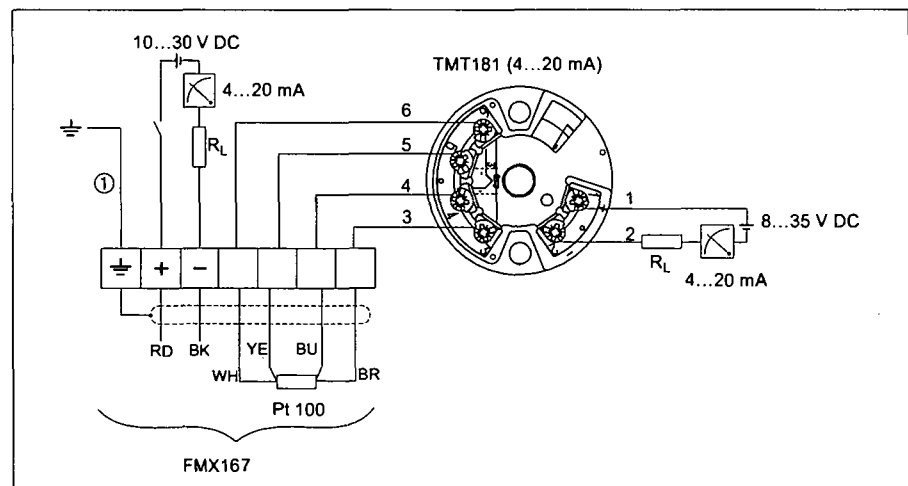

FMX167 with Pt100 and TMT181 temperature head transmitter (4 to 20 mA), version "5" for Feature 70 in the order code (→ 21).

① Not for FMX167 with outer diameter 29 mm (1.14 in)

Wire colors: RD = red, BK = black, WH = white, YE = yellow, BU = blue, BR = brown

Supply voltage	<p>Note! When using the measuring device in hazardous areas, installation must comply with the applicable national standards and regulations and the Safety Instructions (XAs) or the Installation or Control Drawings (ZDs). → 23, Sect. "Safety instructions", "Installation/Control Drawings".</p> <p>FMX167 + Pt100 (optional)</p> <ul style="list-style-type: none"> ■ FMX167: 10 to 30 V DC ■ Pt100: 10 to 30 V DC 	<p>TMT181 temperature head transmitter (optional)</p> <ul style="list-style-type: none"> ■ 8 to 35 V DC
Cable specifications	<p>FMX167 + Pt100 (optional)</p> <ul style="list-style-type: none"> ■ Commercially available instrument cable ■ Terminals in terminal housing FMX167: 0.08 to 2.5 mm² (20 to 14 AWG) ■ If the Pt100 signal is directly connected to a display and/or evaluation unit, Endress+Hauser recommends using a shielded cable. 	<p>TMT181 temperature head transmitter (optional)</p> <ul style="list-style-type: none"> ■ Commercially available instrument cable ■ Terminals in terminal housing FMX167: 0.08 to 2.5 mm² (20 to 14 AWG) ■ Transmitter connection: max. 1.75 mm² (16 AWG)
Power consumption	<p>FMX167 + Pt100 (optional)</p> <p>≤ 0.675 W at 30 V DC</p>	<p>TMT181 temperature head transmitter (optional)</p> <p>≤ 0.875 W at 35 V DC</p>
Current consumption	<p>FMX167 + Pt100 (optional)</p> <ul style="list-style-type: none"> ■ Max. current consumption: ≤ 22.5 mA ■ Min. current consumption: ≥ 3.5 mA ■ Pt100: ≤ 0.6 mA 	<p>TMT181 temperature head transmitter (optional)</p> <ul style="list-style-type: none"> ■ Max. current consumption: ≤ 25 mA ■ Min. current consumption: ≥ 3.5 mA ■ Pt100 via temperature head transmitter: ≤ 0.6 mA
Residual ripple	<p>FMX167 + Pt100 (optional)</p> <p>No effect for 4 to 20 mA signal up to ±5 % residual ripple within permissible range</p>	<p>TMT181 temperature head transmitter (optional)</p> <p>$U_{\text{sr}} \geq 5 \text{ V}$ at $U_{\text{B}} \geq 13 \text{ V}$, $f_{\text{max.}} = 1 \text{ kHz}$</p>


Waterpilot FMX167

Accuracy

Reference operating conditions	FMX167 + Pt100 (optional) DIN EN 60770 $T_U = 25\text{ °C}$ (77°F)	TMT181 temperature head transmitter (optional) Calibration temperature $23\text{ °C} \pm 5\text{ K}$ (73°F $\pm 5\text{ K}$)
Maximum measured error	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ Non-linearity including hysteresis and non-repeatability as per DIN EN 60770: $\pm 0.2\%$ of upper range value (URV) ■ Pt100: max. $\pm 0.7\text{ K}$ (Class B to DIN EN 60751). 	TMT181 temperature head transmitter (optional) <ul style="list-style-type: none"> ■ $\pm 0.2\text{ K}$ ■ With Pt100: max. $\pm 0.9\text{ K}$
Long-term stability	FMX167 + Pt100 (optional) $\pm 0.1\%$ of the upper range limit (URL) per year	TMT181 temperature head transmitter (optional) $\leq 0.1\text{ K}$ per year
Influence of medium temperature	<ul style="list-style-type: none"> ■ Thermal change in zero signal and output span for typical application temperature range $0\text{ to }+30\text{ °C}$ ($+32\text{ to }+86\text{ °F}$): $\pm 0.4\%$ ($\pm 0.5\%$)* of the upper range limit (URL) ■ Thermal change in zero signal and output span for the entire medium temperature range $-10\text{ to }+70\text{ °C}$ ($+14\text{ to }+158\text{ °F}$): $\pm 1.0\%$ ($\pm 1.5\%$)* of the upper range limit (URL) ■ Temperature coefficient α of zero signal and output span: $0.15\%/10\text{ K}$ ($0.3\%/10\text{ K}$)* of the upper range limit (URL) <p>* Specifications for sensors 0.1 bar (1 mH₂O, 1.5 psi, 3 ftH₂O) and 0.6 bar (6 mH₂O, 10 psi, 20 ftH₂O)</p>	
Warm-up period	FMX167 + Pt100 (optional) 20 ms	TMT181 temperature head transmitter (optional) 4 s
Rise time	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ FMX167: 80 ms ■ Pt100: 160 s 	– –
Settling time	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ FMX167: 150 ms ■ Pt100: 300 s 	– –

Installation conditions

Installation instructions

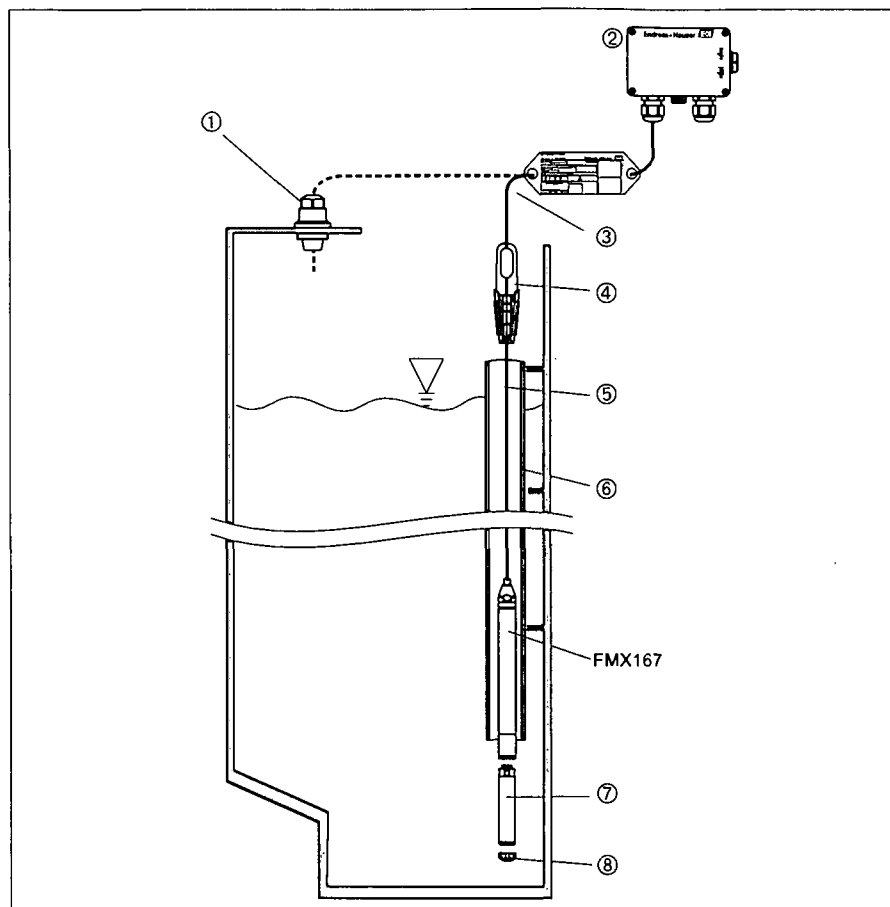

Installation examples, here shown with FMX167 with an outer diameter 22 mm

- 1 Extension cable mounting screw can be ordered via order code or as an accessory, → 21 ff
- 2 Terminal housing can be ordered using the order code or as an accessory → 21
- 3 Extension cable bending radius > 120 mm
- 4 Mounting clamp can be ordered via order code or as an accessory, → 21 ff
- 5 Extension cable, cable length → 18
- 6 Guide pipe
- 7 Additional weight can be ordered as an accessory with an outer diameter of 22 mm and 29 mm (0.87" and 1.14"), → 22
- 8 Protection cap

Note!

- Sideways movement of the level probe can result in measuring errors. For this reason, install the probe at a point free from flow and turbulence, or use a guide tube. The internal diameter of the guide tube should be at least 1 mm (0.04") larger than the outer diameter of the selected FMX167.
- The cable must end in a dry room or a suitable terminal box. The terminal box from Endress+Hauser provides optimum humidity and climatic protection and is suitable for outdoor installation.
- Protection cap: The device is provided with a protection cap to prevent mechanical damage to the measuring cell. This cap should not be removed during the transportation and installation process.
- Endress+Hauser recommends using twisted, shielded cables for any further wiring.

Waterpilot FMX167

Environment


Ambient temperature range	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ FMX167 with outer diameter of 22 mm (0.87") and 42 mm (1.65"): -10 to +70°C (14 to 158°F) = medium temperature) ■ FMX167 with outer diameter of 29 mm (1.14"): 0 to +50°C (32 to 122°F) = medium temperature) <p style="text-align: center;">Terminal box</p> <p style="text-align: center;">-40 to +80°C (-40 to + 176°F)</p>	TMT181 temperature head transmitter (optional) -40 to +85°C (-40 to + 185°F)
Storage temperature range	FMX167 + Pt100 (optional) -40 to +80°C (-40 to + 176°F)	TMT181 temperature head transmitter (optional) -40 to +100°C (-40 to +212°F)
Degree of protection	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ IP 68 (NEMA 6P), permanently hermetically sealed ■ Optional terminal box: IP 66/IP 67 (NEMA 4X) 	TMT181 temperature head transmitter (optional) <ul style="list-style-type: none"> ■ IP 00, moisture condensation permissible ■ When mounted in the optional terminal boxes: IP 66/IP67 (NEMA 4X)
Electromagnetic compatibility (EMC)	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ Interference emission to EN 61326 Class B equipment, interference immunity to EN 61326 Appendix A (Industrial) ■ Maximum deviation < 0.5 % of the span. 	TMT181 temperature head transmitter (optional) <ul style="list-style-type: none"> ■ Interference emission to EN 61326 Class B equipment, interference immunity to EN 61326 Appendix A (Industrial)
Overvoltage protection	FMX167 + Pt100 (optional) Integrated overvoltage protection to EN 61000-4-5 (500 V symmetrical/1000 asymmetrical) Install overvoltage protection ≥ 1.0 kV, external if necessary	TMT181 temperature head transmitter (optional) Install overvoltage protection, external if necessary.

Process conditions

Medium temperature range	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ FMX167 with outer diameter of 22 mm (0.87") and 42 mm (1.65"): -10 to +70°C (14 to 158°F) ■ FMX167 with outer diameter of 29 mm (1.14"): 0 to +50°C (32 to 122°F) 	TMT181 temperature head transmitter (optional) -40 to +85 °C (-40 to +185°F) = ambient temperature, install temperature head transmitter outside medium.
Medium temperature limits	FMX167 + Pt100 (optional) <ul style="list-style-type: none"> ■ FMX167 with outer diameter of 22 mm (0.87") and 42 mm (1.65"): -20 to +70°C (-4 to +158°F) ■ FMX167 with outer diameter of 29 mm (1.14"): 0 to +50°C (32 to 122°F) <p>(You may operate the FMX167 in this temperature range. The specification can then be exceeded, e.g. measuring accuracy).</p>	

Mechanical construction


Dimensions of the level probe

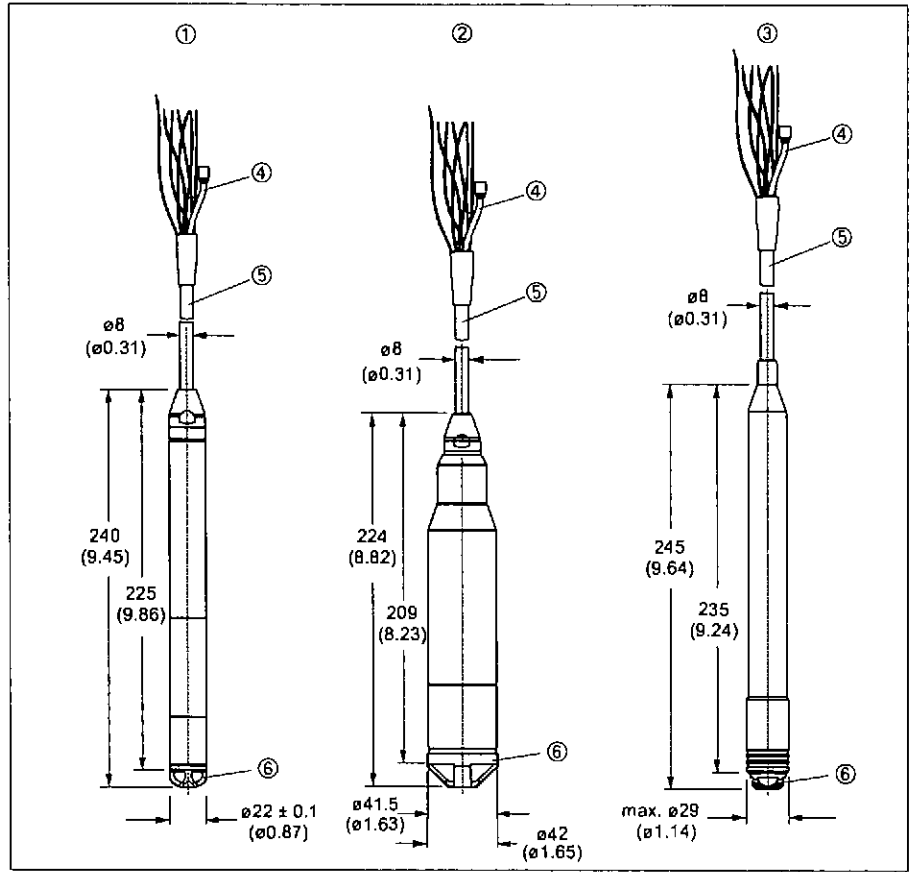

Versions of FMX167


- 1 FMX167, version "A" or "D" for Feature 30 "Probe tube" in the order code (→ 21)
- 2 FMX167, version "B" for Feature 30 "Probe tube" in the order code (→ 21)
- 3 FMX167, version "C" for Feature 30 "Probe tube" in the order code (→ 21)
- 4 Pressure compensation tube
- 5 Extension cable
- 6 Protection cap

Dimensions of the mounting clamp

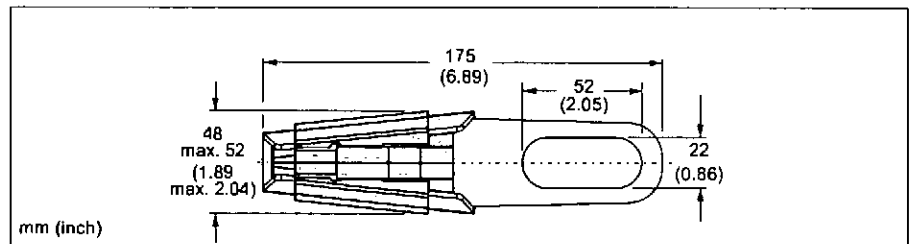

Mounting clamp, version "2" for Feature 20 "Connection" in the order code (→ 21)

Dimensions of the extension cable mounting screws

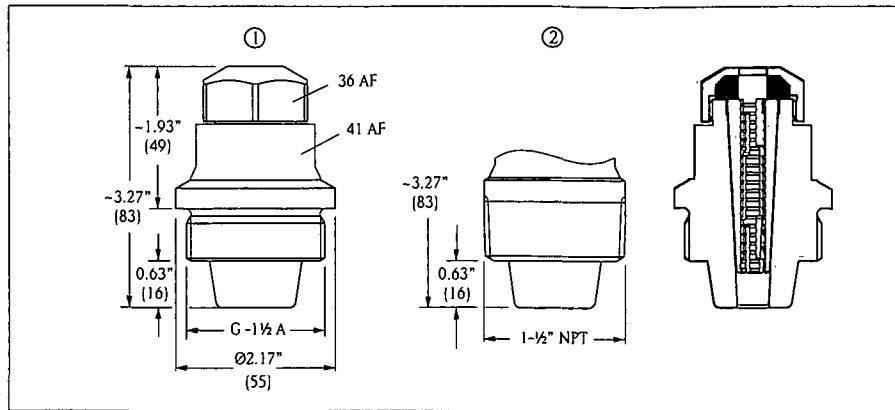


Extension cable mounting screws

- 1 Extension cable mounting screw G1 1/2 A, version "3" for Feature 20 "Connection" in the order code (→ 21)
- 2 Extension cable mounting screw 1 1/2 NPT, version "4" for Feature 20 "Connection" in the order code (→ 21)

Note!
Application in unpressurized containers only.

Dimensions of the terminal box IP 66/IP 67 with filter

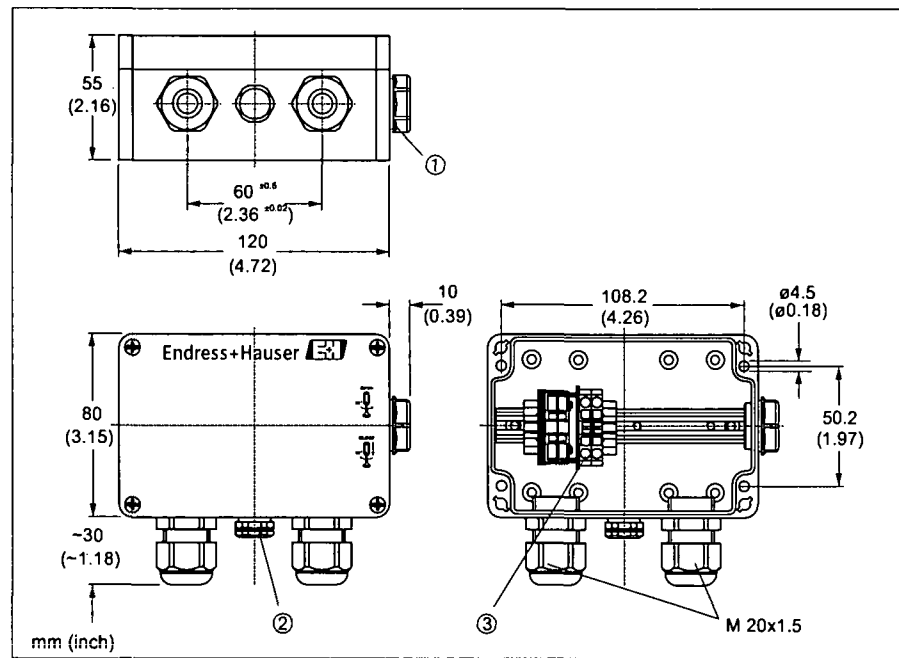


Terminal box

Version "3", "4" or "5" for Feature 70 "Additional options" in the order code (→ 21)

- 1 Dummy plug M 20x1.5
- 2 GORE-TEX® filter
- 3 Terminals for 0.08 to 2.5 mm²

Waterpilot FMX167


Dimensions of the TMT181 temperature head transmitter

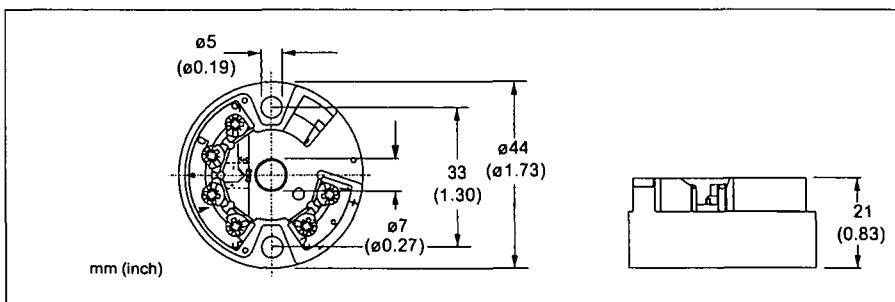

TMT181 temperature head transmitter (4 to 20 mA)

Version "5" for Feature 70 "Additional options" in the order code (→ 21). The temperature head transmitter can be used in non-hazardous areas and for EEx nA.

Terminal box with integrated TMT181 temperature head transmitter

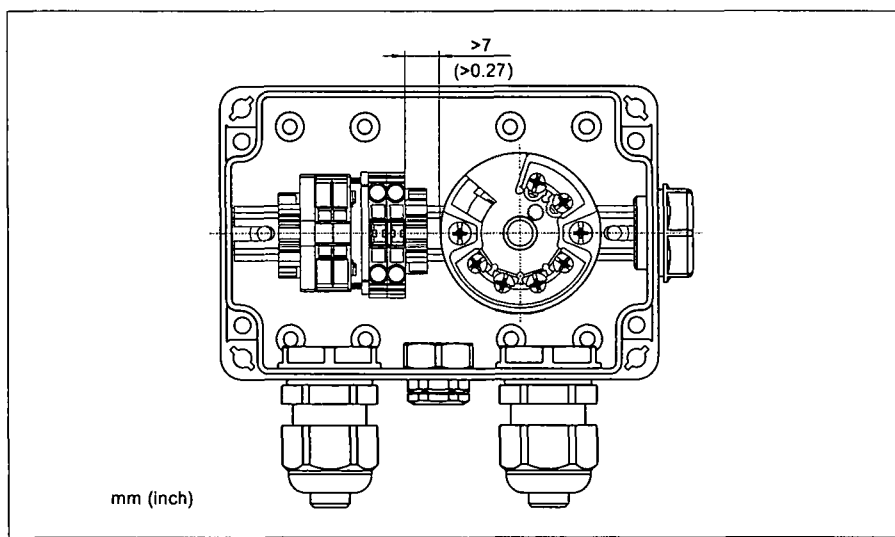

Note!

A distance of >7 mm (0.27") must be maintained between the terminal strip and the TMT181 temperature head transmitter.


Weight

- Level probe, outer diameter 22 mm (0.87"): 290 g (0.6 lb)
- Level probe, outer diameter 42 mm (1.65"): 1150 g (2.5 lb)
- Level probe, outer diameter 29 mm (1.14"): 340 g (0.7 lb)
- PE extension cable: 52 g/m (1.8 oz/3 ft)
- PUR extension cable: 60 g/m (2.1 oz/3 ft)
- FEP extension cable: 108 g/m (3.8 oz/3 ft)
- Mounting clamp: 170 g (0.4 lb)
- Extension cable mounting screw G 1 1/2 A: 770 g (1.7 lb)
- Extension cable mounting screw 1 1/2 NPT: 724 g (1.6 lb)
- Terminal box: 235 g (0.5 lb)
- Temperature head transmitter TMT181: 40 g (0.08 lb)
- Additional weight: 300 g (0.7 lb)
- Testing adapter: 39 g (1.4 lb)

Material	<p>Level probe</p> <ul style="list-style-type: none"> ■ Level probe, outer diameter 22 mm (0.87"): 1.4435 (AISI 316L SS) ■ Level probe, outer diameter 42 mm (1.65"): 1.4435 (AISI 316L SS) ■ Level probe, outer diameter 29 mm (1.14"): 1.4435 (AISI 316L SS) <ul style="list-style-type: none"> – Sensor sleeve: PPS (polyphenylene sulfide) – Heat-shrink sleeve/cover: Polyolefin <p>Metal does not come into contact with the medium.</p> <ul style="list-style-type: none"> ■ Process ceramic: Al₂O₃ aluminum oxide ceramic ■ Seal (internal): EPDM or Viton ■ Protection cap: <ul style="list-style-type: none"> – PE-HD (high-density polyethylene) for FMX167 with outer diameter 22 mm (0.87") and 29 mm (1.14"). – PFA (perfluoroalkoxy) for FMX167 with outer diameter 42 mm (1.65"). ■ Extension cable insulation: Either PE-LD (low-density polyethylene), FEP (fluorinated ethylene propylene) or PUR (polyurethane). For more information, see → 18, "Extension cable" ■ Mounting clamp: 1.4404 (AISI 316L SS) and fiberglass reinforced PA (polyamide) ■ Extension cable mounting screw G 1 ½A: 1.4301 (AISI 304 SS) ■ Extension cable mounting screw 1 ½NPT: 1.4301 (AISI 304 SS) ■ Terminal box: PC (polycarbonate) ■ Temperature head transmitter TMT181: PC housing (polycarbonate)
Extension cable	<p>PE extension cable</p> <ul style="list-style-type: none"> ■ Abrasion-resistant extension cable with Dynema strain-relief members; shielded with aluminum-coated film; insulated with polyethylene (PE), black; copper wires, twisted ■ Pressure compensation tube with Teflon filter <p>PUR extension cable</p> <ul style="list-style-type: none"> ■ Abrasion-resistant extension cable with Dynema strain-relief members; shielded with aluminum-coated film; insulated with polyurethane (PUR), black; copper wires, twisted ■ Pressure compensation tube with Teflon filter <p>FEP extension cable</p> <ul style="list-style-type: none"> ■ Abrasion-resistant extension cable; shielded with galvanized steel wire netting; insulated with fluorinated ethylene propylene (FEP), black; copper wires, twisted ■ Pressure compensation tube with Teflon filter <p>Cross-section of PE/PUR/FEP extension cable</p> <ul style="list-style-type: none"> ■ Total outer diameter: 8.0 mm (0.31") ± 0.25 mm (0.001") ■ FMX167: 3 x 0.227 mm² (0.0004") + pressure compensation tube with Teflon filter ■ FMX167 with Pt100 (optional): 7 x 0.227 mm² (0.0004") + pressure compensation tube with Teflon filter ■ Pressure compensation tube with Teflon filter: <ul style="list-style-type: none"> Outer diameter 2.5 mm (0.1 inch), internal diameter 1.5 mm (0.06 inch) <p>Cable resistance of PE/PUR/FEP extension cable</p> <ul style="list-style-type: none"> ■ Cable resistance per wire: ≤ 0.09 Ω/m <p>Cable length of PE/PUR/FEP extension cable</p> <ul style="list-style-type: none"> ■ Please refer also to → 8, Sect. "Load". ■ Cable length that can be ordered <ul style="list-style-type: none"> – Customer-specific length in meters or feet (→ 21, "Ordering information") – Limited cable length when performing installation with freely suspended device with extension cable mounting screw or mounting clamp, as well as for Ex approval: max. 300 m (984 ft). ■ When using the measuring device in hazardous areas, installation must comply with the applicable national standards and regulations and the Safety Instructions (XAs) or the Installation or Control Drawings (ZDs). See also → 23, "Safety instructions" and "Installation/Control Drawings" Sections. <p>Further technical data of PE /PUR/FEP extension cable</p> <ul style="list-style-type: none"> ■ Minimum bending radius: 120 mm (4.7") ■ Tensile strength: max. 950 N (214 lbf) ■ Cable extraction force: typical ≥ 450 N/101 lbf (FE, FEP) / typical ≥ 150 N/34 lbf (PUR) (The extension cable could be extracted from the level probe with a appropriate tensile force.) ■ Resistance to UV light ■ PE: Approved for use with drinking water
Terminals	<ul style="list-style-type: none"> ■ Three terminals as standard in the terminal box ■ 4-terminal strip can be ordered as an accessory, Order No: 52008938 Conductor cross-section 0.08 to 2.5 mm² (20 to 14 AWG)

Waterpilot FMX167

**Installation tool –
indicating the customer-
specific length on the cable**

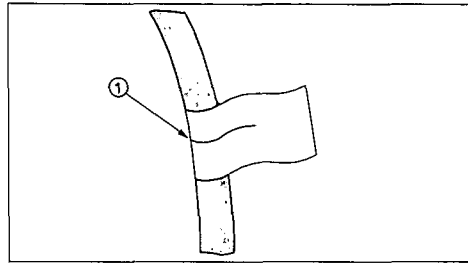

1 cable marking, distance to the lower end of the cable probe

- To make installation easier, Endress+Hauser offers a mark on the extension cable for a customer-specific length, see also → 21, "Ordering information".
- Mark tolerance: up to ± 50 mm (2") (the mark tolerance corresponds to a measured error from up to ± 50 mm/2")
- Material: PET
- Adhesive: acrylic
- Immunity to temperature change: -30 to $+100^{\circ}\text{C}$ (-22 to $+212^{\circ}\text{F}$)

Note!

- The mark is for installation purposes only. It must be thoroughly removed without trace in the case of devices with drinking water approval. The extension cable must not be damaged in the process.
- Not for use in hazardous areas.

Certificates and approvals

CE mark	The device meets the legal requirements of the applicable EC Directives. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
Ex approval, type of protection	<ul style="list-style-type: none"> ■ ATEX II 2 G EEx ia IIC T6¹⁾ ■ ATEX II 3 G EEx nA II T6¹⁾ ■ FM: IS, Class I, Division 1, Groups A–D¹⁾ ■ CSA: IS, Class I, Division 1, Groups A–D¹⁾ <p>¹⁾ Only for Waterpilot FMX167 without Pt100 and TMT181</p> <p>Note!</p> <ul style="list-style-type: none"> ■ Waterpilot FMX167 is only available for use in hazardous areas with the FKM Viton seal. ■ The cable marking cannot be ordered with the Ex approvals listed due to a potential electrostatic charge (see → 21, "Ordering information"). ■ All explosion-protection data are given in a separate documentation which is available upon request. The Ex documentation is provided with all Ex-systems as standards, see also → 23, Sect. "Additional documentation", "Safety instructions" and "Installation/Control Drawings".
Drinking water approval (for FMX167 with Outer diameter 22 mm (0.87 in))	<ul style="list-style-type: none"> ■ KTW certificate ■ NSF 61 approval ■ ACS approval
Marine approval	<ul style="list-style-type: none"> ■ GL approval ■ ABS approval
Standards and guidelines applied	<p>The European standards and guidelines that have been applied are listed in the associated EC Declarations of Conformity. In addition, the following standards were also applied for the Waterpilot FMX167:</p> <p>DIN EN 60770 (IEC 60770): Transmitters for use in industrial process control systems Part 1: Methods for performance evaluation</p> <p>DIN 16086: Electrical pressure measuring instruments, pressure sensors, pressure transmitters, pressure measuring instruments, concepts, specifications on data sheets</p> <p>EN 61326: Electrical equipment for measurement, control and laboratory use – EMC requirements</p>

Waterpilot FMX167

Ordering information

FMX167

You can enter the versions for the specific feature in the following table. The versions entered make up the complete order code. Options which are mutually exclusive are not marked.

10	Approval			
	A	Non-hazardous area		
	B	ATEX II 2 G EEx ia IIC T6		
	C	ATEX II 3 G EEx nA II T6		
	D	FM IS, Class I, Division 1, Groups A – D		
	E	CSA IS, Class I, Division 1, Groups A – D		
	F	CSA General Purpose		
20	Connection			
	1	Probe cable		
	2	Mounting clamp, AISI 316L		
	3	Cable mounting screw G1-1/2, AISI 304		
	4	Cable mounting screw NPT 1-1/2, AISI 304		
30	Probe tube:			
	A	Outer diameter d = 22 mm, AISI 316L		
	B	Outer diameter d = 42 mm, flush-mounted, AISI 316L		
	C	Outer diameter d = 29 mm (1.15 in), AISI 316L with heat-shrink sleeve PPS/polyolefin for saltwater applications		
	D	Outer diameter d = 22 mm (0.87 in), AISI 316L + drinking water approval (can only be selected in conjunction with EPDM seal and PE probe cable)		
40	Measuring range:			
		Measuring range		Measuring range
	BA	0 to 0.1 bar	MA	0 to 1 mH ₂ O
	BB	0 to 0.2 bar	MB	0 to 2 mH ₂ O
	BC	0 to 0.4 bar	MC	0 to 4 mH ₂ O
	BD	0 to 0.6 bar	MD	0 to 6 mH ₂ O
	BE	0 to 1.0 bar	ME	0 to 10 mH ₂ O
	BF	0 to 2.0 bar	MF	0 to 20 mH ₂ O
	BG	0 to 4.0 bar	MG	0 to 40 mH ₂ O
	BH	0 to 10.0 bar	MH	0 to 100 mH ₂ O
	BK	0 to 20.0 bar	MK	0 to 200 mH ₂ O
	PA	0 to 1.5 psi	FA	0 to 3 ftH ₂ O
	PB	0 to 3 psi	FB	0 to 6 ftH ₂ O
	PC	0 to 6 psi	FC	0 to 15 ftH ₂ O
	PD	0 to 10 psi	FD	0 to 20 ftH ₂ O
	PE	0 to 15 psi	FE	0 to 30 ftH ₂ O
	PF	0 to 30 psi	FF	0 to 60 ftH ₂ O
	PG	0 to 60 psi	FG	0 to 150 ftH ₂ O
	PH	0 to 150 psi	FH	0 to 300 ftH ₂ O
	PK	0 to 300 psi	FK	0 to 600 ftH ₂ O
	VV	Adjusted to customer specifications from 0 to ____ (upper range value) in ____ (unit), upper range value: 0.1 bar (1 mH ₂ O, 1.5 psi, 3 ftH ₂ O) to 20 bar (200 m ₂ HO, 300 psi, 600 ft ₂ HO)		
50	Sensor seal:			
	1	FKM Viton		
	2	EPDM		
60	Probe cable (can be shortened):			
	A	... m, PE		
	B	10 m, PE		
	C	20 m, PE		
	E	30 ft, PE		
	F	60 ft, PE		
	G	... ft, PE		
	I	... m, FEP		
	K	10 m, FEP		
	L	20 m, FEP		
	M	30 ft, FEP		
	N	60 ft, FEP		
	P	... ft, FEP		
FMX167				Order code
→ Ordering information for FMX167 continued on next page.				

FMX167 (continued)

60					Probe cable (can be shortened):
					R ... m cable, PUR
					S 10 m cable, PUR
					T 20 m cable, PUR
					U ... m cable, PUR
					V 30 ft cable, PUR
					W 60 ft cable, PUR
70					Additional option:
					7 Basic version
					1 Pt100, 4-wire
					5 Pt100 + temperature head transmitter TMT181, 2-wire, 4 to 20 mA = -20 to +80 °C [-4 to +176°F] ¹⁾
					3 Terminal box IP66/67
					4 Terminal box IP66/67 + Pt, 4-wire
					A m cable marking>installation
					B ft cable marking>installation
					C m cable marking, terminal box, cable marking>installation, terminal box IP66/67
					D ft cable marking, terminal box, cable marking>installation, terminal box IP66/67
					S GL/ABS marine certificate
995					Marking
					1 Measuring point (TAG)
FMX167					Complete order code

¹⁾ incl. terminal box, see feature "3" or "4"

Accessories


Mounting clamp

- Endress+Hauser offers a mounting clamp for simple FMX167 mounting → 15
- Material: 1.4404 (AISI 316L SS) and fiberglass reinforced PA (polyamide)
- Order number: 52006151
See also → 21, "Ordering information"

Terminal box

- Terminal box IP 66/IP 67 with GORE-TEX®-filter incl. 3 installed terminals.
The terminal box is also suitable for installing a temperature head transmitter (Order No. 52008794) or for four additional terminals (Order No. 52008938) → 23.
- Order number: 52006152

Additional weight
(for FMX167 with an outer diameter of 22 mm and 29 mm)

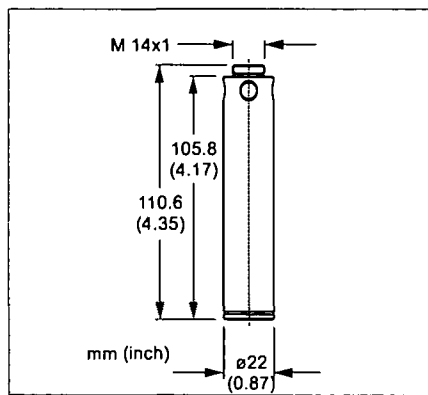

- Endress+Hauser offers additional weights to prevent sideways movement that results in measuring errors, or to make it easier to lower the device in a guide tube.
You can thread several weights together. The weights are then attached directly to the FMX167. For FMX167 with outer diameter 29 mm (1.14 in), a maximum of 5 weights may be threaded onto the FMX167.
- Material: 1.4435 (AISI 316L SS)
- Weight: 300 g (0.7 lb)
- Order number: 52006153

TMT181 temperature head transmitter

- 2-wire temperature head transmitter, configured for a measuring range from -20 to +80°C (-4 to +176°F). This setting offers a temperature range of 100 K which can be easily mapped. Please note that the Pt100 resistance thermometer is designed for a temperature range from -10 to +70°C (14 to 158°F) → 22.
- Order number: 52008794

Waterpilot FMX167


Extension cable mounting screw

- Endress+Hauser offers extension cable mounting screws to simplify the installation of the FMX167 and to close the measuring open → 16.
- Material: 1.4301 (AISI 304 SS)
- Order number for extension cable mounting screw with G 1 1/2 A thread: 52008264
- Order number for extension cable mounting screw with 1 1/2 NPT thread: 52009311

Terminals

- Four terminals in strip for FMX167 terminal box, suitable for wire cross-section of 0.08 to 2.5 mm² (20 to 14 AWG)
- Order number: 52008938

Test adapter
(for FMX167 with an outer diameter of 22 mm/0.87" and 29 mm/1.14")

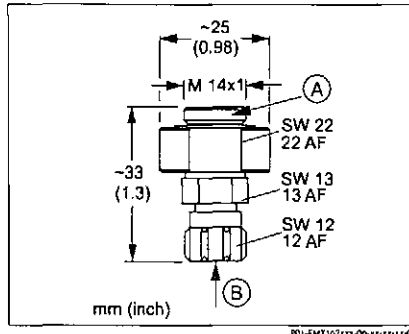

Testing adapter

- A FMX167 level probe connection
- B Compressed air hose connection, internal diameter of quick coupling piece 4 mm

- Endress+Hauser offers a testing adapter to ease function-testing of the level probes.
- Observe the maximum pressure for the compressed air hose and the maximum overload for the level probe → 7.
- Maximum pressure of the quick coupling piece supplied: 10 bar (145 psi)
- Adapter material: 1.4301 (AISI 304 SS)
- Quick coupling piece material: anodized aluminum
- Adapter weight: 39 g (0.1 lb)
- Order number: 52011868

Additional documentation

Field of activities

- Pressure measurement: FA004P/00/EN
- Recording technology: FA014R/09/EN
- System components: FA016K/09/EN

Technical Information

- Technical Information Waterpilot FMX21 with 4 to 20 mA with HART output signal: TI431P/00/EN
- Technical Information Deltapilot M: TI437P/00/EN
- Temperature Head Transmitter iTEMP PCP TMT181: TI070R/09/EN

Operating Instructions

- Waterpilot FMX167: BA231P/00/EN

Safety instructions

- ATEX II 2 G Ex ia IIC T6: XA131P/00/A3
- ATEX II 3 G Ex nA II T6: XA132P/00/A3

Installation/Control Drawings

- FM IS Class I, Div. 1, Groups A – D: ZD063P/00/EN
- CSA IS Class I, Div. 1, Groups A – D: ZD064P/00/EN

Drinking water approval

- SD126P/00/A3







Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113


MULTITRODE LEVEL RELAY




1. MTR LEVEL RELAY TECHNICAL DETAILS
2. MTR WIRING DETAILS
3. MTR INSTALLATION & TROUBLESHOOTING DETAILS

After many years of field use, the simplicity and reliability of these units is unquestionable.

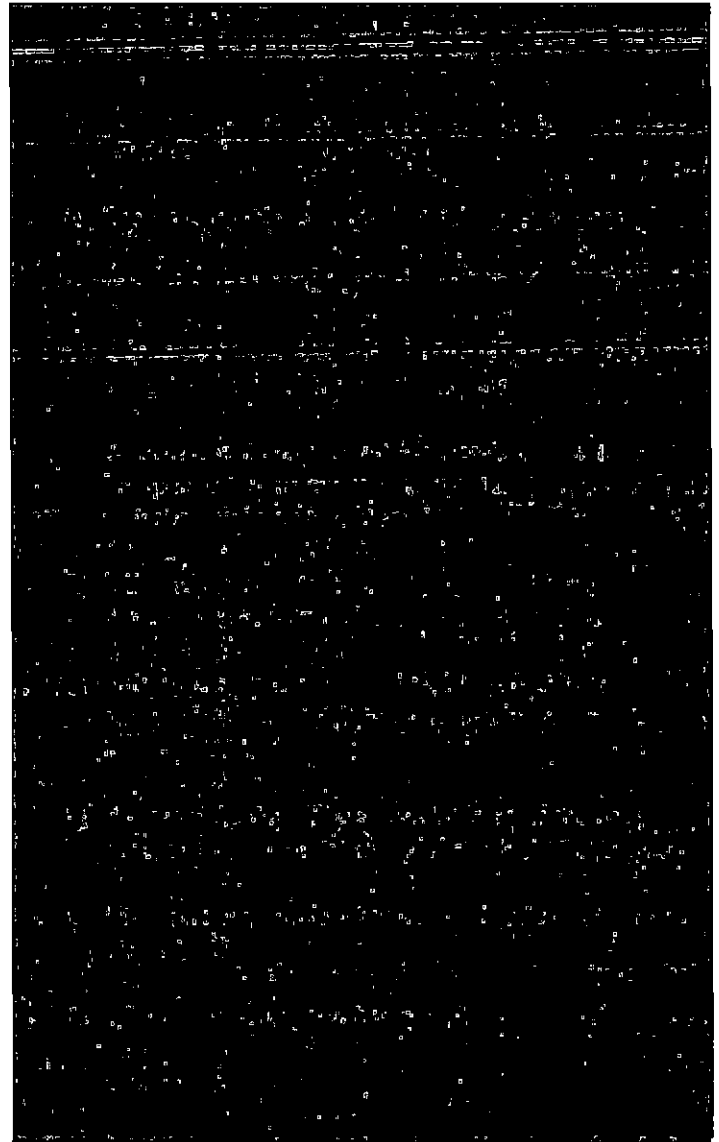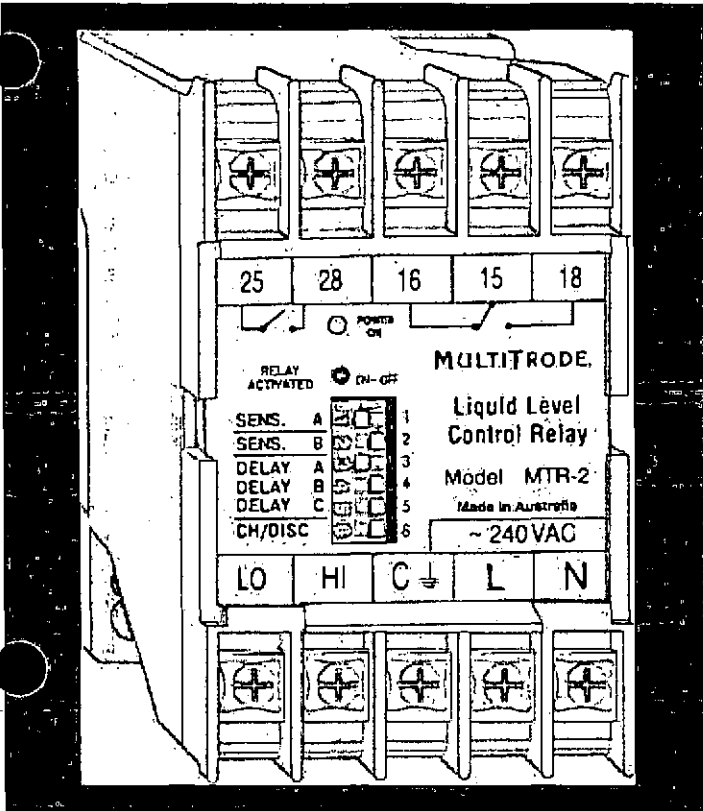



SAMPLE MTR APPLICATION

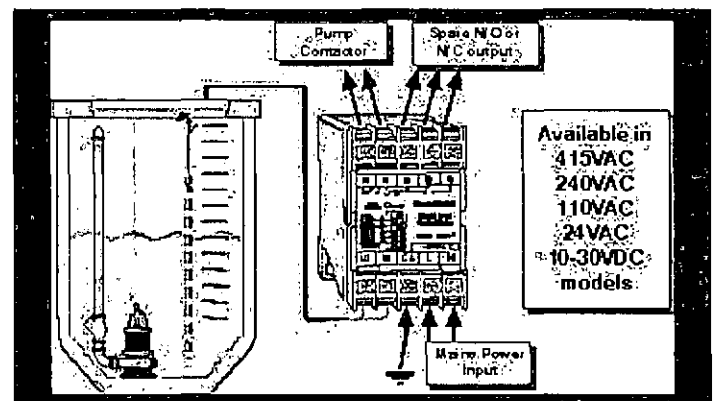

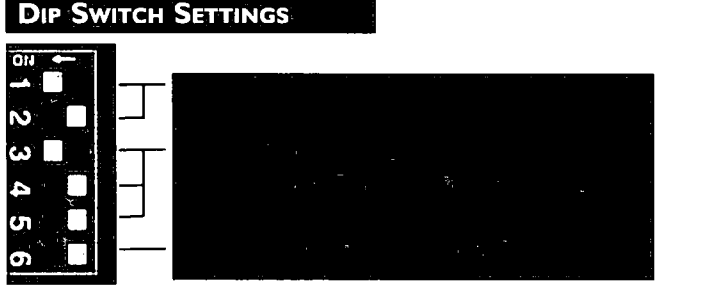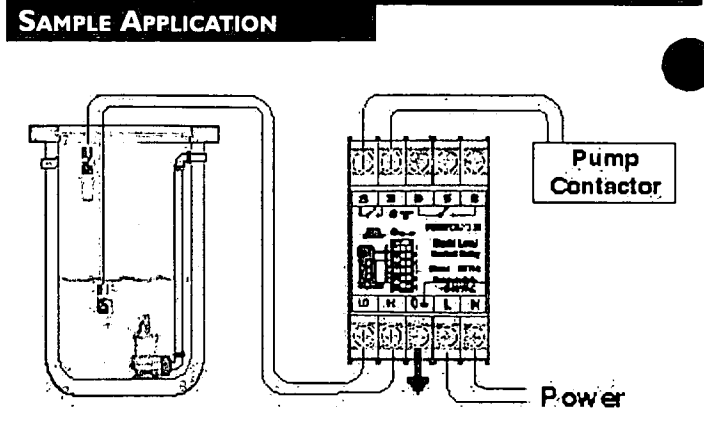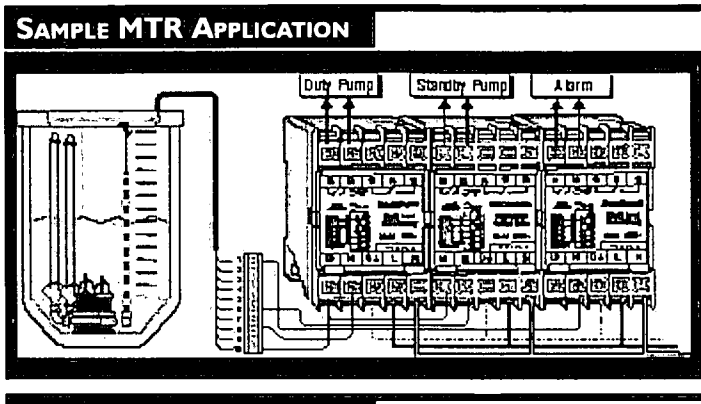

PRODUCT SPECIFICATIONS

(This area contains detailed technical specifications for the MTR relay, including electrical ratings, dimensions, and performance characteristics.)

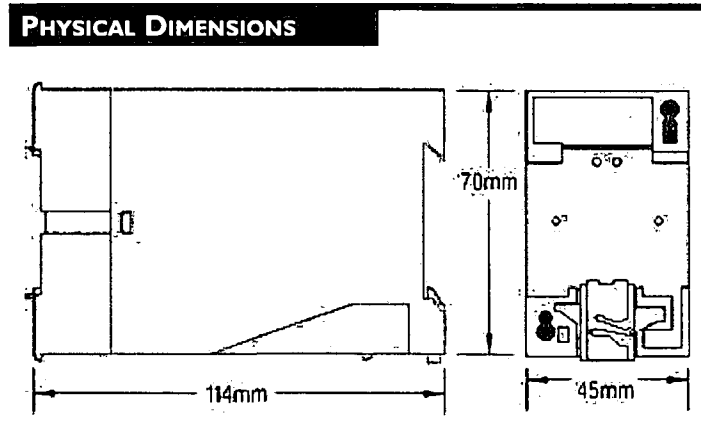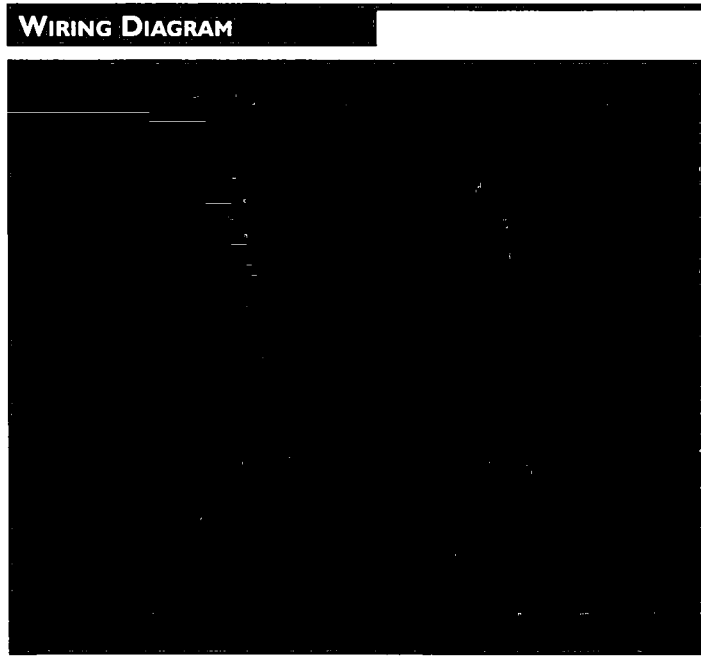

AVAILABLE MODELS

415VAC	MTR1	n/a
240VAC	MTR2	MTRA2
110VAC	MTR3	MTRA3
24VAC	MTR4	MTRA4
24VDC	MTR5	MTRA5
12VDC	MTR6	MTRA6

Ordering Information & Example

Model	Voltage
MTRA	2

This order code is for a 240VAC MTRA.

All MultiTrodE Products carry a two year warranty

MultiTrodE Pty Ltd Head Office
 130 Kingston Road, Underwood Qld 4119
 PO Box 2465, Logan City D.C. Qld 4114
 Ph:+61 7 3808 4011 Fax:+61 7 3808 0011
 sales@multitrode.com.au

MULTITRODE

Sydney - Australia Tel:+61 2 9774 2433 Fax:+61 2 9774 2566	Melbourne - Australia Tel:+61 3 5978 6900 Fax:+61 3 5978 6932
---	--

MultiTrodE Inc. - USA
 6560 East Rogers Circle,
 Boca Raton Fl 33487
 Tel:+1 561 994 8090 Fax:+1 561 994 6282
 E-mail: sales@multitrode.net

MULTITRODE RELAY 240VAC (MTR 2) INSTALLATION SHEET. NO1

CONTROL OF THREE APPLIANCES IN A CHARGING SITUATION

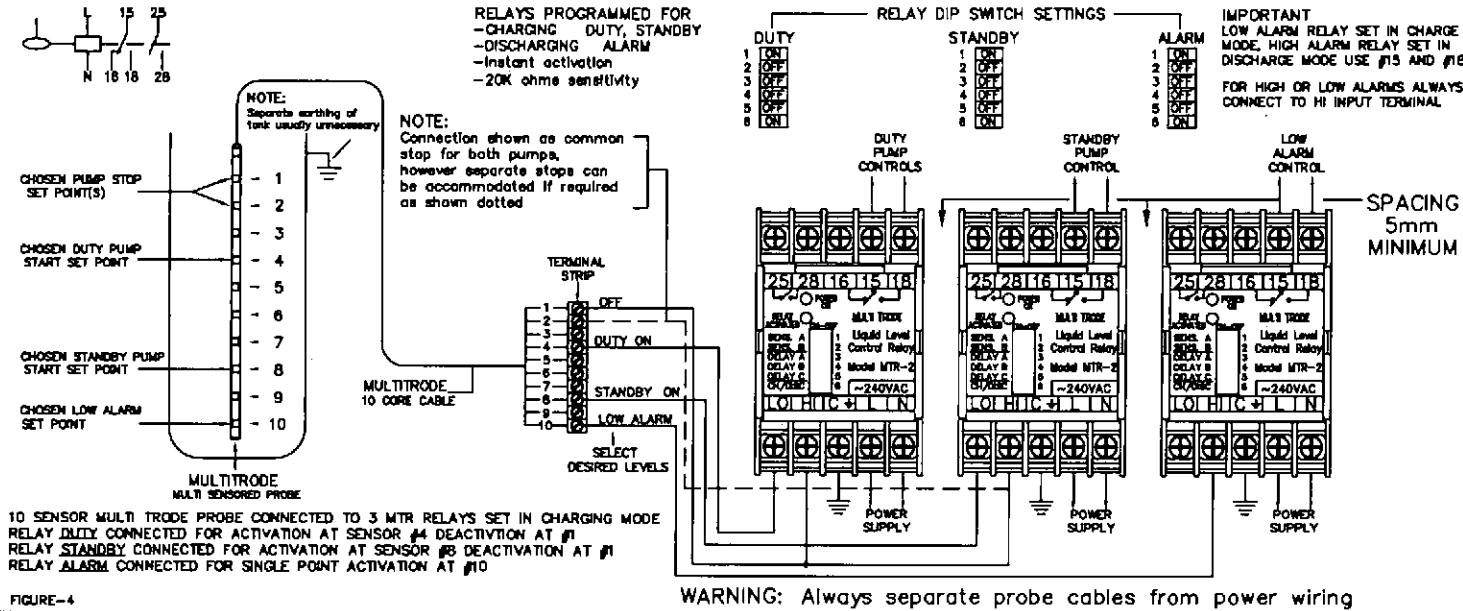


FIGURE-4

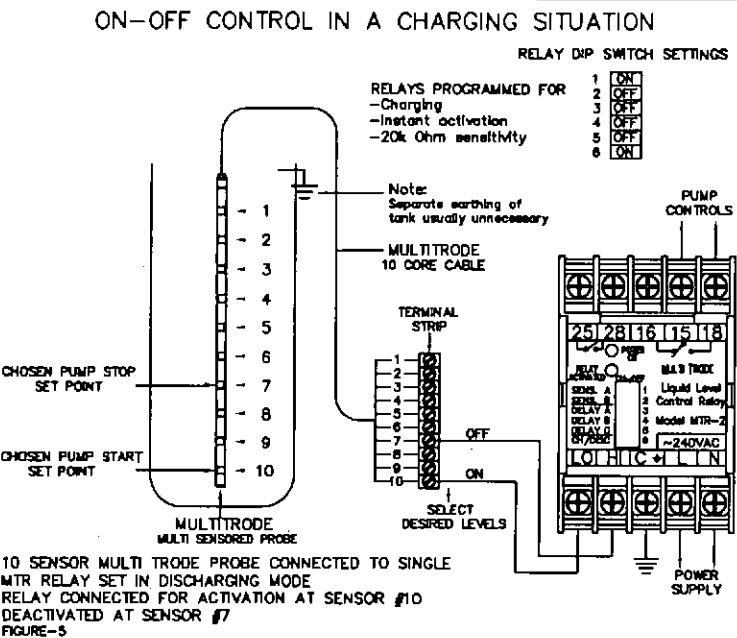


FIGURE-5


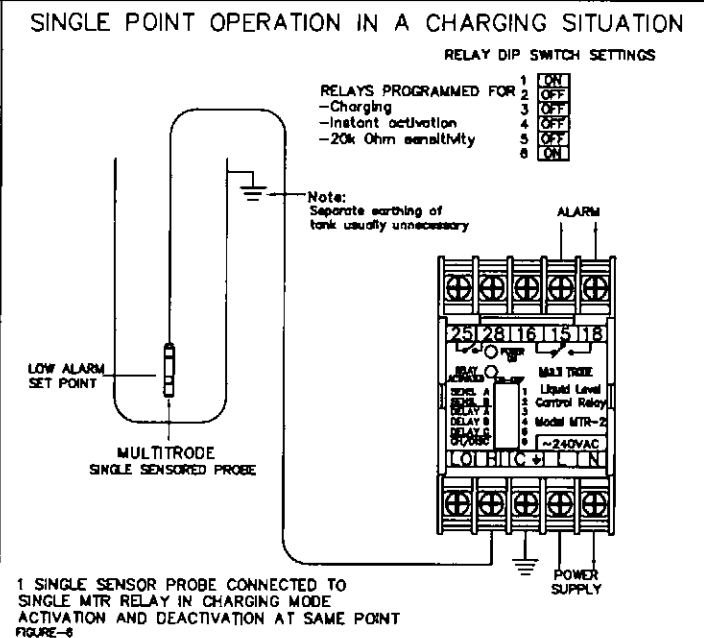


FIGURE-6

RELAY PROGRAM FUNCTIONS					
SWITCH NO		SENSITIVITY			
1	2				
OFF	OFF	1k Ω	Concentrated Acids, Minerals, Alkalines		
OFF	ON	4k Ω	Acids, Alkalines, Diluted brine, Sea water		
ON	OFF	20k Ω	Sullage, Sewage effluent, Town water		
ON	ON	80k Ω	Low conductive liquids, Purified water		
3 4 5		DELAY ON ACTIVATION			
OFF	OFF	OFF	Zero Seconds		
OFF	OFF	ON	2.5 Seconds		
OFF	ON	OFF	5 Seconds		
OFF	ON	ON	10 Seconds		
ON	OFF	OFF	20 Seconds		
ON	OFF	ON	40 Seconds		
ON	ON	OFF	80 Seconds		
ON	ON	ON	160 Seconds		
6		MODE			
OFF		Discharge			
ON		Charge			

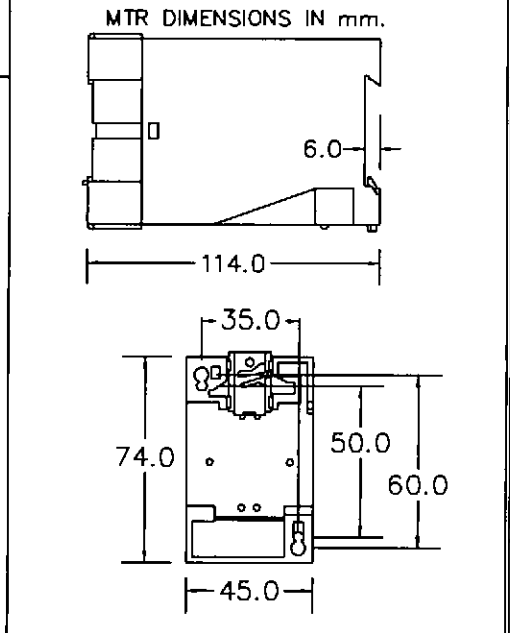

PHONE (07) 806-4011 FOR INSTALLATION SHEET - INCLUDED WITH PRODUCT
 FAX (07) 806-4211 TITLE MTR - WIRING DIAGRAMS Page 1 of 2
 DESIGNED BY DATE 21 APRIL 2000
 CHECKED BY DATE 21 APRIL 2000
 DRAWN BY TRAVIS PARKINSON DRAWING NO 8556
 DESIGNED & MANUFACTURED BY MULTITRODE Pty. Ltd. BRISBANE, AUSTRALIA

MULTITRODE RELAY 240VAC (MTR 2) INSTALLATION SHEET. NO2

CONTROL OF THREE APPLIANCES IN A DISCHARGING SITUATION

RELAY PROGRAM FUNCTIONS				
SWITCH NO SETTING		SENSITIVITY		
1	2			
OFF	OFF	1k Ω	Concentrated Acids, Minerals, Alkalines	
OFF	ON	4k Ω	Acids, Alkalines, Diluted brine, Sea water	
ON	OFF	20k Ω	Sullage, Sewage effluent, Town water	
ON	ON	80k Ω	Low conductive liquids, Purified water	
3 4 5		DELAY ON ACTIVATION		
OFF	OFF	OFF	Zero Seconds	
OFF	OFF	ON	2.5 Seconds	
OFF	ON	OFF	5 Seconds	
OFF	ON	ON	10 Seconds	
ON	OFF	OFF	20 Seconds	
ON	OFF	ON	40 Seconds	
ON	ON	OFF	80 Seconds	
ON	ON	ON	160 Seconds	
6		MODE		
OFF	Discharge			
ON	Charge			

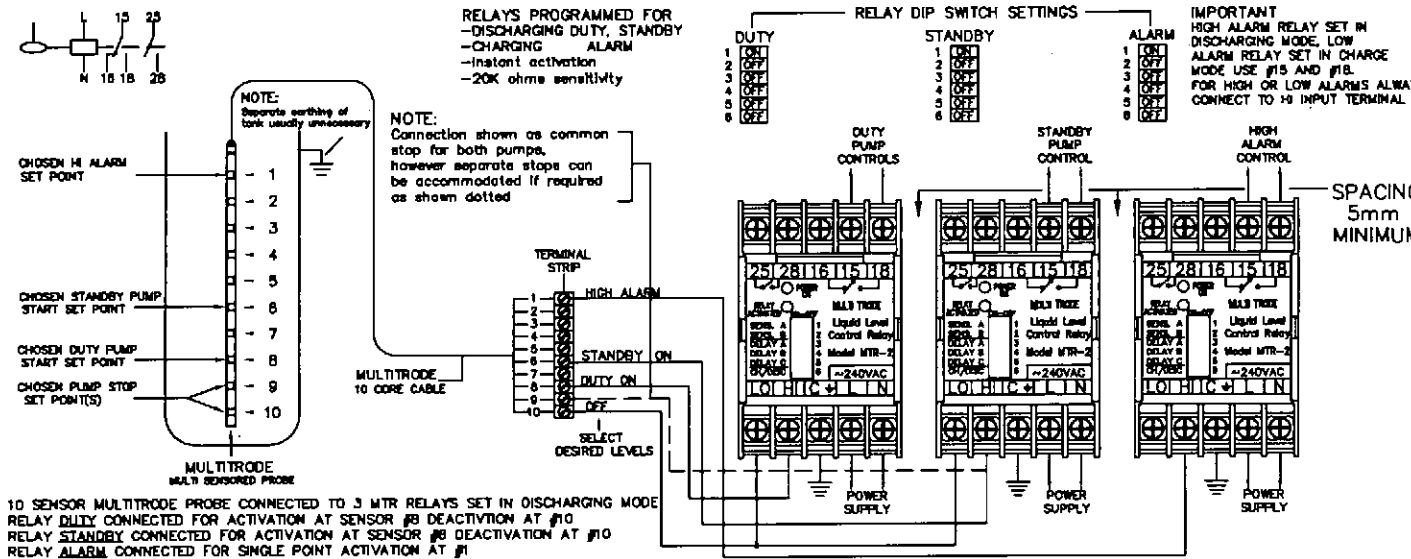


FIGURE-4

ON-OFF CONTROL IN A DISCHARGING SITUATION

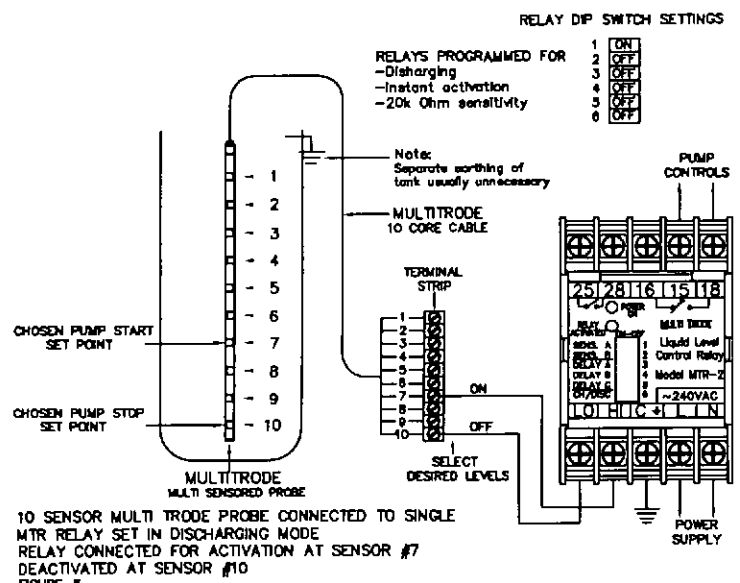


FIGURE-5

SINGLE POINT OPERATION FOR DISCHARGING

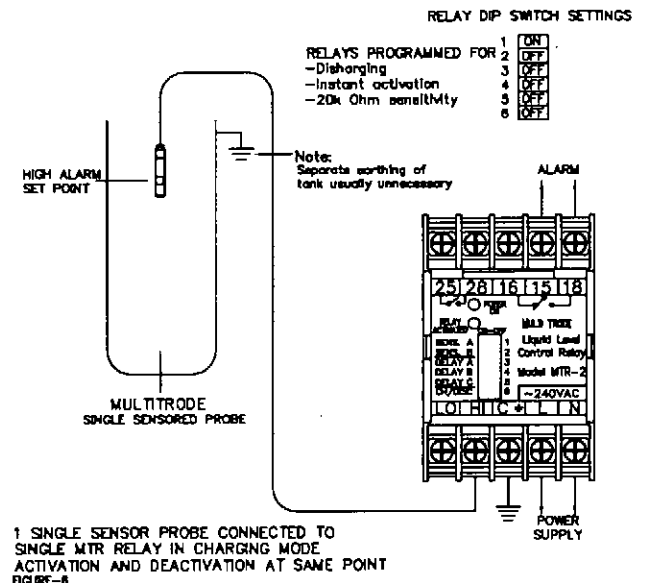


FIGURE-6

SPECIFICATIONS	
SENSOR VOLTAGE	12VAC NOMINAL
NO OF OUTPUTS	2 SETS, 1 NO & 1 CHANGEDOVER
CONTACT RATING	5 AMP 250VAC RESISTIVE
CONTACT LIFE	10 ⁸ OPERATIONS
SUPPLY VOLTAGE(+/-10%)	240, 110, 240VAC, 50/60Hz, 24, 12VDC
POWER CONSUMPTION	3.4VA (MAX)
DIMENSIONS mm (inches)	H74(2.78) X W45(1.77) X D114(4.5)
TERMINAL SIZE mm (in)	2 X 2.5mm ² (0.64 ² INCH)
DISPLAY LEDS	GREEN - POWER ON, RED - ACTIVATION
MOUNTING ARRANGEMENT	DIN RAIL OR 2X4mm SCREWS (3/16")
SENSITIVITY (OHMS)	SELECTABLE VIA SWITCHES 1K, 4K, 20K, 80K
MODE	SELECTABLE VIA SWITCHES CHARGE/DISCHARGE
DELAYS (SECS)	SELECTABLE VIA SWITCHES 2.5, 5, 10, 20, 40, 80, 160
WORKING TEMP C(F)	MINUS 10° C (+14° F), PLUS 60° C (140° F)


PHONE (07) 808-4011 FOR INSTALLATION SHEET - INCLUDED WITH PRODUCT
 FAX (07) 808-0011 TITLE MTR - WIRING DIAGRAMS Pg. 2 of 2
 DESIGNED BY REV. 2 ISSUE NO
 CHECKED BY DATE JANUARY 1995
 DRAWN BY JAN PARKINSON DRAWING NO. 0017
 MultiTrobe
 Designed & Manufactured by MULTITRODE Pty. Ltd. BRISBANE, AUSTRALIA

1 Introduction

The MultiTrode level control relay is a solid-state electronic module in a hi-impact plastic case with a DIN rail attachment on the back, making a snap-on-snap-off installation. Any number of relays can be easily added to the DIN metal rail then wired together to form a complex pumping system that other wise may have to be controlled and operated by a programmed PLC.

The relay is normally matched with the MultiTrode probe which works in conjunction with the relay and uses the conductivity of the liquid to complete an electrical circuit.

2 Electrical Overview

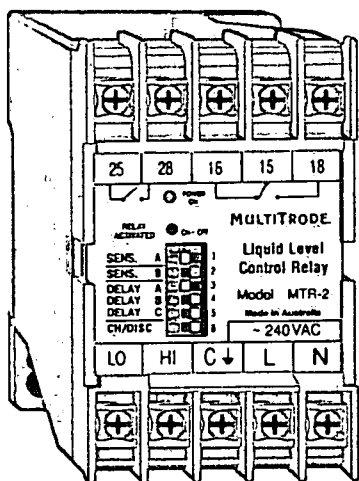

There are 10 screw terminals on the unit. Facing the relay as shown, we look at the bottom terminals (left to right):

- Lo – (Charge mode). This is the point when the probe is dry the relay will turn on.
- Lo – (Discharge mode). This is the point when the probe in the tank is dry the relay will turn off.
- Hi – (Charge mode). This is the point when the probe in the tank is wet a relay will turn off
- Hi – (Discharge mode). This is the point when the probe in the tank is wet a relay will turn on.
- C - is common earth. All earth bonding must be terminated here for correct operation.
- " L " is "live" (240V AC)
- " N " is "neutral" (240V AC)

If the tank is plastic, or if you are conducting tests in a plastic bucket, or the vessel has no earth point inside, you must install an earth rod within the tank, vessel or bucket and make sure that it is bonded back to C on the relay unit.

3 DIP Switches

3.1 DIP Switches

(See Wiring Diagram for full program functions.)

3.1.1 DIP 1 & 2

DIP 1 and 2 control the Sensitivity, in other words the cleaner the liquid the higher the sensitivity setting must be. Concentrated acids, minerals are by their own chemical composition highly conductive, so a low level of sensitivity is required, purified water is almost an insulator against electrical current flow so a higher sensitivity inside the relay is required.

3.1.2 DIP 3, 4 & 5

DIP switches 3, 4 and 5, control delay on activation. For example, in discharge mode with DIP switches 3, 4 and 5 set to 10 seconds, when the Hi point becomes wet it will activate the motor and it will take 10 seconds of continual coverage of the probe sensor to make the relay close and start the pump. This is invaluable when the probe is in a turbulent part of a well where fluid is splashing around touching the sensors momentarily, and false activation cannot be tolerated.

3.1.3 DIP 6

DIP switch 6 controls the charge/discharge function. Set "ON" for charge, and "OFF" for discharge

3.2 Relay Contacts & their Applications

3.2.1 Contacts 15, 16 & 18

Contacts 15, 16, and 18 are used for electronic or visual notification of a change in state at the pump itself. Contacts 15, 16, and 18 are used for more advanced applications because they are a changeover relay, their state may be the same as contacts 25, 28 or the opposite. Both sets of contactors are triggered simultaneously. An example is when in discharge mode, (see Figure 1).

You have a gravity flow coming in so the fluid reaches the lower sensor PB1, contacts 15 and 18 are open (15 being common to both contact 16 and 18) contacts 25 and 28 are also normally open but contacts 15 16 in this current situation are closed, whether PB1 is wet or dry is of no concern all will stay the same. The level now rises to PB2 and both relays change state, contacts 25 and 28 close to turn on the pump, contacts 15 and 16 are open, with 15 and 18 closed.

In advanced applications this state change may be fed into a logic device to indicate the pump is running or the pump has stopped and perhaps light an LED or incandescent light source for visual confirmation that a change has occurred in the relay.

3.2.2 Contacts 25 & 28

Contacts 25 and 28 are used to control pump states. Contacts 25 and 28 are mostly used for turning on motors via a starting relay or solenoid, so, these sets of contacts react to the rising or falling levels of the fluid inside the tank, they will operate to turn on a pump in discharge mode when the top sensor is wet and in charge mode turn on the pump when the bottom sensor is dry.

4 Practical Overview

4.1 Discharge Mode – DIP switch 6 set to “OFF”


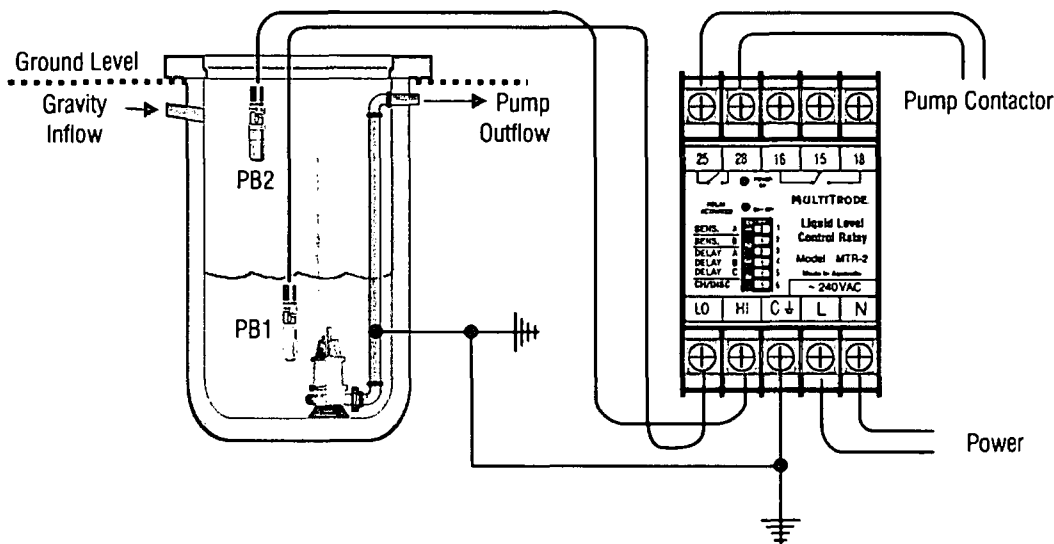


Figure 1 – Discharge Mode

Figure 1 shows two probes, (PB1 connected to Lo and PB2 connected to Hi). The pit is mostly underground and there is a gravity-fed inlet at the top left-hand side. The pit is empty with PB1 completely dry. Dipswitch 6 is set to “OFF.”

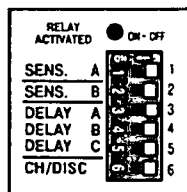

The relay operation depends on the electrical conductivity of liquid in the pit, i.e. no liquid = no current flow. The level starts to rise and covers PB1.

This is a discharge operation so we do not want the relay to close and start a pump until the well is full so as the water rises it reaches PB2, the relay closes and the pump starts. The level now drops below PB2 but the pump still continues to run, the level continues to drop below PB1 the relay opens the pump stops.

4.2 Charge Mode – DIP switch 6 set to “On”


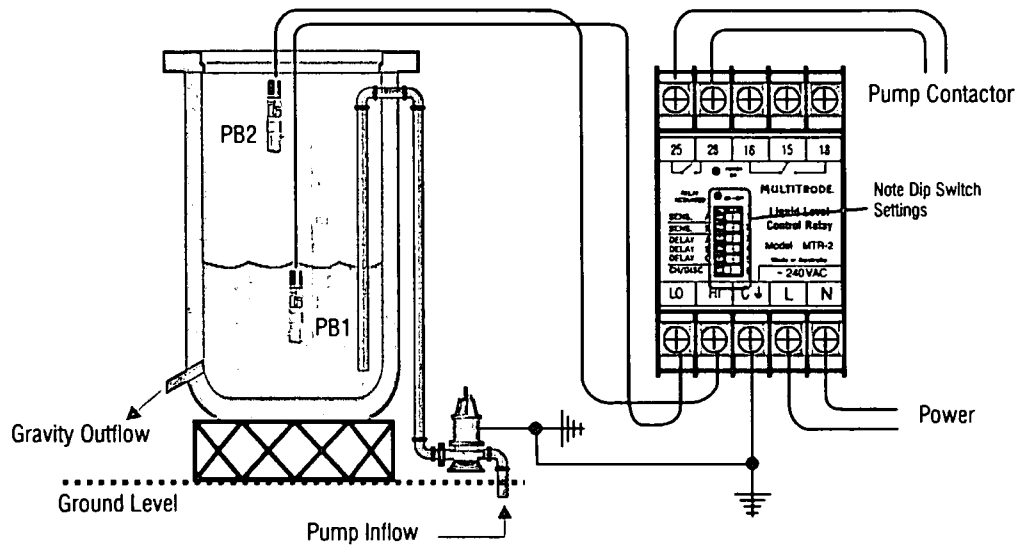


Figure 2 – Charge Mode



NOTE:
“C” is connected to common bonded earth. The unit will not operate correctly if not earthed.

Let's look at the same relay but in a tank that is charging (DIP 6 is now on). See Figure 3, where liquid is being pumped into a tank, and discharging through a gravity feed, the tank is on steel stands “x” metres above the ground.

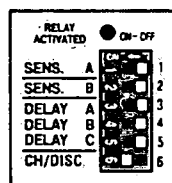

With the tank full, PB1 and PB2 will be wet, the relay is off, and the pump has stopped. Water is slowly fed out from the bottom, and now as PB2 (Hi) becomes dry nothing happens; the water now drops to below PB1 (Lo), and the pumps restarts to fill the tank.

The pump will continue to fill the tank until PB2 (Hi), becomes wet again.

4.3 MTRA Relay with Alarm (Discharge Applications Only)

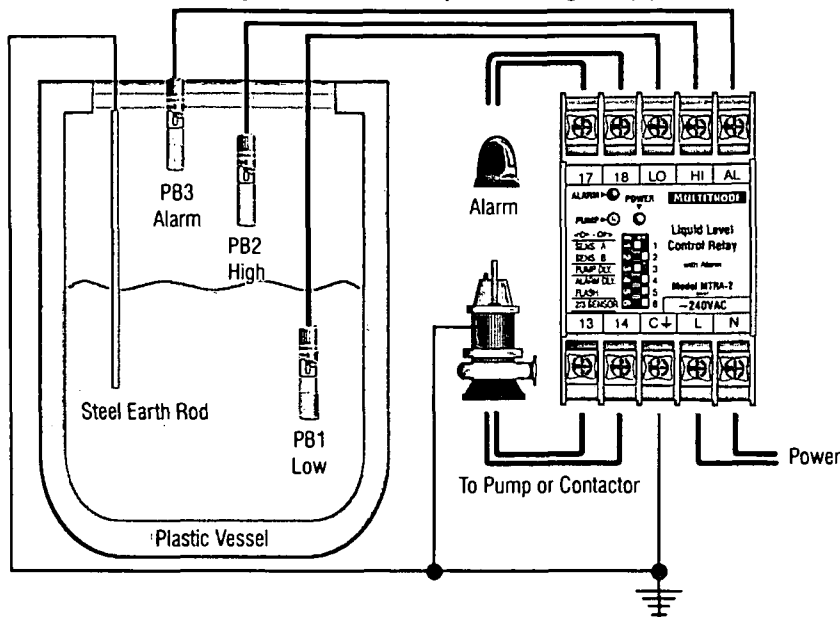


Figure 3 - MTRA Operation

The MTRA relay works in the same way as the MTR relay except the MTRA has a separate alarm output, and does not have a charge mode. The planned application is to close a contact to illuminate a warning alarm light. Various other applications have included introducing a third probe to latch another relay.

In Figure 2 we see three probes in a pit that is plastic, note the steel rod in the tank. (In a plastic vessel a steel rod must be used to create an earth return in the liquid so probes can function.) PB1, PB2, and PB3 are dry, and the relay power LED is on. When water enters the pit and wets PB1, nothing happens, water now reaches PB2 causing contacts 13 and 14 to close, the pump LED to light, and the water to drop.

If, for example, the pump has its inlet partially blocked, the level continues to rise and wets PB3. This closes a separate relay that can activate a red flashing light, an audible fog horn or send a 5 volt pulse into another device with the common cause to warn human beings that a spill is due to occur. If the pumps become unclogged and PB3 becomes dry the alarm opens again and breaks the circuit that stops the light from flashing or the foghorn from sounding.

5 Most Common Installation Problems

The relay requires a path between the probes to earth through the liquid. If you are testing in a plastic bucket, have installed the probe in a plastic tank or have no good earthing in the vessel you will need to install a separate earth and make sure all earth bonding comes back to the C terminal. Most problems like these are traced back to a lack of or poor earthing, or open circuits in the probe wiring.

Now is the time to check the relay by using "the bridge testing line technique" remember you must simulate a fluid flow to correctly ascertain a good relay or a bad one. (All DIPswitch settings from 1 to 6 should be off.)

Cut two pieces of insulated flexible copper wire one black one red 250 mm long, strip both ends back 10 mm on both cables, and join one black end and one red end. Insert the joined ends into C on the relay box, observing all safe electrical practises. You should have one black wire and one red wire free.

Set your relay for discharge mode (DIP switch 6 is off) with no sensors connected to the unit, connect the red wire to Lo – nothing should happen (if it does return the relay for replacement or repair*). Now connect the black wire to the Hi terminal the relay activated LED should light instantly (if it does not, the relay should be returned for repair*).

6 Troubleshooting

<p>I have checked all the DIPswitches and settings but in discharge mode as soon as the bottom sensor gets wet the pump turns on then turns off almost straight away.</p>	<ul style="list-style-type: none"> This is the most common problem encountered with relay set up and commissioning, the probe in the bottom of the tank is wired into the Hi terminal instead of the Lo terminal.
<p>The installation went fine but now and again the pump will not turn on even though I am sure the probe is wet.</p>	<ul style="list-style-type: none"> Check the sensitivity level set on the relay, some times the level is set for foul water but due to changes in the flow the water becomes grey or clear, try changing the setting from 20KΩ to 80KΩ and monitor the results carefully.
<p>All wiring is complete and all DIPswitches have been checked but the pump will not turn on at all.</p>	<ul style="list-style-type: none"> If you have completed the test schedule for the relay and it passed then check the wiring to the sensors – for this is now where the problem lies or in the earthing arrangements. If possible check the resistance between the sensor cable and the steel sensor on the probe to prove a solid connection.

* Please contact your distributor or agent before returning any product for repair or warranty claim.



MultiTrode Pty Ltd—UK Operations
Ivybridge, Devon

Tel: +44 1752 547355
Fax: +44 1752 894615

E-mail: UKsales@multitrode.com

MultiTrode Pty Ltd—Head Office
Brisbane Technology Park
18 Brandl Street

PO Box 4633
Eight Mile Plains Qld 4113

Ph: +61 7 3340 7000

Fx: +61 7 3340 7077


E-mail: AUSales@multitrode.com

MultiTrode Inc—USA
Unit 3, 990 South Rogers Circle
Boca Raton Florida 33487

Tel: +1 561 994 8090
Fax: +1 561 994 6282

E-mail: USsales@multitrode.net

Visit www.multitrode.com for the latest information

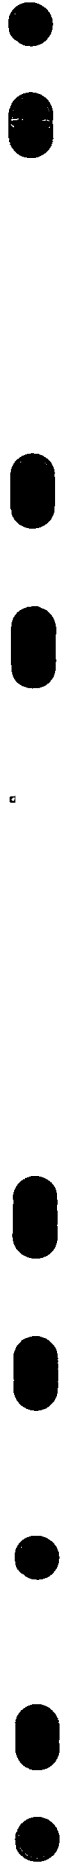



Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

POWER SUPPLY & BATTERY


1. 24VDC POWER SUPPLY TECHNICAL DETAILS
2. BATTERY TECHNICAL DETAILS

PB251 Series

220-330 WATTS DC UPS

Features

- Ultra-low noise output
- Independent battery charging output
- DC output OK & battery OK alarms & LEDs
- Battery-LVD and alarm
- Over-temperature protection
- Battery fuse fail LED

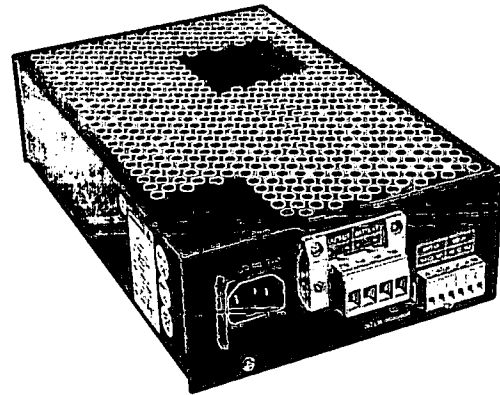

Specifications

INPUT

Voltage:	190 to 264 vac, or 190 to 400VDC
Line regulation:	0.2% typical
Current:	1.4A maximum
Inrush current:	10A maximum
Frequency:	45 to 65 Hz

OUTPUT

Voltage	See table
Current	See table
Load regulation	0.5% typical
Current limit type - load cct	Constant current
Current limit type - batt. cct	Constant current
Short circuit protection	Indefinite, auto-resetting
Over-voltage protection	17.5 to 20V latching (13.8Vdc output) 31.5 to 39V latching (27.6Vdc output)
Ripple & noise 100 MHz bandwidth	28mVp-p (13.8Vdc output) 55mVp-p (27.6Vdc output)

ENVIRONMENTAL

Operating temperature	0 to 70°C ambient with derating, 5...90% relative humidity (non-condensing)
Over-temperature protection	Automatic & auto-resetting
Cooling requirement	Natural convection
Efficiency	80% minimum

STANDARDS & APPROVALS

Safety	Complies with AS/NZS 60950, class 1, NSW Office of Fair Trading Approval N20602
EMC	Emissions comply with AS/NZS CISPR11, Group 1, Class B. Complies with ACA EMC Scheme, Safety & EMC Regulatory Compliance Marked
Isolation i/p-o/p i/p-ground o/p-ground	4242VDC for 1 minute 2121VDC for 1 minute 707VDC for 1 minute

ALARMS & BATTERY FUNCTIONS

Converter ON/OK alarm	Indicated by voltage-free changeover relay contacts & green LED
Battery low (& fuse) alarm	10.2 to 12.6V for 12V battery, adjustable 20.4 to 25.2V for 24V battery, adjustable Indicated by voltage-free changeover relay contacts & green LED: ON=BATT OK
Low voltage disconnect	9.6 to 12V for 12V battery, adjustable 19.2 to 24V for 24V battery, adjustable

Charger over-load protection	Auto-resetting electronic circuit breaker
Reverse polarity protection	Internal battery fuse
Battery to load voltage drop	0.2 to 0.25V typical

MECHANICAL

Case size	264 L x 172 W x 67 H mm
Case size with heatsink	264 L x 186 W x 67 H mm
Rack size	232 D x 19" W x 2RU H
Weight	1.9 kg
Weight with heatsink	2.1 kg
Weight (rack mounted version)	5.5 kg

Selection Table

MODEL NUMBER	OUTPUT			OUTPUT POWER
	VDC	I _{LOAD}	I _{BATT}	
PB251-12CM	13.8V	16A	2A	220W
PB251-12CM-H	13.8V	20A	2A	275W
PB251-24CM	27.6V	11A	2A	300W
PB251-24CM-H	27.6V	12A	2A	330W
PB251-12RML	13.8V	20A	4A	275W
PB251-12B	13.8V	20A	4A	275W
PB251-24RML	27.6V	12A	2A	330W



Note: Non standard battery charging current available on request. ie PB251-12CM-H-10 for 10A.

powerbox.

PB251 Series

275-330 WATTS DC UPS

Technical Illustrations

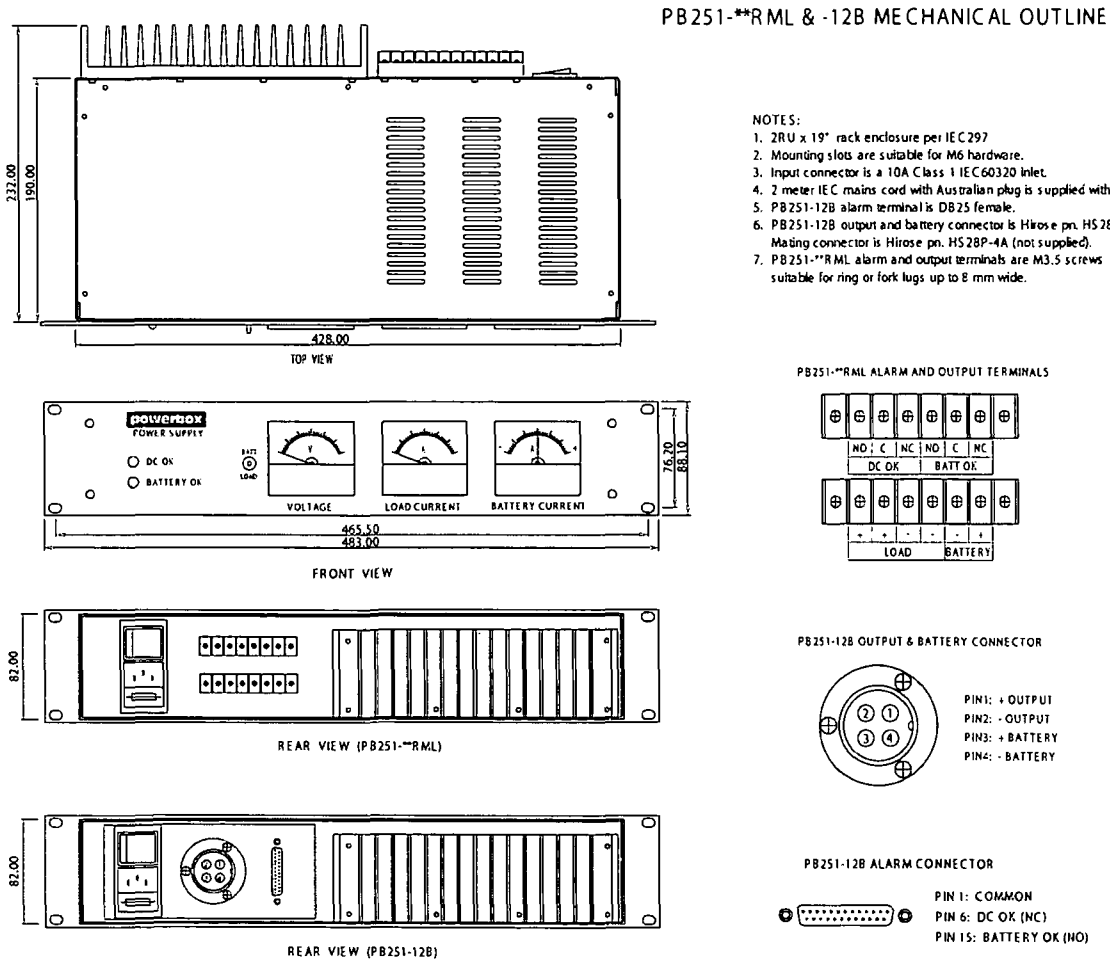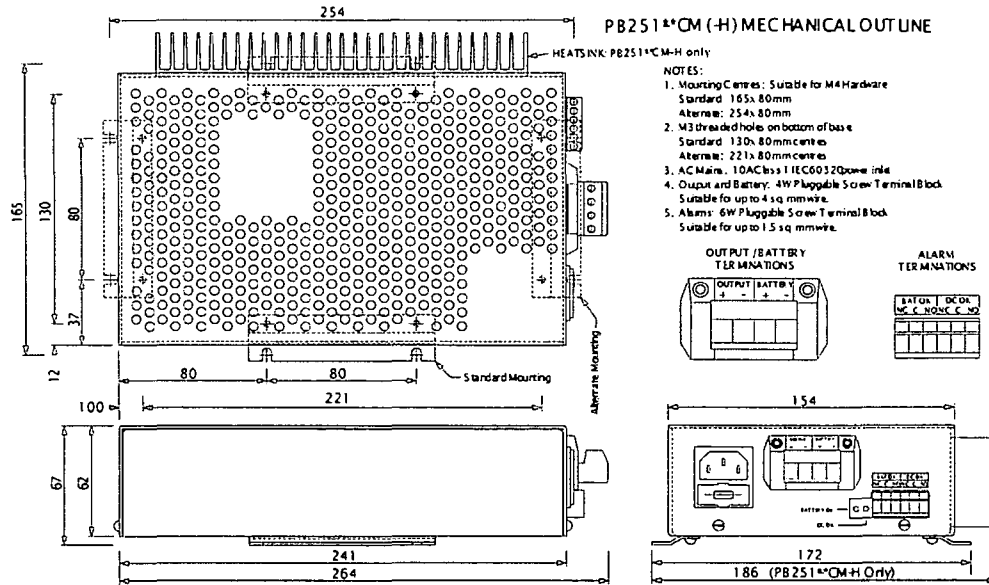


Your dependable power partner – www.powerbox.com.au

SECURITY





General Characteristics

DISCHARGE CHARACTERISTICS

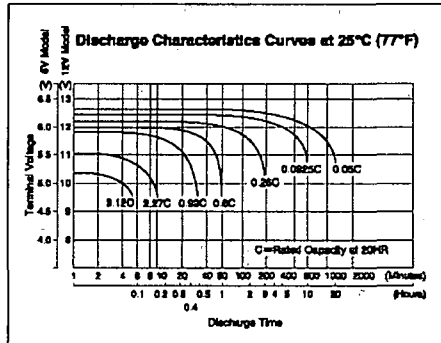

CHARGING CHARACTERISTICS

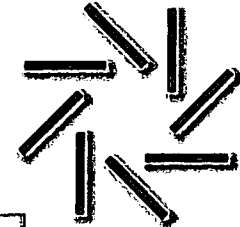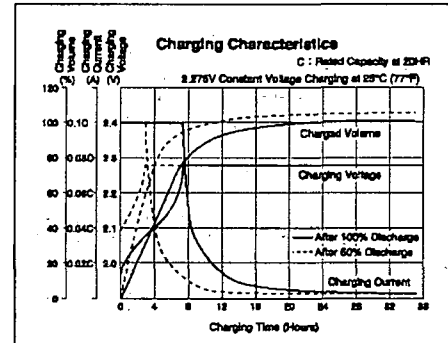


"Yuasa" Brand Maintenance-Free Valve-Regulated Lead-Acid Stationary Batteries

UXH SERIES



Peripheral Device

A life diagnosis device for valve regulated lead-acid batteries, "JUST FEEL". The battery monitor, JUST FEEL, diagnoses life of valve regulated lead-acid batteries. Battery life can be diagnosed without disconnecting a power supply as a result of measuring battery internal impedance during floating charge.

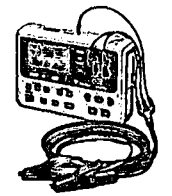

- Diagnoses battery life during floating charge.
- A compact, portable device.
- Can be used for a large variety of valve regulated lead-acid batteries.
- Mounted with comparator function.
- May be used for UPS batteries. (Some models may prohibit the use of this device. If you intend to use the device for UPS, please contact us for consultation.)

● Specifications subject to change without prior notice

Distributed by:
 GS Yuasa International Ltd.
 1-8-1, Nishi-Shimbashi, Minato-ku
 Tokyo 105-0003
 Japan
 Tel +81-3-3597-2403
 Fax +81-3-3597-2405

Cat.No. UXH-13 0505-10 (NMP) Printed in Japan

UXH SERIES

The latest in YUASA's state-of-the-art technology has brought about a new UXH series capable of yielding even greater capacity than comparable batteries. YUASA UXH batteries are designed with unique valve regulating devices and acid free constructions, ensuring safety and suitability to the contemporary business environment.

Designed Life

10 years

Features

- Up to 15% more capacity
- Maintenance-free
- Higher energy efficiency
- Negligible gas emissions
- Valve regulated
- Systems compatible
- Fitted with explosion proof filter (Except UXH100-12N and UXH200-6N)
- No equalizing charge required (Option) Flame retardant version available
- No free Acid (Non-spillable Battery)


Applications

- UPS
- Telecommunications
- Alarm systems
- Fire & security systems
- Emergency lighting
- Engine starting
- Solar powered systems
- Uninterruptible Power Supplies
- Rail

General Specifications

Battery Model	Nominal Voltage (V)	2018 Rated Capacity (Ah)	Internal Resistance (mΩ)	Length	Approx. Dimensions, mm (inch)	Approx. Weight, kg (lb)	Explosion Proof Filter
UXH08-12	12	38	7.0	235 (9.2)	178 (5.0) x 190 (7.5) x 178 (5.0)	17 (3.7)	○
UXH09-12	12	50	6.0	299 (11.8)	178 (5.0) x 190 (7.5) x 178 (5.0)	21 (4.6)	○
UXH09-12	12	63	6.0	363 (14.3)	178 (5.0) x 190 (7.5) x 178 (5.0)	25 (5.5)	○
UXH07-5-6	6	75	2.2	217 (8.5)	190 (7.5) x 217 (8.5) x 190 (7.5)	16 (3.5)	○
UXH100-6	6	100	1.8	281 (11.1)	190 (7.5) x 217 (8.5) x 20 (4.4)	20 (4.4)	○
UXH125-6	6	125	1.5	345 (13.6)	178 (5.0) x 190 (7.5) x 20 (4.4)	24 (5.3)	○
UXH100-12N	12	100	4.0	427 (16.8)	172.5 (6.8) x 210 (8.3) x 250 (9.8)	39 (8.6)	x
UXH200-6N	6	200	1.3	598 (23.5)	176 (6.9) x 216 (8.5) x 250 (9.8)	39 (8.6)	x

* 1 Final Voltage: 1.80V/cell, Temperature: 25°C(77°F)
 * 2 h is fully charged state and measured through a 1000Ω AC bridge.

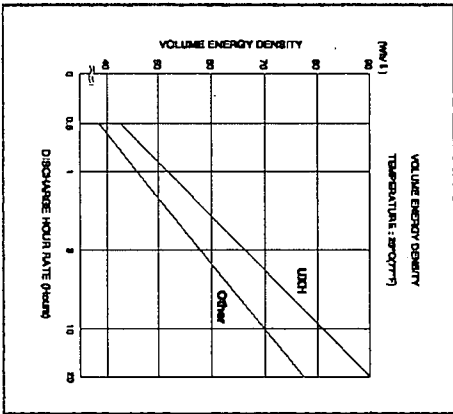

Floor charge voltage: 2.275V per cell
 Permissible operating temperature: -15~45°C
 Container material: ABS
 Terminal: L Terminal

Performance Data at 25°C(77°F)

(Amperes and Volts per cell)
 Amperes to F.V. 1.80 Volts Per Cell

Battery Model	Time	Time																				
		1	5	10	15	20	25	30	35	40	45	1	2	3	4	5	6	7	8	9	10	20
UXH08-12	A	141.0	119.0	84.3	63.5	50.9	42.6	37.6	33.4	30.8	28.0	27.8	27.8	27.8	27.8	27.8	27.8	27.8	27.8	27.8	27.8	27.8
	W	229.0	199.0	154.0	116.0	94.2	79.4	71.1	63.5	58.5	53.6	43.7	43.7	43.7	43.7	43.7	43.7	43.7	43.7	43.7	43.7	43.7
UXH09-12	A	185.0	166.0	114.0	83.5	67.0	56.0	44.0	40.5	37.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0	30.0
	W	302.0	262.0	203.0	153.0	124.0	105.0	93.5	77.0	70.5	57.5	57.5	57.5	57.5	57.5	57.5	57.5	57.5	57.5	57.5	57.5	57.5
UXH09-12	A	230.0	197.0	142.0	105.0	84.4	70.6	62.4	55.4	51.0	44.6	37.8	37.8	37.8	37.8	37.8	37.8	37.8	37.8	37.8	37.8	37.8
	W	380.0	330.0	255.0	215.0	170.0	125.0	101.0	84.0	74.3	64.0	55.5	45.0	45.0	45.0	45.0	45.0	45.0	45.0	45.0	45.0	45.0
UXH07-5-6	A	432.0	393.0	304.0	230.0	200.0	167.0	134.0	112.0	99.0	88.0	81.0	74.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0	60.0
	W	603.0	524.0	405.0	304.0	248.0	209.0	187.0	167.0	154.0	141.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0
UXH100-6	A	734.0	655.0	505.0	383.0	310.0	261.0	214.0	200.0	193.0	176.0	144.0	144.0	144.0	144.0	144.0	144.0	144.0	144.0	144.0	144.0	144.0
	W	1031.0	924.0	724.0	550.0	450.0	364.0	298.0	248.0	209.0	187.0	167.0	154.0	141.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0
UXH100-12N	A	603.0	624.0	405.0	304.0	248.0	209.0	187.0	167.0	154.0	141.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0
	W	1204.0	1048.0	808.0	612.0	494.0	416.0	344.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0	282.0

Amperes to F.V. 1.70 Volts Per Cell

Battery Model	Time	Time																				
		1	5	10	15	20	25	30	35	40	45	1	2	3	4	5	6	7	8	9	10	20
UXH08-12	A	123.0	104.0	73.7	57.4	47.9	41.4	36.5	32.3	29.3	27.0	13.7	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9
	W	211.0	184.0	133.0	104.0	88.9	77.9	69.2	61.6	55.9	51.7	42.6	26.6	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4
UXH09-12	A	162.0	139.0	97.0	75.5	63.0	54.5	48.0	42.5	38.5	35.0	29.0	18.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0
	W	277.0	245.0	176.0	139.0	117.0	102.0	91.0	79.5	68.0	64.0	54.0	35.0	25.5	25.5	25.5	25.5	25.5	25.5	25.5	25.5	25.5
UXH09-12	A	204.0	175.0	122.0	95.1	79.4	68.7	60.5	53.6	48.7	44.7	36.5	22.7	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4
	W	349.0	308.0	221.0	175.0	147.0	129.0	115.0	102.0	92.6	83.7	70.6	44.1	32.1	32.1	32.1	32.1	32.1	32.1	32.1	32.1	32.1
UXH07-5-6	A	243.0	209.0	146.0	113.0	94.5	81.8	72.0	63.8	57.8	53.3	43.3	27.0	19.5	19.5	19.5	19.5	19.5	19.5	19.5	19.5	19.5
	W	416.0	367.0	263.0	209.0	176.0	154.0	137.0	122.0	110.0	102.0	84.0	52.5	36.0	36.0	36.0	36.0	36.0	36.0	36.0	36.0	36.0
UXH100-6	A	324.0	278.0	194.0	151.0	126.0	109.0	96.0	85.0	77.0	71.0	58.0	36.0	26.0	26.0	26.0	26.0	26.0	26.0	26.0	26.0	26.0
	W	554.0	489.0	351.0	273.0	234.0	203.0	182.0	162.0	147.0	134.0	112.0	70.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0
UXH125-6	A	405.0	348.0	243.0	189.0	158.0	136.0	120.0	106.0	94.3	88.8	72.5	45.0	32.5	32.5	32.5	32.5	32.5	32.5	32.5	32.5	32.5
	W	693.0	611.0	439.0	348.0	299.0	254.0	228.0	203.0	184.0	170.0	140.0	87.5	63.0	63.0	63.0	63.0	63.0	63.0	63.0	63.0	63.0
UXH100-12N	A	324.0	278.0	194.0	151.0	126.0	109.0	96.0	85.0	77.0	71.0	58.0	36.0	26.0	26.0	26.0	26.0	26.0	26.0	26.0	26.0	26.0
	W	554.0	489.0	351.0	273.0	234.0	203.0	182.0	162.0	147.0	134.0	112.0	70.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0
UXH200-6	A	648.0	556.0	388.0	307.0	257.0	218.0	192.0	170.0	154.0	142.0	116.0	72.0	52.0	52.0	52.0	52.0	52.0	52.0	52.0	52.0	52.0
	W	1104.0	974.0	701.0	556.0	468.0	408.0	344.0	294.0	272.0	272.0	224.0	140.0	102.0	102.0	102.0	102.0	102.0	102.0	102.0	102.0	102.0

Amperes to F.V. 1.80 Volts Per Cell

Battery Model	Time	Time																				
		1	5	10	15	20	25	30	35	40	45	1	2	3	4	5	6	7	8	9	10	20
UXH08-12	A	99.2	86.3	63.8	52.8	44.8	38.8	35.0	31.2	28.1	26.2	21.3	12.9	9.5	6.1	4.2	3.1	2.5	1.90	1.90	1.90	1.90
	W	179.0	157.0	118.0	99.2	84.7	73.7	64.9	59.7	54.3	50.5	41.4	25.1	17.0	12.5	8.0	5.5	4.1	3.0	3.0	3.0	3.0
UXH09-12	A	131.0	114.0	84.0	69.5	59.0	51.0	46.0	41.0	37.0	34.5	28.0	17.0	12.5	8.0	5.5	4.1	3.0	3.0	3.0	3.0	3.0
	W	236.0	207.0	156.0	131.0	112.0	97.0	88.0	78.5	71.5	64.5	54.5	33.0	24.5	16.0	11.0	9.0	5.00	5.00	5.00	5.00	5.00
UXH09-12	A	164.0	142.0	104.0	87.4	74.3	64.3	58.0	51.7	46.6	43.5	36.5	21.4	15.8	10.1	6.9	5.1	3.18	3.18	3.18	3.18	3.18
	W	297.0	260.0	196.0	164.0	140.0	122.0	111.0	99.9	90.1	83.8	68.7	41.6	30.9	20.2	13.9	11.3	6.30	6.30	6.30	6.30	6.30
UXH07-5-6	A	333.0	310.0	234.0	186.0	167.0	146.0	132.0	118.0	107.0	99.8	81.8	49.5	36.8	24.0	16.5	13.1	7.90	7.90	7.90	7.90	7.90
	W	554.0	489.0	351.0	273.0	234.0	203.0	182.0	162.0	147.0	134.0	112.0	70.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0	51.0
UXH100-6	A	461.0	413.0	311.0	241.0	214.0	194.0	176.0	157.0	143.0	133.0	107.0	66.0	49.0	32.0	22.0	18.0	10.00	10.00	10.00	10.00	10.00
	W	899.0	784.0	610.0	474.0	418.0	360.0	320.0	285.0	260.0	242.0	205.0	125.0	90.0	61.0	42.5	33.0	22.5	12.50	12.50	12.50	12.50
UXH125-6	A	589.0	516.0	386.0	326.0	279.0	248.0	220.0	195.0	179.0	164.0	136.0	82.5	61.3	40.0	27.5	22.5	12.50	12.50	12.50	12.50	12.50
	W	1031.0	924.0	724.0	550.0	450.0	364.0	298.0	248.0	209.0	187.0	167.0	154.0	141.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0	115.0
UXH100-12N	A	471.0	413.0	311.0	241.0	214.0	194.0	176.0	157.0	143.0	133.0	107.0	66.0	49.0	32.0	22.0	18.0	10.00	10.00	10.00	10.00	10.00
	W	940.0	824.0	620.0	500.0	444.0	388.0	352.0	314.0	284.0	264.0	224.0	140.0	102.0	72.0	52.0	37.0	22.0	12.50	12.50	12.50	12.50






Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

PROXIMITY SWITCH

1. NCB5-18GM40-Z0 PROXIMITY SWITCH
TECHNICAL DETAILS

Inductive sensor

NCB5-18GM40-Z0

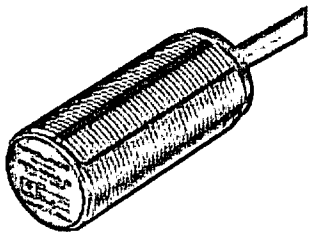


Model Number

NCB5-18GM40-Z0

Features

- Comfort series
- 5 mm embeddable


Connection

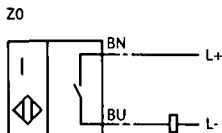

Accessories

- EXG-18
Mounting aid
- BF 18
Mounting flange

Dimensions

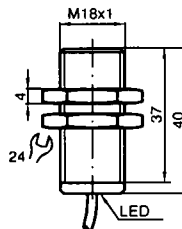

Technical Data

General specifications	
Switching element function	DC Make function
Rated operating distance	s_n 5 mm
Installation	embeddable
Output polarity	DC
Assured operating distance	s_B 0 ... 4.05 mm
Reduction factor r_{AI}	0.37
Reduction factor r_{CU}	0.33
Reduction factor r_{V2A}	0.7
Nominal ratings	
Operating voltage	U_B 5 ... 60 V
Switching frequency	f 0 ... 350 Hz
Hysteresis	H 1 ... 10 typ. 5 %
Reverse polarity protection	tolerant
Short-circuit protection	pulsing
Voltage drop	U_d ≤ 5 V
Operating current	I_L 2 ... 100 mA
Off-state current	I_r 0 ... 0.5 mA typ.
Indication of the switching state	all direction LED, yellow
Standard conformity	
Standards	IEC / EN 60947-5-2:2004
Ambient conditions	
Ambient temperature	-25 ... 70 °C (248 ... 343 K)
Mechanical specifications	
Connection type	2 m, PUR cable
Cable version	PA
Core cross-section	0.34 mm ²
Housing material	Stainless steel
Sensing face	PBT
Protection degree	IP67
Approvals and certificates	
CCC approval	Certified by China Compulsory Certification (CCC)

Release date: 2009-05-07 10:31 Date of issue: 2009-05-07 089258_ENG.xml

Subject to modifications without notice

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411
fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs
Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS 1
SENSING YOUR NEEDS






Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

PUSHBUTTON & INDICATORS

1. PUSH BUTTON TECHNICAL DETAILS
2. HOUR RUN METER TECHNICAL DETAILS

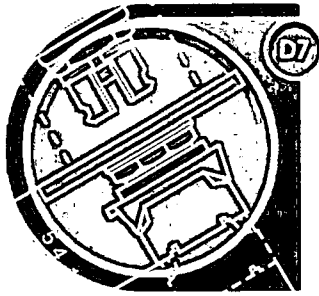

Economical Devices for High Performance Switching & Control Solutions

Series D7 Pilot Devices

22mm Design
Saves Panel Space

Heavy Duty
Ratings

Modular Design
Reduces Inventory

Order Assembled
or by Component

Features

TWO OPERATOR TYPES

- Plastic operator with captive front bezel
- Metal operator with die-cast zinc housing and captive shiny metal bezel

LESS INVENTORY, MORE CHOICES

- Wide range of style choices
- Modular design for mix and match flexibility
- Endless configurations from core components

QUICK, EASY INSTALLATION

- Tool-less mounting latch for quick assembly
- Anti-rotation tab for one person installation
- Snap-on back panel components



LONG ELECTRICAL & MECHANICAL LIFE

- 10 million mechanical operations
- 10 million electrical cycles

ENVIRONMENTAL RATINGS

- UL Type 4/4X/13, IP66 Sealing
- Chemical resistant industrial grade thermoplastic body
- Corrosion and UV resistant


Sprecher + Schuh's rugged D7 pilot devices offer maximum flexibility and a wide choice for all applications. This 22mm line is aesthetically appealing and modularly designed to make assembly and interchangeability easy. The D7 operators are available in two different body styles to meet every industrial application need. Both operators exhibit a new lower profile stylish appearance while maintaining the rugged performance necessary for demanding environments.

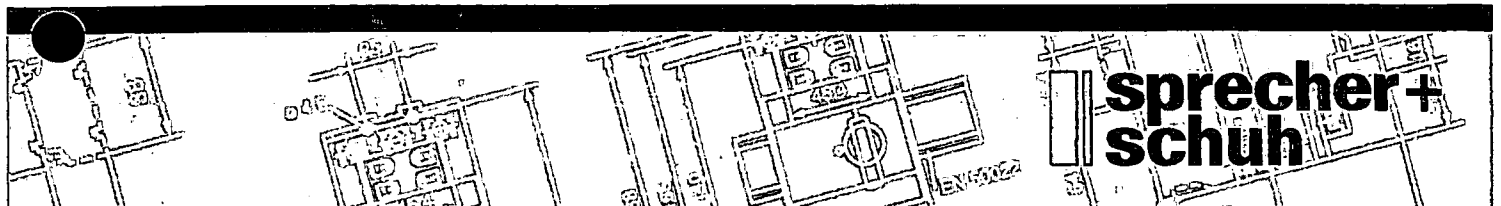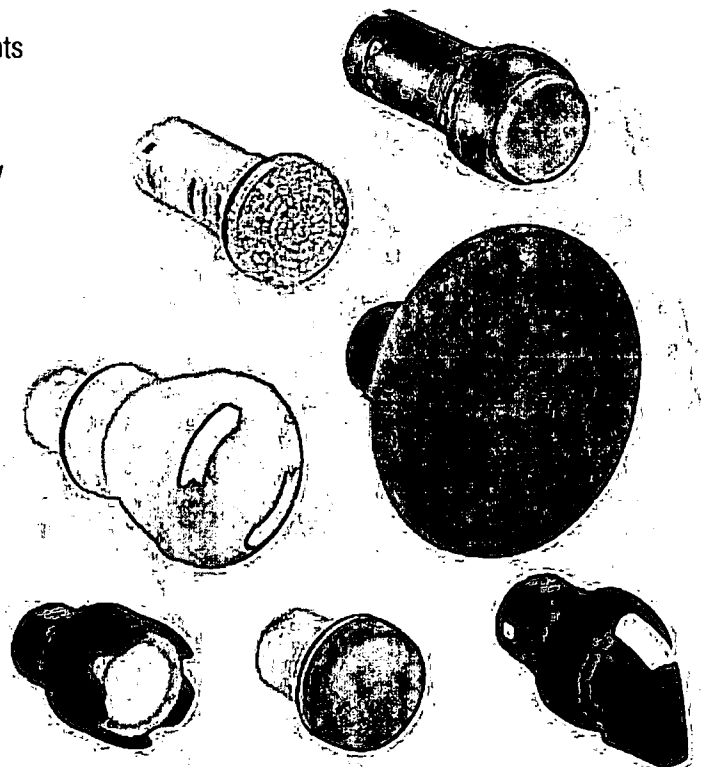

sprecher+
schuh


Fast Mounting

Tool-less, snap-in design for fast assembly

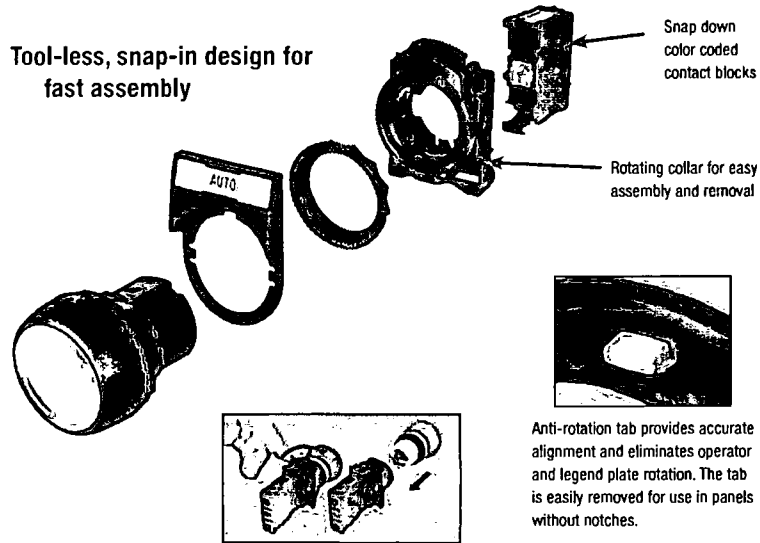


Easy one-person mounting and removal provide both time and cost savings.


Flexibility

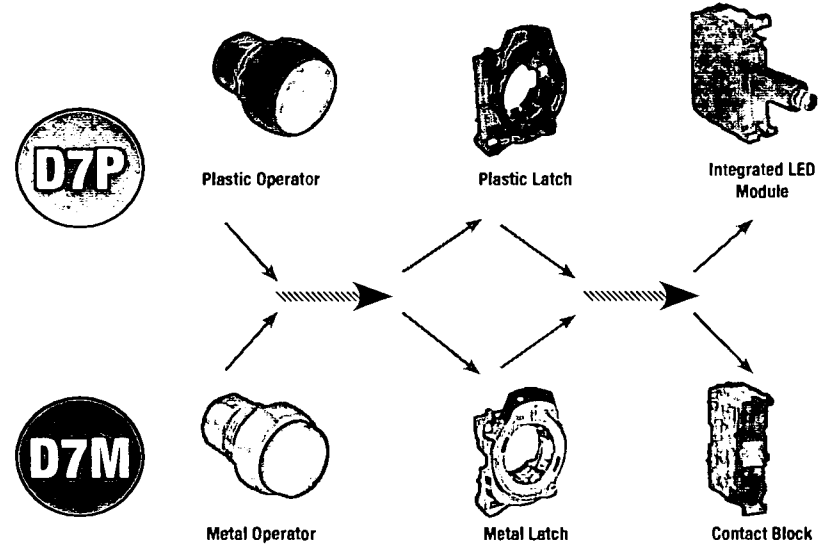

Complete Accessories

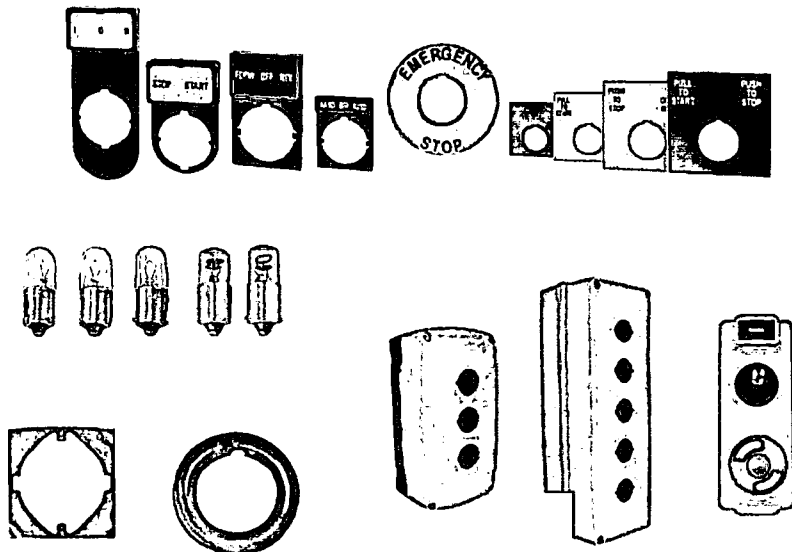

Superior Design

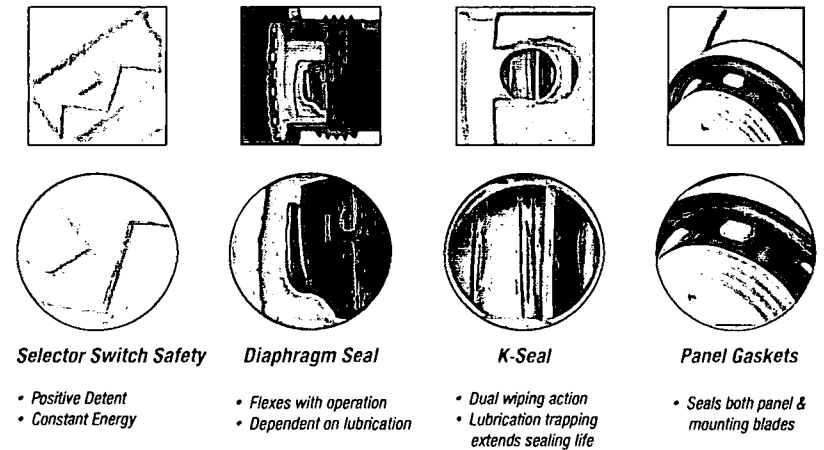

Push Buttons



Illuminated

Momentary, Extended		Momentary, Flush*		Maintained, Flush	
Plastic	Metal	Plastic	Metal	Plastic	Metal
• D7P-LE0	D7M-LE0	D7P-LF0	D7M-LF0	D7P-LFA0	D7M-LFA0
• D7P-LE3	D7M-LE3	D7P-LF3	D7M-LF3	D7P-LFA3	D7M-LFA3
• D7P-LE4	D7M-LE4	D7P-LF4	D7M-LF4	D7P-LFA4	D7M-LFA4
• D7P-LE5	D7M-LE5	D7P-LF5	D7M-LF5	D7P-LFA5	D7M-LFA5
• D7P-LE6	D7M-LE6	D7P-LF6	D7M-LF6	D7P-LFA6	D7M-LFA6
• D7P-LE7	D7M-LE7	D7P-LF7	D7M-LF7	D7P-LFA7	D7M-LFA7
• D7P-LE9	D7M-LE9	D7P-LF9	D7M-LF9	D7P-LFA9	D7M-LFA9

• Push Button without Cap * Guarded available on Momentary Flush only



Non-Illuminated


Momentary, Extended		Momentary, Flush*		Maintained, Flush	
Plastic	Metal	Plastic	Metal	Plastic	Metal
• D7P-E0	D7M-E0	D7P-F0	D7M-F0	D7P-FA0	D7M-FA0
• D7P-E1	D7M-E1	D7P-F1	D7M-F1	D7P-FA1	D7M-FA1
• D7P-E2	D7M-E2	D7P-F2	D7M-F2	D7P-FA2	D7M-FA2
• D7P-E3	D7M-E3	D7P-F3	D7M-F3	D7P-FA3	D7M-FA3
• D7P-E4	D7M-E4	D7P-F4	D7M-F4	D7P-FA4	D7M-FA4
• D7P-E5	D7M-E5	D7P-F5	D7M-F5	D7P-FA5	D7M-FA5
• D7P-E6	D7M-E6	D7P-F6	D7M-F6	D7P-FA6	D7M-FA6
• D7P-E9	D7M-E9	D7P-F9	D7M-F9	D7P-FA9	D7M-FA9

• Push Button without Cap * Guarded available on Momentary Flush only



Illuminated 40mm Mushroom, Momentary

Plastic	Metal
• D7P-LMM3	D7M-LMM3
• D7P-LMM4	D7M-LMM4
• D7P-LMM5	D7M-LMM5
• D7P-LMM6	D7M-LMM6
• D7P-LMM7	D7M-LMM7

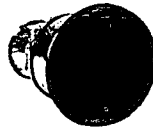


Non-Illuminated 40mm Mushroom, Momentary

Plastic	Metal
• D7P-MM42	D7M-MM42
• D7P-MM43	D7M-MM43
• D7P-MM44	D7M-MM44
• D7P-MM45	D7M-MM45
• D7P-MM46	D7M-MM46

Also available in 60mm Mushroom

Emergency Stops

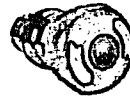

Illuminated Twist-to-release, 40mm Mushroom

Plastic	Metal
D7P-LMT44	D7M-LMT44

Complete Unit
 1NC: D7P-LMT44PX01 D7M-LMT44PX01
 1 Guardian: D7P-LMT44PX01S D7M-LMT44PX01S



Non-Illuminated Twist-to-release, 30mm Mushroom

Plastic	Metal
D7P-MT34	D7M-MT34

Complete Unit
 1NC: D7P-MT34PX01 D7M-MT34PX01
 1 Guardian: D7P-MT34PX01S D7M-MT34PX01S



Keyed Twist-to-release, 40mm Mushroom

Plastic	Metal
D7P-MK44	D7M-MK44

Complete Unit
 1NC: D7P-MK44PX01 D7M-MK44PX01
 1 Guardian: D7P-MK44PX01S D7M-MK44PX01S



Twist-to-release, 40mm Mushroom

Plastic	Metal
D7P-MT44	D7M-MT44

Complete Unit
 1NC: D7P-MT44PX01 D7M-MT44PX01
 1 Guardian: D7P-MT44PX01S D7M-MT44PX01S




Twist-to-release, 60mm Mushroom

Plastic	Metal
D7P-MT64	D7M-MT64


Complete Unit
 1NC: D7P-MT64PX01 D7M-MT64PX01
 1 Guardian: D7P-MT64PX01S D7M-MT64PX01S

Push-Pull Operators

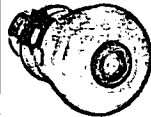

2 Position Illuminated Push-Pull, 40mm Mushroom

Plastic	Metal
• D7P-LMP43	D7M-LMP43
• D7P-LMP44	D7M-LMP44
• D7P-LMP45	D7M-LMP45

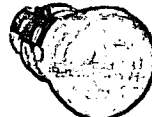

2 Position Non-Illuminated Push-Pull, 40mm Mushroom

Plastic	Metal
• D7P-MP42	D7M-MP42
• D7P-MP44	D7M-MP44

Complete Unit
 1NC: D7P-LMP44PX01 D7M-LMP44PX01
 1 Guardian: D7P-LMP44PX01S D7M-LMP44PX01S

Complete Unit
 1NC: D7P-MP44PX01 D7M-MP44PX01
 1 Guardian: D7P-MP44PX01S D7M-MP44PX01S

Push-Pull, 30mm Mushroom

Plastic	Metal
• D7P-LMP33	D7M-LMP33
• D7P-LMP34	D7M-LMP34
• D7P-LMP35	D7M-LMP35



3 Position Illuminated Push-Pull, 40mm Mushroom

Momentary	Maintained
• D7M-LMM40-E3	D7M-LMP40-E3
• D7M-LMM43-E3	D7M-LMP43-E3
• D7M-LMM44-E3	D7M-LMP44-E3
• D7M-LMM46-E3	D7M-LMP46-E3
• D7M-LMM47-E3	D7M-LMP47-E3

Push-Pull, 60mm Mushroom

Plastic	Metal
• D7P-LMP63	D7M-LMP63
• D7P-LMP64	D7M-LMP64
• D7P-LMP65	D7M-LMP65



3 Position Non-Illuminated Push-Pull, 40mm Mushroom

Momentary	Maintained
• D7M-MM42-E3	D7M-MP42-E3
• D7M-MM43-E3	D7M-MP43-E3
• D7M-MM44-E3	D7M-MP44-E3

Pilot Lights



Plastic	Metal
• D7P-P0	D7M-P0
• D7P-P3	D7M-P3
• D7P-P4	D7M-P4
• D7P-P5	D7M-P5
• D7P-P6	D7M-P6
• D7P-P7	D7M-P7
• D7P-P9	D7M-P9

• Pilot light without lens or diffuser

Reset Operators



Mechanical and/or Electrical Reset

Plastic	Metal
• D7P-R1	D7M-R1
• D7P-R2	D7M-R2
• D7P-R6	D7M-R6

PUSH buttons

MONOLITHIC

emergency STOP

SELECTOR switches

MULTIFUNCTION push buttons

COMPONENTS


PILOT lights

PUSH-PULL operators

RESET operators

OTHER switches

Monolithic

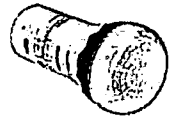

Indicator Light

Plastic


- | | |
|------------|---------------------|
| LED | Incandescent |
| • D7D-P0N | D7D-P0D |
| • D7D-P3N | D7D-P3D |
| • D7D-P4N | D7D-P4D |
| • D7D-P5N | D7D-P5D |
| • D7D-P6N | D7D-P6D |
| • D7D-P7N | D7D-P7D |
- Select lamp voltage and terminal type



Push Button

Non-Illuminated, Plastic, Momentary

- | | |
|------------------|---------------------|
| Flush Cap | Extended Cap |
| • D7D-F1 | D7D-E1 |
| • D7D-F2 | D7D-E2 |
| • D7D-F3 | D7D-E3 |
| • D7D-F4 | D7D-E4 |
| • D7D-F5 | D7D-E5 |
| • D7D-F6 | D7D-E6 |
- Select cap text and contact configuration

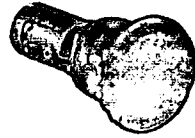

E-STOP Push Button

Push-Pull and Twist-to-release, 40mm Mushroom, Plastic

- | | |
|-------------|---------|
| D7D-MT44X01 | 1NC |
| D7D-MT44X11 | 1NO 1NC |
| D7D-MT44X02 | 2NC |



Selector Switch

Non-Illuminated, Plastic

Also available with spring return

- | | |
|-------------------------------|----------|
| 2 Position, Maintained | |
| • D7D-SM22X10 | 1NO |
| • D7D-SM22X01 | 1NC |
| • D7D-SM22X20 | 2NO |
| • D7D-SM22X02 | 2NC |
| • D7D-SM22X11 | 1NO, 1NC |
| 3 Position, Maintained | |
| • D7D-SM32X20 | 2NO |
| • D7D-SM32X02 | 2NC |
| • D7D-SM32X11 | 1NO, 1NC |

Selector Switches



Non-Illuminated

Also available with spring return


- | | |
|-------------------------------|--------------|
| 2 Position, Maintained | |
| Plastic | Metal |
| • D7P-SM22 | D7M-SM22 |
| 3 Position, Maintained | |
| Plastic | Metal |
| • D7P-SM32 | D7M-SM32 |



Illuminated

- | | |
|-------------------------------|--------------|
| 2 Position, Maintained | |
| Plastic | Metal |
| • D7P-LSM20 | D7M-LSM20 |
| • D7P-LSM23 | D7M-LSM23 |
| • D7P-LSM24 | D7M-LSM24 |
| • D7P-LSM25 | D7M-LSM25 |
| • D7P-LSM26 | D7M-LSM26 |
| • D7P-LSM27 | D7M-LSM27 |
| 3 Position, Maintained | |
| Plastic | Metal |
| • D7P-LSM30 | D7M-LSM30 |
| • D7P-LSM33 | D7M-LSM33 |
| • D7P-LSM34 | D7M-LSM34 |
| • D7P-LSM35 | D7M-LSM35 |
| • D7P-LSM36 | D7M-LSM36 |
| • D7P-LSM37 | D7M-LSM37 |

Multi-function

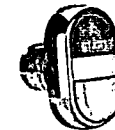

Illuminated

- | | |
|-------------------|-----------------|
| 2 Function | Metal |
| Plastic | D7M-LU2X |



Non-Illuminated

- | | |
|--------------------|----------------|
| 2 Function | Metal |
| Plastic | D7M-U2X |
| 3 Functions | Metal |
| Plastic | D7M-U3X |

Other Switches



Toggle Switch

Metal

- | | |
|-------------------|------------|
| 2 Position | |
| D7M-JR2 | Momentary |
| D7M-JM2 | Maintained |
| 4 Position | |
| D7M-JR4 | Momentary |
| D7M-JM4 | Maintained |



Key Selector Switches

- | | |
|-------------------------------|--------------|
| 2 Position, Maintained | |
| Plastic | Metal |
| D7P-KM21 | D7M-KM21 |
| D7P-KM22 | D7M-KM22 |
| D7P-KM23 | D7M-KM23 |
| 3 Position, Maintained | |
| Plastic | Metal |
| D7P-KM31 | D7M-KM31 |
| D7P-KM33 | D7M-KM33 |
| D7P-KM34 | D7M-KM34 |
| D7P-KM35 | D7M-KM35 |



Selector/Jog Operators

- | | |
|-------------------|--------------|
| 2 Position | |
| Plastic | Metal |
| • D7P-SJ22 | D7M-SJ22 |
| • D7P-SJ23 | D7M-SJ23 |
| 3 Position | |
| Plastic | Metal |
| • D7P-SJ32 | D7M-SJ32 |
| • D7P-SJ33 | D7M-SJ33 |



Potentiometer

- | | |
|----------------|--------------------------|
| Plastic | Resistive Element |
| D7P-P0T | None (Operator Only) |
| D7P-P0T1 | 150 Ω |
| D7P-P0T2 | 500 Ω |
| D7P-P0T3 | 1000 Ω |
| D7P-P0T4 | 2500 Ω |
| D7P-P0T5 | 5000 Ω |
| D7P-P0T6 | 10000 Ω |

Components



Contact Blocks

(latch not included)

- | | |
|--------------|-----------------|
| D7-X10 | 1NO |
| D7-X01 | 1NC |
| D7-X01B | 1NC Early Break |
| D7-X10E | 1NO Early Make |
| D7-X01L | 1NC Late Break |
| D7-X10V(1mA) | 1NO Low Voltage |
| D7-X01V(1mA) | 1NC Low Voltage |
| D7-X01S | Guardian Block |
| D7-Q10 | 1NO Screwless |
| D7-Q01 | 1NC Screwless |



Integrated LED Module

(latch not included)

- | | |
|-------------------|-----------|
| Screw Type | |
| D7-N3* | 24V AC/DC |
| D7-N5* | 120V AC |
| D7-N7* | 240V AC |

- | | |
|---------------------|-----------|
| Spring-Clamp | |
| D7-O3* | 24V AC/DC |
| D7-O5* | 120V AC |
| D7-O7* | 240V AC |

* Add LED Color, R=red, G=green, Y=yellow, B=blue, W=white



Plastic Latch
D7-ALP



Metal Latch
D7-ALM



Incandescent Power Module


(bulb not included)

- | | |
|--------|--------------|
| D7-D0C | 6-240V AC/DC |
|--------|--------------|


D7 Pilot Devices

Dimensions* (Approximately in millimeters)


Non-Illuminated and Illuminated
Flush Push Button Operators (D7x-F)

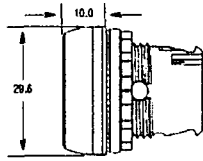


Illuminated and Non-Illuminated
Extended Push Button Operators

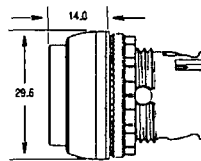


Non-Illuminated 3-Position Multi-Function Operators (D7x-U3)

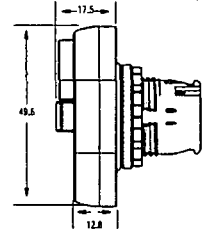


Non-Illuminated Guarded and Non-Illuminated
Maintained Push Button Operators (D7x-G and D7x-FA)

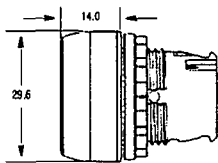


Pilot Light Operators (D7x-P)

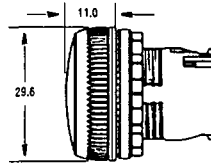


Illuminated and Non-Illuminated 2-Position Multi-Function
Operators (D7x-LU2 & D7x-U2)

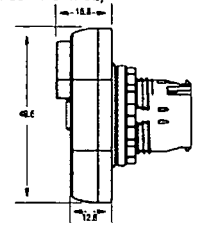


Illuminated and Non-Illuminated Knob Selector Switch
Operators (D7x-LS & D7x-S)

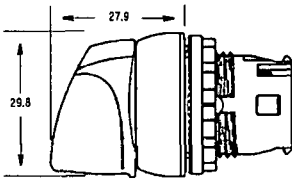


Key Selector Switch Operators (D7x-K)

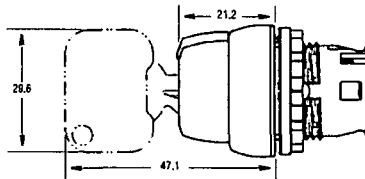

Toggle Switch Operators (D7M-JM)

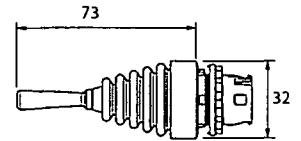


Illuminated and Non-Illuminated
Momentary Mushroom Operators
40mm and 60mm (D7x-LMM & D7x-MM)

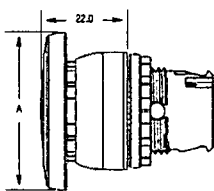


Operator	A
40mm	39.8
60mm	59.8

Illuminated and Non-Illuminated Twist-to-Release
Operators 30mm, 40mm, and 60mm (D7x-MT)

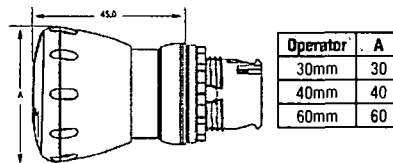


Operator	A
30mm	30
40mm	40
60mm	60


Reset Operators (D7x-R)

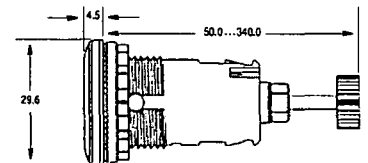

Selector Jog Operators (D7x-SJ)

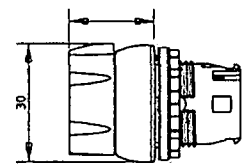


Illuminated and Non-Illuminated
Push-Pull Mushroom Operators 30mm, 40mm, and 60mm
(D7x-MP)

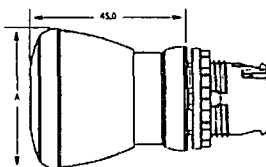

Operator	A
30mm	30
40mm	40
60mm	60

Mushroom Key Release Operator 40mm (D7x-MK)

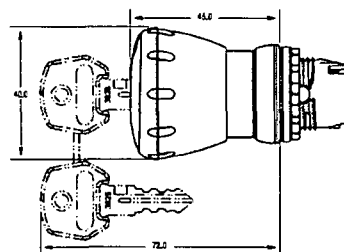

Potentiometer with Resistive Element (D7P- POT)



* For Monolithic Devices see the D7D Monolithic Flyer

Sprecher + Schuh US Division Headquarters
15910 International Plaza Dr., Houston, TX 77032
Tel: (281) 442-9000; Fax: (800) 739-7370
www.sprecherschuh.com

Sprecher + Schuh Canadian Division
3610 Nashua Dr., Unit 10, Mississauga, Ontario L4V 1L2
Tel: (905) 677-7514; Fax: (905) 677-7663



Publication No: F-D7Devices_107 11/07



Technical Information
Series D7 – Heavy Duty/Oil Tight

Front-of-Panel (Operators) ①

Mechanical Ratings

Description		Plastic (D7P)	Metal (D7M)
Vibration (assembled to panel)	[G]	Tested at 10...2000Hz, 1.52mm displacement (peak-to-peak) max./10G max. for 3hr duration, no damage	
Shock	[G]	Tested at 1/2 cycle sine wave for 11ms; no damage at 100G	
Degree of protection ②		UL Type 3/3R/4/4X/12/13 (IP65/66)	UL Type 3/3R/4/12/13 (IP65/66)
Mechanical durability per EN 60947-5-1 (Annex C)		10,000,000 Cycles 1,000,000 Cycles 500,000 Cycles 300,000 Cycles 100,000 Cycles	Momentary push buttons, momentary mushroom Multi-function, Selector Switch, Key Selector Switch, Selector Jog Non-illuminated Push-Pull E-Stop Twist-to-Release E-Stop, Illuminated Push-Pull E-Stop, Maintained Push Buttons, selector switches Potentiometer, Toggle Switch
Operating forces (typical with one contact block)	[N]		Flush/extended = 5N E-stop = 36N Mushroom = 9N
Operating torque (typical application with one contact block)	[N·m]		Selector switch = 0.25 N·m (2.2 lb-in.)
Mounting torque	[N·m]	1.7 N·m (15 lb-in.)	4.4 N·m (40 lb-in.)
Environmental			
Temperature range (operating) ③	[°C]	-25...+70°C (-13...+158°F)	
Temperature range (short-term storage)	[°C]	-40...+85°C (-40...+185°F)	
Humidity	[%]	50...95% RH from 25...60°C (77...140°F) per: Procedure IV of MIL-STD-810C, Method 507.1 cycling test	

Pilot Devices

D7

Back-of-Panel Components ①

Electrical Ratings

Standard contact block ratings		A600, Q600 600V AC AC15, DC 13 to EN 60947-5-1 and UL 508, 17V, 5mA min.		
Low voltage contact block ratings ④		5V, 1mA DC min. C300, R150, AC 15, DC 13 to EN 60947-5-1 and UL 508		
LED Module Ratings	Nominal Voltage	Range	Current Draw	Frequency
	24V AC	10...29V AC	31 mA	50/60 Hz
	24V DC	10...30V DC	24 mA	DC
	120V AC	70...132V AC	25 mA	50/60 Hz
	240V AC	180...264V AC	22 mA	50/60 Hz
Thermal current	[A]	10 A max. enclosed (40°C ambient) to UL 508, EN 60947-5-1		
Wire capacity	Screw terminal ⑤ [AWG]	#18...12 AWG (0.75...2.5mm ²) Max. (2) #14 AWG or (1) #12 AWG		
	Spring-clamp terminal [AWG]	#18...14 AWG (0.75...1.5mm ²)		
Recommended tightening torque on screw terminals	[N]	0.7...0.9 N·m (6...8 lb-in.)		
Insulation voltage	[U _i]	U _i = 690 V (screw terminal) U _i = 300 V (screwless terminal)		
Dielectric strength (minimum)	[V]	2500V for one minute		
External short circuit protection	Standard blocks	10 A type gL/gG cartridge fuse to EN 60269-2-1 or gN (Class J to UL 248-8 or Class C to UL 248-4)		
	Low voltage contact blocks	6 A type gL/gG cartridge fuse to EN 60269-2-1 or gN (Class J to UL 248-8 or Class C to UL 248-4)		
Electrical shock protection		Finger-safe conforming to IP2X		

Mechanical Ratings

Vibration (assembled to panel)	[G]	10...2000 Hz, 1.52mm displacement (peak-to-peak) max./10G max. 6hr
Shock	[G]	Tested at 1/2 cycle sine wave for 11ms and no damage at 100G max.
Contact durability per EN 60947-5-1 (Annex C)		10,000,000 cycles
Contact operation	NO	Slow double make and break
	NC	Slow double make and break - positive opening
	NOEM	Double break / double make / early make
	NCLB	Double break / double make, late break - positive opening
	NCEB	Double break / double make, early break - positive opening
Push button travel to change electrical state		N.C. and N.O.E. M. 1.5 mm (0.060 in.)
		N.O. and N.C.L.B. 2.5 mm (0.1 in.)
Operating forces (typical)	[N]	3.4 N: each single circuit contact block
		5...6.5 N: each dual circuit contact block

- ① Performance data given in this publication is provided only as a guide for the user in determining suitability and do not constitute a performance warranty of any kind. Such data may represent the results of accelerated testing at elevated stress levels, and the user is responsible for correlating the data to actual application requirements. ALL WARRANTIES AS TO ACTUAL PERFORMANCE, WHETHER EXPRESS OR IMPLIED, ARE EXPRESSLY DISCLAIMED.
- ② Momentary mushroom operators are IP65, multi-function operators have no Type 13 rating. Plastic operators with keys have no Type 4X rating.
- ③ Operating temperatures below 0°C (32°F) are based on the absence of freezing moisture and liquids, UL recognized to 55°C (131°F) - incandescent module, max 40°C (104°F).
- ④ Low voltage contacts are recommended for applications below 17V, 5 mA.
- ⑤ Wires less than #18 (0.75mm²) may not hold in terminal securely.

H76

Discount Schedule B-1



Technical Information

Series D7 – Heavy Duty/Oil Tight

Back-of-Panel Components ①, continued

Illumination

LED dominant wavelength	Green		525 nm
	Red		629 nm
	Yellow	[nm]	590 nm
	Blue		470 nm
	White		—
LED luminous intensity	Green		890 mcd
	Red		890 mcd
	Yellow	(mcd)	690 mcd
	Blue		193 mcd
	White		412 mcd
Incandescent maximum wattage			[W] 2.6W

Materials

Springs		Stainless steel and zinc coated music wire
Electrical contacts	Standard	Silver-nickel
	Low voltage	Gold-plated over silver
Terminals	Screw	Brass
	Screwless	Silver-plated brass



Environmental Approval Note: Front elements UL Recognized; Complete assemblies UL Approved. See Table A2 for your application.

This table is extracted from Sprecher + Schuh's UL 508A file and can be used to determine which D7 Pilot Device is approved for a particular enclosure type.

Enclosure Type	Openings May Be Closed By Equipment Marked...
2	2, 3, 3R, 3S, 4, 4X, 6, 6P, 11, 12, 12K, 13
3	3, 3R, 3S, 4, 4X, 6, 6P
3R	3, 3R, 3S, 4, 4X, 6, 6P
3S	3, 3R, 3S, 4, 4X, 6, 6P
4	4, 4X, 6, 6P
4X	4X
6	6, 6P
6P	6P
11	11
12, 12K	12, 12K, 13
13	13

Product Certifications

Certifications	UL, UR, CSA, CCC, CE
Conformity of Standards - CE marked	NEMA ICS-5; UL 508, EN 418, EN 60947-1, EN 60947-5-1, EN 60947-5-5
Terminal identification	IEC 60947-1
Shipping approvals	RINA, LR, ABS
RoHS	✓

① Performance data given in this publication is provided only as a guide for the user in determining suitability and do not constitute a performance warranty of any kind. Such data may represent the results of accelerated testing at elevated stress levels, and the user is responsible for correlating the data to actual application requirements. ALL WARRANTIES AS TO ACTUAL PERFORMANCE, WHETHER EXPRESS OR IMPLIED, ARE EXPRESSLY DISCLAIMED.

Material Listing

Component	For Use with	Material Used
Panel gasket	All operators	Nitrile, TPE
Diaphragm seal	Illuminated push button, non-illuminated push button	Automotive industry acceptable silicone
K-seal	Selector switch, key selector switch, push/twist-to-release E-stop, key E-stop, push/pull mushroom	Nitrile
Diaphragm retainer, return spring I	Illuminated push button, non-illuminated push button, momentary mushroom	Stainless steel
Return spring II	Reset, selector switch, key selector switch, maintained action, push/twist-to-release E-stop, key E-stop, push/pull mushroom	Zinc coated music wire
Button cap/mushroom head	Non-illuminated push button, momentary mushroom, reset, push/twist-to-release E-stop, key E-stop, push/pull mushroom, multi-function	PBT/polycarbonate blend
2-color molded button cap	Non-illuminated push button	PBT/polycarbonate blend
Lens	Multi-function	Acetal
Lens, knob	Illuminated push button, illuminated momentary mushroom, illuminated selector switch	Polyamide
Knob	Non-illuminated selector switch	Glass-filled polyamide
Plastic bezel/bushing I	Non-illuminated push button, illuminated push button, momentary mushroom, selector switch, key selector switch, push/twist-to-release E-stop, key E-stop, push/pull mushroom, multi-function, reset	Glass-filled polyamide
Plastic bezel/bushing II, jam nut	Pilot light, reset jam nut, reset pusher	Glass-filled PBT
Metal bezel/bushing	All metal operators	Zinc
Diffuser	Illuminated push button, pilot light	Polycarbonate
Legend frames	—	Glass-filled polyamide
Plastic mounting ring	All plastic operators	Glass-filled polyamide
Metal mounting ring	All metal operators	Chromated zinc
Plastic latch	—	Glass-filled polyamide
Metal latch	—	Chromated zinc + stainless steel
Plastic enclosure	—	PBT/polycarbonate blend
Metal enclosure	—	Aluminum
Terminal screws	LED module, incandescent module, contact blocks	Zinc-plated steel with chromate
Terminals	LED module, incandescent module, contact blocks	Brass with silver-nickel contacts
Screwless	LED module, incandescent module, contact blocks	Stainless steel
Lamp socket	Incandescent module	Brass
Housing	Incandescent module, LED module	Glass-filled polyamide
Low voltage terminals	Contact blocks	Gold plated silver-nickel contacts
Low voltage spanner	Contact blocks	Gold-plated silver-nickel contacts
Spanner	Contact blocks	Brass with silver-nickel contacts
Boot	Toggle Switch, illuminated push button, non-illuminated push button, multi-function illuminated an non-illuminated	Automotive industry acceptable silicone

Pilot Devices
D7



Pilot Devices

Series D7D Monolithic

Specifications

Mechanical Ratings

Vibration (assembled to panel)	Tested at 10...2000 Hz, 1.52 mm displacement (peak-to-peak) max./10 G max. for 3 hr duration, no damage	
Shock	Tested at 1/2 cycle sine wave for 11 ms; no damage at 100 G	
Degree of protection	IP 66 (Type 3/3R/4/4X/12/13)	
mechanical durability per EN 60947-5-1 (Annex C)	2,000,000 Cycles	Momentary Push Button
	300,000 Cycles	Selector Switch and E-Stop
Operating forces	Flush/Extended = 9 N, E-stop = 36 N	
Operating torque (typical application with one contact block)	Selector Switch = 0.25 N•m	
Contact operation	N.O.	Slow double make and break
	N.C.	Slow double make and break - positive opening ⊕
Push button travel to change electrical state	N.O.	2.5 mm (0.1 in.)
	N.C.	1.5 mm (0.060 in.)

⊕ Positive Opening per EN60947-5-1 (applies to all NC contact block styles)

Environmental

Temperature range (operating) ①	-25...+60°C (-13...140°F)
Temperature range (short term storage)	-40...+85°C (-40...185°F)
Humidity	50...95% RH from 25...60°C (77...140°F)

Electrical Ratings

Standard contact block ratings	B300, R300; AC 15, DC 13; 300 VAC; EN/IEC 60947-5-1 and UL 508, 17V, 5 mA min.			
LED Module Ratings	Nominal Voltage	Range	Nominal Current Draw	Frequency
	24V AC	20...26V AC	32 mA	50/60 Hz
	24V DC	18...30V DC	24 mA	DC
	120V AC	102...132V AC	22 mA	50/60 Hz
	240V AC	204...264V AC	22 mA	50/60 Hz
Thermal current	5 A max. enclosed (40°C ambient) to UL508, EN/IEC 60947-5-1			
Insulation voltage (Ui)	300V			
Wire capacity (screw terminal)	#18...14 AWG (0.75...2.5 mm ²), Max. (2) #14 AWG, uses same size wire only			
Recommendations for Ring Lug termination option ②	6.35 mm (0.250 in.) Max. outer diameter with 3.8 mm (0.148 in.) hole diameter			
Recommended tightening torque on screw terminals	0.7...0.9 N•m (6...8 lb-in.)			
Dielectric strength (minimum)	2500V for one minute			
External short circuit protection	5 A type gL/gG cartridge fuse to EN 60269-2-1 or gN (Class J to UL 248-8 or Class CC to UL 248-4)			
Electrical shock protection	Finger-safe conforming to IP2X			

Illumination

LED Dominant Wavelength	Green	Red	Yellow	Blue	White
	525 nm	629 nm	590 nm	470 nm	
LED Luminous Wavelength	Green	Red	Yellow	Blue	White
	890 mcd	890 mcd	690 mcd	193 mcd	412 mcd
Incandescent maximum wattage	2.6 W				

Materials

Springs	Stainless steel and zinc coated music wire
Electrical contacts	Brass with silver-nickel contacts
Terminals	Brass and phosphor bronze
Panel gasket	nitrile and polyester-based TPE
Seal	Nitrile
Button cap/mushroom head	Polyester/polycarbonate blend
Lens (pilot light)	Acrylic
Knob (selector switch)	Glass-filled polyamide
Bezel/bushing, housing	Glass filled polyester
Legend frames	Glass filled polyamide
Mounting ring	Glass filled polyamide
Terminal screws	Zinc-plated steel with chromate
Lamp Socket	Brass and Phosphor bronze

Product Certifications

Certifications	UL, CSA, CCC, CE
Conformity to standards - CE marked	UL 508, EN 60947-1, EN 60947-5-1, EN 60947-5-5
Terminal Identification	EN/IEC 60947-1

① Operating temperatures below 0°C (32°F) are based on the absence of freezing moisture and liquids.
 ② 3M MV018-R/S (#22...18 AWG) or 3M MVU14-6R/S (#16...14 AWG)

Pilot Devices


D7

Discount Schedule B-1

H79







Approximate Dimensions – millimeters ①

Panel Hole Spacing

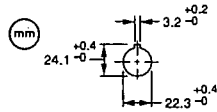

	40	50	40	50	40/60	50/60		60/90	70	50	40
	30		48		40/60				30	50	50

Pilot Devices
D7

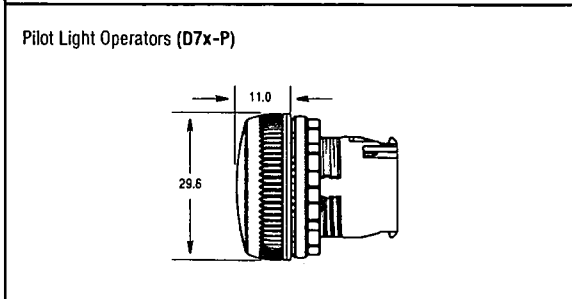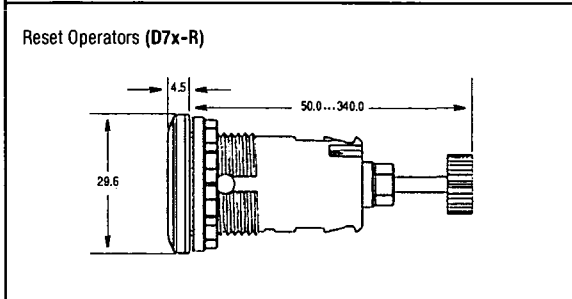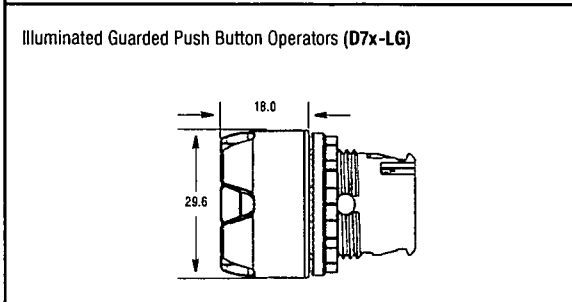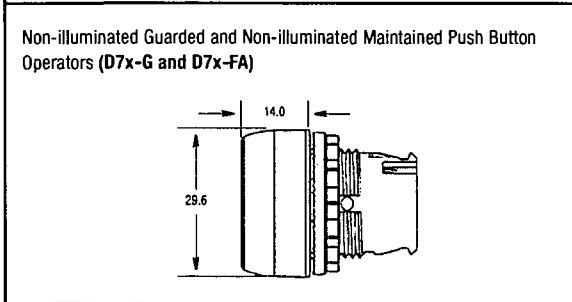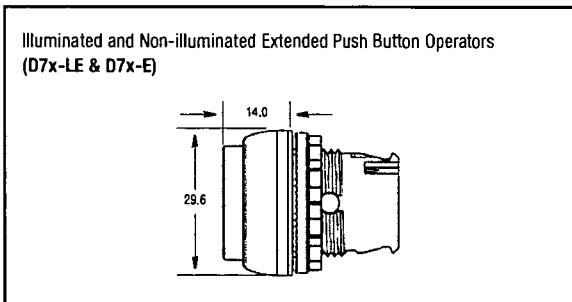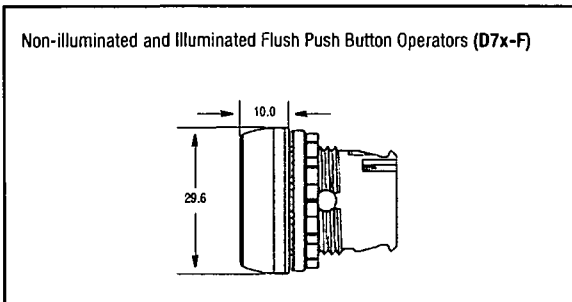

① Dimensions are not intended to be used for manufacturing purposes.

Approximate Dimensions – millimeters ①

Illuminated and Non-illuminated Momentary Mushroom Operators 40mm and 60mm (D7x-LMM & D7x-MM)

Operator	A
40mm	39.8
60mm	59.8

Non-illuminated 3-Position Multi-Function Operators (D7x-U3)

Illuminated and Non-illuminated 2-Position Multi-Function Operators (D7x-LU2 & D7x-U2)

Back-of-Panel Components — Incandescent Module with Latch (D7-DOC & D7-ALP/M)

Back-of-Panel Components — LED Module with Latch (D7-N/Q & D7-ALP/M)

Illuminated and Non-illuminated Knob Selector Switch Operators (D7x-LS & D7x-S)

Illuminated and Non-illuminated Push-Pull Mushroom Operators 30mm, 40mm, and 60mm (D7x-MP)

Operator	A
30mm	30
40mm	40
60mm	60

Mushroom Key Release Operator 40mm (D7x-MK)

Back-of-Panel Components — Contact Cartridges with Latch (D7-X/Q + D7-ALP/M)

Back-of-Panel Components — Dual Circuit Contact Block (Max. of 1 Deep) (D7x-X_D/D7-X01S)

Non-illuminated Knob Lever Selector Switch Operators (D7x-H)

Illuminated and Non-illuminated Twist-to-Release Operators 30mm, 40mm, and 60mm (D7x-MT)

Operator	A
30mm	30
40mm	40
60mm	60

Key Selector Switch Operators (D7x-K)

30 x 40mm Snap-in-Legend Plate (D7-11)

30 x 50mm Snap-in-Legend Plate (D7-12)

Pilot Devices
D7
















① Dimensions are not intended to be used for manufacturing purposes.

Approximate Dimensions – millimeters ①②












Pilot Devices

D7

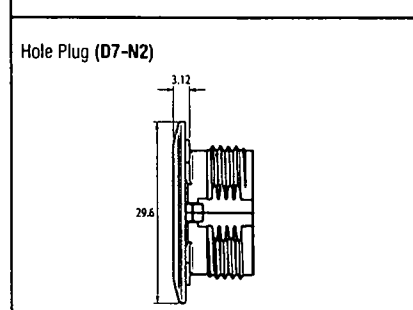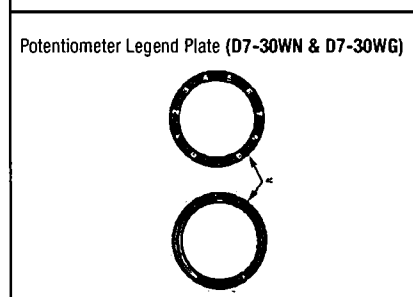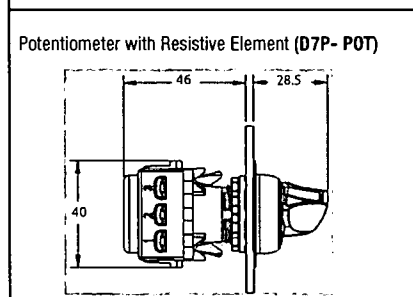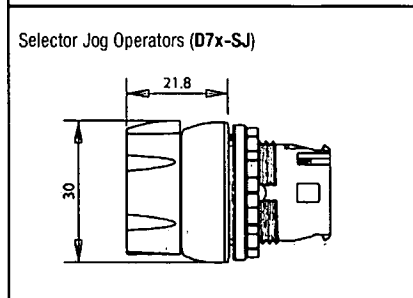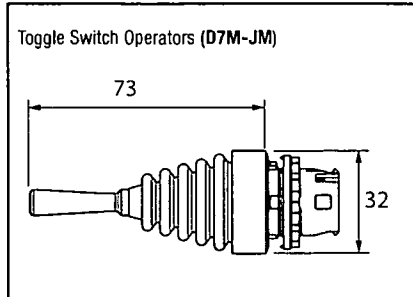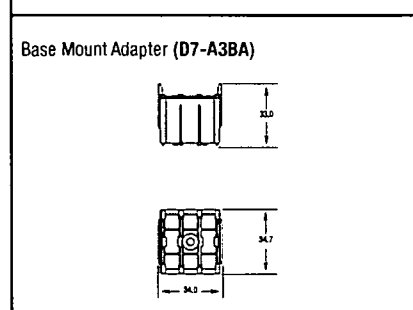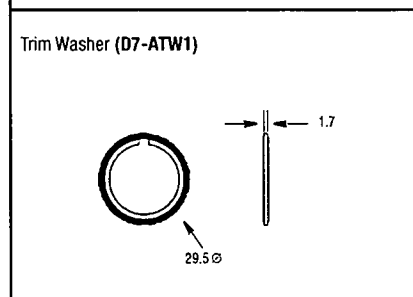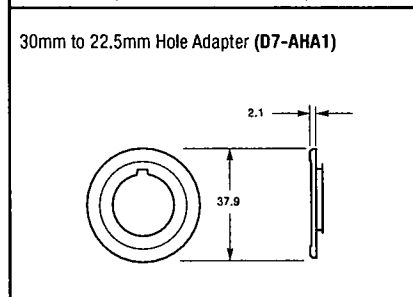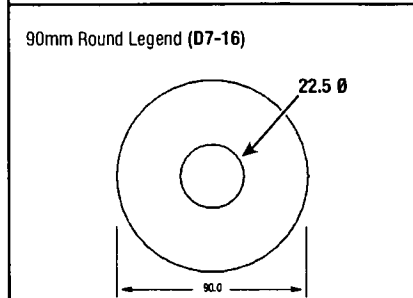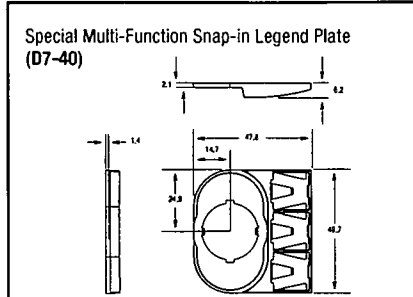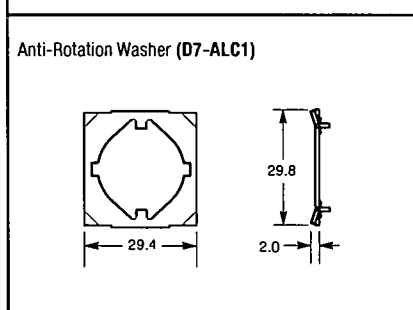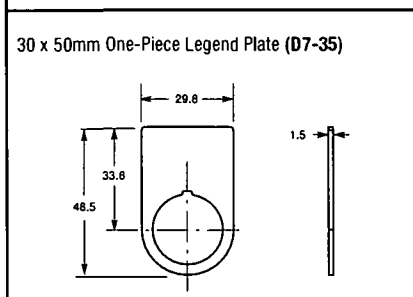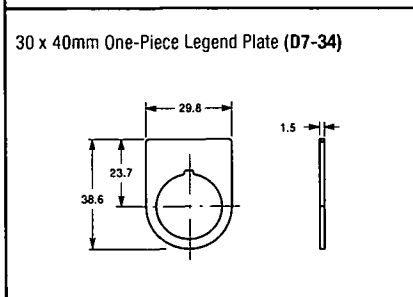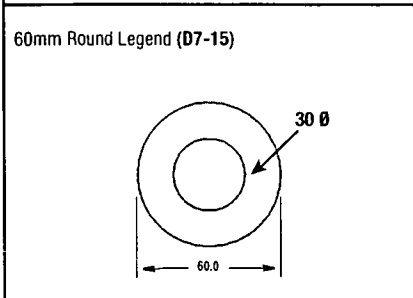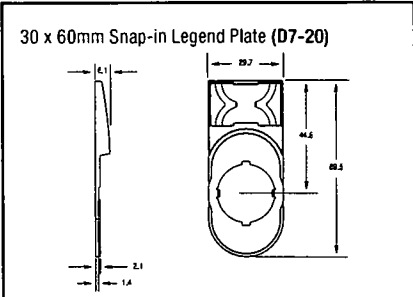

① Dimensions are not intended to be used for manufacturing purposes.
 ② Panel thickness range is 1.0...6.0 maximum. Panel thickness reduced to 4.5 when optional legend plates are used.


Approximate Dimensions – millimeters ①

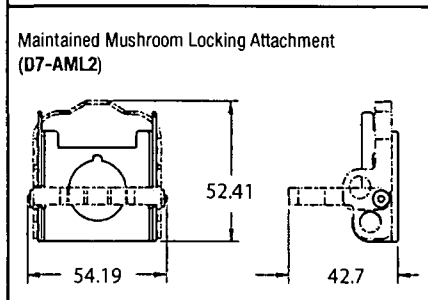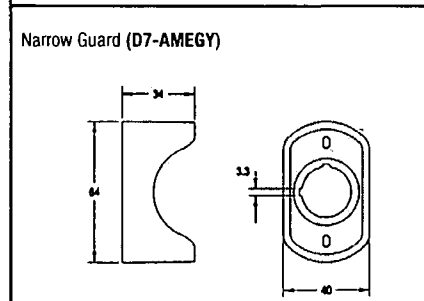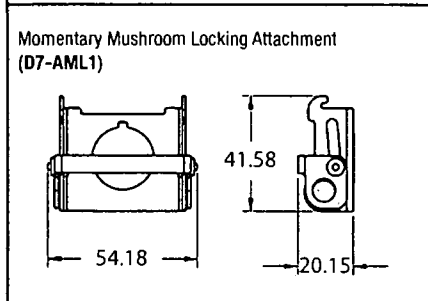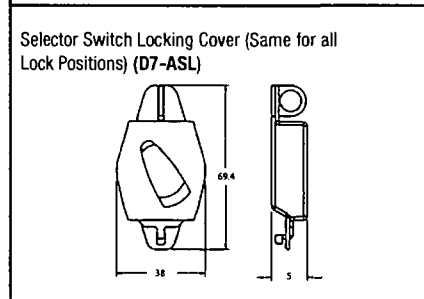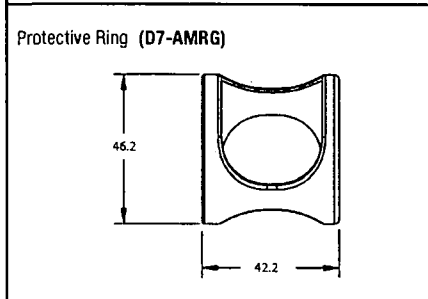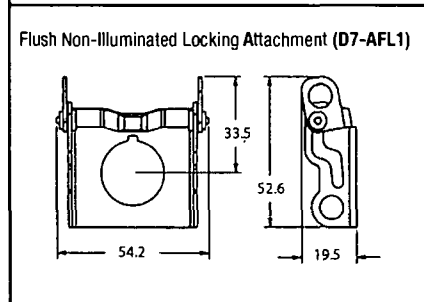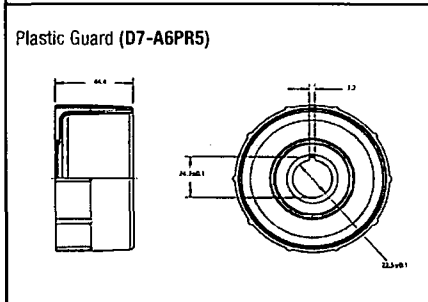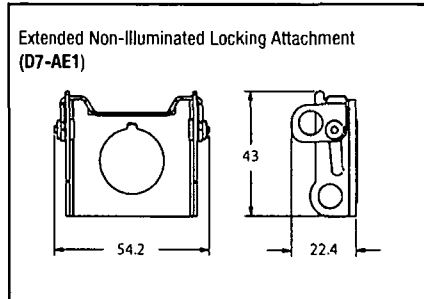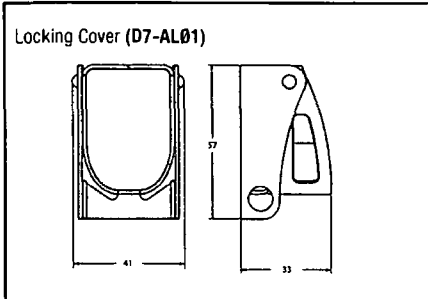

① Dimensions are not intended to be used for manufacturing purposes.

Pilot Devices
D7

Approximate Dimensions – millimeters ①

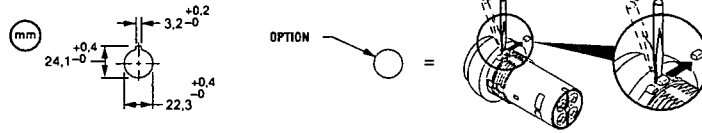

(A)						
(A)						
(B)						
	30	40	50	40	50	60, 90
	30		40			60/90
	30		40			60/90


Pilot Devices
D7

<p>2-Position Push-Pull/Twist-to-Release Mushroom Devices (D7D-MT)</p>	<p>Pilot Light Devices (D7D-P)</p>
<p>Momentary Pushbutton Device - Flush (D7D-F)</p>	<p>Momentary Pushbutton Device - Extended (D7D-E)</p>
<p>2 & 3 Position Selector Switch Devices (D7D-S)</p>	

H84


Discount Schedule B-1

Approximate Dimensions – millimeters ①

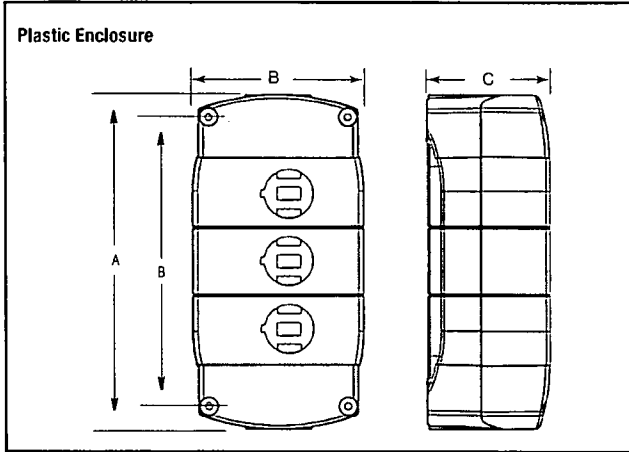


Type - 4/4X/13 (IP66) - Plastic Enclosures					
Cat. No.	No. of Units (Holes)	A	B	C	Knockout/Conduit Openings
D7-1PP (1YP)	1	85 (3-11/32)	89 (3-1/2)	58 (2-9/32)	PG11 PG16
D7-2PP	2	124 (4-7/8)	79 (3-1/8)	58 (2-9/32)	PG11 PG16
D7-3PP	3	155 (6-3/32)	79 (3-1/8)	58 (2-9/32)	PG11 PG16
D7-4PP	4	186 (7-5/16)	79 (3-1/8)	58 (2-9/32)	PG11 PG16
D7-6PP	6	248 (9-3/4)	87 (3-7/16)	64 (2-17/32)	PG16

Pilot Devices
D7

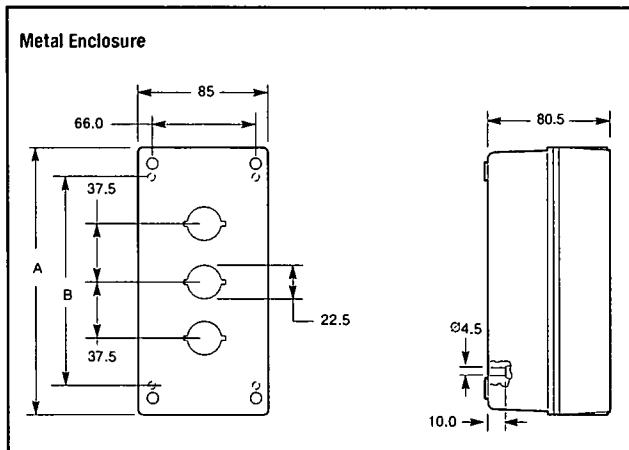

Type 4/13 (IP66) - Metal Enclosures				
Cat. No.	No. of Units (Holes)	A	B	Knockout/Conduit Openings
D7-1MP (1MY)	1	99 (3-9/32)	62 (2-7/16)	PG11 PG16
D7-2MP	2	137 (5-13/32)	100 (3-15/16)	PG11 PG16
D7-3MP	3	174 (6-27/32)	137 (5-13/32)	PG11 PG16
D7-5MP	5	249 (9-13/32)	212 (8-11/32)	PG16

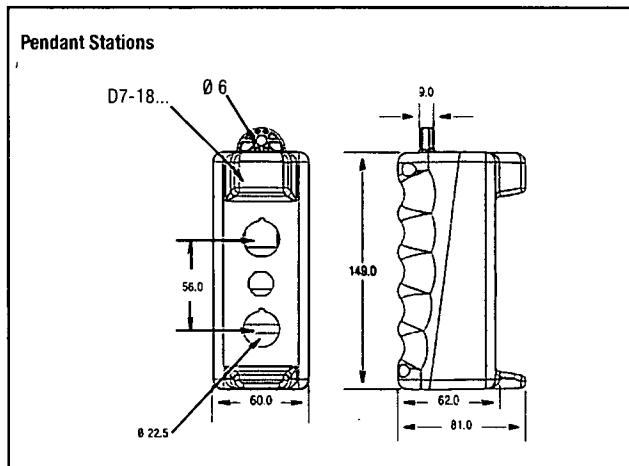


① Dimensions are not intended to be used for manufacturing purposes.

anasonic
ideas for life

**DIN HALF SIZE
HOUR METER**

**TH63·TH64
Hour Meters**

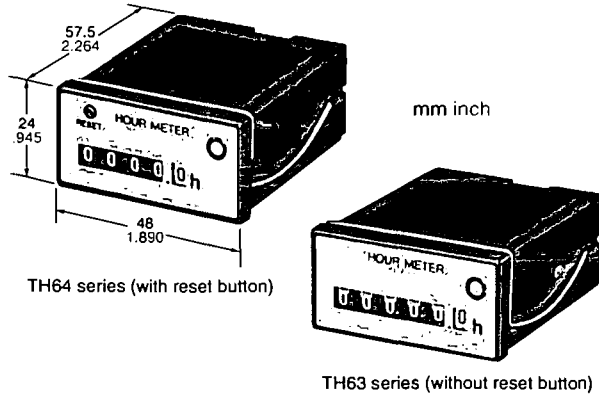

UL File No.: E42876
CSA File No.: LR39291



2. Reset button

The hour meters can be reset to zero (TH64 series).

3. Wide-ranging measurement display

The measurement can be displayed from 0.1 hour up to 99999.9 hours (TH63 series). The dial size is the same as that of 48 × 48 DIN size hour meters (TH14 and TH24 series).

4. Easy to install

The flat terminals (#187) are used for easier wiring. There is no need to undo the lock spring.

5. High-performance sync motor with 50/60 Hz selector

The noise-resistant, accurately turning motor is employed to provide for longer period of measurement. The power frequency can be selected for 50 or 60 Hz.

6. Rotary indicator

The rotary indicator makes one turn every 72 seconds for monitoring.

7. Compliant with UL, CSA and CE.

RoHS Directive compatibility information
<http://www.nais-e.com/>

Features

1. Compact to save panel space

The 24 × 48 mm hour meters are just half the DIN 48 × 48 standard size. They help save the panel space.

Typical applications

Management of small generators and food processing machines; hour counting for leased equipment; maintenance management of various equipment, etc.

Specifications

Rated operating voltage	12 V AC, 24 V AC, 48 V AC, 100 V AC, 110 V AC, 115 to 120 V AC, 200 V AC, 220 V AC, 240 V AC	
Allowable operating voltage range	85 to 115% of rated operating voltage	
Rated frequency	50/60 Hz (selectable by switch)	
Counting range	0 to 99999.9 hours (TH63 series) 0 to 9999.9 hours (TH64 series)	
Minimum time display	0.1 hours (6 min)	
Rated power consumption	Approx. 1.5 W	
Insulation resistance (Initial value)	Min. 100 MΩ, Between live and dead metal parts (At 500 V DC)	
kdown voltage (Initial value)	2,000 Vrms, Between live and dead metal parts	
temperature rise	55°C 131°F	
Vibration resistance	Functional	10 to 55 Hz: 1 cycle/min double amplitude of 0.5 mm (10 min on 3 axes)
Shock resistance	Functional	Min 98 m/s ² (10 G) (4 times on 3 axes)
	Destructive	Min 980 m/s ² (100 G) (5 times on 3 axes)
Ambient temperature	-10 to +50°C +14 to +122°F	
Ambient humidity	Max. 85% RH (non-condensing)	
Weight	Approx. 80 g 2.82 oz	

Product types

Type	Operating voltage	Part number	Operating voltage	Part number	Operating voltage	Part number
TH63 series (without reset button)	100V AC	TH631	24V AC	TH634	115 to 120V AC	TH637
	200V AC	TH632	48V AC	TH635	220V AC	TH638
	12V AC	TH633	110V AC	TH636	240V AC	TH639
TH64 series (with reset button)	100V AC	TH641	24V AC	TH644	115 to 120V AC	TH647
	200V AC	TH642	48V AC	TH645	220V AC	TH648
	12V AC	TH643	110V AC	TH646	240V AC	TH649


Notes) 1. Only the metallic-looking (silver) panel mounting type is available.
2. Standard products are UL-recognized as well as CSA-certified. There is no need to add "U" at the end of the part number. Just specify the standard part number when ordering.

Applicable standard

Safety standard	EN61010-1	Pollution Degree 2/Overvoltage Category II
EMC	(EMI)EN61000-6-4 Radiation interference electric field strength Noise terminal voltage (EMS)EN61000-6-2 Static discharge immunity	EN55011 Group1 ClassA EN55011 Group1 ClassA
	RF electromagnetic field immunity EFT/B immunity Surge immunity Conductivity noise immunity Power frequency magnetic field immunity Voltage dip/instantaneous stop/Voltage fluctuation immunity	EN61000-4-2 4 kV contact 8 kV air EN61000-4-3 10 V/m AM modulation (80 MHz to 1 GHz) 10 V/m pulse modulation (895 MHz to 905 MHz) EN61000-4-4 2 kV (power supply line) EN61000-4-5 1 kV (power line) EN61000-4-6 10 V/m AM modulation (0.15 MHz to 80 MHz) EN61000-4-8 30 A/m (50 Hz) EN61000-4-11 10 ms, 30% (rated voltage) 100 ms, 60% (rated voltage) 1,000 ms, 60% (rated voltage) 5,000 ms, 95% (rated voltage)

Dimensions




mm inch
General tolerance: ±0.5 ±.020

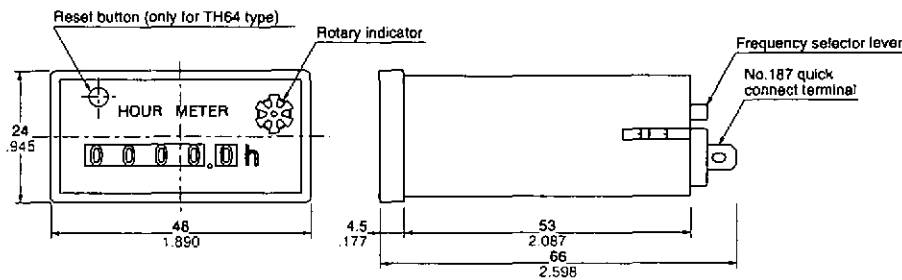

Wiring diagram

mm inch


• Panel cutout dimensions

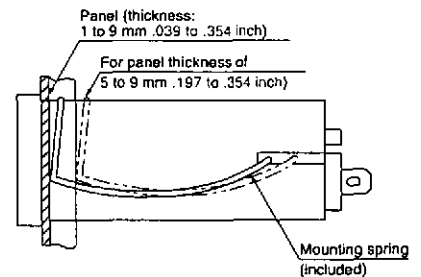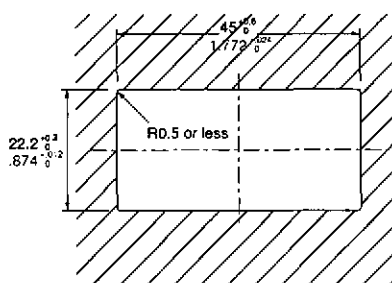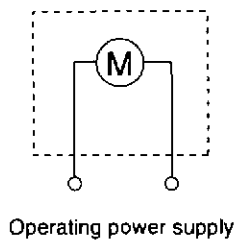

Mounting

1. Cut a 22.2^{+0.3} × 45^{+0.6} mm (.874^{+0.12} × 1.772^{+0.24} inch) opening in the panel.
2. Swing the mounting spring to the rear of the hour meter and fit the hour meter into the panel opening. (There is no need to detach the mounting spring from the hour meter.) If the panel is 5 to 9 mm .197 to .354 inch thick, move the mounting spring to the other hole toward the rear of the hour meter.

3. Swing the mounting spring to the front of the hour meter to secure the hour meter to the panel.
4. Wire the supplied quick connectors and connect to the hour meter. Be sure to use the supplied insulating sleeves to cover the connectors.

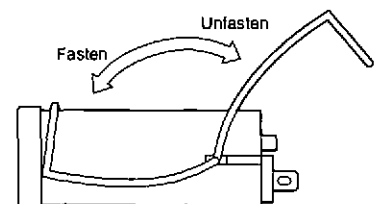


PRECAUTIONS IN USING THE HOUR METERS

1. Frequency setting

Frequency is specified for AC motor-driven hour meters. Before installing, be sure to check your local power frequency.


2. Connections

- TH13,23,14,24,40,50,63,64

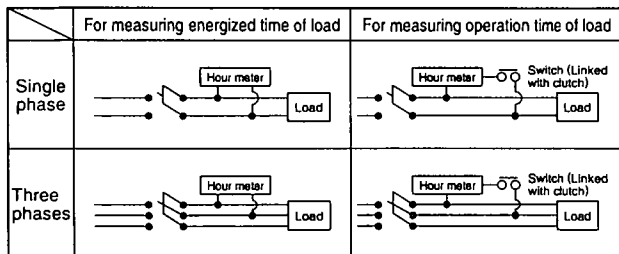

Note) Make the connection with the accompanying flat connector first and then with the hour meter's terminal (#187). In such case, be sure to cover the connection with the accompanying insulating sleeve.

- TH70, TH8

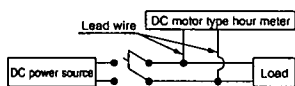

Note) Solder the lead wires in position.

3. Safety precautions

Do not use the hour meters in the following places.

- Where ambient temperature is below -10° or above $+50^{\circ}\text{C}$
- In wet, dusty or gaseous environments
- Where exposed to vibrations and shocks
- Outdoors, or where exposed to rain or direct sunlight

4. Compliant with CE.

- LH2H

Ambient conditions:

Overvoltage category III, contamination factor 2, indoor use.
Ambient temperature and humidity -10 and $+55^{\circ}\text{C}$ and 35% to 85%RH respectively.

- TH13, 23, 14, 24, 40, 50, 63, 64

Ambient conditions:

Overvoltage category II, contamination factor 2, indoor use.
Ambient temperature and humidity -10 and $+50^{\circ}\text{C}$ and below 85%RH respectively.

5. Reset-type hour meter

- Precautions for use

If the number indications are off before use, press the reset button and confirm that all zeroes ("0") are displayed.

- Resetting caution

Exercise due caution as an insufficient amount of pressure on the reset button may result in abnormal readings.

6. Acquisition of CE marking

Please abide by the conditions below when using in applications that comply with EN 61010-1/IEC 61010-1

1) Ambient conditions

- Overvoltage category II, pollution level 2
- Indoor use
- Acceptable temperature and humidity range: -10 to $+55^{\circ}\text{C}$, 35 to 85%RH (with no condensation at 20°C)
- Under 2000 m elevation

2) Use the main unit in a location that matches the following conditions.

- There is minimal dust and no corrosive gas.
- There is no combustible or explosive gas.
- There is no mechanical vibration or impacts.
- There is no exposure to direct sunlight.
- Located away from large-volume electromagnetic switches and power lines with large electrical currents.

3) Connect a breaker that conforms to EN60947-1 or EN60947-3 to the voltage input section.

4) Applied voltage should be protected with an overcurrent protection device (example: T 1A, 250 V AC time lag fuse) that conforms to the EN/IEC standards. (Free voltage input type)





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113


PRESSURE TRANSMITTER & ADJUSTMENT UNIT

1. VEGABAR74 PRESSURE TRANSMITTER
TECHNICAL DETAILS
2. VEGADIS PRESSURE ADJUSTMENT UNIT
TECHNICAL DETAILS

Pressure measurement

Process pressure/Hydrostatic

VEGABAR 74
VEGABAR 75

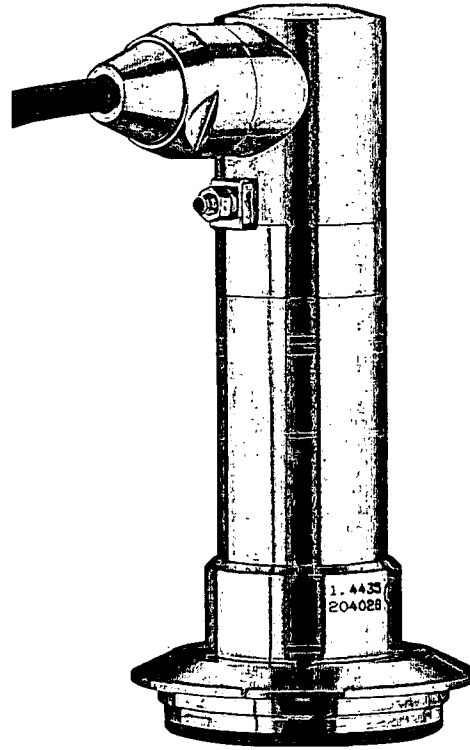

Product Information



VEGA

Content

1	Description of the measuring principle	3
2	Type overview	4
3	Mounting Instructions	5
4	Electrical connection	
4.1	General prerequisites	6
4.2	Voltage supply	6
4.3	Connection cable	6
4.4	Cable screening and grounding	6
4.5	Wiring plan VEGABAR 74, 75	6
5	Operation	
5.1	Overview	7
5.2	Adjustment with VEGADIS 12	7
5.3	Adjustment with PACTware™	7
5.4	Adjustment with other adjustment programs	7
6	Technical data	8
7	Dimensions	12
8	Product code	15

Take note of safety instructions for Ex applications



Please note the Ex specific safety information which you can find on our homepage www.vega.com/services/downloads and which comes with every instrument. In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units. The sensors must only be operated on intrinsically safe circuits. The permissible electrical values are stated in the certificate.

29729-EN-07120

1 Description of the measuring principle

Measuring principle

VEGABAR 74 and 75 pressure transmitters are specially adapted to their respective application areas. That is why different sensor elements and measuring units are implemented.

VEGABAR 74

The sensor element of VEGABAR 74 is the dry ceramic-capacitive CERTEC® measuring cell. Base element and diaphragm consist of high purity sapphire-ceramic®.

The process pressure causes via the diaphragm a change in an electrical parameter of the measuring cell. This change is converted into an appropriate output signal.

The CERTEC® measuring cell is also equipped with a temperature sensor. The temperature value can be displayed via the indicating and adjustment module or processed via the signal output.

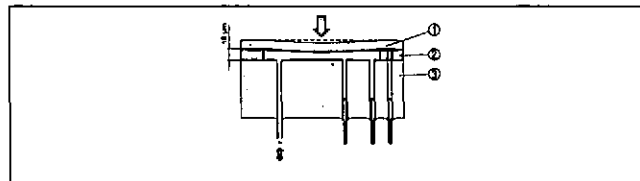


Fig. 1: Configuration of the CERTEC® measuring cell in VEGABAR 74

- 1 Diaphragm
- 2 Soldered glass bond
- 3 Base element

The advantages of the CERTEC® measuring cell are:

- Very high overload resistance
- No hysteresis
- Excellent long-term stability
- Completely front flush installation
- Good corrosion resistance
- Very high abrasion resistance

VEGABAR 75

The METEC® measuring cell is the measuring unit of VEGABAR 75. This unit consists of a CERTEC® measuring cell and a special isolating system with metallic process diaphragm. A special feature of this isolating system is the direct mechanical compensation of temperature influence.

The process pressure causes via the diaphragm a change in an electrical parameter of the measuring cell. This change is converted into an appropriate output signal.

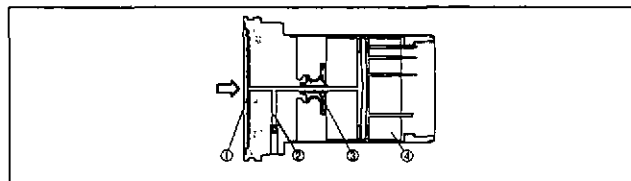


Fig. 2: Configuration of the METEC® measuring cell in VEGABAR 75

- 1 Diaphragm Hastelloy C276
- 2 Isolating liquid (approx. 0.3 cm³, FDA-listed)
- 3 FeNi adapter
- 4 CERTEC® measuring cell

The advantages of the METEC® measuring cell are:

- Completely welded, elastomer-free
- Very high overload resistance
- Full vacuum resistance (also with 0.1 bar measuring range)
- Good thermo-shock reaction
- Excellent long-term stability
- High degree of flushness

Wide application range

VEGABAR 74 and 75 transmitters are designed for front flush process pressure measurement of gases, vapours and liquids. Their application-optimised housings in IP 68 and high resistance materials ensure reliable use even in harsh environments and in extremely moist areas. Thanks to their compact configuration with completely integrated electronics, the instruments can be connected directly to the respective signal processing equipment.

VEGABAR 74 is best suited for use in abrasive media in the paper industry or in waste water treatment.

VEGABAR 75 with its hygienic fittings is particularly suitable for the food processing and pharmaceutical industries.



Information:

Continuative documentation such as operating instructions manuals:

- 28432 - VEGABAR 74
- 28433 - VEGABAR 75

2 Type overview

VEGABAR 74



VEGABAR 75



Measuring cell:	CERTEC®	METEC®
Diaphragm:	Ceramic	Metal
Media:	gas, vapours and liquids, also abrasive	gases, vapours and liquids also with higher temperatures
Process fitting:	Thread from 1½", flanges from DN 40, fittings for the food processing and paper industry	Thread from 1½", flanges from DN 40, fittings for the food processing industry
Material:	316L	316L
Measuring range:	-1 ... 60 bar (-14.5 ... 870 psi)	-1 ... 25 bar (-14.5 ... 363 psi)
Smallest measuring range:	0.1 bar (1.45 psi)	0.1 bar (1.45 psi)
Process temperature:	-40 ... +120 °C (-40 ... +248 °F)	-12 ... +200 °C (-40 ... +392 °F)
Deviation in characteristics:	< 0.075 %	< 0.075 %
Signal output:	4 ... 20 mA/HART	4 ... 20 mA/HART
Remote adjustment/ indication:	VEGADIS 12	VEGADIS 12

3 Mounting instructions

Installation position

VEGABAR functions in any installation position. Depending on the measuring system, the installation position can influence the measurement. This can be compensated by a position correction.



Information:

We recommend using parts from the line of VEGA mounting accessories.

4 Electrical connection

4.1 General prerequisites

The supply voltage range can differ depending on the instrument version. You can find exact specifications in chapter "Technical data".

The national installation standards as well as the valid safety regulations and accident prevention rules must be observed.



In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units.

4.2 Voltage supply

Supply voltage and current signal are carried on the same two-wire cable. The requirements on the power supply are specified in chapter "Technical data".

The VEGA power supply units VEGATRENN 149AEx, VEGAS-TAB 690, VEGADIS 371 as well as VEGAMET signal conditioning instruments are suitable for power supply. When one of these instruments is used, a reliable separation of the supply circuits from the mains circuits according to DIN VDE 0106 part 101 is ensured.

4.3 Connection cable

Generally

The sensors are connected with standard cable without screen. An outer cable diameter of 5 ... 9 mm ensures the seal effect of the cable entry.

4 ... 20 mA/HART two-wire and four-wire

If electromagnetic interference is expected which is above the test values of EN 61326 for industrial areas, screened cable should be used. In HART multidrop mode the use of screened cable is generally recommended.



In Ex applications, the corresponding installation regulations must be noted for the connection cable.

4.4 Cable screening and grounding

If screened cable is necessary, the cable screen must be connected on both ends to ground potential. If potential equalisation currents are expected, the connection on the evaluation side must be made via a ceramic capacitor (e.g. 1 nF, 1500 V).

4.5 Wiring plan VEGABAR 74, 75

Direct connection

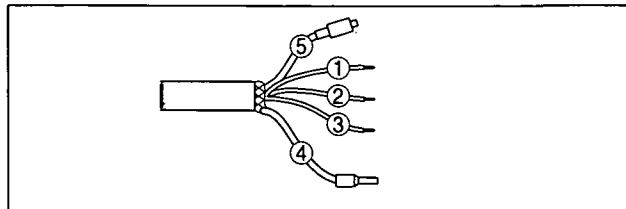


Fig. 3: Wire assignment, connection cable

- 1 brown (+): to power supply or to the processing system
- 2 blue (-): to power supply or to the processing system
- 3 yellow: is only required with VEGADIS 12, otherwise connect to minus
- 4 Screen
- 5 Breather capillaries with filter element

Connection via VEGABOX 02

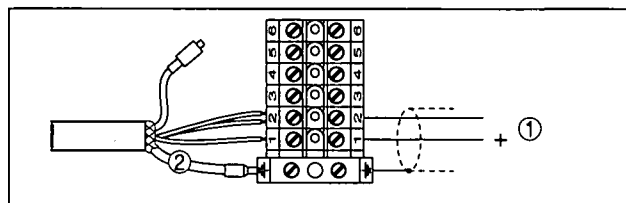


Fig. 4: Terminal assignment VEGABAR

- 1 To power supply or the processing system
- 2 Screen

Connection via VEGADIS 12

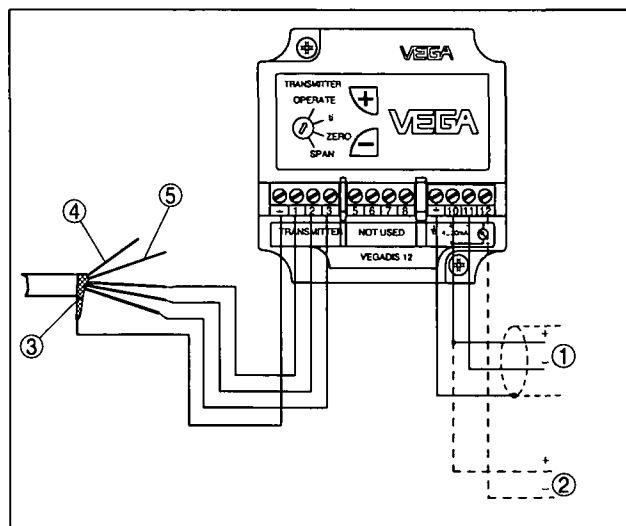


Fig. 5: Terminal assignment, VEGADIS 12

- 1 To power supply or the processing system
- 2 Control instrument (4 ... 20 mA measurement)
- 3 Screen
- 4 Breather capillaries
- 5 Suspension cable

29729-EN-07121

5 Operation

5.1 Overview

VEGABAR 74 and 75 can be adjusted with the following adjustment media:

- Indication/Adjustment VEGADIS 12
- Adjustment software according to FDT/DTM standard, e.g. PACTware™ and PC
- HART handheld

5.2 Adjustment with VEGADIS 12

VEGADIS 12

VEGADIS 12 is connected directly to the connection or suspension cable of VEGABAR or VEGAWELL. It is looped into the supply and signal circuit and requires no separate external energy.

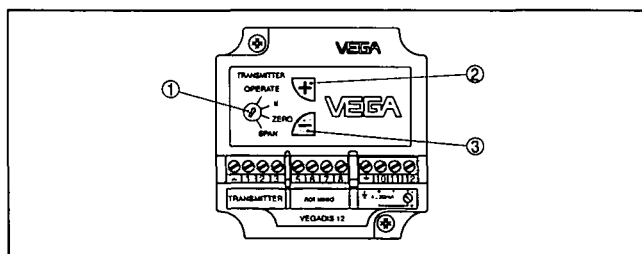


Fig. 6: Adjustment elements of VEGADIS 12

- 1 Rotary switch: choose the requested function
- 2 [+] key change value
- 3 [-] key change value

5.3 Adjustment with PACTware™

PACTware™/DTM

VEGABAR 74 and 75 sensors are adjusted via the signal cable by means of PACTware™.

An instrument driver for the respective VEGABAR is necessary for the adjustment with PACTware™.

All currently available VEGA DTMs are provided as DTM Collection with the current PACTware™ version on CD. They are available from the responsible VEGA agency for a token fee. The basic version of this DTM Collection incl. PACTware™ is available as a free-of-charge download from the Internet.

To use the entire range of functions of a DTM, incl. project documentation, a DTM licence is required for that particular instrument family, e.g. VEGABAR. This licence can be bought from the VEGA agency serving you.

Connection of the PC via VEGACONNECT 3

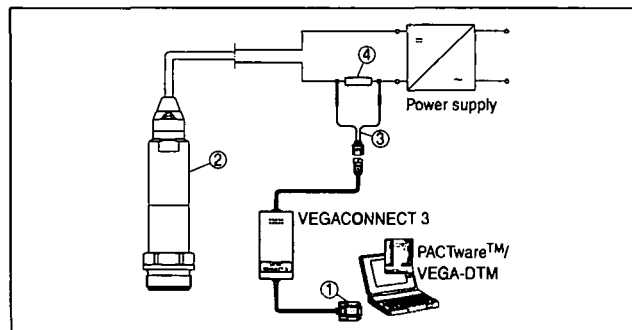


Fig. 7: Connecting the PC to the signal cable

- 1 RS232 connection (with VEGACONNECT 3) or USB connection (with VEGACONNECT 4)
- 2 VEGABAR
- 3 HART adapter cable
- 4 HART resistor 250 Ω

Connection of the PC via VEGACONNECT 4

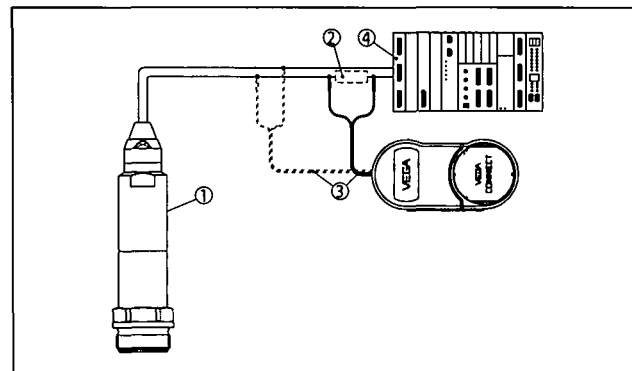


Fig. 8: Connecting the PC via HART to the signal cable

- 1 VEGABAR
- 2 HART resistor 250 Ω (optional depending on processing)
- 3 Connection cable with 2 mm pins and terminals
- 4 Processing system/PLC/Voltage supply

5.4 Adjustment with other adjustment programs

PDM

For VEGA PA sensors, instrument descriptions for the adjustment program PDM are available as EDD. The instrument descriptions are already implemented in the current version of PDM. For older versions of PDM, a free-of-charge download is available via Internet.

AMS

For VEGA FF sensors, instrument descriptions for the adjustment program AMS™ are available as DD. The instrument descriptions are already implemented in the current version of AMS™. For older versions of AMS™, a free-of-charge download is available via Internet.

729-EN-071203

6 Technical data

General data

Material 316L corresponds to 1.4404 or 1.4435

VEGABAR 74

Materials, wetted parts

- Process fitting
- Diaphragm
- Seal
- Seal process fitting thread G½ A, G1½ A

316L
sapphire ceramic® (99.9 % oxide ceramic)
FKM (Viton), Kalrez 6375, EPDM, Chemraz 535
Klingsil C-4400

VEGABAR 75

Materials, wetted parts

- Process fitting
 - Process diaphragm
- Materials, non-wetted parts
- Isolating liquid

316L
Hastelloy C276

med. white oil, FDA listed (silicone-free)

Common data

Materials, non-wetted parts

- Housing
 - Ground terminal
 - Connection cable
 - type label support on cable
- Weight

316L
316Ti/316L
PUR, FEP, PE
PE-HART
0.8 ... 8 kg (1.764 ... 17.64 lbs), depending on process fitting

Output variable

Output signal	4 ... 20 mA/HART
Failure signal	22 mA (3.6 mA), adjustable
Max. output current	22.5 mA
Damping (63 % of the input variable)	0 ... 10 s, adjustable
Step response or adjustment time	70 ms (ti: 0 s, 0 ... 63 %)
Fulfilled NAMUR recommendations	NE 43

Additional output variable - temperature (with VEGABAR 74)

Processing is made via HART-Multidrop

Range	-50 ... +150 °C (-58 ... +302 °F)
Resolution	1 °C (1.8 °F)
Accuracy	
- in the range of 0 ... +100 °C (+32 ... +212 °F)	±3 K
- in the range of -50 ... 0 °C (-58 ... +32 °F) and +100 ... +150 °C (+212 ... +302 °F)	typ. ±4 K

Input variable

Parameter	Level
Measuring range	see product code
Turn down	
- recommended	1 : 10
- Max.	1 : 30

Reference conditions and actuating variables (similar to DIN EN 60770-1)

Reference conditions according to DIN EN 61298-1

- Temperature	+18 ... +30 °C (+64 ... +86 °F)
- Relative humidity	45 ... 75 %
- Air pressure	860 ... 1060 mbar/86 ... 106 kPa (12.5 ... 15.4 psi)
Determination of characteristics	limit point adjustment according to DIN 16086
Characteristics	linear
Calibration position	upright, diaphragm points downward

Deviation determined according to the limit point method according to IEC 60770¹⁾

Applies to **digital** HART interface as well as to **analogue** current output 4 ... 20 mA. Specifications refer to the set span. Turn down (TD) = nominal measuring range/set span.

Deviation

- Turn down 1 : 1 up to 5 : 1 < 0.075 %
- Turn down > 10 : 1 < 0.015 % x TD

Deviation with absolutely flush process fittings EV, FT

- Turn down 1 : 1 up to 5 : 1 < 0.05 %
- Turn down > 10 : 1 < 0.01 % x TD

Deviation with absolute pressure measuring range 0.1 bar

- Turn down 1 : 1 up to 5 : 1 < 0.25 % x TD
- Turn down > 10 : 1 < 0.05 % x TD

Influence of the product or ambient temperature

Applies to **digital** HART interface as well as to **analogue** current output 4 ... 20 mA. Specifications refer to the set span. Turn down (TD) = nominal measuring range/set span.

Average temperature coefficient of the zero signal

In the compensated temperature range 0 ... +100 °C (212 °F), reference temperature 20 °C (68 °F).

Average temperature coefficient of the zero signal

- Turn down 1 : 1 < 0.05 %/10 K
- Turn down 1 : 1 up to 5 : 1 < 0.1 %/10 K
- Turn down up to 10 : 1 < 0.15 %/10 K

Outside the compensated temperature range

Average temperature coefficient of the zero signal

- Turn down 1 : 1 typ. < 0.05 %/10 K

Thermal change, current output

Applies also to the **analogue** 4 ... 20 mA current output and refers to the set span.

Thermal change, current output < 0.15 % at -40 ... +80 °C (-40 ... +176 °F)

Long-term stability (similar to DIN 16086, DINV 19259-1 and IEC 60770-1)

Applies to **digital** interfaces (HART, Profibus PA, Foundation Fieldbus) as well as for the **analogue** current output 4 ... 20 mA. Specifications refer to the set span. Turn down (TD) = nominal measuring range/set span.

Long-term drift of the zero signal < (0.1 % x TD)/1 year

Ambient conditions

Ambient, storage and transport temperature

- Connection cable PE -40 ... +60 °C (-40 ... +140 °F)
- Connection cable PUR, FEP -40 ... +85 °C (-40 ... +185 °F)

Process conditions**VEGABAR 74**

Product temperature depending on the measuring cell seal

- FKM (e.g. Viton) -20 ... +100 °C (-4 ... +212 °F)
- EPDM -40 ... +100 °C (-40 ... +212 °F), 1 h: 140 °C/284 °F cleaning temperature
- Kalrez 6375 (FFKM) -10 ... +100 °C (+14 ... +212 °F)
- Chemraz 535 -30 ... +100 °C (-22 ... +212 °F)

VEGABAR 75

Medium temperature (temperature: $p_{abs} > 1$ bar (14.5 psi)/ $p_{abs} < 1$ bar (14.5 psi))

- Standard -12 ... +150 °C/-12 ... +130 °C (+10 ... +302 °F/+10 ... +266 °F)
- with cooling element -12 ... +180 °C/-12 ... +130 °C (+10 ... +356 °F/+10 ... +266 °F)
- with cooling element and screening sheet -12 ... +200 °C/-12 ... +130 °C (+10 ... +392 °F/+10 ... +266 °F)

¹⁾ Incl. non-linearity, hysteresis and non-repeatability.

Common data

Vibration resistance	mechanical vibrations with 4 g and 5 ... 100 Hz ²⁾
Shock resistance	Acceleration 100 g/6 ms ³⁾

Electromechanical data

Connection cable	
- Configuration	four wires, one suspension cable, one breather capillary, screen braiding, metal foil, mantle
- Wire cross-section	0.5 mm ² (AWG no. 20)
- wire resistance	< 0.036 Ω/m (0.011 Ω/ft)
- Standard length	6 m (19.69 ft)
- max. length with VEGADIS 12	200 m (656.2 ft)
- Min. bending radius at 25 °C/77 °F	25 mm (0.985 in)
- Diameter approx.	8 mm (0.315 in)
- Colour - standard PE	Black
- Colour - standard PUR	Blue
- Colour - Ex-version	Blue

Voltage supply

Supply voltage	
- Non-Ex instrument	12 ... 36 V DC
- EEx-ia instrument	12 ... 29 V DC
Permissible residual ripple	
- < 100 Hz	U _{ss} < 1 V
- 100 Hz ... 10 kHz	U _{ss} < 10 mV
Load	see diagram

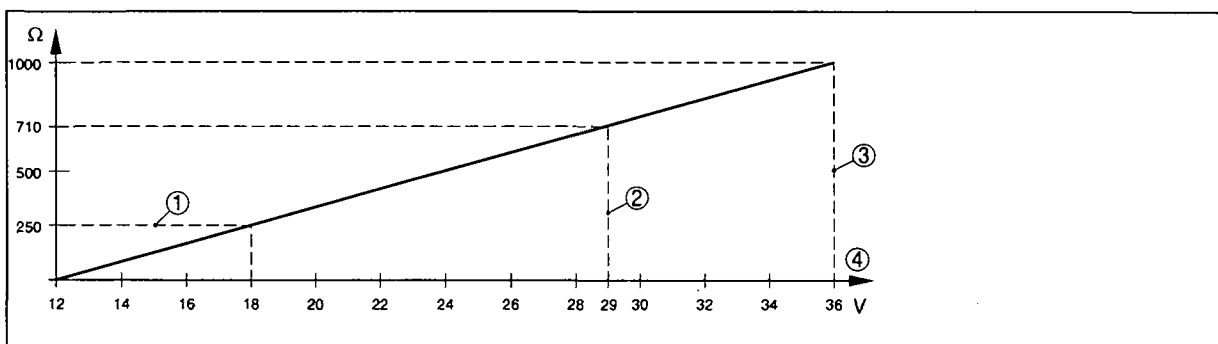


Fig. 9: Voltage diagram

- 1 HART load
 - 2 Voltage limit Ex instrument
 - 3 Voltage limit non-Ex instrument
 - 4 Supply voltage
- Load in conjunction with VEGADIS 12

see diagram

²⁾ Tested according to the regulations of German Lloyd, GL directive 2.
³⁾ Tested according to EN 60068-2-27.

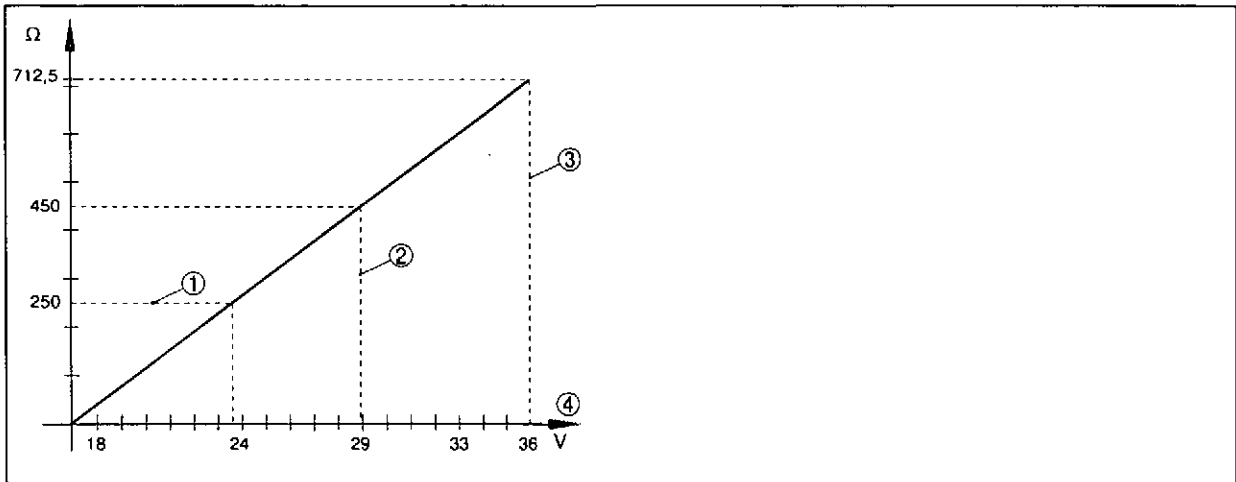


Fig. 10: Voltage diagram

- 1 HART load
- 2 Voltage limit Ex instrument
- 3 Voltage limit non-Ex instrument
- 4 Supply voltage

Electrical protective measures

Protection	IP 68 (25 bar)/IP 69K
Overvoltage category	III
Protection class	III

Approvals⁴⁾⁵⁾

ATEX ia	ATEX II 1G EEx ia IIC T6, ATEX II 2G EEx ia IIC T6
ATEX D	ATEX II 1/2D, 2D IP6X T
ATEX ia+D	ATEX II 1G EEx ia IIC T6, ATEX II 1/2D, 2D IP6X T
Ship approval	GL, LRS, ABS, CCS, RINA, DNV
Other approvals	WHG

CE conformity

EMC (89/336/EEG)	Emission EN 61326: 1997 (class B), susceptibility EN 61326: 1997/A1: 1998
LVD (73/23/EEG)	EN 61010-1: 2001

Environmental instructions

VEGA environment management system You can find detailed information under www.vega.com .	certified according to DIN EN ISO 14001
--	---

1729-EN-071203

⁴⁾ Deviating data in Ex applications: see separate safety Instructions.
⁵⁾ You can find detailed information under www.vega.com.

7 Dimensions

VEGABAR 74 - threaded fitting

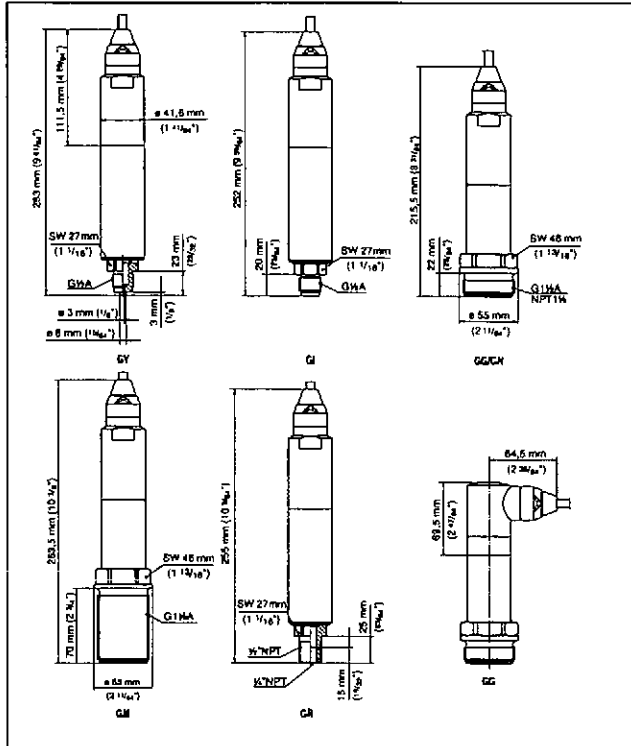


Fig. 11: VEGABAR 74 - threaded fitting: GV = G½ A manometer connection EN 837, GI = G½ A inner G½ A, GG = G1½ A, GN = 1½ NPT, GM = G1½ A 70 mm

VEGABAR 74 - hygienic fitting 1

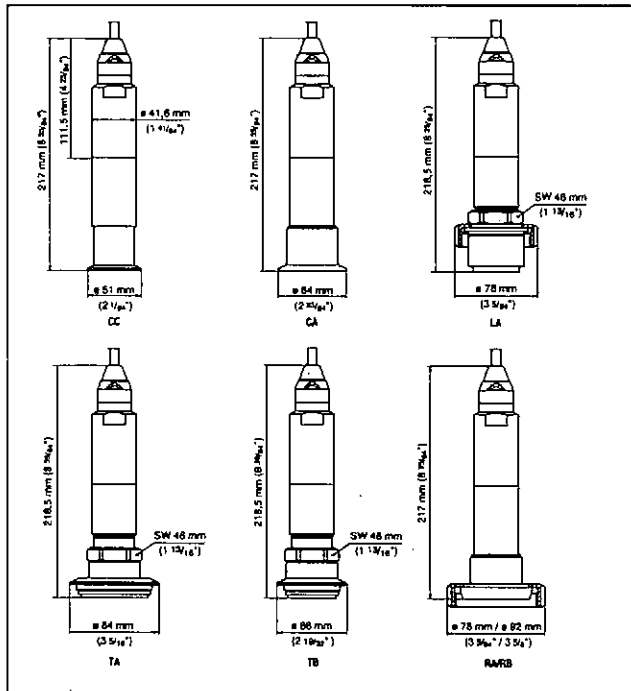


Fig. 12: VEGABAR 74 - hygienic fitting: CC = Tri-Clamp 1½", CA = Tri-Clamp 2", LA = hygienic fitting with compression nut F40, TA = Tuchenhagen Varivent DN 32, TB =

Tuchenhagen Varivent DN 25, RA/RB = bolting DN 40/DN 50 according to DIN 11851, KA = conus DN 40

VEGABAR 74 - hygienic fitting 2

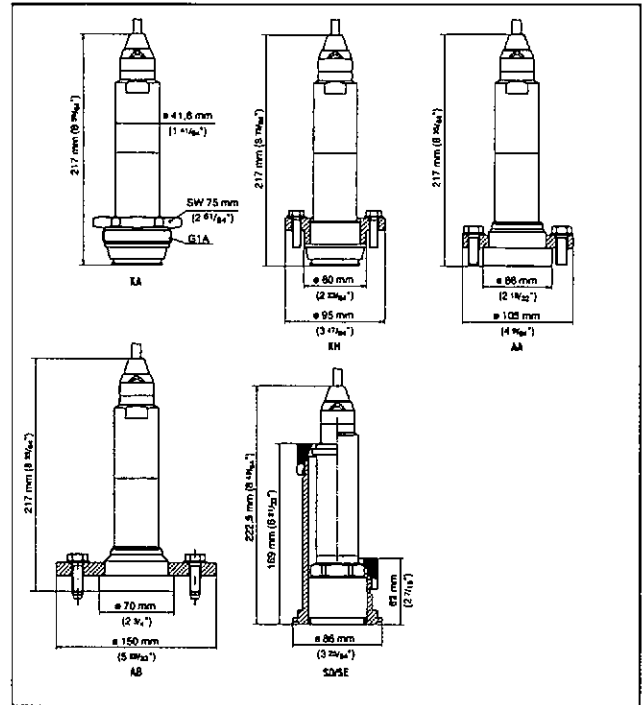


Fig. 13: VEGABAR 74 AA = DRD, KA = conus DN 40

VEGABAR 74 - flange fitting

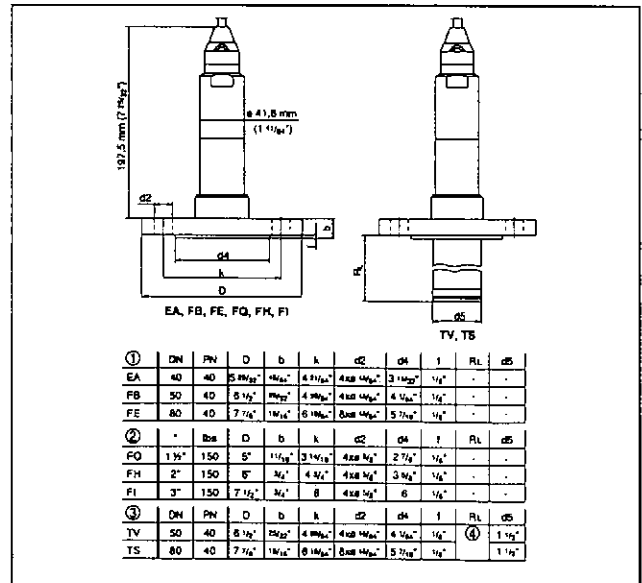


Fig. 14: VEGABAR 74 - flange fitting

- 1 Flange connection according to DIN 2501
- 2 Flange fitting according to ANSI B16.5
- 3 Flange with extension
- 4 Order-specific

VEGABAR 74 - threaded fitting for paper industry

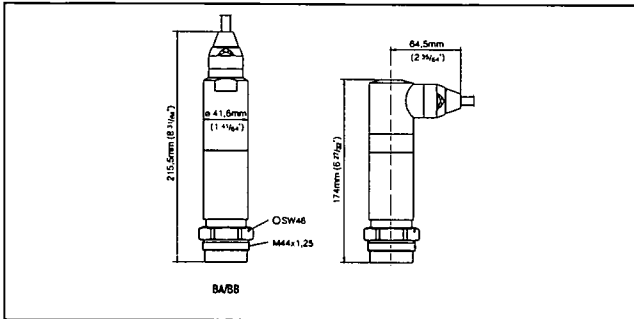


Fig. 15: VEGABAR - connection for paper industry: BA/BB = M44 x 1.25

VEGABAR 74 - extension fitting for paper industry

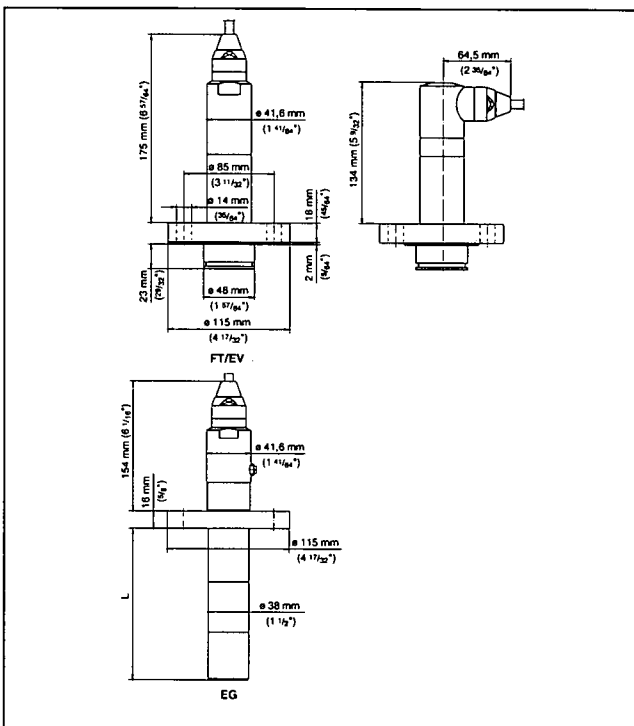


Fig. 16: VEGABAR - extension fitting for paper industry: EV/FT = absolutely flush for pulper (EV 2-times flattened), EG = extension for ball valve fitting (L = order-specific)

VEGABAR 75 - threaded fitting

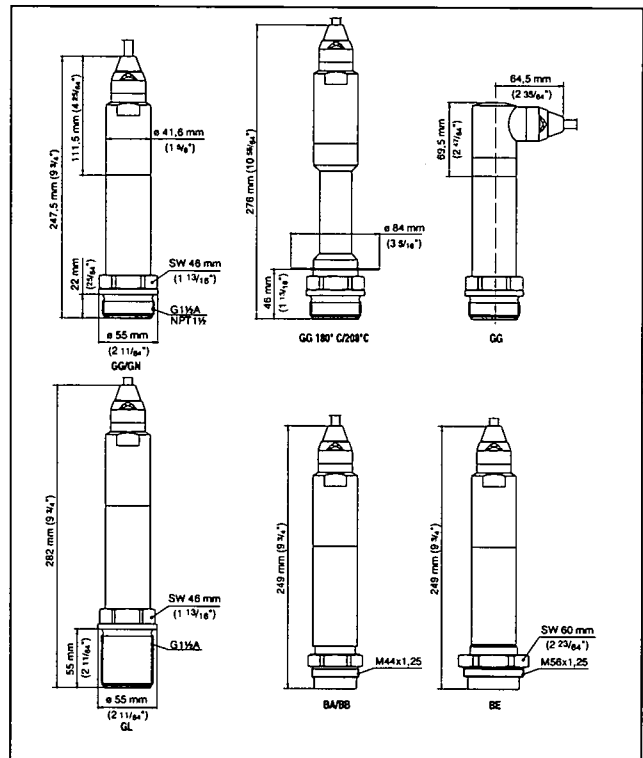


Fig. 17: VEGABAR - threaded fitting: GG = G1 1/2 A, GN = 1 1/2 NPT, GL = G1 1/2 A thread length 55 mm, BB = M44 x 1.25, BE = M56 x 1.25

1729-EN-071203

VEGABAR 75 - hygienic fitting 1

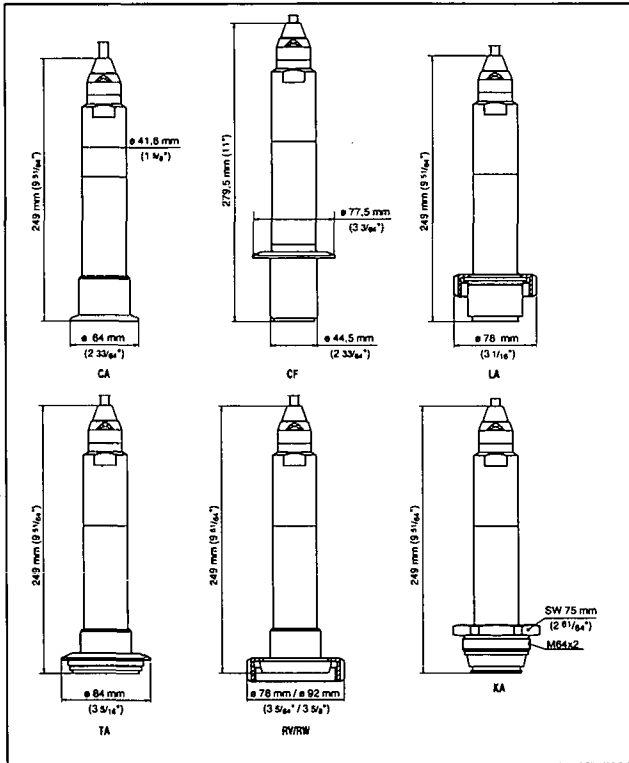


Fig. 18: VEGABAR 75 - hygienic fitting: CA/CF = Tri-Clamp 2"/Tri-Clamp 2 1/4", LA = hygienic fitting with compression nut F40, TA = Tuchenhagen Varivent DN 32, RV/RW = bolting DN 40/DN 50 according to DIN 11851, KA = conus DN 40, AA = DRD

VEGABAR 75 - hygienic fitting 2

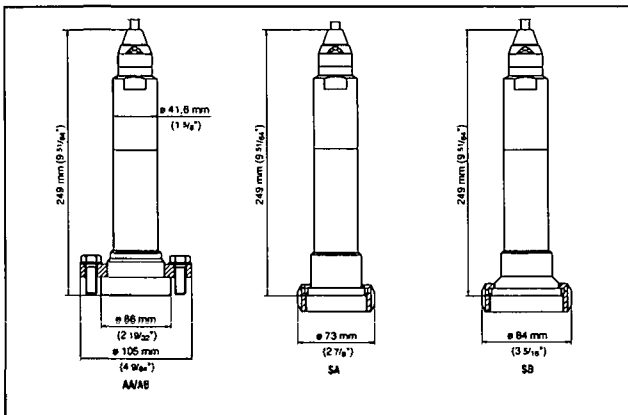


Fig. 19: VEGABAR 75 - hygienic fitting: SA = SMS DN 38, SB = SMS DN 51

VEGABAR 75 - flange fitting

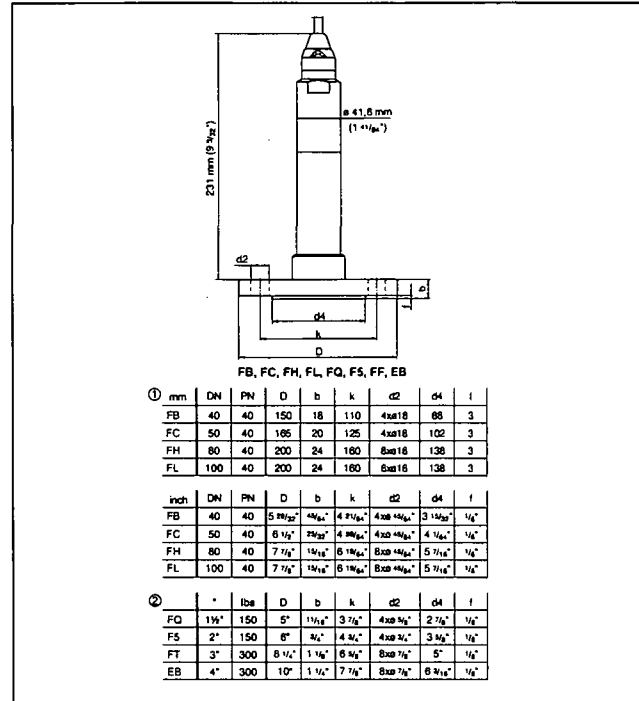


Fig. 20: VEGABAR - flange connection

- 1 Flange connection according to DIN 2501
- 2 Flange fitting according to ANSI B16.5

8 Product code

VEGABAR 74

Approval
XX without
XM Ship approval
CX ATEX II 1G EEx ia IIC T6
AX ATEX II 2G EEx ia IIC T6
AM ATEX II 2G EEx ia IIC T6 + Ship approval

Process fitting / Material
GI G 1/2 inner G 1/2 PN160 / 316L
GG Thread G 1/2 PN60 / 316L
GN Thread 1 1/2 NPT PN60 / 316L
CA Tri-Clamp 2" PN16 / 316L
LA Hyg. connection w. compression nut F40 PN40 / 316L
TA Varivent N50-40 PN25 / 316L
RA Bolting DN40PN40 DIN11851 / 316L
RB Bolting DN50PN25 DIN11851 / 316L
AA DRD PN40 / 316L
BA M44x1.25 with pressure screw Alu PN25 / 316L
BB M44x1.25; with pressure screw PN60 / 316L
EA Flange DN40PN40 Form C, DIN2501 / 316L
FB Flange DN50PN40 Form C, DIN2501 / 316L
FE Flange DN80PN40 Form C, DIN2501 / 316L
FH Flange 2" 150lb RF, ANSI B16.5 / 316L
FI Flange 3" 150lb RF, ANSI B16.5 / 316L

Seal measuring cell
1 FKM (Viton)
2 Kalrez 6375
3 EPDM

Pressure / Measuring range
A rel. / 0...0.1bar (0...10kPa)
B rel. / 0...0.2bar (0...20kPa)
C rel. / 0...0.4bar (0...40kPa)
D rel. / 0...1.0bar (0...100kPa)
E rel. / 0...2.5bar (0...250kPa)
F rel. / 0...5.0bar (0...500kPa)
G rel. / 0...10.0bar (0...1000kPa)
H rel. / 0...25.0bar (0...2500kPa)
U rel. / 0...60.0bar (0...6000kPa)
P rel. / -1...0.0bar (-100...0kPa)
Q rel. / -1...1.5bar (-100...150kPa)
R rel. / -1...5.0bar (-100...500kPa)
S rel. / -1...10.0bar (-100...1000kPa)
T rel. / -1...25.0bar (-100...2500kPa)
W rel. / -1...60.0bar (-100...6000kPa)
K rel. / -0.05...0.05bar (-5...5kPa)
L rel. / -0.1...0.1bar (-10...10kPa)
M rel. / -0.2...0.2bar (-20...20kPa)
O rel. / -0.5...0.5bar (-50...50kPa)
1 abs. / 0...0.1bar (0...10kPa)¹⁾
1 abs. / 0...1.0bar (0...100kPa)
2 abs. / 0...2.5bar (0...250kPa)
3 abs. / 0...5.0bar (0...500kPa)
4 abs. / 0...10.0bar (0...1000kPa)
5 abs. / 0...25.0bar (0...2500kPa)

Electronics
H 4...20mA/HART®

Electrical connection / Protection
A Direct cable outlet axial / IP68
S Direct cable outlet lateral / IP68

Cable material / Length
1 PE / 6m
2 PE / Special length
3 PUR / Special length
4 FEP / Special length

Overtoltage arrester
X without
B with ¹⁾

BR74.

¹⁾ Deviation in characteristic 0.25%
²⁾ Only in conjunction with Approval 'XX' or 'AX'

VEGABAR 75

Approval
XX without
XM Ship approval
CX ATEX II 1G EEx ia IIC T6
CK ATEX II 1G EEx ia IIC T6 + ATEX II 1/2D,2D IP6X T
AX ATEX II 2G EEx ia IIC T6
AM ATEX II 2G EEx ia IIC T6 + Ship approval
GX ATEX II 1/2D,2D IP6X T

Process fitting / Material
FB Flange DN40PN40 Form C, DIN2501 / 316L
FC Flange DN50PN40 Form C, DIN2501 / 316L
FH Flange DN80PN40 Form C, DIN2501 / 316L
F5 Flange 2" 150lb RF, ANSI B16.5 / 316L
GG Thread G 1/2 PN60 / 316L
GN Thread 1 1/2 NPT PN60 / 316L
CA Tri-Clamp 2" PN16 / 316L
LA Hygienic connec. w. compression nut F40PN40 / 316L
TA Varivent N50-40 PN25 / 316L
RV Bolting DN40PN40, DIN11851 / 316L
RW Bolting DN50PN40, DIN11851 / 316L
AA DRD PN40 / 316L
BB M44x1.25 with pressure screw 316L PN60 / 316L
SB SMS DN51 PN6 / 316L

Isolating liquid / Temperature
M Med.white oil,FDA appr.-12...150°C(Pabs<1bar-12..130°C)
S Med.w.oil,cool.(FDA)-12..180°C(Pabs <1bar -12..130°C)
R Med.w.oil,cool.(FDA)-12..200°C(Pabs <1bar -12..130°C)

Pressure / Measuring range
A rel. / 0...0.1bar (0...10kPa)
B rel. / 0...0.2bar (0...20kPa)
C rel. / 0...0.4bar (0...40kPa)
D rel. / 0...1.0bar (0...100kPa)
E rel. / 0...2.5bar (0...250kPa)
F rel. / 0...5.0bar (0...500kPa)
G rel. / 0...10.0bar (0...1000kPa)
T rel. / 0...25.0bar (0...2500kPa)
P rel. / -1...0.0bar (-100...0kPa)
Q rel. / -1...1.5bar (-100...150kPa)
R rel. / -1...5.0bar (-100...500kPa)
S rel. / -1...10.0bar (-100...1000kPa)
H rel. / -1...25.0bar (-100...2500kPa)
K rel. / -0.05...0.05bar (-5...5kPa)
L rel. / -0.1...0.1bar (-10...10kPa)
M rel. / -0.2...0.2bar (-20...20kPa)
O rel. / -0.5...0.5bar (-50...50kPa)
1 abs. / 0...0.1bar (0...100kPa)
2 abs. / 0...2.5bar (0...250kPa)
3 abs. / 0...5.0bar (0...500kPa)
4 abs. / 0...10.0bar (0...1000kPa)
5 abs. / 0...25.0bar (0...2500kPa)

Electronics
H 4...20mA/HART®

Electrical connection / Protection
A Direct cable outlet axial / IP68
S Direct cable outlet lateral / IP68

Cable material / Length
1 PE / 6m
2 PE / Special length
3 PUR / Special length
4 FEP / Special length

Overtoltage arrester
X without
B with ¹⁾


BR75.

¹⁾ Only in conjunction with Approval 'XX' or 'AX'


729-EN-071203

Indication and adjustment


Indicating and adjustment

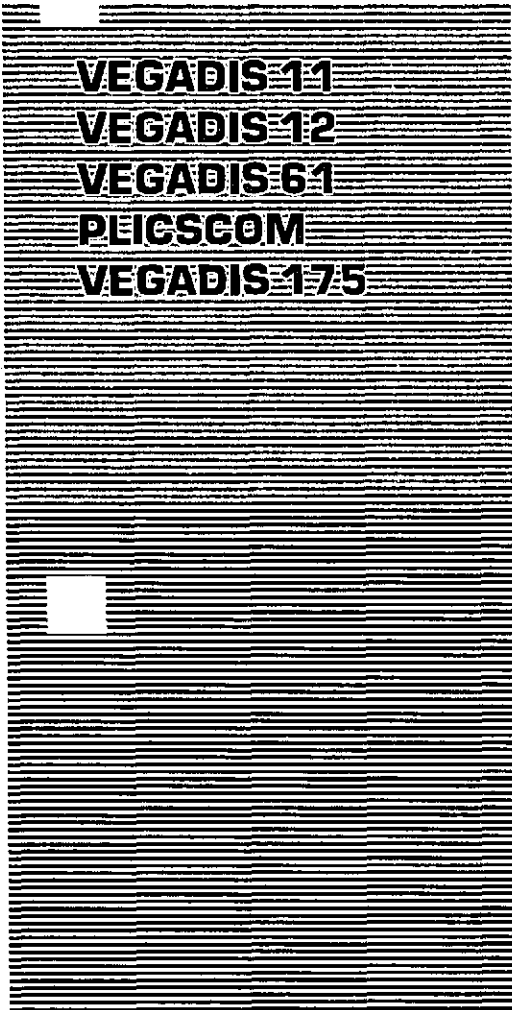

- VEGADIS-11**
- VEGADIS-12**
- VEGADIS-61**
- PEIGSCOM**
- VEGADIS-175**

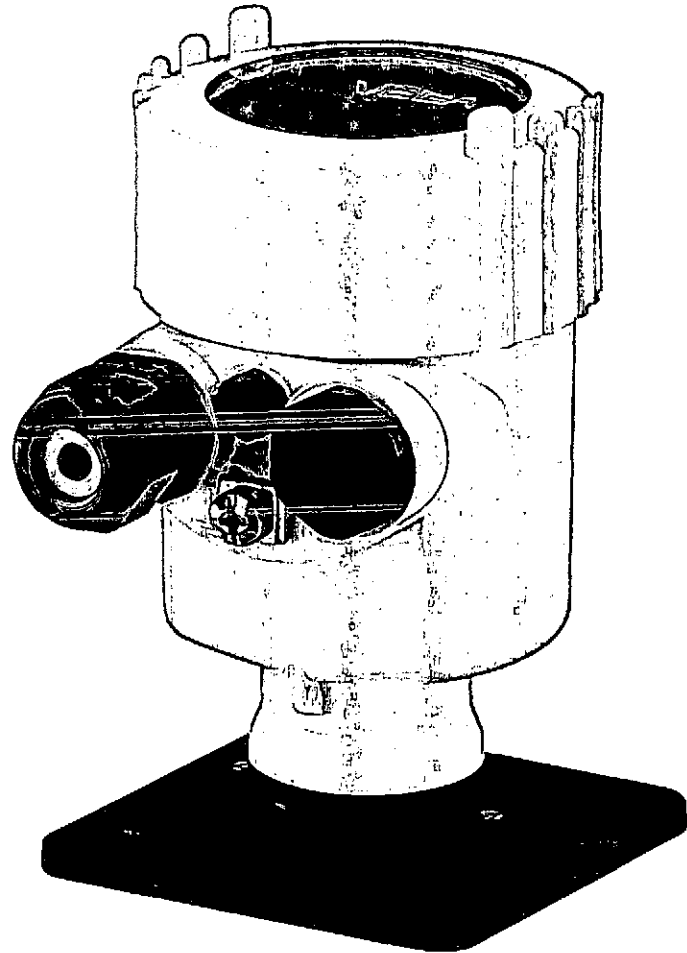

Product Information

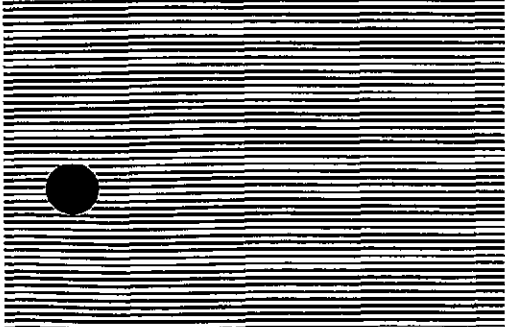

VEGA

Content

1	Product description	3
2	Type overview	5
3	Mounting instructions	6
4	Connecting to power supply	
4.1	Preparing the connection	8
4.2	Wiring plan, VEGADIS 11	8
4.3	Wiring plan, VEGADIS 12	9
4.4	Wiring plan, VEGADIS 61	9
4.5	Wiring plan, VEGADIS 175	9
5	Operation	
5.1	Adjustment on VEGADIS 11	11
5.2	Adjustment on VEGADIS 12	11
5.3	Adjustment on VEGADIS 61 and PLICSCOM	11
5.4	Adjustment on VEGADIS 61 with PACTware™	12
5.5	Adjustment on VEGADIS 175	12
6	Technical data	13
7	Dimensions	16
8	Product code	17

Take note of safety instructions for Ex applications



Please note the Ex specific safety information which you will find on our homepage www.vega.com/services/downloads and which come with the appropriate instrument with Ex approval. In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units. Each VEGADIS with Ex approval is an associated, intrinsically safe instrument and must not be installed in hazardous areas.

1 Product description

In continuous measurement, the level in a vessel or the pressure in a pipeline, for example, is detected by a sensor. The measured value is converted into an analogue 4 ... 20 mA output signal or a digital output signal, e.g. Profibus PA. The output signal is then further processed, e.g. in a PLC or a control system.

On-site indication of the measured value or sensor adjustment is often desired. To fulfill this need, VEGA offers a wide range of indicating instruments. Indication, power supply and mounting differ depending on the model. This product information manual provides an overview and helps you select a suitable instrument.

VEGADIS 11

VEGADIS 11 is a universal, digital indicating instrument that operates without additional power. It is used for remote (i.e. at some distance from the measuring site) measured value indication. VEGADIS 11 can be connected at any point to the 4 ... 20 mA signal cable. It is suitable for any VEGA sensor as well as sensors from other manufacturers, i.e. for active (four-wire) as well as passive (two-wire) sensors.

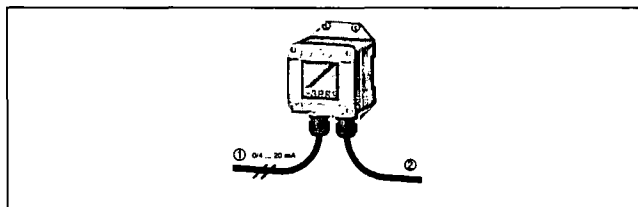


Fig. 1: Configuration VEGADIS 11

- 1 To the sensor
- 2 To the processing system

Advantages:

- Universal use for active or passive 4 ... 20 mA sensors
- No separate external energy required
- mounting to the wall or on carrier rail

VEGADIS 12

VEGADIS 12 is a digital indicating instrument that operates without additional power. It is used for remote (i.e. at some distance from the measuring site) measured value indication and adjustment of VEGABAR 74, 75 and VEGAWELL 72 - 4 ... 20 mA/HART hydrostatic pressure transmitters. VEGADIS 12 can be connected at any point to the 4 ... 20 mA signal cable. It is provided with a breather facility for sensor ventilation via the capillary line in the special cable.

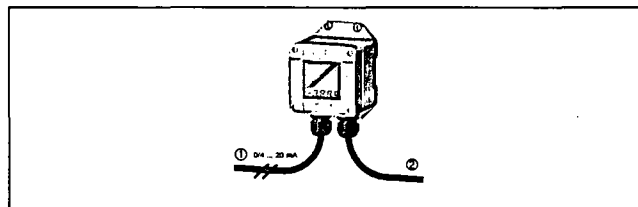


Fig. 2: Configuration VEGADIS 12

- 1 To the sensor
- 2 To the processing system

Advantages:

- No separate external energy required
- mounting to the wall or on carrier rail

VEGADIS 61

VEGADIS 61 is an external indicating and adjustment module that operates without additional power. It is used for remote (i.e. at some distance from the measuring site) measured value indication and adjustment of VEGA plics® sensors. The sensors can be 4 ... 20 mA, Profibus PA or Foundation Fieldbus sensors. VEGADIS 61 is connected to the sensors with a standard four-wire screened cable up to 25 m long. Communication is carried out via this cable and, what is more, VEGADIS 61 is powered by the sensor. An additional power supply is not required.

PLICSCOM

The indicating and adjustment module PLICSCOM is used for measured value indication, adjustment and diagnosis of VEGA plics® sensors. It is mounted in the respective sensor housing or in the external indicating and adjustment module VEGADIS 61. After mounting, the sensor and PLICSCOM are splash-proof even without housing cover.

An integrated backlight enables reading even under unfavourable lighting conditions. As an option, the display can also be equipped with heating that ensures good readability at low temperatures down to -40 °C (-40 °F).

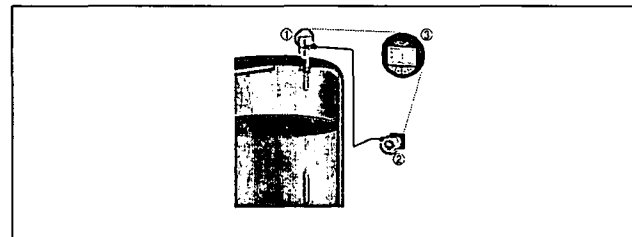


Fig. 3: Configuration VEGADIS 61 and PLICSCOM

- 1 Sensor
- 2 VEGADIS 61
- 3 PLICSCOM

Advantages:

- Universal use for all plics® sensors
- Splash-proof adjustment with open cover
- No separate external energy required
- mounting VEGADIS 61 to the wall, on carrier rail or tube

VEGADIS 175

VEGADIS 175 is a digital indicating instrument for front panel mounting. It can be connected at any point to the 4 ... 20 mA signal cable and is suitable for active (four-wire) as well as passive (two-wire) sensors.

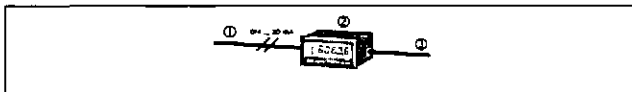


Fig. 4: Configuration VEGADIS 175

- 1 To the sensor
- 2 VEGADIS 175
- 3 To the processing system

Advantages:

- Universal use for passive or 4 ... 20 mA sensors
- No separate external energy required

1.1 Application examples

Pump shaft

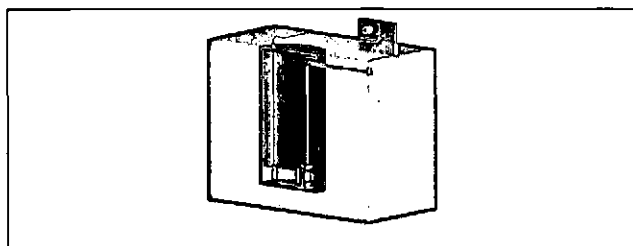


Fig. 5: Level measurement in a pump shaft with VEGAWELL 72, remote indication and adjustment with VEGADIS 12

For hydrostatic level measurement in a pump shaft, VEGADIS 12 together a VEGAWELL 72 is well suited for remote indication and adjustment. The min./max. adjustment is carried out on site and the actual measured value can be read out during operation.

Chip silo

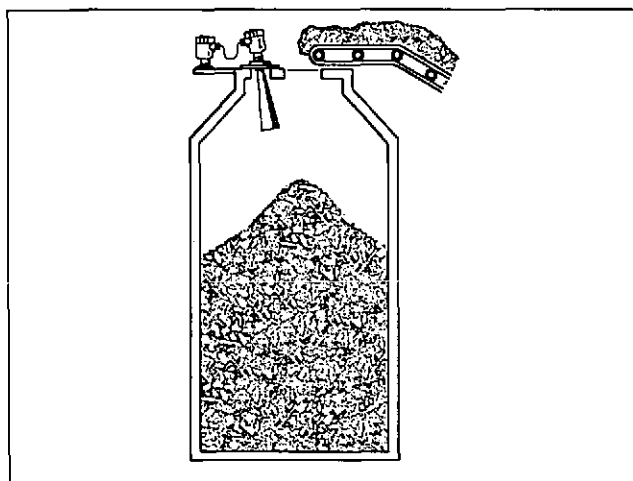



Fig. 6: Level measurement in a chip silo with VEGAPULS 68, remote indication and adjustment with VEGADIS 61

In non-contact level measurement in a chip silo with VEGAPULS 68, the mounting location is not directly accessible. For that reason VEGADIS 61 is an excellent solution for remote indication


and adjustment. The min./max. adjustment can be carried out locally with or without filling.

2 Type overview

VEGADIS 11

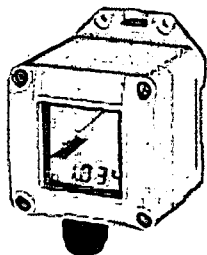

VEGADIS 12

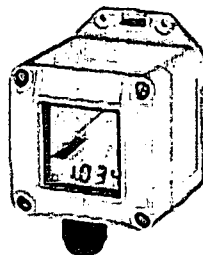


VEGADIS 61



Indication:	digital and quasi-analogue	digital and quasi-analogue	Dot-Matrix
Signal:	4 ... 20 mA, 4 ... 20 mA/HART	4 ... 20 mA, 4 ... 20 mA/HART	I ² C bus
Sensors:	4 ... 20 mA passive or active	VEGABAR 74, 75; VEGAWELL 72 - 4 ... 20 mA/HART	plics [®] sensors
Mounting:	Wall, rail mounting	Wall, rail mounting	Wall, rail, tube mounting
Ambient temperature:	-20 ... +70 °C (-4 ... +158 °F)	-20 ... +70 °C (-4 ... +158 °F)	-20 ... +70 °C (-4 ... +158 °F)

PLICSCOM

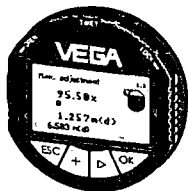

VEGADIS 175



Indication:	Dot-Matrix	digital
Signal:	I ² C bus	4 ... 20 mA, 4 ... 20 mA/HART
Sensors:	plics [®] sensors	4 ... 20 mA passive or active
Mounting:	in the sensor or in VEGADIS 61	Front panel
Ambient temperature:	-15 ... +70 °C (+5 ... +158 °F)	-10 ... +60 °C (+14 ... +140 °F)

1143-EN-071203

3 Mounting instructions

VEGADIS 11 and VEGADIS 12

VEGADIS 11 and VEGADIS 12 are configured for the following installation and mounting options:

- Carrier rail 35 x 7.5 according to EN 50022
- Wall mounting

Carrier rail mounting

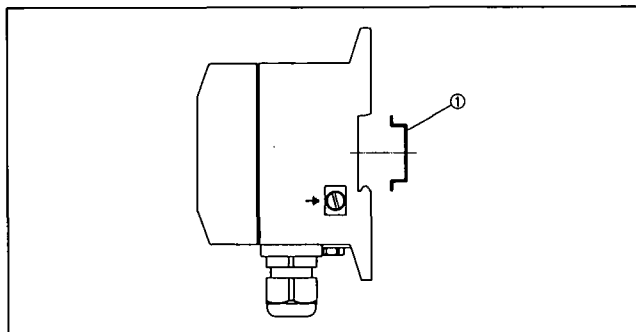


Fig. 7: VEGADIS 11 and VEGADIS 12 carrier rail mounting

- 1 Carrier rail

Wall mounting

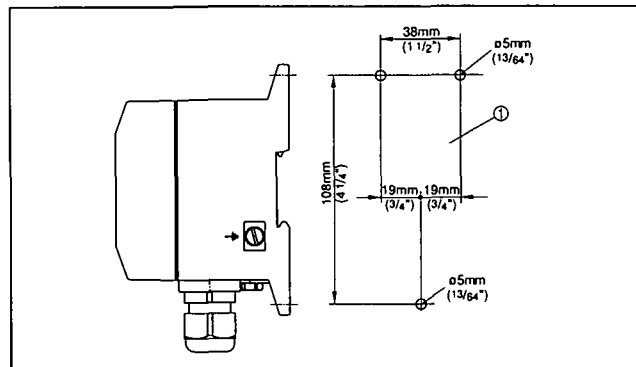


Fig. 8: VEGADIS 11 and VEGADIS 12 wall mounting

- 1 Drill dimension

VEGADIS 61

VEGADIS 61 can be mounted in the following ways:

- Carrier rail 35 x 7.5 according to EN 50022
- Wall mounting
- Tube mounting

Wall mounting

VEGADIS 61 for wall mounting is supplied with a mounting socket.

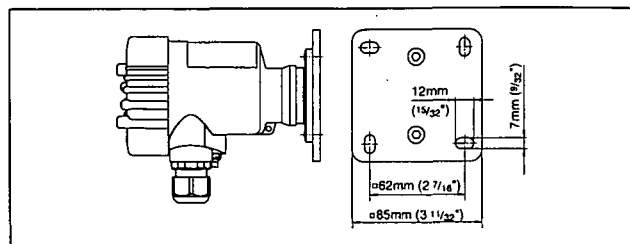


Fig. 9: VEGADIS 61 for wall mounting, bottom view of mounting plate.

- 1 Drill dimension

Carrier rail mounting

VEGADIS 61 for mounting on carrier rail is supplied with a mounting adapter.

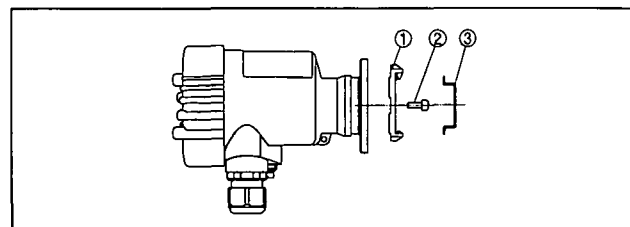


Fig. 10: VEGADIS 61 for mounting on carrier rail

- 1 Adapter plate
- 2 Screw M4 x 6
- 3 Carrier rail

Tube mounting

VEGADIS 61 for tube mounting is supplied with the measuring instrument holder BARMONT.C (comes with delivery as mounting accessory).

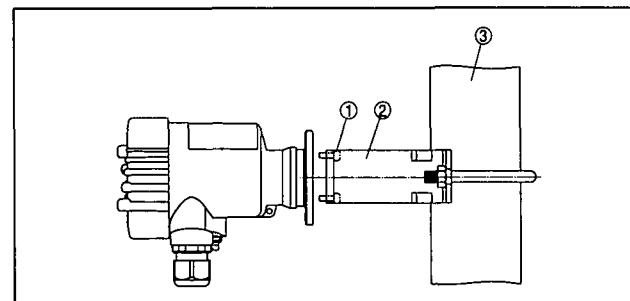


Fig. 11: VEGADIS 61 for tube mounting

- 1 4 screws M5 x 12
- 2 Measuring instrument holder BARMONT.C
- 3 Tube

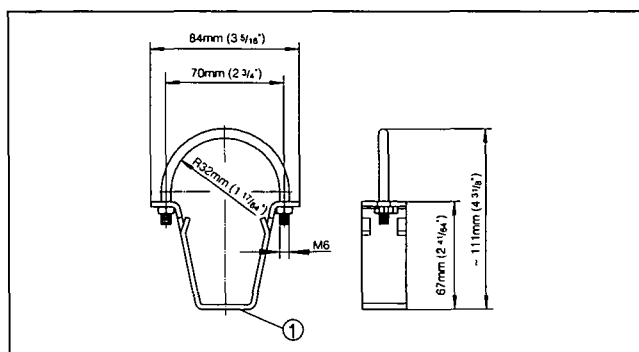


Fig. 12: Measuring instrument holder BARMONT.C

1 4 x holes 5 mm for mounting screws M5 x 12

PLICSCOM

The indicating and adjustment module PLICSCOM can be inserted in the following housing versions and instruments:

- All sensors of the plics[®] instrument family, in the single as well as in the double chamber housing (optionally in the electronics or connection compartment)
- External indicating and adjustment unit VEGADIS 61

VEGADIS 175

VEGADIS 175 can be mounted in the following ways:

- Front panel mounting

Front panel mounting

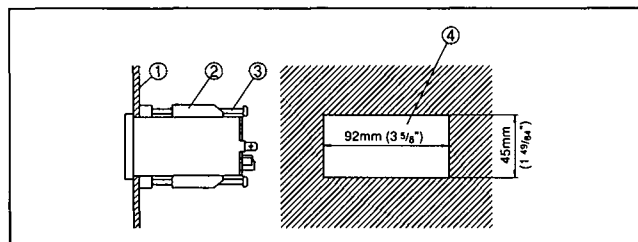


Fig. 13: VEGADIS 175 for panel mounting

- 1 Front panel
- 2 Fixing hook
- 3 Screw

4 Connecting to power supply

4.1 Preparing the connection

Note safety instructions

Always keep in mind the following safety instructions:

- Connect only in the complete absence of line voltage
- If overvoltage surges are expected, overvoltage arresters should be installed



Tip:

We recommend VEGA overvoltage arresters B61-300 (power supply VEGADIS) and B62-36G (sensor supply).

Take note of safety instructions for Ex applications



In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units.

Selecting connection cable

Standard two-wire cable without screen is used for connection of the sensors.

Cable screening and grounding

Connect the cable screen on both ends to ground potential. In the sensor, the screen must be connected directly to the internal ground terminal. The ground terminal outside on the housing must be connected to the potential equalisation.

If potential equalisation currents are expected, the screen connection on VEGADIS must be made via a ceramic capacitor (e. g. 1 nF, 1500 V). The low frequency potential equalisation currents are thus suppressed, but the protective effect against high frequency interference signals remains.

Select connection cable for Ex applications



Take note of the corresponding installation regulations for Ex applications. In particular, make sure that no potential equalisation currents flow over the cable screen. In case of grounding on both sides this can be achieved by the use of a capacitor or a separate potential equalisation.

4.2 Wiring plan, VEGADIS 11

Passive sensors

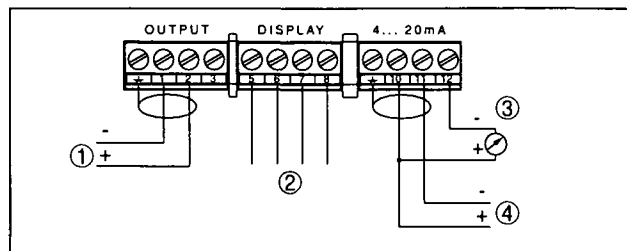


Fig. 14: Wiring plan, VEGADIS 11 for passive sensors

- 1 Sensor (passive)
- 2 Indicating module (assignment see chart)
- 3 Control instrument



Note:

Passive sensors need a power supply. They represent current sinks and emboss a current of 4 ... 20 mA to the supply circuit. The supply voltage is loop through VEGADIS 11. On the output (terminals 1/2), VEGADIS 11 provides the power supply for the connected sensors. Power supply and measured value transmission are carried along the same two-wire cable.

Active sensors

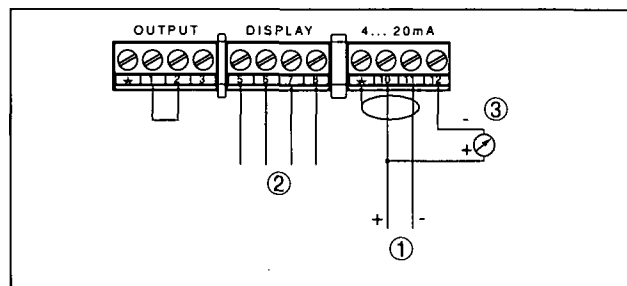


Fig. 15: Wiring plan, VEGADIS 11 for active sensors

- 1 Sensor (active)
- 2 Indicating module
- 3 Control instrument
- 4 Voltage supply/Signal output



Note:

The input (terminals 10/11) is provided for connection of transmitters with own, separate power supply. The output (terminal 1/2) is bridged.

Sensors with signal conditioning instrument

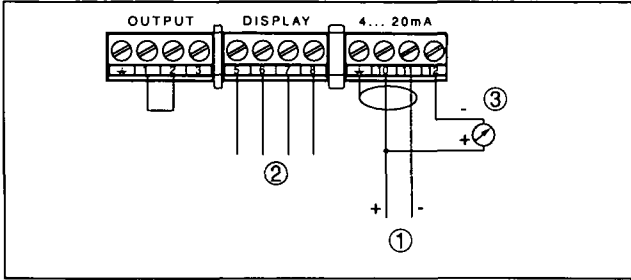


Fig. 16: Wiring plan, VEGADIS 11 for signal conditioning instrument

- 1 Signal conditioning instrument
- 2 Indicating module
- 3 Control instrument



Note:

The input (terminals 10/11) is provided for connection of signal conditioning instruments. Connection and operation in Ex ia is not possible. The output (terminal 1/2) is bridged.

4.3 Wiring plan, VEGADIS 12

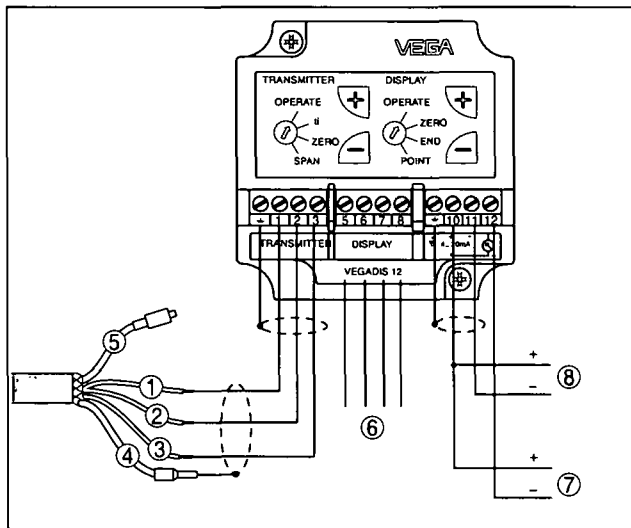


Fig. 17: Wiring plan, VEGADIS 12

- 1 brown (+)
- 2 blue (-)
- 3 Yellow
- 4 Screen
- 5 Breather capillaries with filter element
- 6 Indicating module
- 7 Control instrument
- 8 Voltage supply/Signal output

4.4 Wiring plan, VEGADIS 61

Wiring plan

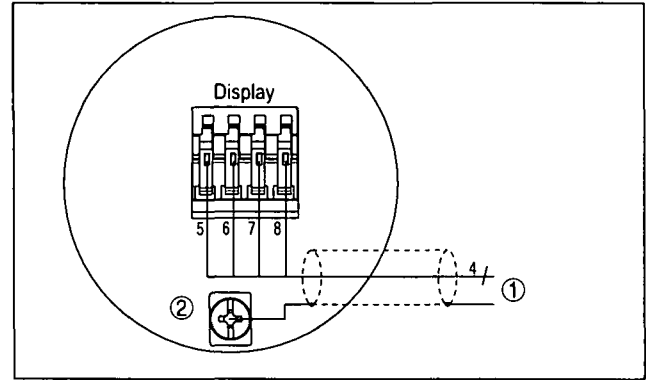


Fig. 18: Wiring plan, single chamber housing

- 1 plics® sensor
- 2 Grounding on both ends with non-Ex. With Ex, grounding at one sensor end is recommended, see EN 60079-14.

4.5 Wiring plan, VEGADIS 175

Passive sensors

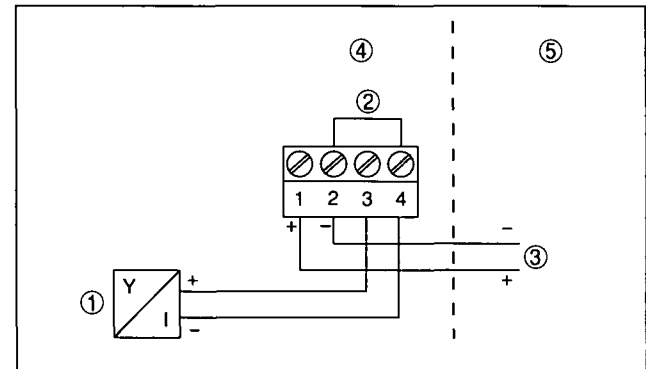


Fig. 19: Wiring plan, VEGADIS 175 for passive sensors

- 1 Sensor (passive)
- 2 Bridged internally
- 3 Voltage supply/Signal output
- 4 Ex area
- 5 Non-Ex area

1143-EN-071203

Active sensors

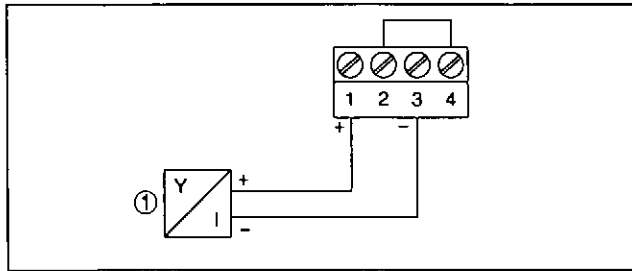


Fig. 20: Wiring plan, VEGADIS 175 for active sensors

- 1 Sensor (active)
- 2 Bridged internally

5 Operation

5.1 Adjustment on VEGADIS 11

The display is located in the housing cover, the adjustment elements are accessible after removing the cover.

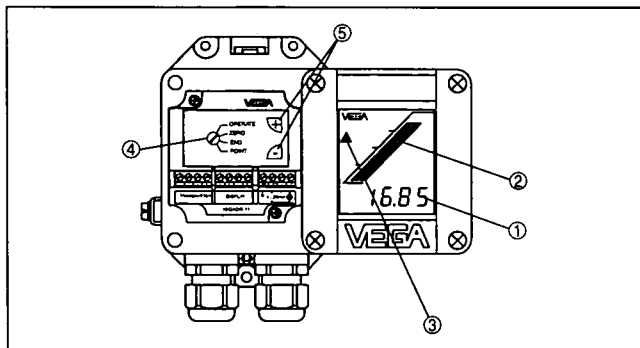


Fig. 21: Indicating and adjustment elements

- 1 Digital indication
- 2 Bar graph indication
- 3 Tendency indication
- 4 Rotary switch
- 5 Adjustment keys +/-

Key functions

- **[Rotary switch]** to select:
 - Operate = Measured value indication
 - ZERO = Adjustment of the min. value
 - SPAN = Adjustment of the max. value
 - Point = Shifting of the decimal point
- **[+/-] key:**
 - Change value of the digital indication

5.2 Adjustment on VEGADIS 12

The display is located in the housing cover, the adjustment elements are accessible after removing the cover.

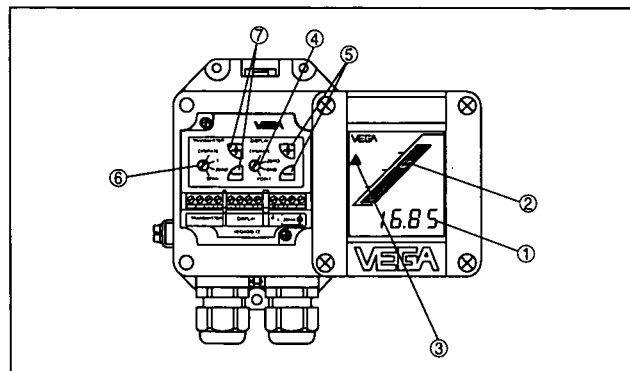


Fig. 22: Indicating and adjustment elements

- 1 Digital indication
- 2 Bar graph indication
- 3 Tendency indication
- 4 Rotary switch "Indication"
- 5 Adjustment keys +/- display
- 6 Rotary switch "Pressure transmitter"
- 7 Adjustment keys +/- Pressure transmitter

Key functions

- **[Rotary switch]** to select:
 - Operate = Measured value indication
 - ZERO = Adjustment of the min. value
 - SPAN = Adjustment of the max. value
 - Point = Shifting of the decimal point
- **[+/-] key:**
 - Change value of the digital indication

5.3 Adjustment on VEGADIS 61 and PLICSCOM

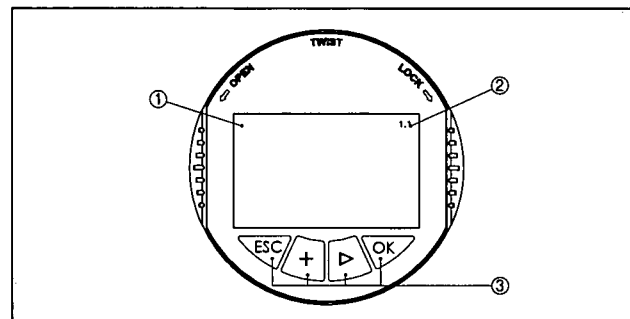


Fig. 23: Indicating and adjustment elements

- 1 LC display
- 2 Indication of the menu item number
- 3 Adjustment keys

1143-EN-071203

Key functions

- **[OK] key:**
 - Move to the menu overview
 - Confirm selected menu
 - Edit parameter
 - Save value
- **[>] key to select:**
 - menu change
 - list entry
 - Select editing position
- **[+] key:**
 - Change value of the parameter
- **[ESC] key:**
 - interrupt input
 - jump to the next higher menu

5.4 Adjustment on VEGADIS 61 with PACTware™

PACTware™/DTM

plics® sensors can be adjusted via PACTware™ independent of the respective signal output 4 ... 20 mA/HART, Profibus PA or Foundation Fieldbus via VEGADIS 61. To adjust with PACTware™, an instrument driver for the particular sensor is required.

All currently available VEGA DTMs are provided as DTM Collection with the current PACTware™ version on CD. They are available from the responsible VEGA agency for a token fee. The basic version of this DTM Collection incl. PACTware™ is available as a free-of-charge download from Internet.

To use the entire range of functions of a DTM, incl. project documentation, a DTM licence is required for that particular instrument family. This licence can be bought from the VEGA agency serving you.

Connection of the PC to VEGADIS 61

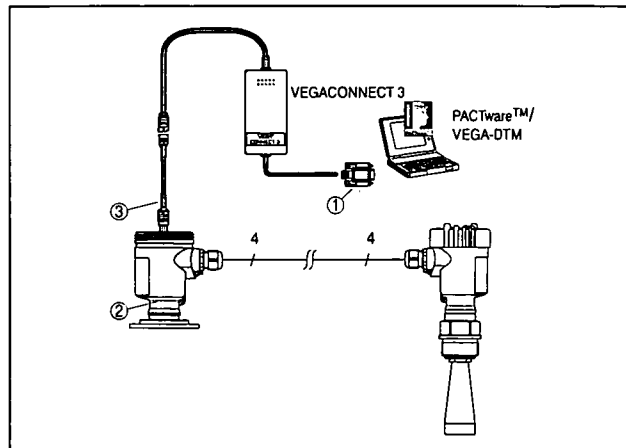


Fig. 24: Connection to VEGADIS 61

- 1 RS232 connection
- 2 VEGADIS 61
- 3 I²C adapter cable for VEGACONNECT 3

To adjust with PACTware™, a VEGACONNECT 3 with I²C adapter cable (art. no. 2.27323) as well as a power supply unit is necessary in addition to the PC and the suitable VEGA-DTM.

5.5 Adjustment on VEGADIS 175

Indication and adjustment are carried out on the front via a clear LC display and three keys.

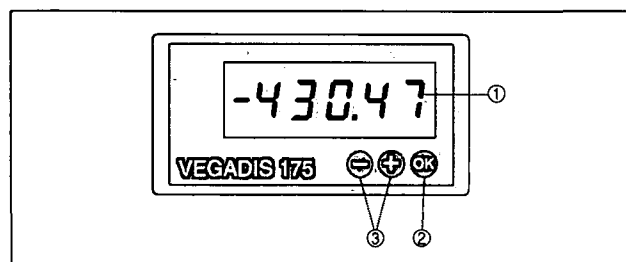


Fig. 25: Indicating and adjustment elements

- 1 Digital indication
- 2 Key (OK)
- 3 Adjustment keys +/-

Key functions

- **[OK] key:**
 - Move to the menu overview
 - Confirm selected menu
 - Edit parameter
 - Save value
- **[+]/[-] keys:**
 - Change value of the parameter

6 Technical data

General data

VEGADIS 11, 12 Series	Instrument for panel or wall mounting or mounting on carrier rail 35 x 7.5 according to EN 50022
Materials	
– Housing	plastic PBT
– Inspection window of the indication	Lexan
– Breather facility	PTFE filter element
– Ground terminal	316Ti/316L
Weight approx.	400 g (0.882 lbs)
VEGADIS 61 Series	Instrument for panel or wall mounting or mounting on carrier rail 35 x 7.5 according to EN 50022
Materials	
– Housing	Plastic PBT, Alu die-casting powder-coated, 316L
– Inspection window in housing cover	Polycarbonate (UL-746-C listed)
– Ground terminal	316Ti/316L
Weight, depending on the housing material and mounting technology	500 ... 1300 g (1.10 ... 2.87 lbs)
PLICSCOM Series	Module for insertion in VEGADIS 61
Materials	
– Housing	ABS
– Inspection window	Polyester foil
Weight approx.	100 g (0.22 lbs)
VEGADIS 175 Series	Module unit for front panel mounting
Materials	
– Housing front	Alu die-casting
– Housing	Sheet steel galvanized
– Rear of the housing	ABS
Weight approx.	300 g (0.66 lbs)

Input

VEGADIS 11 Connection to	individual passive or active sensors 4 ... 20 mA/HART
Transmission	analogue, 4 ... 20 mA
Max. input current	150 mA
Connection cable to the sensor	2-wire
Voltage loss	4.5 V at 20 mA
VEGADIS 12 Connection to	VEGAWELL 72 - 4 ... 20 mA/HART, VEGABAR 74, 75
Transmission	analogue, 4 ... 20 mA
Max. input current	150 mA
Connection cable to the sensor	3-wire (VEGA special cable with breather capillaries or standard cable)
Max. cable length	200 m
Voltage loss	4.5 V at 20 mA
VEGADIS 61 Connection to	VEGA plics [®] sensors
Data transmission	digital (I ² C-Bus)
Connection cable	4-wire, screened
Max. cable length	25 m
VEGADIS 175 Transmission	analogue, 4 ... 20 mA (reverse battery protection)

1143-EN-071203

HART protocol	The indicator is suitable for transmission of the HART protocol
Max. input current	150 mA (shortcircuit current)
Voltage loss	< 2 V with 20 mA

Indications

VEGADIS 11, 12

LC multiple function display	20 segments
- Bargraph (quasi-analogue indication)	-9999 ... 9999
- Digital value	Symbols for rising or falling values
- Tendency indicators	

VEGADIS 61, PLICSCOM

LC display	in dot matrix
Power supply display light	through the sensor, voltage range see sensor operating instructions manual
Power supply display heating	
- Operating voltage	24 V DC +5 %
- Power	1.7 W
- Switch on point	-5 °C (+23 °F)

VEGADIS 175

LC display	17 mm
- Height of figures	-19999 ... 19999
- Indication range	-19999 ... 32767
- Offset	

Ambient conditions

VEGADIS 11, 12

Ambient temperature	-20 ... +70 °C (-4 ... +158 °F)
Storage and transport temperature	-40 ... +85 °C (-40 ... +185 °F)

VEGADIS 61, PLICSCOM

Ambient temperature	-15 ... +70 °C (+5 ... +158 °F)
Ambient temperature with heating	-40 ... +70 °C (-40 ... +158 °F)
Storage and transport temperature	-40 ... +80 °C (-40 ... +176 °F)

VEGADIS 175

Ambient temperature	-10 ... +60 °C (+14 ... +140 °F)
Storage and transport temperature	-25 ... +70 °C (-13 ... +158 °F)
Climatic class	according to EN 60654-1, class B2

Electrical protective measures

VEGADIS 11, 12

Protection	IP 67
Overvoltage category	III
Protection class	III

VEGADIS 61

Protection	IP 66/IP 67
Overvoltage category	III
Protection class	II

PLICSCOM

Protection	
- unassembled	IP 20
- mounted into VEGADIS 61 without cover	IP 40

VEGADIS 175

Protection	
- between front frame and front panel	IP 65
- Terminal	IP 20

ESD	6 kV/8 kV
Electromagnetic fields	10 V/m
Burst (power supply)	2 kV
Surge	1 kV
Electromagnetic fields	10 V/m

Approvals¹⁾

VEGADIS 11	
ATEX	ATEX II 2G EEx ia IIC T6
VEGADIS 12	
ATEX	ATEX II 2G EEx ia IIC T6
UL	Cl. I,II,II; Div. 1; Gr. A-G
VEGADIS 61	
ATEX ia	ATEX II 1G, 2G EEx ia IIC T6
ATEX D	ATEX II 1/2D IP6X T
IEC	IEC Ex ia IIC T6
FM	FM Cl.I-III, Div1 (IS)
CSA	CSA Cl.I-III, Div1 (IS)
VEGADIS 175	
ATEX	ATEX II 1G EEx ia IIC T6

Environmental instructions

VEGA environment management system
You can find detailed information under www.vega.com.

certified according to DIN EN ISO 14001

¹⁾ Deviating data in Ex applications: see separate safety instructions.

7 Dimensions

VEGADIS 11, 12

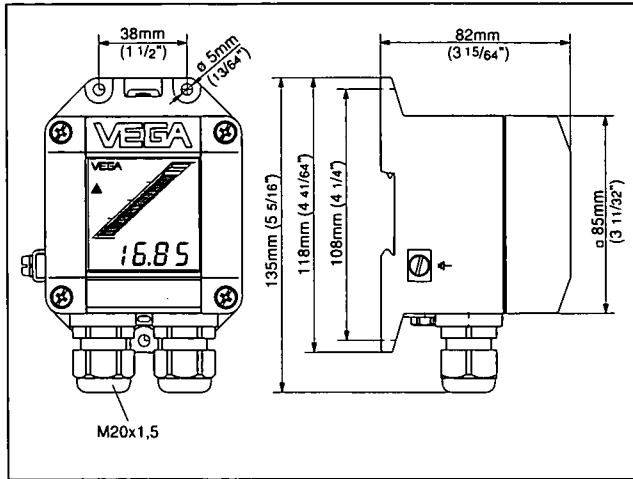


Fig. 26: VEGADIS 11, 12

VEGADIS 61

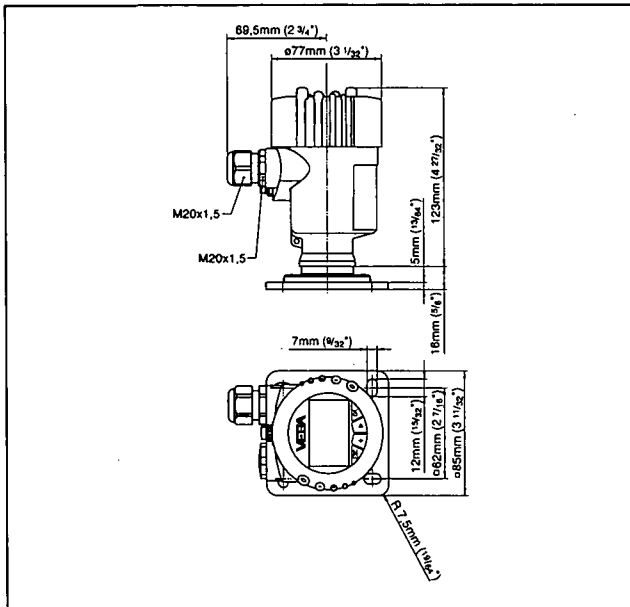


Fig. 27: VEGADIS 61

PLICSCOM

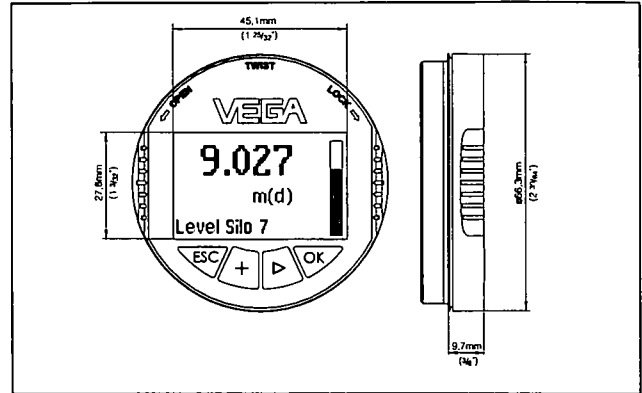


Fig. 28: PLICSCOM

VEGADIS 175


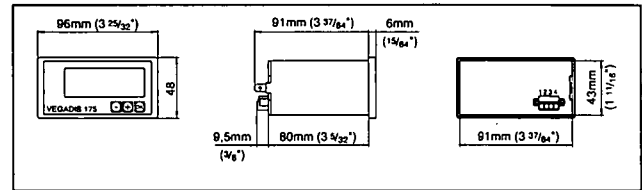



Fig. 29: VEGADIS 175

8 Product code


VEGADIS 11

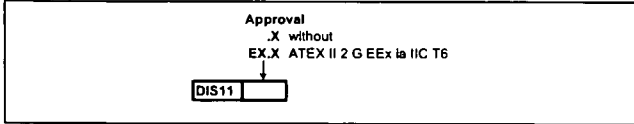


VEGADIS 12

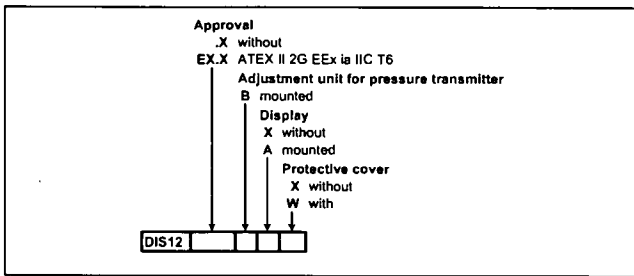


VEGADIS 61

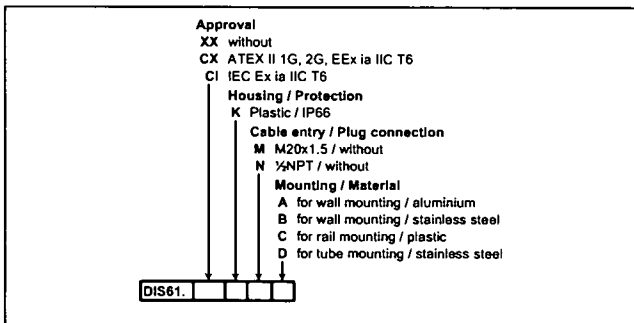

PLICSCOM

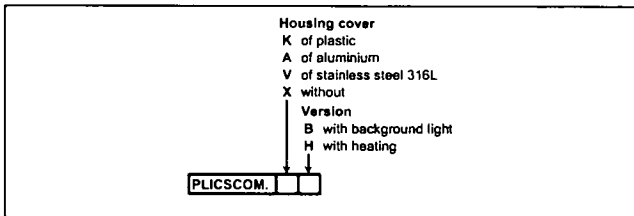

VEGADIS 175

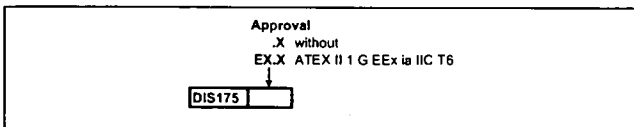

143-EN-071203




Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

SOFT STARTER

1. MSF SOFT STARTER TECHNICAL DETAILS

Valid for the following Soft starter Models:
MSF-017 to MSF-1400

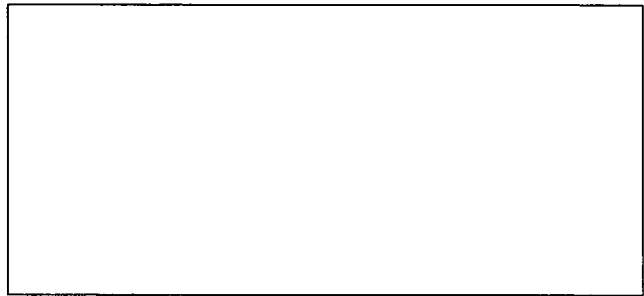

**MSF
SOFT STARTER
INSTRUCTION MANUAL**

Document number: 01-1363-01

Edition: r2

Date of release: 2001-04-20

© Copyright Emotron AB 2000

Emotron retain the right to change specifications and illustrations in the text, without prior notification. The contents of this document may not be copied without the explicit permission of Emotron AB.

SAFETY INSTRUCTIONS

Safety

The soft starter should be installed in a cabinet or in an electrical control room.

- The device must be installed by trained personnel.
- Disconnect all power sources before servicing.
- Always use standard commercial fuses, slow blow e.g. type gI, gG, to protect the wiring and prevent short circuiting. To protect the thyristors against short-circuit currents, superfast semiconductor fuses can be used if preferred. The normal guarantee is valid even if superfast semiconductor fuses are not used.

Operating and maintenance personnel

1. Read the whole Instruction Manual before installing and putting the equipment into operation.
2. During all work (operation, maintenance, repairs, etc.) observe the switch-off procedures given in this instruction as well as any other operating instruction for the driven machine or system. See Emergency below.
3. The operator must avoid any working methods which reduce the safety of the device.
4. The operator must do what he can to ensure that no unauthorised person is working on the device.
5. The operator must immediately report any changes to the device which reduce its safety to the user.
6. The user must undertake all necessary measures to operate the device in perfect condition only.

Installation of spare parts

We expressly point out that any spare parts and accessories not supplied by us have also not been tested or approved by us.

Installing and/or using such products can have a negative effect on the characteristics designed for your device. The manufacturer is not liable for damage arising as a result of using non-original parts and accessories.

Emergency

You can switch the device off at any time with the mains switch connected in front of the soft starter (both motor and control voltage must be switched off).

Dismantling and scrapping

The enclosure of the soft starter is made of recyclable material as aluminium, iron and plastic. Legal requirements for disposal and recycling of these materials must be complied with.

The soft starter contains a number of components demanding special treatment, as for example thyristors. The circuit board contain small amounts of tin and lead. Legal requirements for disposal and recycling of these materials must be complied with.

CONTENTS

1. GENERAL INFORMATION	6	5.6	Keyboard lock	23
1.1 Integrated safety systems	6	5.7	Overview of soft starter operation and parameter set-up.	23
1.2 Safety measures	6	6. INSTALLATION AND CONNECTION	24	
1.3 Notes to the Instruction Manual	6	6.1 Installation of the soft starter in a cabinet	24	
1.4 How to use the Instruction Manual	6	6.2 Connections	28	
1.5 Standards	6	6.3 Connection and setting on the PCB control card	32	
1.6 Tests in accordance with norm EN60204	6	6.4 Minimum wiring	33	
1.7 Inspection at delivery	7	6.5 Wiring examples	34	
1.7.1 Transport and packing	7	7. FUNCTIONAL DESCRIPTION SET-UP MENU	35	
1.8 Unpacking of MSF-310 and larger types	7	7.1 Ramp up/down parameters	36	
2. DESCRIPTION	8	7.1.1 RMS current [005]	36	
2.1 General	8	7.2 Start/stop/reset command	37	
2.2 MSF control methods	9	7.2.1 2-wire start/stop with automatic reset at start	37	
2.2.1 General features	9	7.2.2 2-wire start/stop with separate reset	37	
3. HOW TO GET STARTED	10	7.2.3 3-wire start/stop with automatic reset at start.	37	
3.1 Checklist	10	7.3 Menu expansion setting.	38	
3.2 Main functions/Applications	10	7.4 Voltage control dual ramp	38	
3.3 Motor Data	10	7.5 Torque control parameters	39	
3.4 Setting of the start and stop ramps	11	7.6 Current limit (Main Function)	39	
3.5 Setting the start command	12	7.6.1 Voltage ramp with current limit	39	
3.6 Viewing the motor current	12	7.6.2 Current limit	40	
3.7 Starting	12	7.7 Pump control (Main Function)	40	
4. APPLICATIONS AND FUNCTIONS SELECTION	13	7.8 Analogue Input Control (Main Function)	41	
4.1 Soft starter rating according to AC53a	13	7.9 Full voltage start, D.O.L. (Main Function)	41	
4.2 Soft starter rating according to AC53b	13	7.10 Torque control (Main function)	42	
4.3 MSF Soft starter ratings	14	7.11 Torque boost	43	
4.4 The Application Ratings List	14	7.12 Bypass	43	
4.5 The Application Functions List	16	7.13 Power Factor Control	46	
4.6 Function and combination matrix	19	7.14 Brake functions	46	
4.7 Special condition	20	7.15 Slow speed and Jog functions	48	
4.7.1 Small motor or low load	20	7.15.1 Slow speed controlled by an external signal. ..	48	
4.7.2 Ambient temperature below 0xC	20	7.15.2 Slow speed during a selected time	49	
4.7.3 Phase compensation capacitor	20	7.15.3 Jog Functions	49	
4.7.4 Pole-changing contactor and two speed motor ..	20	7.15.4 DC-brake after slow speed at stop [040]	49	
4.7.5 Shielded motor cable	20	7.16 Motor data setting	50	
4.7.6 Slip ring motors	20	7.17 Programmable relay K1 and K2	51	
4.7.7 Pump control with soft starter and frequency inverter together	20	7.18 Analogue output	52	
4.7.8 Starting with counter clockwise rotating loads ..	20	7.19 Digital input selection	53	
4.7.9 Running motors in parallel	20	7.20 Parameter Set	54	
4.7.10 How to calculate heat dissipation in cabinets ..	20	7.21 Motor protection, overload (F2 alarm)	55	
4.7.11 Insulation test on motor	20	7.22 Mains protection	56	
4.7.12 Operation above 1000 m	20	7.23 Application protection (load monitor)	57	
4.7.13 Reversing	20	7.23.1 Load monitor max and min/protection (F6 and F7 alarms)	57	
5. OPERATION OF THE SOFT STARTER	21	7.23.2 Pre-alarm	58	
5.1 General description of user interface	21	7.24 Resume alarms	61	
5.2 PPU unit	21	7.24.1 Phase input failure F1	61	
5.3 LED display	22	7.24.2 Run at current limit time-out F4	61	
5.4 The Menu Structure	22	7.25 Slow speed with JOG	61	
5.5 The keys	23			



7.26 Automatic return menu62
 7.27 Communication option, related Parameters62
 7.28 Reset to factory setting [199]63
 7.29 View operation63
 7.30 Keyboard lock65
 7.31 Alarm list65

8. PROTECTION AND ALARM 66

8.1 Alarm description66
 8.1.1 Alarm with stop and requiring a separate reset66
 8.1.2 Alarm with stop and requiring only a new start command66
 8.1.3 Alarm with continue run66
 8.2 Alarm overview67

9. TROUBLE SHOOTING 68

9.1 Fault, cause and solution68

10. MAINTENANCE 71

11. OPTIONS 72

11.1 Serial communication72
 11.2 Field bus systems72
 11.3 External PPU.72
 11.3.1 Cable kit for external current transformers.....72
 11.4 Terminal clamp73

12. TECHNICAL DATA 74

13. SET-UP MENU LIST 79

14. INDEX 82

REPRESENTATION 85

List of tables

Table 1 Applications Rating List15
 Table 2 Application Function List17
 Table 3 Combination matrix19
 Table 4 Start/stop combination.19
 Table 5 The keys23
 Table 6 Control modes23
 Table 7 MSF-017 to MSF-250.25
 Table 8 MSF-017 to MSF-25025
 Table 9 MSF-310 to MSF-140025
 Table 10 MSF-310 to MSF-1400.25
 Table 11 Busbar distances26
 Table 12 PCB Terminals32
 Table 13 Set-up Menu overview35

List of figures

Fig. 1	Scope of delivery.	7	Fig. 54	Wiring for slow speed external input.	53
Fig. 2	Unpacking of MSF-310 and larger models.	7	Fig. 55	Parameter overview	54
Fig. 3	Voltage control	8	Fig. 56	Connection of external control inputs.	54
Fig. 4	Current control	8	Fig. 57	The thermal curve	55
Fig. 5	Torque control	8	Fig. 58	Load monitor alarm functions.	60
Fig. 6	Standard wiring.	10	Fig. 59	The 2 Jog keys.	61
Fig. 7	Example of start ramp with main function voltage ramp.	12	Fig. 60	Option RS232/485	72
Fig. 8	Rating example AC53a.	13	Fig. 61	Option Profibus	72
Fig. 9	Duty cycle, non bypass.	13	Fig. 62	Shows an example of the External PPU after it has been built in.	72
Fig. 10	Rating example AC53b.	13	Fig. 63	Cable kit	72
Fig. 11	Duty cycle, bypassed	13	Fig. 64	The terminal clamp.	73
Fig. 12	MSF soft starter models.	21			
Fig. 13	PPU unit.	21			
Fig. 14	LED indication at different operation situation.	22			
Fig. 15	Menu structure.	22			
Fig. 16	MSF-017 to MSF-250 dimensions.	24			
Fig. 17	Hole pattern for MSF-017 to MSF-250	24			
Fig. 18	Hole pattern for MSF-170 to MSF-250 with upper mounting bracket instead of DIN-rail.	24			
Fig. 19	MSF -310 to MSF -835.	26			
Fig. 20	Hole pattern for screw attachment, MSF-310 to MSF-835. Hole distance (mm).	26			
Fig. 21	Busbar distances MSF -310 to MSF -835.	26			
Fig. 22	MSF -1000 to -1400	27			
Fig. 23	Hole pattern busbar MSF -1000 to -1400.	27			
Fig. 24	Connection of MSF-017 to MSF -085.	28			
Fig. 25	Connection of MSF-110 to MSF-145.	29			
Fig. 26	Connection of MSF-170 to MSF-250	30			
Fig. 27	Connection of MSF-170 to MSF-1400.	31			
Fig. 28	Connections on the PCB, control card.	32			
Fig. 29	Wiring circuit, "Minimum wiring".	33			
Fig. 30	Analogue input control, parameter set, analogue output and PTC input.	34			
Fig. 31	Forward/reverse wiring circuit.	34			
Fig. 32	Menu numbers for start/stop ramps, initial voltage at start and step down voltage at stop.	36			
Fig. 33	Menu numbers for dual voltage ramp at start/stop, initial voltage at start and step down-voltage at stop.	38			
Fig. 34	Current limit	39			
Fig. 35	Current limit	40			
Fig. 36	Pump control	40			
Fig. 37	Wiring for analogue input.	41			
Fig. 38	Setting voltage or current for analogue input.	41			
Fig. 39	Full voltage start.	41			
Fig. 40	Torque control at start/stop.	42			
Fig. 41	Current and speed in torque control.	42			
Fig. 42	The principle of the Torque Booster when starting the motor in voltage ramp mode.	43			
Fig. 43	Bypass wiring example MSF 310-1400.	44			
Fig. 44	Current transformer position when Bypass MSF-017 to MSF-250.	45			
Fig. 45	Current transformer position when Bypass MSF-310 to MSF-1400.	45			
Fig. 46	Braking time	46			
Fig. 47	Soft brake wiring example.	47			
Fig. 48	Slow speed controlled by an external signal.	48			
Fig. 49	Slow speed at start/stop during a selected time.	49			
Fig. 50	Start/stop sequence and relay function "Operation" and "Full voltage".	51			
Fig. 51	Wiring for analogue output.	52			
Fig. 52	Setting of current or voltage output.	52			
Fig. 53	Setting of J1 for current or voltage control.	53			

1. GENERAL INFORMATION

1.1 Integrated safety systems

The device is fitted with a protection system which reacts to:

- Over temperature.
- Voltage unbalance.
- Over- and under voltage.
- Phase reversal
- Phase loss
- Motor overload protection thermal and PTC.
- Motor load monitor, protecting machine or process max or min alarm
- Starts per hour limitation

The soft starter is fitted with a connection for protective earth \perp (PE).

MSF soft starters are all enclosed IP 20, except MSF-1000 and MSF-1400 which are delivered as open chassi IP00.

1.2 Safety measures

These instructions are a constituent part of the device and must be:

- Available to competent personnel at all times.
- Read prior to installation of the device.
- Observed with regard to safety, warnings and information given.

The tasks in these instructions are described so that they can be understood by people trained in electrical engineering. Such personnel must have appropriate tools and testing instruments available. Such personnel must have been trained in safe working methods.

The safety measures laid down in DIN norm VDE 0100 must be guaranteed.

The user must obtain any general and local operating permits and meet any requirements regarding:

- Safety of personnel.
- Product disposal.
- Environmental protection.

NOTE! The safety measures must remain in force at all times. Should questions or uncertainties arise, please contact your local sales outlet.

1.3 Notes to the Instruction Manual



WARNING! Warnings are marked with a warning triangle.

Serial number

The information given in these instructions only applies to the device with the serial number given on the label on the front page. A plate with the serial number is fixed to the device.

Important

For all enquiries and spare parts orders, please quote the correct name of the device and serial number to ensure that your inquiry or order is dealt with correctly and swiftly.

NOTE! These instructions only apply to the soft starters having the serial number given on the front page, and not for all models.

1.4 How to use the Instruction Manual

This instruction manual tells you how to install and operate the MSF soft starter. Read the whole Instruction Manual before installing and putting the unit into operation. For simple start-up, read chapter 2. page 8 to chapter 3. page 10.

Once you are familiar with the soft starter, you can operate it from the keyboard by referring to the chapter 13. page 79. This chapter describes all the functions and possible setting.

1.5 Standards

The device is manufactured in accordance with these regulations.

- IEC 947-4-2
- EN 60204-1 Electrical equipment of machines, part 1, General requirements and VDE 0113.
- EN 50081-2, EMC Emission
- EN 50081-1, EMC Emission with bypass
- EN 50082-2, EMC Immunity
- GOST
- UL508

1.6 Tests in accordance with norm EN60204

Before leaving the factory, the device was subjected to the following tests:

- Through connection of earthing system;
 - a) visual inspection.
 - b) check that earthing wire is firmly connected.
- Insulation
- Voltage
- Function

1.7 Inspection at delivery

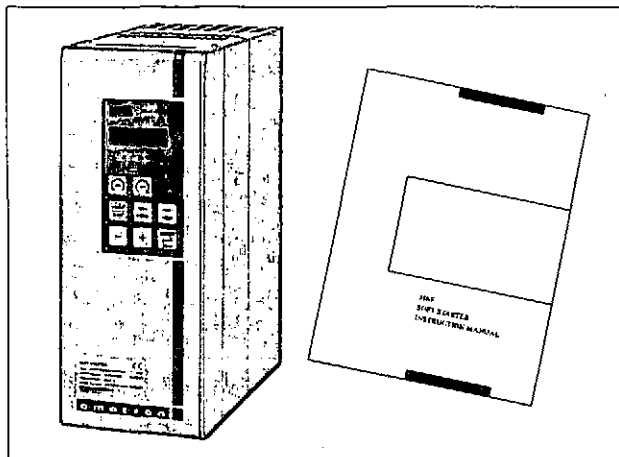


Fig. 1 Scope of delivery.

1.7.1 Transport and packing

The device is packed in a carton or plywood box for delivery. The outer packaging can be returned. The devices are carefully checked and packed before dispatch, but transport damage cannot be ruled out.

Check on receipt:

- Check that the goods are complete as listed on the delivery note, see type no. etc. on the rating plate.

Is the packaging damaged?

- Check the goods for damage (visual check).

If you have cause for complaint

If the goods have been damaged in transport:

- Contact the transport company or the supplier immediately.
- Keep the packaging (for inspection by the transport company or for returning the device).

Packaging for returning the device

- Pack the device so that it is shock-resistant.

Intermediate storage

After delivery or after it has been dismantled, the device can be stored before further use in a dry room.

1.8 Unpacking of MSF-310 and larger types

The soft starter is attached to the plywood box/loading stool by screws, and the soft starter must be unpacked as follows:

1. Open only the securing plates at the bottom of the box (bend downwards). Then lift up the box from the loading stool, both top and sides in one piece.
2. Loosen the three (3 pcs) screws on the front cover of the soft starter, down by the lower logo.
3. Push up the front cover about 20 mm so that the front cover can be removed.
4. Remove the two (2 pcs) mounting screws at the bottom of the soft starter.
5. Lift up the soft starter at the bottom about 10 mm and then push backwards about 20 mm so that the soft starter can be removed from the mounting hooks* at the top. The hooks are placed under the bottom plate and cannot be removed until the soft starter is pulled out.
6. Loosen the screws (2 pcs) for the mounting hooks and remove the hooks.
7. The hooks are used as an upper support for mounting the soft starter.


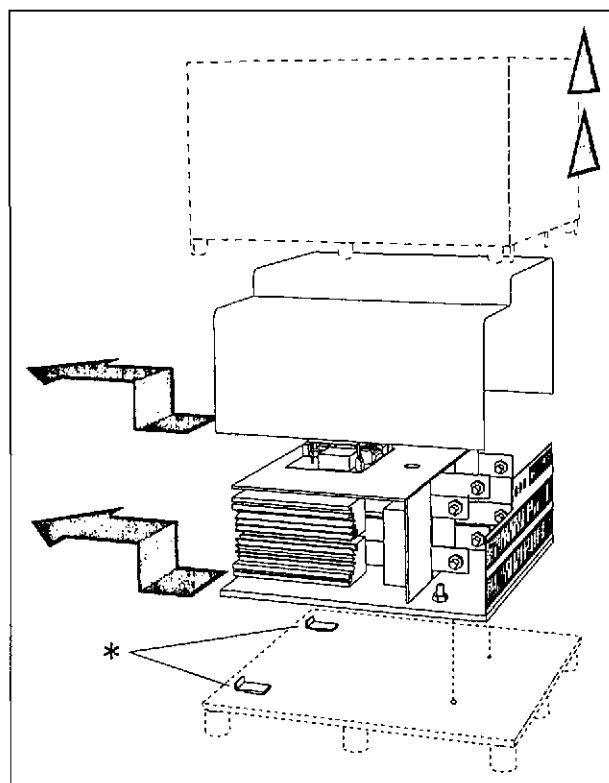


Fig. 2 Unpacking of MSF-310 and larger models.

2. DESCRIPTION

2.1 General

The MSF is installed directly between the mains and the supply cable to the motor. If a mains contactor is used it can be activated by the integrated K1 relay.

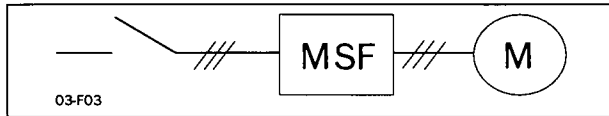

The MSF is developed for soft starting, stopping and braking three-phase motors.

There are 3 different kinds of soft starting control methods:

- **Control method 1-Phase**
The single phase controlled soft starters provide only a reduction in starting torque no control of current or torque. These starters need a main and bypass contactor as well as external motor protections. This is an open loop voltage controller. These starters are mainly in the power up to 7.5 kW.
- **Control method 2-Phase**
The two phase starters can start a motor without a mains contactor, but in that case voltage still is present at the motor when it's stopped. These starters are mainly in the power up to 22 kW.
- **Control method 3-Phase**
In the three phase Soft Starters there are different technologies:
 - Voltage control
 - Current control
 - Torque control

Voltage control

This method is the most used control method. The starter gives a smooth start but doesn't get any feedback on current or torque. The typical settings to optimize a voltage ramp are: Initial voltage, ramp time, dual ramp time.

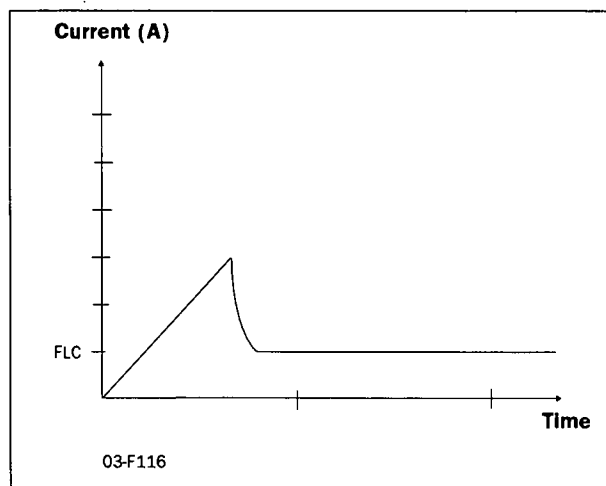


Fig. 3 Voltage control

Current control

The voltage ramp can be used with a current limit which stops the voltage ramp when the set maximum current level is reached. The maximum current level is the main setting and must be set by the user depending on the maximum current allowed for the application.

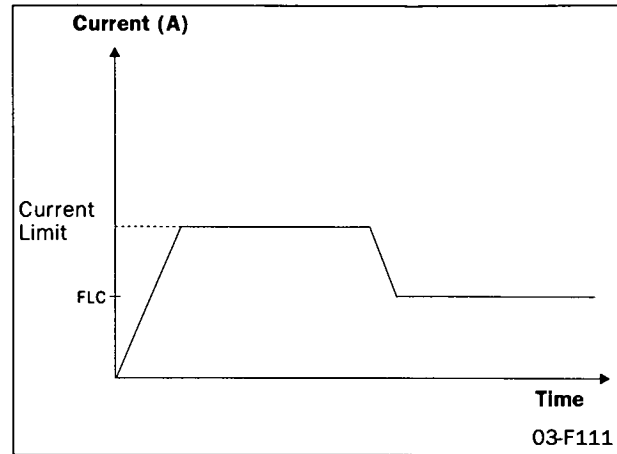


Fig. 4 Current control

Torque control

Is the most sufficient way of starting motors. Unlike voltage and current based systems the soft starter monitors the torque need and allows to start with the lowest possible current. Using a closed loop torque controller also linear ramps are possible. The voltage ramp can not hold back the motor starting torque this results in a current peak and unlinear ramps. In the current ramp there will be no peak current, but a higher current for a longer period of time during the start compared to torque control. Current starting doesn't give linear ramps. The linear ramps are very important in many applications. For an example, to stop a pump with an unlinear ramp will give water hammer. Soft starters which doesn't monitor the torque, will start and stop to fast if the load is lighter than the setting of current or ramp time.

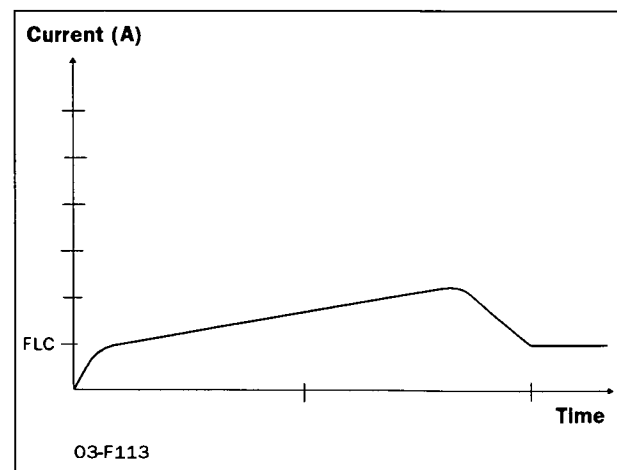


Fig. 5 Torque control

2.2 MSF control methods

MSF Soft Starters control all three phases supplied to the motor. It manages all the 3 possible starting methods where the closed loop Torque control is the most efficient way of starting and stopping motors.

2.2.1 General features

As mentioned above soft starters offer you several features and the following functions are available:

- Torque controlled start and stop
- Current limit control at start
- Application "Pump"
- External analogue input control
- Torque booster at start
- Full voltage start (D.O.L)
- Dual voltage ramp at start and stop
- Bypass
- Dynamic DC-brake or Softbrake
- Slow speed at start and stop
- Jogging forward and reverse
- Four parameter sets
- Analogue output indicating current, power or voltage
- Viewing of current, voltage, power, torque, power consumption, elapsed time etc.
- Integrated safety system acc. to § 1.1, page 6, with an alarm list.

3. HOW TO GET STARTED

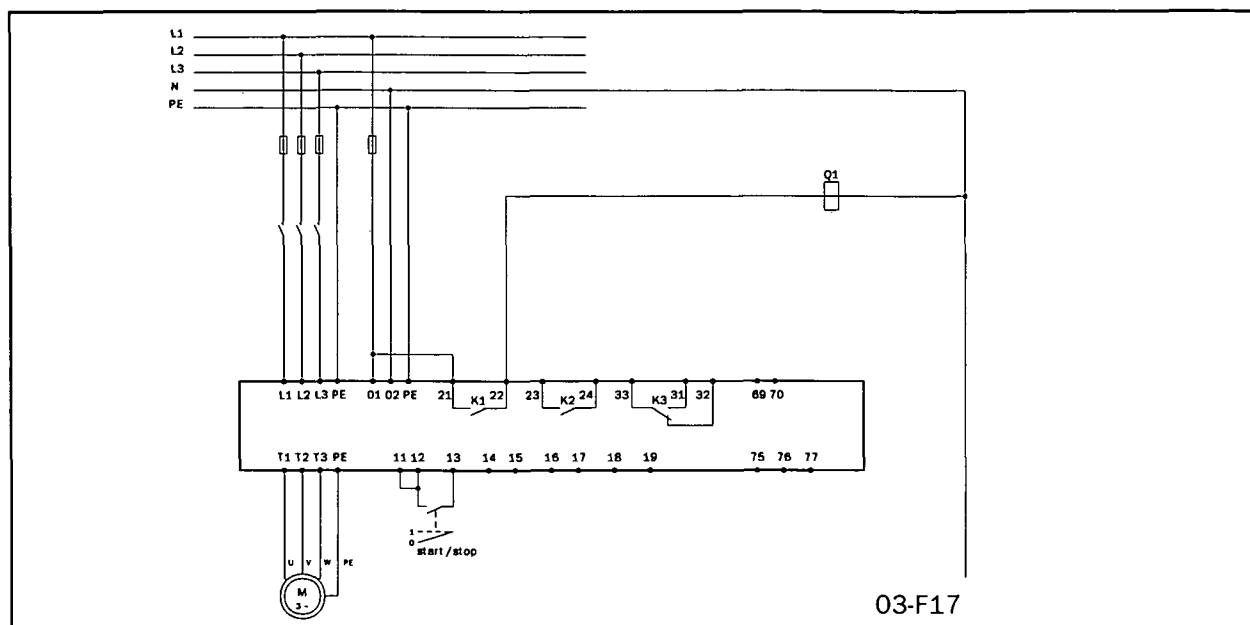


Fig. 6 Standard wiring.

This chapter describes briefly the set-up for basic soft start and soft stop by using the default “Voltage Ramp” function.



WARNING! Mounting, wiring and setting the device into operation must be carried out by properly trained personnel. Before set-up, make sure that the installation is according to chapter 6, page 24 and the Checklist below.

3.1 Checklist

- Mount the soft starter in accordance with chapter 6, page 24.
- Consider the power loss at rated current when dimensioning a cabinet, max. ambient temperature is 40°C (see chapter 12, page 74).
- Connect the motor circuit according to Fig. 6.
- Connect the protective earth.
- Connect the control voltage to terminals 01 and 02 (100 - 240 VAC or 380-500 VAC).
- Connect relay K1 (PCB terminals 21 and 22) to the contactor - the soft starter then controls the contactor.
- Connect PCB terminals 12 and 13 to, e.g., a 2-way switch (closing non-return) or a PLC, etc., to obtain control of soft start/soft stop.¹⁾
- Check that the motor and supply voltage corresponds to values on the soft starter’s rating plate.
- Ensure the installation complies with the appropriate local regulations.

1) The menu 006 must be put to 01 for start/stop command from keyboard.

3.2 Main functions/Applications



WARNING! Make sure that all safety measures have been taken before switching on the supply.

Switch on the control voltage (normally 1 x 230 V), all segments in the display and the two LED’s will be illuminated for a few seconds. Then the display will show menu 001. An illuminated display indicates there is supply voltage on the PCB. Check that you have mains voltage on the mains contactor or on the thyristors. The settings are carried out according to following:

The first step in the settings is to set menu 007 and 008 to “ON” to reach the main functions 020-025 and motor data 041-046.

NOTE! The main function is chosen according to the application. The tables in the applications and functions selection (table 1, page 15), gives the information to choose the proper main function.

3.3 Motor Data

Set the data, according to the motor type plate to obtain optimal settings for starting, stopping and motor protection.

NOTE! The default settings are for a standard 4-pole motor acc. to the nominal power of the soft-starter. The soft starter will run even if no specific motor data is selected, but the performance will not be optimal.

041 ^o	
Nominal motor voltage	
4 0 0	
Default:	400 V
Range:	200-700 V

046 ^o	
Nominal frequency	
5 0	
Default:	50 Hz
Range:	50/60 Hz

NOTE! Now go back to menu 007 and set it to "oFF" and then to menu 001.

042 ^o	
Nominal motor current	
4 5	
Default:	Nominal current soft starter
Range:	25% - 150% of $I_{n_{soft}}$ in Amp

3.4 Setting of the start and stop ramps

The menu's 002 and 003 can now be set to adjust the start ramp up time and the stop ramp down time.

043 ^o	
Nominal motor power	
2 2	
Default:	Nominal power soft starter
Range:	25% - 300% of $P_{n_{soft}}$ in kW

002 ^o	
Start time ramp 1	
1 0	
Default:	10 sec
Range:	1-60 sec

Estimate the starting-time for the motor/machine. Set "ramp up time" at start (1-60 sec).

Key "ENTER ↵" to confirm new value.

Key "NEXT →", "PREV ←" to change menu.

044 ^o	
Nominal motor speed	
1 4 5 0	
Default:	Nominal speed soft starter
Range:	500-3600 rpm

004 ^o	
Stop time ramp 1	
O F F	
Default:	oFF
Range:	oFF, 2-120 sec

Set "ramp down time" at stop (2-120 s).

"oFF" if only soft start requires.

045 ^o	
Nominal motor cos phi	
. 8 6	
Default:	0.86
Range:	0.50-1.00

3.5 Setting the start command

As default the start command is set for remote operation via terminal 11, 12 and 13. For easy commissioning it is possible to set the start command on the start key on the keyboards. This is set with menu 006.

006 ^o					
Selection of control mode					
<table border="1" style="display: inline-table;"> <tr> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px; text-align: center;">2</td> </tr> </table>					2
			2		
Default:	2				
Range:	1,2,3				

Menu 006 must be set to 1 to be able to operate from keyboard.

NOTE! Factory default setting is remote control (2).

To start and stop from the keyboard, the "START/STOP" key is used.

To reset from the keyboard, the "ENTER ↵ / RESET" key is used. A reset can be given both when the motor is running and when the motor is stopped. A reset by the keyboard will not start or stop the motor.

3.6 Viewing the motor current

Set the display to menu 005. Now the Motor current can be viewed on the display.

005 ^o				
RMS current read-out				
<table border="1" style="display: inline-table;"> <tr> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px; text-align: center;">0.0</td> </tr> </table>				0.0
		0.0		
Default:	-			
Range:	0.0-9999 Amp.			

NOTE! The menu 005 can be selected at any time when the motor is running.

3.7 Starting



WARNING! Make sure that all safety measures have been taken before starting the motor in order to avoid personal injury.

Start the motor by pressing the "START/STOP" key on the keyboard or through the remote control, PCB terminal 11, 12 and 13. When the start command is given, the mains contactor will be activated by relay K1 (PCB terminal 21 and 22), and the motor then starts softly.

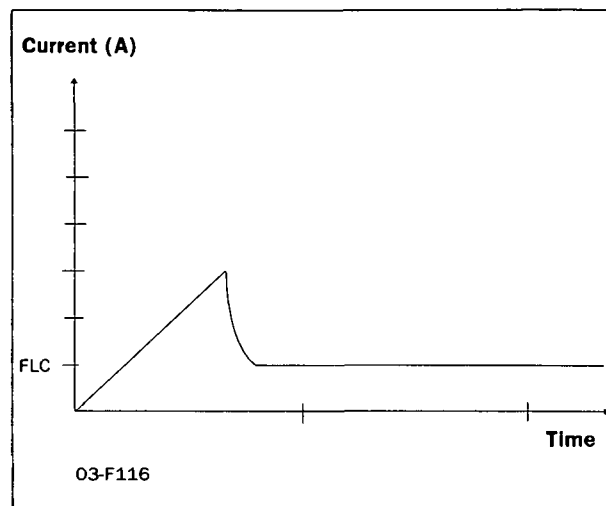


Fig. 7 Example of start ramp with main function voltage ramp.

4. APPLICATIONS AND FUNCTIONS SELECTION

This chapter is a guide to select the correct soft starter rating and the selection of the Main function and additional functions for each different application.

To make the right choice the following tools are used:

- The norm AC53a.**
 This norm helps selecting the soft starter rating with regard to duty cycle, starts per hour and maximum starting current.
- The Application Rating List.**
 With this list the soft starter rating can be selected depending on the kind of application used. The list use 2 levels of the AC53a norm. See table 1, page 15.
- The Application Function List.**
 This table gives an complete overview of most common applications and duties. For each applications the menu's that can be used are given. See table 2, page 17.
- Function and Combination matrix.**
 With these tables it is easy to see which combinations of Main and additional functions are possible, see table 3, page 19 and table 4, page 19.

4.1 Soft starter rating according to AC53a

The IEC947-4-2 standard for electronic starters defines AC53a as a norm for dimensioning of a soft starter.

The MSF soft starter is designed for continuous running. In the Applications table (table 1, page 15) two levels of AC53a are given. This is also given in the technical data tables (see chapter 12. page 74).

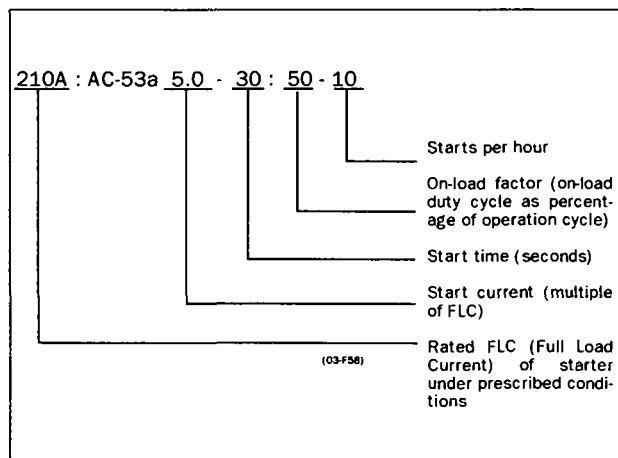


Fig. 8 Rating example AC53a.

The above example indicates a current rating of 210 Amps with a start current ratio of 5.0 x FLC (1050A) for 30 seconds with a 50% duty cycle and 10 starts per hour.

NOTE! If more than 10 starts/hour or other duty cycles are needed, please contact your supplier.

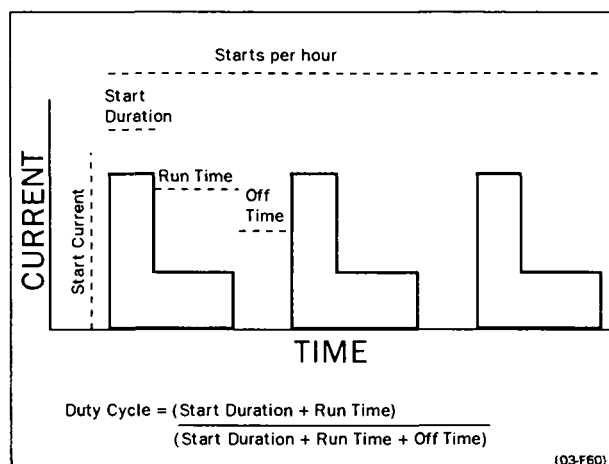


Fig. 9 Duty cycle, non bypass.

4.2 Soft starter rating according to AC53b

This norm is made for Bypass operation. Because the MSF soft starter is designed for continuous operation this norm is not used in the selection tables in this chapter.

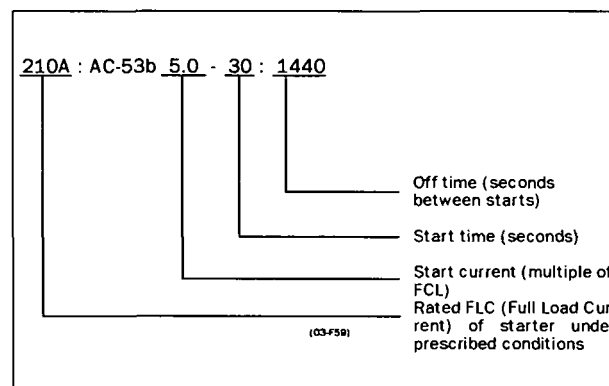


Fig. 10 Rating example AC53b.

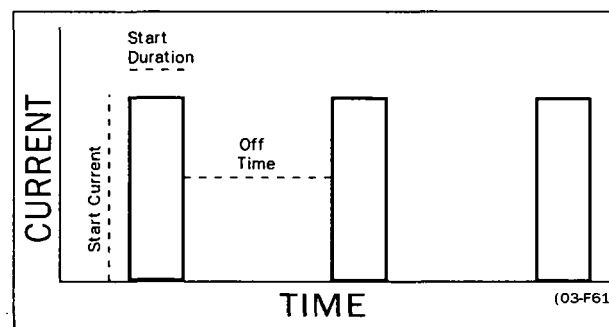


Fig. 11 Duty cycle, bypassed

The above example indicates a current rating of 210 Amps with a start current ratio of 5.0 x FLC (1050A) for 30 seconds with a 24-minute period between starts.

4.3 MSF Soft starter ratings

According to the norms AC53a and AC53b a soft starter can have many current ratings.

NOTE! Because the MSF soft starter is designed for continuous operation the norm AC53b is not used in the application rating list.

With help of the Application Rating List with typical starting currents and categories in the AC53a level (see table 1, page 15 and table 2, page 17) it is easy to select the proper soft starter rating with the application.

The Application Rating List uses two levels for the AC53a norm:

- **AC53a 5.0-30:50-10 (heavy duty)**
This level will be able to start all applications and follows directly the type number of the soft starter.
Example: MSF 370 is 370 Amps FLC and then 5 time this current in starting.
- **AC 53a 3.0-30:50-10 (normal/light duty)**
This level is for a bit lighter applications and here the MSF can manage a higher FLC.
Example: MSF 370 in this norm manage 450 Amps FLC and the 3 times this current in starting

NOTE! To compare Soft Starters It's important to ensure that not only FLC (Full Load Current) is compared but also that the operating parameters are identical.

4.4 The Application Ratings List

Table 1 gives the Application Ratings List. With this list the rating for the soft starter and Main Function menu can be selected.

Description and use of the table:

- **Applications.**
This column gives the various applications. If the machine or application is not in this list, try to identify a similar machine or application. If in doubt pleas contact your supplier.
- **AC53a ratings.**
The rating according to AC53a norm is here classified in 2 ratings. The first for normal/light duty (3.0-30:50-10) and the second for heavy duty (5.0-30:50-10)
- **Typical Starting current.**
Gives the typical starting current for each application
- **Main Function menu.**
The Main Function menu is advised here.
"25;=1", means: program selection 1 in menu 25.
- **Stop function.**
Gives a possible Stop function if applicable.
"36;=1 / 38-40", means: program selection 1 in menu 36, also menus 38 to 40 can be selected.

EXAMPLE:

Roller Mill:

- This is an application for heavy duty,
- Typical starting current of 350%.
- Main function Torque ramp start (menu 25) will give the best results.
- Stop function Dynamic Brake (menu 36, selection 1) can be used.
- As well as the Slow Speed at start and stop (menu 38-40) can be used for better start and stop performance.

Table 1 Applications Rating List

Applications	AC53a 3.0-30:50-10 (normal/light)	AC 53a 5.0-30:50-10 (heavy)	Typical starting current %	Main function Menu nr.	Stop function Menu nr.
General & Water					
Centrifugal Pump	x		300	22	22
Submersible Pump	x		300	22	22
Conveyor		x	300-400	25;=1	36;=1 / 38-40
Compressor: Screw	x		300	25	-
Compressor, Reciprocating	x		400	25;=1	-
Fan	x		300	25;=2	-
Mixer		x	400-450	25;=1	-
Agitator		x	400	25;=1	-
Metals & Mining					
Belt Conveyor		x	400	25;=1	36;=1 / 38-40
Dust Collector	x		350		-
Grinder	x		300	25;=1	36;=1
Hammer Mill		x	450	25;=1	36;=2
Rock Crusher		x	400	25;=1	-
Roller Conveyor	x	x	350	25;=1	36;=1 / 38-40
Roller Mill		x	450	25;=1	36;=1 or 2
Tumbler		x	400	25;=1	-
Wire Draw Machine		x	450	25;=1	36;=1 or 2
Food Processing					
Bottle Washer	x		300	25;=2	
Centrifuge		x	400	25;=1	36;=1 or 2
Dryer		x	400	25;=2	
Mill		x	450	25;=1	36;=1 or 2
Palletiser		x	450	25;=1	
Separator		x	450	25;=1	36;=1 or 2
Slicer	x		300	25;=1	
Pulp and Paper					
Re-Pulper		x	450	25;=1	
Shredder		x	450	25;=1	
Trolley		x	450	25;=1	
Petrochemical					
Ball Mill		x	450	25;=1	
Centrifuge		x	400	25;=1	36;=1 or 2
Extruder		x	500	25;=1	
Screw Conveyor		x	400	25;=1	
Transport & Machine Tool					
Ball Mill		x	450	25;=1	
Grinder		x	350	25;=1	36;=1
Material Conveyor		x	400	25;=1	36;=1 / 38-40
Palletiser		x	450	25;=1	
Press		x	350	25;=1	
Roller Mill		x	450	25;=1	
Rotary Table		x	400	25;=1	36;=1 / 38-40
Trolley		x	450	25;=1	
Escalator		x	300-400	25;=1	
Lumber & Wood Products					
Bandsaw		x	450	25;=1	36;=1 or 2
Chipper		x	450	25;=1	36;=1 or 2
Circular Saw		x	350	25;=1	36;=1 or 2
Debarker		x	350	25;=1	36;=1 or 2
Planer		x	350	25;=1	36;=1 or 2
Sander		x	400	25;=1	36;=1 or 2



4.5 The Application Functions List

This list gives an overview of many different applications/duties and a possible solution with one of the many MSF functions.

Description and use of the table:

- **Application /Duty.**
This column gives the various applications and level of duty. If the machine or application is not in this list, try to identify a similar machine or application. If in doubt please contact your supplier.
- **Problem.**
This column describes possible problems that are familiar for this kind of application.
- **Solution MSF.**
Gives the possible solution for the problem using one of the MSF functions.
- **Menus.**
Gives the menu numbers and selection for the MSF function.
"25;=1", means: program selection 1 in menu 25.
"36;=1 / 34,35", means: program selection 1 in menu 36, menus 34 and 35 are related to this function.

Table 2 Application Function List

Application/ Duty	Problem	Solution MSF	Menus
PUMP Normal	Too fast start and stops	MSF Pump application with following start/stop features	22
	Non linear ramps	Linear ramps without tacho.	
	Water hammer	Torque ramps for quadratic load	
	High current and peaks during starts.		
	Pump is going in wrong direction	Phase reversal alarm	88
	Dry running	Shaft power underload	96-99
	High load due to dirt in pump	Shaft power overload	92-95
COMPRESSOR Normal	Mechanical shock for compressor, motor and transmissions	Linear Torque ramp or current limit start.	25;=1 or 20,21
	Small fuses and low current available.		
	Screw compressor going in wrong direction	Phase sequence alarm	88
	Damaged compressor if liquid ammonia enters the compressor screw.	Shaft power overload	92-95
	Energy consumption due to compressor is running unloaded	Shaft power underload	96-99
CONVEYOR Normal/Heavy	Mechanical shocks for transmissions and transported goods.	Linear Torque ramp	25;=1
	Filling or unloading conveyors	Slow speed and accurate position control.	37-40,57,58
	Conveyor jammed	Shaft power overload	92-95
	Conveyor belt or chain is off but the motor is still running	Shaft power underload	96-99
	Starting after screw conveyor have stopped due to overload.	Jogging in reverse direction and then starting in forward.	
	Conveyor blocked when starting	Locked rotor function	75
FAN Normal	High starting current in end of ramps	Torque ramp for quadratic need	25;=2
	Slivering belts.		
	Fan is going in wrong direction when starting.	Catches the motor and going easy to zero speed and then starting in right direction.	
	Belt or coupling broken	Shaft power underload	96-99
	Blocked filter or closed damper.		
PLANER Heavy	High inertia load with high demands on torque and current control.	Linear Torque ramp gives linear acceleration and lowest possible starting current.	25;=1
	Need to stop quick both by emergency and production efficiency reasons.	Dynamic DC brake without Contactor for medium loads and controlled sensor less soft brake with reversing contactor for heavy loads.	36;=1,34,35 36;=2,34,35
	High speed lines	Conveyor speed set from planer shaft power analog output.	54-56
	Worn out tool	Shaft power overload	92-95
	Broken coupling	Shaft power underload	96-99
ROCK CRUSHER Heavy	High inertia	Linear Torque ramp gives linear acceleration and lowest possible starting current.	25;=1
	Heavy load when starting with material	Torque boost	30,31
	Low power if a diesel powered generator is used.		
	Wrong material in crusher	Shaft power overload	92-95
	Vibrations during stop	Dynamic DC brake without Contactor	36;=1,34,35
BANDSAW Heavy	High inertia load with high demands on torque and current control.	Linear Torque ramp gives linear acceleration and lowest possible starting current.	25;=1
	Need to stop quick both by emergency and production efficiency reasons.	Dynamic DC brake without Contactor for medium loads and controlled sensor less soft brake with reversing contactor for heavy loads.	36;=1,34,35 36;=2,34,35
	High speed lines	Conveyor speed set from band saw shaft power analog output.	54-56
	Worn out saw blade	Shaft power overload	
	Broken coupling, saw blade or belt	Shaft power underload	
CENTRIFUGE Heavy	High inertia load	Linear Torque ramp gives linear acceleration and lowest possible starting current.	25;=1
	To high load or unbalanced centrifuge	Shaft power overload	
	Controlled stop	Dynamic DC brake without Contactor for medium loads and controlled sensor less soft brake with reversing contactor for heavy loads.	36;=1,34,35 36;=2,34,35
	Need to open centrifuge in a certain position.	Braking down to slow speed and then positioning control.	37-40,57,58

Table 2 Application Function List

Application/ Duty	Problem	Solution MSF	Menus
MIXER Heavy	Different materials	Linear Torque ramp gives linear acceleration and lowest possible starting current.	25;=1
	Need to control material viscosity	Shaft power analog output	54-56
	Broken or damaged blades	Shaft power overload	92-95
		Shaft power underload	96-99
HAMMER MILL Heavy	Heavy load with high breakaway torque	Linear Torque ramp gives linear acceleration and lowest possible starting current.	25;=1
		Torque boost in beginning of ramp.	30,31
	Jamming	Shaft power overload	92-95
	Fast stop	Controlled sensor less soft brake with reversing contactor for heavy loads.	36;=2,34,35
	Motor blocked	Locked rotor function	75

EXAMPLE:

Hammer Mill:

- This is an application for heavy duty,
- Main function Torque ramp start (menu 25) will give the best results.
- Torque boost to overcome high breakaway torque (menu 30 and 31)
- Overload alarm function for jamming protection (menu 92 and 95)
- Stop function Soft Brake (menu 36, selection 2) can be used. Menu 34 and 35 to set the brake time and strength.



4.6 Function and combination matrix

Table 3 gives an overview of all possible functions and combination of functions.

1. Select function in the horizontal “Main Function” column. Only one function can be selected in this column, at a time.
2. In the vertical column “Additional Functions” you will find all possible function that can be used together with your selected main function.

Table 3 Combination matrix

Main Functions	Additional functions												
	Dual ramp start	Dual ramp stop	Bypass (032)	Power factor control (033)	Torque boost (030)	Jogging with keyboard/terminal	Timer controlled slow speed	External controlled slow speed	Complete protection	Parameter sets (061)	Dynamic Vector Brake (036-1)	Softbrake (036-2)	
Voltage ramp start/stop (default)	X	X	X	X	X	X	X	X	X	X	X		
Torque control start/stop (menu 025)			X	X	X	X	X	X	X	X	X		
Voltage ramp with current limit (menu 020)		X	X	X	X	X	X	X	X	X	X	X	
Current limit start (menu 021)		X	X	X	X	X	X	X	X	X	X	X	
Pump control (menu 022)			X						X	X			
Analog input (menu 023)									X	X			
Direct on line start (menu 024)			X						X	X			

By using one parameter set, the following start/stop table is given.

NOTE! Voltage and torque ramp for starting only with softbrake.

Table 4 Start/stop combination.

START FUNCTION	STOP FUNCTION						
	Voltage ramp stop	Torque control stop	Pump control	Analog input	Direct on line stop	Dynamic Vector Brake	Softbrake
Voltage ramp start	X				X	X	X
Torque control start		X			X	X	X
Current limit start	X				X	X	X
Voltage ramp with current limit	X				X	X	X
Pump control			X		X		
Analog input				X	X		
Direct on line start					X		

By using different parameter sets for start and stop, it is possible to combine all start and stop functions.

4.7 Special condition

4.7.1 Small motor or low load

The minimum load current for the soft starter is 10% of the rated current of the soft starter. Except for the MSE-017 there the min. current is 2 A. Example MSE-210, rated current = 210 A. Min. Current 21 A. Please note that this is "min. load current" and not min. rated motor current.

4.7.2 Ambient temperature below 0°C

For ambient temperatures below 0°C e.g. an electrical heater must be installed in the cabinet. The soft starter can also be mounted in some other place, due to that the distance between the motor and the soft starter is not critical.

4.7.3 Phase compensation capacitor

If a phase compensation capacitor is to be used, it must be connected at the inlet of the soft starter, not between the motor and the soft starter.

4.7.4 Pole-changing contactor and two speed motor

The switching device must be connected between the output of the soft starter and the motor.

4.7.5 Shielded motor cable

It is not necessary to use shielded wires together with soft starters. This is due to the very low radiated emissions.

NOTE! The soft starter should be wired with shielded control cable to fulfill EMC regulations acc. to § 1.5, page 6.

4.7.6 Slip ring motors

Slip ring motors can not be used together with the soft starter. Unless the motor is rewinded (as a squirrel cage motor). Or keep the resistors in, please contact your supplier.

4.7.7 Pump control with soft starter and frequency inverter together

It is possible e.g. in a pump station with two or more pumps to use one frequency inverter on one pump and soft starters on each of the other pumps. The flow of the pumps can then be controlled by one common control unit.

4.7.8 Starting with counter clockwise rotating loads

It is possible to start a motor clockwise, even if the load and motor is rotating counter clockwise e.g. fans. Depending on the speed and the load "in the wrong direction" the current can be very high.

4.7.9 Running motors in parallel

When starting and running motors in parallel the total amount of the motor current must be equal or lower than the connected soft starter. Please note that it is not possible to make individual settings for each motor. The start ramp can only be set for an average starting ramp for all the connected motors. This applies that the start time may differ from motor to motor. This is also even if the motors are mechanically linked, depending on the load etc.

4.7.10 How to calculate heat dissipation in cabinets

See chapter 12. page 74 "Technical Data", "Power loss at rated motor load (I_N)", "Power consumption control card" and "Power consumption fan". For further calculations please contact your local supplier of cabinets, e.g. Rittal.

4.7.11 Insulation test on motor

When testing the motor with high voltage e.g. insulation test the soft starter must be disconnected from the motor. This is due to the fact that the thyristors will be seriously damage by the high peak voltage.

4.7.12 Operation above 1000 m

All ratings are stated at 1000 m over sea level. If a MSF is placed for example at 3000 m it must be derated unless that the ambient temperature is lower than 40 C and compensate for this higher pressure.

To get information about motors and drives at higher altitudes please contact your supplier to get technical information nr 151.

4.7.13 Reversing

Motor reversing is always possible. See Fig. 31 on page 34 for the advised connection of the reverse contactors.

At the moment that the mains voltage is switched on, the phase sequence is monitored by the control board. This information is used for the Phase Reverse Alarm (menu 88, see § 7.22, page 56).

However if this alarm is not used (factory default), it is also possible to have the phase reversal contactors in the input of the soft starter.

5. OPERATION OF THE SOFT STARTER

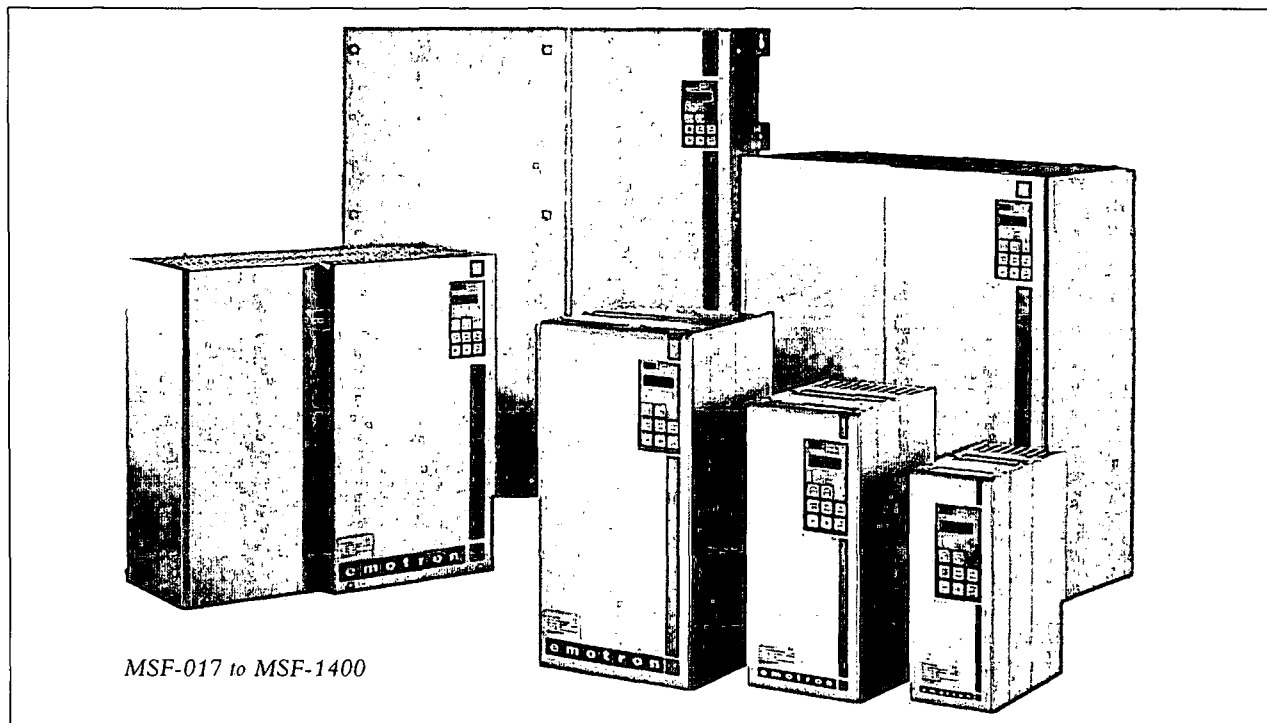


Fig. 12 MSF soft starter models.

5.2 PPU unit

5.1 General description of user interface



WARNING! Never operate the soft starter with removed front cover.

To obtain the required operation, a number of parameters must be set in the soft starter.

Setting/configuration is done either from the built-in keyboard or by a computer/control system through the serial interface or bus (option). Controlling the motor i.e. start/stop, selection of parameter set, is done either from the keyboard, through the remote control inputs or through the serial interface (option).

Setting



WARNING! Make sure that all safety measures have been taken before switching on the supply.

Switch on the supply (normally 1 x 230 V), all segments in the display will light up for a few seconds. Then the display will show menu 001. An illuminated display indicates there is supply voltage on the PCB.

Check that you have voltage on the mains contactor or on the thyristors. To be able to use all extended functions and optimize of the performance, program the motor data.

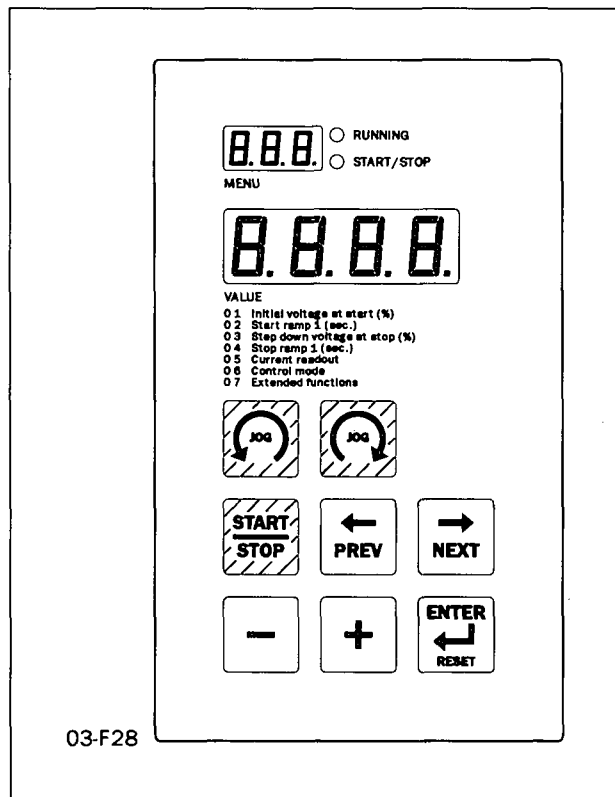


Fig. 13 PPU unit.

The programming and presentation unit (PPU) is a build-in operator panel with two light emitting diodes, three + four seven-segment LED-displays and a keyboard.

5.3 LED display

The two light emitting diodes indicates start/stop and running motor/machine. When a start command is given either from the PPU, through the serial interface (option) or through the remote control inputs, the start/stop-LED will be illuminated.

At a stop command the start/stop-LED will switch off. When the motor is running, the running-LED is flashing during ramp up and down and is illuminated continuously at full motor voltage.

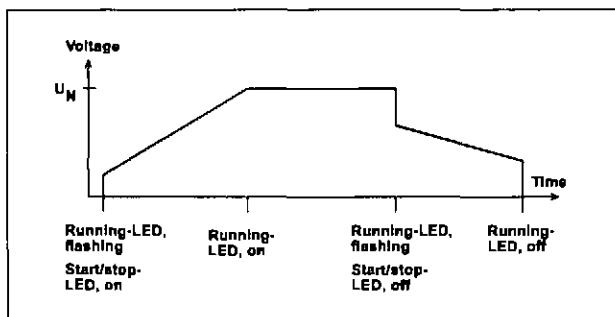


Fig. 14 LED indication at different operation situation.

5.4 The Menu Structure

The menus are organised in a simple one level structure with the possibility to limit the number of menus that are reachable by setting the value in menu 007 to "oFF" (factory setting). With this setting only the basic menus 001, 002, 003, 004, 005, 006 and 007 can be reached.

This to simplify the setting when only voltage start/stop ramps are used.

If menu 007 is in "on" and menu 008 "oFF" it is possible to reach all viewing menus and alarm lists as well.

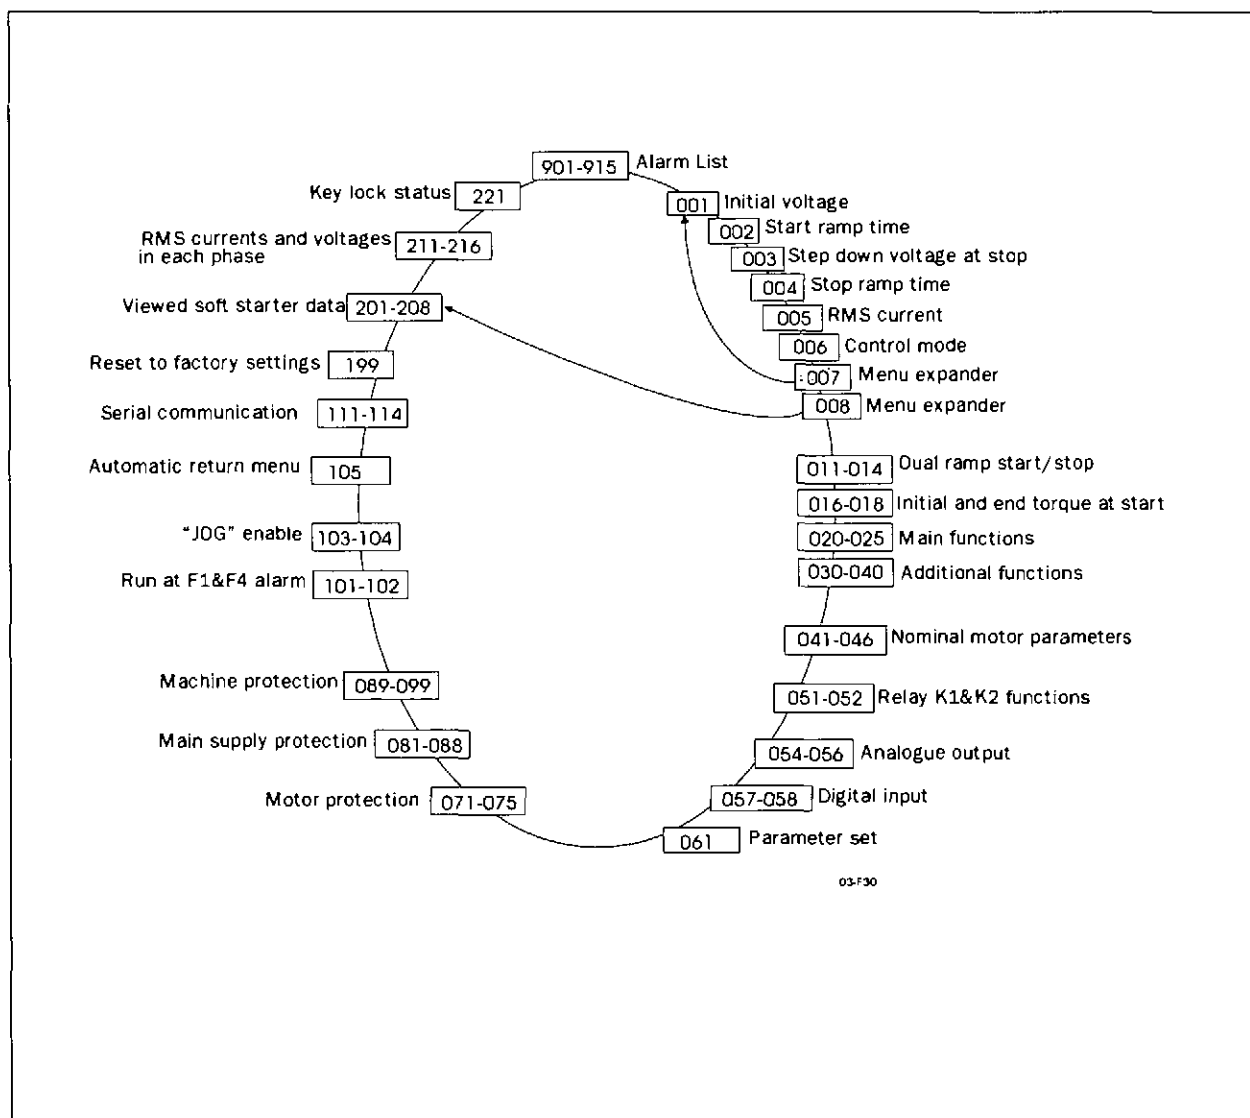


Fig. 15 Menu structure.

5.5 The keys



The function of the keyboard are based on a few simple rules. At power up menu 001 is shown automatically. Use the "NEXT →" and "PREV ←" keys to move between menus. To scroll through menu numbers, press and hold either the "NEXT →" or the "PREV ←" key. The "+" and "-" keys are used to increase respectively decrease the value of setting. The value is flashing during setting. The "ENTER ↵" key confirms the setting just made, and the value will go from flashing to stable. The "START/STOP" key is only used to start and stop the motor/machine. The  and  keys are only used for JOG from the keyboard. Please note one has to select enable in menu 103 or 104, see § 7.25, page 61.

Table 5 The keys







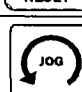
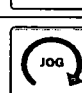
Start/stop motor operation.	
Display previous menu.	
Display next menu.	
Decrease value of setting.	
Increase value of setting.	
Confirm setting just made. Alarm reset.	
JOG Reverse	
JOG Forward	

Table 6 Control modes

Operation/ Set-up		Start/Stop	JOG fwd/rev	Alarm reset	Setting of parameters	
					Parameter set with external selection Menu 061=0	Parameter set with internal selection Menu 061=1-4
Control mode						
Keyboard Menu 006=1	Unlocked keyboard	Keyboard	Keyboard	Keyboard	_____	Keyboard
	Locked keyboard	_____	_____	_____	_____	_____
Remote Menu 006=2	Unlocked keyboard	Remote	Remote	Remote and keyboard	Remote	Keyboard
	Locked keyboard	Remote	Remote	Remote	Remote	_____
Serial comm. Menu 006=3	Unlocked keyboard	Serial comm	Serial comm	Serial comm. and keyboard	_____	Serial comm
	Locked keyboard	Serial comm	Serial comm	Serial comm	_____	Serial comm

5.6 Keyboard lock

The keyboard can be locked to prohibit operation and parameter setting by an unauthorised. Lock keyboard by pressing both keys "NEXT →" and "ENTER ↵" for at least 2 sec. The message '- Loc' will display when locked. To unlock keyboard press the same 2 keys "NEXT →" and "ENTER ↵" for at least 2 sec. The message 'unlo' will display when unlocked.

In locked mode it is possible to view all parameters and read-out, but it is forbidden to set parameters and to operate the soft starter from the keyboard.

The message '-Loc' will display if trying to set a parameter or operate the soft starter in locked mode.

The key lock status can be read out in menu 221.

221 ^o					
Locked keyboard info					
<table border="1"> <tr> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px; text-align: center;">n</td> <td style="width: 20px; height: 20px; text-align: center;">o</td> </tr> </table>				n	o
		n	o		
Default:	no				
Range:	no, YES				
no	Keyboard is not locked				
YES	Keyboard is locked				

5.7 Overview of soft starter operation and parameter set-up.

Table with the possibilities to operate and set parameters in soft starter.

Control mode is selected in menu 006 and Parameter set is selected in menu 061. For the keyboard lock function, see § 7.30, page 65.

6. INSTALLATION AND CONNECTION

Mounting, wiring and setting the device into operation must be carried out by trained personnel (electricians specialised in heavy current technology):

- In accordance with the local safety regulations of the electricity supply company.
- In accordance with DIN VDE 0100 for setting up heavy current plants.

Care must be taken to ensure that personnel do not come into contact with live circuit components.



WARNING! Never operate the soft starter with removed front cover.

6.1 Installation of the soft starter in a cabinet

When installing the soft starter:

- Ensure that the cabinet will be sufficiently ventilated, after the installation.
- Keep the minimum free space, see the tables on page 25.
- Ensure that air can flow freely from the bottom to the top.

NOTE! When installing the soft starter, make sure it does not come into contact with live components. The heat generated must be dispersed via the cooling fins to prevent damage to the thyristors (free circulation of air).

MSF-017 to MSF-835 soft starters are all delivered as enclosed versions with front opening. The units have bottom entry for cables etc. see Fig. 25 on page 29 and Fig. 27 on page 31. MSF-1000 and MSF-1400 are delivered as open chassis.

NOTE! The soft starter should be wired with shielded control cable to fulfill EMC regulations acc. to § 1.5, page 6.

NOTE! For UL-approval use 75°C Copper wire only.

MSF-017 to MSF-250

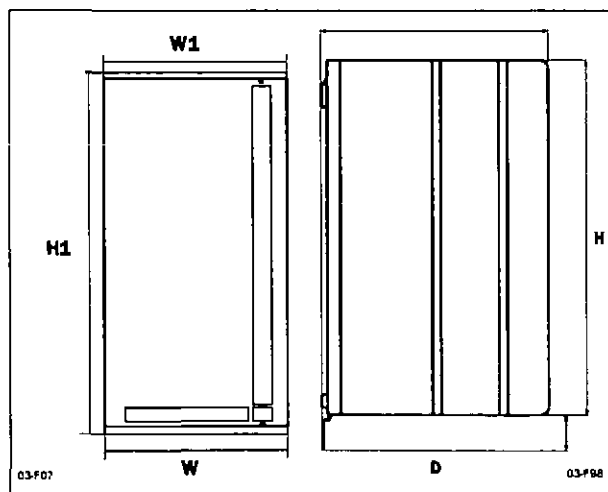


Fig. 16 MSF-017 to MSF-250 dimensions.

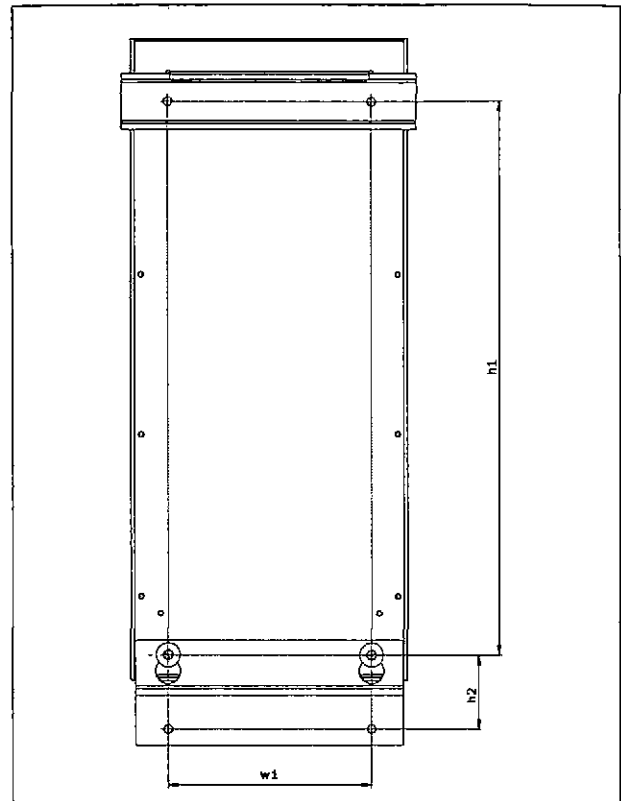


Fig. 17 Hole pattern for MSF-017 to MSF-250 (backside view).

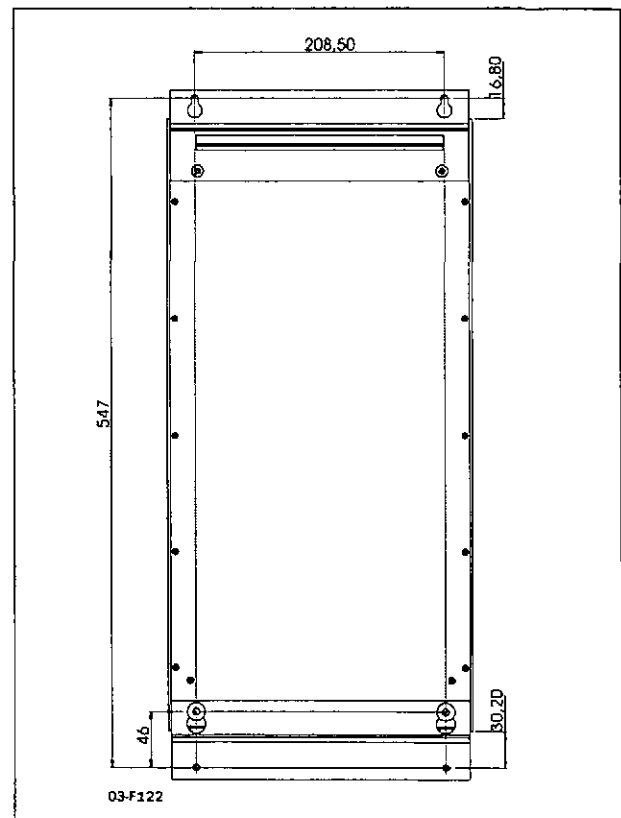


Fig. 18 Hole pattern for MSF-170 to MSF-250 with upper mounting bracket instead of DIN-rail.

MSF-017 to MSF-250

Table 7 MSF-017 to MSF-250.

MSF model	Class	Connection	Conv./ Fan	Dimension HxWxD (mm)	Hole dist. w1 (mm)	Hole dist. h1 (mm)	Diam./ screw	Weight (kg)
-017, -030	IP 20	Busbars	Convection	320x126x260	78.5	265	5.5/M5	6.7
-045, -060, -075, -085	IP 20	Busbars	Fan	320x126x260	78.5	265	5.5/M5	6.9
-110, -145	IP 20	Busbars	Fan	400x176x260	128.5	345	5.5/M5	12.0
-170, -210, -250	IP 20	Busbars	Fan	500x260x260	208.5	445	5.5/M5	20

Table 8 MSF-017 to MSF-250

MSF model	Minimum free space (mm):			Dimension Connection busbars Cu	Tightening torque for bolt (Nm)		
	above 1)	below	at side		Cable	PE-cable	Supply and PE
-017, -030, -045	100	100	0	15x4 (M6), PE (M6)	8	8	0.6
-060, -075, -085	100	100	0	15x4 (M8), PE (M6)	12	8	0.6
-110,-145	100	100	0	20x4 (M10), PE (M8)	20	12	0.6
-170, -210, -250	100	100	0	30x4 (M10), PE (M8)	20	12	0.6

1) Above: wall-soft starter or soft starter-soft starter

MSF-310 to MSF-1400

Table 9 MSF-310 to MSF-1400 see Fig. 20 on page 26.

MSF model	Class	Connection	Conv./ Fan	Dimension HxWxD (mm)	Hole dist. w1 (mm)	Hole dist. h1 (mm)	Diam./ screw	Weight (kg)
-310	IP 20	Busbars	Fan	532x547x278	460	450	8.5/M8	42
-370, -450	IP 20	Busbars	Fan	532x547x278	460	450	8.5/M8	46
-570	IP 20	Busbars	Fan	687x640x302	550	600	8.5/M8	64
-710	IP 20	Busbars	Fan	687x640x302	550	600	8.5/M8	78
-835	IP 20	Busbars	Fan	687x640x302	550	600	8.5/M8	80
-1000, -1400	IP00	Busbar	Fan	900x875x336	Fig. 23		8.5/M8	175

Table 10 MSF-310 to MSF-1400.

MSF model	Minimum free space (mm):			Dimension Connection, busbars Al	Tightening torque for bolt (Nm)		
	above 1)	below	at side		Cable	PE-cable	Supply and PE
-310, -370, -450	100	100	0	40x8 (M12)	50	12	0.6
-570, -710, -835	100	100	0	40x10 (M12)	50	12	0.6
-1000, -1400	100	100	100	75x10 (M12)	50	12	0.6

1) Above: Wall-soft starter or soft starter-soft starter

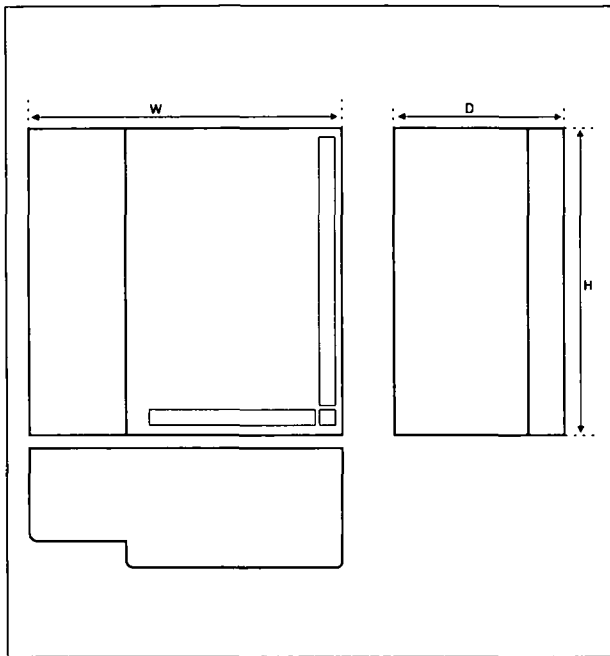


Fig. 19 MSF -310 to MSF -835.

MSF	e	f
-310 to -450	44	39
-570 to -835	45.5	39

Observe that the two supplied mounting hooks (see § 1.8, page 7 and Fig. 2 on page 7 must be used for mounting the soft starter as upper support (only MSF-310 to MSF-835).

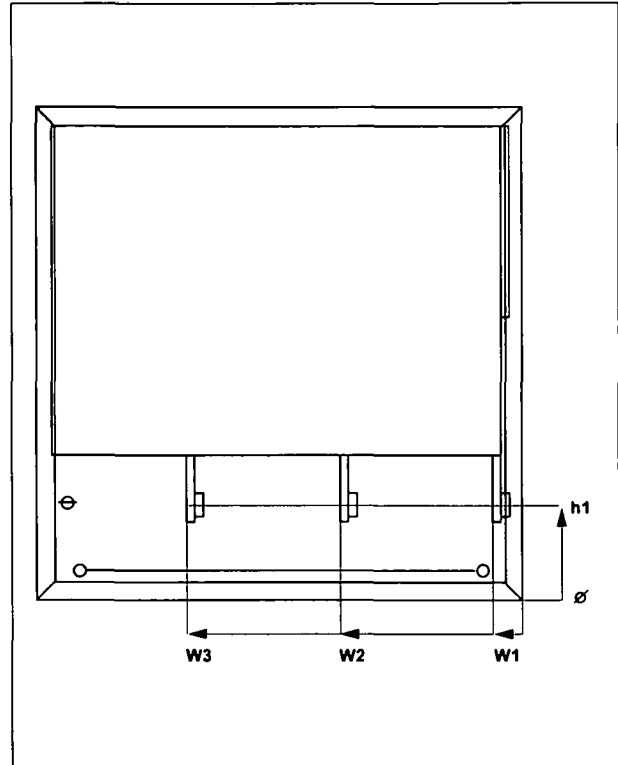


Fig. 21 Busbar distances MSF -310 to MSF -835.

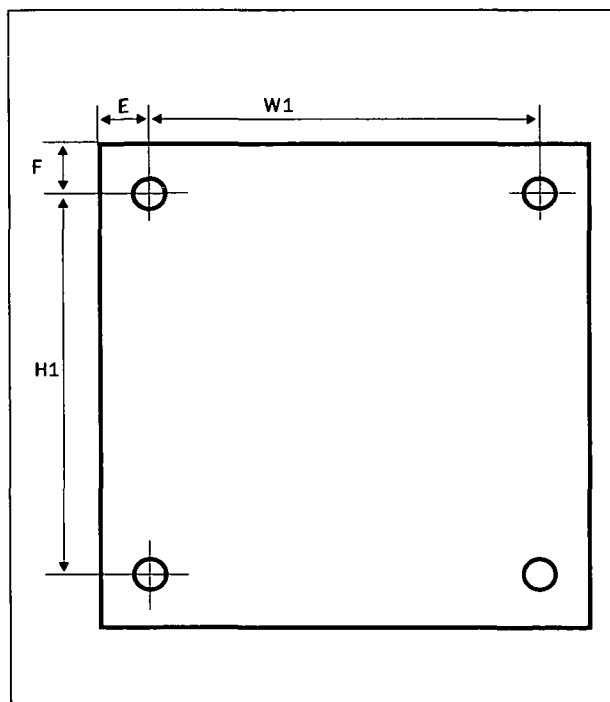


Fig. 20 Hole pattern for screw attachment, MSF-310 to MSF-835. Hole distance (mm).

Table 11 Busbar distances

MSF model	Dist. h1 (mm)	Dist. w1 (mm)	Dist. w2 (mm)	Dist. w3 (mm)
-310 to -450	104	33	206	379
-570 to -835	129	35	239.5	444
-1000 -1400		55	322.5	590.5

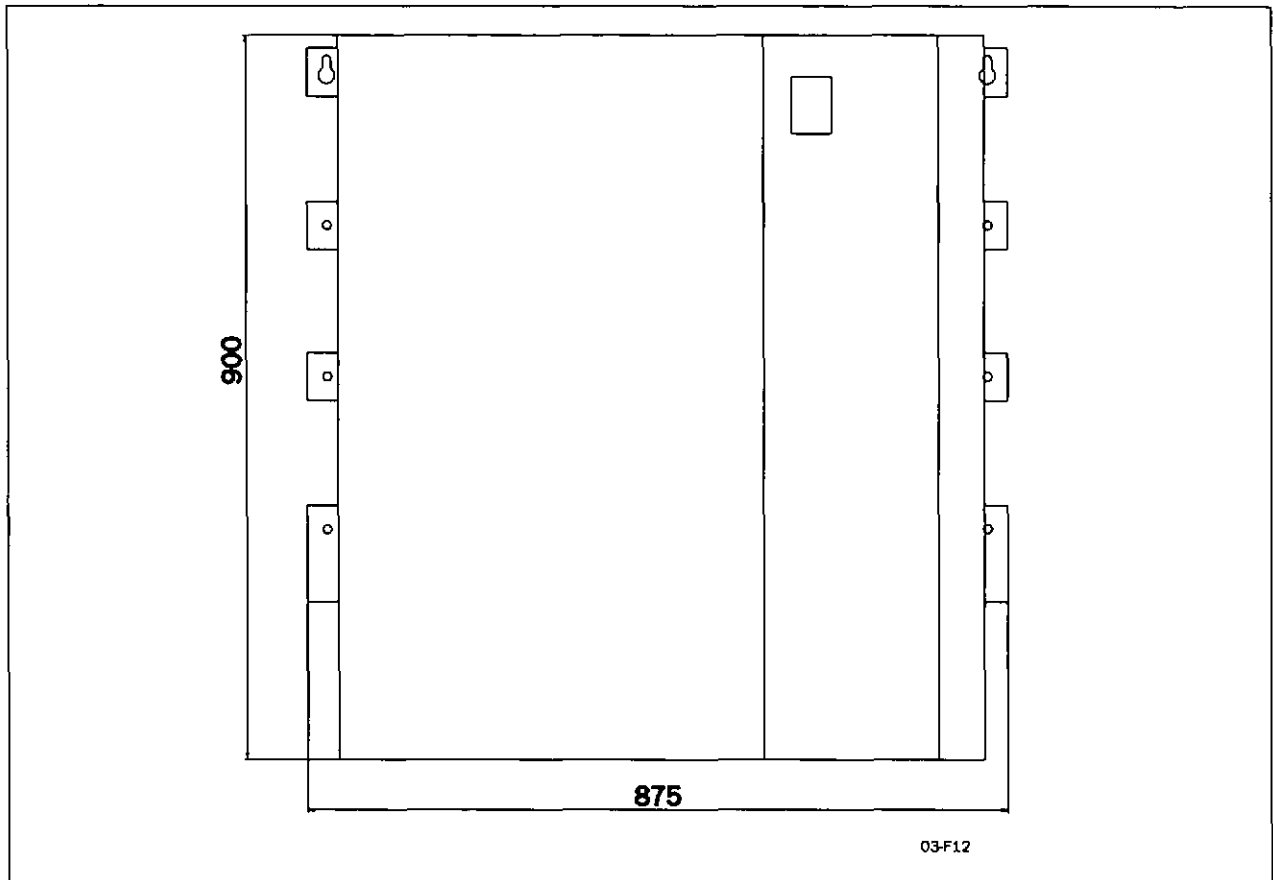


Fig. 22 MSF -1000 to -1400

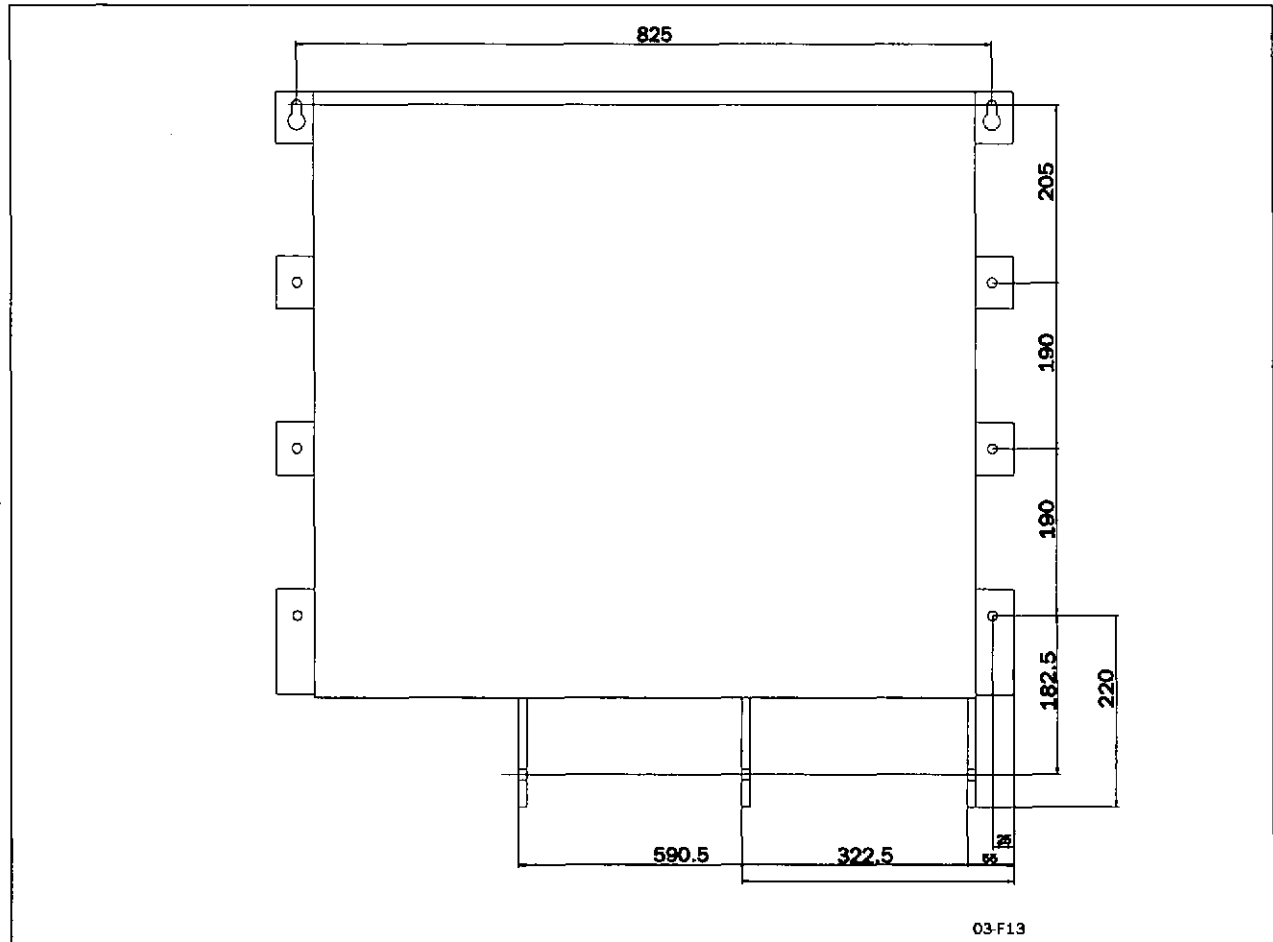


Fig. 23 Hole pattern busbar MSF -1000 to -1400.

6.2 Connections

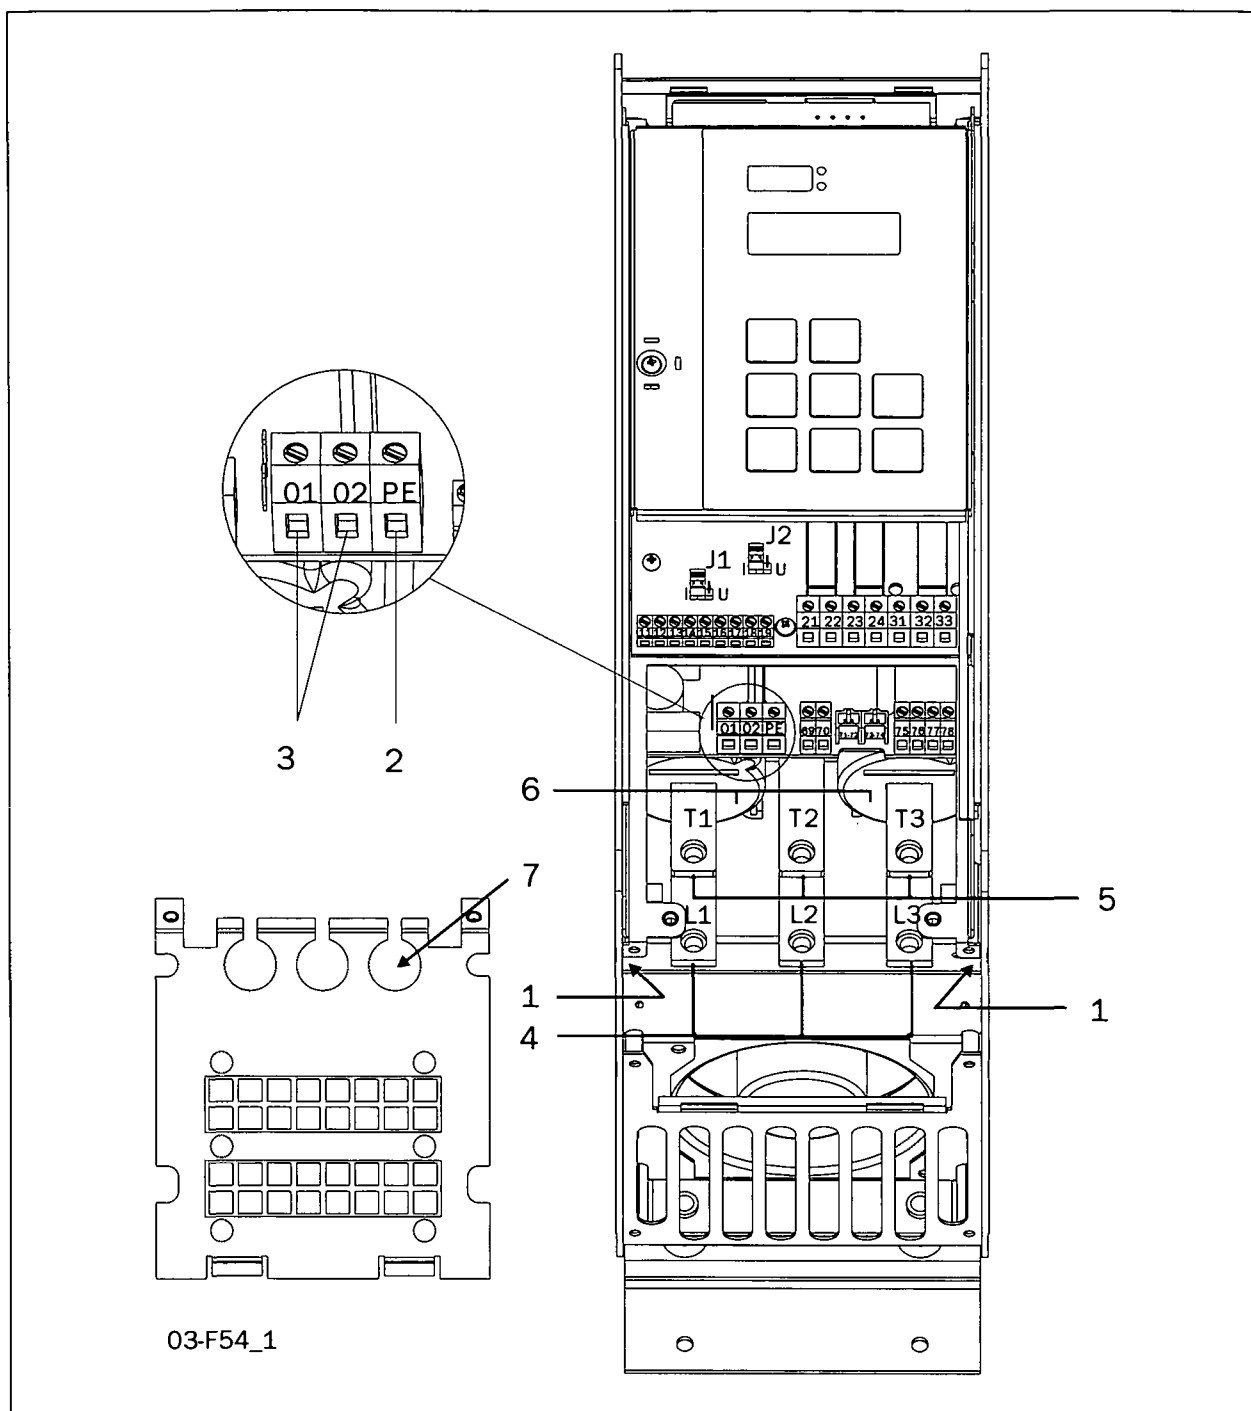


Fig. 24 Connection of MSF-017 to MSF-085.

Connection of MSF-017 to MSF-085

Device connections

1. Protective earth, \perp (PE), Mains supply, Motor (on the right and left inside of the cabinet)
2. Protective earth, \perp (PE), Control voltage
3. Control voltage connection 01, 02
4. Mains supply L1, L2, L3
5. Motor power supply T1, T2, T3
6. Current transformers (possible to mount outside for bypass see § 7.12, page 43)
7. Mounting of EMC gland for control cables

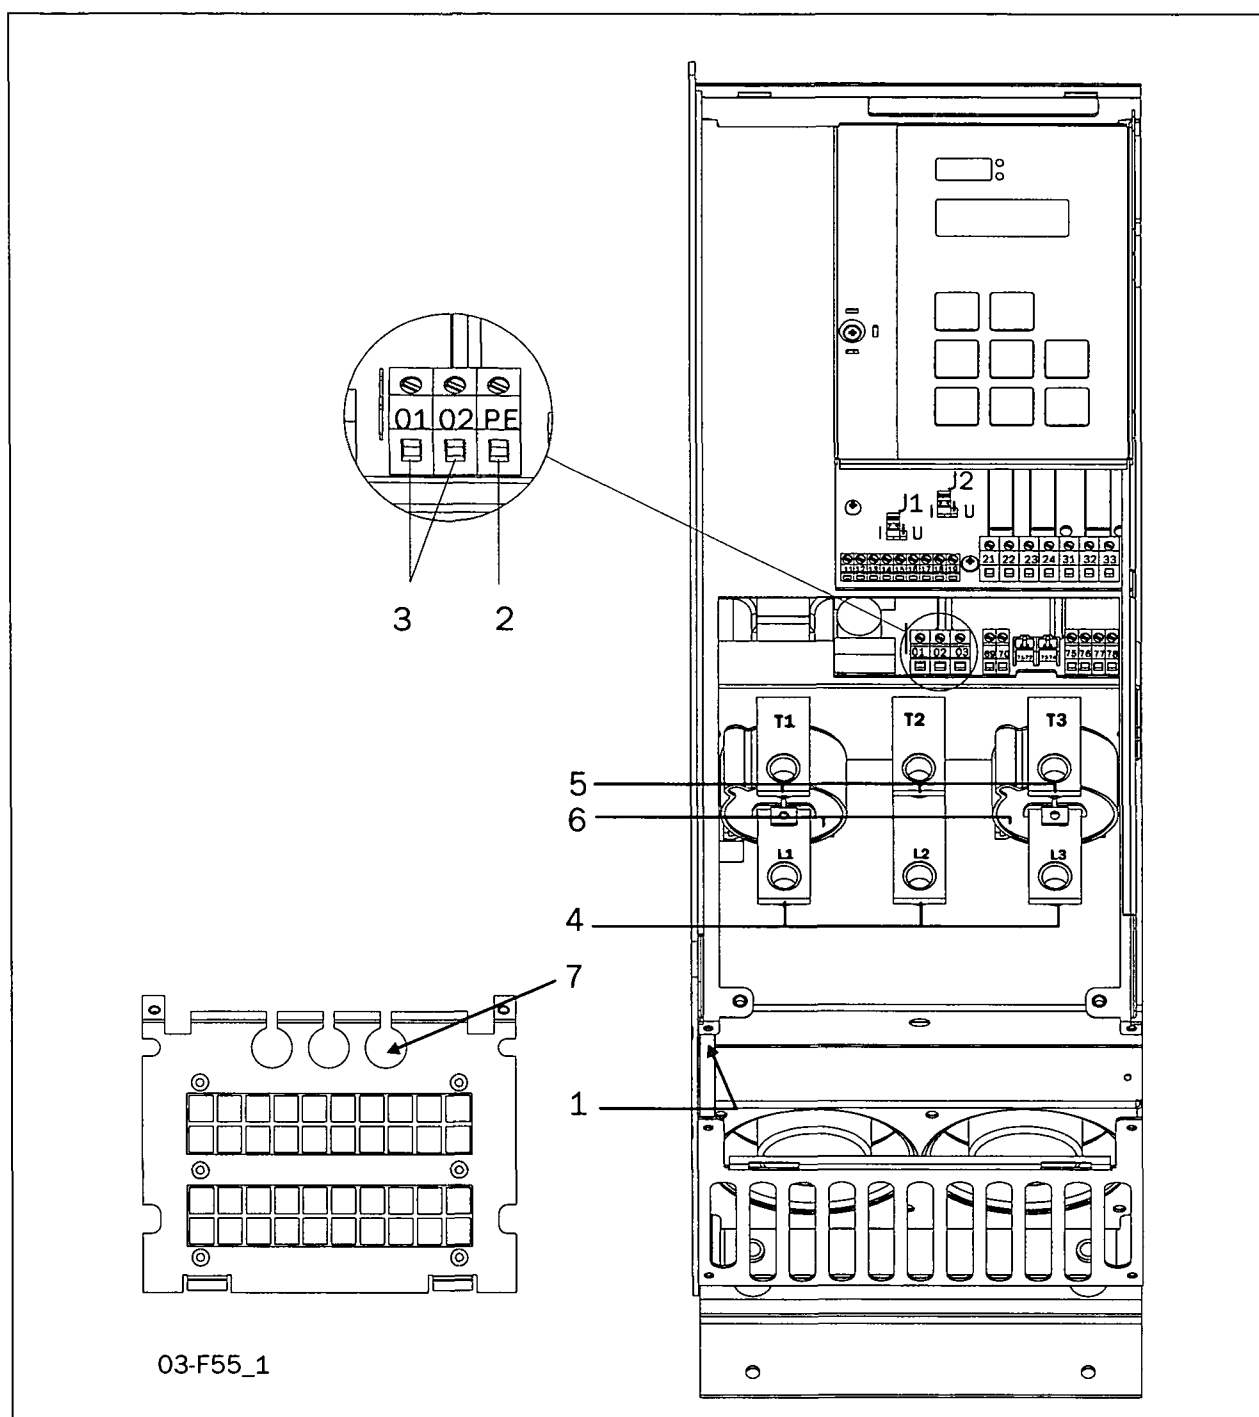


Fig. 25 Connection of MSF-110 to MSF-145.

Connection of MSF-110 to MSF-145

Device connections

1. Protective earth, \perp (PE), Mains supply, Motor (on the left inside of the cabinet)
2. Protective earth \perp (PE), Control voltage
3. Control voltage connection 01, 02
4. Mains supply L1, L2, L3
5. Motor power supply T1, T2, T3
6. Current transformers (possible to mount outside for bypass see § 7.12, page 43)
7. Mounting of EMC gland for control cables

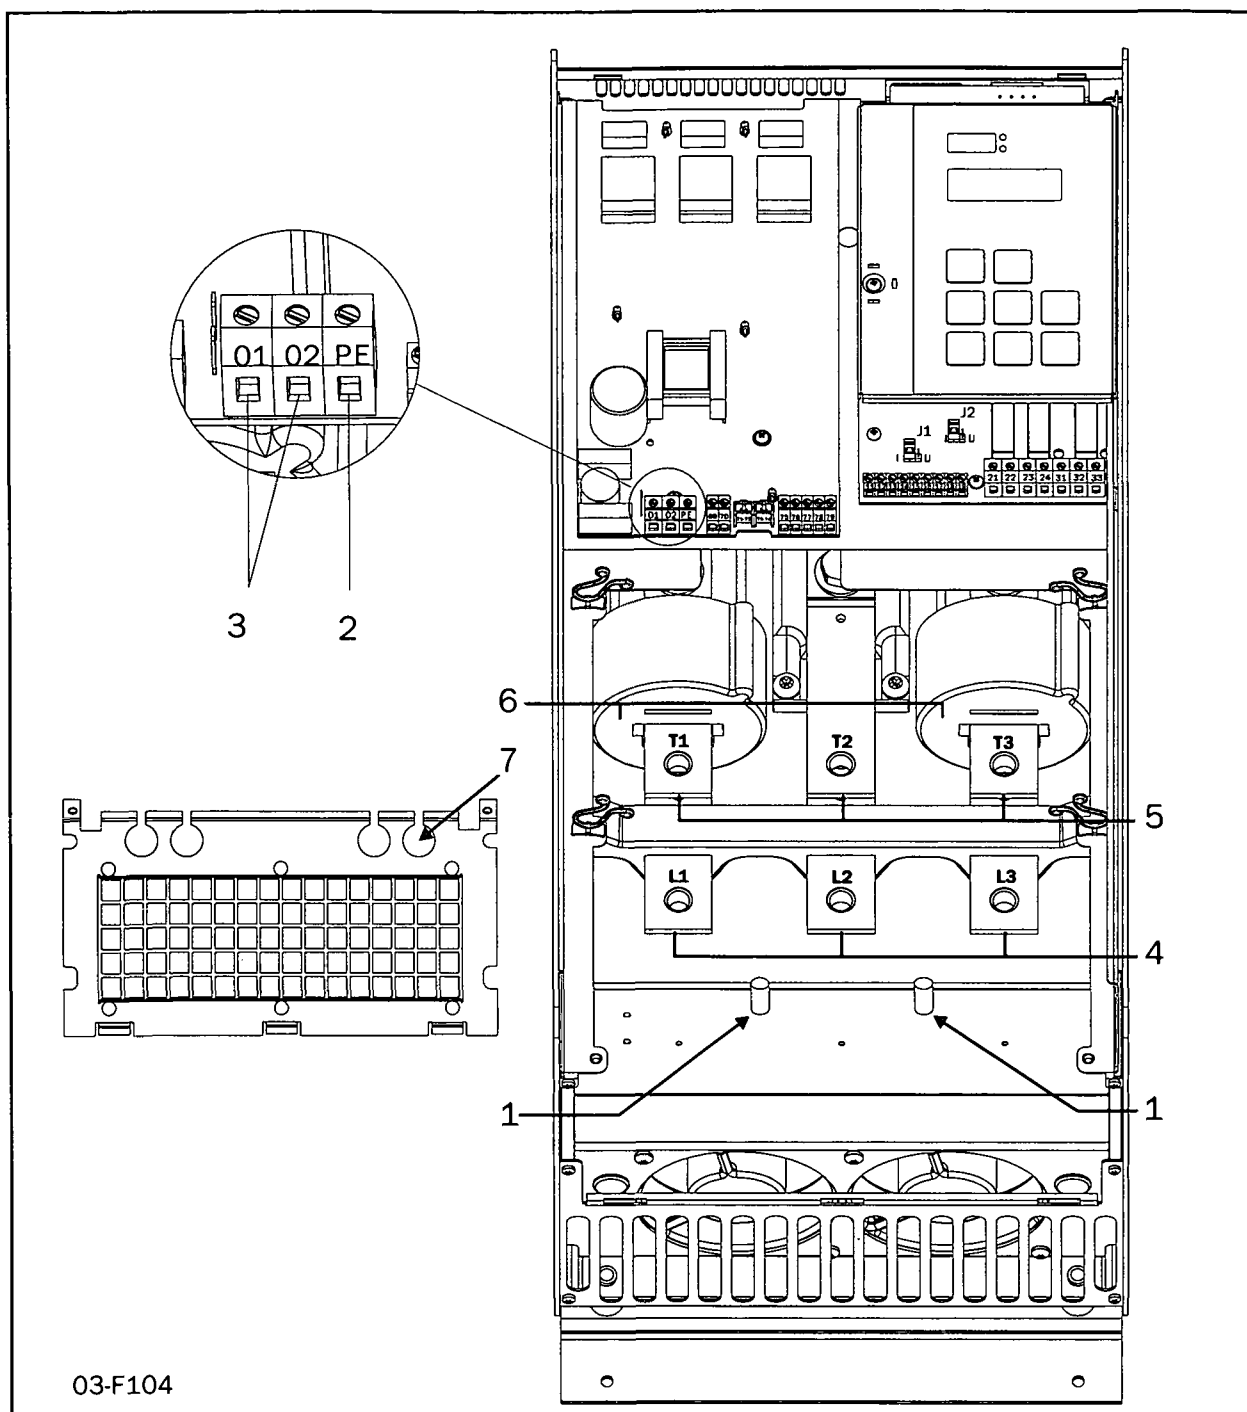


Fig. 26 Connection of MSF-170 to MSF-250

Connection of MSF-170 to MSF-250

Device connections

1. Protective earth, \perp (PE), Mains supply, Motor (on the left inside of the cabinet)
2. Protective earth \perp (PE), Control voltage
3. Control voltage connection 01, 02
4. Mains supply L1, L2, L3
5. Motor power supply T1, T2, T3
6. Current transformers (possible to mount outside for bypass see § 7.12, page 43)
7. Mounting of EMC gland for control cables

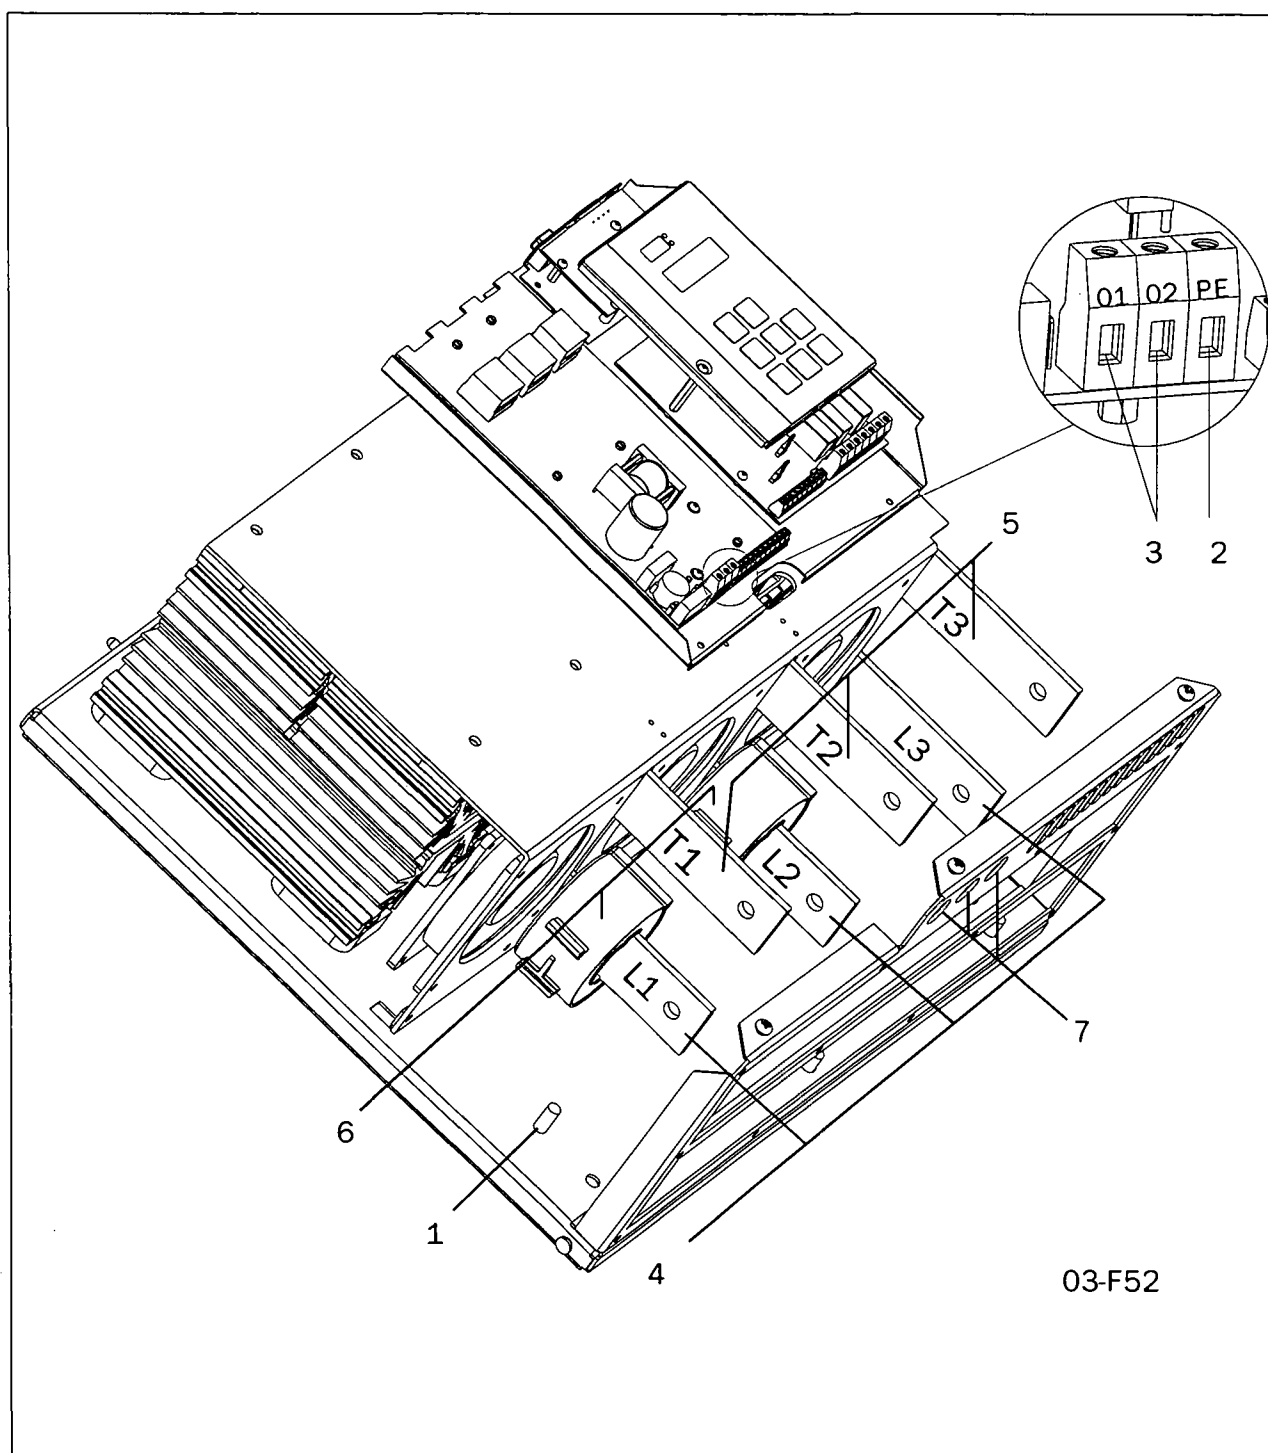


Fig. 27 Connection of MSF-170 to MSF-1400.

Connection of MSF-310 to MSF-1400

Device connections

1. Protective earth, \perp (PE), Mains supply and Motor
2. Protective earth, \perp (PE), Control voltage
3. Control voltage connection 01, 02
4. Mains supply L1, L2, L3
5. Motor power supply T1, T2, T3
6. Current transformers (possible to mount outside for bypass see § 7.12, page 43)
7. Mounting of EMC gland for control cables

6.3 Connection and setting on the PCB control card

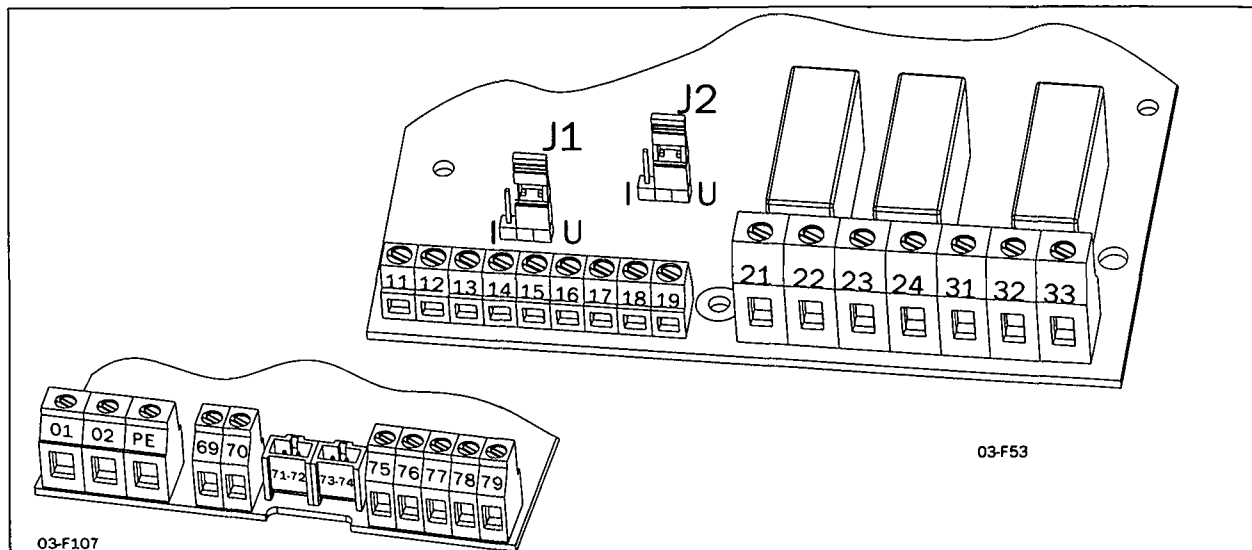


Fig. 28 Connections on the PCB, control card.

Table 12 PCB Terminals

Terminal	Function	Electrical characteristics
01	Supply voltage	100-240 VAC ±10%/380-500 VAC ± 10%
02		
PE		
11	Digital inputs for start/stop and reset.	0-3 V → 0; 8-27 V→ 1. Max. 37 V for 10 sec. Impedance to 0 VDC: 2.2 kΩ.
12		
13	Supply/control voltage to PCB terminal 11 and 12, 10 kΩ potentiometer, etc.	+12 VDC ±5%. Max. current from +12 VDC: 50mA. Short circuit proof.
14	Remote analogue input control, 0-10 V, 2-10 V, 0-20 mA and 4-20 mA/digital input.	Impedance to terminal 15 (0 VDC) voltage signal: 125 kΩ, current signal: 100 Ω.
15	GND (common)	0 VDC
16	Digital inputs for selection of parameter set.	0-3 V → 0; 8-27 V→ 1. Max. 37 V for 10 sec. Impedance to 0 VDC: 2.2 kΩ.
17		
18	Supply/control voltage to PCB terminal 16 and 17, 10 kΩ potentiometer, etc.	+12 VDC ±5%. Max. current from +12 VDC = 50mA. Short circuit proof.
19	Remote analogue output control	Analogue Output contact: 0-10V, 2-10V; min load impedance 700Ω 0-20mA and 4-20mA;max load impedance 750Ω
21	Programmable relay K1. Factory setting is "Operation" indication by closing terminal 21 - 22.	1-pole closing contact, 250 VAC 8A or 24 VDC 8A resistive, 250 VAC, 3A inductive.
22		
23	Programmable relay K2. Factory setting is "Full voltage" indication by closing terminal 23-24.	1-pole closing contact, 250 VAC 8A or 24 VDC 8A resistive, 250 VAC, 3A inductive.
24		
31	Alarm relay K3, closed to 33 at alarm.	1-pole change over contact, 250 VAC 8A or 24 VDC 8A resistive, 250 VAC, 3A inductive.
32	Alarm relay K3, opened at alarm.	
33	Alarm relay K3, common terminal.	
69-70	PTC Thermistor input	Alarm level 2.4 kΩ Switch back level 2.2 kΩ.
71-72*	Clickson thermistor	Controlling soft starter cooling fine temperature MSF-310 - MSF-1400
73-74*	NTC thermistor	Temperature measuring of soft starter cooling fine
75	Current transformer input, cable S1 (blue)	Connection of L1 or T1 phase current transformer
76	Current transformer input, cable S1 (blue)	Connection of L3, T3 phase (MSF 017 - MSF 250) or L2, T2 phase (MSF 310 - MSF 1400)
77	Current transformer input, cable S2 (brown)	Common connection for terminal 75 and 76
78*	Fan connection	24 VDC
79*	Fan connection	0 VDC

*Internal connection, no customer use.

6.4 Minimum wiring

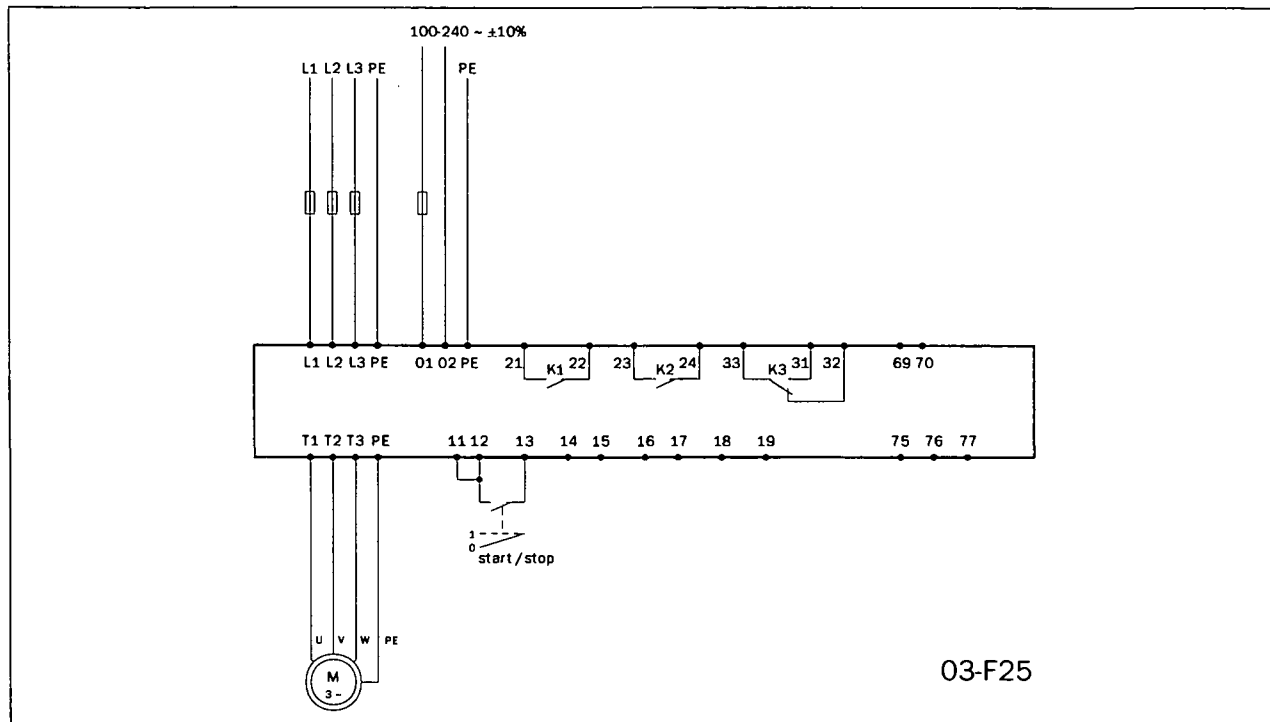


Fig. 29 Wiring circuit, "Minimum wiring".

The figure above shows the "minimum wiring". See § 6.1, page 24, for tightening torque for bolts etc.

1. Connect Protective Earth (PE) to earth screw marked \perp (PE).
2. Connect the soft starter between the 3-phase mains supply and the motor. On the soft starter the mains side is marked L1, L2 and L3 and the motor side with T1, T2 and T3.
3. Connect the control voltage (100-240 VAC) for the control card at terminal 01 and 02.
4. Connect relay K1 (terminals 21 and 22) to the control circuit.
5. Connect PCB terminal 12 and 13 (PCB terminal 11-12 must be linked) to, e.g. a 2-position switch (on/off) or a PLC, etc., to obtain control of soft start/stop. (For start/stop command from keyboard menu 006 must be set to 01).
6. Ensure the installation complies with the appropriate local regulations.

NOTE! The soft starter should be wired with shielded control cable to fulfill EMC regulations acc. to § 1.5, page 6.

NOTE! If local regulations say that a mains contactor should be used, the K1 then controls it. Always use standard commercial, slow blow fuses, e.g. type gI, gG to protect the wiring and prevent short circuiting. To protect the thyristors against short-circuit currents, superfast semiconductor fuses can be used if preferred. The normal guarantee is valid even if superfast semiconductor fuses are not used. All signal inputs and outputs are galvanically insulated from the mains supply.

6.5 Wiring examples

Fig. 30 gives an wiring example with the following functions.

- Analogue input control, see § 7.7, page 40
- Parameter set selection, see § 7.20, page 54
- Analogue output, see § 7.18, page 52
- PTC input, see § 7.21, page 55

For more information see § 6.3, page 32.

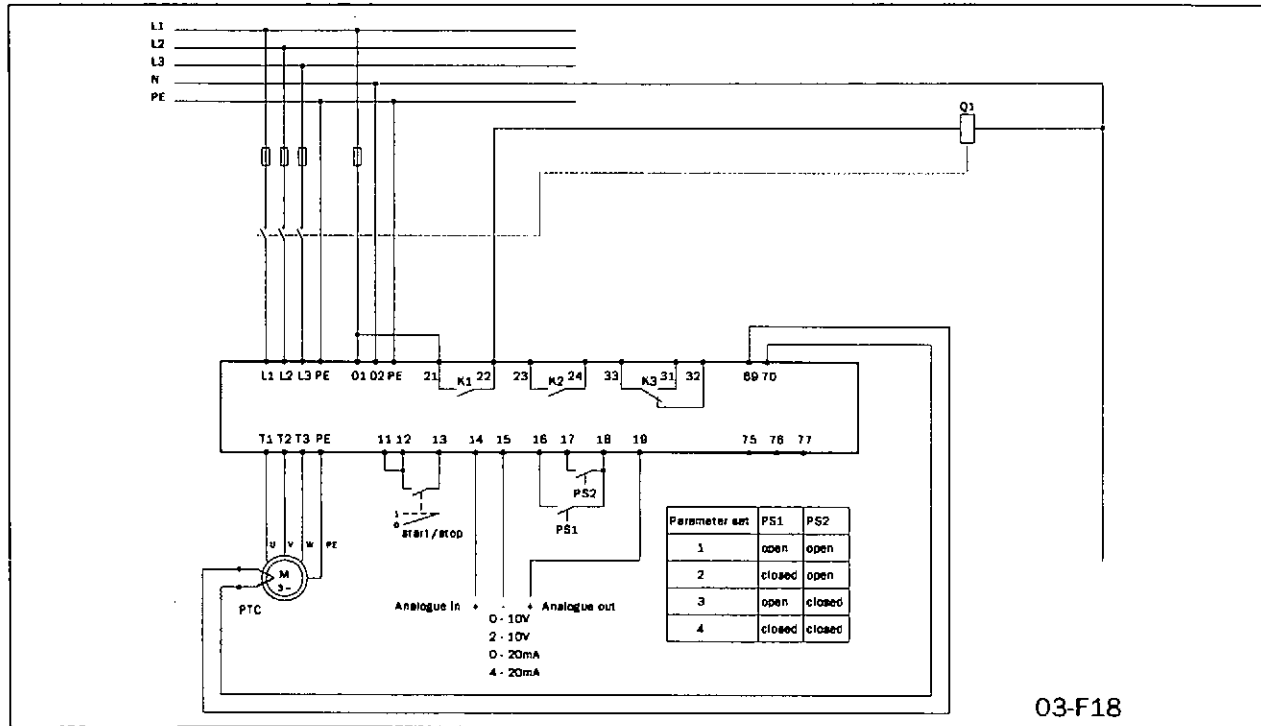


Fig. 30 Analogue input control, parameter set, analogue output and PTC input.

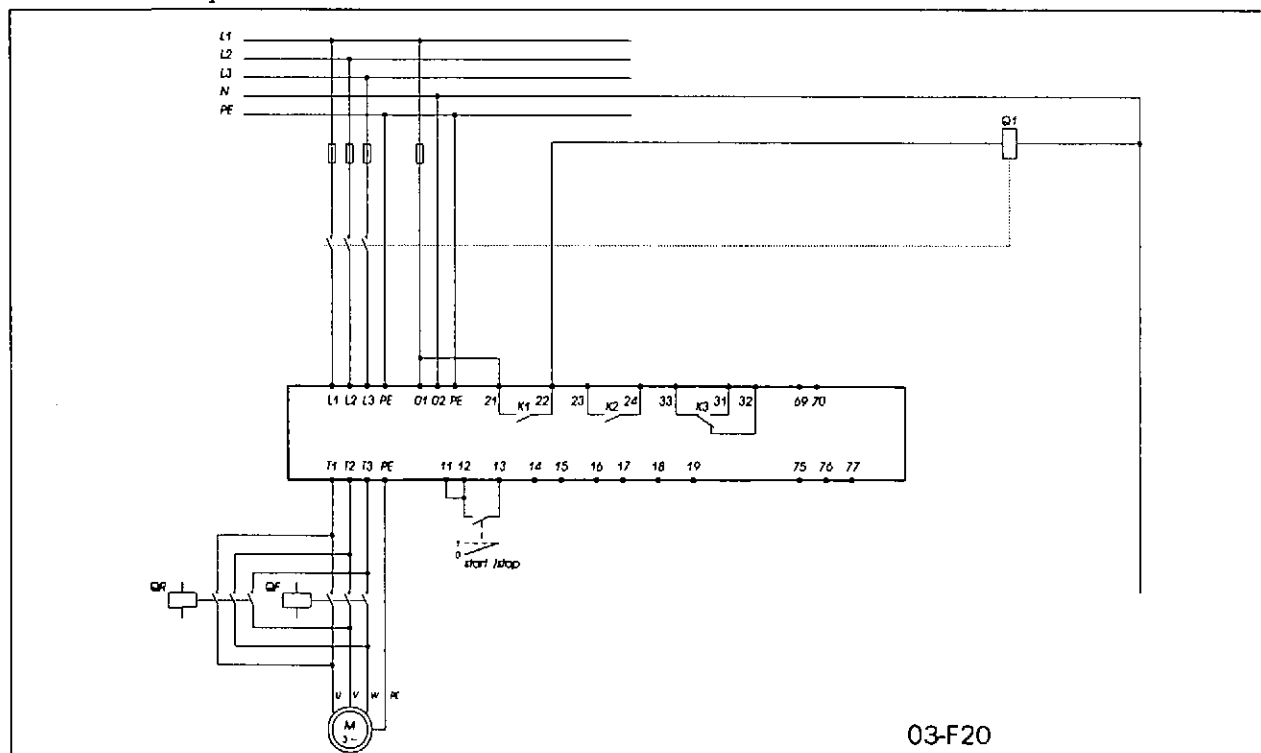


Fig. 31 Forward/reverse wiring circuit.

7. FUNCTIONAL DESCRIPTION SET-UP MENU

This chapter describes all the parameters and functions in numerical order as they appear in the MSF. Table 13 gives an overview of the menus, see also Chapter 13, page 79 (set-up menu list).

Table 13 Set-up Menu overview

	Menu number	Parameter group	Menu numbers	See §	
Basic functions	001-008	Basic	Ramp up/down parameters	001-005	7.1
			Start/Stop/Reset command	006	7.2
			Menu Expansion	007-008	7.3
Extended functions	011-199	Voltage control dual ramp		011-014	7.4
		Torque control parameters		016-018	7.5
		Main functions		020-025	7.6 - 7.10
		Additional functions		030-036	7.11 - 7.14
		Slow speed and Jog functions		037-040, 57-58, 103-104	7.15, 7.19, 7.25
		Motor Data Setting		041-046	7.16
		Outputs	Relays	051-052	7.17
			Analogue output	054-056	7.18
		Input	Digital input	057-058	7.19
		Parameter set selection		061	7.20
			Motor protection	071-075	7.21
			Main protection	081-088	7.22
			Application protection	089-099	7.23
			Resume alarms	101, 102	7.24
		Auto return menu		105	7.26
Factory defaults		199	7.28		
View functions	201-915	Main view		201-208	7.29
		RMS current per phase		211-213	7.29
		RMS voltage per phase		214-216	7.29
		Keyboard lock status		221	7.30
		Alarm list		901-915	7.31

7.1 Ramp up/down parameters

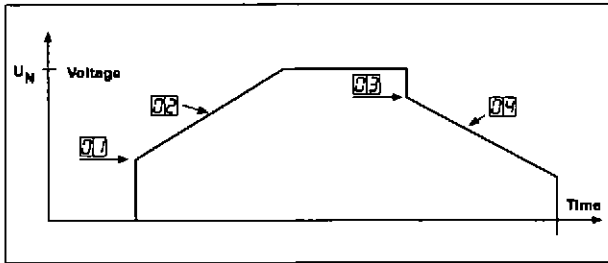


Fig. 32 Menu numbers for start/stop ramps, initial voltage at start and step down voltage at stop.

Determine the starting time for the motor/machine. When setting the ramp times for starting and stopping, initial voltage at start and step down voltage at stop, proceed as follow:

001 ^o	
Setting the initial voltage at start ramp 1	
3 0	
Default:	30%
Range:	25 - 90% U _n
Set the initial voltage. Normally the factory setting, 30% of U _n , is a suitable choice.	

002 ^o	
Setting of start ramp 1	
1 0	
Default:	10 sec
Range:	1-60 sec
Set "Ramp up time" at start.	

003 ^o	
Setting of step down voltage stop ramp 1	
1 0 0	
Default:	100%
Range:	100-40% of U _n
Step down voltage at stop can be used to stop smoothly.	

004 ^o	
Setting of stop ramp 1	
o F F	
Default:	oFF
Range:	oFF, 2-120 sec
oFF	Stop ramp disabled
2-120	Set "Ramp down time" at stop

7.1.1 RMS current [005]

005 ^o	
RMS current	
0.0	
Default:	—
Range:	0.0-9999Amp
Read-out of the RMS motor current.	

NOTE! This is the same read-out as function 201, see § 7.28, page 63.

7.2 Start/stop/reset command

Start/stop of the motor and reset of alarm is done either from the keyboard, through the remote control inputs or through the serial interface (option). The remote control inputs start/stop/reset (PCB terminals 11, 12 and 13) can be connected for 2-wire or 3-wire control.

006 ^o					
Selection of control mode					
<table border="1" style="margin: auto;"> <tr> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px; text-align: center;">2</td> </tr> </table>					2
			2		
Default:	2				
Range:	1,2,3				
1	START/STOP/RESET command via the keyboard. - Press the "START/STOP" key on the keyboard to start and stop the soft starter. - Press "ENTER/RESET" key to reset a trip condition.				
2	Via Remote control. START/STOP/RESET commands. The following control methods are possible: - 2-wire start/stop with automatic reset, see § 7.2.1, page 37. - 2-wire start/stop with separate reset, see § 7.2.2, page 37. - 3-wire start/stop with automatic reset at start, see § 7.2.3, page 37. WARNING! The motor will start if terminals 11, 12, 13 is in start position.				
3	START/STOP/RESET commands via serial interface option. Read the operating instruction supplied with this option.				


NOTE! A reset via the keyboard will not start or stop the motor.

NOTE! Factory default setting is 2, remote control.

To start and stop from the keyboard, the "START/STOP" key is used.


To reset from the keyboard, the "ENTER / RESET" key is used. A reset can be given both when the motor is running and when the motor is stopped. A reset from the keyboard will not start or stop the motor.

7.2.1 2-wire start/stop with automatic reset at start

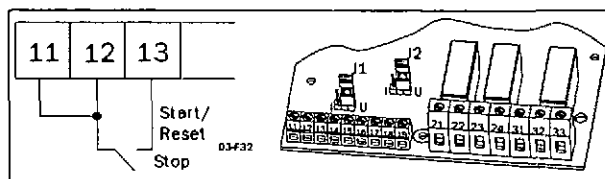


Closing PCB terminals 12 and 13, and a jumper between terminal 11 and 12, will give a start command. Opening the terminals will give a stop. If PCB terminals 12 and 13 is closed at power up a start command is given (automatic start at power up). When a start command is given there will automatically be a reset.

7.2.2 2-wire start/stop with separate reset

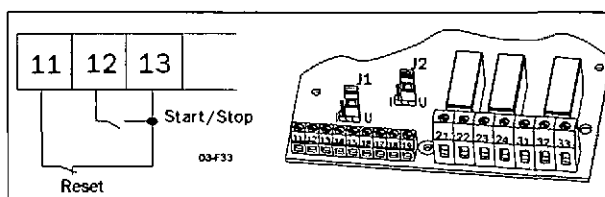

Closing PCB terminals 11, 12 and 13 will give a start and opening the terminals 12 and 13 will give a stop. If PCB terminals 12 and 13 are closed at power up a start command is given (automatic start at power up). When PCB terminals 11 and 13 are opened and closed again a reset is given. A reset can be given both when the motor is running and stopped and doesn't affect the start/stop.

7.2.3 3-wire start/stop with automatic reset at start

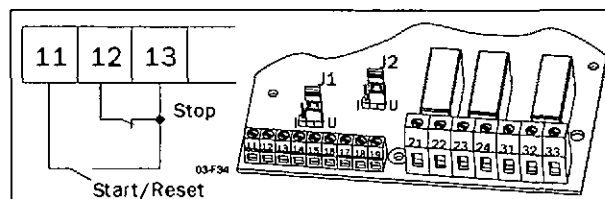

PCB terminal 12 and 13 are normally closed and PCB terminal 11 and 13 are normally open. A start command is given by momentarily closing PCB terminal 11 and 13. To stop, PCB terminal 12 and 13 are momentarily opened.

When a start command is given there will automatically be a reset. There will not be an automatic start at power up.

7.3 Menu expansion setting.

In order to use the viewing menus and/or the extended functions menu 007 must be set to "On", then one reach read out of the viewing menus 201-915. To be able to set any extended functions in the menus 011-199 menu 008 must be set to "on" as well.

007 ^o	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 0 F F </div>	
Selecting of extended functions and viewing functions	
Default:	oFF
Range:	oFF, on
oFF	Only function 1-7 are visible
on	- View functions 201-915 are visible - Extended functions (menu 008) selectable

008 ^o	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 0 F F </div>	
Selecting of extended functions	
Default:	oFF
Range:	oFF, on
oFF	Only view function 201-915 are visible.
on	All the function menus are visible

NOTE! Menu 007 must be "on".

7.4 Voltage control dual ramp

To achieve even smoother ramps at start and or stop, a dual ramp can be used.

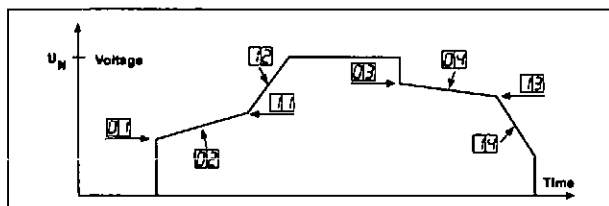


Fig. 33 Menu numbers for dual voltage ramp at start/stop, initial voltage at start and step down-voltage at stop.

The settings are carried out by beginning with the settings in menus 001-004 and 007-008 and proceed with the following steps:

011 ^o	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 9 0 </div>	
Setting the initial voltage at start ramp 2	
Default:	90%
Range:	30-90% U_n
Set the start voltage for start ramp 2. The initial voltage for start ramp 2 is limited to the initial voltage at start (menu 001), see § 7.1, page 36.	

012 ^o	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 0 F F </div>	
Setting of start ramp 2	
Default:	oFF
Range:	oFF, 1-60 sec
oFF	Start ramp 2 disabled
1-60	Set the start ramp 2 time. A dual voltage ramp is active.

013 ^o	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 4 0 </div>	
Setting of step down voltage in stop ramp 2	
Default:	40%
Range:	100-40% U_n
Set the step down voltage for stop ramp 2. The step down voltage for stop ramp 2 is limited to the step down voltage at stop (menu 003).	

014 ^o	
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 0 F F </div>	
Setting of stop ramp time 2	
Default:	oFF
Range:	oFF, 2-120 sec
oFF	Stop ramp 2 disabled
1-60	Set the stop ramp 2 time. A dual voltage stop ramp is active.

7.5 Torque control parameters

See also § 7.10, page 42 and chapter 4, page 13 for more information on the Torque control setting.

016 ^o	
Initial torque at start	
10	
Default:	10
Range:	0 - 250% of T _n
Insert initial torque at start in percent of nominal shaft torque (T _n), see chapter 13, page 79.	

017 ^o	
End torque at start	
150	
Default:	150
Range:	50 - 250% of T _n
Insert end torque at start in percent of nominal shaft torque.	

018 ^o	
End torque at stop	
0	
Default:	0
Range:	0 - 100% of T _n
Insert end torque at stop in percent of the nominal motor torque.	

7.6 Current limit (Main Function)

The Current Limit function is used to limit the current drawn when starting (150 - 500% of I_n). This means that current limit is only achieved during set start-up time.

Two kinds of current limit starts are available.

- **Voltage ramp with a limited current.**
If current is below set current limit, this start will act exactly as a voltage ramp start.
- **Current limit start.**
The soft starter will control the current up to set current limit immediately at start, and keep it there until the start is completed or the set start-up time expires.

See Fig. 34 Current limit.

NOTE! Make sure that nominal motor current I_n menu 042 is correctly inserted.

7.6.1 Voltage ramp with current limit

The settings are carried out in three steps:

1. Estimate starting-time for the motor/machine and select that time in menu 002 (see § 7.1, page 36).
2. Estimate the initial voltage and select this voltage in menu 001 (see § 7.1, page 36).
3. Set the current limit to a suitable value e.g. 300% of I_n in menu 020.

020 ^o	
Voltage ramp with current limit at start	
OFF	
Default:	oFF
Range:	oFF, 150 - 500% I _n
oFF	Voltage Ramp mode with current limit disabled. Voltage Ramp enabled.
150-500	Current limit level in Voltage ramp mode.

NOTE! Only possible when Voltage Ramp mode is enabled. Menus 021-025 must be "oFF".

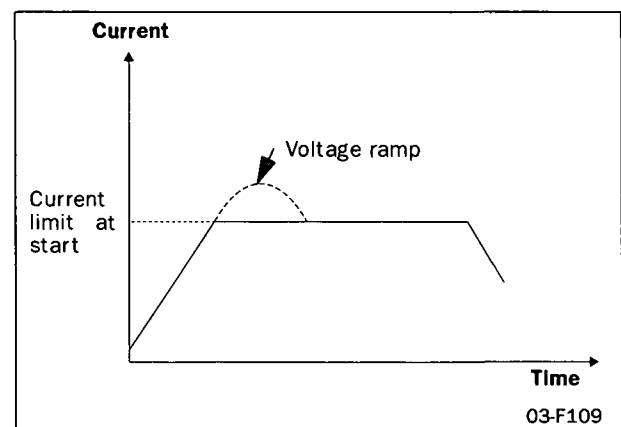


Fig. 34 Current limit

7.6.2 Current limit

The settings are carried out in two steps:

1. Estimate starting time for the motor/machine and select that time in menu 002 (see § 7.1, page 36).
2. Set the current limit to a suitable value e.g. 300% of In in menu 021.

021

°

o

F

F

Current limit at start

Default:	oFF
Range:	oFF, 150 - 500% In
oFF	Current limit mode disabled. Voltage Ramp enabled.
150-500	Current limit level in current limit mode.

NOTE! Only possible when Voltage Ramp mode is enabled. Menus 020, 022-025 must be "oFF".

NOTE! Even though the current limit can be set as low as 150% of the nominal motor current value, this minimum value cannot be used generally. Considerations must be given to the starting torque and the motor before setting the appropriate current limit. "Real start time" can be longer or shorter than the set values depending on the load conditions. This applies to both current limit methods.

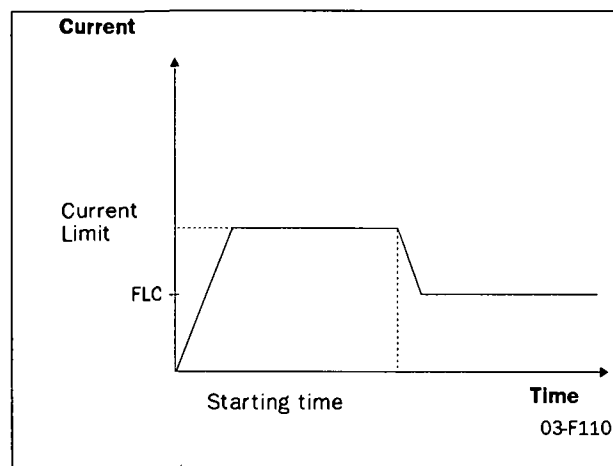


Fig. 35 Current limit

If the starting time is exceeded and the soft starter is still operating at current level, an alarm will be activated. It is possible to let the soft starter to either stop operation or to continue. Note that the current will rise uncontrolled if the operation continues (see § 7.24.2, page 61).

7.7 Pump control (Main Function)

By choosing pump control you will automatically get a stop ramp set to 15 sec. The optimising parameters for this main function are start and stop time; initial torque at start and end torque at start and stop. End torque at stop is used to let go of the pump when it's no longer producing pressure/flow, which can vary on different pumps. See Fig. 36.

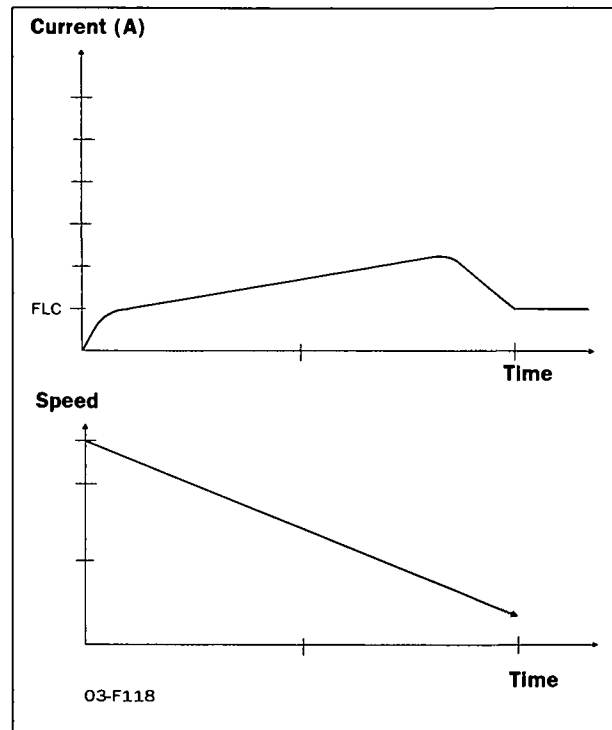


Fig. 36 Pump control

Pump application

The pump application is using Torque ramps for quadratic load. This gives lowest possible current and linear start and stop ramps. Related menus are 2, 4 (see § 7.1, page 36), 16, 17 and 18 (see § 7.5, page 39).

022

°

o

F

F

Setting of pump control

Default:	oFF
Range:	oFF, on
oFF	Pump control disabled. Voltage Ramp enabled.
on	Pump control application is enabled.

NOTE! Only possible when Voltage Ramp mode is enabled. Menu 020-021, 023-025 must be "oFF".

7.8 Analogue Input Control (Main Function)

Soft starting and soft stopping can also be controlled via the Analogue Input Control (0-10 V, 2-10 V, 0-20 mA and 4-20 mA). This control makes it possible to connect optional ramp generators or regulators.

After the start command, the motor voltage is controlled through the remote analogue input.



WARNING! The remote analogue control may not be used for continuous speed regulation of standard motors. With this type of operation the increase in the temperature of the motor must be taken into consideration.

To install the analogue input control, proceed by:

1. Connect the ramp generator or regulator to terminal 14 (+) and 15 (-).

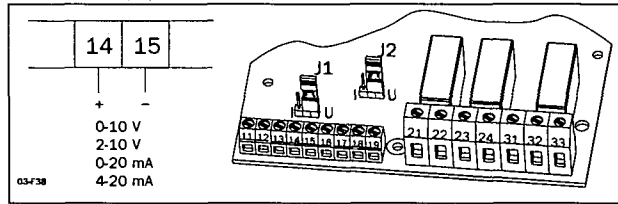


Fig. 37 Wiring for analogue input.

2. Set Jumper J1 on the PCB control card to voltage (U) or current control (I) signal position, see Fig. 38 and Fig. 24 on page 28. Factory setting is voltage (U).

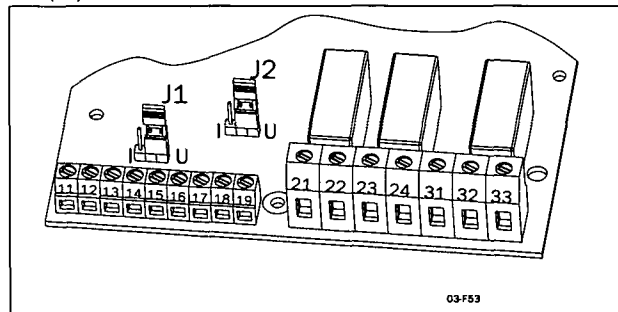


Fig. 38 Setting voltage or current for analogue input.

7.9 Full voltage start, D.O.L. (Main Function)

The motor can be accelerated as if it was connected directly to the mains. For this type of operation:

Check whether the motor can accelerate the required load (D.O.L.-start, Direct On Line start). This function can be used even with shorted thyristors.

024		Setting of D.O.L start
OFF		
Default:	oFF	
Range:	oFF, on	
oFF	D.O.L. start disabled. Voltage Ramp enabled.	
on	D.O.L. start enabled	

NOTE! Only possible when Voltage Ramp mode is enabled. Menu 020-023, 025 must be "oFF".

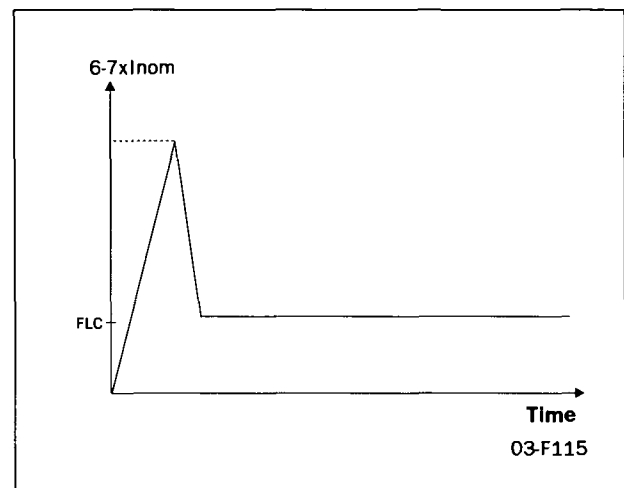


Fig. 39 Full voltage start.

023		Selection of Analogue input control
OFF		
Default:	oFF	
Range:	oFF, 1, 2	
oFF	Analogue input disabled. Voltage Ramp enabled.	
1	Analogue input is set for 0-10V/ 0-20mA control signal	
2	Analogue input is set for 2-10V/ 4-20mA control signal.	

NOTE! Only possible when Voltage Ramp mode is enabled. Menu 020-022, 024, 025 must be "oFF"

7.10 Torque control (Main function)

This main function can be used to make a start according to a pre-defined torque reference curve. Two different load characteristics, linear and square, are possible to select.

At start/stop the torque controller will follow the selected characteristic.

A torque start/stop behaviour can be seen in Fig. 40.

A perfect start and stop with torque ramps have a good linearity of current. To optimise this, use the setting of initial torque (menu 16) and end torque (menu 18). See also § 7.5, page 39.

Example:

Default for initial torque is 10% so if starting a more heavy load this will result in a small current peak in beginning of ramp. By increasing this value to 30/70% the current peak will not appear.

The end torque is increased mainly if the application has a high inertial load, like planers, saws and centrifuges. A current peak will appear in the end of ramp because the load is pushing the speed more or less by itself. By increasing this level to 150-250% the current will be linear and low.

025⁰₀

Torque control at start/stop

O

F

F

Default:	oFF
Range:	oFF, 1, 2
oFF	Torque control is disabled Voltage Ramp enabled.
1	Torque control with linear torque characteristic
2	Torque control with square torque characteristic

NOTE! Torque control mode is only possible when Voltage Ramp mode is enabled (menu 020-024 are "oFF").

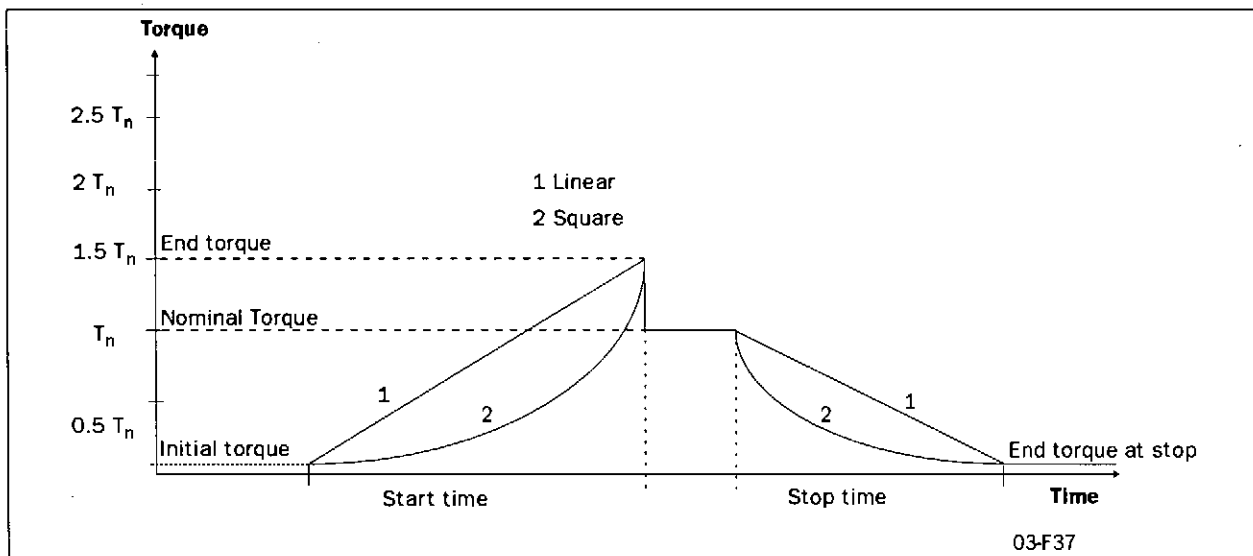


Fig. 40 Torque control at start/stop.

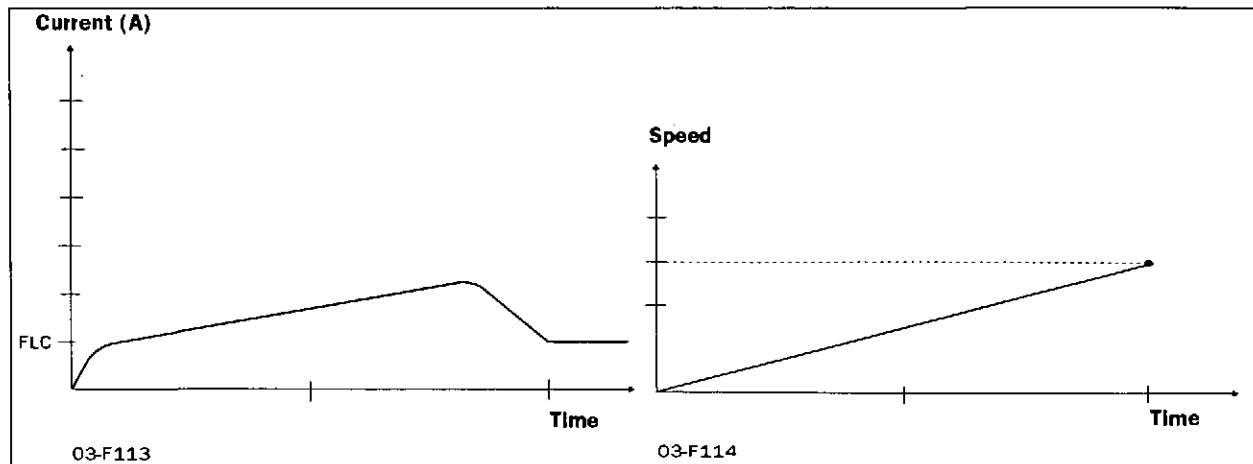


Fig. 41 Current and speed in torque control.

7.11 Torque boost

The Torque Booster enables a high torque to be obtained by providing a high current during 0.1 - 2 sec at start. This enables a soft start of the motor even if the break away torque is high at start. For example in crushing mills applications etc.

When the torque booster function has finished, starting continues according to the selected start mode.

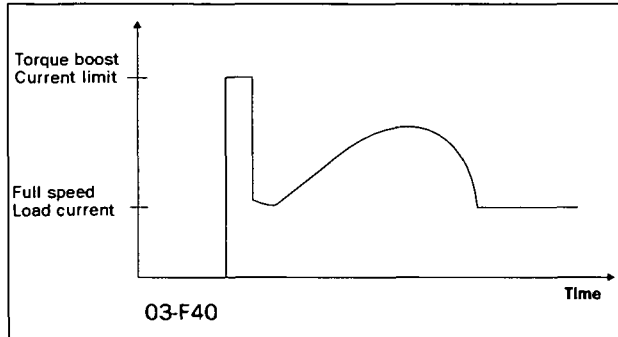


Fig. 42 The principle of the Torque Booster when starting the motor in voltage ramp mode.

See § 4.6, page 19, which main function that can be used with the torque boost.

030 ^o/_o

Torque boost active time

OFF

Default:	oFF
Range:	oFF, 0.1 - 2 sec
oFF	Torque boost disabled
0.1-2.0	Set the Torque boost time.

031 ^o/_o

Torque boost current limit

300

Default:	300
Range:	300 - 700% of I _n
The Torque boost current controller use selected value as the motor current reference.	

NOTE! Check whether the motor can accelerate the load with "Torque booster", without any harmful mechanical stress.

7.12 Bypass

In cases of high ambient temperatures or other reason it may sometimes be necessary to use a by-pass contactor to minimize the power loss at nominal speed (see Technical Data). By using the built-in Full Voltage Relay function an external contactor can be used to Bypass the soft starter when operating at nominal speed.

Bypass contactor can also be used if soft stop is required. Normally a Bypass contactor is not necessary as the device is designed for continues running conditions, see Fig. 29 on page 33 for wiring example.

NOTE! If one like to use the alarm functions, the extended functions or the viewing functions the 2-pcs current transformers must be mounted outside the soft start as shown in Fig. 44 and Fig. 45 on page 45. For this purpose an optional extension cable for the current transformers is available. Code No 01-2020-00.

032 ^o/_o

Setting of Bypass

OFF

Default:	oFF
Range:	oFF, on
oFF	Bypass disabled
on	Bypass enabled. Program either relay K1 or K2 to function 2 to control the bypass contactor, see menu 51/52.

CAUTION! If the current transformers are not mounted as in Fig. 43 on page 44 and § 6.2, page 28, the alarm and viewing functions will not work. Do not forget to set menu 032 to ON, otherwise there will be an F12 alarm and at the stop command will be a freewheeling stop.

For further information see chapter 6.2 page 28.

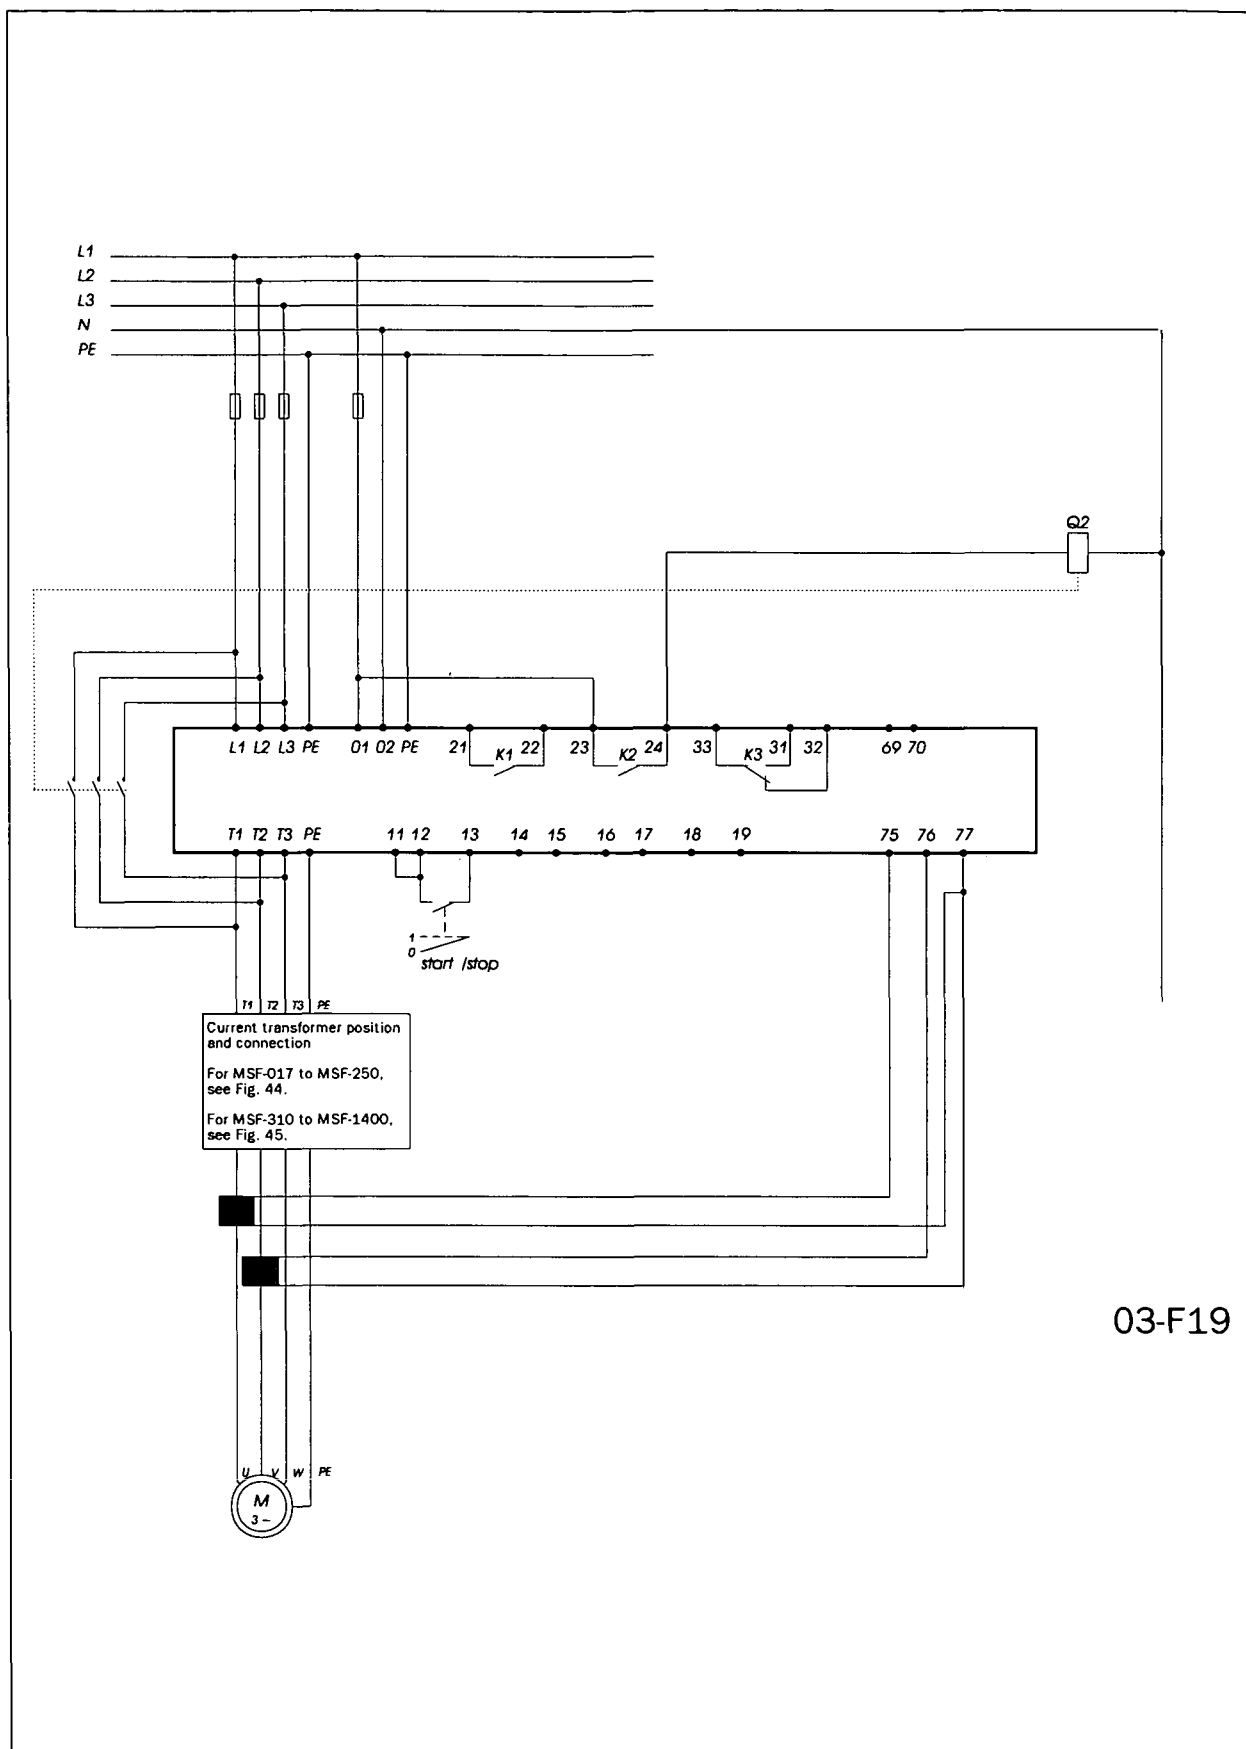


Fig. 43 Bypass wiring example MSF 310-1400.

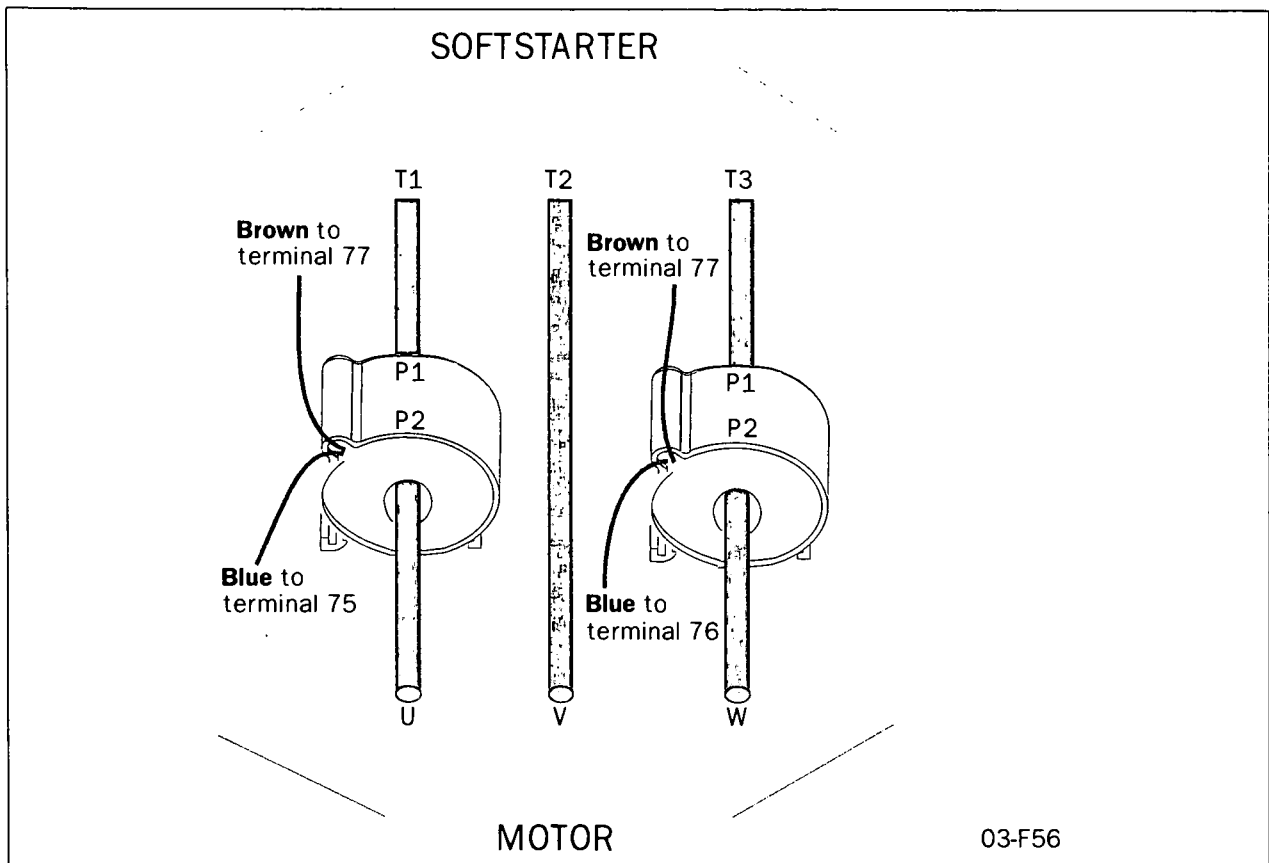


Fig. 44 Current transformer position when Bypass MSF-017 to MSF-250.

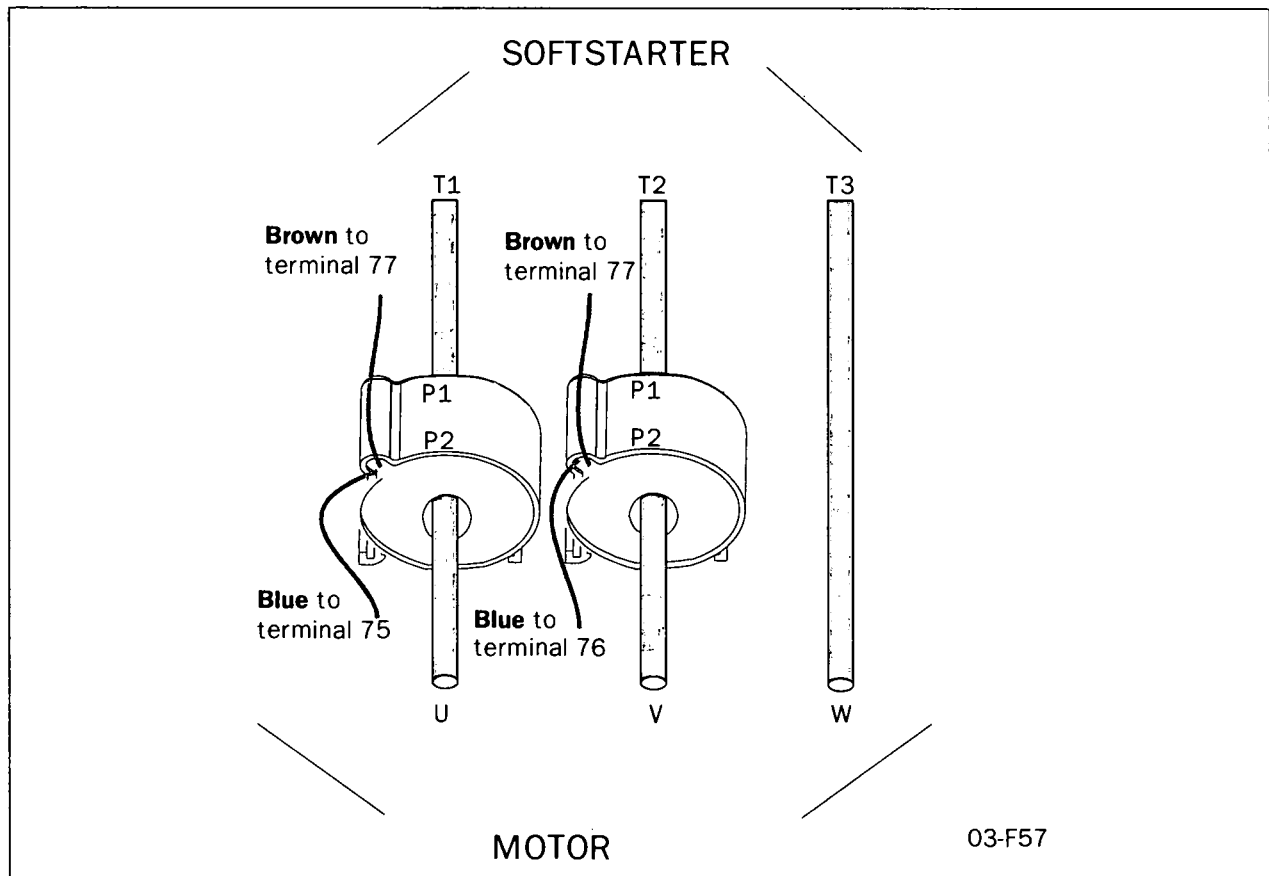


Fig. 45 Current transformer position when Bypass MSF-310 to MSF-1400.

7.13 Power Factor Control

During operation, the soft starter continuously monitors the load on the motor. Particularly when idling or when only partially loaded, it is sometimes desirable to improve the power factor. If Power factor control (PFC) is selected, the soft starter reduces the motor voltage when the load is lower. Power consumption is reduced and the degree of efficiency improved.

033 ^o	
Setting of PFC	
OFF	
Default:	oFF
Range:	oFF, on
oFF	PFC disabled
on	PFC enabled. The Full voltage relay function does not work.

NOTE! If the PFC is used the EMC-directive is not fulfilled.

7.14 Brake functions

There are two built in braking methods for applications where the normal stop ramp is not enough.

- **Dynamic DC-brake**
Increases the braking torque by decreasing speed.
- **Soft brake**
Gives a high torque at the start of the braking and then also increasing torque by decreasing speed.

In both methods the MSF detects when the motor is standing still, so rotating in wrong direction is avoided.

Dynamic Vector Brake

- Possible to stop motors with high inertia loads from close to synchronous speed.
- At 70% of the nominal speed a DC-brake is activated until the motor is standing still or the selected Braking Time has expired (see menu 34, next page).
- No contactor needed.
- For extra safety, the soft starter has a digital input signal for monitoring standstill so that at real motor standstill will stop the output voltage immediately (see § 7.19, page 53).

Soft brake

- Even very high inertia loads can be stopped
- The Soft brake is a controlled reversing of the motor as the MSF measures the speed during braking.
- Two contactors are needed which can be placed on the in- or output of the soft starter. On the input the first contactor is connected to relay K1 which is also used as a mains contactor.
- At 30% of the nominal speed a DC-brake is activated until the motor is standing still or the selected Braking Time has expired (menu 34, next page).

- For extra safety, the soft starter has a digital input signal for monitoring standstill. So that the output voltage is stopped immediately (see menu 57-58, § 7.19, page 53).

See Fig. 47 on page 47 for the following set-up sequence:

- Soft brake is activated if menu 36=2 and menu 34 has a time selected (see next page).
- Menu 51 and 52 are automatically set to 5 and 4 to get the correct relay functions on K1 and K2 (see § 7.17, page 51).
- Relay K1 should be used to connect a contactor for supply L1, L2, L3 to MSF or motor.
- Relay K2 is used to connect phase shifting contactor to change L1, L2 and L3 to MSF or motor.
- At start K1 is activated and connects L1, L2, L3 then the motor starts. At stop K1 opens and disconnects L1, L2, and L3 and after 1s K2 connects with the other phase sequence and the braking of the motor is active.

NOTE! Soft brake uses both programmable relays. For other functions, see also the function table in chapter 7. page 35.

NOTE! For several start/stops it is recommend to use the PTC input.



WARNING! If the Soft Brake function has been selected once and after that the Bypass function is selected, then the relay functions on K1 and K2 remain in the Soft Brake functionality. Therefore it is necessary to change the relay functions in menu 51-52 manually to the Bypass functions (see § 7.17, page 51) or reset to default in menu 199 (see § 7.28, page 63) and select the Bypass function again.

034 ^o	
Braking time	
OFF	
Default:	oFF
Range:	oFF, 1 - 120 sec
oFF	Brake function disabled
1-120	Brake time

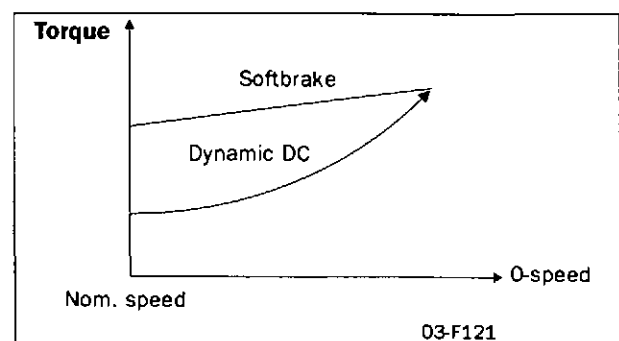


Fig. 46 Braking time

035^o

Braking Strength

1 0 0

Default:	100
Range:	100 - 500%

036^o

Brake method

1

Default:	1
Range:	1, 2
1	Dynamic vector brake, active
2	Soft brake active

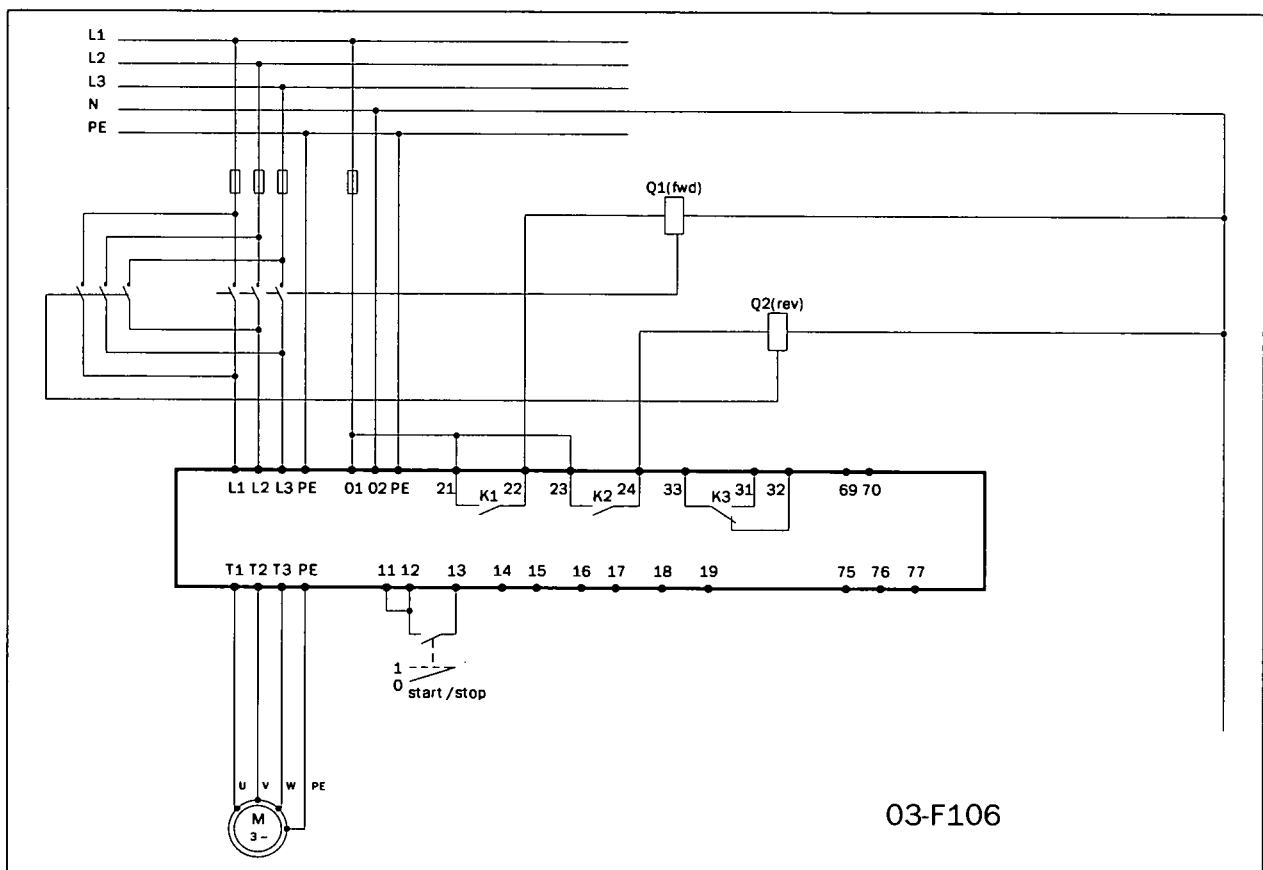


Fig. 47 Soft brake wiring example.

7.15 Slow speed and Jog functions

The soft starter is able to run the motor at a fixed slow speed for a limited period of time.

The slow speed will be about 14% of the full speed in the forward direction and 9% in the reverse direction.

The following functions are possible:

- **Slow speed controlled by an external signal.**
The digital input is used to run at slow speed at a start or stop command for a selected number of pulses (edges) generated by an external sensor (photo cell, micro switch, etc.). See § 7.19, page 53 for more instructions.
- **Slow Speed during a selected time period.**
The slow speed will be active after a stop command for a selected time period. See § 7.19, page 53 for more instructions.
- **Slow Speed using the "JOG"-commands.**
The slow Speed can be activated via the JOG keys on the keyboard or externally via the analogue input. See § 7.25, page 61 for more instructions.

7.15.1 Slow speed controlled by an external signal.

With these setting it is possible to have an external pulse or edge signal controlling the time that the Slow Speed is active either after a Start command or a Stop command or at both commands. The following menu's are involved:

Menu	Function	See page
57	Digital input selection	page 53
58	Pulse selection	page 53
37	Slow speed torque	page 49
38	Slow speed time at start	page 49
39	Slow speed time at stop	page 49
40	DC-Brake at slow speed	page 49

Installation is as follows:

1. Set the analogue input selection for Slow Speed operation. Menu 57=2. See § 7.19, page 53. See Fig. 37 on page 41 for a wiring example.
2. Select in menu 38 (see § 7.15.2, page 49) the Slow Speed at Start time. This time will now be the absolute maximum time for Slow Speed to be active after a start command, in case the external signal will not appear.
3. Select in menu 39 (see § 7.15.2, page 49) the Slow Speed at Stop time. This time will now be the absolute maximum time for Slow Speed to be active after a stop command, in case the external signal will not appear.
4. Select in menu 57 (see § 7.19, page 53) the number of edges to be ignored by the Slow Speed input, before a start or stop is executed at slow speed. The edges are generated by an external sensor (photo cell, micro switch, etc.).

The Slow Speed torque (menu 37) and DC-Brake after Slow Speed (menu 40) can be selected if needed. (see § 7.15.4, page 49).

When the number of edges exceeds or the time expire, a start according to selected main function is made.

At stop, the motor will ramp down (if selected) and DC brake (if selected) before a slow speed forward at stop will begin. Slow speed will last as long as the number of edges on the external input is below parameter value in menu 036 and the max duration time doesn't expires. When the number of edges exceeds or the time expire, a stop is made.

In Fig. 48 on page 48 the selected number of edges are 4. It is recommended to select DC-brake (see § 7.14, page 46) before a slow speed at stop if it is a high inertia load. See Fig. 29 on page 33 for wiring diagram. In case one use DC-brake, see § 7.15.4, page 49.

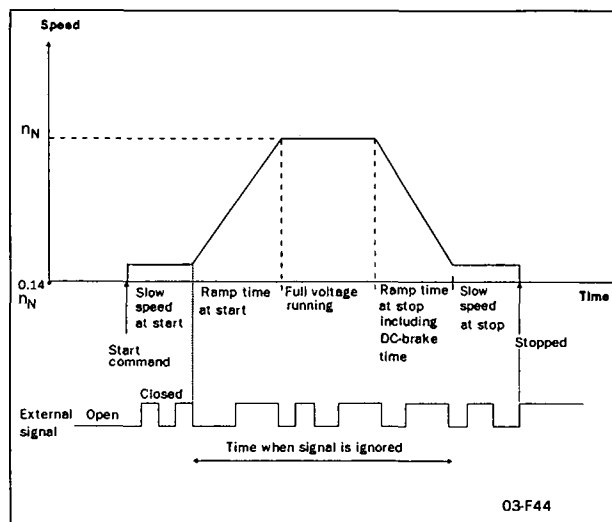


Fig. 48 Slow speed controlled by an external signal.

This additional function can be used together with most of the main functions (see § 4.6, page 19).

037 ⁰	
Slow speed torque	
10	
Default:	10
Range:	10-100
Select the magnitude of the slow speed torque.	

7.15.2 Slow speed during a selected time

It is possible to have a slow speed in forward direction before a start and after a stop. The duration of the slow speed is selectable in menus 038 and 039.

It is recommended to select DC brake (see § 7.14, page 46) before a slow speed at stop if it is a high inertia load. This slow speed function is possible in all control modes, keyboard, remote and serial communication.

038 ^o	
Slow speed time at start	
OFF	
Default:	oFF
Range:	oFF, 1 - 60 sec
oFF	Slow speed at start is disabled
1-60	Set slow speed time at start.

039 ^o	
Slow speed time at stop	
OFF	
Default:	oFF
Range:	oFF, 1 - 60 sec
oFF	Slow speed at stop is disabled
1-60	Set slow speed time at stop.

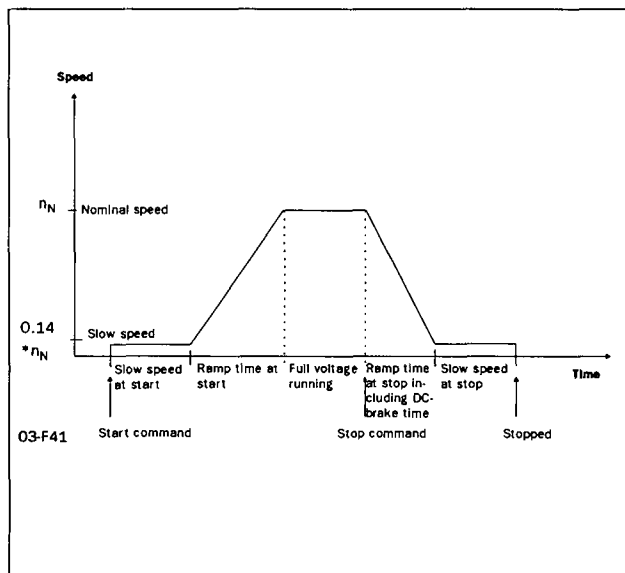


Fig. 49 Slow speed at start/stop during a selected time.

The Slow speed torque (menu 37) and the DC-Brake after Slow speed (menu 40, § 7.15.4, page 49) can be selected if needed.

7.15.3 Jog Functions

The Jog commands can be used to let the motor run at a Slow speed (forward or reverse) as long as the Jog command is active.

The Jog commands can be activated in 2 different ways:



- **Jog keys**
The Jog-Forward and Jog-reverse keys on the control panel. The keys can be programmed separate for each function. See § 7.25, page 61 for more instructions
- **External Jog command**
The external command is given via terminal 14 at the digital input. Only 1 function (forward or reverse) can be programmed to the digital input at the time. See § 7.19, page 53 for more instructions.

7.15.4 DC-brake after slow speed at stop [040]

A DC-brake after a slow speed at stop is possible to have, i.e. for a high inertia load or for a precise stop.

The current is controlled and the reference value for the normal DC-brake function is used (see § 7.15.4, page 49).

The duration for the DC-brake is possible to select.

This DC-brake function is not applied when the "JOG " and "JOG " keys are used.

040 ^o	
DC-Brake at slow speed	
OFF	
Default:	oFF
Range:	oFF, 1-60
oFF	DC-brake after slow speed at stop disabled.
1-60	DC-brake duration time after slow speed at stop.

7.16 Motor data setting

The first step in the settings is to set menu 007 and 008 to “on” to be able to reach the menus 041-046 and enter the motor data.

NOTE! The default factory settings are for a standard 4-pole motor acc. to the nominal current and power of the soft starter. The soft starter will run even if no specific motor data is selected, but the performance will not be optimal.

041 ^o	
Nominal motor voltage	
4 0 0	
Default:	400 V
Range:	200-700 V
Make sure the soft starters maximum voltage rating is suitable for chosen motor voltage.	

045 ^o	
Nominal motor cos phi	
0.86	
Default:	0.86
Range:	0.50-1.00

046 ^o	
Nominal frequency	
5 0	
Default:	50 Hz
Range:	50/60 Hz

NOTE! Now go back to menu 007, 008 and set it to “oFF” and then to menu 001.

042 ^o	
Nominal motor current	
1 7	
Default:	Nominal soft starter current
Range:	25% - 150% of Insoft in Amp.

043 ^o	
Nominal motor power	
7.5	
Default:	Nominal soft starter power
Range:	25% - 300% of Pnsoft in kW

044 ^o	
Nominal motor speed	
1 4 5 0	
Default:	Nnsoft in rpm
Range:	500-3600 rpm

7.17 Programmable relay K1 and K2

The soft starter has three built-in auxiliary relays, K3 (change over contacts), is always used as an alarm relay. The other two relays, K1 and K2 (closing contacts), are programmable.

K1 and K2 can be set to either “Operation”, “Full Voltage” or “Pre-alarm” indication. If DC-brake is chosen the relay K2 will be dedicated to this function.

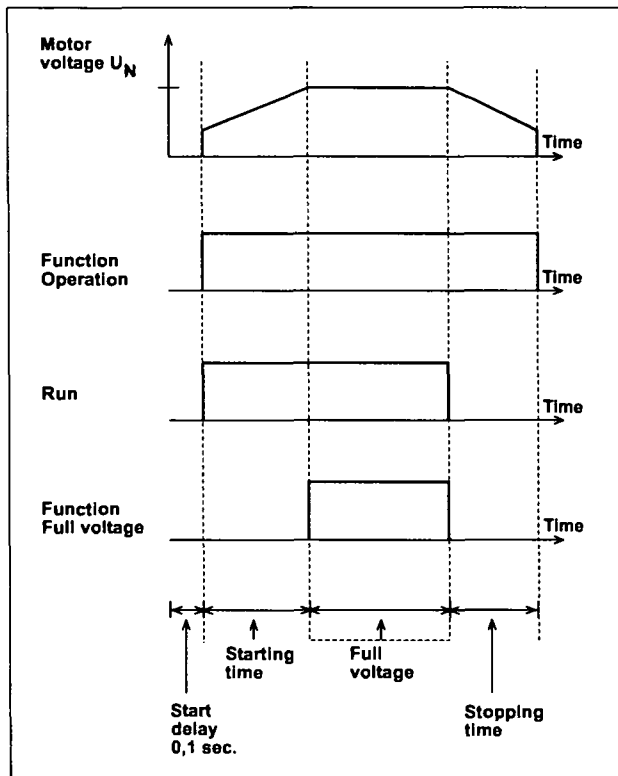


Fig. 50 Start/stop sequence and relay function “Operation” and “Full voltage”.

052 ^o	
Setting of K2 indication	
[][][][] 2	
Default:	2
Range:	1, 2, 3, 4, 5
1	K2 is set for “Operation”
2	K2 is set for “Full Voltage”
3	K2 is set for “Power pre-alarm”
4	K2 is set for “Softbrake”
5	K2 is set for “Run”



WARNING! If the Soft Brake function has been selected once and after that the Bypass function is selected, then the relay functions on K1 and K2 remain in the Soft Brake functionality. Therefore it is necessary to change the relay functions in menu 51-52 manually to the Bypass functions (see § 7.12, page 43) or reset to default in menu 199 (see § 7.28, page 63) and select the Bypass function again.

051 ^o	
Setting of K1 indication	
[][][][] 1	
Default:	1
Range:	1, 2, 3, 4, 5
1	K1 is set for “Operation”
2	K1 is set for “Full Voltage”
3	K1 is set for “Power pre-alarm”
4	No function
5	K1 is set for “Run”

7.18 Analogue output

The soft starter can present current, voltage and power on an analogue output terminal, for connection to a recording instrument or a PLC. The output can be configured in 4 different ways, 0-10V, 2-10V, 0-20mA or 4-20 mA. To install the instrument proceed as follows:

1. Connect the instrument to terminal 19 (+) and 15 (-).

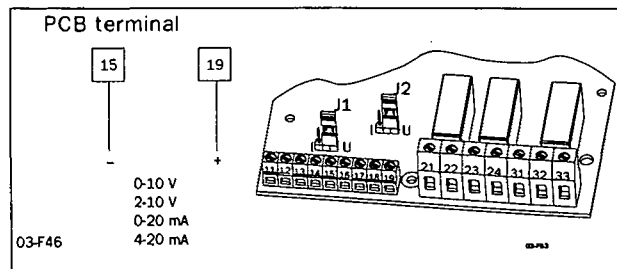


Fig. 51 Wiring for analogue output.

2. Set Jumper J2 on the PCB board to voltage (U) or current (I) signal position. Factory setting is voltage (U). See Fig. 52 on page 52 and Fig. 24 on page 28.

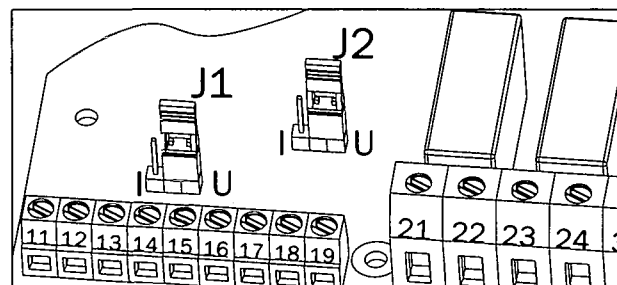


Fig. 52 Setting of current or voltage output.

3. Set the parameter in menu 054.

054 ^o	
Analogue output	
o F F	
Default:	oFF
Range:	oFF, 1, 2
oFF	Analogue output is disabled
1	Analogue output is set to 0-10V/0-20mA
2	Analogue output is set to 0-10V/4-20mA

4. Choose a read-out value in menu 055

055 ^o	
Analogue output value	
1	
Default:	1
Range:	1, 2, 3
1	RMS current, default range 0-5xI _n
2	Line input RMS voltage, default range 0-720V
3	Output shaft power, default range 0-2xP _n

5. Set analogue output gain to adjust the range of chosen analogue output value in menu 056.

056 ^o	
Analogue output gain	
1 0 0	
Default:	100%
Range:	5-150%

Example on settings:

Set value	I _{scale}	U _{scale}	P _{scale}
100%	0-5xI _n	0-720V	0-2xP _n
50%	0-2.5xI _n	0-360V	0-P _n

7.19 Digital input selection

The analogue input can be used as a digital input. This is programmed in Menu 57. There are 4 different functions:

- Rotation sensor input for braking functions. See § 7.14, page 46.
- Slow speed external controlled. See § 7.15.1, page 48.
- Jog functions forward or reverse enabled. See § 7.25, page 61.

Fig. 53 shows how to set the input for voltage or current control, with jumper J1 the control board. The default setting for J1 is voltage control.

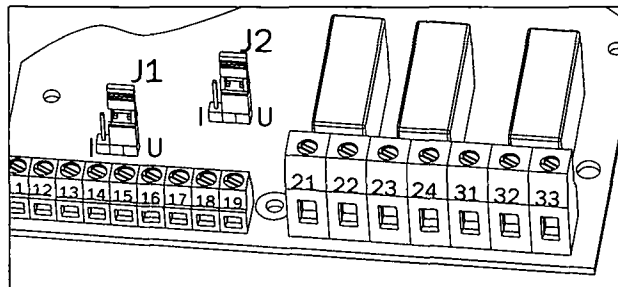


Fig. 53 Setting of J1 for current or voltage control.

Fig. 54 shows a wiring example for the analogue input as it is used for digital input.

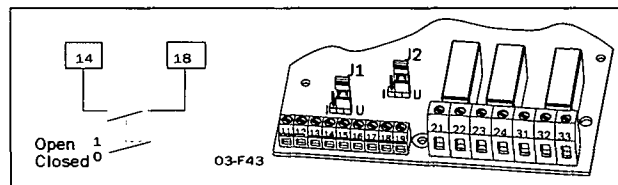


Fig. 54 Wiring for slow speed external input.

NOTE! If the Main Function Analogue control is programmed (see § 7.8, page 41) the analogue input can not be used for digital signal input. The menu 57 is then automatically set to OFF.

057 ^o	
Digital input selection	
OFF	
Default:	oFF
Range:	oFF, 1-4
oFF	No digital input control
1	Rotation sensor for brake functions
2	Slow speed function
3	Jog forward command
4	Jog reverse command

NOTE! Jog forward, reverse has to be enabled, see § 7.25, page 61.

Depending on the selection made in menu 57, menu 58 is used to program the number of the edges. The edges can be generated by an external sensor (photo cell, micro switch etc.).

058 ^o	
Digital input pulses	
1	
Default:	1
Range:	1-100
If Menu 57=1. A positive or negative edge at analogue input from a rotation sensor will give a signal to stop the braking voltage.	
If Menu 57=2 The number of edges to be ignored by the slow speed input, before a start or stop is executed at slow speed.	

7.20 Parameter Set

Parameter Set, an important function which can be handy when using one soft starter to switch in and start different motors, or working under variable load conditions. For example; starting and stopping conveyor belts with different weight on the goods from time to time.

For sets of parameters can be controlled either from the keyboard, the external control inputs or the serial interface (option). Up to 51 different parameters can be set for each Parameter Set.

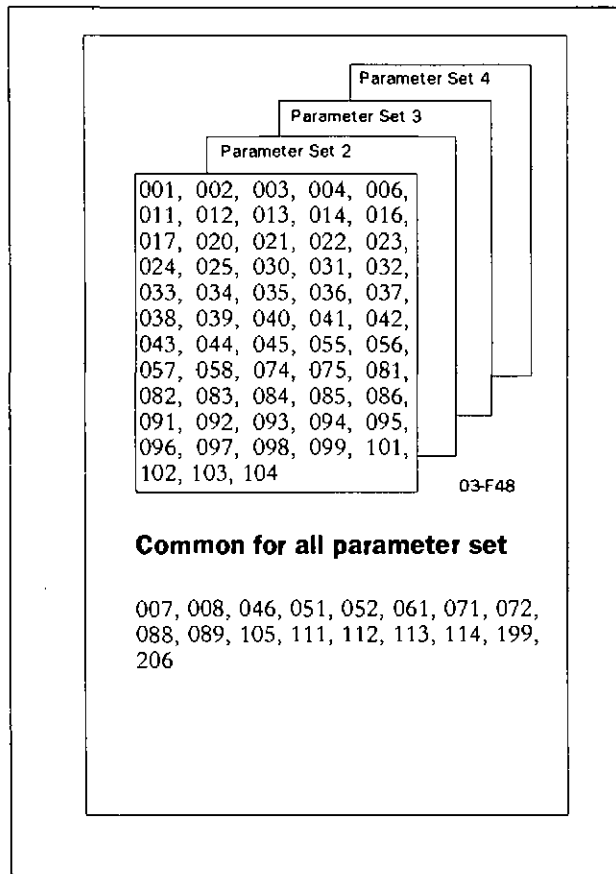


Fig. 55 Parameter overview

When 'Parameter set' in menu 061 is set to 0 (external selection), only parameters in menu 006 (Control mode) and 061 (Parameter set) can be changed. All other parameters are not allowed to change.

It is possible to change parameter set at stop and at full voltage running.

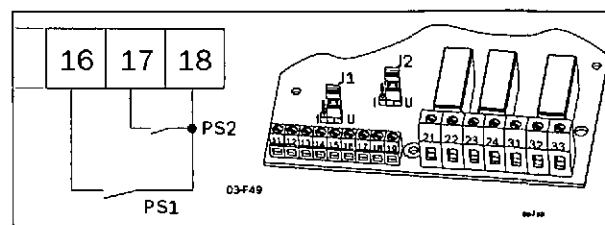
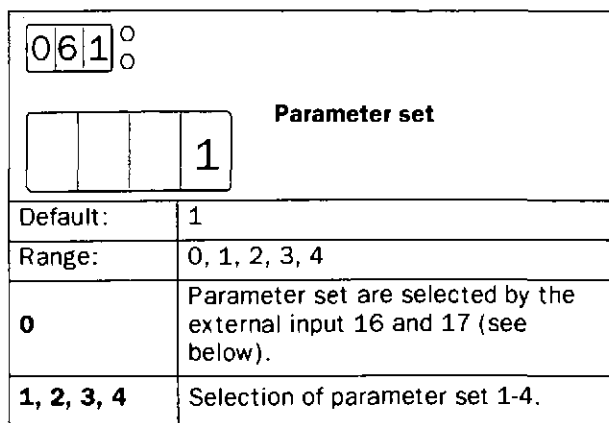


Fig. 56 Connection of external control inputs.

Parameter Set	PS1 (16-18)	PS2 (17-18)
1	Open	Open
2	Closed	Open
3	Open	Closed
4	Closed	Closed

7.21 Motor protection, overload (F2 alarm)

In many cases it is convenient to have a complete starter. The soft starter have a possibility to use either an input PTC signal from the motor, an internal thermal model of the motor for thermal protection or both together at the same time. Slight overload for long time and several overloads of short duration will be detected with both methods.

071 ^o	
Motor PTC Input	
n o	
Default:	no
Range:	no, YES
no	Motor PTC input is disabled
YES	Motor PTC input is activated: - Connect the PTC to terminals 69 and 70, see table 12, page 32 and § Fig. 30, page 34. - A to hot motor will give an F2 alarm. The alarm can only be resetted after cooling down of the motor.

NOTE! Open terminals will give an F2 alarm immediately. Make sure the PTC is always connected or the terminals are shorted.

NOTE! The internal motor thermal protection will still generate an alarm if it is not selected OFF.

072 ^o	
Internal motor thermal protection	
1 0	
Default:	10
Range:	oFF, 2-40 sec
oFF	Internal motor protection is disabled.
2-40	Selection of the thermal curve according to Fig. 57 - Check that menu 042 is set to the proper motor current (see § 7.16, page 50). - If the current exceeds the 100% level an F2 alarm is activated. - The motor model thermal capacity must cool down to 95% before reset can be accepted. - Used thermal capacity in menu 073 in § 7.21, page 55.

NOTE! If 'Bypass' is used check that the current transformers are placed and connected correctly (see Fig. 43 on page 44).



CAUTION! Used thermal capacity is set to 0 if the control board loses its supply (terminal 01 and 02). This means that the internal thermal model starts with a 'cold' motor, which perhaps in reality is not the case. This means that the motor can be overheated.

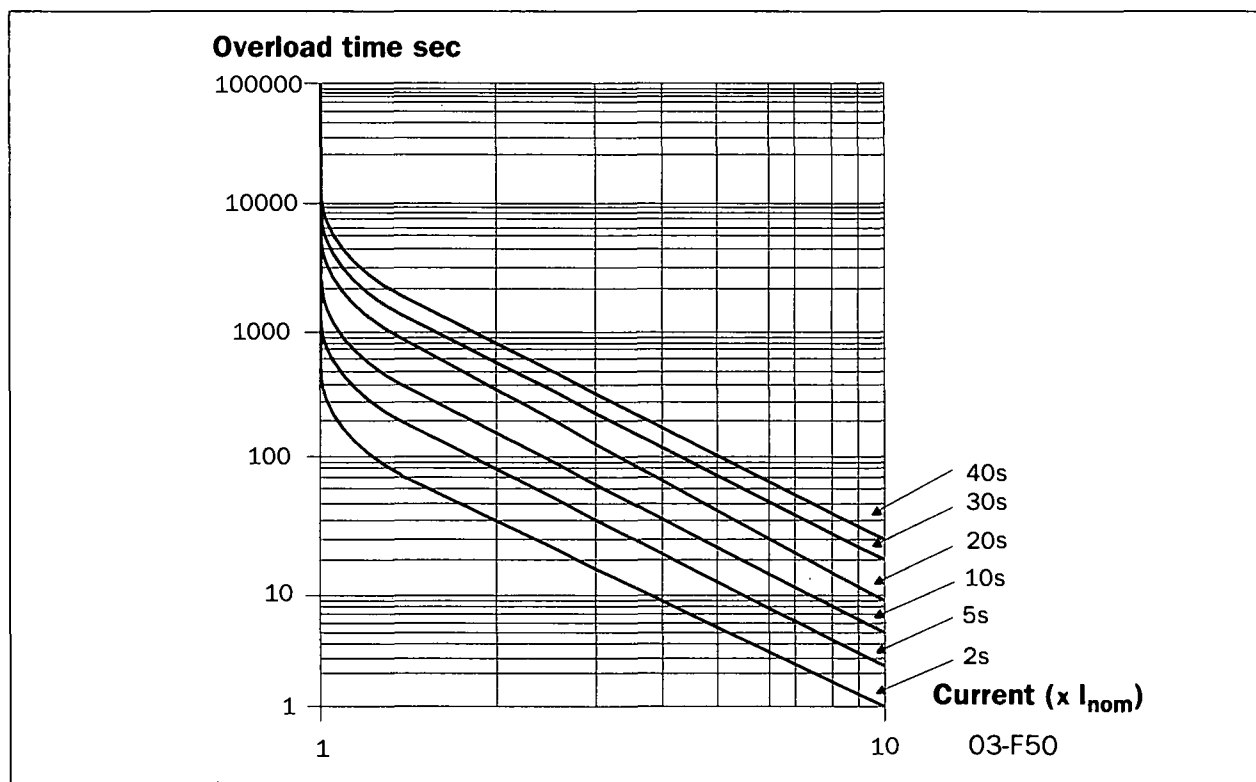


Fig. 57 The thermal curve

7.22 Mains protection

073^o

Used thermal capacity

0

Default:	-
Range:	0-150%

Read-out of the used thermal capacity. If menu 072 'Internal motor thermal protection' is selected OFF, the capacity is shown as if the default class 10 was selected.

081^o

Voltage unbalance alarm

1 0

Default:	10
Range:	2 -25% U _n

Insert limit in % of nominal motor voltage. Max unbalance in voltage between the 3 input phases is compared with the selected value. This is a category 2 alarm.

074^o

Starts per hour limitation

OFF

Default:	oFF
Range:	oFF, 1-99/hour

oFF Starts per hour limitation is disabled.

1-99 Sets the start per hour limitation alarm. If the selected number is exceeded, alarm F11 occurs.

082^o

Response delay voltage unbalance alarm

OFF

Default:	oFF
Range:	oFF, 1-60 sec

oFF Unbalance voltage alarm is disabled

1-60 Set the response delay time for unbalanced voltage alarm F8.

075^o

Locked rotor alarm

OFF

Default:	oFF
Range:	oFF, 1.0-10.0 sec

oFF Locked rotor alarm is disabled

1.0-10.0 An F5 alarm is given when the rotor locks. The alarm is active during starting and running.

083^o

Over voltage alarm

1 1 5

Default:	115
Range:	100 -150% U _n

Insert limit in % of nominal motor voltage. Max voltage of the 3 input phases is compared with the selected value. This is a category 2 alarm.

084^o

Response delay over voltage alarm

OFF

Default:	oFF
Range:	oFF, 1-60 sec

oFF Overvoltage alarm is disabled

1-60 Set the response delay time for over voltage alarm F9.

7.23 Application protection (load monitor)

085 ^o	
Under voltage alarm	
OFF	
Default:	85
Range:	75-100 U _n
Insert limit in % of nominal motor voltage. Min voltage of the 3 input phases is compared with the selected value. This is a category 2 alarm.	

086 ^o	
Response delay under voltage alarm	
OFF	
Default:	oFF
Range:	oFF, 1-60 sec
oFF	Under voltage alarm is disabled
1-60	Set the response delay time for under voltage alarm F10

087 ^o	
Phase sequence	
- - - -	
Default:	-
Range:	L123, L321
L123 is the direct phase sequence. L321 is the reverse phase sequence.	

088 ^o	
Phase reversal alarm	
OFF	
Default:	oFF
Range:	oFF, on
oFF	Phase reversal alarm is disabled
on	Sets the phase reversal Alarm. - Switch on the power supply first. The phase sequence is stored as the correct sequence. - Sets the menu 088 to "on". - Any reversal of phase sequence will cause alarm F16.

NOTE! The actual phase sequence can be viewed in menu 87.

7.23.1 Load monitor max and min/protection (F6 and F7 alarms)

MSF has a built in load monitor based on the output shaftpower. This is a unique and important function which enables protection of machines and processes driven by the motor connected to the soft starter. Both a Min and Max limit is possible to select.

In combination with the pre-alarm function, see § 7.23.2, page 58, this create a powerful protection. An auto set function is also included for an automatic setting of the alarm limits. A start-up delay time can be selected to avoid undesired alarms at start-up, see Fig. 58 on page 60.

NOTE! The load monitor alarms are all disabled during a stop ramp.

089 ^o	
Auto set power limits	
no	
Default:	no
Range:	no, YES
no	Auto set is disabled
YES	Auto set is activated if ENTER is pressed.

090 ^o	
Output shaftpower in %	
0	
Default:	-
Range:	0-200%
Measured output shaftpower in % of nominal motor power.	

NOTE! System must be in full voltage running before an auto set is permitted.

The actual power is regarded as 1.00xPact.
The set levels are:

- Power max alarm limit[092]: 1.15xP actual
- Power max pre-alarm limit[094]: 1.10xP actual
- Power min pre-alarm limit[096]: 0.90xP actual
- Power min alarm limit[098]: 0.85xP actual

A successful auto set shows a message 'Set' for 3 s and if something goes wrong a message 'no' will be showed.

091^o

Start delay power limits

10

Default:	10 sec
Range:	1-250 sec

From start command during selected delay time, all power load monitor alarms and pre-alarms are disabled.

092^o

Max power alarm limit

115

Default:	115
Range:	5-200% Pn

Insert limit in % of nominal motor power. The actual power in % of nominal motor power, could be read out in menu 090. If output shaft power exceeds selected limit, an F6-alarm occurs after the response delay time. The 'Auto set' function in menu 089, affect this limit even if the alarm is set "oFF" in menu 093. This is a category 1 alarm.

093^o

Response delay max alarm

oFF

Default:	oFF
Range:	oFF, 0.1-25.0 sec
oFF	Max Alarm is disabled.
0.1-25.0	Sets the response delay of the Max Alarm level.

7.23.2 Pre-alarm

It could be useful to know if the load is changing towards a load alarm limit. It is possible to insert both a Max and Min pre-alarm limit based on the motor output shaft power. If the load exceeds one of these limits, a pre-alarm condition occurs.

It should be noted that it is not normal alarms. They will not be inserted in the alarm list, not activating the alarm relay output, not displayed on the display and they will not stop operation. But it is possible to activate relay K1 or K2 if a pre-alarm condition occurs. To have pre-alarm status on any of these relays, select value 3 in menu 051 or 052 (see § 7.17, page 51).

A start-up delay time can be selected in menu 091 to avoid undesired pre-alarms at start-up. Note that this time is also shared with power Max and Min alarms.

NOTE! The pre-alarm status is always available on the serial communication.

094^o

Max power pre-alarm limit

110

Default:	110
Range:	5 -200% Pn

Insert limit in % of nominal motor power. The actual power in % of nominal motor power, could be read out in menu 090. If output shaft power exceeds selected limit, a pre-alarm occurs after the response delay time. The 'Auto set' function in menu 089, affect selected limit even if the pre-alarm is set "oFF" in menu 095.

095^o

Max pre-alarm response delay

oFF

Default:	oFF
Range:	oFF, 0.1 - 25.0 sec
oFF	Max Pre-Alarm is disabled.
0.1-25.0	Sets the response delay of the Max Pre-Alarm level.

096^o

Min power pre-alarm limit

90

Default:	90%
Range:	5 -200% Pn

Insert limit in % of nominal motor power. The actual power in % of nominal motor power, could be read out in menu 090. If output shaft power goes below selected limit, a pre-alarm occurs after the response delay time. The 'Auto set' function in menu 089, affect selected limit even if the pre-alarm is set "oFF" in menu 097.

099^o

Min alarm response delay

oFF

Default:	oFF
Range:	oFF, 0.1-25.0 sec
oFF	Min Alarm is disabled
0.1-25.0	Sets the response delay of the Min Alarm level. The Min alarm is disabled during a stop ramp down.

097^o

Min pre-alarm response delay

oFF

Default:	oFF
Range:	oFF, 0.1 - 25.0 sec
oFF	Min Pre-Alarm is disabled.
0.1-25.0	Sets the response delay of the Min Pre-Alarm level. The Min Pre-alarm is disabled during a stop ramp down.

098^o


Min power alarm limit

85

Default:	85
Range:	5-200% Pn

Insert limit in % of nominal motor power. The actual power in % of nominal motor power, could be read out in menu 090. If output shaft power goes below selected limit, an F7-alarm occurs after the response delay time. The 'Auto set' function in menu 089, affect this limit even if the alarm is set 'oFF' in menu 099. This is a category 1 alarm.

Fig. 58 Load monitor alarm functions.

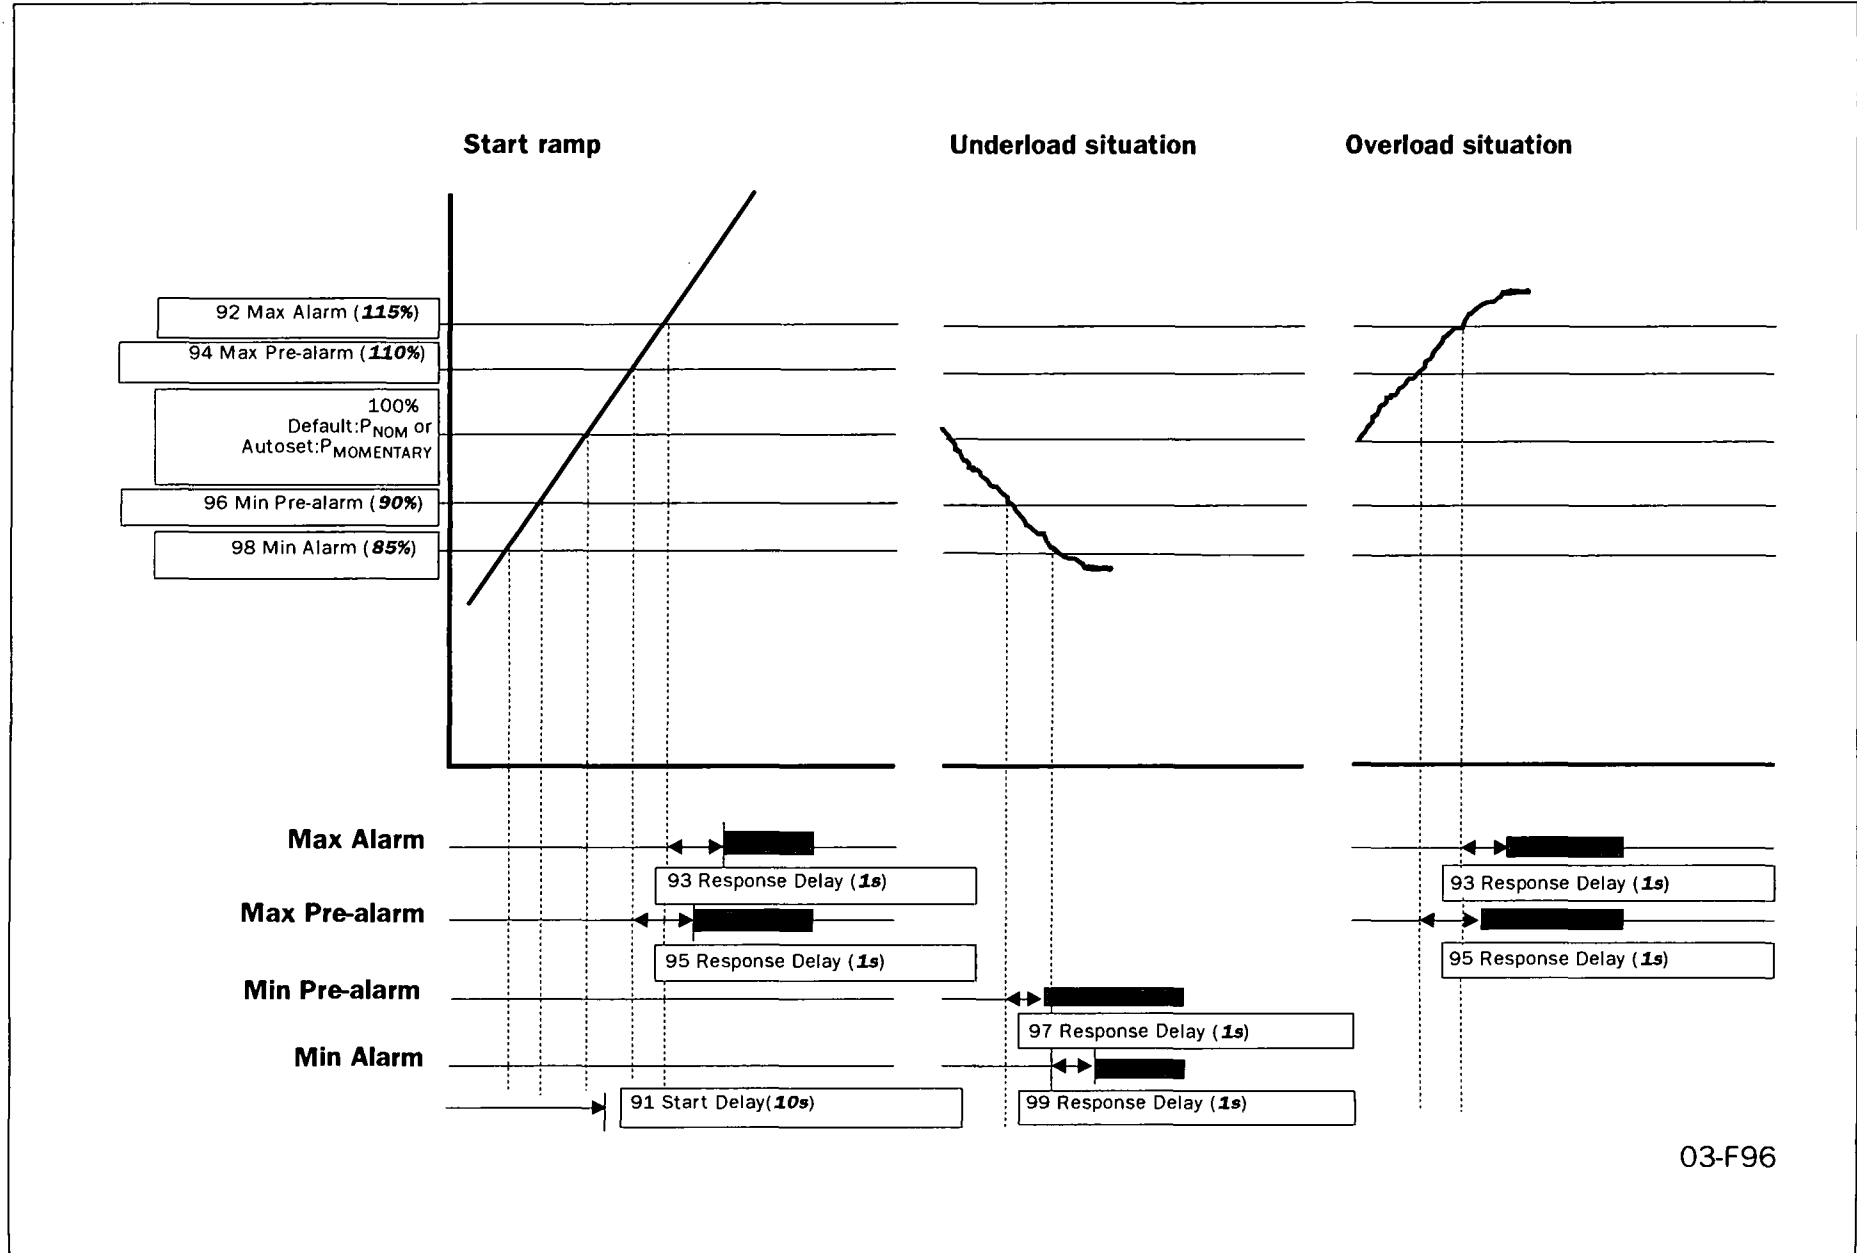

7.24 Resume alarms

7.24.1 Phase input failure F1

- Multiple phase failure.**
 Shorter failure than 100ms is ignored. If failure duration time is between 100 ms and 2 s, operation is temporary stopped and a soft start is made if the failure disappears before 2 s. If failure duration time is longer than 2 s, an F1 alarm is given in cat. 2.
- Single phase failure.**
 During start up (acceleration) the behaviour is like multiple phase failure below. When full voltage running there is a possibility to select the behaviour.

101 ^o	
Run at single phase loss	
no	
Default:	no
Range:	no, YES
no	Soft starter trips if a single phase loss is detected. Alarm F1 (category 2) will appear after 2 sec.
YES	Soft starter continues to run after a single phase loss. - Alarm F1 appears after 2 sec. - If the loose phase is reconnect the alarm is reset automatically. - If running on 2 phases, a stop command will give a Direct on line stop (freewheel)

7.24.2 Run at current limit time-out F4

In modes 'Current limit at start' and 'Voltage ramp with current limit at start' an alarm is activated if still operating at current limit level when selected ramp time exceeds. If an alarm occurs there is a possibility to select the behaviour.

102 ^o	
Run at current limit time-out	
no	
Default:	no
Range:	no, YES
no	Soft starter trips if the current limit time-out is exceeded. Alarm F4 (category 2) appears.
YES	Soft starter continues to run after the current limit time-out has exceeded: - Alarm F4 appears - The current is no longer controlled and the soft starters ramps up to full voltage with a 6s ramp time. - Reset the alarm with either ENTER/RESET key or by giving a stop command.

7.25 Slow speed with JOG

Slow speed with "JOG" is possible from the "JOG" keys, but also from terminals, see menu 57 page 53 and serial comm. The "JOG" is ignored if the soft starter is running. The slow speed "JOG" function has to be enabled for both forward and reverse directions in menus 103 and 104, see below.

NOTE! The enable functions is for all control modes.

103 ^o	
JOG forward enable	
o F F	
Default:	oFF
Range:	oFF, on
oFF	JOG forward disabled
on	JOG forward enabled

104 ^o	
JOG reverse enable	
o F F	
Default:	oFF
Range:	oFF, on
oFF	JOG reverse disabled
on	JOG reverse enabled

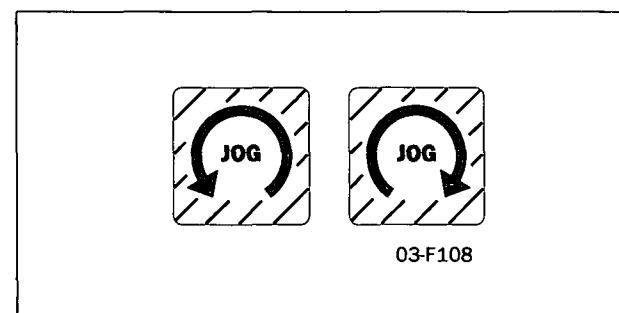


Fig. 59 The 2 Jog keys.

7.26 Automatic return menu

Often it is desirable to have a specific menu on the display during operation, i.e. RMS current or power consumption. The Automatic return menu function gives the possibility to select any menu in the menu system.

The menu selected will come up on the display after 60 sec. if no keyboard activity. The alarm messages (F1-F16) have a priority over menu 105 (as they have for all menus).

105 ^o	
<div style="display: flex; justify-content: space-around; border: 1px solid black; padding: 5px;"> o F F </div> <p style="text-align: center;">Automatic return menu</p>	
Default:	oFF
Range:	oFF, 1-999
1-999	Pressing "+" / "-" will lead through the menu system.

7.27 Communication option, related Parameters

The following parameters have to be set-up:

- Unit address.
- Baud rate.
- Parity
- Behaviour when contact broken.

Setting up the communication parameter must be made in local 'Keyboard control' mode. See § 7.2, page 37.

111 ^o	
<div style="display: flex; justify-content: space-around; border: 1px solid black; padding: 5px;"> 1 </div> <p style="text-align: center;">Serial comm unit address</p>	
Default:	1
Range:	1-247
This parameter will select the unit address.	

112 ^o	
<div style="display: flex; justify-content: space-around; border: 1px solid black; padding: 5px;"> 9.6 </div> <p style="text-align: center;">Serial comm baudrate</p>	
Default:	9.6
Range:	2.4, 4.8, 9.6, 19.2, 38.4 kBaud
This parameter will select the baudrate.	

113 ^o	
<div style="display: flex; justify-content: space-around; border: 1px solid black; padding: 5px;"> 0 </div> <p style="text-align: center;">Serial comm parity</p>	
Default:	0
Range:	0.1
This parameter will select the parity. 0 No parity. 1 Even parity.	

Serial comm. broken alarm

If control mode is 'Serial comm. control' and no contact is established or contact is broken the Soft starter consider the contact to be broken after 15 sec, the soft starter can act in three different ways:

- 1 Continue without any action at all.
- 2 Stop and alarm after 15 sec.
- 3 Continue and alarm after 15 sec.

If an alarm occurs, it is automatically reset if the communication is re-established. It is also possible to reset the alarm from the soft starter keyboard.

114 ^o	
<div style="display: flex; justify-content: space-around; border: 1px solid black; padding: 5px;"> 1 </div> <p style="text-align: center;">Serial comm. contact interrupted</p>	
Default:	1
Range:	oFF, 1, 2
This parameter will control the behaviour in the soft starter when the serial comm. is interrupted. oFF No alarm and continue operation. 1 Alarm and stop operation. 2 Alarm and continue operation.	

7.28 Reset to factory setting [199]

When selecting reset to factory settings:

- All parameters in all parameter sets will have default factory settings.
- Menu 001 will appear on the display.
- Note that the alarm list, the power consumption and the operation time will **not** have default settings.

199 ^o	
Reset to factory settings	
no	
Default:	no
Range:	no, YES
no	No reset
YES	Reset all functions to the factory defaults incl. all 4 Parameter Sets.

NOTE! Reset to factory settings is not allowed at run.

7.29 View operation

General

The soft start includes as standard a numerous metering functions which eliminates the need of additional transducers and meters.

Measured values

- Current RMS 3-phase current and per phase
- Voltage RMS 3-phase voltage and per phase
- Output shaft power /torque kW/Nm
- Power factor
- Power consumption in kWh
- Operation time in hours

Viewing of the measured values

After setting motor data and extended functions one can set menu 008 in OFF and will then automatically move to menu 201, the first menu viewing the measured values and thus eliminate to scroll through menu 011 to menu 199.

201 ^o	
RMS current	
0.0	
Default:	-
Range:	0.0 - 9999Amp
Read-out of the RMS motor current.	

NOTE! This is the same read-out as menu 005 see § 7.1.1, page 36.

202 ^o	
RMS main voltage	
0.0	
Default:	-
Range:	0-720V
The RMS input main voltage.	

203 ^o	
Output motor shaftpower	
0.0	
Default:	-
Range:	-9999 +9999kW
Viewing will show negative value if generator mode.	

204 ^o	
Power factor	
0.0	
Default:	-
Range:	0.00-1
View the actual power factor.	

NOTE! The power factor viewing will not work at bypass even if the current transformers are mounted outside the soft start.

205 ^o	
Total power consumption	
0.0000	
Default:	-
Range:	0.000 -2000MWh
View the total power consumption.	

206 ^o

Reset of power consumption

n o

Default:	no
Range:	no, YES
no	No reset of power consumption.
YES	Reset power consumption in menu 205 to 0.000.

212 ^o

RMS current in phase L2

0.0

Default:	-
Range:	0.0 - 9999Amp
View the current in phase L2.	

207 ^o

Motor shaft torque

0.0

Default:	-
Range:	-9999 - + 9999Nm
Viewing will show negative value if generator mode.	

213 ^o

RMS current in phase L3

0.0

Default:	-
Range:	0.0 - 9999Amp
View the current in phase L3.	

208 ^o

Operation time

0.0

Default:	-
Range:	Hours
Operation time is calculated when the soft starter is in RUN mode. After 9999 hours the display will show two values. Example: 12467 hours shows 1 1 sec 2467 5sec	

214 ^o

Main voltage L1-L2

0

Default:	-
Range:	0-720V
View main voltage L1-L2.	

211 ^o

RMS current in phase L1

0.0

Default:	-
Range:	0.0 - 9999Amp
View the current in phase L1.	

215 ^o

Main voltage L1-L3

0

Default:	-
Range:	0 - 720V
View main voltage L1-L3.	

216 ^o

Main voltage L2-L3

0

Default:	-
Range:	0 - 720V
View main voltage L2-L3.	



7.30 Keyboard lock

The keyboard can be locked to prohibit operation and parameter setting by an unauthorised. Lock keyboard by pressing both keys "NEXT →" and "ENTER ←" for at least 2 sec. The message '- Loc' will display when locked. To unlock keyboard press the same 2 keys "NEXT →" and "ENTER ←" for at least 2 sec. The message 'unlo' will display when unlocked.

In locked mode it is possible to view all parameters and read-out, but it is forbidden to set parameters and to operate the soft starter from the keyboard.

The message '-Loc' will display if trying to set a parameter or operate the soft starter in locked mode.

The key lock status can be read out in menu 221.

221 ^o	
Locked keyboard info	
no	
Default:	no
Range:	no, YES
no	Keyboard is not locked
YES	Keyboard is locked

7.31 Alarm list

The alarm list is generated automatically. It shows the latest 15 alarms (F1 - F16). The alarm list can be useful when tracing a failure in the soft starter or its control circuit. Press key "NEXT →" or "PREV ←" to reach the alarm list in menus 901-915 (menu 007 has to be ON).

901 ^o	
Alarm	
F 1	
Default:	-
Range:	F1-F16
View actual alarm	



8. PROTECTION AND ALARM

The soft starter is equipped with a protection system for the motor, the machine and for the soft starter itself.

Three categories of alarm are available:

Category 1

Alarm that stops the motor and need a separate reset before a new start can be accepted.

Category 2

Alarm that stops the motor and accepts a new start command without any separate reset.

Category 3

Alarm that continues to run the motor.

All alarm, except pre-alarm, will activate the alarm relay output K3, flash a red fault number on the display and it will also be placed in the alarm list. As long as the alarm is active, the display is locked in the alarm indication.

The relay output K3 can be used in the control circuit for actions needed when alarm occurs.

If more than one alarm is active, it is the last alarm that is presented on the display.

8.1 Alarm description

8.1.1 Alarm with stop and requiring a separate reset

Operation will stop for a category 1 alarm. A separate reset is needed before a new start command is accepted. It is possible to reset from keyboard (pushing "ENTER/RESET") regardless of selected control mode. It is also possible to reset the alarm from the actual control mode (i.e. if control mode is serial communication, a reset is possible to do from serial communication).

A reset is accepted first when the alarm source goes back to normal.

When a reset is made, the alarm relay output K3 is deactivated, the alarm indication on the display disappear and the original menu shows.

After a reset is made the system is ready for a new start command.

8.1.2 Alarm with stop and requiring only a new start command

Operation will stop for a category 2 alarm. A restart can be done and at the same time the alarm relay output K3 is deactivated, the alarm indication on the display disappear and the original menu shows.

It is still possible to reset the alarm in the same way as for category 1 alarms (see 8.1.1), if a start is not required at the time.

8.1.3 Alarm with continue run

Operation will continue run for a category 3 alarm. Some different reset behaviour is possible (see remarks for the specific alarms in § 8.2, page 67).

- Automatic reset when the alarm source goes back to normal.
- Automatic reset when a stop command is given.
- Manual reset during run.

When the reset occurs, the alarm relay output K3 is deactivated, the alarm indication on the display disappear and the original menu shows.

8.2 Alarm overview

Display indication	Protective function	Alarm category	Remark
F1	Phase input failure.	Cat 3. Run with auto reset.	Single phase failure when full voltage running if menu 101 'Run at phase loss' = YES. If the fault phase comes back, an automatic reset is made.
		Cat 2. Stop with reset in start.	Multiple phase failure or single phase failure when not full voltage running or if menu 101 'Run at phase loss' = no.
F2	Motor protection, overload.	Cat 1. Stop with manual reset.	If menu 071 'Motor PTC input' = YES, cool down the motor. If menu 071 'Motor PTC input' = no, the internal model has to 'cool' down.
F3	Soft start overheated	Cat 1. Stop with manual reset.	If not cooled down, a reset will not be accepted.
F4	Full speed not reached at set current limit and start time.	If menu 102 'Run at current limit time-out' = no. Cat 2. Stop with reset in start.	The current limit start is not completed.
		If menu 102 'Run at current limit time-out' = YES. Cat 3. Run with manual reset.	When start time expired, a 6 sec ramp is used to reach full voltage, without control of the current. Reset the alarm with either a manual reset or a stop command.
F5	Locked rotor.	Cat 1. Stop with manual reset.	Motor and/or machine protection.
F6	Above max power limit.	Cat 1. Stop with manual reset.	Machine protection.
F7	Below min power limit.	Cat 1. Stop with manual reset.	Machine protection.
F8	Voltage unbalance.	Cat 2. Stop with reset in start.	Motor protection.
F9	Over voltage.	Cat 2. Stop with reset in start.	Motor protection.
F10	Under voltage.	Cat 2. Stop with reset in start.	Motor protection.
F11	Starts / hour exceeded.	Cat 2. Stop with reset in start.	Motor and/or machine protection.
F12	Shorted thyristor.	Cat 3. Run with manual reset.	When stop command comes, the stop will be a 'Direct On Line' stop, and the soft starter will be resetted. After this fault it is possible to start only in 'Direct On Line' mode. One or more thyristors probably damaged.
F13	Open thyristor.	Cat 1. Stop with manual reset.	One or more thyristors probably damaged.
F14	Motor terminal open.	Cat 1. Stop with manual reset.	Motor not correctly connected.
F15	Serial communication broken.	If menu 114 Serial comm. contact broken = 1. Cat 2. Stop with reset in start.	Serial communication broken will stop operation. Run from keyboard if necessary.
		If menu 114 Serial comm. contact broken = 2. Cat 3. Run with auto reset.	Serial communication broken will not stop operation. Stop from keyboard if necessary.
F16	Phase reversal alarm.	Cat 1. Stop with manual reset.	Incorrect phase order on main voltage input.

9. TROUBLE SHOOTING

9.1 Fault, cause and solution

Observation	Fault indication	Cause	Solution
The display is not illuminated.	None	No control voltage.	Switch on the control voltage.
The motor does not run.	F1 (Phase input failure)	Fuse defective.	Renew the fuse.
		No mains supply.	Switch the main supply on.
	F2 (Motor protection, overload)	Perhaps PTC connection. Perhaps incorrect nominal motor current inserted (menu 042).	Check the PTC input if PTC protection is used. If internal protection is used, perhaps an other class could be used (menu 072). Cool down the motor and make a reset.
	F3 (Soft start overheated)	Ambient temperature too high. soft starter duty cycle exceeded. Perhaps fan failure.	Check ventilation of cabinet. Check the size of the cabinet. Clean the cooling fins. If the fan(s) is not working correct, contact your local MSF sales outlet.
	F4 (Full speed not reached at set current limit and start time)	Current limit parameters are perhaps not matched to the load and motor.	Increase the starting time and/or the current limit level.
	F5 (Locked rotor)	Something stuck in the machine or perhaps motor bearing failure.	Check the machine and motor bearings. Perhaps the alarm delay time can be set longer (menu 075).
	F6 (Above max power limit)	Overload	Over load. Check the machine. Perhaps the alarm delay time can be set longer (menu 093).
	F7 (Below min power limit)	Underload	Under load. Check the machine. Perhaps the alarm delay time can be set longer (menu 099).
	F8 (Voltage unbalance)	Main supply voltage unbalance.	Check mains supply.
	F9 (Over voltage)	Main supply over voltage.	Check mains supply.
	F10 (Under voltage)	Main supply under voltage.	Check mains supply.
	F11 (Starts / hour exceeded)	Number of starts exceeded according to menu 074.	Wait and make a new start. Perhaps the number of starts / hour could be increased in menu 074.
	F13 (Open thyristor)	Perhaps a damaged thyristor.	Make a reset and a restart. If the same alarm appears immediately, contact your local MSF sales outlet.
	F14 (Motor terminal open)	Open motor contact, cable or motor winding.	If the fault is not found, reset the alarm and inspect the alarm list. If alarm F12 is found, a thyristor is probably shorted. Make a restart. If alarm F14 appears immediately, contact your local MSF sales outlet.

Observation	Fault indication	Cause	Solution
The motor does not run.	F15 (Serial communication broken)	Serial communication broken.	Make a reset and try to establish contact. Check contacts, cables and option board. Verify - System address (menu 111). - Baudrate (menu 112). - Parity (menu 113). If the fault is not found, run the motor with keyboard control if urgent (set menu 006 to "1"). See also manual for serial communication.
	F16 (Phase reversal)	Incorrect phase sequence on main supply.	Switch L2 and L3 input phases.
	-----	Start command comes perhaps from incorrect control source. (I.e. start from keyboard when remote control is selected).	Give start command from correct source (menu 006).
	-Loc	System in keyboard lock.	Unlock keyboard by pressing the keys 'NEXT' and 'ENTER' for at least 3 sec.
The motor is running but an alarm is given.	F1 (Phase input failure)	Failure in one phase. Perhaps fuse defective.	Check fuses and mains supply. Deselect 'Run at single phase input failure' in menu 101, if stop is desired at single phase loss.
	F4 (Full speed not reached at set current limit and start time)	Current limit parameters are perhaps not matched to the load and motor.	Increase the starting time and/or the current limit level. Deselect 'Run at current limit time-out' in menu 102, if stop is desired at current limit time-out.
	F12 (Shorted thyristor)	Perhaps a damaged thyristor.	When stop command is given, a free wheel stop is made. Make a reset and a restart. If alarm F14 appears immediately, contact your local MSF sales outlet. If it is urgent to start the motor, set soft starter in 'Direct On Line' (menu 024). It is possible to start in this mode.
		By pass contactor is used but menu 032 'Bypass' is not set to "on".	Set menu 032 'Bypass' to "on".
F15 (Serial communication broken)	Serial communication broken.	Make a reset and try to establish contact. Check contacts, cables and option board. Verify - System address (menu 111). - Baudrate (menu 112). - Parity (menu 113). If the fault is not found, run the motor with keyboard control if urgent, see also manual for serial communication.	

Observation	Fault indication	Cause	Solution
The motor jerks etc.	When starting, motor reaches full speed but it jerks or vibrates.	If 'Torque control' or 'Pump control' is selected, it is necessary to input motor data into the system.	Input nominal motor data in menus 041-046. Select the proper load characteristic in menu 025. Select a correct initial- and end torque at start in menus 016 and 017. If 'Bypass' is selected, check that the current transformers are correct connected.
		Starting time too short.	Increase starting time.
		Starting voltage incorrectly set.	Adjust starting voltage.
		Motor too small in relation to rated current of soft starter.	Use a smaller model of the soft starter.
		Motor too large in relation to load of soft starter.	Use larger model of soft starter.
		Starting voltage not set correctly	Readjust the start ramp. Select the current limit function.
	Starting or stopping time too long, soft does not work.	Ramp times not set correctly.	Readjust the start and/or stop ramp time.
Motor too large or too small in relation to load.		Change to another motor size.	
The monitor function does not work.	No alarm or pre-alarm	It is necessary to input nominal motor data for this function. Incorrect alarm levels.	Input nominal motor data in menus 041-046. Adjust alarm levels in menus 091 - 099. If 'Bypass' is selected, check that the current transformers are correct connected.
Unexplainable alarm.	F5, F6, F7, F8, F9, F10	Alarm delay time is to short.	Adjust the response delay times for the alarms in menus 075, 082, 084, 086, 093 and 099.
The system seems locked in an alarm.	F2 (Motor protection, overload)	PTC input terminal could be open. Motor could still be to warm. If internal motor protection is used, the cooling in the internal model take some time.	PTC input terminal should be short circuit if not used. Wait until motor PTC gives an OK (not overheated) signal. Wait until the internal cooling is done. Try to reset the alarm after a while.
	F3 (Soft start overheated)	Ambient temperature to high. Perhaps fan failure.	Check that cables from power part are connected in terminals 073, 074, 071 and 072. MSF-017 to MSF-145 should have a short circuit between 071 and 072. Check also that the fan(s) is rotating.
Parameter will not be accepted.	----	If the menu number is one of 020 - 025, only one can be selected. In other words only one main mode is possible at a time.	Deselect the other main mode before selecting the new one.
		If menu 061, 'Parameter set' is set to "0", the system is in a remote parameter selection mode. It is now impossible to change most of the parameters.	Set the menu 061, 'Parameter set' to a value between "1" - "4" and then it is possible to change any parameter.
		During acceleration, deceleration, slow speed, DC brake and Power factor control mode, it is impossible to change parameters.	Set parameters during stop or full voltage running.
		If control source is serial comm., it is impossible to change parameters from keyboard and vice versa.	Change parameters from the actual control source.
		Some menus include only read out values and not parameters.	Read-out values can not be altered. In table 13, page 35, read-out menus has '-' in the factory setting column.
	-Loc	Keyboard is locked.	Unlock keyboard by pressing the keys 'NEXT' and 'ENTER' for at least 3 sec.

10. MAINTENANCE

In general the soft starter is maintenance free. There are however some things which should be checked regularly. Especially if the surroundings are dusty the unit should be cleaned regularly.



WARNING! Do not touch parts inside the enclosure of the unit when the control and motor voltage is switched on.

Regular maintenance

- Check that nothing in the soft starter has been damaged by vibration (loose screws or connections).
- Check external wiring, connections and control signals. Tighten terminal screws and busbar bolts if necessary.
- Check that PCB boards, thyristors and cooling fin are free from dust. Clean with compressed air if necessary. Make sure the PCB boards and thyristors are undamaged.
- Check for signs of overheating (changes in colour on PCB boards, oxidation of solder points etc.). Check that the temperature is within permissible limits.
- Check that the cooling fan/s permit free air flow. Clean any external air filters if necessary.

In the event of fault or if a fault cannot be cured by using the fault-tracing table in chapter 9, page 68.

11. OPTIONS

The following options are available. Please contact your supplier for more detailed information.

11.1 Serial communication

For serial communication the MODBUS RTU (RS232/RS485) option card is available order number: 01-1733-00.

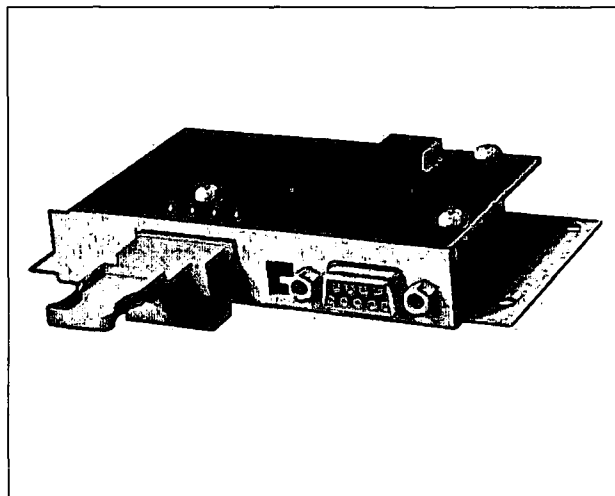


Fig. 60 Option RS232/485

11.2 Field bus systems

Various option cards are available for the following bus systems:

- PROFIBUS DP order number: 01-1734-01
- Device NET, order number: 01-1736-01
- LONWORKS: 01-1737-01
- FIP IO: 01-1738-01
- INTERBUS-S: 01-1735-01

Each system has its own card. The option is delivered with an instruction manual containing all the details for the set-up of the card and the protocol for programming.

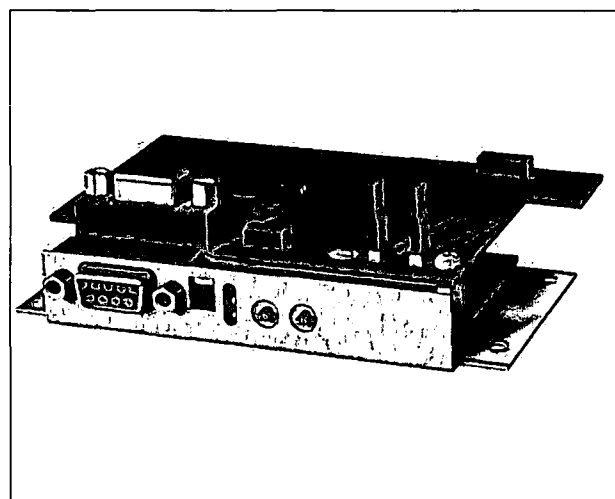


Fig. 61 Option Profibus

11.3 External PPU.

The external PPU option is used to move the PPU (keyboard) from the soft starter to the front of a panel door or control cabinet.

The maximum distance between the soft starter and the external PPU is 3 m.

The option can be factory mounted (01-2138-01) or it can be built in later (01-2138-00). For both versions instruction /data sheet are available.

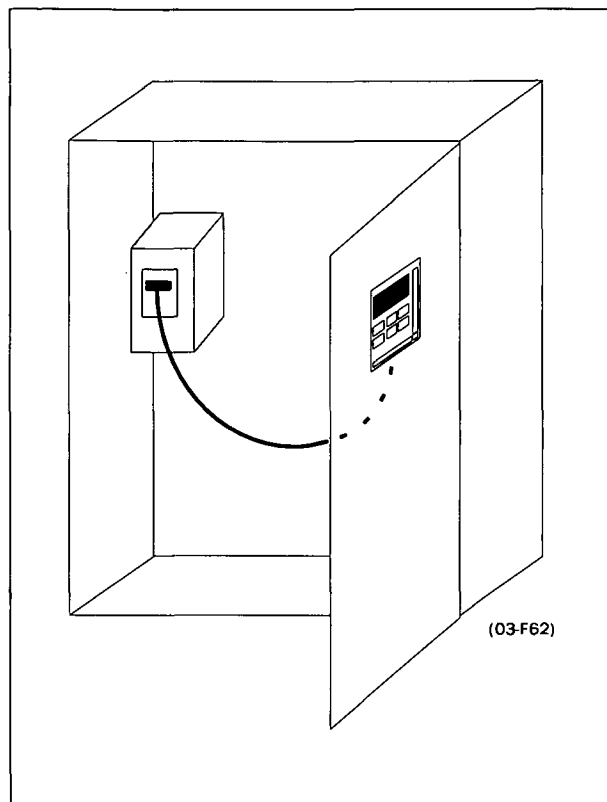


Fig. 62 Shows an example of the External PPU after it has been built in.

11.3.1 Cable kit for external current transformers

This kit is used for the bypass function, to connect the external current transformers more easily. order number: 01-2020-00.

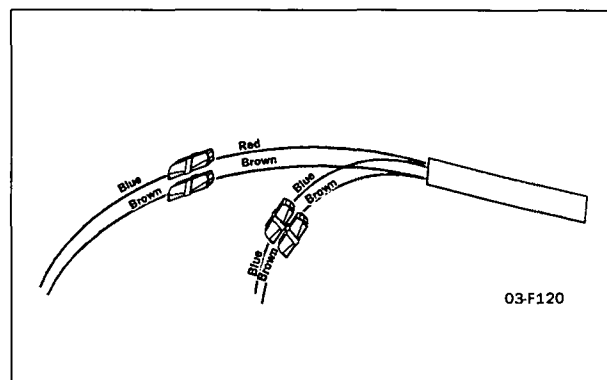


Fig. 63 Cable kit

11.4 Terminal clamp

Data: Single cables, Cu or Al	
Cables	95-300 mm ²
MSF type Cu Cable	310
Bolt for connection to busbar	M10
Dimensions in mm	33x84x47 mm
Order No. single	9350
Data: Parallel cables, Cu or Al	
Cables	2x95-300 mm ²
MSF type and Cu Cable	310 to -835
Bolt for connection to busbar	M10
Dimensions in mm	35x87x65
Order No. parallel	9351

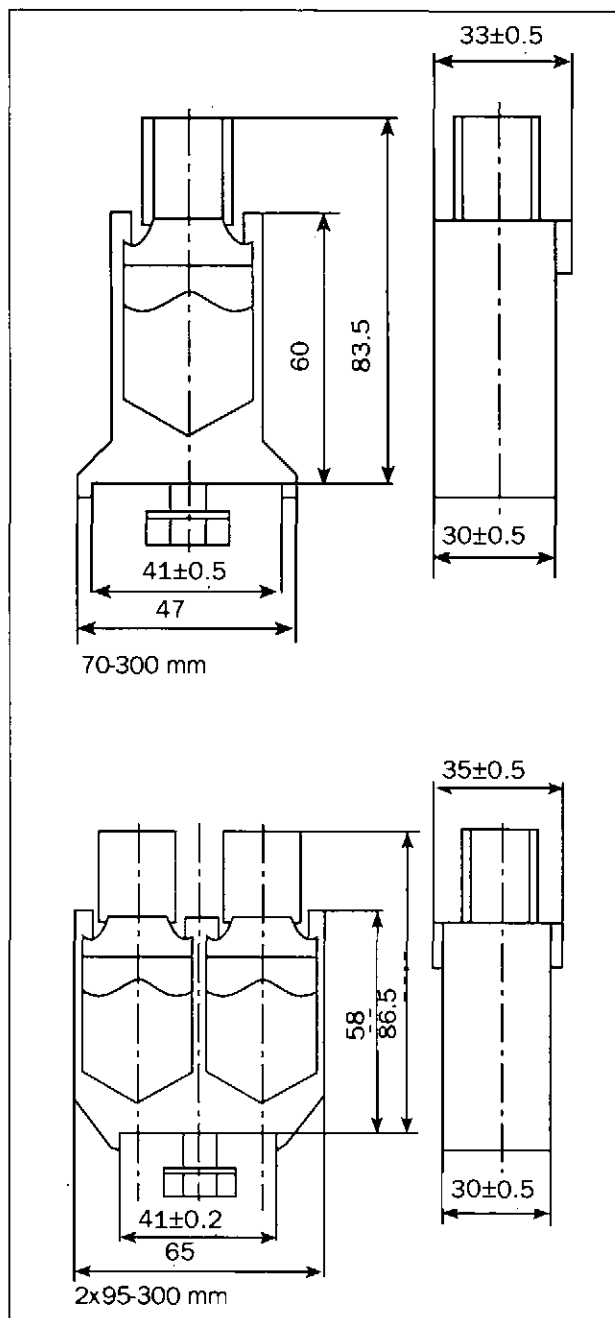


Fig. 64 The terminal clamp.

12. TECHNICAL DATA

3x200-525 V 50/60 Hz Model	MSF-017		MSF-030		MSF-045		MSF-060	
Soft starter rating according to AC35a, see chapter 4, page 13	5.0-30:50-10 heavy	3.0-30:50-10 normal/light	5.0-30:50-10 heavy	3.0-30:50-10 normal/light	5.0-30:50-10 heavy	3.0-30:50-10 normal/light	5.0-30:50-10 heavy	3.0-30:50-10 normal/light
Rated current of soft starter (A)	17	22	30	37	45	60	60	72
Recommended motor size (kW) for 400 V	7.5	11	15	18.5	22	30	30	37
Recommended motor size (kW) for 525 V	11	15	18.5	22	30	37	37	45
Order number: supply voltage (100-240V)	01-1301-01		01-1302-01		01-1303-01		01-1304-01	
Order number: supply voltage (380-500V)	01-1301-02		01-1302-02		01-1303-02		01-1304-02	
3x200-690V 50/60Hz Model	MSF-017		MSF-030		MSF-045		MSF-060	
Rated current of soft starter (A)	17	22	30	37	45	60	60	72
Motor power for 690V	15	18.5	22	30	37	55	55	75*
Order number: supply voltage (100-240V)	01-1321-01		01-1322-01		01-1323-01		01-1324-01	
Order number: supply voltage (380-500V)	01-1321-02		01-1322-02		01-1323-02		01-1324-02	
Electrical Data								
Recommended wiring fuse (A) 1)	25/50	32	35/80	50	50/125	80	63/160	100
Semi-conductor fuses, if required	80 A		125 A		160 A		200 A	
Power loss at rated motor load (W)	50	70	90	120	140	180	180	215
Power consumption control card	20 VA		20 VA		25 VA		25 VA	
Mechanical Data								
Dimensions in mm HxWxD	320x126x260		320x126x260		320x126x260		320x126x260	
Mounting position (Vertical/Horizontal)	Vertical		Vertical		Vert. or Horiz.		Vert. or Horiz.	
Weight (kg)	6.7		6.7		6.9		6.9	
Connection busbars Cu, (bolt)	15x4 (M6)		15x4 (M6)		15x4 (M6)		15x4 (M8)	
Cooling system	Convection		Convection		Fan		Fan	
General Electrical Data								
Number of fully controlled phases	3							
Voltage tolerance control	Control +/- 10%							
Voltage tolerance motor	Motor 200-525 +/- 10%/200-690 + 5%, -10%							
Recommended fuse for control card (A)	Max 10 A							
Frequency	50/60 Hz							
Frequency tolerance	+/- 10%							
Relay contacts	3 x 8A, 250 V resistive load, 3A 250VAC inductive (PF=0.4)							
Type of protection/Insulation								
Type of casing protection	IP 20							
Other General Data								
Ambient temperatures								
In operation	0 - 40 °C							
Max. e.g. at 80% IN	50 °C							
In storage	(-25) - (+70) °C							
Relative air humidity	95%, non-condensing							
Max. altitude without derating	(See separate: Technical information 151) 1000 m							
Norms/Standards, Conform to:	IEC 947-4-2, EN 292, EN 60204-1, UL508							
EMC, Emission	EN 50081-2, (EN 50081-1 with bypass contactor)							
EMC, Immunity	EN 50082-2							
1) Recommended wiring fuses for:	Heavy (first column): ramp/direct start Normal/Light (second column): ramp start							
NOTE! Short circuit withstand MSF017-060 5000 rms A when used with K5 or RK5 fuses.								

* 2-pole motor



3x200–525 V 50/60 Hz Model	MSF-075		MSF-085		MSF-110		MSF-145	
Soft starter rating according to AC35a, see chapter 4. page 13	5.0-30:50-10 heavy	3.0-30:50-10 normal/light	5.0-30:50-10 heavy	3.0-30:50-10 normal/light	5.0-30:50-10 heavy	3.0-30:50-10 normal/light	5.0-30:50-10 heavy	3.0-30:50-10 normal/light
Rated current of soft starter (A)	75	85	85	96	110	134	145	156
Recommended motor size (kW) for 400 V	37	45	45	55*	55	75	75	
Recommended motor size (kW) for 525 V	45	55	55	75*	75	90	90	110
Order number for supply voltage (100-240 V)	01-1305-01		01-1306-01		01-1307-01		01-1308-01	
Order number for supply voltage (380-550 V)	01-1305-02		01-1306-02		01-1307-02		01-1308-02	
3x200–690 V 50/60 Hz Model	MSF-075		MSF-085		MSF-110		MSF-145	
Rated current of soft starter (A)	75	85	85	90	110	134	145	156
Motor power for 690V	55	75	75	90	90	110	132	160*
Order number for supply voltage (100-240 V)	01-1325-01		01-1326-01		01-1327-01		01-1328-01	
Order number for supply voltage (380-550 V)	01-1325-02		01-1326-02		01-1327-02		01-1328-02	
Electrical Data								
Recommended wiring fuse (A) 1)	80/200	100	100/250	125	125/315	180	160/400	200
Semi-conductor fuses, if required	250 A		315 A		350 A		450 A	
Power loss at rated motor load (W)	230	260	260	290	330	400	440	470
Power consumption control card	25 VA		25 VA		25 VA		25 VA	
Mechanical Data								
Dimensions in mm HxWxD	320x126x260		320x126x260		400x176x260		400x176x260	
Mounting position (Vertical/Horizontal)	Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.	
Weight (kg)	6.9		6.9		12		12	
Connection, busbars Cu, (bolt)	15x4 (M8)		15x4 (M8)		20x4 (M10)		20x4 (M10)	
Cooling system	Fan		Fan		Fan		Fan	
General Electrical Data								
Number of fully controlled phases	3							
Voltage tolerance control	Control +/- 10%							
Voltage tolerance motor	Motor 200-525 +/- 10%/200-690 + 5%, -10%							
Recommended fuse for control card (A)	Max 10 A							
Frequency	50/60 Hz							
Frequency tolerance	+/- 10%							
Relay contacts	8A, 250 V resistive load, 3A, 250 V inductive load (PF=0.4)							
Type of protection/Insulation								
Type of casing protection	IP 20							
Other General Data								
Ambient temperatures in operation	0 - 40 °C							
Max. e.g. at 80% I _N	50 °C							
In storage	(-25) - (+70) °C							
Relative air humidity	95%, non-condensing							
Max. altitude without derating	(See separate: Technical information 151) 1000 m							
Norms/Standards, Conform to:	IEC 947-4-2, EN 292, EN 60204-1, UL508							
EMC, Emission	EN 50081-2, (EN 50081-1 with bypass contactor)							
EMC, Immunity	EN 50082-2							
1) Recommended wiring fuses for:	Heavy (first column): ramp/direct start Normal/Light (second column): ramp start							
NOTE! Short circuit withstand MSF075-145 10000 rms A when used with K5 or RK5 fuses.								

* 2-pole motor

3x200–525 V 50/60 Hz Model		MSF-170		MSF-210		MSF-250		MSF-310		MSF-370	
Soft starter rating according to AC35a, see chapter 4. page 13		5.0-30: 50-10 heavy	3.0-30: 50-10 normal/light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/light
Rated current of soft starter (A)		170	210	210	250	250	262	310	370	370	450
Recommended motor size (kW) for 400 V		90	110	110	132	132	160*	160	200	200	250
Recommended motor size (kW) for 525 V		110	132	132	160	160	200*	200	250	250	315
Order no. for supply voltage (100-240V)		01-1309-11		01-1310-11		01-1311-11		01-1312-01		01-1313-01	
Order no. for supply voltage (380-550V)		01-1309-12		01-1310-12		01-1311-12		01-1312-02		01-1313-02	
3x200–690 V 50/60 Hz Model		MSF-170		MSF-210		MSF-250		MSF-310		MSF-370	
Rated current of soft starter (A)		170	210	210	250	250	262	310	370	370	450
Motor power for 690 V		160	200	200	250	250	250	315	355	355	400
Order no. for supply voltage (100-240V)		01-1329-01		01-1330-01		01-1331-01		01-1332-01		01-1333-01	
Order no. for supply voltage (380-550V)		01-1329-02		01-1330-02		01-1331-02		01-1332-02		01-1333-02	
Electrical Data											
Recommended wiring fuse (A) 1)	200/400	200	250/400	315	250/500	315	315/630	400	400/800	500	
Semi-conductor fuses, if required	700 A		700 A		700 A		800 A		1000 A		
Power loss at rated motor load (W)	510	630	630	750	750 W		930	1100	1100	1535	
Power consumption control card	35 VA		35 VA		35 VA		35 VA		35 VA		
Mechanical Data											
Dimensions mm HxWxD incl. brackets	500x260x260		500x260x260		500x260x260		532x547x278		532x547x278		
Mounting position (Vertical/Horizontal)	Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		
Weight (kg)	20		20		20		42		46		
Connection, Busbars Al/Cu (bolt)	30x4 (M10)		30x4 (M10)		30x4 (M10)		40x8 (M12)		40x8 (M12)		
Cooling system	Fan		Fan		Fan		Fan		Fan		
General Electrical Data											
Number of fully controlled phases	3										
Voltage tolerance control	Control +/- 10%										
Voltage tolerance motor	Motor 200-525 +/- 10%/200-690 + 5%, -10%										
Recommended fuse for control card (A)	Max 10 A										
Frequency	50/60 Hz										
Frequency tolerance	+/- 10%										
Relay contacts	8A, 250 V resistive load, 3A, 250 V inductive load (PF=0.4)										
Type of protection/Insulation											
Type of casing protection	IP 20										
Other General Data											
Ambient temperatures in operation	0 - 40 °C										
Max. e.g. at 80% I _N	50 °C										
In storage	(-25) - (+70) °C										
Relative air humidity	95%, non-condensing										
Max. altitude without derating	(See separate: Technical information 151) 1000 m										
Norms/Standards, Conform to:	IEC 947-4-2, EN 292, EN 60204-1, (UL508, only MSF-170 to MSF-250)										
EMC, Emission	EN 50081-2, (EN 50081-1 with bypass contactor)										
EMC, Immunity	EN 50082-2										
1) Recommended wiring fuses for:	Heavy (first column): ramp/direct start Normal/Light (second column): ramp start										
NOTE! Short circuit withstand MSF170-250 18000 rms A when used with K5 or RK5 fuses.											

* 2-pole motor



3x200–525V 50/60Hz Model	MSF-450		MSF-570		MSF-710		MSF-835		MSF-1000		MSF-1400	
	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/ light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/ light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/ light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/ light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/ light	5.0-30: 50-10 heavy	3.0-30: 50-10 normal/ light
Soft starter rating according to AC35a, see chapter 4. page 13												
Rated current of soft starter (A)	450	549	570	710	710	835	835	960	1000	1125	1400	1650
Recommended motor size (kW) for 400 V	250	315	315	400	400	450	450	560	560	630	800	930
Recommended motor size (kW) for 525 V	315	400	400	500	500	560	600	630	660	710	1000	250
Order no. for supply voltage (100-240V)	01-1341-01		01-1315-01		01-1316-01		01-1317-01		01-1318-01		01-1319-01	
Order no. for supply voltage (380-550V)	01-1314-02		01-1315-02		01-1316-02		01-1317-02		01-1318-02		01-1319-02	
3x200–690V 50/60Hz Model	MSF-450		MSF-570		MSF-710		MSF-835		MSF-1000		MSF-1400	
Rated current of soft starter (A)	450	549	570	640	710	835	835	880	1000	1125	1400	1524
Motor power for 690 V	400	560	560	630	710	800	800		1000	1120	1400	1600
Order no. for supply voltage (100-240V)	01-1334-01		01-1335-01		01-1336-01		01-1337-01		01-1338-01		01-1339-01	
Order no. for supply voltage (380-550V)	01-1334-02		01-1335-02		01-1336-02		01-1337-02		01-1338-02		01-1339-02	
Electrical Data												
Recommended wiring fuse (A 1)	500/1 k	630	630/1 k	800	800/1 k	1 k	1 k/1.2 k	1 k	1k/1.4 k	1.2 k	1.4 k/1.8 k	1.8 k
Semi-conductor fuses, if required	1250 A		1250 A		1800 A		2500 A		3200 A		4000 A	
Power loss at rated motor load (W)	1400	1730	1700	2100	2100	2500	2500	2875	3000	3375	4200	4950
Power consumption control card	35 VA		35 VA		35 VA		35 VA		35 VA		35 VA	
Mechanical Data												
Dimensions mm HxWxD incl. brackets	532x547x278		687x640x302		687x640x302		687x640x302		900x875x336		900x875x336	
Mounting position (Vertical/Horizontal)	Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.		Vert. or Horiz.	
Weight (kg)	46		64		78		80		175		175	
Connection, Busbars Al (bolt)	40x8 (M12)		40x10 (M12)		40x10 (M12)		40x10 (M12)		75x10 (M12)		75x10 (M12)	
Cooling system	Fan		Fan		Fan		Fan		Fan		Fan	
General Electrical Data												
Number of fully controlled phases	3											
Voltage tolerance control	Control +/- 10%											
Voltage tolerance motor	Motor 200-525 +/- 10%/200-690 + 5%, -10%											
Recommended fuse for control card (A)	Max 10 A											
Frequency	50/60 Hz											
Frequency tolerance	+/- 10%											
Relay contacts	8A, 250 V resistive load, 3A, 250 V inductive load (PF=0.4)											
Type of protection/Insulation												
Type of casing protection	IP 20						IP00					
Other General Data												
Ambient temperatures In operation	0 - 40 °C											
Max. e.g. at 80% I _N	50 °C											
In storage	(-25) - (+70) °C											
Relative air humidity	95%, non-condensing											
Max. altitude without derating	(See separate: Technical information 151) 1000 m											
Norms/Standards, Conform to:	IEC 947-4-2, EN 292, EN 60204-1											
EMC, Emission	EN 50081-2, (EN 50081-1 with bypass contactor)											
EMC, Immunity	EN 50082-2											
1) Recommended wiring fuses for:	Heavy (first column): ramp/direct start Normal/Light (second column): ramp start											

Semi-conductor fuses

Always use standard commercial fuses to protect the wiring and prevent short circuiting. To protect the thyristors against short-circuit currents, superfast semiconductor fuses can be used if preferred (e.g. Bussmann type FWP or similar, see table below).

The normal guarantee is valid even if superfast semiconductor fuses are not used.

Type	FWP Bussmann fuse	
	A	I^2t (fuse) x 1000
MSF-017	80	2.4
MSF-030	125	7.3
MSF-045	150	11.7
MSF-060	200	22
MSF-075	250	42.5
MSF-085	300	71.2
MSF-110	350	95.6
MSF-145	450	137
MSF-170B	700	300
MSF-210B	700	300
MSF-250B	800	450
MSF-310	800	450
MSF-370	1000	600
MSF-450	1200	2100
MSF-570	1400	2700
MSF-710	1800	5300
MSF-835	2000	
MSF-1000	2500	
MSF-1400	3500	

13. SET-UP MENU LIST

Menu number	Function/Parameter	Range	Par.set	Factory setting	Value	Page
001	Initial voltage at start	25 - 90% of U	1 - 4	30		page 36
002	Start time ramp 1	1 - 60 sec	1 - 4	10		page 36
003	Step down voltage at stop	100 - 40% U	1 - 4	100		page 36
004	Stop time ramp 1	oFF, 2 - 120 sec	1 - 4	oFF		page 36
005	Current	0.0 - 9999 Amp	——	——		page 36
006	Control mode	1, 2, 3	1 - 4	2		page 37
007	Extended functions & metering	oFF, on	——	oFF		page 38
008	Extended functions	oFF, on	——	oFF		page 38
011	Initial voltage start ramp 2	30 - 90% U	1 - 4	90		page 38
012	Start time ramp 2	oFF, 1 - 60 sec	1 - 4	oFF		page 38
013	Step down voltage stop ramp 2	100 - 40% U	1 - 4	40		page 38
014	Stop time ramp 2	oFF, 2 - 120 sec	1 - 4	oFF		page 38
016	Initial torque at start	0 - 250% T _n	1 - 4	10		page 39
017	End torque at start	50 - 250% T _n	1 - 4	150		page 39
018	End torque at stop	0-100% T _n	1 - 4	0		page 39
020	Voltage ramp with current limit at start	oFF, 150 - 500% I _n	1 - 4	oFF		page 39
021	Current limit at start	oFF, 150 - 500% I _n	1 - 4	oFF		page 40
022	Pump control	oFF, on	1 - 4	oFF		page 40
023	Remote analogue control	oFF, 1, 2	1 - 4	oFF		page 41
024	Full voltage start D.O.L	oFF, on	1 - 4	oFF		page 41
025	Torque control	oFF, 1, 2	1 - 4	oFF		page 42
030	Torque boost active time	oFF, 0.1 - 2.0 sec	1 - 4	oFF		page 43
031	Torque boost current limit	300 - 700% I _n	1 - 4	300		page 43
032	Bypass	oFF, on	1 - 4	oFF		page 43
033	Power Factor Control PFC	oFF, on	1 - 4	oFF		page 46
034	Brake active time	oFF, 1 - 120 sec	1 - 4	oFF		page 47
035	Braking strength	100 - 500%	1 - 4	100		page 47
036	Braking methods	1, 2	1 - 4	1		page 47
037	Slow speed torque	10 - 100	1 - 4	10		page 49
038	Slow speed time at start	oFF, 1 - 60 sec	1 - 4	oFF		page 49
039	Slow speed time at stop	oFF, 1 - 60 sec	1 - 4	oFF		page 49
040	DC-Brake at slow speed	oFF, 1-60 sec	1 - 4	oFF		page 49
041	Nominal motor voltage	200 - 700 V	1 - 4	400		page 50
042	Nominal motor current	25-150% I _{nsoft} in Amp	1 - 4	I _{nsoft} in Amp		page 50
043	Nominal motor power	25 - 300% of P _{nsoft} in kW	1 - 4	P _{nsoft} in kW		page 50
044	Nominal speed	500 - 3600 rpm	1 - 4	N _{nsoft} in rpm		page 50
045	Nominal power factor	0.50 - 1.00	1 - 4	0.86		page 50
046	Nominal frequency	50, 60 Hz	——	50		page 50

Menu number	Function/Parameter	Range	Par.set	Factory setting	Value	Page
051	Programmable relay K1	1, 2, 3, (4), 5		1		page 51
052	Programmable relay K2	1, 2, 3, 4, 5	———	2		page 51
054	Analogue output	oFF, 1, 2	1 - 4	oFF		page 52
055	Analogue output value	1, 2, 3	1 - 4	1		page 52
056	Scaling analogue output	5 - 150%	1 - 4	100		page 52
057	Digital input selection	oFF, 1, 2, 3, 4	1 - 4	oFF		page 53
058	Digital input pulses	1-100	1 - 4	1		page 53
061	Parameter set	0, 1, 2, 3, 4	———	1		page 54
071	Motor PTC input	no, YES	———	no		page 55
072	Internal motor thermal protection class	oFF, 2 - 40 sec	———	10		page 55
073	Used thermal capacity	0 - 150%	———	———		page 55
074	Starts per hour limitation	oFF, 1 - 99/hour	1 - 4	oFF		page 55
075	Locked rotor alarm	oFF, 1.0 - 10.0 sec	1 - 4	oFF		page 55
081	Voltage unbalance alarm	2 - 25% U_n	1 - 4	10		page 56
082	Response delay voltage unbalance alarm	oFF, 1 - 60 sec	1 - 4	oFF		page 56
083	Over voltage alarm	100 - 150% U_n	1 - 4	115		page 56
084	Response delay over voltage alarm	oFF, 1 - 60 sec	1 - 4	oFF		page 56
085	Under voltage alarm	75 - 100% U_n	1 - 4	85		page 57
086	Response delay under voltage alarm	oFF, 1 - 60 sec	1 - 4	oFF		page 57
087	Phase sequence	L123, L321	———	———		page 57
088	Phase reversal alarm	oFF, on	———	oFF		page 57
089	Auto set power limits	no, YES	———	no		page 57
090	Output shaft power	0.0 - 200.0% P_n	———	———		page 57
091	Start delay power limits	1 - 250 sec	1 - 4	10		page 58
092	Max power alarm limit	5 - 200% P_n	1 - 4	115		page 58
093	Max alarm response delay	oFF, 0.1 - 25.0 sec	1 - 4	oFF		page 58
094	Max power pre-alarm limit	5 - 200% P_n	1 - 4	110		page 58
095	Max pre-alarm response delay	oFF, 0.1 - 25.0 sec	1 - 4	oFF		page 58
096	Min pre-alarm power limit	5 - 200% P_n	1 - 4	90		page 58
097	Min pre-alarm response delay	oFF, 0.1 - 25.0 sec	1 - 4	oFF		page 59
098	Min power alarm limit	5 - 200% P_n	1 - 4	85		page 59
099	Min alarm response delay	oFF, 0.1 - 25.0 sec	1 - 4	oFF		page 59
101	Run at single phase input failure	no, YES	1 - 4	no		page 61
102	Run at current limit time-out	no, YES	1 - 4	no		page 61
103	Jog forward enable	oFF, on	1 - 4	oFF		page 61
104	Jog reverse enable	oFF, on	1 - 4	oFF		page 61
105	Automatic return menu	oFF, 1-999	———	oFF		page 62
111	Serial comm. unit address	1 - 247	———	1		page 62
112	Serial comm. baudrate	2.4 - 38.4 kBaud	———	9.6		page 62

Menu number	Function/Parameter	Range	Par.set	Factory setting	Value	Page
113	Serial comm. parity	0, 1	-----	0		page 62
114	Serial comm. contact broken	oFF, 1, 2	-----	1		page 62
199	Reset to factory settings	no, YES	-----	no		page 63
201	Current	0.0 - 9999 Amp	-----	-----		page 63
202	Line main voltage	0 - 720 V	-----	-----		page 63
203	Output shaft power	-9999 - 9999 kW	-----	-----		page 63
204	Power factor	0.00 - 1.00	-----	-----		page 63
205	Power consumption	0.000 - 2000 MWh	-----	-----		page 63
206	Reset power consumption	no, YES	-----	no		page 64
207	Shaft torque	-9999 - 9999 Nm	-----	-----		page 64
208	Operation time	Hours	-----	-----		page 64
211	Current phase L1	0.0 - 9999 Amp	-----	-----		page 64
212	Current phase L2	0.0 - 9999 Amp	-----	-----		page 64
213	Current phase L3	0.0 - 9999 Amp	-----	-----		page 64
214	Line main voltage L1 - L2	0 - 720 V	-----	-----		page 64
215	Line main voltage L1 - L3	0 - 720 V	-----	-----		page 64
216	Line main voltage L2 - L3	0 - 720 V	-----	-----		page 64
221	Locked keyboard info	no, YES	-----	no		page 65
901	Alarm list, Latest error	F1 - F16	-----	-----		page 65
902 -915	Alarm list, Older error in chronological order	F1 - F16	-----	-----		page 65

Explanation of units:

U	Input line voltage
Un	Nominal motor voltage.
In	Nominal motor current.
Pn	Nominal motor power.
Nn	Nominal motor speed.
Tn	Nominal shaft torque.
Insoft	Nominal current soft starter.
Pnsoft	Nominal power soft starter.
Nnsoft	Nominal speed soft starter.

Calculation shaft torque

$$T_n = \frac{P_n}{\left(\frac{N_n}{60} \times 2\pi\right)}$$

NOTE! The six main functions for motor control, menus 020–025, can only be selected one at a time.

14. INDEX

Numerics

- 2-wire start/stop 37
- 3-wire start/stop 37

A

- Above max power limit 67
- Alarm category 67
- Alarm list 65
- Alarm reset 23
- Ambient temperatures . 10, 20, 74, 75, 77
- analogue control 32
- Analogue input 32, 41
- Analogue output 32, 52
- Analogue output gain 52
- Analogue output value 52
- Auto set power limits 57
- automatic reset 37
- Automatic return menu 62

B

- Basic parameter setting 10
- Below min power limit 67
- Brake method 47
- Braking Strenght 47
- Braking time 46
- Busbars 25, 26
- Bypass 43
- Bypass contactor 44

C

- Cabinet 24
- Checklist 10
- Clickson thermistor 32
- Combination matrix 19
- Complaint 7
- Confirm setting 23
- Connections 28, 32
- Control mode 23, 37
- Control voltage 32
- control voltage 33
- Control voltage connection 28, 31
- Cooling fins 24
- cos phi 50
- Current 63
- Current in phase L1 64
- Current in phase L2 64
- Current in phase L3 64
- Current limit 39
- Current limit time-out 61
- Current transformer 45

D

- D.O.L start 41
- DC-brake 46
- DC-Brake at slow speed 49
- Decrease value 23
- Decrease value of setting 23

- Device connections 28, 31
- different operation situation 22
- Digital inputs 32
- Dimension 25, 74
- DIN VDE 0100 24
- Direct On Line start 41
- Dismantling 2
- Display next window 23
- Display previous window 23
- Dual voltage ramp 38

E

- Electrical characteristic 32
- Electrical Data 74, 75, 76, 77
- EMC 74, 75, 76, 77
- Emergency 2
- End torque 39

F

- Factory settings 63
- Features 9
- Forward/reverse 34
- Free circulation of air 24
- frequency 50
- Frequency inverter 20
- Front cover 21
- Full speed not reached 67
- Full voltage 51
- Full voltage start 41
- Function 79

G

- General Data 74
- General description 21

H

- Heat dissipation 20
- High ambient temperatures 43

I

- Increase value 23
- Increase value of setting 23
- Initial torque 39
- Initial voltage at start ramp 1 36
- Initial voltage at start ramp 2 38
- INSPECTION AT DELIVERY 7
- Installation 24
- Insulation test 20

J

- JOG Forward 23, 61
- JOG fwd/rev 23
- JOG Reverse 23, 61
- Jumper J1 41
- Jumper J2 52

K

- Keyboard 23

- Keyboard lock 23, 65
- keys 23

L

- LED display 22
- Live circuit components 24
- Load monitor 57
- Locked rotor 67
- Low load 20

M

- Main functions 81
- Mains contactor 10
- Mains supply 28, 31
- Mains voltage 10
- MAINTENANCE 71
- Matrix 19
- Max power alarm limit 58
- Max power pre-alarm limit 58
- Max pre-alarm response delay 58
- Mechanical Data 74, 75, 76, 77

Menu

- 001 36
- 002 11, 36
- 003 36
- 004 11, 36
- 005 12, 36
- 006 12, 37
- 007 38
- 008 38
- 011 38
- 012 38
- 013 38
- 014 38
- 016 39
- 017 39
- 020 39
- 021 40
- 022 40
- 023 41
- 024 41
- 025 42
- 030 43
- 031 43
- 032 43
- 033 46
- 034 46
- 035 47
- 036 47
- 037 48
- 038 49
- 039 49
- 040 49
- 041 11, 50
- 042 50
- 043 11, 50
- 044 11, 50
- 045 11, 50
- 046 11, 50



051	51	Motor current	50	Q	
052	51	Motor data	50	Quick Set-up	10
054	52	Motor power	50	R	
055	52	Motor power supply	28, 31	Rating plate	10
056	52	Motor protection, overload	55, 67	Recyclable material	2
057	53	Motor shaft torque	64	Regular maintenance	71
058	53	Motor speed	50	Relay K1	32, 51
061	54	Motor terminal open	67	Relay K2	32
071	55	Motor voltage	50	Relay K3	32
072	55	MOUNTING	24	Remote	23
073	56	MOUNTING/WIRING	24	Reset	23
074	56			reset	66
075	56	N		Response delay max alarm	58
081	56	Next	23	RMS current	36, 63
082	56	Nominal frequency	11	RMS main voltage	63
083	56	Nominal motor cos phi	11	Rotating loads	20
084	56	Nominal motor current	11	Running motors	20
085	57	Nominal motor power	11	Running-LED	22
086	57	Nominal motor speed	11		
087	57	Norms/Standards	74, 75, 76, 77	S	
088	57	NTC thermistor	32	Safety	2, 6
089	57			Safety measures	10
090	57	O		Scrapping	2
091	58	Open thyristor	67	Selection of control mode	12
092	58	Operation	51	Semiconductor fuses	33, 78
093	58	Operation time	63, 64	Serial comm.	23
094	58	Operation/Set-up	23	Serial communication broken	67
095	58	Operator panel	21	Shaftpower	57, 63
096	59	Output motor shaftpower	63	Shielded motor cable	20
097	59	Output shaftpower	57, 63	Shorted thyristor	67
098	59	Over voltage	56, 67	Simple soft start and soft stop	10
099	59			Slip ring motors	20
101	61	P		Slow blow fuses	33
102	61	Parallel	20	Slow speed time at start	49
103	61	Parallel cables	73	Slow speed time at stop	49
104	61	Parameter	79	Slow speed torque	48
105	62	Parameter Set	32, 54	Small motor	20
199	63	PFC	46	Softbrake	51
201	63	Phase compensation capacitor	20	Softstart overheated	67
202	63	Phase input failure	67	Spare parts	2
203	63	Phase loss	61	standard commercial fuses	78
204	63	Phase reversal alarm	67	Standard wiring	10, 33
205	63	Phase sequence	57	Standards	6
206	64	Pole-changing contactor	20	Start command	22
207	64	Potentiometer	32	Start delay power limits	58
208	64	Power consumption	63	Start ramp 1	36
211	64	Power factor	63	Start ramp 2	38
212	64	Power Factor Control	46	Start the motor	12
213	64	Power loss	10	Start time ramp 1	11
214	64	PPU unit	21	Start/Stop	12, 23
215	64	Pre-alarm	51, 58	Start/stop combination	19
216	64	Prevent damage to the thyristors	24	Start/stop/reset from keyboard	12
221	23, 65	Previous	23	Start/stop-LED	22
901	65	Programmable relay	51	Starting	12
RMS current read-out	12	Programming and presentation unit (PPU)	21	STARTING/OPERATING	79
Menu expansion	38	protection/insulation	74, 75, 76, 77	Starts per hour	67
Menu Structure	22	Protective earth	28, 31	Starts per hour limitation	56
Min alarm response delay	59	PTC	55	Step down voltage in stop ramp 2	38
Min power alarm limit	59	PTC Thermistor input	32	Step down voltage stop ramp 1	36
Min power pre-alarm limit	59	Pump control	40	Stop command	22
Min pre-alarm response delay	59			Stop ramp 1	36
Minimum free space	24, 25				
Motor	31				



Stop ramp time 2 38
 Stop time ramp 1 11
 storage 7
 Supply voltage 32, 74
 switch 2
 Switch the device off 2
 Switch-off procedures 2

T

TECHNICAL DATA 74
 Terminal 32
 Terminal clamp 78
 Terminals 32
 Thermal capacity 56
 Thermal protection 55
 Tightening torque 25
 Torque boost active time 43
 Torque boost current limit 43
 Torque booster 43
 Torque control 42
 Trained personnel 2, 10
 Transport 7
 TROUBLESHOOTING 68
 Two speed motor 20

U

Under voltage 57, 67
 Unpacking 7

V

VIEW OPERATION 63
 Voltage 63
 Voltage unbalance 56, 67

W

Weight 74
 Wiring circuit 33
 Wiring example 34



REPRESENTATION

ADL Co.
P.O. Box 47
12 50 40 MOSCOW
Russia
Tel. 00007- 095268 7423
Fax 00007- 095268 0348
rouslan@adlserv.aha.ru

AUTOMATECH Sp.zo.o
ul. Ryżowa 84
PL-02482 OPACZ-KOLONIA
Poland
Tel. 0048- 22-723 06 62
Fax 0048- 22-723 06 06
b.kolodziejczyk@automatech.it.pl

Elimko
8. Cadde 68. Sokak Nr. 16
06510 Emek-ANKARA
Turkey
Tel. 0090 - 312 212 64 50
Fax 0090 - 312 212 41 43

Elpro Drive , S. R. O.
ul. Miru 3
CZ 73961 TRINEC
Tjeckien Republic
Tel. 00420W 659434661
Fax 00420W 659325864
agorgol@elprocz.cz

Emotron AB
Box 222 25
SE-250 24 HELSINGBORG
Sweden
Tel. +46 42 169900
Fax +46 42 169949
info@emotron.com

Emotron Antriebssysteme GmbH
Goethestrasse 6
38855 WERNIGERODE
Germany
Tel. 0049- 3943 92050
Fax 0049- 3943 92055
info@emotron-as.de

Emotron B.V.
P.O. Box 132
5531 NX BLADEL
Holland
Tel. 0031- 497 389222
Fax 0031- 497 386275
info@emotron.nl

Emotron Drives (UK) Ltd
Spaces Business Centre
Radway Green Park
Alsager
Cheshire
CW2 5PR
Great Britain
Tel. 0044- 1270 879440
Fax 0044- 1270 886119
trevor@emotron.freemove.co.uk

Emotron EI-FI SA
Arlbau 229
ES-08021 BARCELONA
Spain
Tel. 0034- 93 209 14 99
Fax 0034- 93 209 12 45
emotron@emotron.es

Emotron Inc
3440 Granite Circle
TOLEDO, OH 43617
USA
Tel. 001- (419) 841-7774
Fax 001- (419) 843-5816
paul.hackett@usa-emotron.com

Emsby
27 Rodwell Street
QUE - 4108 ARCHERFIELD
Australia
Tel. 0061- 7 3274 2566
Fax 0061- 7 3274 2387
dkirkegaard@emsby.com

Esquire Engineering sdn bhd
13, Jln Jurutera U1/23, Seksyen U1
Hicom-Glenmarie Industrial Park
40000 Shah Alam SELANGOR
Malaysia
Tel. 0060- 3 519 1958
Fax 0060- 3 519 1960
barry_h@tm.net.my

HEDETEC OY
P.O.B 110
SF-00201 HELSINGFORS
Finland
Tel. 00358- 9 682881
Fax 00358- 9 674918
kaj.nyberg@hedengren.fi

Ingeniør Ivar Pettersen AS Postboks
166
N-3001 DRAMMEN
Norway
Tel. 0047- 32 21 21 21
Fax 0047- 32 21 21 99
lars.hennum@pettersen.no

K.K. EI-FI
2-18-4 Hagoromocho
1900021 Tachakawa
J- TOKYO
Japan
Tel. 0081- 42 528 8820
Fax 0081- 42 528 8821
sato.hiroyuki@ei-fi.co.jp

MAS for Eng. & Trad
From Tahreer St
12, a-Abee Ema'ima St.
DOKKI GIZA
Egypt
Tel. 0020- 2 3357947
Fax 0020- 2 3357948

Mohamad Eid Kari
Marjeh -square,
Euphorat st. Dagestani
Bld. 1st. Fl. POB 31203
DAMASKUS
Syria
Tel. 00963- 11 222 3867
Fax 00963- 11 224 5425

Pardis International
Golbarg W. Kerman
S. Rahmati E. No.202
TEHERAN
Iran
Tel. 0098- 21 7838571
Fax 0098- 21 7838571
mehraban@irtp.com


Saftronics (PTY) LTD
27 Heronmere Road
P O Box 38045
2016 BOOYSENS
South Africa
Tel. 0027- 11 434 1345
Fax 0027- 11 434 1359
rann@pixie.co.za

TENSON Engineering Ltd
Room 908, Nan Fung Commercial
Center
19 LAM LOK St
KOWLOON BAY
Hong Kong
Tel. +852 2758 0878
Fax +852 2759 5335
sammy@tenson.com.hk

WELLFORD CHILE S.A.
ENCALA 103645
Madrid No 1602 - Santiago
SANTIAGO
Chile
Tel. 0056- 2 556 26 55
Fax 0056- 2 556 35 28
encala@hotmail.com

Voltampere s.a.
2nd klm Lagada-Redina
GR-57200 THESSALONIKI
Greece
Tel. 0030- 394 26188
Fax 0030- 394 26189
automation@voltampere.gr

www.emotron.com

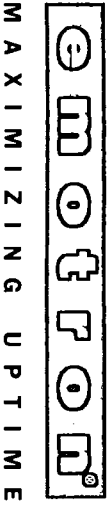





Halmac Services (Qld) Pty. Ltd.

A.C.N. 098 852 923
A.B.N. 40 741 712 113


SURGE DIVERTER & SURGE REDUCTION FILTER

1. TDS1100 SURGE DIVERTER TECHNICAL
DETAILS
2. DAR ALARM RELAY TECHNICAL DETAILS
3. TDF SURGE REDUCTION FILTER TECHNICAL
DETAILS

CRITEC® TDS1100

Asia/Australia
Europe
Latin America
North America

TDS Surge Diverter - TDS1100 Series

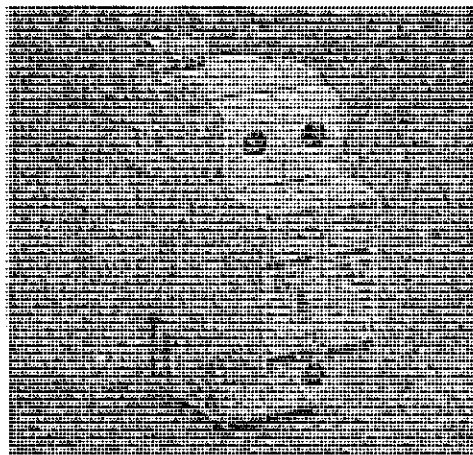

- CRITEC® TD Technology with thermal disconnect technology
- Compact design fits into DIN distribution panel boards and other control centers
- Mounts on rail (mounts on DIN 43 880 profile) makes common with breakers
- Plug-in flag and voltage free contacts provide remote status indication
- Separate plug and base design facilitates replacement of a failed surge module
- Offers 500 maximum surge rating increases protection against fire and other further damage from electrical over-voltage
- Available in various operating voltages to suit most common power distribution systems

Surges and voltage transients are a major cause of expensive electronic equipment failure and business disruption. Damage may result in the loss of capital outlays, such as computers and communications equipment, as well as consequential loss of revenue and profits due to unscheduled system down-time.

The TDS1100 series of surge suppressors provide economical and reliable protection from voltage transients on power distribution systems. They are conveniently packaged for easy installation on 35 mm DIN rail within main distribution panelboards.

CRITEC® TD technology helps ensure reliable and continued operation during sustained and abnormal over-voltage events. Internal thermal disconnect devices help ensure safe or at end-of-life. A visual indicator flag provides user-feedback in the event of such operation. As standard, the TDS1100 provides a set of voltage-free contacts for remote signaling that maintenance is due.

The convenient plug-in module and separate base design facilitates replacement of a failed surge module without needing to undo installation wiring.

Model	TDS110025R150	TDS110025R240	TDS110025R277	TDS110025R560
Nominal Voltage U _n	120-150V~	220-240V~	240-277V~	480-560V~
Max. Cont. Operating Voltage U _c	170V~	275V~	320V~	610V~
Stand off Voltage	240V~	440V~	480V~	700V~
Frequency	0 - 100Hz			
Short Circuit Current Rating I _{sc}	25kAIC			
Required Back-up Fuse	125AgL, if supply > 100A			
Technology Used	TD with thermal disconnect			
Protection				
Maximum Discharge Current I _{max}	100kA 8/20µs			
Nominal Discharge Current I _n	50kA 8/20µs	40kA 8/20µs	40kA 8/20µs	40kA 8/20µs
Protection Modes	Single mode (L-G, L-N or N-G)			
Voltage Protection Level Up @ 3kA	< 400V	< 700V	< 800V	< 1.6kV
Voltage Protection Level Up @ 20kA	< 650	< 1000	< 1.1kV	< 2kV
Alarms and Indicators				
Status Indication	Mechanical flag / remote contacts (R model only) Change-over, 250V~ / 0.5A, max 1.5 mm ² (#14AWG) terminals			
Physical Data				
Dimensions	2 modules wide, 90 mm x 68 mm x 35 mm			
Weight	0.24 kg approx.			
Enclosure	DIN 43 880, UL94V-0 thermoplastic, IP 20 (NEMA-1)			
Connection	≤35 mm ² (#2AWG) solid ≤25 mm ² (#4AWG) stranded			
Mounting	35 mm top hat DIN rail			
Temperature	-40°C to +80°C (-40°F to +176°F)			
Humidity	0 to 90%			
Test Standards				
Approvals	CE, IEC™ 61643-1, UL* 1449 Pending			
Surge Rated to Meet	IEC 61643-1 Class I and II ANSI/IEEE C62.41-1991 Cat A, Cat B, Cat C			


Due to a policy of continual product development, specifications are subject to change without notice.



CRITEC® DDI/DAR/TDS SC

Asia/Australie
Europe
Latin America


DIN Decoupling Inductor/ DINLINE Alarm Relay & Surge Counter

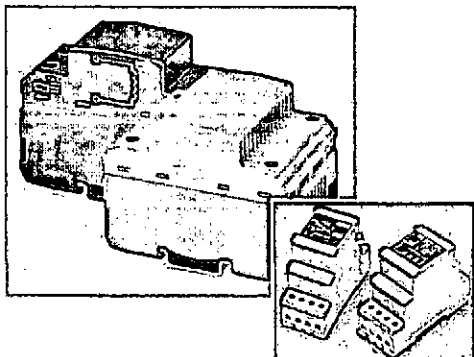


- Use for decoupling of spark gaps and MOVs – allows correct coordination of different SPD technologies
- 35 mm² tunnel terminals – accepts large cable size
- 63A model features top and bottom terminals – flexible installation
- The DINLINE Alarm Relay (DAR) is used with TDF products where alarm contacts are required for remote signaling
- The TDS-SC Surge Counter provides a non-resettable record of the number of surges diverted

Decoupling inductors are installed between spark gap and MOV protection devices to ensure correct coordination. As the decoupling inductors are installed in series with the load, two units are available, a compact unit for circuits up to 35A and a larger unit for 63A circuits.


The DAR (DINLINE Alarm Relay) can be connected to TDF units to provide potential free change-over alarm contacts. The TDS SC (Surge Counter) unit is designed to provide visual indication of the number of surges registered. It uses a current transformer through which the ground conductor connecting to one, or all, of the surge protection modules is fed. Current diverted by the operation of the surge module, which exceeds a 300A trip threshold, will be registered on the counter.

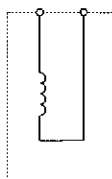


DDI 35

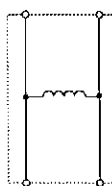

DDI 63

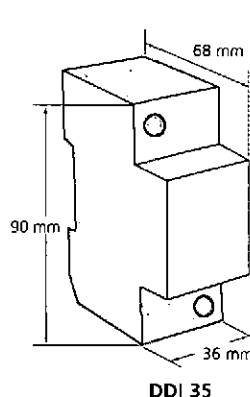

DDI 35

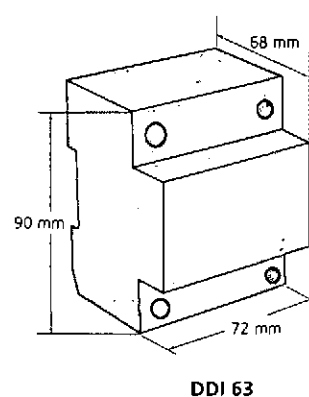

DDI 63


Model	DDI 35	DDI 63	DAR275V	TDS SC
Item Number for Europe	700465	700475	700900	701250
Nominal Voltage U _n	-	-	20-110V---, 100-240V-	-
System Compatibility(1)	-	-	TN-C, TN-S, TN-C-S & TT	-
Max. Cont. Operating Voltage U _c	500V~ 200V---	-	275V	-
Stand-off Voltage	-	-	275V	-
Operating Current @ U _n	-	-	20mA	-
Frequency	0 to 60Hz	-	-	-
Max. Line Current I _l	35A @ 40°C	63A @ 40°C	-	-
Temperature Increase	45° C @ max line current (I _l)	-	-	-
Inductance	7.5µH	15µH	-	-
Resistance	4.5mΩ	1.7mΩ	-	-
Technology	-	-	CT - trip threshold 300A 8/20µs	-
Status	-	-	Red/Green LEDs Change-over contact ⁽¹⁾	Maximum count 9999 Non-resettable
Dimensions	2 M. 90 mm x 68 mm x 36 mm (3.5" x 2.6" x 1.4") approx.	4 M. 90 mm x 68 mm x 72 mm (3.5" x 2.6" x 2.8") approx.	2 M. 90 mm x 68 mm x 36 mm (3.5" x 2.6" x 1.4") (excluding CT)	-
Weight	0.45 kg (1 lb) approx.	1 kg (2.2 lb) approx.	0.2 kg (0.44 lb)	-
Enclosure	DIN 43 880, UL94V-0 thermoplastic, IP 20 (NEMA-1)			
Connection	≤35 mm ² (#2AWG) solid ≤25 mm ² (#4AWG) stranded		1 mm ² to 6 mm ² (#18AWG to #10)	
Mounting	35 mm top hat DIN rail			
Back-up Overcurrent Protection	35A	63A	-	-
Temperature	-40°C to +70°C (-40°F to +158°F)		-35°C to +55°C (-31°F to +131°F)	
Humidity	0% to 90%			
Warranty	5 years		CSA22.2	
Approvals	CE		C-Tick, AS 3260, CE	

(1) Form C = Change-over contact (Form C dry contact), 400V~/3A 1 mm² to 6 mm² (#18AWG to #10AWG) connecting wire

CRITEC® TDF

Asia/Australia
Europe
Latin America
North America


Transient Discriminating Filter

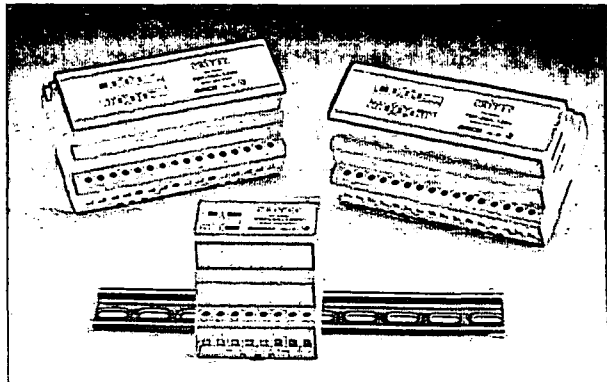

- In-line series protection
- High efficiency low pass sine wave filtering – ideal for the protection of switched mode power supplies
- Three modes of protection: L-N, L-PE & N-PE
- 35 mm DIN rail mount – simple installation
- Transient Discriminating (TD) Technology – provides increased service life
- LED status indication and opto-isolated output – for remote status monitoring

The TDF series has been specifically designed for process control applications to protect the switched mode power supply units on devices such as PLC controllers, SCADA systems and motor controllers. Units are UL Recognized and available for 3A, 10A and 20A loads and suitable for 110-120V ac/dc and 220-240Vac circuits.

The TDF is a series connected, single phase surge filter providing an aggregate surge capacity of 50kA (8/20µs) across L-N, L-PE, and N-PE. The low pass filter provides up to 65dB of attenuation to voltage transients. Not only does this reduce the residual let-through voltage, but it also helps further reduce the steep voltage rate-of-rise providing superior protection for sensitive electronic equipment.

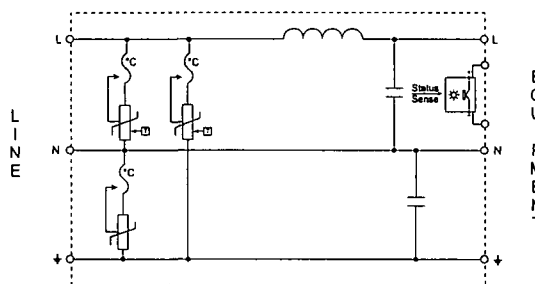

Model	TDF3A 120V	TDF3A 240V	TDF10A 120V	TDF10A 240V	TDF20A 120V	TDF20A 240V
Item Number for Europe	700001	700002	700003	700004	700005	700006
Nominal Voltage U _n	120V	240V	120V	240V	120V	240V
Distribution System	1Ph 2W+G, TN-S & TN-C-S					
Max. Cont. Operating Voltage U _c	170V	340V	170V	340V	170V	340V
Stand-off Voltage	240V	400V	240V	400V	240V	400V
Frequency	0 to 60Hz	50/60Hz	0 to 60Hz	0 to 60Hz	0 to 60Hz	50/60Hz
Max. Line Current I _L	3A		10A		20A	
Operating Current @ U _n	135mA	250mA	240mA	480mA	240mA	480mA
Max. Discharge Current I _{max}	20kA 8/20 µs L-N 20kA 8/20 µs L-PE 10kA 8/20 µs N-PE					
Protection Modes	All modes protected					
Technology	TD Technology In-line series low pass sine wave filter					
Voltage Protection Level U _p @ 500A, 8/20µs (UL SVR) @ Cat B3, 3kA 8/20µs	500V <250V	700V <600V	500V <250V	700V <600V	500V <250V	700V <600V
Filtering @100kHz	-62dB		-65dB		-53dB	
Status	Green LED. On=Ok. Isolated opto-coupler output ⁽¹⁾					
Dimensions	4 M. 90 mm x 68 mm x 72 mm (3.5" x 2.6" x 2.8")			8 M. 90 mm x 68 mm x 144 mm (3.5" x 2.6" x 5.6")		
Weight	0.35 kg (0.77 lb)		0.75 kg (0.77 lb)		0.8 kg (1.7 lb)	
Enclosure	DIN 43 880, UL94V-0 thermoplastic, IP 20 (NEMA-1)					
Connection	1 mm ² to 6 mm ² (#18AWG to #10)					
Mounting	35 mm top hat DIN rail					
Back-up Overcurrent Protection	3A		10A		20A	
Temperature	-35°C to +55°C (-31°F to +131°F)					
Humidity	0% to 90%					
Warranty	5 years					
Approvals	UL 1449, UL 1283, CSA 22.2, C-Tick, CE (NOM 3A, 120V)					
Surge Rated to Meet	ANSI/IEEE C62.41.2 Cat A, Cat B, Cat C					

(1) Opto-coupler output can be connected to DAR275V to provide Form C dry contacts, Page 35







Halmac Services (Qld) Pty. Ltd.

A.C.N. 098 852 923
A.B.N. 40 741 712 113



TIMER

1. IDEC DIGITAL TIMER TECHNICAL DETAILS
2. ELECTRONIC TIMING RELAY TECHNICAL DETAILS

GT3D – Digital Timers

Key features of the GT3D series include:

- Precise time setting using digital thumbwheel switches
- Elapsed or time remaining LCD display
- 6 time ranges, 16 timing functions
- Time delays up to 99.9 hours

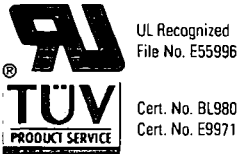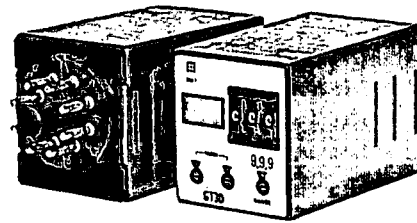

Specifications

		GT3D-2	GT3D-3	GT3D-4	GT3D-8
Operation System		Solid state CMOS circuitry			
Operation		Multi-mode			Multi-mode one-shot output
Time Range		0.01s to 99.9 hours			
Rated Voltage		100 to 240V AC (50/60Hz), 24V AC (50/60Hz)/24V DC			
Contact Ratings		125V AC/250V AC, 3A; 30V DC/1A (resistive load)	125V AC/250V AC, 5A; 30V DC/5A (resistive load)		
Contact Form		Delayed SPDT + instantaneous SPDT	Delayed DPDT	Delayed DPDT	Delayed DPDT
Minimum Applicable Load		5V, 10mA (reference value)			
Voltage Tolerance		AF20 (100–240V AC): 85 to 264V AC AD24 (AC): 20.4 to 26.4V AC AD24 (DC): 21.6 to 26.4V DC			
Error		±0.3% ±50ms (voltage, repeat, and temperature)			
Setting Error		±0.5% ±50ms			
Reset Time		60ms maximum			
Insulation Resistance		100MΩ minimum			
Dielectric Strength		Between power and output terminals: 2,000V AC, 1 minute Between contacts of different poles: 2,000V AC, 1 minute Between contacts of the same pole: 750V AC, 1 minute			
Power Consumption (approximate)	AF20	11.8VA	11.6VA	3.7VA (100V AC, 60Hz) 11.6VA (200V AC, 60Hz)	
	AD24 AC/DC	1VA/0.8W	2.1VA/0.9W	2.1VA /0.9W	
Mechanical Life		10,000,000 operations minimum	5,000,000 operations minimum		
Electrical Life (at rated load)		50,000 operations minimum	100,000 operations minimum		
Outputs	Relay	250V AC, 3A, 30V DC, 1A (resistive load)	240V AC/, 24V DC, 5A (resistive load)		
Vibration Resistance		100N (approximate 10G)			
Shock Resistance		Operating extremes: 100N (approximate 10G) Damage limits: 500N (approximate 50G)			
Operating Temperature		–10 to +50°C			
Storage Temperature		–30 to +80°C			
Operating Humidity		45 to 85% RH			
Weight (approximate)		70g	75g	76g	
Housing Color		Gray			

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

Part Number List

Switches & Pilot Lights

Part Numbers: GT3D-1/GT3D-2/GT3D-3

Mode of Operation	Time Range	Output	Contact	Rated Voltage Code	Complete Part No.	
					8-Pin	11-Pin
1-A: ON-delay 1 1-B: Interval 1 first 1-C: Cycle 1 (OFF first) 1-D: Cycle 3 (DN first)	0.01s to 99.9 hours	250V AC, 3A, 30V DC, 1A (resistive load)	Delayed SPDT + instantaneous SPDT	100 to 240V AC (50/60Hz)	GT3D-2AF20	GT3D-2EAF20
				24V AC/DC	GT3D-2AD24	—
		240V AC, 24V DC, 5A (resistive load)	Delayed DPDT	100 to 240V AC (50/60Hz)	GT3D-3AF20	GT3D-3EAF20
				24V AC/DC	GT3D-3AD24	—

Display Lights

Part Numbers: GT3D-4

Mode of Operation	Time Range	Output	Contact	Rated Voltage Code	Complete Part No.	
					A (11-Pin)	B (11-Pin)
1-A: ON-delay 1 1-B: Interval 1 first 1-C: Cycle 1 (OFF first) 1-D: Cycle 3 (ON first) 2-A: ON-delay 2 2-B: Cycle 2 2-C: Signal ON/OFF-delay 1 2-D: Signal OFF-delay 1 2-E: Interval 2' 2-F: One-shot cycle 3-A: Signal ON/OFF-delay 2 3-B: Signal OFF-delay 2 3-C: One-shot 1 3-D: One-shot ON-delay 3-E: One-shot 2 3-F: Signal ON/OFF-delay 3	0.01s to 99.9 hours	240V AC/24V DC, 5A (resistive load)	Delayed DPDT	100 to 240V AC (50/60Hz)	GT3D-4AF20	GT3D-4EAF20
				24V AC/DC	GT3D-4AD24	—

Relays & Sockets

Part Numbers: GT3D-8

Mode of Operation	Time Range	Output	Contact	Rated Voltage Code	Complete Part No. (11-Pin)
1: DN-delay one-shot 1 2: Cycle one-shot 3: ON-delay one-shot 2	0.01s to 99.9 hours	240V AC/24V DC, 5A (resistive load)	Delayed DPDT	100 to 240V AC (50/60Hz)	GT3D-8AF20
				24V AC/DC	GT3D-8AD24

Timers



1. For wiring schematics and timing diagrams GT3D, see pages 815 to 822.
2. For more details about time ranges, see instructions on page 823.
3. A (11-pin) and B (11-pin) differ in the way inputs are wired.
4. For socket and accessory part numbers, see page 838.
5. For timing diagrams overview, see page 794.

Terminal Blocks

Circuit Breakers

Timing Diagrams/Schematics

GT3D-2 Timing Diagrams

Delayed SPDT + Instantaneous SPDT

Switches & Pilot Lights

Display Lights


Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

Operation Mode Selection


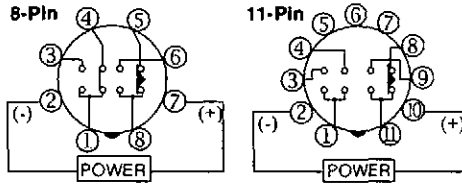


ON-Delay 1

Time Remaining




Time Elapsed

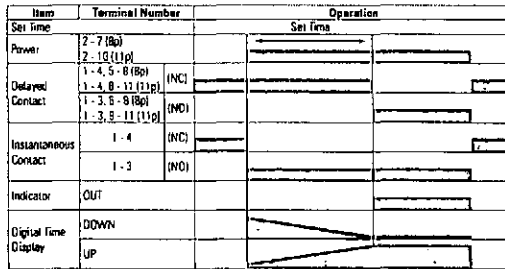
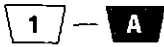


Interval 1

Time Remaining

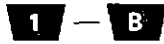

Time Elapsed

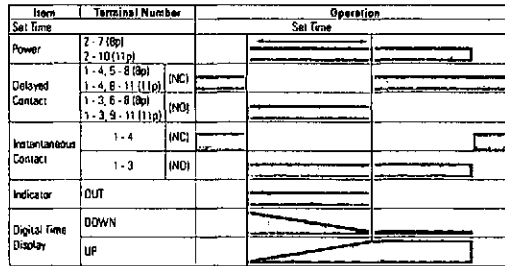
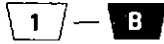


Cycle 1 (OFF first)

Time Remaining




Time Elapsed

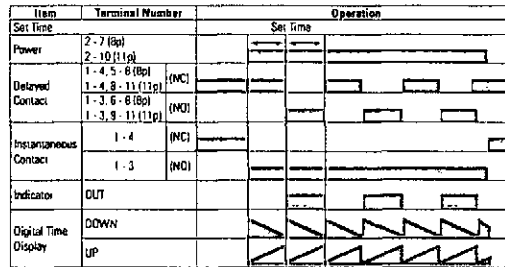
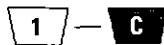


Cycle 3 (ON first)

Time Remaining

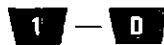

Time Elapsed

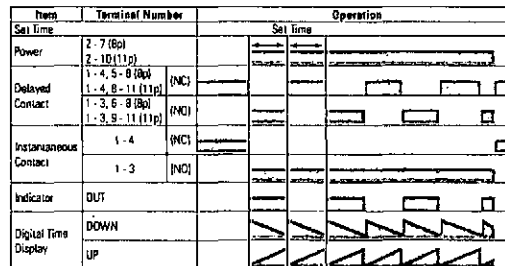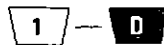




GT3D-3 Timing Diagrams
Delayed DPDT

Switches & Pilot Lights


Operation Mode Selection

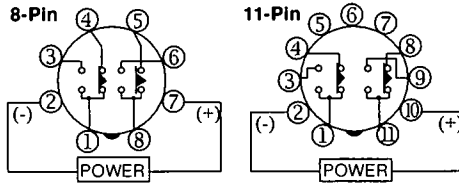


Display Lights

ON-Delay 1

Time Remaining

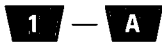

Time Elapsed

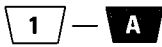


Item	Terminal Number	Operation
Set Time		Set Time
Power	2 - 7 (8p) 2 - 10 (11p)	
Delayed Contact	1 - 4, 5 - 8 (8p) (NC) 1 - 4, 8 - 11 (11p) 1 - 3, 6 - 8 (8p) (NO) 1 - 3, 9 - 11 (11p)	
Indicator	OUT	
Digital Time Display	DOWN UP	


Relays & Sockets

Interval 1

Time Remaining

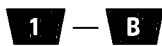

Time Elapsed

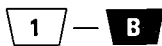

Item	Terminal Number	Operation
Set Time		Set Time
Power	2 - 7 (8p) 2 - 10 (11p)	
Delayed Contact	1 - 4, 5 - 8 (8p) (NC) 1 - 4, 8 - 11 (11p) 1 - 3, 6 - 8 (8p) (NO) 1 - 3, 9 - 11 (11p)	
Indicator	OUT	
Digital Time Display	DOWN UP	




Cycle 1
(OFF first)

Time Remaining



Time Elapsed

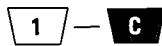


Item	Terminal Number	Operation
Set Time		Set Time
Power	2 - 7 (8p) 2 - 10 (11p)	
Delayed Contact	1 - 4, 5 - 8 (8p) (NC) 1 - 4, 8 - 11 (11p) 1 - 3, 6 - 8 (8p) (NO) 1 - 3, 9 - 11 (11p)	
Indicator	OUT	
Digital Time Display	DOWN UP	


Terminal Blocks

Cycle 3
(ON first)

Time Remaining

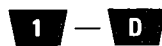

Time Elapsed

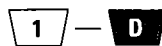


Item	Terminal Number	Operation
Set Time		Set Time
Power	2 - 7 (8p) 2 - 10 (11p)	
Delayed Contact	1 - 4, 5 - 8 (8p) (NC) 1 - 4, 8 - 11 (11p) 1 - 3, 6 - 8 (8p) (NO) 1 - 3, 9 - 11 (11p)	
Indicator	OUT	
Digital Time Display	DOWN UP	

Circuit Breakers



GT3D-4 Timing Diagrams

These timers require a start input. A gate and reset input are optional. Inputs are controlled by external pushbuttons. Reset occurs when the power is removed or when the reset input is supplied. The gate signal can be used to interrupt (freeze) timer functions. Timer functions resume when the gate input is removed. B style timers are not equipped for gate input.



Delayed DPDT

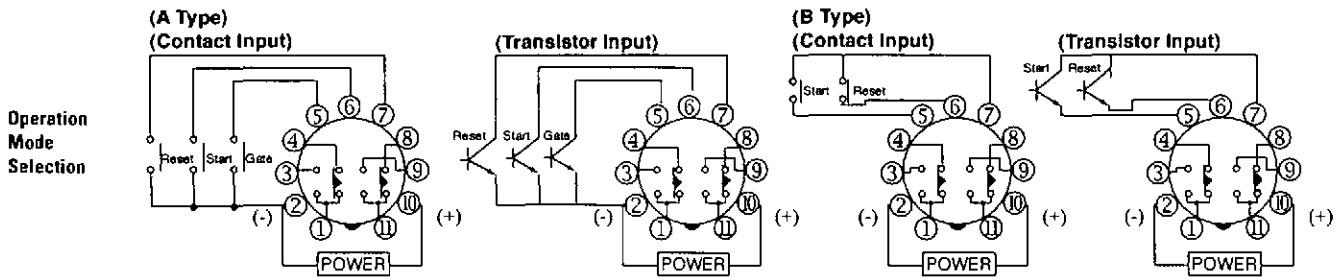

ON-Delay 1

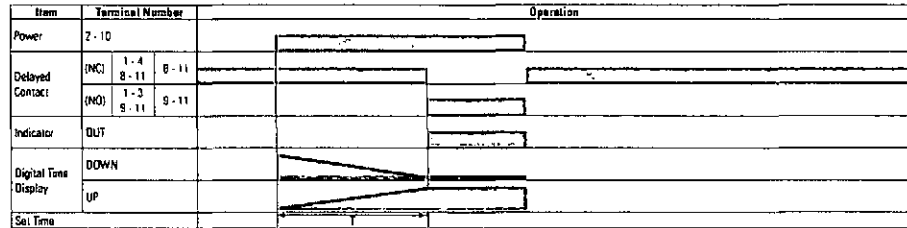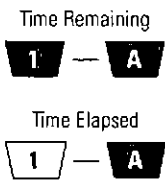

Interval 1

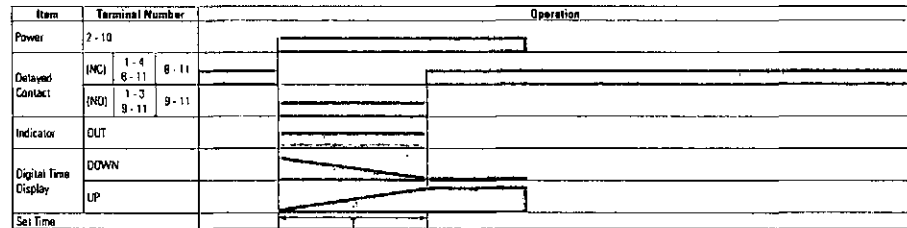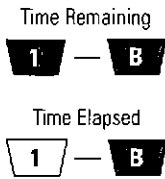

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks


Circuit Breakers

GT3D-4 Timing Diagrams



Switches & Pilot Lights

Cycle 1
(OFF first)

Time Remaining

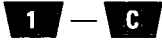


Time Elapsed

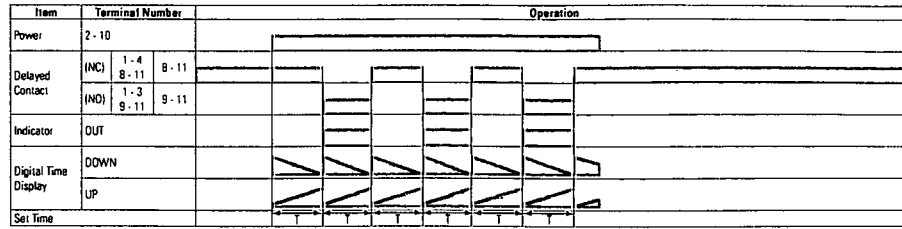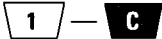



Display Lights

Cycle 3
(ON first)

Time Remaining

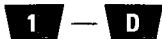


Time Elapsed

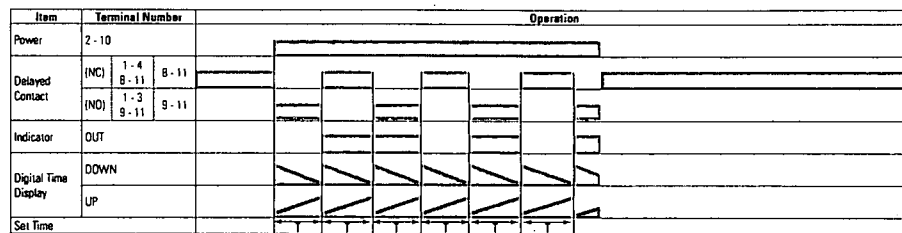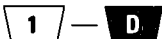



Relays & Sockets

ON-Delay 2

Time Remaining

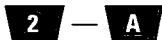

Time Elapsed

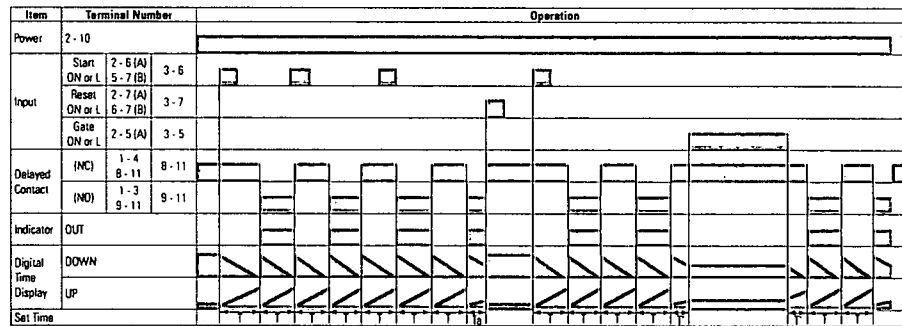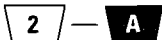


Terminal Blocks

Circuit Breakers



GT3D-4 Timing Diagrams

Cycle 2

Time Remaining

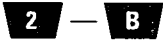


Time Elapsed

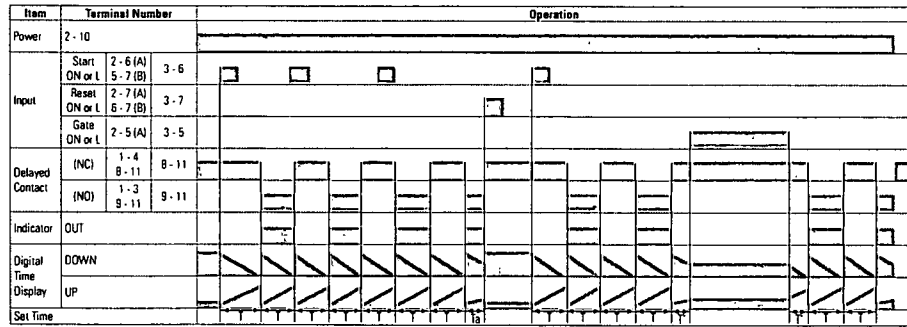
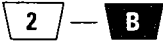


Signal ON/OFF-Delay 1

Time Remaining

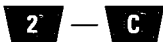


Time Elapsed

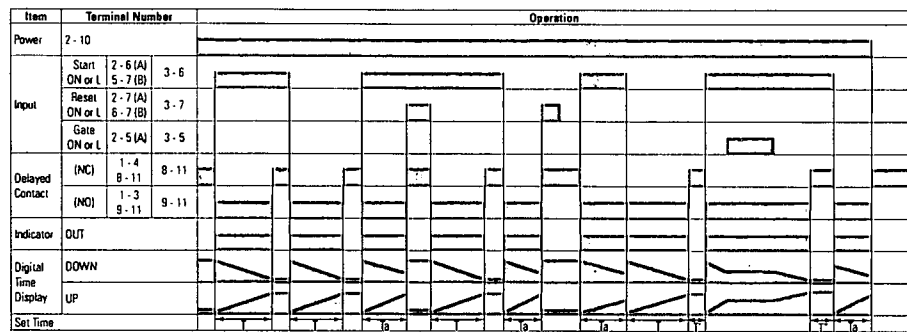
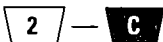


Singal OFF-Delay 1

Time Remaining

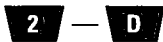


Time Elapsed

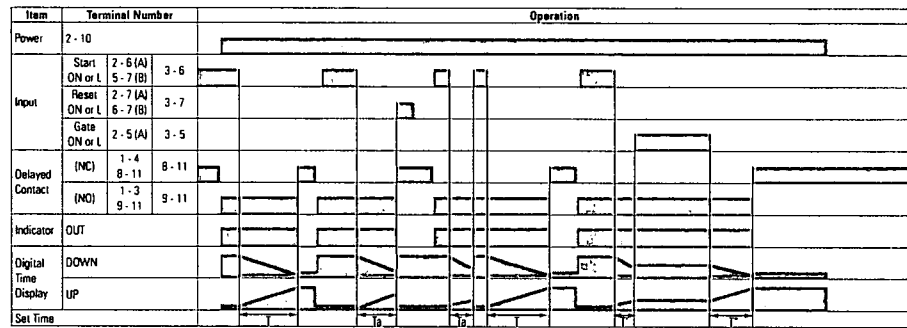
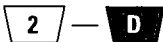


Interval 2

Time Remaining

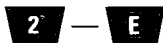

Time Elapsed

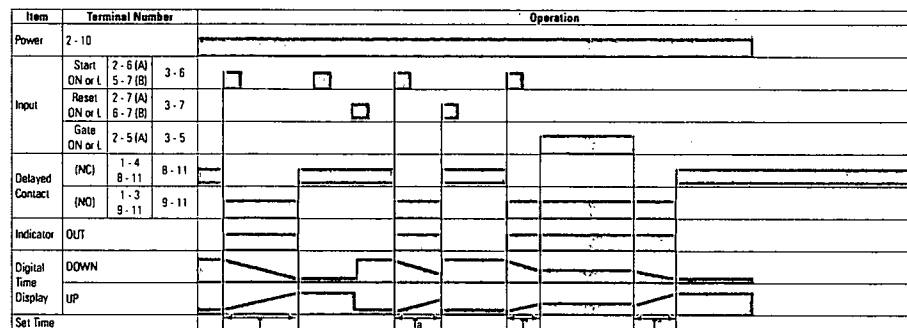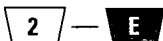

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

GT3D-4 Timing Diagrams

Switches & Pilot Lights

Display Lights

Relays & Sockets


Timers

Terminal Blocks



Circuit Breakers

One-Shot Cycle

Time Remaining

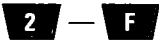


Time Elapsed

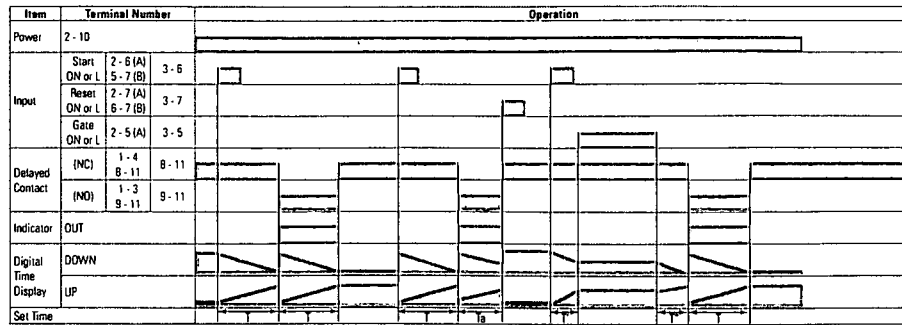
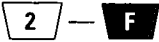


Signal ON/OFF-Delay 2

Time Remaining

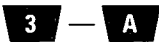


Time Elapsed

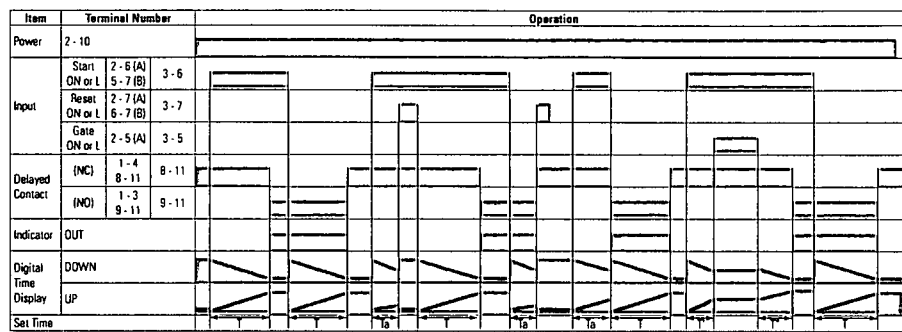
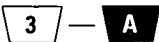


Signal OFF-Delay 2

Time Remaining

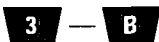


Time Elapsed

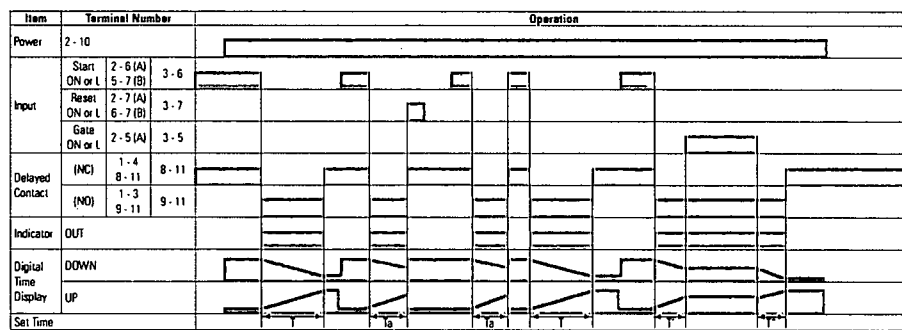
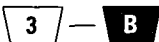


One-Shot 1

Time Remaining

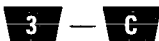


Time Elapsed

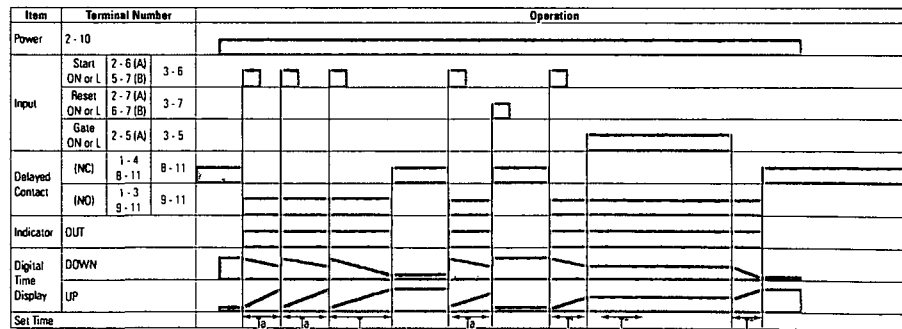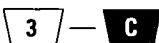



GT3D-4 Timing Diagrams

One-Shot ON-Delay

Time Remaining

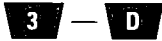


Time Elapsed

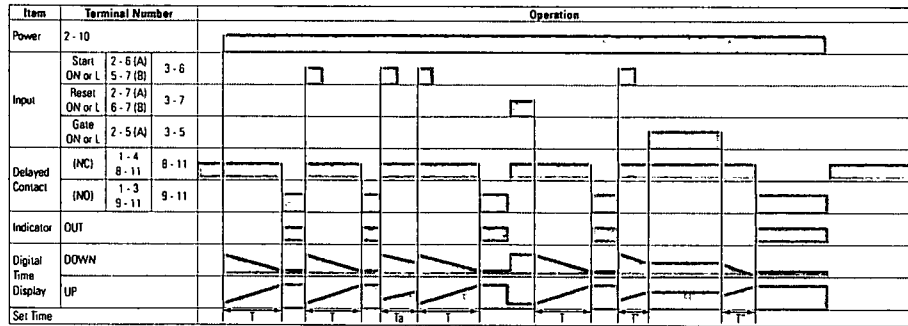
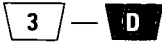


One-Shot 2

Time Remaining

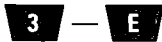


Time Elapsed

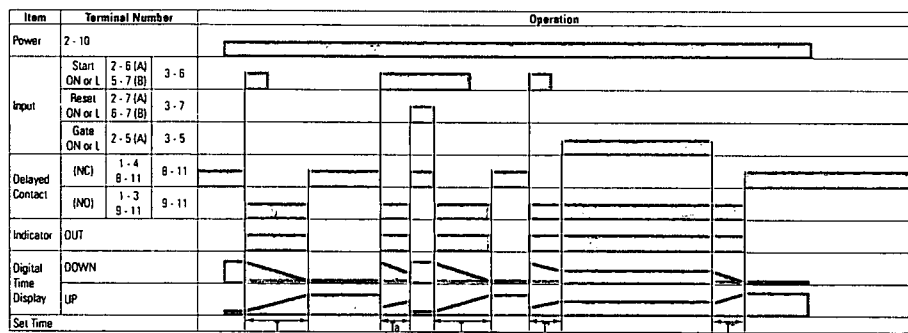
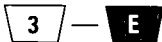


Signal ON/OFF-Delay 3

Time Remaining

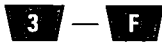

Time Elapsed

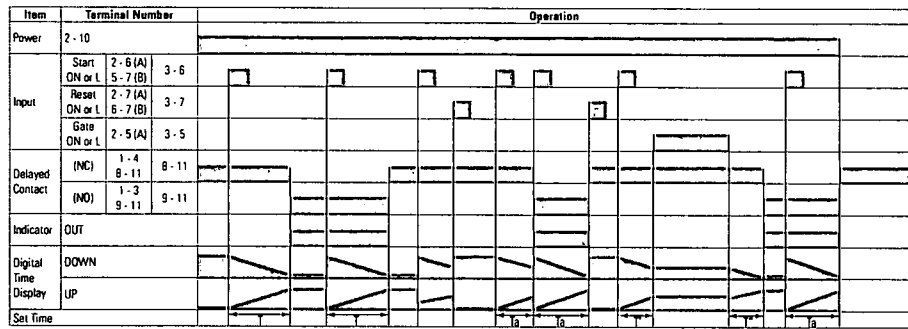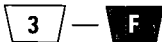

Switches & Pilot Lights

Display Lights

Relays & Sockets




Terminal Blocks

Circuit Breakers

GT3D-8 Timing Diagrams
Delayed DPDT

Switches & Pilot Lights


Operation
Mode Selection

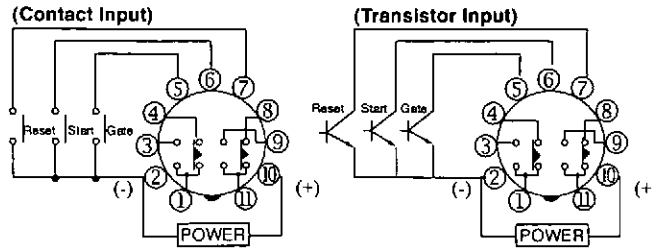

Display Lights

ON-Delay One-Shot 1


Time Remaining **1**
Time Elapsed **1**

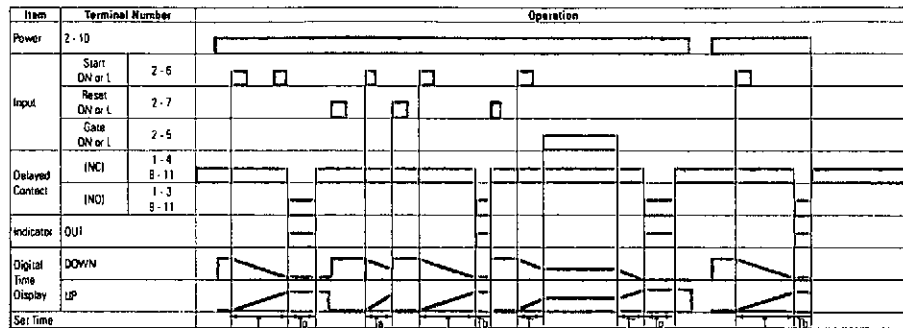

Relays & Sockets

Cycle One-Shot


Time Remaining **2**
Time Elapsed **2**

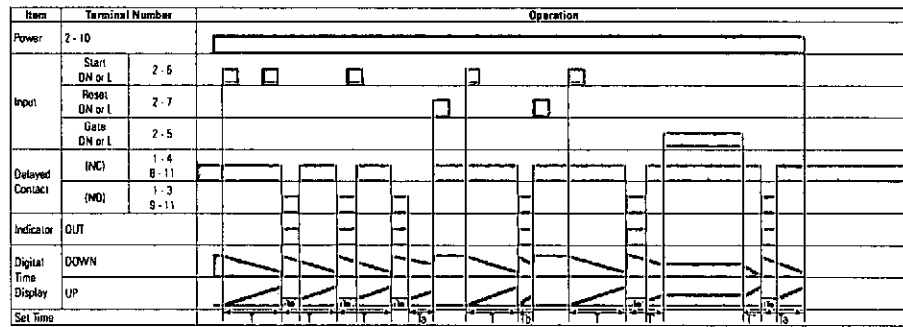

Terminal Blocks

ON-Delay One-Shot 2


Time Remaining **3**
Time Elapsed **3**

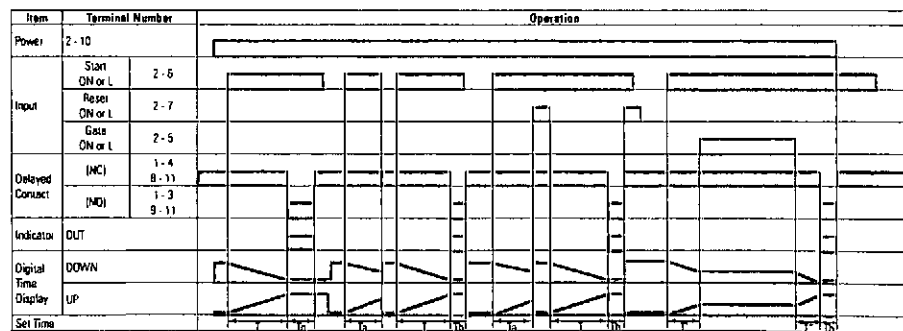

Circuit Breakers

- T = Set time
- Ta = Shorter than set time
- Tb = Shorter than single-shot output time
- T = T' + T'
- T0 = Single-shot output time (selected from A, B, C, D, E or F)

Instructions: Setting GT3D-2, GT3D-3 Timers

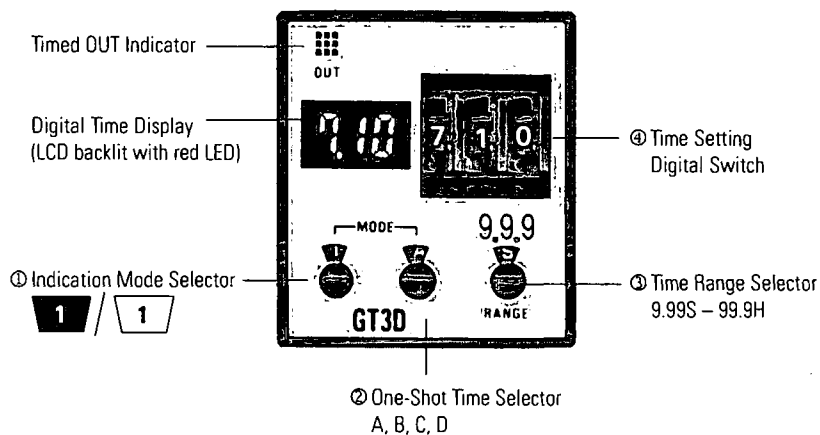

Step 1	Desired Mode/Selection				Remarks
	Time Display Mode	Indicator Mode Selector	Operation Mode	Operation Mode Selector	
Select the desired time display and operation modes.	Time elapsed	1	ON-delay 1	A	1. Use the flat screwdriver to set the selectors. Since selectors do not turn all the way around, both clockwise and counterclockwise rotation may be necessary. 2. The Indicator Mode Selector determines whether the Digital Time Display shows the time elapsed or time remaining. The Operation Mode Selector determines the desired operation mode. Decide which display and mode is desired, then use these two selectors to set the operation mode. 3. The Operation Mode Selector has two blank modes which are not intended for use. Always have this selector set to A, B, C, or D.
	Time remaining	1		A	
	Time elapsed	1	Interval	B	
	Time remaining	1		B	
	Time elapsed	1	Cycle 1	C	
	Time remaining	1		C	
	Time elapsed	1	Cycle 3	D	
	Time remaining	1		D	
Step 2	Desired Operation	Selection		Remarks	
Select a time range that contains the desired period of time.	Base Time Ranges	Time Range Selector		1. The Time Range Selector controls both the decimal point indicator (9.99, 99.9, 999) and the time increment indicators S (seconds), M (minutes), and H (hours). 2. Choose which base time range contains the targeted timer setting. Then use the Time Range Selector to set the decimal point indicator and time increment indicator to its corresponding pair of settings. 3. Since these configurations offer a complete range of settings from 0.01 seconds to 99.9 hours, the setting of 9.99 for minutes and the 9.99 and 999 settings for hours are not listed and should not be used.	
		Decimal Point Indicator	Time Increment Indicator		
	0.01 seconds to 9.99 seconds	9.99			
	0.1 seconds to 99.9 seconds	99.9	S		
	1 second to 999 seconds	999			
	0.1 minutes to 99.9 minutes	99.9	M		
1 minute to 999 minutes	999				
0.1 hours to 99.9 hours	99.9	H			
Step 3	Desired Operation	Selection		Remarks	
	Set the precise period of time desired by using the Time Setting Digital Switch.			Use the Time Setting Digital Switch to set the desired period of time. It is important to remember that the setting of the Time Range Selector determines the units of time measurement as well as the implied decimal point location.	

It is important to remember that the Time Range Selector not only selects the time range but also influences the interpretation of the Digital Time Display. Changing the Time Range Selector setting changes the units of time measurement (seconds, minutes, hours) as well as the decimal point location.

Switches & Pilot Lights

Display Lights


Relays & Sockets



Terminal Blocks

Circuit Breakers

Instructions: Setting GT3D-4 Timers

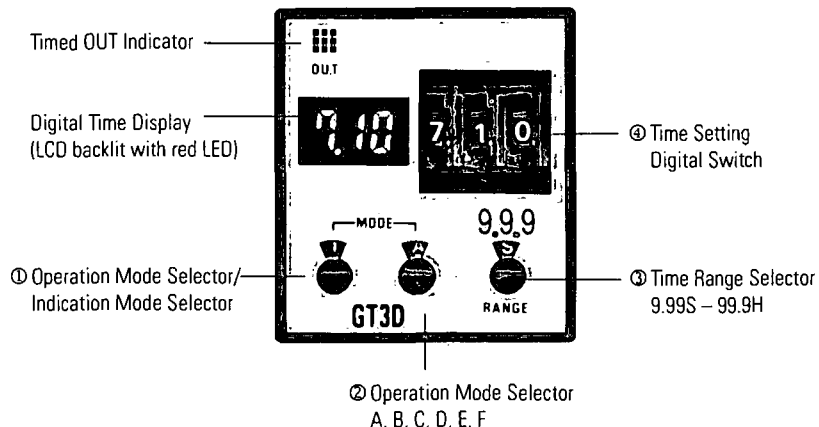


Step 1	Desired Mode/Selection				Remarks
	Time Display Mode	ⓐ Indicator Mode Selector	Operation Mode	ⓑ Operation Mode Selector	
Select the desired time display and operation modes.	Time elapsed	1	ON-delay 1 Interval 1	A B	1. Use a flat screwdriver to set the selectors. Since selectors do not turn all the way around, both clockwise and counterclockwise rotation is necessary. 2. The ⓐ Indicator Mode Selector determines whether the Digital Time Display shows the time elapsed or time remaining. The ⓑ Operation Mode Selector determines the desired operation mode. Decide which display and mode is desired; then use these two selectors ⓐ ⓑ to set the operation mode. 3. When using the indicator mode setting "1," the ⓑ Operation Mode Selector has two blank modes which are not intended for use. When using mode setting "1," always have the operation mode selector set to A, B, C, or D.
	Time remaining	1	Cycle 1 D: Cycle 3	C D	
	Time elapsed	2	ON-delay 2 Cycle 2	A B	
	Time remaining	2	Signal ON/OFF-delay 2 Signal OFF-delay 1	C D	
	Time elapsed	3	Interval 2 One-shot cycle	E F	
	Time remaining	3	Signal ON/OFF-delay 2 Signal OFF-delay 2	A B	
			One-shot 1 One-shot ON-delay One-shot 2 Signal ON/OFF-delay 3	C D E F	
Step 2	Desired Operation	Selection		Remarks	
Select a time range that contains the desired period of time.	Base Time Ranges	ⓐ Time Range Selector		1. The ⓐ Time Range Selector controls both the decimal point indicator (9.99, 99.9, 999) and the time increment indicators S (seconds), M (minutes), and H (hours). 2. Chose which base time range contains the targeted timer setting. Then use the ⓐ Time Range Selector to set the decimal point indicator and time increment indicator to its corresponding pair of settings. 3. Since these configurations offer a complete range of settings from 0.01 seconds to 99.9 hours, the setting of 9.99 for minutes and the 9.99 and 999 settings for hours are not listed and should not be used.	
		Decimal Point Indicator	Time Increment Indicator		
	0.01 seconds to 9.99 seconds	9.99	S		
	0.1 seconds to 99.9 seconds	99.9			
	1 second to 999 seconds	999	M		
	0.1 minutes to 99.9 minutes	99.9			
1 minute to 999 minutes	999	H			
0.1 hours to 99.9 hours	99.9				
Step 3	Desired Operation	Selection		Remarks	
	Set the precise period of time desired by using the ⓐ Time Setting Digital Switch.			Use the ⓐ Time Setting Digital Switch to set the desired period of time. It is important to remember that the setting of the ⓐ Time Range Selector determines the units of time measurement as well as the implied decimal point location.	



It is important to remember that the ⓐ Time Range Selector not only selects the time range but also influences the interpretation of the Digital Time Display. Changing the ⓐ Time Range Selector setting changes the units of time measurement (seconds, minutes, hours) as well as the decimal point location.

Instructions: Setting GT3D-8 Timers

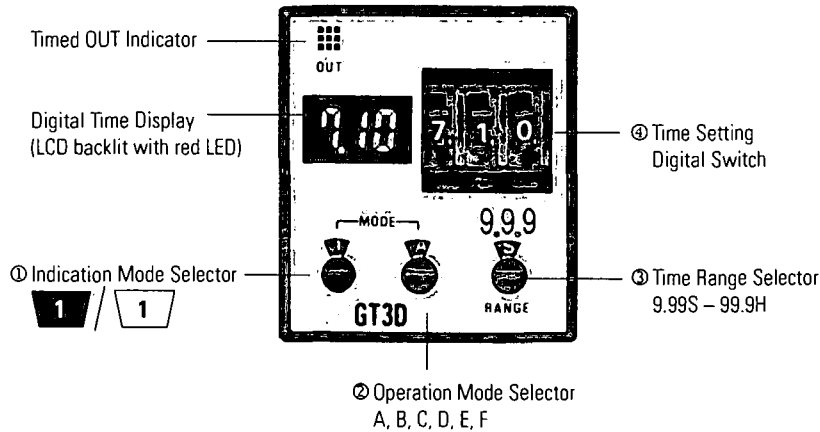

Step 1	Desired Mode of Operation		Selection	Remarks	
Select the time display and operation modes.	Operation Mode	Time elapsed	1	1. Use a flat screwdriver to set the selectors. Since selectors do not turn all the way around, both clockwise and counterclockwise rotation is necessary. 2. The GT3D-8 Indication Mode Selector selects both whether the Digital Time Display displays the time elapsed or time remaining and also the mode of operation. Decide which display and mode is desired. Then use this selector to set the operation mode.	
		Time remaining	1		
	Cycle One-Shot	Time elapsed	2		
		Time remaining	2		
	ON-Delay One-Shot 2	Time elapsed	3		
		Time remaining	3		
Step 2	Desired Mode of Operation		Selection	Remarks	
Select the single shot output time.	Desired Single-Shot Output Time		One-Shot Output Time Selector	On the GT3D-8 timers, the desired single-shot output time can be selected from the A, B, C, D, E, and F modes using the One-Shot Output Time Selector.	
	0.1 seconds		A		
	0.5 seconds		B		
	1 second		C		
	5 seconds		D		
	10 seconds		E		
50 seconds		F			
Step 3	Desired Operation		Selection	Remarks	
Select a time range that contains the desired period of time.	Base Time Ranges		Time Range Selector	1. The Time Range Selector controls both the decimal point indicator (9.99, 99.9, 999) and the time increment indicators S (seconds), M (minutes), and H (hours). 2. Choose which base time range contains the targeted timer setting. Then use the Time Range Selector to set the decimal point indicator and time increment indicator to its corresponding pair of settings. 3. Since these configurations offer a complete range of settings from 0.01 seconds to 99.9 hours, the setting of 9.99 for minutes and the 9.99 and 999 settings for hours are not listed and should not be used.	
			Decimal Point Indicator		
	0.01 seconds to 9.99 seconds		9.99		S
	0.1 seconds to 99.9 seconds		99.9		
	1 second to 999 seconds		999		M
	0.1 minutes to 99.9 minutes		99.9		
1 minute to 999 minutes		999	H		
0.1 hours to 99.9 hours		99.9			
Step 4	Desired Operation		Selection	Remarks	
Set the precise period of time desired by using the Time Setting Digital Switch.				Use the Time Setting Digital Switch to set the desired period of time. It is important to remember that the setting of the Time Range Selector determines the units of time measurement as well as the implied decimal point location.	

⚠ It is important to remember that the Time Range Selector not only selects the time range but also influences the interpretation of the Digital Time Display. Changing the Time Range Selector setting changes the units of time measurement (seconds, minutes, hours) as well as the decimal point location.

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

GT3 Series



Accessories

DIN Rail Mounting Accessories


DIN Rail/Surface Mount Sockets and Hold-Down Springs

DIN Rail Mount Socket				Applicable Hold-Down Springs	
Style	Appearance	Use with Timers	Part No.	Appearance	Part No.
8-Pin Screw Terminal (dual tier)		GT3A-1, 2, 3 (8-pin) GT3D-1, 2, 3 (8-pin) GT3F-1, 2 (8-pin) GT3W (8-pin) GT3S	SR2P-05		SFA-203
11-Pin Screw Terminal (dual tier)		GT3A-1, 2, 3 (11-pin) GT3A-4, 5, 6 GT3D-1, 2, 3 (11-pin) GT3D-4, 8 GT3F-1, 2 (11-pin) GT3W (11-pin)	SR3P-05		
8-Pin Fingersafe Socket		GT3A-1, 2, 3 (8-pin) GT3D-1, 2, 3 (8-pin) GT3F-1, 2 (8-pin) GT3W (8-pin) GT3S	SR2P-05C		
11-Pin Fingersafe Socket		GT3A-1, 2, 3 (11-pin) GT3A-4, 5, 6 GT3D-1, 2, 3 (11-pin) GT3D-4, 8 GT3F-1, 2 (11-pin) GT3W (11-pin)	SR3P-05C		
8-Pin Screw Terminal		GT3A-1, 2, 3 (8-pin) GT3D-1, 2, 3 (8-pin) GT3F-1, 2 (8-pin) GT3W (8-pin) GT3S	SR2P-06		SFA-202
11-Pin Screw Terminal		GT3A-1, 2, 3 (11-pin) GT3A-4, 5, 6 GT3D-1, 2, 3 (11-pin) GT3D-4, 8 GT3F-1, 2 (11-pin) GT3W (11-pin)	SR3P-06		
DIN Mounting Rail Length 1000mm		—	BNDN1000		

Installation of Hold-Down Springs
DIN Rail Mount Socket

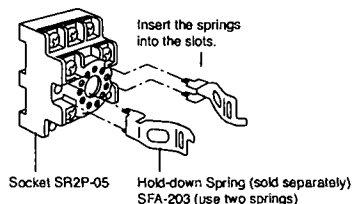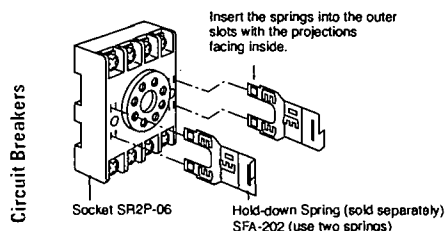

Panel Mount Socket

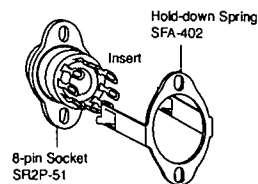




Timers

GT3 Series Accessories



Panel Mounting Accessories


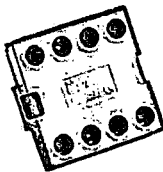


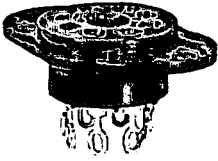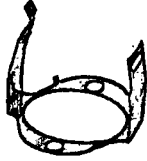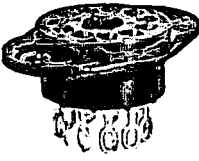Panel Mount Sockets and Hold-Down Springs

Panel Mount Socket				Applicable HD Springs	
Style	Appearance	Use with Timers	Part No.	Appearance	Part No.
8-Pin Solder Terminal		GT3A- (8-pin) GT3D- (8-pin) GT3W- (8-pin) GT3F- (8-pin) GT3S	SR2P-51		SFA-402
11-Pin Solder Terminal		GT3A- (11-pin) GT3D- (11-pin) GT3W- (11-pin) GT3F- (11-pin)	SR3P-51		



For information on installing the hold-down springs, see page 838.

Flush Panel Mount Adapter and Sockets that use an Adapter

Accessory	Description	Appearance	Use with Timers	Part No.
Panel Mount Adapter	Adaptor for flush panel mounting GT3 timers		All GT3 timers	RTB-G01
Sockets for use with Panel Mount Adapter	8-pin screw terminal	 (Shown: SR6P-M08G for Wiring Socket Adapter)	All 8-pin timers	SR6P-M08G
	11-pin screw terminal		All 11-pin timers	SR6P-M11G
	8-pin solder terminal		All 8-pin timers	SR6P-S08
	11-pin solder terminal		All 11-pin timers	SR6P-S11



No hold down springs are available for flush panel mounting.

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

Instructions: Wiring Inputs for GT3 Series


Switches & Pilot Lights

Inputs Inputs


To avoid electric shock, do not touch the input signal terminal during power voltage application.

When connecting the input signal terminals of two or more GT3A timers to the same contact or transistor, the input terminals of the same number should be connected. (Connect Terminals No.2 in common.)

[Incorrect]

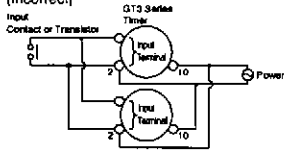


[Correct]

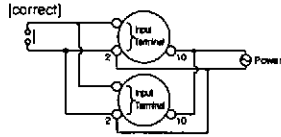


Display Lights

In a transistor circuit for controlling input signals, with its primary and secondary power circuits isolated, do not ground the secondary circuit.

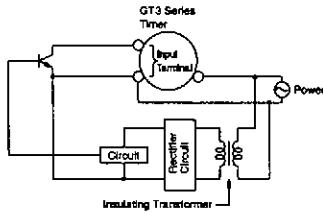

Relays & Sockets

Connect the input signal terminals of the GT3A timers to Terminal No.2 only. Never apply voltage to other terminals; otherwise, the internal circuit may be damaged.

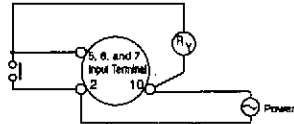


Input signal lines must be made as short as possible and installed away from power cables and power lines. Use shielded wires or a separate conduit for input wiring.

Terminal Blocks


Circuit Breakers

Inputs Instructions, continued

For contact input, use gold-plated contacts to make sure that the residual voltage is less than 1V when the contacts are closed.

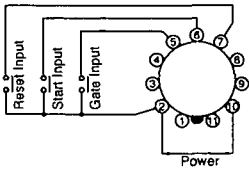


For transistor input, use transistors with the following specifications; VCE = 40V, VCES = 1V or less, IC = 50 mA or more, and ICBO = 50µA or less. The resistance should be less than 1kΩ when the transistor is on. When the output transistor switches on, a signal is input to the timer.

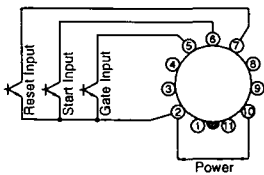

Inputs: GT3A-1, -2, -3

Transistor output equipment such as proximity switches and photoelectric switches can input signals if they are voltage/current output type, with power voltage ranges from 18 to 30V and have 1V. When the signal voltage switches from H to L, a signal is input to the timer

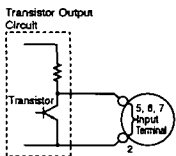

Inputs: GT3A-4, -5, -6

Start Input	The start input initiates a time-delay operation and controls output status.	No-voltage contact inputs and NPN open collector transistor inputs are applicable. 24V DC, 1mA maximum Input response time: 50msec maximum
Reset Input	When the reset input is activated, the time is reset, and contacts return to original state.	
Gate Input	The time-delay operation is suspended while the gate input is on (pause).	

Switches & Pilot Lights

Display Lights


Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

Dimensions

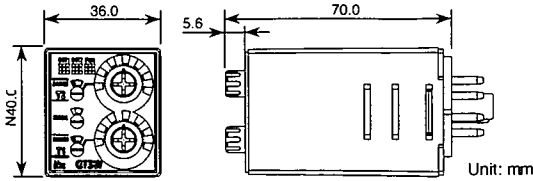


NOTE: GT3W series are UL Listed when used in combination with following IDEC's sockets:
 GT3W-A11, A33: SR2P-06* pin type socket.
 GT3W-A11E: SR3P-05* pin type socket.
 (*-May be followed by A,B,C or U)
 The socket to be used with these timers are rated:
 -Conductor Temperature Rating 60°C min.
 -Use 14AWG max.(2mm²max.) Copper conductors only
 -Terminal Torque 1.0 to 1.3 N·m

Switches & Pilot Lights


Display Lights

Relays & Sockets


Analog GT3 Timer, 8-Pin with SR2P-06

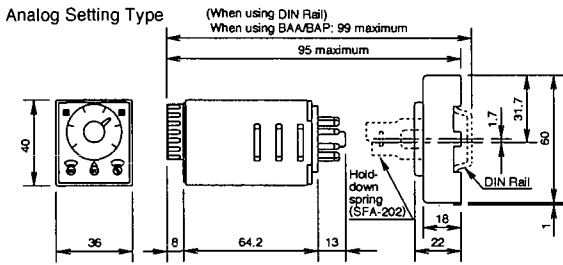


Analog GT3 Timer, 11-Pin with SR3P-06

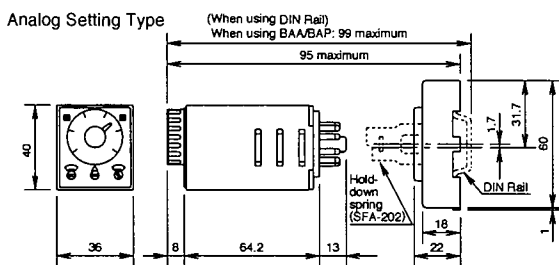


Digital GT3 Timer, 8-Pin with SR2P-06

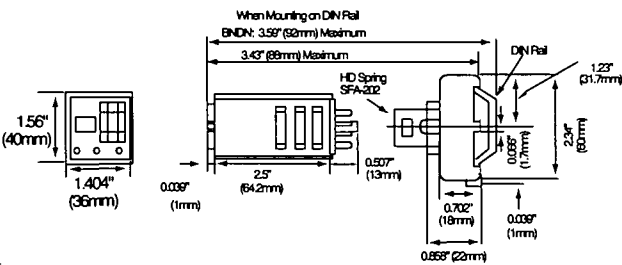


Digital GT3 Timer, 11-Pin with SR3P-06

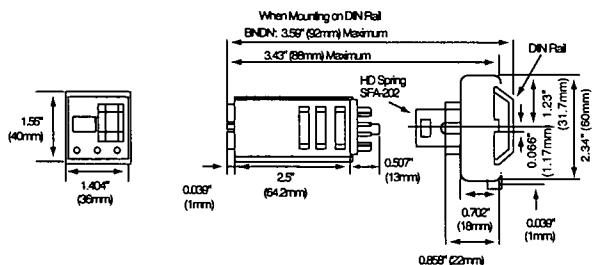

Analog GT3 Timer, 11-Pin with SR3P-05

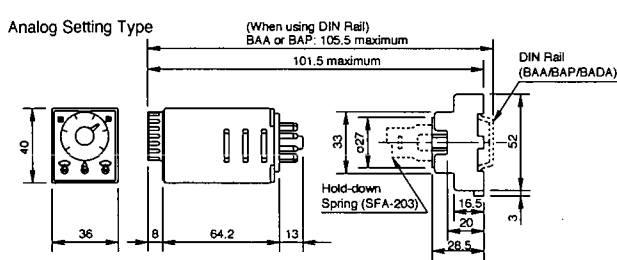

Digital GT3 Timer, 11-Pin with SR3P-05

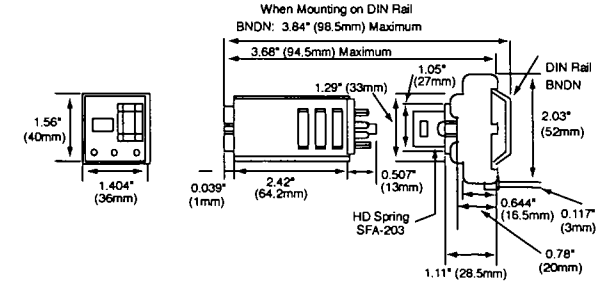

Terminal Blocks

Circuit Breakers


Timers

GT3 Series Dimensions




Panel Mount Adapter


Analog GT3 Timer, 8-Pin and 11-Pin with SR6P-S08 or SR6P-S11

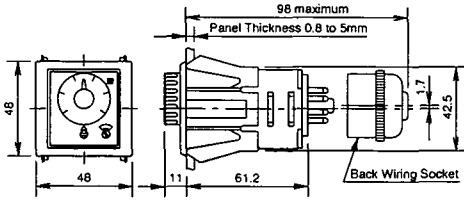


Digital GT3 Timer, 8-Pin and 11-Pin with SR6P-S08 or SR6P-S11

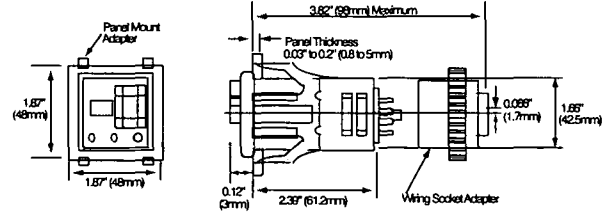


Mounting Hole Layout

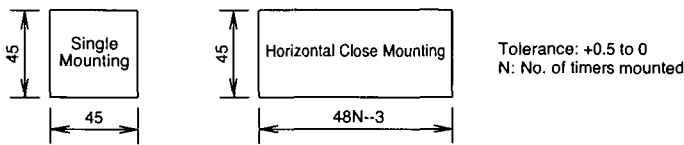

Analog and Digital GT3 Timer, 8-Pin with SR6P-M08G

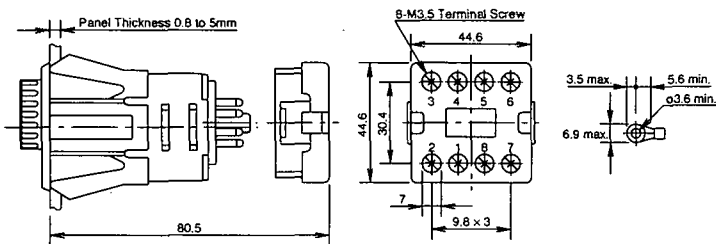

Analog and Digital GT3 Timer, 11-Pin with SR6P-M11G

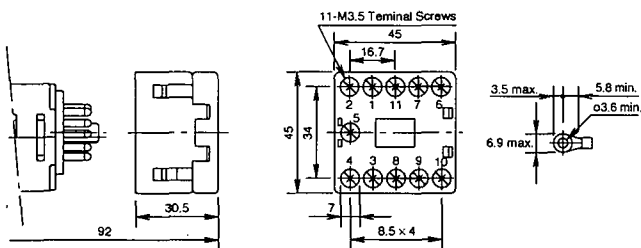

Switches & Pilot Lights

Display Lights

Relays & Sockets

Timers

Terminal Blocks

Circuit Breakers

General Instructions for All Timer Series

Switches & Pilot Lights

Load Current

With inductive, capacitive, and incandescent lamp loads, inrush current more than 10 times the rated current may cause welded contacts and other undesired effects. The inrush current and steady-state current must be taken into consideration when specifying a timer.

Display Lights

Contact Protection

Switching an inductive load generates a counter-electromotive force (back EMF) in the coil. The back EMF will cause arcing, which may shorten the contact life and cause imperfect contact. Application of a protection circuit is recommended to safeguard the contacts.

Relays & Sockets

Temperature and Humidity

Use the timer within the operating temperature and operating humidity ranges and prevent freezing or condensation. After the timer has been stored below its operating temperature, leave the timer at room temperature for a sufficient period of time to allow it to return to operating temperatures before use.

Environment

Avoid contact between the timer and sulfurous or ammonia gases, organic solvents (alcohol, benzene, thinner, etc.), strong alkaline substances, or strong acids. Do not use the timer in an environment where such substances are prevalent. Do not allow water to run or splash on the timer.

Vibration and Shock

Excessive vibration or shocks can cause the output contacts to bounce, the timer should be used only within the operating extremes for vibration and shock resistance. In applications with significant vibration or shock, use of hold down springs or clips is recommended to secure a timer to its socket.

Time Setting

The time range is calibrated at its maximum time scale; so it is desirable to use the timer at a setting as close to its maximum time scale as possible. For a more accurate time delay, adjust the control knob by measuring the operating time with a watch before application.

Input Contacts

Use mechanical contact switch or relay to supply power to the timer. When driving the timer with a solid-state output device (such as a two-wire proximity switch, photoelectric switch, or solid-state relay), malfunction may be caused by leakage current from the solid-state device. Since AC types comprise a capacitive load, the SSR dielectric strength should be two or more times the power voltage when switching the timer power using an SSR.

Generally, it is desirable to use mechanical contacts whenever possible to apply power to a timer or its signal inputs. When using solid state devices, be cautious of inrushes and back-EMF that may exceed the ratings on such devices. Some timers are specially designed so that signal inputs switch at a lower voltage than is used to power the timer (models designated as "B" type).

Timing Accuracy Formulas

Timing accuracies are calculated from the following formulas:

Repeat Error
$$= \pm \frac{1 \times \text{Maximum Measured Value} - \text{Minimum Measured Value}}{2 \text{ Maximum Scale Value}} \times 100\%$$

Voltage Error
$$= \pm \frac{T_v - T_r}{T_r} \times 100\%$$

T_v: Average of measured values at voltage V
T_r: Average of measured values at the rated voltage

Temperature Error
$$= \pm \frac{T_t - T_{20}}{T_{20}} \times 100\%$$

T_t: Average of measured values at °C
T₂₀: Average of measured values at 20°C

Setting Error
$$= \pm \frac{\text{Average of Measured Values} - \text{Set Value}}{\text{Maximum Scale Value}} \times 100\%$$

Terminal Blocks

Circuit Breakers



Technical Data

Timing Characteristics (according to VDE 0435, Part 2021)		
Timing ranges for		
RZ7-FSM-A, B, C, D, E, F, I, & L	(1s)	0.05...1 sec
RZ7-FSH	(3s)	0.15...3 sec
	(10s)	0.5...10 sec
	(1mn)	0.05...1 min
	(3mn)	0.15...3 min
	(10mn)	0.5...10 min
	(1h)	0.05...1 hour
	(3h)	0.15...3 hours
	(10h)	0.5...10 hours
	(60h)	3...60 hours
	RZ7-FSQ	(2.5s)
	(10s)	0.5...10 sec
	(80s)	4...80 sec
	(10mn)	0.5...10 min
Setting accuracy	±5% of full scale value	
Repeatability	±0.2% of the setting values	
Tolerance	Voltage: ±0.001%/°ΔU Temperature: ±0.025%/°C	
Power Supply		
Supply voltages	24...48VDC and 24...240VAC, 50/60Hz (dual voltage) 12VDC 24...240V AC or DC (universal voltage) 346...440VAC, 50/60Hz	
Voltage tolerance	AC: -15%...+10% DC: -20%...+20%	
Power consumption	AC: 5VA at 240V DC: 0.5W at 24V	
Time energized	100%	
Reset time	50ms	
Voltage interruption	≤20ms without reset (supply voltage)	
Input Impedance	Relay On: 3k-13k ohms Relay Off: 0.7k-4k ohms	
Cable length (supply voltage control)	250 meters (800 ft.) max.	
Pulse Control (B1)		
Impulse duration	≥50ms (AC), ≥30ms (DC)	
Input voltage	Supply voltage range	
Input current	1 mA	
Max. Leakage Current	400 micro Amps	
Cable length	max. 250 m (800 ft.) without parallel load between B1 & A2 max. 50 m (160 ft.) with load (<3kΩ) between B1 & B2	
Outputs		
Type of outputs	Relay contacts: hard silver	
Maximum admissible operating voltage	Alternating current: 440VAC	
Dielectric Coil to contact Withstand Voltage	5,000 V	
Switching capacity		
Current I_n : (AC1)	8A (5A for RZ7-FSQ)	
Power:	2000VA	
	according to IEC947-5-1: 3A/440VAC (inductive load, AC14) 3A/250VAC (inductive load, AC15) 1A/24VDC (inductive load, DC13)	
	according to UL 508: 1.5A/250VAC (B300) 3A/120VAC (B300)	
Short circuit resistance	10 A gL (fast blow fuse)	


Life expectancy (electrical)	4 million ops. at 1A/250VAC, $\cos\phi = 1$ 0.2 million ops. at 6A/250VAC, $\cos\phi = 1$ 1.5 million ops. at 1A/250VAC, $\cos\phi = 0.3$ 0.3 million ops. at 3A/250VAC, $\cos\phi = 0.3$ 0.5 million ops. at 6A/24VDC, resistive 2 million ops. at 4A/24VDC, resistive 2 million ops. at 0.2A/230VDC, resistive 1 million ops. at 0.4A/24VDC, L/R = 20ms 1 million ops. at 0.2A/110VDC, L/R = 20ms 1 million ops. at 0.1A/230VDC, L/R = 20ms
Life expectancy (mechanical)	30 million operations
General Data	2 kVAC/50 Hz test voltage according to VDE 0435 and 6 kV 1.2/50 μ s surge voltage according to IEC 947-1 between all inputs and outputs
Insulation Characteristics	
EMC/Interference Immunity	Performance of following requirements: - Surge capacity of the supply voltage according to IEC1000-4-5: 4 kV 1.2/50 μ s - Burst according to IEC 1000-4-4: 6 kV/ 6/50ns - ESD discharge according to IEC 1000-4-2: - Contact 8 kV, air 8 kV - Electromagnetic HF field according to IEC 801-3 and conducted electromagnetic HF signal according to IEC 801-6: Level 3
EMC/Emission	Electromagnetic fields according to EN 55 022: Class B
Safe isolation	According to VDE 106, part 101
Climatic withstand	56 cycles (24h) at 25...40°C and 95% relative humidity according to IEC 68-2-30 and IEC 68-2-3.
Vibration resistance	4 g in 3 axis at 10...500 Hz, test FC according
Shock resistance	50 g according to IEC 68-2-27
Protection class	Enclosure: IP40 IP30 (single function) Terminal: IP20 according to IEC 947-1
Weight	100g
Approvals/Standards	UL, C-UL up to 240VAC, Germanischer Lloyd, CE
Ambient temperature	Open: -25°C...+60°C Enclosed: -25°C...+45°C Storage: -25°C...+85°C
Connections	Screw terminal - M3.5 for Pozidrive No.2, Phillips and slotted screws No.2 suitable for power screwdriver. Rated tightening torque - 0.8 Nm (max. 1.2 Nm) - [8.8 lb-in] Wire Size - Dual-chamber system for terminal cross-sections of 1 x 0.5mm ² (solid) or 2 x 2.5mm ² (flexible with sleeve), AWG 20...14. Finger Protection - According to VDE 0106
Mounting	- Snap-on mounting (35mm DIN-rail) - Side mounting on CA7/CA4 contactors and CS7/CS4 with dovetail joint [surface mounting in any position]
Relays	- Screw fixing by Panel Mount Adapter and two screws (M4) [surface mounting in any position]
Disposal	Synthetic material without dioxin according to EC/EFTA notification No. 93/0141/D. Electrical contacts contain cadmium.
Standards	EN 60947-1, EN 60947-5-1, EN 50081-1, IEC 947, UL 508, CSA 22.2



RZ7 Relative Scale Setting Knob

Series RZ7 Timing Relays have a "relative scale" setting knob numbered 0 to 1.0. Think about this as 0 to 100% of the relay's built-in time range. Example: To set an RZ7-FS timing relay (with a 0.05 to 1 minute range) to activate after 25 seconds:

- 1) Divide the desired activation time (25 seconds) by the maximum time limit of the relay (60 seconds).
 $25 \div 60 = .416$
- 2) Rotate the setting knob to just past the .4 mark.

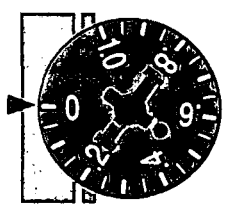


Dimensions

Control & Timing Relays


RZ7-FS

Series RZ7-FS Timing Relays (one and two pole)

- Dimensions are in millimeters
- Dimensions not intended for manufacturing purposes

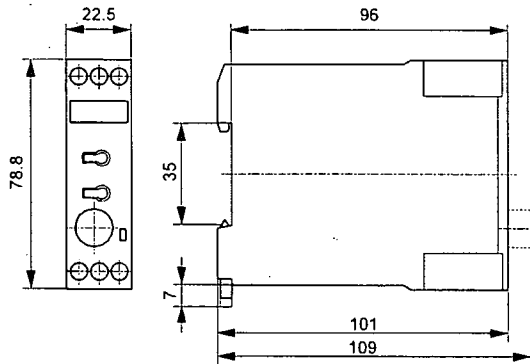


RZ7-FS (1 SPDT contact)

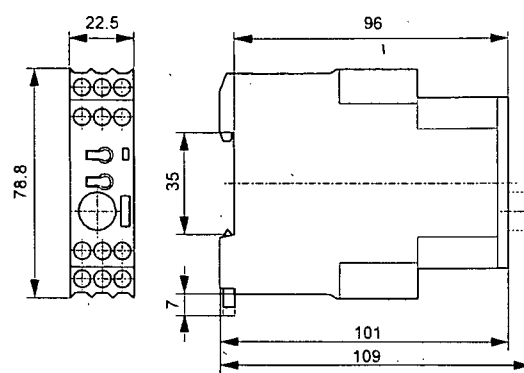

RZ7-FS (2 SPDT contacts)

Panel Mount Adaptor (26.506.221-01)

- Dimensions are in millimeters
- Dimensions not intended for manufacturing purposes

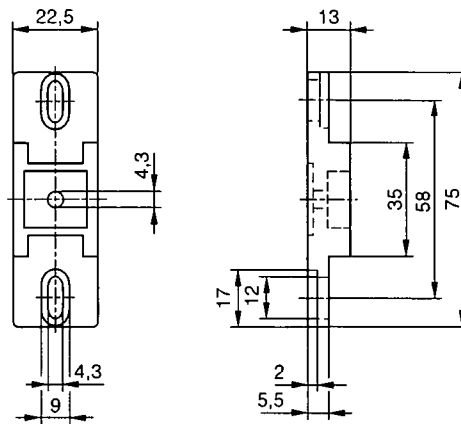





Halmac Services (Qld) Pty. Ltd.
A.C.N. 098 852 923
A.B.N. 40 741 712 113

TEST SHEET

1. PUMP STATION SP280 TEST SHEET

Halmac Services (Qld) Pty Ltd

ACN 098 852 923 ABN 40 741 712 113 ECL 53064

30 Palmer Place, Murarrie Qld 4172
 All hours Telephone (07) 3249 9500
 Email: info@halmac.net.au

PO Box 3467, Tingalpa DC Qld 4173
 Facsimile (07) 3249 9599
 Web: www.halmac.net.au

CERTIFICATE OF:

(Please mark relevant check-box)

TESTING AND COMPLIANCE (**Electrical installations**)

Issued in accordance with s159 of the *Electrical Safety Regulation 2002*

TESTING AND SAFETY (**Electrical equipment**)

Issued in accordance with s15 of the *Electrical Safety Regulation 2002*

* Work performed for:

* Name QUU QUEENSLAND URBAN UTILITIES
Title Given name/s Surname

* Address FORTITUDE VALLEY
Street
BRISBANE 4001
Suburb/town Postcode

* Electrical installation / equipment tested (detailed list of all work done):

REPLACEMENT OF SP280 SWITCHBOARD
 LAWSON PLACE, DREWVALE. Q4116
 AS PER AS BUILT DRAWINGS 486/5/7-0150 SHEETS 00 to 22

* Date of test 25 / 01 / 2010 * Electrical contractor licence number 53064

Name on contractor licence Halmac Services Qld Pty Ltd

Electrical contractor phone number 07 3249 9500

For **electrical installations**, this certifies that the electrical installation, to the extent it is affected by the electrical work, has been tested to ensure that it is electrically safe and is in accordance with the requirements of the wiring rules and any other standard applying under the *Electrical Safety Regulation 2002* to the electrical installation.

For **electrical equipment**, this certifies that the electrical equipment, to the extent it is affected by the electrical work, is electrically safe.

Name DAVE JACKSON C16507
Person who performed, or person who is responsible for work

Signature  Date 17 / 04 / 2010

* Indicates a mandatory field


V2.02-2008

DESIGN & INSPECTION ROUTE SCHEDULE

CUSTOMER: BRISBANE WATER PROJECT NAME: REPLACEMENT SWITCHBOARDS PROJECT OFFICER: DJ
 JOB NO: A4214 SWITCHBOARD NAME: SP 28D DRAWING NO: SUPPLIED

IS THIS SWITCHBOARD IDENTICAL, OR SIMILAR, TO A PREVIOUS DESIGN? YES (DELETE AS APPLICABLE)
 IF "NO" COMPLETE SWITCHBOARD DESIGN REVIEW. IF "YES" PROVIDE PREVIOUS DRAWING NO. REFERENCE

(TICK APPLICABLE SECTION BELOW: YES / NO / N/A (Not Applicable))

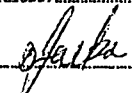DESCRIPTION	INSPECTION/TEST			INSP.	DATE	IF BUSBARS ARE APPLICABLE COMPLETE DETAIL BELOW
	YES	NO	N/A			
SHEET METALWORK - UNPAINTED	X			DJ	30/11	• Sizing as per approved shop drawings • Accessible terminations and fixings • Adequate supports and spacing • Bolts correct type and torque tension • Compartment segregation • Phase-Phase & Phase-Earth Clearance INSULATION TEST 1. Megger between phases, phase to N/L phases to earth, with MEN link removed. Note details below in Table "Megger 1" 2. Megger N/L to earth with MEN link removed. 3. Apply 2.5kV for (1) min., phase to phase, phase to NL, and 3-phases to earth. 4. Remove HI VOLT tester and repeat item (3). Note details below in Table "Megger 2". HV TEST Set Details: "MEGGER" Detail:KYORITSU.....Serial 118089/ No. "HI POT" TEST VOLTAGE:kV Duration mins "MEGGER" TEST VOLTAGE:500..... Volts D.C. INSTRUMENT CALIBRATION: DJE 29/5/10
SHEET METALWORK - PAINTED	X			DJ	12/12	
FRONT LAYOUT AS PER DWG	X			DJ	12/12	
DITTO - SHARP EDGES REMOVED	X			DJ	12/12	
WIRING BUILDING WIRE		X		DJ	12/12	
FLEX	X			DJ	12/12	
CRIMP LUGS	X			DJ	12/12	
BUSBARS AFTER MANUFACTURE			X	DJ	12/12	
BUSBARS - AFTER ASSEMBLY			X	DJ	12/12	
FITTING OUT - BEFORE WIRING	X			BF	6/11	
FITTING OUT - AFTER WIRING	X			BF	8/11	
NAME PLATES - BEFORE FITTING	X			MW	9/11	
NAME PLATES - AFTER FITTING	X			MW	5/11	
MEGGER &/OR H.V. TEST	X			DJ	9/11	
FUSES/C-B'S - CORRECT SIZE	X			DJ	9/11	
WIRE & TERMINALS NUMBERED	X			DJ	9/11	
CONTROL & POWER CONN. TIGHT	X			DJ	9/11	
POINT TO POINT TEST	X			DJ	9/11	
FUNCTIONAL TEST	X			DJ	12/12	
COMPLETE S/BOARD TESTING	X			DJ	12/12	
PLC/PROGRAMMING		X		DJ	12/12	
FULL DOCUMENTATION IN DWG POCKET	X			DJ	23/12	
CORRECT DRAWING IN BOARD		X		DJ	12/12	
PACKING		X		DJ	12/12	
REQUEST FOR RELEASE						I certify that the electrical switchboard has been tested in accordance with the prescribed procedure and is suitable for connection to supply. Certificate of Competency No : ...C16507..... Signature of Electrical Mechanic : 
'As Built' Dwgs-Completed	X			DJ	23/12	
Test Reports - O.K.	X			DJ	23/12	
Delivery Docket - Completed			X	DJ	12/12	
Packaging - Completed			X	DJ	12/12	

WIRE COLOURS	240V ACTIVE: RED	240V NEUTRAL: BLACK
ELV-AC ACTIVE:	ELV-AC COMMON:	ELV DEVICES: SALMON
ELV-DC POSITIVE: GREY	ELV-DC NEGATIVE: GREY	TELEMETRY: VIOLET

NOTES: BRISBANE WATER DESIGN . 24VDC IS ORANGE & VIOLET TO FIRST FUSE OR C/B.

Inspected by: J. CLAYTON of QUU. DATE: 12/12/10.
 Accepted by: of DATE:
 Release Authorized by: of DATE:

TEST RESULTS

Description of Test	Results
POINT TO POINT	AS PER DRAWINGS
Tested By (Print Name): _____	
Signed: _____	Date: _____
Customer Witness: _____	Date: _____

1



"




•






▪

[Faint, illegible handwritten text or markings on the left side of the page]



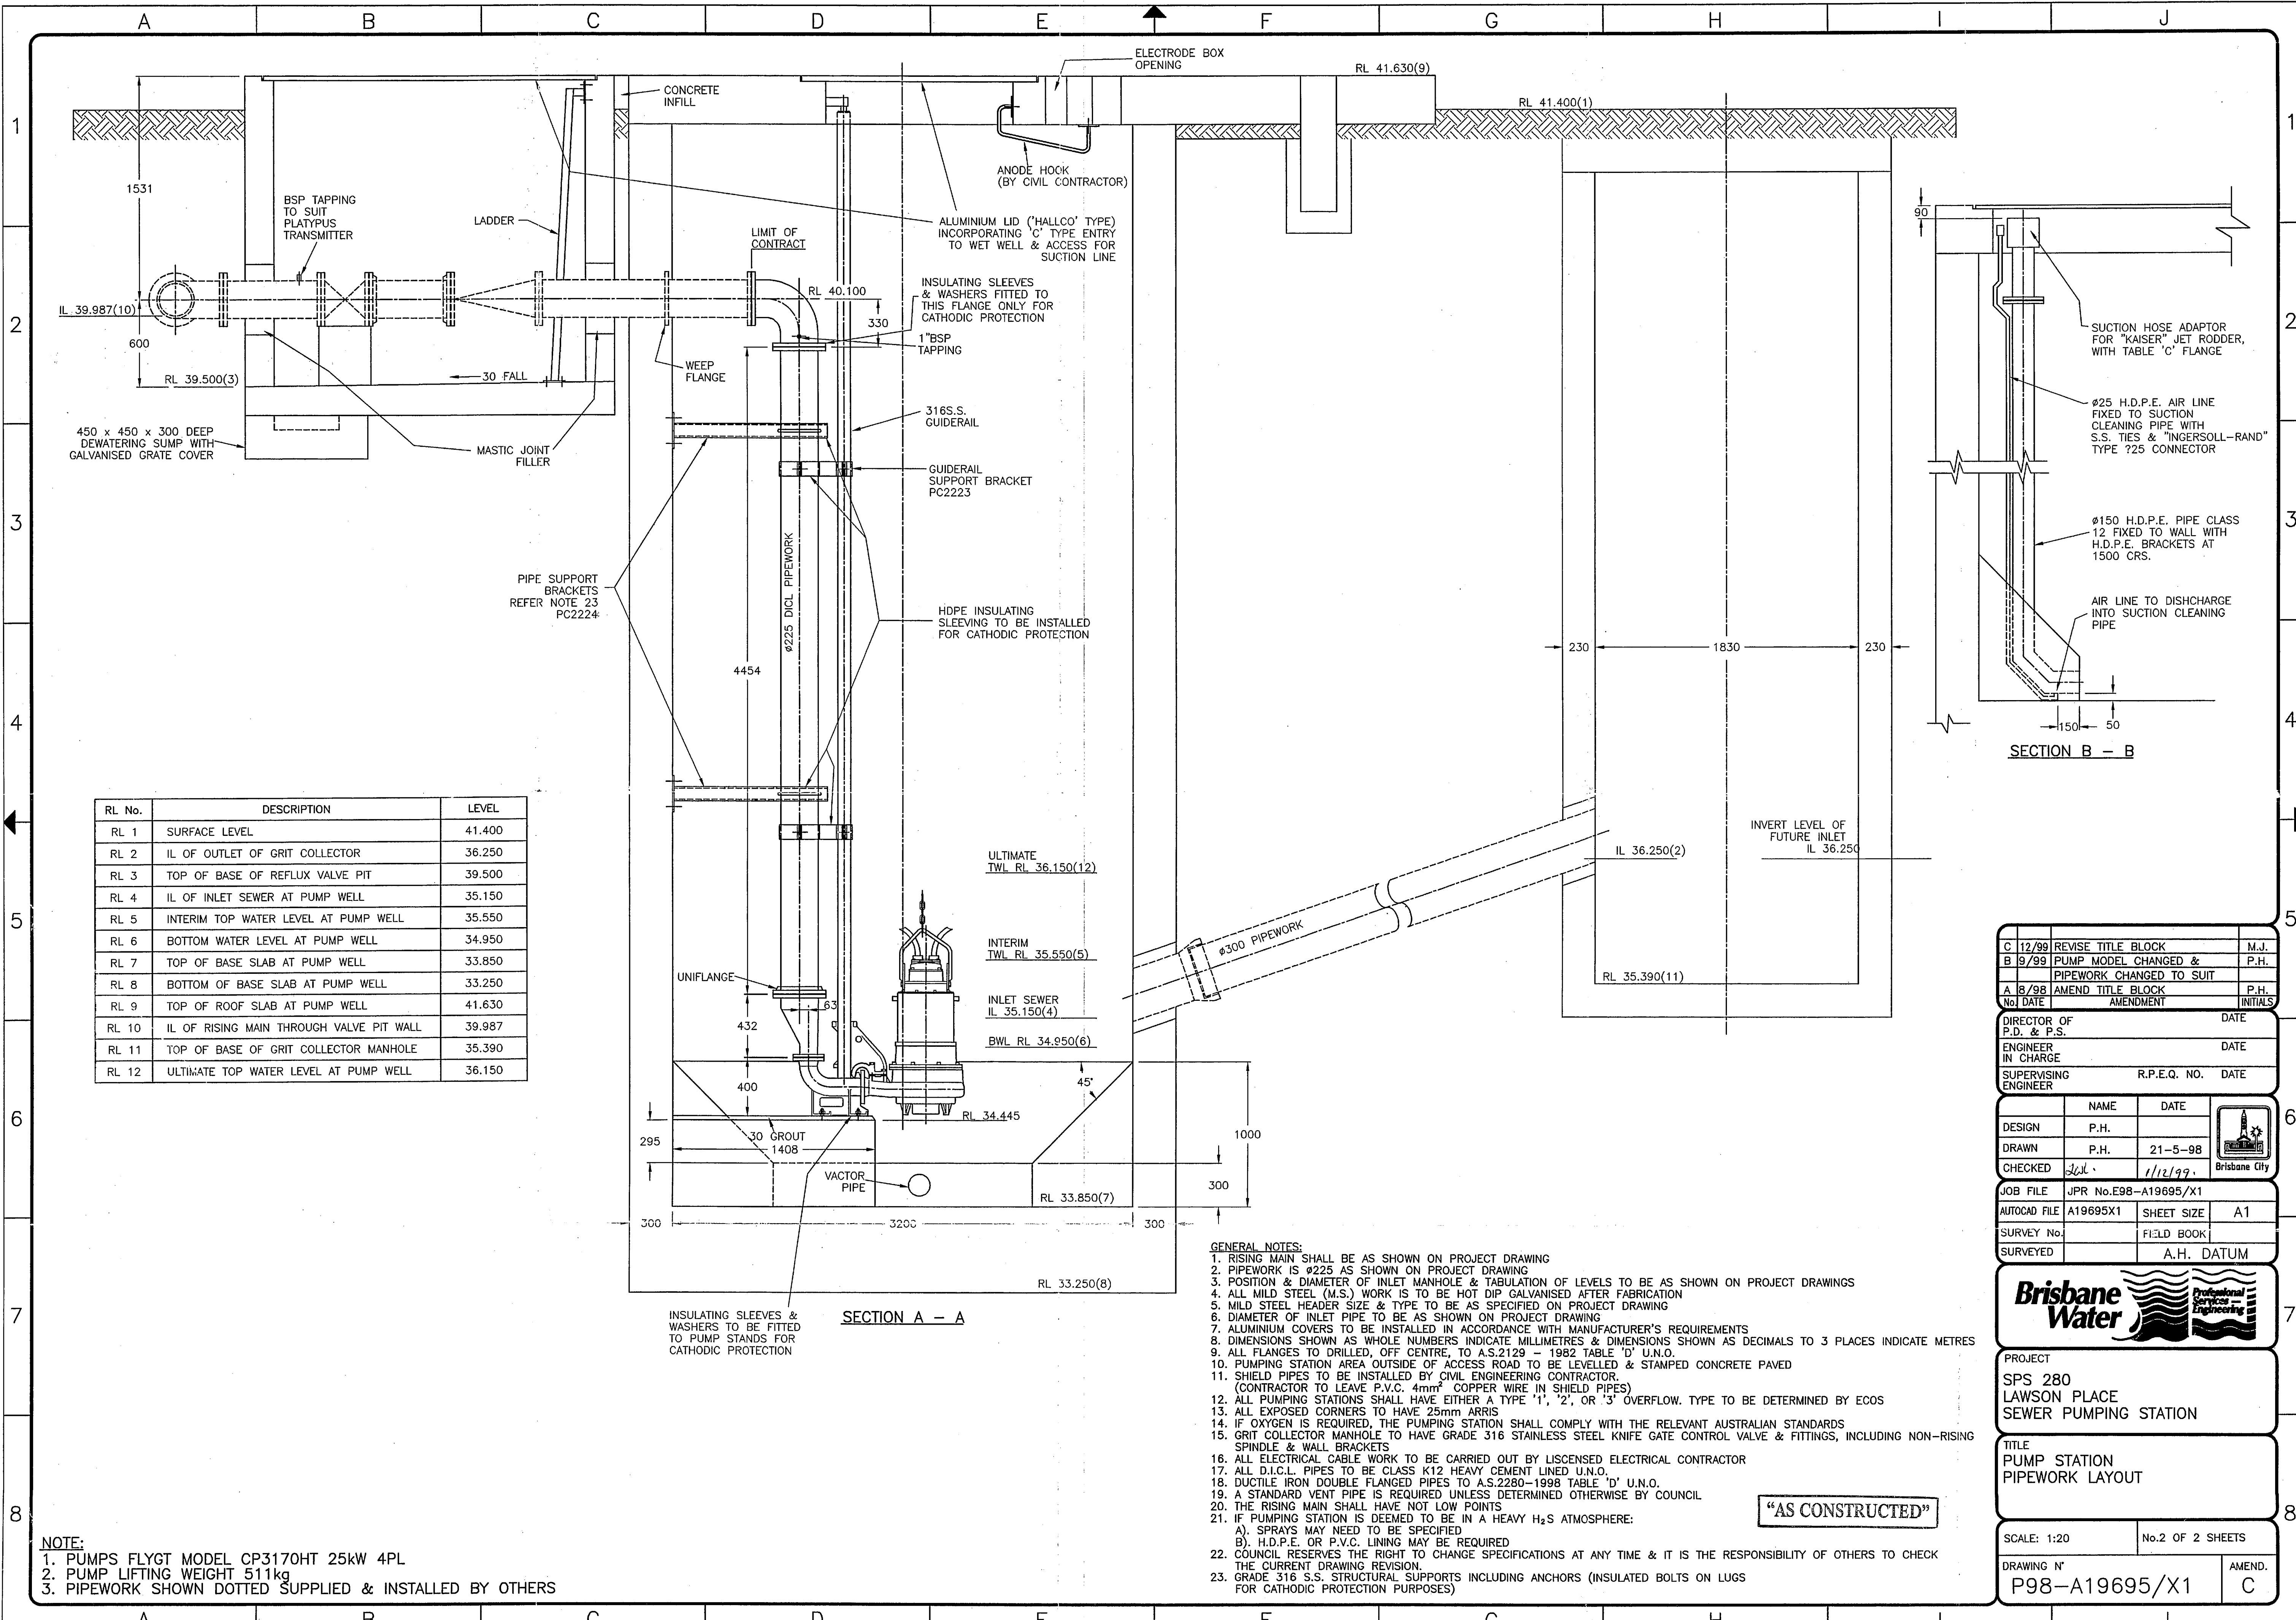

RL No.	DESCRIPTION	LEVEL
RL 1	SURFACE LEVEL	41.400
RL 2	IL OF OUTLET OF GRIT COLLECTOR	36.250
RL 3	TOP OF BASE OF REFLUX VALVE PIT	39.500
RL 4	IL OF INLET SEWER AT PUMP WELL	35.150
RL 5	INTERIM TOP WATER LEVEL AT PUMP WELL	35.550
RL 6	BOTTOM WATER LEVEL AT PUMP WELL	34.950
RL 7	TOP OF BASE SLAB AT PUMP WELL	33.850
RL 8	BOTTOM OF BASE SLAB AT PUMP WELL	33.250
RL 9	TOP OF ROOF SLAB AT PUMP WELL	41.630
RL 10	IL OF RISING MAIN THROUGH VALVE PIT WALL	39.987
RL 11	TOP OF BASE OF GRIT COLLECTOR MANHOLE	35.390
RL 12	ULTIMATE TOP WATER LEVEL AT PUMP WELL	36.150

C 12/99	REVISE TITLE BLOCK	M.J.
B 9/99	PUMP MODEL CHANGED & PIPEWORK CHANGED TO SUIT	P.H.
A 8/98	AMEND TITLE BLOCK	P.H.
No. DATE	AMENDMENT	INITIALS

DIRECTOR OF P.D. & P.S.	DATE
ENGINEER IN CHARGE	DATE
SUPERVISING ENGINEER	R.P.E.Q. NO. DATE

DESIGN	NAME	DATE	
DRAWN	P.H.	21-5-98	
CHECKED	20/11/99	11/12/99	

JOB FILE	JPR No.E98-A19695/X1
AUTOCAD FILE	A19695X1
SURVEY No.	FIELD BOOK
SURVEYED	A.H. DATUM



PROJECT
SPS 280
LAWSON PLACE
SEWER PUMPING STATION


TITLE
PUMP STATION
PIPEWORK LAYOUT

SCALE: 1:20	No.2 OF 2 SHEETS
DRAWING N° P98-A19695/X1	AMEND. C


- GENERAL NOTES:**
- RISING MAIN SHALL BE AS SHOWN ON PROJECT DRAWING
 - PIPEWORK IS #225 AS SHOWN ON PROJECT DRAWING
 - POSITION & DIAMETER OF INLET MANHOLE & TABULATION OF LEVELS TO BE AS SHOWN ON PROJECT DRAWINGS
 - ALL MILD STEEL (M.S.) WORK IS TO BE HOT DIP GALVANISED AFTER FABRICATION
 - MILD STEEL HEADER SIZE & TYPE TO BE AS SPECIFIED ON PROJECT DRAWING
 - DIAMETER OF INLET PIPE TO BE AS SHOWN ON PROJECT DRAWING
 - ALUMINIUM COVERS TO BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S REQUIREMENTS
 - DIMENSIONS SHOWN AS WHOLE NUMBERS INDICATE MILLIMETRES & DIMENSIONS SHOWN AS DECIMALS TO 3 PLACES INDICATE METRES
 - ALL FLANGES TO DRILLED, OFF CENTRE, TO A.S.2129 - 1982 TABLE 'D' U.N.O.
 - PUMPING STATION AREA OUTSIDE OF ACCESS ROAD TO BE LEVELLED & STAMPED CONCRETE PAVED
 - SHIELD PIPES TO BE INSTALLED BY CIVIL ENGINEERING CONTRACTOR.
 - (CONTRACTOR TO LEAVE P.V.C. 4mm² COPPER WIRE IN SHIELD PIPES)
 - ALL PUMPING STATIONS SHALL HAVE EITHER A TYPE '1', '2', OR '3' OVERFLOW. TYPE TO BE DETERMINED BY ECOS
 - ALL EXPOSED CORNERS TO HAVE 25mm ARRIS
 - IF OXYGEN IS REQUIRED, THE PUMPING STATION SHALL COMPLY WITH THE RELEVANT AUSTRALIAN STANDARDS
 - GRIT COLLECTOR MANHOLE TO HAVE GRADE 316 STAINLESS STEEL KNIFE GATE CONTROL VALVE & FITTINGS, INCLUDING NON-RISING SPINDLE & WALL BRACKETS
 - ALL ELECTRICAL CABLE WORK TO BE CARRIED OUT BY LICENSED ELECTRICAL CONTRACTOR
 - ALL D.I.C.L. PIPES TO BE CLASS K12 HEAVY CEMENT LINED U.N.O.
 - DUCTILE IRON DOUBLE FLANGED PIPES TO A.S.2280-1998 TABLE 'D' U.N.O.
 - A STANDARD VENT PIPE IS REQUIRED UNLESS DETERMINED OTHERWISE BY COUNCIL
 - THE RISING MAIN SHALL HAVE NOT LOW POINTS
 - IF PUMPING STATION IS DEEMED TO BE IN A HEAVY H₂S ATMOSPHERE:
 - SPRAYS MAY NEED TO BE SPECIFIED
 - H.D.P.E. OR P.V.C. LINING MAY BE REQUIRED
 - COUNCIL RESERVES THE RIGHT TO CHANGE SPECIFICATIONS AT ANY TIME & IT IS THE RESPONSIBILITY OF OTHERS TO CHECK THE CURRENT DRAWING REVISION.
 - GRADE 316 S.S. STRUCTURAL SUPPORTS INCLUDING ANCHORS (INSULATED BOLTS ON LUGS FOR CATHODIC PROTECTION PURPOSES)

- NOTE:**
- PUMPS FLYGT MODEL CP3170HT 25kW 4PL
 - PUMP LIFTING WEIGHT 511kg
 - PIPEWORK SHOWN DOTTED SUPPLIED & INSTALLED BY OTHERS

"AS CONSTRUCTED"

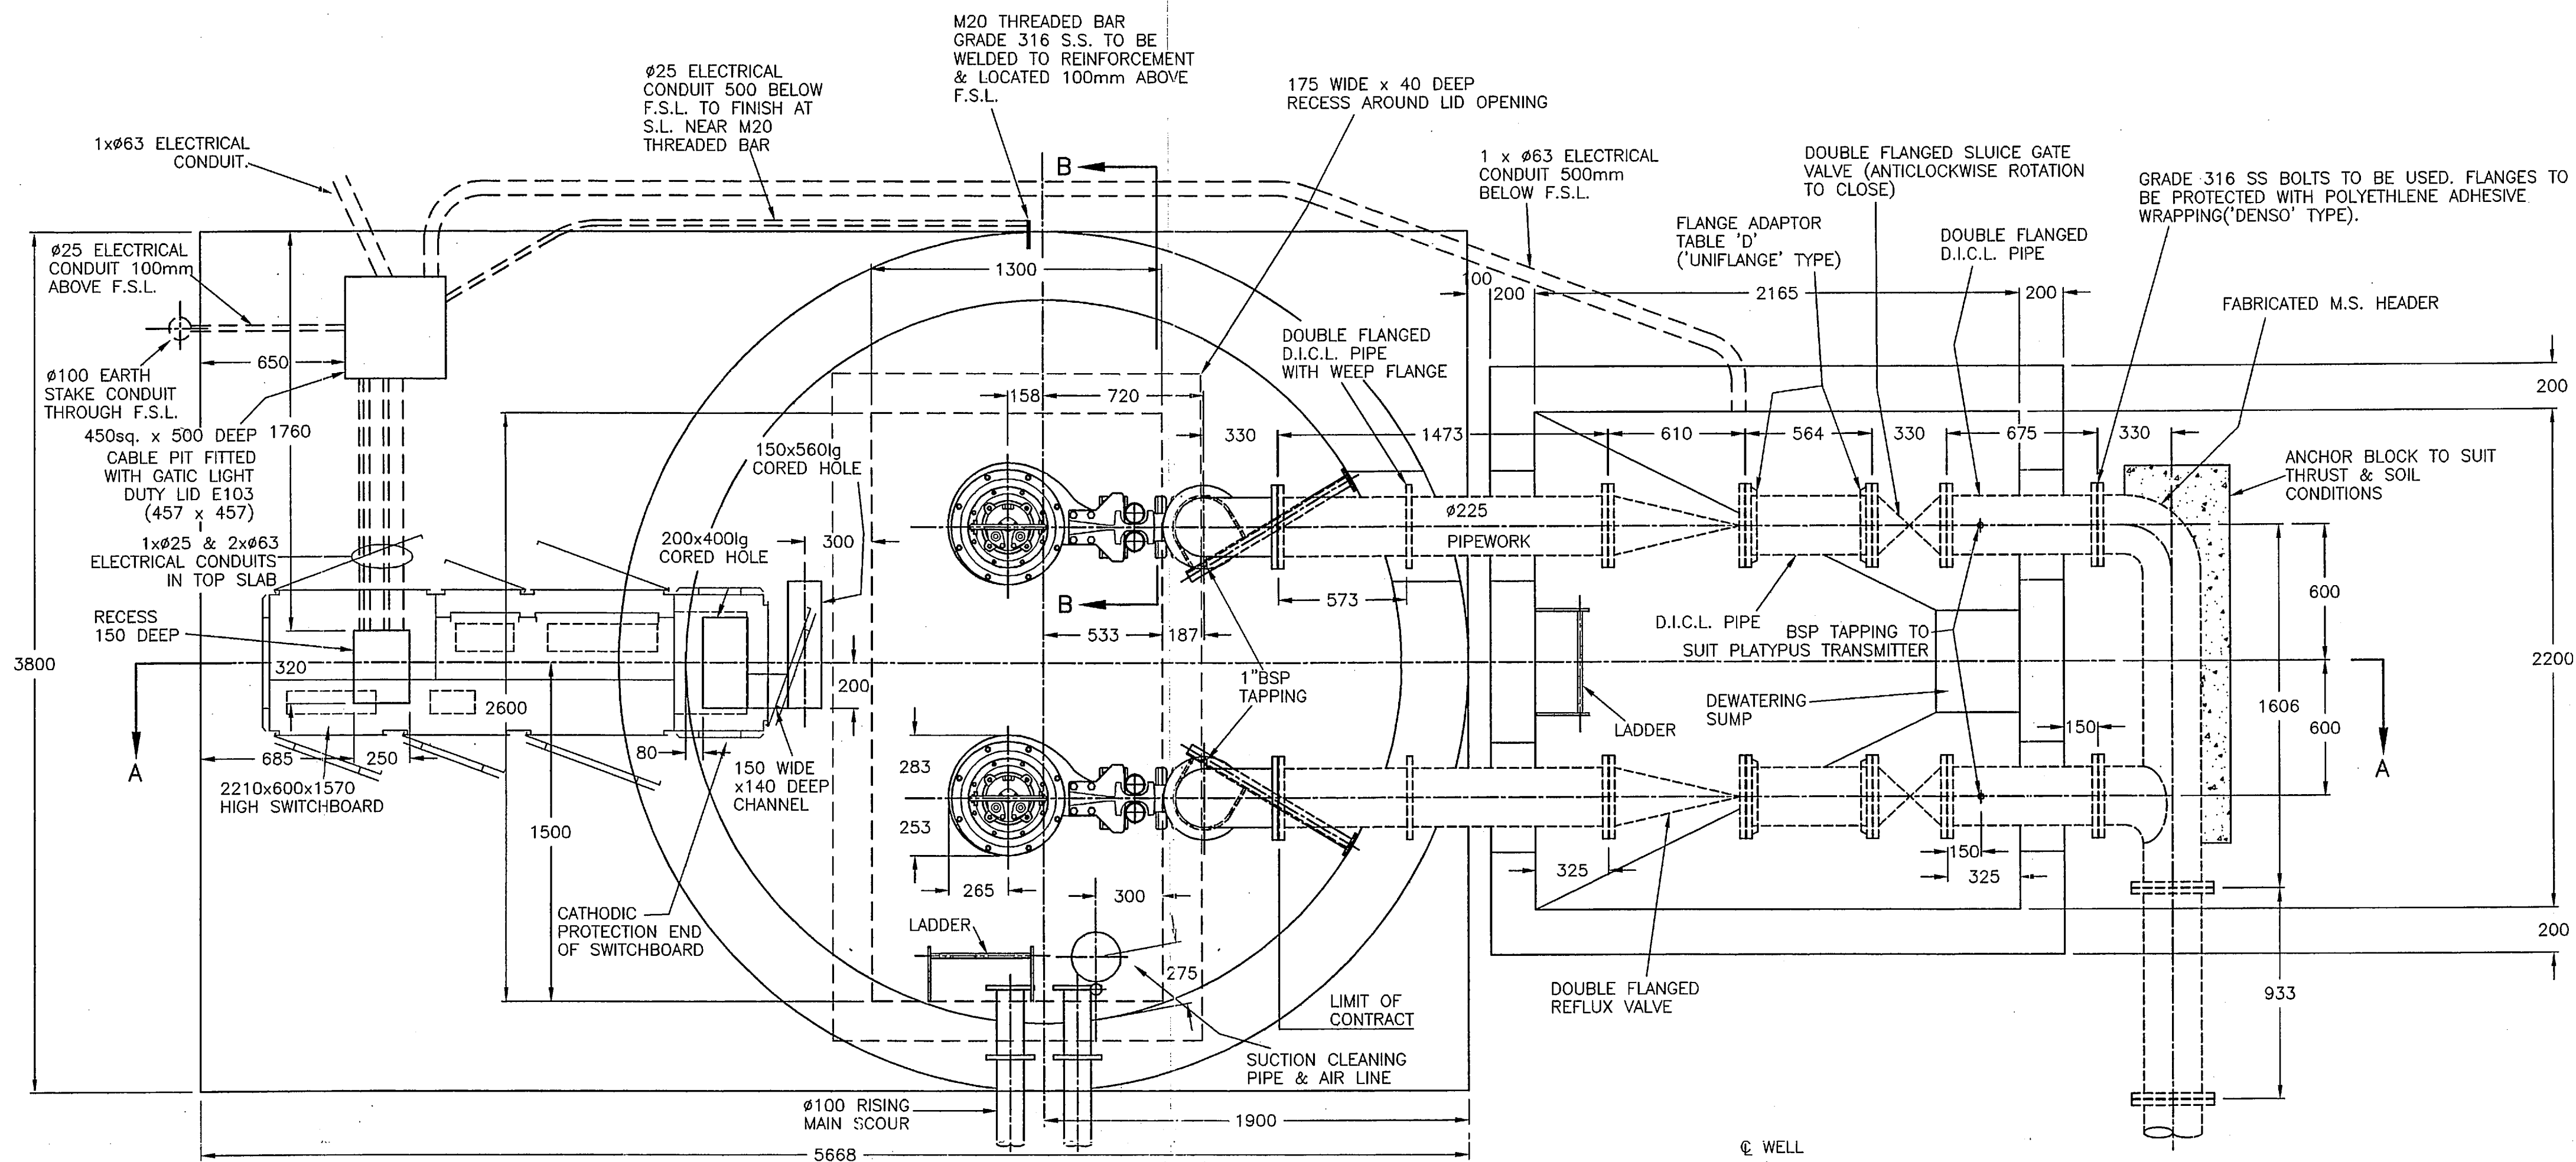

PLAN

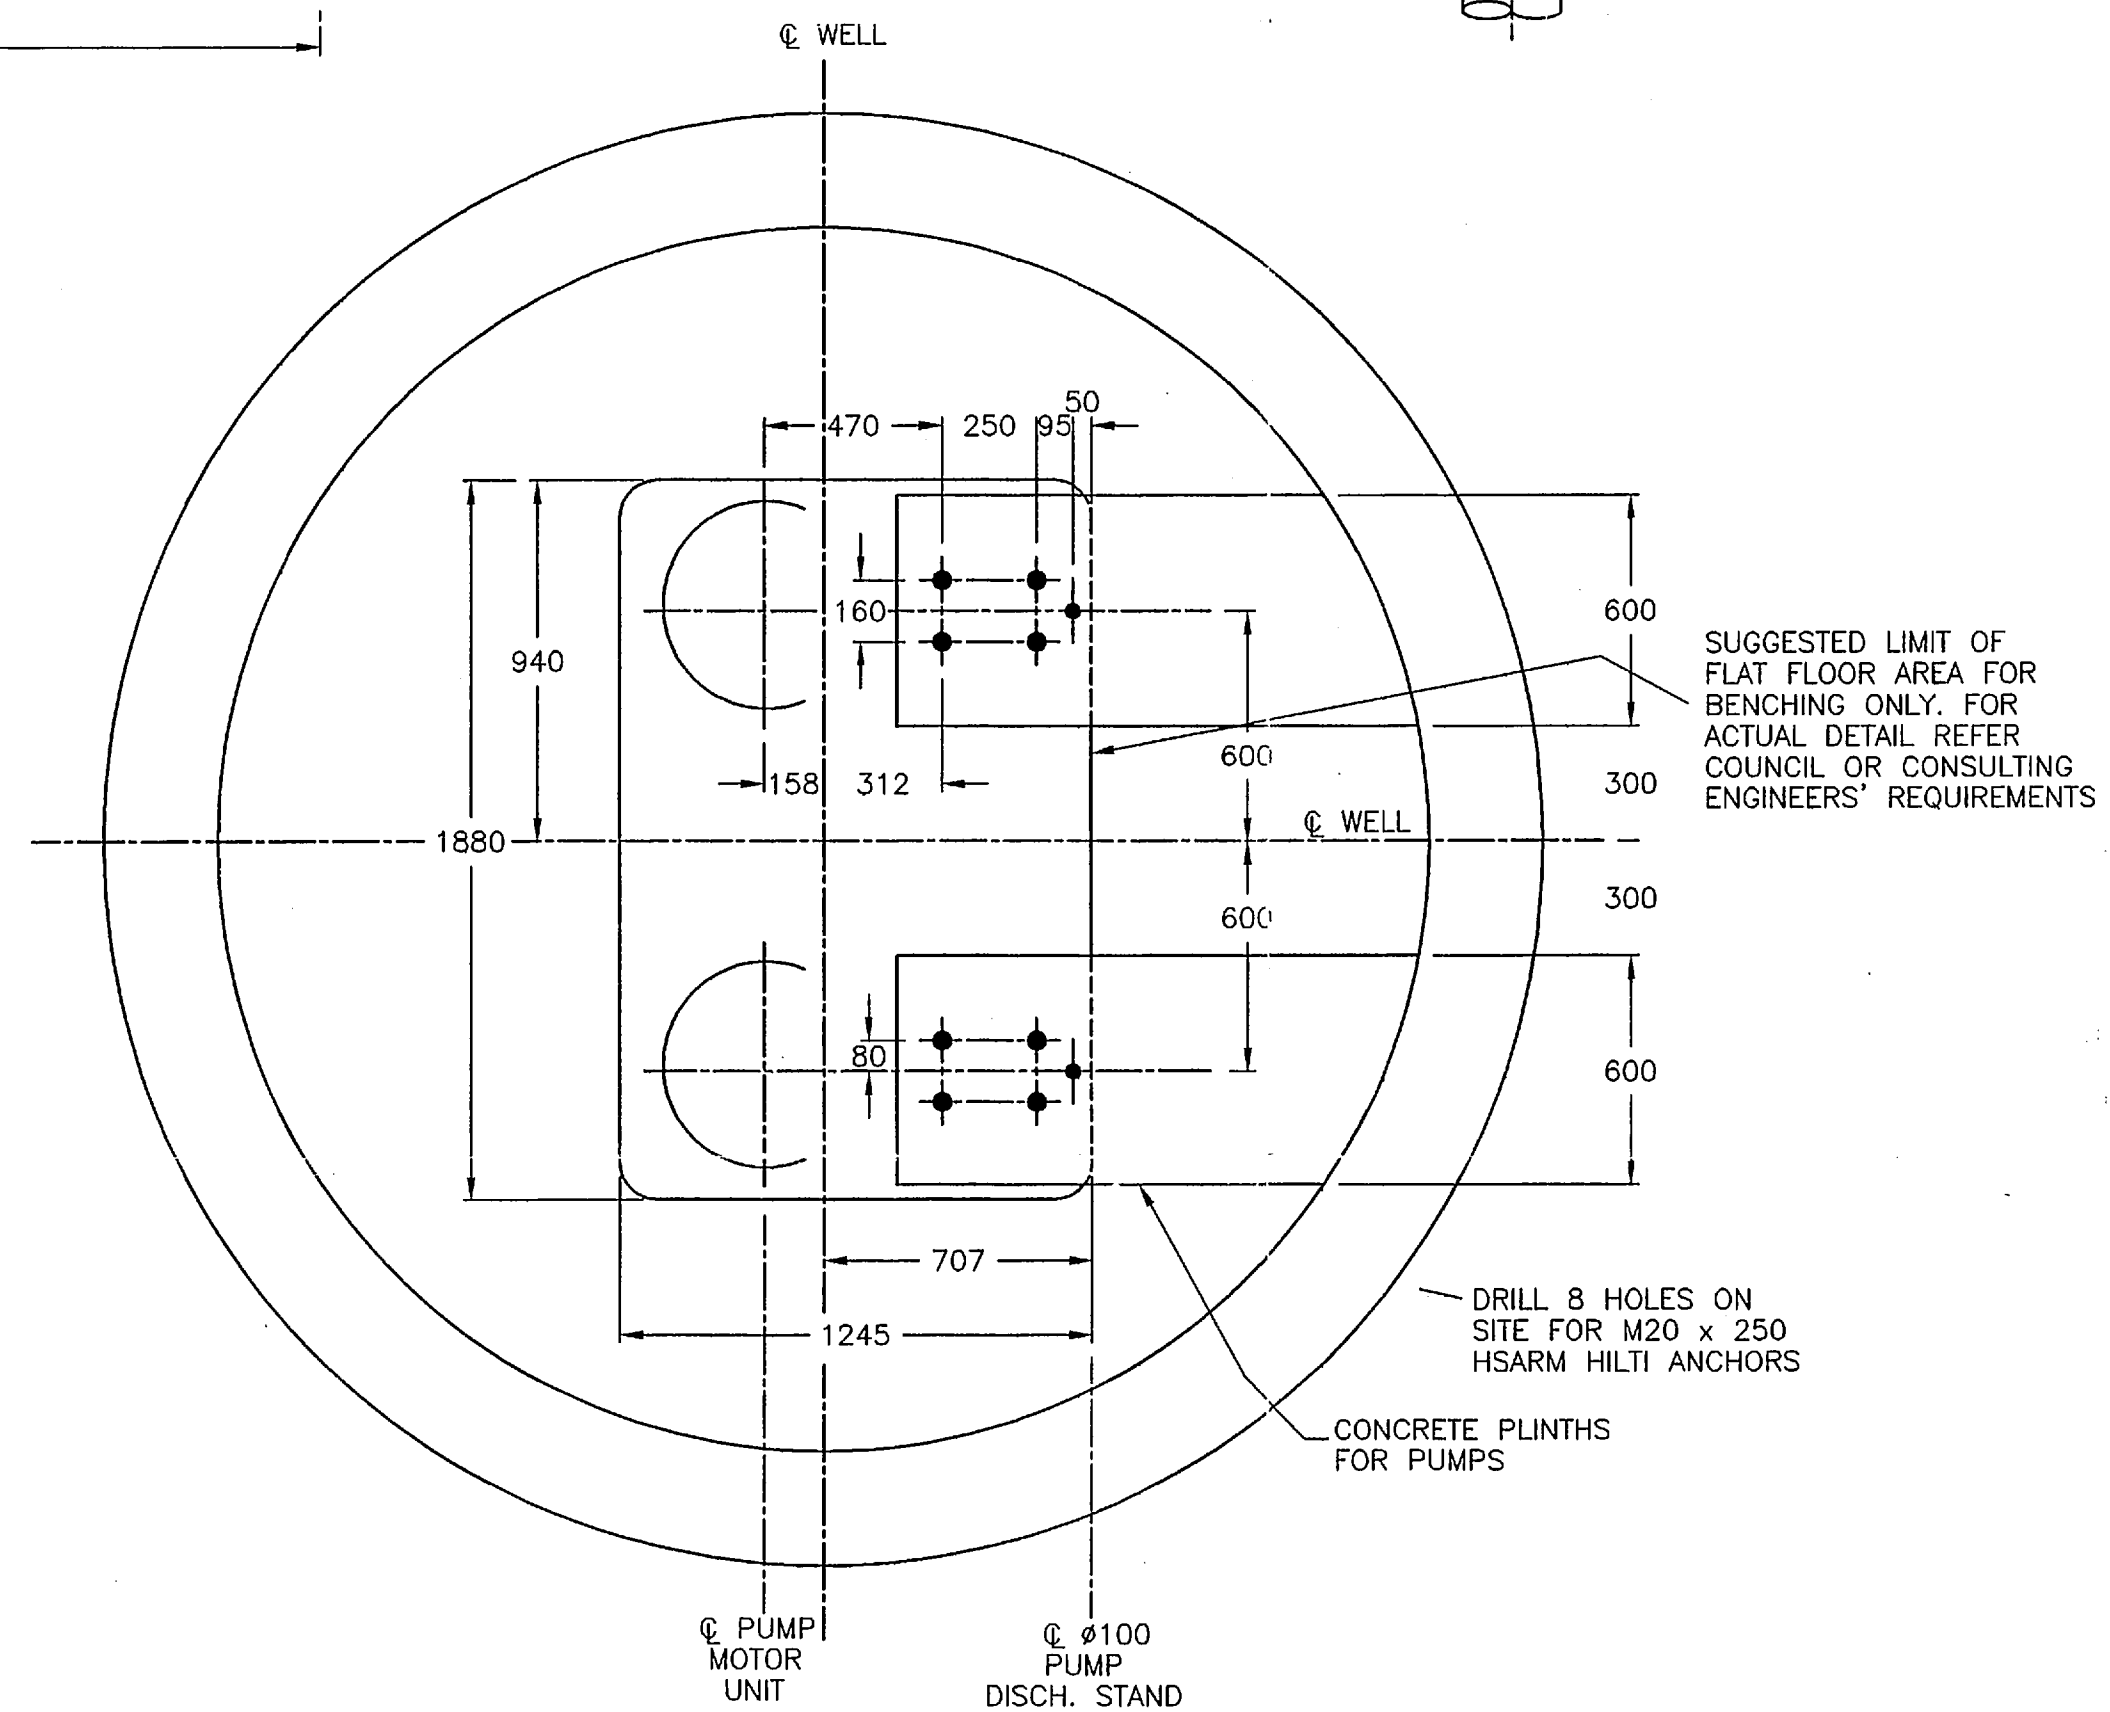

FOUNDATION DETAIL

- NOTE:
1. PUMPS FLYGT MODEL CP3170HT 25kW 4PL
 2. PUMP LIFTING WEIGHT 511kg
 3. PIPEWORK SHOWN DOTTED SUPPLIED & INSTALLED BY OTHERS

"AS CONSTRUCTED"

C 12/99	REVISE TITLE BLOCK	M.J.
B 9/99	PUMP MODEL CHANGED & PIPEWORK CHANGED TO SUIT	P.H.
A 8/98	AMEND TITLE BLOCK	P.H.
No. DATE	AMENDMENT	INITIALS

DIRECTOR OF P.D. & P.S.	DATE
ENGINEER IN CHARGE	DATE
SUPERVISING ENGINEER	R.P.E.Q. NO. DATE

DESIGN	NAME	DATE	
DRAWN	P.H.	21-5-98	
CHECKED	JOL	1/12/99	

JOB FILE	JPR No.E98-A19695/X0
AUTOCAD FILE	A19695X0
SHEET SIZE	A1
SURVEY No.	FIELD BOOK
SURVEYED	A.H. DATUM



PROJECT
SPS 280
LAWSON PLACE
SEWERAGE PUMPING STATION

TITLE
PUMP STATION
PIPEWORK LAYOUT

SCALE: 1:20	No.1 OF 2 SHEETS
DRAWING N° P98-A19695/X0	AMEND. C