

料 号 705-TRC100-00

品 名 TR遥控器说明书

成品尺寸 100*140 mm

公 差 ±1mm

材 质 105g 胶粉纸

工 艺 骑马订

颜色要求 单色印刷

其 他

设计师 李仕龙 文案 吴水宁

备注: PDF文件仅供参考, 印刷前请检查 AI 输出文档
(或 Cdr 输出文件)

■ 刀模线 > 标注刀模线
■ 标示线 > 请勿印刷!


印刷要求:

色彩印刷, 四色印刷, 套印印刷, 专色印刷不在此列,

套印精度±1mm, 套印位置±21mm

合格证
CERTIFICATE

Godox

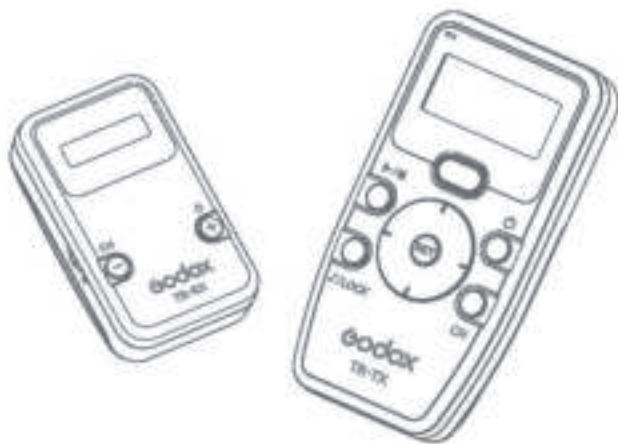

Wechat
Official Account
神牛器材公众号

深圳市神牛摄影器材有限公司

地址: 深圳市福田区梅林街道梅康社区梅兰工业厂房2楼

电话: 0755-29669320/8062 传真: 0755-25728423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Address: Sub-Bldg 2, Yaoshuan Industrial Zone, Tangwei Community, Futai Street, Gaoli'ao District, Shenzhen
518103, China Tel: +86-755-29669320/8062 Fax: +86-755-25728423 E-mail: godox@godox.com

www.godox.com

Made in China / TD9-11C100-01



TR

无线定时快门遥控器

Wireless Timer Remote Control

使用手册

Handbuch

前言

感谢您购买本产品。

TR 是一款功能强大且精准的快门测速器。它采用高精度的相机测速，还配备高精度的控制程序，快门和闪光灯闪光，具有释放按钮、设置按钮、快门按钮、快门测速、定时控制按钮等诸多功能。适用于摄影高级课程、日出日落拍摄、快门释放测速等场景。

警告

▲ 请勿私自拆卸产品，如产品出现故障应由本公司授权的维修人员进行检查维修。

▲ 请勿摔打或：请勿让液体溅到产品，亦不可将产品投入水中或暴露于雨中。

▲ 请勿让儿童接触本产品。

▲ 请勿在高温潮湿环境中使用，在此类条件下，请注意相关警告标识。

▲ 请勿放置在超过 50 度的高温环境中。

▲ 使用电池的注意事项：

只请使用本产品中的原装电池。

请勿将旧电池或不同品牌的电池。

请仔细阅读并遵守生产厂家中的警告或指示。

切勿使电池短路或拆解电池。

切勿将电池放入火中或加热开锅。

切勿试图以反方向安装电池。

当电量用尽时，电池会显示低，为了避免产品受损，长期不使用本产品或有电量耗尽时，请及时充电。

如果受潮电池液体溅到眼睛并刺激皮肤或衣服，请立即用大量清水进行冲洗操作。


部件名称

数码相机 TR-TX




1. 指示灯
2. 显示屏
3. 定时器启动 / 停止按钮
4. 显示屏 / 设定按钮
5. 左键
6. 下键
7. 上键
8. 右键
9. 5/7 按钮
10. 快门释放按钮
11. 电源开关按钮
12. 电源按钮
13. 电池盖
14. 无线快门插孔

发射器显示屏

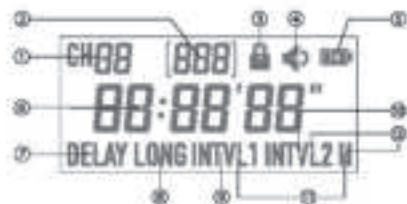

1. 频道图标
2. 定时持续时间数值标
3. 锁屏图标
4. 提示图标
5. 电池电量图标
6. 时间显示区
7. DELAY 定时计划起时时间图标
8. LONG 定时计划曝光时间图标
9. INTVL1 定时的间隔时间图标
10. INTVL2 重复定时计划的间隔时间图标
11. INTVL1 M 定时的曝光数
12. INTVL2 M 重复定时计划的次数

接收器 TR-RX

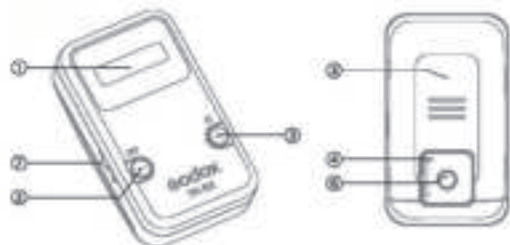

1. 显示屏
2. 频道设置 / 按钮
3. 电源开关 / 按钮
4. 按键
5. 电池盖
6. 1/4" 螺孔
7. 天线插孔

接收器显示屏




1. 频道图标
2. 电池电量图标

物料清单



安装电池

请按照上图  箭头出镜内部, 应从机背换电池, 请使用二节 AA 电池, 请按照下图所示, 将开盖后的电池盖并装入两节 AA 1.5V 碱性电池。

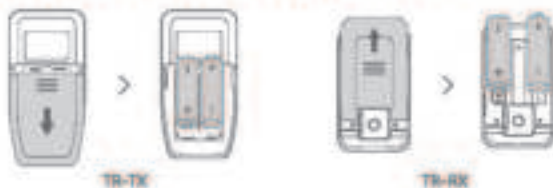

注: 安装电池时应注意电池的定极性, 错误的安装可能会导致无法正常工作, 甚至造成人身伤害。

开关机

发射器和接收器均须长按电源开关按钮 1 秒实现开机或关机。

背光灯

短按发射器和接收器可在菜单项可打开背光灯照明, 背光灯持续点亮 6 秒钟, 若在 6 秒中有其它按键操作, 背光灯将熄灭; 若无任何操作, 背光灯在 6 秒后自动关闭。

锁定功能

发射器: 长按提示音 / 默认设置菜单的菜单项中出现的锁定图标, 提示进入锁定界面, 此时短按其它按键无操作反应, 再次长按提示音 / 默认设置菜单的锁定图标则头, 界面恢复正常操作。


提示音

发射器: 短按提示音 / 默认设置菜单的开或关提示音。

无线控制相机

1. 接收器与相机连接

请保持相机接收器均处于关闭状态, 先将相机放在三脚架(另购)上, 接收器对准插入相机顶部, 将快门线接收器的输入接头插入接收器的输出接口, 快门线接收器的快门线插入相机的外部快门线座, 上述操作完毕, 打开接收器电源和相机的电源。

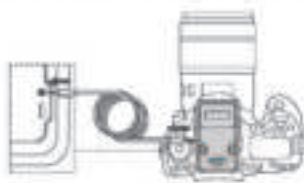

2. 发射器与接收器连接

2.1 长按发射器 TR-TX 电源开关按钮 1 秒实现开机, 接收器通电, 接收器中显示屏, 为液晶屏或下键切换显示屏的屏, 假设此次选择频道为 <1>, 设置完毕, 可接收接收器频道设置, 或 6 秒无人操作自动退出。



2.2 设置频道

方法 1 (手动设置频道): 长按任意器 TR-TX 电源开关按钮 1 秒实现开机, 长按频道按钮 1 秒, 频道屏弹出频道号, 短按 <左键或 > 按键可实现频道切换, 发射器已设置频道设置为 <1>, 接收器设置为 <1>, 设置完毕, 可接收接收器频道设置, 或 6 秒无人操作自动退出。



方法 2 (自动设置菜单): 长按发射器 TR-EX 菜单按钮 3 秒, 指示灯出绿灯闪烁, 长按接收器 TR-EX 菜单按钮 3 秒, 眼睛看出绿灯, 指示灯出绿灯闪烁, 则设备已与发射器校准一致, 设置完毕相机发射器任意设备退出设置。




2.3 上述设置完毕, 即可拆卸无线接收控制机。

注: 发射器与接收器必须保持相同的频道才能进行有效控制。



有线控制相机

1. 确保相机和发射器均处于关机状态, 先将相机固定在三脚架 (另表) 上, 将快门线接线的输入接头插入发射器的输出端口, 快门线接线的快门接头插入相机的外接快门接口, 上述操作完毕, 打开发射器电源和相机电源。

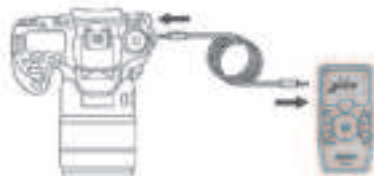

单张拍摄

1. 首先先将相机设置为单张模式。
2. 半按快门释放按钮, 发射器发出对焦信号, 发射器和接收器的绿色指示灯同时亮起, 表示相机处于对焦状态。
3. 全按快门释放按钮, 发射器发出拍摄信号, 发射器和接收器的红色指示灯同时亮起, 全按一次快门释放按钮拍一张照片。

连续拍摄

1. 首先先将相机设置为连续拍摄模式。
2. 半按快门释放按钮, 发射器发出对焦信号, 发射器和接收器的绿色指示灯同时亮起, 表示相机处于对焦状态。
3. 全按快门释放按钮, 发射器和接收器的红色指示灯同时亮起, 发射器发出连续快门拍摄信号, 相机进行连续拍摄动作。

BULB 拍摄

1. 首先先将相机设置为 B 门拍摄模式。
2. 半按快门释放按钮, 发射器发出对焦信号, 发射器和接收器的绿色指示灯同时亮起, 表示相机处于对焦状态。
3. 长时间全按快门释放按钮直至发射器红灯闪烁并计时开始, 接收器红灯保持亮起, 此时可松开快门释放按钮, 发射器发出 B 门开始信号, 接收器连续输出拍摄信号, 相机开始连续曝光拍摄; 再次短按快门释放按钮, 相机停止曝光拍摄, 发射器和接收器指示灯均停止点亮。


延时拍摄

1. 首先先将相机设置为单张模式。
2. 设置发射器的延时时间: 在开机状态下短按左键或右键切换至 <DELAY>, 短按 SET 按键进入延时时间设置界面, 时的显示区与当前闪烁, 短按左键或右键可切换时 / 分 / 秒设置, 切换分钟 / 分 / 秒时, 显示区闪烁, 此时短按上键或下键可设置时 / 分 / 秒的具体数值, 设置完毕, 短按 SET 按键可退出设置, 设 5 秒无人操作自动退出。



"时"可设置数值为: 00-99,
"分"可设置数值为: 00-59,
"秒"可设置数值为: 00-59。

3. 设置发射器的拍摄张数：短按左键或右键切换至 <INTVL1 N>，短按 SET 按钮进入拍摄张数设置界面，拍摄张数闪动，按上键或下键可设置拍摄张数，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。



拍摄张数可设置数值：001-9999（无限张数）

4. 半按快门释放按钮，发射器发出对焦信号，发射器和接收器的绿色指示灯同时亮起，表示相机处于对焦状态。



5. 短按定时键启动 / 停止按钮，发射器将所需拍摄信息发送到接收器，发射器开始延时倒计时。

6. 发射器倒计时完毕，接收器将地区设置的拍摄信号传到相机取景，每拍摄一张，指示灯亮一次红灯。

前：相机取景器内成像，再次短按定时键启动 / 停止按钮将停止本次拍摄的操作。

定时计划拍摄

1. 首先先相机设置为单拍模式。

2. 设置发射器的延时时间：在开机状态下短按左键或右键切换至 <DLA0>，短按 SET 按钮进入延时时间设置界面，时间显示区出现闪动，短按左键或右键可切换时 / 分 / 秒设置，切换到时 / 分 / 秒时，显示区闪动，此时短按上键或下键可设置时 / 分 / 秒的具体数值，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。



"时"可设置数值为：00-99，
"分"可设置数值为：00-59，
"秒"可设置数值为：00-59。

3. 设置发射器的曝光时间：短按左键或右键切换至 <LONG>，短按 SET 按钮进入曝光时间设置界面，时间显示区出现闪动，短按左键或右键可切换时 / 分 / 秒设置，切换到时 / 分 / 秒时，显示区闪动，此时短按上键或下键可设置时 / 分 / 秒的具体数值，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。



"时"可设置数值为：00-99，
"分"可设置数值为：00-59，
"秒"可设置数值为：00-59。

4. 设置发射器的定时计划的拍摄间隔时间：短按左键或右键切换至 <INTVL1>，短按 SET 按钮进入定时计划的拍摄间隔设置界面，时间显示区出现闪动，短按左键或右键可切换时 / 分 / 秒设置，切换到时 / 分 / 秒时，显示区闪动，此时短按上键或下键可设置时 / 分 / 秒的具体数值，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。



"时"可设置数值为：00-99，
"分"可设置数值为：00-59，
"秒"可设置数值为：00-59。

5. 设置发射器的拍摄张数：短按左键或右键切换至 <INTVL1 N>，短按 SET 按钮进入拍摄张数设置界面，拍摄张数闪动，按上键或下键可设置拍摄张数，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。拍摄张数可设置数值为 001-9999（无限张数）。




6. 设置发射器单张定时计划间隔时间：短按左键或右键切换至 <INTVL2>，短按 SET 按钮进入单张定时计划间隔设置界面，时间显示区出现闪动，短按左键或右键可切换时 / 分 / 秒设置，切换到时 / 分 / 秒时，显示区闪动，此时短按上键或下键可设置时 / 分 / 秒的具体数值，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。



"时"可设置数值为：00-99，
"分"可设置数值为：00-59，
"秒"可设置数值为：00-59。

7. 设置发射器的固定定时计划次数：短按左键或右键切换至 <INTVL2 N>，短按 SET 按钮进入固定定时计划次数设置界面，拍摄张数闪动，按上键或下键可设置固定定时计划次数，设置完毕，短按 SET 按钮可退出设置，或 5 秒无人操作自动退出。固定定时计划次数可设置数值为 001-9999（无限张数）。



8. 半按快门释放按钮，发射器发出对焦信号，发射器和接收器的绿色指示灯同时亮起，表示相机处于对焦状态。

9. 短按定时键启动 / 停止按钮，发射器将所需拍摄信息发送到接收器，发射器开始延时倒计时。




10. 发射器计时完毕,接收器将状态显示的拍摄符号转换为机内码,每拍摄一张,指示灯亮一次红灯。


注: 接收器设置为定时拍摄和闪光拍摄一致,曝光时间小于1秒时,接收器曝光间隔设置为00:00:00,发射器计数结束后再启动,再次完成定时拍摄后,屏幕上显示将禁止本次定时拍摄的操作。

定时计划拍摄图示

定时计划拍摄 1: 延时时间 [DELAY]=3 秒,曝光时间 [LONG]=1 秒,定时计划拍摄间隔 [INTVL.1]=3 秒,拍摄张数 [NTVL.1] N=2 张,重复定时计划间隔时间 [INTVL.2]=4 秒,重复定时计划次数 [NTVL.2 N]=2 次。

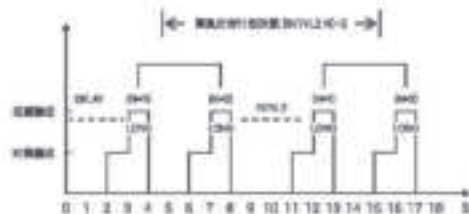


定时计划拍摄 2: 延时时间 [DELAY]=4 秒,曝光时间 [LONG]=2 秒,定时计划拍摄间隔 [INTVL.1]=4 秒,拍摄张数 [NTVL.1] N=2 张,不同重复定时计划,[INTVL.2] 设置为 +1 秒,不用重复定时计划,[INTVL.2 N] 设置为 +1 次。

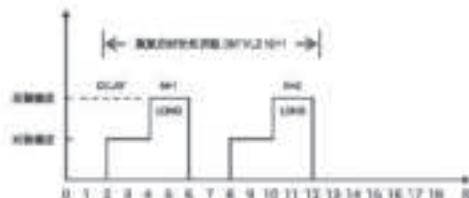

遥控神牛 2.4G 闪光灯

1. 接收器 TR-RX 与相机连接: 请保持相机和接收器 TR-RX 均处于关机状态,先将相机固定在三脚架(另购)上,接收器将放入相机顶部,将快门连接线的插入接头插入接收器的输出接口,快门连接线的快门接头插入相机的外快门插座,上述操作完毕,打开接收器电源和相机电源。

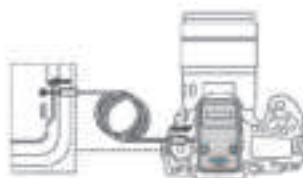

2. 设置接收器 TR-RX: 长按快速设置,液晶屏将出现闪烁,短按 - 按设置 - 秒键切换所需频道,将接收器设置为 01。

设置完毕,可长按快速设置退出频道设置,或 5 秒无人操作自动退出。




3. 设置神牛 2.4G 闪光灯: 打开神牛 2.4G 闪光灯电源,按照闪光灯说明书设置闪光灯频道,接收器频道设置为 01,闪光灯频道要和接收器频道保持一致,闪光灯设置为 01,ID 键关闭(OFF)。

4. 设置控制单元

方法 1(使用发射器 TR-TX)

长按快速设置,液晶屏将出现闪烁,短按上键或下键切换所需频道,接收器已预设频道为 <01>,发射器频道和接收器频道保持一致,发射器频道设置为 01,设置完毕,可长按快速设置退出频道设置,或 5 秒无人操作自动退出。

上述设置完毕,全按快门释放按键,即可同时控制相机快门和闪光灯闪光。

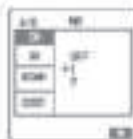

方法 2(使用引闪器 XPRO II 引闪器遥控器)

设置引闪器 XPRO II(另购): 打开引闪器电源, 短按 <MENU> 按钮进入自定义菜单设置引闪器频道, 接收器已设置频道为 <01>, 引闪器频道号设置为 01, ID 键关闭(OFF)。

短按两次接收器 TR-RX 的频道 / 按钮, 绿灯闪烁 3 次, 表示当前已进入 XPRO II 使用模式。

上述设置完毕, 会按下引闪器 XPRO II 试闪按钮, 即可实时控制相机快门和闪光灯闪光。

规格参数

名称	无线定时快门遥控器	无线定时快门接收器
型号	TR-TX	TR-RX
供电方式	2*AA 电池(CR1)	
待机时间	700h	300h
定时释放次数	0 秒至 99 小时 59 分 59 秒 (以 1 秒为增量)	/
定时闪光	0 秒至 99 小时 59 分 59 秒 (以 1 秒为增量)	/
拍摄闪光	0 秒至 99 小时 59 分 59 秒 (以 1 秒为增量)	/
频道数量	1-999 组 —— (无限频道)	/
重复定时闪光间隔时间	0 秒至 99 小时 59 分 59 秒 (以 1 秒为增量)	/
重复定时闪光次数	1-999 组 —— (无限次数)	/
材质	塑料	
操作距离	≈150m	
工作环境温度	-20°C~+60°C	
尺寸	98mm*52mm*32mm	78mm*46mm*32mm
净重(含包装电池)	100g	91g

规格参数如有变更, 恕不另行通知。

Foreword

Thank you for purchasing!



TR is a high-performance wireless timer remote control for cameras, it can control the camera shutter and flash at the same time. TR features single shooting, continuous shooting, BULB shooting, delay shooting and timer schedule shooting, quite suitable for planet motion shooting, sunrise and sunset shooting, flowers blooming shooting etc.

⚠ Warning

- ▲ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ▲ Always keep this product dry. Do not use in rain or in damp conditions.
- ▲ Keep out of reach of children.
- ▲ Do not use the flash unit in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.
- ▲ Do not leave or store the product if the ambient temperature reads over 50°C.
- ▲ Observe precautions when handling batteries:
 - Use only batteries listed in this manual. Do not use old and new batteries or batteries of different types at the same time.
 - Read and follow all warnings and instructions provided by the manufacturer.
 - Batteries cannot be short-circuited or disassembled.
 - Do not put batteries into a fire or apply direct heat to them.
 - Do not attempt to insert batteries upside down or backwards.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
 - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

Name of Parts

Transmitter TR-TX

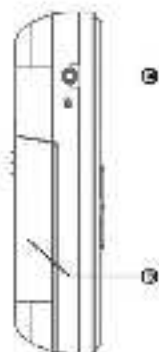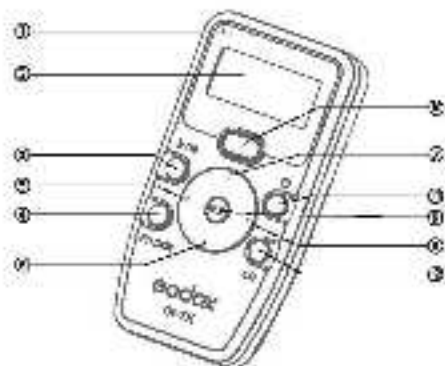


1. Indicator
2. Display Screen
3. Timer/Size/Stop Button
4. Alarm/Lock Button
5. Left Button
6. Down Button
7. Up Button
8. Right Button
9. SET Button
10. Shutter Release Button
11. Power Switch Button
12. Channel Button
13. Battery Cover
14. Wireless Shutter Jack

Display Screen of Transmitter



1. Channel Icon
2. Timer Shooting Numbers Icon
3. Locking Icon
4. Alert Icon
5. Battery Level Icon
6. Time Display Zone
7. DELAY Timer Schedule Delay Icon
8. LONG Timer Sched. At Exposure Time Icon
9. INTVL1 Timer Shooting Interval Time Icon
10. INTVL2 Repeat Timer Schedule Interval Time Icon
11. INTVL1H Timer Shooting Numbers
12. INTVL2H Repeat Timer Schedule Times

Receiver TR-RX

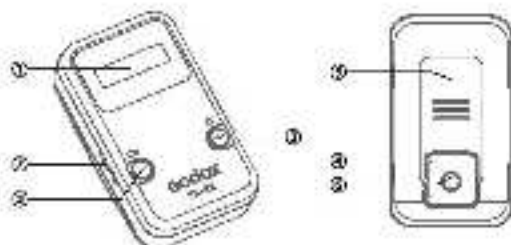

1. Display Screen
2. Channel Setting/▲ Button
3. Power Switch/▲ Button
4. Coldshoe

5. Battery Cover
6. 1/4" Screw Hole
7. Wireless Shutter Jack

Display Screen of Receiver



1. Channel icon
2. Battery Level icon

What's Inside



C1 Shutter Cable C2 Shutter Cable C3 Shutter Cable C4 Shutter Cable C7 Shutter Cable



C8 Shutter Cable C9 Shutter Cable C10 Shutter Cable AA Battery Instruction Manual



Transmitter



Receiver

Model	Item List
TR-C1	Transmitter*1 Receiver*1 C1 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-C3	Transmitter*1 Receiver*1 C3 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-N1	Transmitter*1 Receiver*1 N1 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-N3	Transmitter*1 Receiver*1 N3 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-P1	Transmitter*1 Receiver*1 P1 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-OP12	Transmitter*1 Receiver*1 OP12 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-S1	Transmitter*1 Receiver*1 S1 Shutter Cable*1 AA Battery*4 Instruction Manual*1
TR-S2	Transmitter*1 Receiver*1 S2 Shutter Cable*1 AA Battery*4 Instruction Manual*1

Compatible Cameras

TR-C1

Compatible Models

Canon: 30D, 60D, 70D, 100D, 600D, 800D, 760D, 750D, 100D, 650D, 800D, 900D, 900D, 400D, 400D, 500D, 500D, 200D, 100D, 700D, 700D, 1200D, 1100D, 1000D, 610D, 611D, 612D, 615D, 618D, 619D, 670D, 680D, 690D, 700D, 760D, 760D, 770D

PENTAX: K3, K7, K10, K20, K100, K200, K1, K2, K30, K130, K100, K50

SAMSUNG: GX-1L, GX-1S, GX-1E, GX-2S, NX-100, NX110, NX10, NX6

Sony: 645, N1, N2, N digital, H series

TR-C3

Compatible Models

Canon: 1Dx Mark IV, 1Dx Mark III, 5D Mark III, 5D Mark II, 1Dx Mark II, 60D, 40D, 30D, 20D, 10D, 7D, 7Dn, 6D, 6D, 5D, 5Dn, 10D, 1Dn, 1D, EOS-1V

TR-N1

Compatible Models

Nikon: D860, D800E, D800, D700, D500, D600E, D600, D300, D4, D4S, D3X, D3, D3Xs, D3s, D1X, D200S, D200, D1H, D1, F100, H605, F60X, F6, F6, F90

FUJIFILM: S5 Pro, S3 Pro

TR-N3

Compatible Models

Model: D790, D815, D905, D7505, D7200, D7100, D7900, D9600, D9400, D9300, D9200, D9100, D9000, D9005, D9200, D9100, D90

TR-B1

Compatible Models

Model: a900, a950, a700, a990, a960, a955, a901, a990, a900, a990, a990, a900, a100, a99, a999, a77, a779, a65, a57, a55, a35, a30

TR-B2

Compatible Models

Model: a7, a7m2, a7m3, a7E, a7D1, a7L, a71E, a9, a91, a98, a9600, a6400, a9500, a6300, a6000, a6100, a6000, a3000, N301-2N1, H050, H090, H0300, H0600, R1RM2, R010M2, R010M3, R010M4, R010M2, R010M3, R010M4, R010M5, R010M6, R010M7

TR-P1

Compatible Models

Parameter: Q1-B1, Q1-B5, Q1B, Q90-Q91, Q99, Q9, S5, S11L, DC-E1R, DC-E1, F210001, R011, Q4C-Q4L, Q4S, Q4E, Q41, Q38, QX1, QX1, QMG-Q1, Q5, Q3, Q5, Q2, Q9L, Q10, Q1, QH1, Q4C-F22500, F21005, F2380, F2300, F2190

TR-OP12

Compatible Models

Dynamic: E-620, E-650, E-620, E-610, E-650, E-615, E-415, E-410, E-30, E-MS, E-PS, E-P2, E-P1, SP-670U, SP-660U, SP-650U, SP-610U, A990, A999, A700, A660, A660

The above models are incomplete statistics, please consult the distributors or customer service for more compatible models.

Battery Installation

When the \times \square > blinks on the display, please replace the battery with two AA batteries. Slide and open the battery cover on the back, install two AA 1.5V alkaline batteries as shown in the pictures below.



Note: Please pay attention to the positive and negative poles of the battery when installing. Incorrect installation not only disables the device, but also may cause personal injury.

Power Switch

Long press the power switch buttons of transmitter and receiver for 1s to turn on or off them.

Backlight

Short press any button of the transmitter and receiver to turn on backlight for 6s. The backlight will continue to be turned on in further operation, and will be turned off after idle use of 6s.

Locking Function

Transmitter: Long press the alert/lock button until the locking icon shows on the display, then the display screen is locked and operations of other buttons are unavailable. Long press the alert/lock button again until the locking icon disappears, then display screen is unlocked and operations resumed.

Alert

Transmitter: Short press the alert/lock button to turn on or off the alert.

Wireless Control of Cameras

1. Connect the receiver and camera

First make sure both the camera and receiver are powered off. Attach the camera to a tripod (sold separately) and insert the cold shoe of receiver into the top of the camera. Insert the input plug of the shutter cable into the output part of the receiver, and the shutter plug into the external shutter socket of the camera. After which, power on the receiver and camera.



2. Connect the transmitter and receiver

2.1 Long press the power switch button of transmitter for 1s to power on, short press the channel button and the channel icon blinks, then short press the up button or down button to select channel (assume the selected channel is 1), then short press the channel button to exit or exit automatically until idle use of 5s.



2.2 Set channel

A (Adjust manually): Long press the power switch button of receiver for 1s to power on, short press the channel button for 1s and the channel icon blinks, then short press the - button or + button to select channel (assume the selected channel of transmitter is 1), then the channel of receiver should be set as 1, then long press the channel button to exit or exit automatically until idle use of 5s.



B (Adjust automatically): Long press the channel button of transmitter for 3s and the indicator flashes red, long press the channel button of receiver for 3s and the channel icon blinks. When the indicator of receiver turns to green, the channel of it will be the same as the transmitter's, after which short press any button of transmitter to exit.




2.3 After the above settings, the camera can be controlled remotely.

Note: The transmitter and the receiver should be set to the same channel for effective control.



Wired Control of Cameras

1. First make sure both the camera and receiver are powered off. Attach the camera to a tripod (sold separately), insert the input plug of the shutter cable into the output part of the transmitter, and the shutter plug into the external shutter socket of the camera. After which, power on the transmitter and camera.

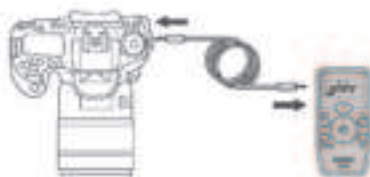

Single Shooting

1. Set the camera to single shooting mode.
2. Half-press shutter release button, the transmitter will send focus signal. The indicators on the transmitter and receiver will light on green, and the camera is in focusing status.
3. Full-press shutter release button, the transmitter will send shooting signal. The indicators on the transmitter and receiver will light on red, and the camera is shooting.

Continuous Shooting

1. Set the camera to continuous shooting mode.
2. Half-press shutter release button, the transmitter will send focus signal. The indicators on the transmitter and receiver will light on green, and the camera is in focusing status.
3. Full-press shutter release button, the indicators on the transmitter and receiver will light on red, the transmitter will send continuous shooting signal, and the camera is shooting.

BULB Shooting

1. Set the camera to bulb shooting mode.
2. Half-press shutter release button, the transmitter will send focus signal. The indicators on the transmitter and receiver will light on green, and the camera is in focusing status.
3. Full-press and hold shutter release button until the transmitter flashes red and starts time keeping while the receiver lights on red, then release the button, and the transmitter will send BULB signal, the Receiver outputs shooting signal continuously. Then the camera starts to continuous exposure shooting. Short press shutter release button again, the camera stops shooting, the indicators on the transmitter and receiver light off.

Delay Shooting

1. Set the camera to single shooting mode.
2. Set the delay time of transmitter. Short press the left button or right button to switch to «DELAY» in power on status. Short press the SET button to enter delay time setting interface, the time display zone blinks, short press the left button or right button to switch hour/minute/second settings. Short press the up button or down button can set values of hour/minute/second with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of 5s.

Adjustable values of "hour": 00-99
Adjustable values of "minute": 00-59
Adjustable values of "second": 00-59



3. Set the shooting numbers of transmitter. Short press the left button or right button to switch to «INTVL» No, short press the SET button to enter shooting numbers setting interface. Short press the up button or down button can set numbers of shooting with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of 5s. Adjustable numbers of shooting: 001-999/--- (Infinite)



4. Half-press shutter release button, the transmitter will send focus signal. The indicators on the transmitter and receiver will light on green, and the camera is in focusing status.
5. Short press the timer on/off button, the transmitter sends shooting information to the receiver, then starts time-lapse countdown.



6. After the countdown, the receiver will control the camera shooting according to the original shooting signal, the indicator will light up red once for each shot.

Note: Short press the timer on/off button when the delay shooting is not completed will terminate it.

Timer Schedule Shooting

1. Set the camera to single shooting mode.
2. Set the delay time of transmitter. Short press the left button or right button to switch to «DELAY» in power on status. Short press the SET button to enter delay time setting interface, the time display zone blinks, short press the left button or right button to switch hour/minute/second settings. Short press the up button or down button can set values of hour/minute/second with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of 5s.

Adjustable values of "hour": 00-99
Adjustable values of "minute": 00-59
Adjustable values of "second": 00-59



3. Set the exposure time of transmitter. Short press the left button or right button to switch to «LONG». Short press the SET button to enter exposure time setting interface, the time display zone blinks, short press the left button or right button to switch hour/minute/second settings. Short press the up button or down button can set values of hour/minute/second with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of file.

Adjustable values of "hour": 00-99
Adjustable values of "minute": 00-59
Adjustable values of "second": 00-59



4. Set the timer schedule shooting interval time of transmitter. Short press the left button or right button to switch to «INTVL1». Short press the SET button to enter timer schedule shooting interval time setting interface, the time display zone blinks, short press the left button or right button to switch hour/minute/second settings. Short press the up button or down button can set values of hour/minute/second with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of file.

Adjustable values of "hour": 00-99
Adjustable values of "minute": 00-59
Adjustable values of "second": 00-59



5. Set the shooting numbers of transmitter. Short press the left button or right button to switch to «INTVL1 N». Short press the SET button to enter shooting numbers setting interface. Short press the up button or down button can set numbers of shooting with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of file.

Adjustable numbers of shooting: 001-999/--- (n/nits)



6. Set the repeat timer schedule interval time of transmitter. Short press the left button or right button to switch to «INTVL2». Short press the SET button to enter repeat timer schedule interval time setting interface, the time display zone blinks, short press the left button or right button to switch hour/minute/second settings. Short press the up button or down button can set values of hour/minute/second with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of file.

Adjustable values of "hour": 00-99
Adjustable values of "minute": 00-59
Adjustable values of "second": 00-59



7. Set the repeat timer schedule times of transmitter. Short press the left button or right button to switch to «INTVL2 N». Short press the SET button to enter repeat timer schedule times setting interface. Short press the up button or down button can set numbers of shooting with the display zone blinking, then short press the SET button to exit or exit automatically until idle use of file.

Adjustable times of repeat timer schedule:
001-999/--- (n/nits)



8. Half-press shutter release button, the transmitter will send focus signal. The indicators on the transmitter and receiver will light on green, and the camera is in focusing status.

9. Short press the timer on/off button, the transmitter sends shooting information to the receiver, then starts time-lapse countdown.




10. After the countdown, the receiver will control the camera shooting according to the original shooting signal, the indicator will light up red once for each shot.


Note: The exposure time set by the remote control should be consistent with the camera. If the exposure time is less than 1 second, the exposure time of the remote control must be set to 00:00:00. Short press the timer on/off button when the delay shooting is not completed will terminate it.

Timer Schedule Shooting Illustration

Timer schedule shooting A: delay time [DELAY] = 3s, exposure time [LONG] = 1s, timer schedule shooting interval time [NTVL.1] = 3s, shooting numbers [NTVL.1 N] = 2, repeat timer schedule interval time [NTVL.2] = 4s, repeat timer schedule times [NTVL.2 N] = 2.

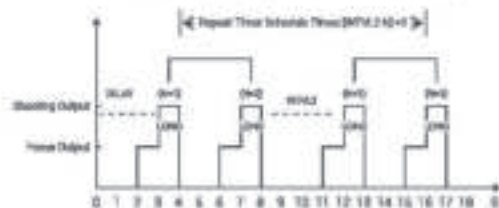

Timer schedule shooting B: delay time [DELAY] = 4s, exposure time [LONG] = 2s, timer schedule shooting interval time [NTVL.1] = 4s, shooting numbers [NTVL.1 N] = 2, no need to repeat timer schedule, [NTVL.2] = 1s, no need to repeat timer schedule, [NTVL.2 N] = 1.

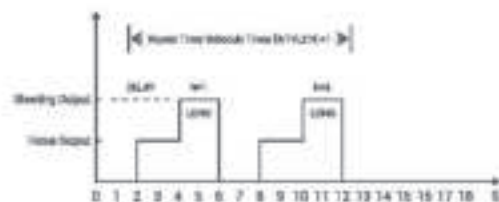

Compatible With Godox 2.4G Flash

1. **Connect the receiver and camera:** First make sure both the camera and receiver are powered off. Attach the camera to a tripod (sold separately) and insert the cold shoe of receiver into the top of the camera. Insert the input plug of the shutter cable into the output port of the receiver, and the shutter plug into the external shutter socket of the camera. After which, power on the receiver and camera.



2. **Set the receiver:** Long press the channel button and the channel icon blinks, short press the - button or + button to select channel (assumed to be 01), then long press the channel button to exit or exit automatically until idle use of it.



3. **Set Godox 2.4G flash:** Turn on the Godox 2.4G flash and set its channel according to instruction manual, which should be 01 as well in consideration that channel of receiver is assumed to be 01, while the ID of flash should be off (OFF).

4. Set the controlling unit

A (with TR-TX)


Short press the channel button and the channel icon blinks, short press the up or down button to select channel which should be 01 as well in consideration that the channel of receiver is assumed to be 01. Then short press the channel button to exit or exit automatically until idle use of it.

B (with separately sold XPROII)

Power on the flash trigger, short press the <MENU> button to enter C.Fn. menu to set channel, which should be 01 as well in consideration that the channel of receiver is assumed to be 01. The ID need to be off.

Short press the channel Δ button of the receiver twice, the Indicator blinks green three times, it means XPROII is available for use.

After all the above settings, full press the use button of XPROII, the camera shutter and the flash are ready to be controlled.

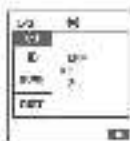

Technical Data

Model Name	Wireless Time Transmitter	Wireless Time Receiver
Model	TX-TX	TR-TR
Power Supply	2xAAA Battery(2x1.5V)	
Stand-by Time	200h	20h
Timer Delay	0 to 999min 00s with an increment of 10	/
Exposure Time	0 to 999min 00s with an increment of 10	/
Interval Time	0 to 999min 00s with an increment of 10	/
Shooting Numbers	1-999 --- 1 (fixed)	/
Repeat Time Schedule Interval Time	0 to 999min 00s with an increment of 10	/
Repeat Time Schedule Times	1-999 --- 1 (fixed)	/
Channel	30	
Controlling Distance	~120m	
Working Environment (TEMPERATURE)	-10°C~40°C	
Dimension	96mm×66mm×77mm	77mm×46mm×66mm
Net Weight (Including AA batteries)	100g	54g

Specifications and drawings subject to change without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Warning

Operating frequency 2412.99MHz ~ 2484.49MHz
Maximum EIRP Power: 6dBm

Declaration of Conformity

GOODOX Photo Equipment Co., Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(3), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link https://www.godox.com/DOC/Godox_TR_DoC.pdf.

The device complies with RF specifications when the device used at 0mm from your body.

产品保修

尊敬的用户，本保修卡是申请保修服务的必要凭证，请您配合详细填写并妥善保管，谢谢！

产品名称	型号	产品序列
用户信息	姓名	联系电话
	联系地址	
经销商信息	名称	
	联系地址	
	营业时间	
	销售门店	
备注		

注：此表可作为保修申请凭证。

适用范围

本文件适用于相关《产品保修信息》(以下简称“保修”)系列产品，其他非属此范围的产品或部件(如附件、赠品及其他出厂后附加的配件等)不在此保修表范围内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行，保修期自产品首次出厂之日起算，购买日以购买产品时保修卡登记日期为准。

如何取得保修服务

您可直接与产品销售商或授权服务商联系，也可拨打神牛产品售后服务电话，与我们联系。由我们的服务人员为您提供服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在需打确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况，本文件以下的保证和服务将不适用：①产品或部件超过使用寿命；②损坏或不正常使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合格证规定用途使用；不当连接外接设备；跌落或外力挤压；接触或暴露于不当温度、药剂、液体、水浸或潮湿环境；③由非神州授权的构成人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有缺陷经维修改变或排除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决。神州对此不承担任何责任，因不在保修范围或保修范围内的零件、附件或软件导致产品不能正常使用的，不在保修范围内的故障、产品使用过程中正常的磨损、自然和消耗，不在保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务支持由以下《产品保修信息》表行：

产品类型	适用名称	保修期(月)	保修服务类型
材料	电源线	12	客户送修
	电池	3	客户送修
	无电芯管理元件类的零件。	12	客户送修
其他	如内光盘、激光打印头、外壳、保护罩、电源线、电源线、	无	无保修

神州产品售后支持电话：0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and sale-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alteration, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal deterioration, wear and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g. battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	ND	Without warranty

Godox After-sale Service Call 0155-2982003-8002